

Powering the Board and Driver Installation

- The board is powered by plugging it into the USB port of any PC. Device drivers and instructions for installation should be downloaded from www.teamfdi.com/lcddemo-lpc2158

Operating the Demo Software

The LCDDemo-LPC2158 Software has 4 modes of Operation. Pressing the MODE button changes the mode of operation of the unit.

1. Repeating Text Lines works like a scrolling ad sign.

- The unit repeats the following text lines in order:
NXP
LPC2158
USB DEMO
I2C LCD

The user can edit the example software provided to easily “customize” these settings

2. Countdown Timer Mode provides a User Programmable Time

- Start or Stop the timer by pressing SELECT
- Customize the countdown time by holding down SELECT for two seconds—the minutes field will then flash indicating the device is in program mode
- Pressing the SELECT button once increases the current digit by one. If SELECT is held, the scroll speed will quickly increase to reach distant numbers
- Pressing the MODE button will move the user to the next programmable digit. After the seconds field is set, SELECT may be pressed to start the countdown
- The default countdown time is (15 min, 00 sec)

3. FM Radio Display simulates Frequency Scanning

- Increment the simulated frequency display by pressing the SELECT button—holding SELECT will increase the scan speed quickly to reach higher frequencies
- After reaching the highest FM frequency (107.9), the scanner will automatically wrap around to the lowest FM frequency (88.1)

4. Custom User Message

- The cursor will start at the leftmost digit indicating text is ready to be received
- On the PC to which unit is connected, bring up HyperTerminal with the default settings on the COM port of the LCDDemo-LPC2158
- Press caps-lock and begin typing characters to display them on the screen
- Backspace deletes characters to the left while Enter clears the screen

Programming New Software

- To download user-written software to your LCDDemo-LPC2158, go to www.teamfdi.com/lcddemo-lpc2158, download the programming utility, and follow the instructions