


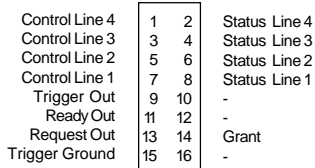


Active Cable Module - 8 bit Target Interface


Feature Connector - JP6




EPROM/FLASH Select - JP10

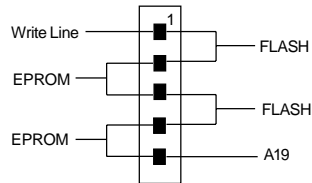


Reset Connector - JP7

 


Additional Address Lines - JP11

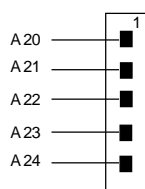

Cable Select - JP8

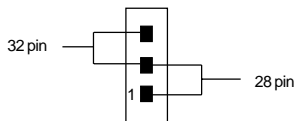


Target Cable Connector - JP9

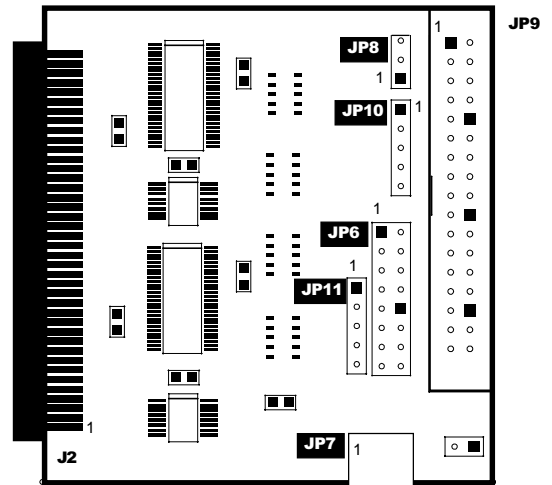

FlexROM III Connector - J2

WARNING:

Never remove or insert the ACM module when power is present. Always remove power from the emulator before changing the ACM module or Target Cable.

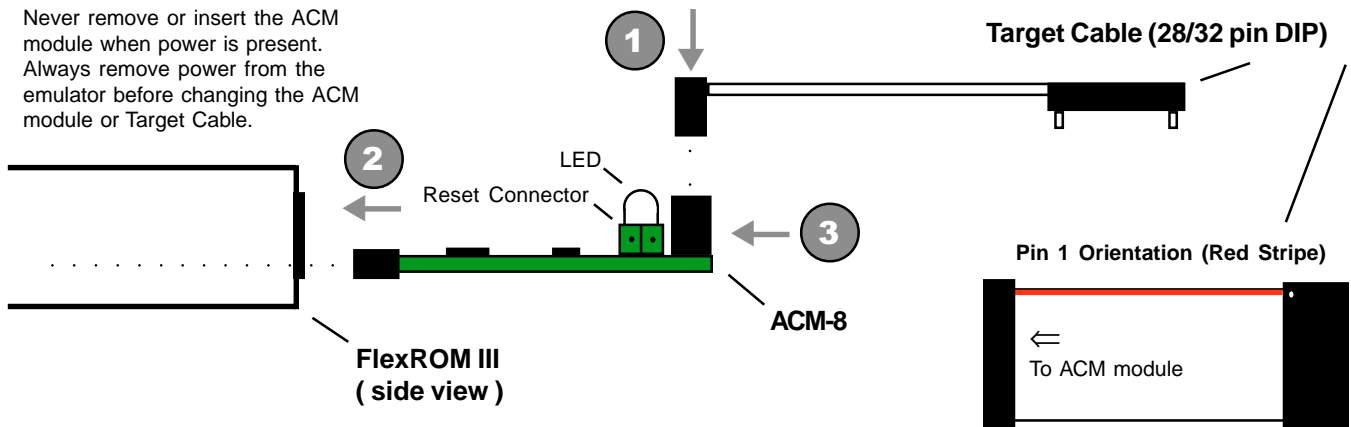

Insertion Instructions:

1. Connect the Target Cable to the ACM module.
2. Insert the ACM module into the open slot provided at the rear of the FlexROM III emulator.
3. Gently slide module into the unit until it stops. Then apply firm pressure until the ACM module seats completely.