


ES17xx Evaluation System Introduction:

This demo system is for evaluation of all operations of the Winbond ISD17xx ChipCorder[®] IC controlled through the USB port of a PC in real time. The flexible and easy to use software coupled with the ISD7XX_USB-PB board makes a complete evaluation system for ISD17xx Series for an end application. The ISD17xx-USB-PB evaluation system also serves as Single Socket writer/ programmer.

The ISD7XX_USB-PB supports both modes of operations of ISD17xxx family.

- Push Button Mode(Battery Operated Stand-Alone)
- SPI Mode (USB controlled)

ISD17XX-USB-PB Board

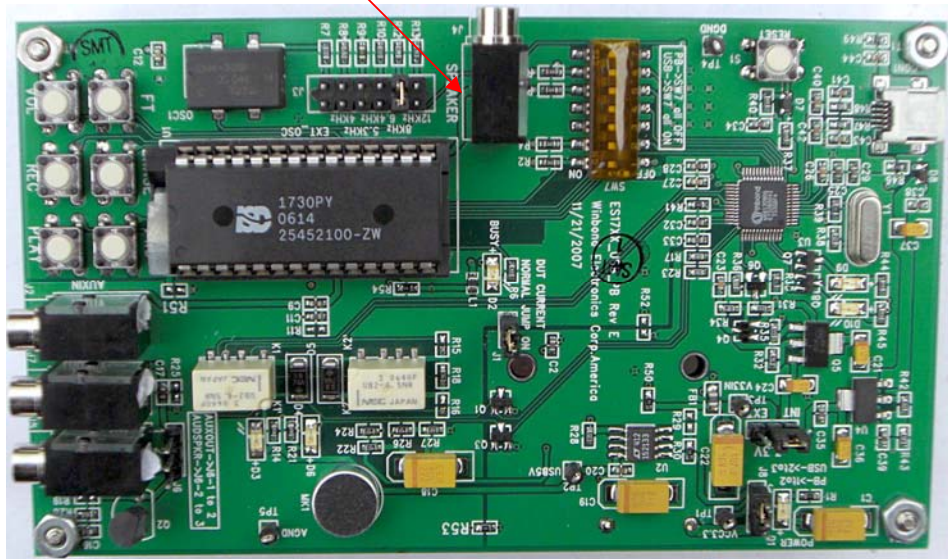

DEVICE SUPPORTED:


Product Supported	Ordering Code
ISD1730	ES-17XX_USB_PB Rev E
ISD1740	
ISD1750	
ISD1760	
ISD1790	
ISD17120	
ISD17150	
ISD17180	
ISD17210	

ISD17240	
----------	--

Chipcorder® ISD- VPE1700 USB Demo Software Operation

The VPE1700 GUI interface consists of:

- Operational and board setting panels on top (1) (2)
- Graphical Block diagrams of all possible input/output paths at the bottom screen. (3)

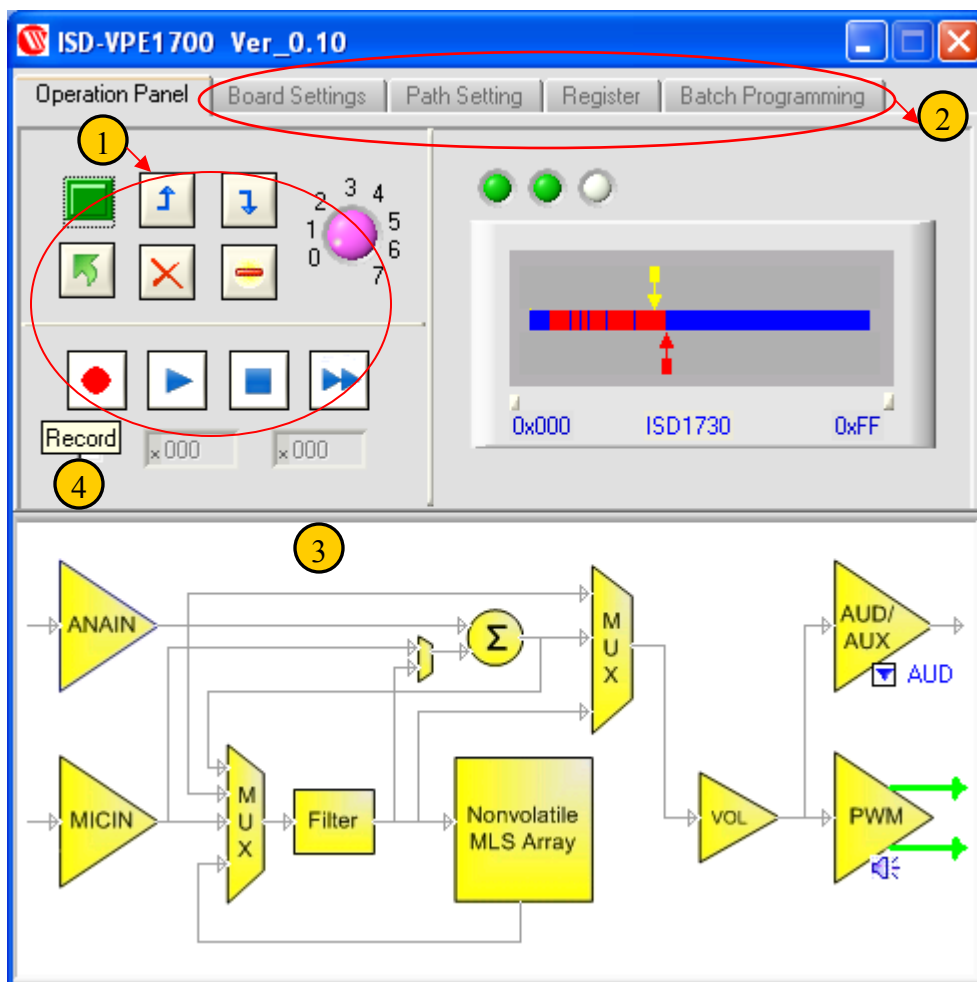

Major Features:

- The GUI interface consists of two parts, a main operational panel and a configuration panel. Users will work on the operation panel most of the time while they will use configuration panels to setup the device before each operation.
- All GUI controls in this software are self-descriptive. Users can move the mouse cursor over the control button, a tools tip message will popup explaining the purpose of the current control; See above for example; placing mouse over record button will display Record (4)

- ✚ A canvas window on the right side of the main panel, gives users insight of the current ISD17xx memory usage along with Rec/Play pointers and device ID. The blue bar shows empty rows in the chip. Once recorded, the corresponding rows will turn red. The yellow arrow indicates the play pointer and the red arrow indicates the record pointer. User can move the mouse cursor on these arrows to get the current play-pointer address or record-pointer address. After each operation, the pointers are updated in this canvas window.
- ✚ Once the board is attached and the device is powered up, any update on configuration settings will be effective immediately on the graphical block diagram automatically.
- ✚ This software supports all 17xx SPI commands.
- ✚ This Software supports **batch programming**. In Batch programming tab on configuration panel, users can add .wav files; program will calculate the rows needed for each file, assign addresses to these files and burn them into the chip.

CONTENTS OF KIT:

- One Sample ISD17130
- CD (with Applications Software and User's guide with demo boards schematics)
- 8 Ohm Speaker
- USB Cable

Batch Programming

Batch programming allows users to preprogram multiple wav files into the chip by a single click. Users can select files, arrange file order, save into a project file, clear, load and burn these wav sounds to a continuous area of memory starting from row 16 (hex 10) of the memory array. The address selection and calculation is based on the ISD1700 circular memory management.

ISD-VPE1700 Ver_0.10

Operation Panel | Board Settings | Path Setting | Register | Batch Programming

Directory: c:\VPE1700\

		Duration	Start	End
0	Ahead_8000.wav	0.868	010	018
1	Alert_8000.wav	0.632	019	01F
2	Approaching_8000.wav	0.657	020	026
3	Approaching_8000-2.wav	0.567	027	02C
4	Area_8000.wav	0.604	02D	032
5	Audio_8000.wav	0.606	033	038
6	Auto_8000.wav	0.390	039	03D
7	Backlight_8000.wav	0.919	03E	046
8	Battery_8000.wav	0.698	047	04D
9	Beep_8000.wav	0.407	04E	052
10	Blue_8000.wav	0.868	053	05B
11	Bright_8000.wav	0.844	05C	063

SE0
 SE1
 SE2
 SE3
 MLS
 start x10

Add Del Clear Save Load Burn