

MPC5567 Microcontroller Reference Manual

This MPC5567 Reference Manual set consisting of the following files:

- MPC5567 Reference Manual Addendum, Rev 2
- MPC5567 Microcontroller Reference Manual, Rev 1

MPC5567 Reference Manual Addendum

This errata document describes corrections to the *MPC5567 Microcontroller Reference Manual*, order number MPC5567RM. For convenience, the addenda items are grouped by revision. Please check our website at <http://www.freescale.com/powerarchitecture> for the latest updates.

The current version available of the *MPC5567 Microcontroller Reference Manual* is Revision 1.0.

Table of Contents

1	Addendum for Revision 1.0.	2
2	Revision history.	18

1 Addendum for Revision 1.0

Table 1. MPC5567RM Rev. 1.0 addendum

Location	Description																																																																																				
Section 12.4.2.7/Page 12-45	Change sentence “The bytes indicated as ‘—’ are not driven during that write cycle” to read “The bytes indicated as ‘—’ are indeterminate and may be driven during that write cycle.”																																																																																				
Table 12-19, “Data Bus Contents for Write Cycles”/Page 12-46	<p>Replace table with the one below to correct information about data bus contents for write cycles. Note that only two columns have changed: under “32-Bit Port Size,” columns “D0:D7” and “D8:D15.”</p> <table border="1" data-bbox="467 541 1398 1020"> <thead> <tr> <th rowspan="2">Transfer Size</th> <th rowspan="2">TSIZ [0:1]¹</th> <th colspan="2">Address</th> <th colspan="4">32-Bit Port Size</th> <th colspan="2">16-Bit Port Size²</th> </tr> <tr> <th>A30</th> <th>A31</th> <th>D0:D7</th> <th>D8:D15</th> <th>D16:D23</th> <th>D24:D31</th> <th>D0:D7</th> <th>D8:D15</th> </tr> </thead> <tbody> <tr> <td rowspan="4">Byte</td> <td>01</td> <td>0</td> <td>0</td> <td>OP0</td> <td>—</td> <td>—</td> <td>—</td> <td>OP0</td> <td>—</td> </tr> <tr> <td>01</td> <td>0</td> <td>1</td> <td>—</td> <td>OP1</td> <td>—</td> <td>—</td> <td>—</td> <td>OP1</td> </tr> <tr> <td>01</td> <td>1</td> <td>0</td> <td>—</td> <td>—</td> <td>OP2</td> <td>—</td> <td>OP2</td> <td>—</td> </tr> <tr> <td>01</td> <td>1</td> <td>1</td> <td>—</td> <td>—</td> <td>—</td> <td>OP3</td> <td>—</td> <td>OP3</td> </tr> <tr> <td rowspan="2">16-bit</td> <td>10</td> <td>0</td> <td>0</td> <td>OP0</td> <td>OP1</td> <td>—</td> <td>—</td> <td>OP0</td> <td>OP1</td> </tr> <tr> <td>10</td> <td>1</td> <td>0</td> <td>—</td> <td>—</td> <td>OP2</td> <td>OP3</td> <td>OP2</td> <td>OP3</td> </tr> <tr> <td>32-bit</td> <td>00</td> <td>0</td> <td>0</td> <td>OP0</td> <td>OP1</td> <td>OP2</td> <td>OP3</td> <td>OP0/OP2³</td> <td>OP1/OP3</td> </tr> </tbody> </table> <p>NOTES: ¹ TSIZ is not enabled on the MPC5567. ² Also applies when DBM=1 for 16-bit data bus mode. ³ This case consists of two 16-bit external transactions, the first writing OP0 and OP1, the second writing OP2 and OP3.</p>	Transfer Size	TSIZ [0:1] ¹	Address		32-Bit Port Size				16-Bit Port Size ²		A30	A31	D0:D7	D8:D15	D16:D23	D24:D31	D0:D7	D8:D15	Byte	01	0	0	OP0	—	—	—	OP0	—	01	0	1	—	OP1	—	—	—	OP1	01	1	0	—	—	OP2	—	OP2	—	01	1	1	—	—	—	OP3	—	OP3	16-bit	10	0	0	OP0	OP1	—	—	OP0	OP1	10	1	0	—	—	OP2	OP3	OP2	OP3	32-bit	00	0	0	OP0	OP1	OP2	OP3	OP0/OP2 ³	OP1/OP3
Transfer Size	TSIZ [0:1] ¹			Address		32-Bit Port Size				16-Bit Port Size ²																																																																											
		A30	A31	D0:D7	D8:D15	D16:D23	D24:D31	D0:D7	D8:D15																																																																												
Byte	01	0	0	OP0	—	—	—	OP0	—																																																																												
	01	0	1	—	OP1	—	—	—	OP1																																																																												
	01	1	0	—	—	OP2	—	OP2	—																																																																												
	01	1	1	—	—	—	OP3	—	OP3																																																																												
16-bit	10	0	0	OP0	OP1	—	—	OP0	OP1																																																																												
	10	1	0	—	—	OP2	OP3	OP2	OP3																																																																												
32-bit	00	0	0	OP0	OP1	OP2	OP3	OP0/OP2 ³	OP1/OP3																																																																												
Table 9-23, “DMA Request Summary for eDMA”/Page 9-39	<p>Change one row in the table to correct information about eSCI COMBTX DMA request. Only the Transmit Data Register Empty and LIN Transmit Data Ready flags drive the DMA request. The Transmit Complete flag is not used.</p> <table border="1" data-bbox="509 1335 1354 1556"> <thead> <tr> <th>DMA Request</th> <th>Channel</th> <th>Source</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>eSCIA_COMBTX</td> <td>18</td> <td>ESCIA.SR[TDRE] ESCIA.SR[TC] ESCIA.SR[TXRDY]</td> <td>eSCIA combined DMA request of the Transmit Data Register Empty and LIN Transmit Data Ready DMA requests</td> </tr> </tbody> </table>	DMA Request	Channel	Source	Description	eSCIA_COMBTX	18	ESCIA.SR[TDRE] ESCIA.SR[TC] ESCIA.SR[TXRDY]	eSCIA combined DMA request of the Transmit Data Register Empty and LIN Transmit Data Ready DMA requests																																																																												
DMA Request	Channel	Source	Description																																																																																		
eSCIA_COMBTX	18	ESCIA.SR[TDRE] ESCIA.SR[TC] ESCIA.SR[TXRDY]	eSCIA combined DMA request of the Transmit Data Register Empty and LIN Transmit Data Ready DMA requests																																																																																		

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description																																																																																					
<p>Table 10-9, "MPC5567 Interrupt Request Sources"/Page 10-20</p>	<p>Change three rows in the table to correct DSPI_B information. The three interrupt requests were not assigned to the correct channel numbers.</p> <table border="1" data-bbox="490 380 1373 611"> <thead> <tr> <th>Hardware Vector Mode Offset</th> <th>Vector Number</th> <th>Source</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0x0850</td> <td>133</td> <td>DSPI_BSR[TFFF]</td> <td>DSPI B transfer FIFO fill flag</td> </tr> <tr> <td>0x0860</td> <td>134</td> <td>DSPI_BSR[TCF]</td> <td>DSPI B transfer complete flag</td> </tr> <tr> <td>0x0870</td> <td>135</td> <td>DSPI_BSR[RFDF]</td> <td>DSPI B receive FIFO drain flag</td> </tr> </tbody> </table>	Hardware Vector Mode Offset	Vector Number	Source	Description	0x0850	133	DSPI_BSR[TFFF]	DSPI B transfer FIFO fill flag	0x0860	134	DSPI_BSR[TCF]	DSPI B transfer complete flag	0x0870	135	DSPI_BSR[RFDF]	DSPI B receive FIFO drain flag																																																																					
Hardware Vector Mode Offset	Vector Number	Source	Description																																																																																			
0x0850	133	DSPI_BSR[TFFF]	DSPI B transfer FIFO fill flag																																																																																			
0x0860	134	DSPI_BSR[TCF]	DSPI B transfer complete flag																																																																																			
0x0870	135	DSPI_BSR[RFDF]	DSPI B receive FIFO drain flag																																																																																			
<p>Figure 5-2, "Master Privilege Control Registers"/Page 5-5</p>	<p>Change read status for bits 20–23 and 28–31 from zero to reserved.</p> <div style="text-align: center;"> <table border="1" data-bbox="490 766 1393 1024"> <tr> <td></td> <td>16</td><td>17</td><td>18</td><td>19</td> <td>20</td><td>21</td><td>22</td><td>23</td> <td>24</td><td>25</td><td>26</td><td>27</td> <td>28</td><td>29</td><td>30</td><td>31</td> </tr> <tr> <td></td> <td colspan="4">Access Field 4</td> <td colspan="4">Access Field 5</td> <td colspan="4">Access Field 6</td> <td colspan="4">Access Field 7</td> </tr> <tr> <td>R</td> <td>MB</td><td>MT</td><td>MT</td><td>MPL</td> <td></td><td></td><td></td><td></td> <td>MB</td><td>MT</td><td>MT</td><td>MP</td> <td></td><td></td><td></td><td></td> </tr> <tr> <td>W</td> <td>W4</td><td>R4</td><td>W4</td><td>4</td> <td></td><td></td><td></td><td></td> <td>W6</td><td>R6</td><td>W6</td><td>L6</td> <td></td><td></td><td></td><td></td> </tr> <tr> <td>Reset</td> <td>0</td><td>1</td><td>1</td><td>1</td> <td>0</td><td>1</td><td>1</td><td>1</td> <td>0</td><td>1</td><td>1</td><td>1</td> <td>0</td><td>1</td><td>1</td><td>1</td> </tr> </table> </div>		16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31		Access Field 4				Access Field 5				Access Field 6				Access Field 7				R	MB	MT	MT	MPL					MB	MT	MT	MP					W	W4	R4	W4	4					W6	R6	W6	L6					Reset	0	1	1	1	0	1	1	1	0	1	1	1	0	1	1	1
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31																																																																						
	Access Field 4				Access Field 5				Access Field 6				Access Field 7																																																																									
R	MB	MT	MT	MPL					MB	MT	MT	MP																																																																										
W	W4	R4	W4	4					W6	R6	W6	L6																																																																										
Reset	0	1	1	1	0	1	1	1	0	1	1	1	0	1	1	1																																																																						
<p>Table A-1, "Module Base Addresses"/Page A-1</p>	<p>Correct names of peripheral bridge modules by adding underscore (PBRIDGEA becomes PBRIDGE_A, PBRIDGEB becomes PBRIDGE_B). Only two rows of the table are changed.</p> <table border="1" data-bbox="470 1186 1464 1339"> <thead> <tr> <th>Module</th> <th>Base Address</th> <th>Page</th> </tr> </thead> <tbody> <tr> <td>Peripheral Bridge A (PBRIDGE_A)</td> <td>0xC3F0_0000</td> <td>Page A-2</td> </tr> <tr> <td>Peripheral Bridge B (PBRIDGE_B)</td> <td>0xFFFF0_0000</td> <td>Page A-31</td> </tr> </tbody> </table>	Module	Base Address	Page	Peripheral Bridge A (PBRIDGE_A)	0xC3F0_0000	Page A-2	Peripheral Bridge B (PBRIDGE_B)	0xFFFF0_0000	Page A-31																																																																												
Module	Base Address	Page																																																																																				
Peripheral Bridge A (PBRIDGE_A)	0xC3F0_0000	Page A-2																																																																																				
Peripheral Bridge B (PBRIDGE_B)	0xFFFF0_0000	Page A-31																																																																																				

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description			
Table A-2, "MPC5567 Detailed Register Map"/Page A-2	Correct names of peripheral bridge A control registers by adding underscore (PBRIDGEA_x becomes PBRIDGE_A_x).			
	Register Description	Register Name	Used Size	Address
	Peripheral bridge A master privilege control register	PBRIDGE_A_MPCR	32-bit	Base + 0x0000
	Reserved	—	—	Base + (0x0004-0x001F)
	Peripheral bridge A peripheral access control register 0	PBRIDGE_A_PACR0	32-bit	Base + 0x0020
	Reserved	—	—	Base + (0x0024-0x003F)
	Peripheral bridge A off-platform peripheral access control register 0	PBRIDGE_A_OPACR0	32-bit	Base + 0x0040
	Peripheral bridge A off-platform peripheral access control register 1	PBRIDGE_A_OPACR1	32-bit	Base + 0x0044
	Peripheral bridge A off-platform peripheral access control register 2	PBRIDGE_A_OPACR2	32-bit	Base + 0x0048
	Reserved	—	—	Base + (0x004C-0xC3F7_FFFF)

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description			
Table A-2, "MPC5567 Detailed Register Map"/Pages A-31–A-32	Correct names of peripheral bridge B control registers by adding underscore (PBRIDGEB_x becomes PBRIDGE_B_x).			
	Register Description	Register Name	Used Size	Address
	Peripheral bridge B master privilege control register	PBRIDGE_B_MPCR	32-bit	Base + 0x0000
	Reserved	—	—	Base + (0x0004-0x001F)
	Peripheral bridge B peripheral access control register 0	PBRIDGE_B_PACR0	32-bit	Base + 0x0020
	Reserved	—	—	Base + (0x0024-0x0027)
	Peripheral bridge B peripheral access control register 2	PBRIDGE_B_PACR2	32-bit	Base + 0x0028
	Reserved	—	—	Base + (0x002C-0x003F)
	Peripheral bridge B off-platform peripheral access control register 0	PBRIDGE_B_OPACR0	32-bit	Base + 0x0040
	Peripheral bridge B off-platform peripheral access control register 1	PBRIDGE_B_OPACR1	32-bit	Base + 0x0044
	Peripheral bridge B off-platform peripheral access control register 2	PBRIDGE_B_OPACR2	32-bit	Base + 0x0048
	Peripheral bridge B off-platform peripheral access control register 3	PBRIDGE_B_OPACR3	32-bit	Base + 0x004C
	Reserved	—	—	(Base + 0x0050)-0xFFFF_3FFF)

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
<p>Figure 18-13," Unified Channel Block Diagram"/Page 18-25</p>	<p>Reverse the arrow between the "Programmable Filter" and "Edge Detect".</p> <p>Notes:</p> <ol style="list-style-type: none"> Counter bus A can be driven by either the STAC bus or channel 23. See EMIOS_MCR[ETB]. Channel 0 drives counter bus B, channel 8 drives counter bus C and channel 16 drives counter bus D. Counter bus B can be selected as the counter for channels 0-7, counter bus C for channels 8-15, and counter bus D for channels 16-23. See Figure 1-1 and EMIOS_CCRn[BS]. Goes to the finite state machine of the UC[n-1]. These signals are used for QDEC mode.

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description																																																																											
Table 16-9/ Page 16-15	<p data-bbox="464 281 1464 338">Bit 7—DMA: Replace the table that shows the eMIOS channels that don't support DMA with the following table.</p> <table border="1" data-bbox="618 415 1310 1619"> <thead> <tr> <th data-bbox="623 415 824 470">eMIOS Channel</th> <th data-bbox="824 415 1073 470">DMA = 0</th> <th data-bbox="1073 415 1305 470">DMA = 1</th> </tr> </thead> <tbody> <tr><td data-bbox="623 470 824 520">0</td><td data-bbox="824 470 1073 520">Interrupt</td><td data-bbox="1073 470 1305 520">DMA request</td></tr> <tr><td data-bbox="623 520 824 571">1</td><td data-bbox="824 520 1073 571">Interrupt</td><td data-bbox="1073 520 1305 571">DMA request</td></tr> <tr><td data-bbox="623 571 824 621">2</td><td data-bbox="824 571 1073 621">Interrupt</td><td data-bbox="1073 571 1305 621">DMA request</td></tr> <tr><td data-bbox="623 621 824 672">3</td><td data-bbox="824 621 1073 672">Interrupt</td><td data-bbox="1073 621 1305 672">DMA request</td></tr> <tr><td data-bbox="623 672 824 722">4</td><td data-bbox="824 672 1073 722">Interrupt</td><td data-bbox="1073 672 1305 722">DMA request</td></tr> <tr><td data-bbox="623 722 824 772">5</td><td data-bbox="824 722 1073 772">Interrupt</td><td data-bbox="1073 722 1305 772">Reserved</td></tr> <tr><td data-bbox="623 772 824 823">6</td><td data-bbox="824 772 1073 823">Interrupt</td><td data-bbox="1073 772 1305 823">Reserved</td></tr> <tr><td data-bbox="623 823 824 873">7</td><td data-bbox="824 823 1073 873">Interrupt</td><td data-bbox="1073 823 1305 873">Reserved</td></tr> <tr><td data-bbox="623 873 824 924">8</td><td data-bbox="824 873 1073 924">Interrupt</td><td data-bbox="1073 873 1305 924">DMA request</td></tr> <tr><td data-bbox="623 924 824 974">9</td><td data-bbox="824 924 1073 974">Interrupt</td><td data-bbox="1073 924 1305 974">DMA request</td></tr> <tr><td data-bbox="623 974 824 1024">10</td><td data-bbox="824 974 1073 1024">Interrupt</td><td data-bbox="1073 974 1305 1024">Reserved</td></tr> <tr><td data-bbox="623 1024 824 1075">11</td><td data-bbox="824 1024 1073 1075">Interrupt</td><td data-bbox="1073 1024 1305 1075">Reserved</td></tr> <tr><td data-bbox="623 1075 824 1125">12</td><td data-bbox="824 1075 1073 1125">Interrupt</td><td data-bbox="1073 1075 1305 1125">Reserved</td></tr> <tr><td data-bbox="623 1125 824 1176">13</td><td data-bbox="824 1125 1073 1176">Interrupt</td><td data-bbox="1073 1125 1305 1176">Reserved</td></tr> <tr><td data-bbox="623 1176 824 1226">14</td><td data-bbox="824 1176 1073 1226">Interrupt</td><td data-bbox="1073 1176 1305 1226">Reserved</td></tr> <tr><td data-bbox="623 1226 824 1276">15</td><td data-bbox="824 1226 1073 1276">Interrupt</td><td data-bbox="1073 1226 1305 1276">Reserved</td></tr> <tr><td data-bbox="623 1276 824 1327">16</td><td data-bbox="824 1276 1073 1327">Interrupt</td><td data-bbox="1073 1276 1305 1327">Reserved</td></tr> <tr><td data-bbox="623 1327 824 1377">17</td><td data-bbox="824 1327 1073 1377">Interrupt</td><td data-bbox="1073 1327 1305 1377">Reserved</td></tr> <tr><td data-bbox="623 1377 824 1428">18</td><td data-bbox="824 1377 1073 1428">Interrupt</td><td data-bbox="1073 1377 1305 1428">Reserved</td></tr> <tr><td data-bbox="623 1428 824 1478">19</td><td data-bbox="824 1428 1073 1478">Interrupt</td><td data-bbox="1073 1428 1305 1478">Reserved</td></tr> <tr><td data-bbox="623 1478 824 1528">20</td><td data-bbox="824 1478 1073 1528">Interrupt</td><td data-bbox="1073 1478 1305 1528">Reserved</td></tr> <tr><td data-bbox="623 1528 824 1579">21</td><td data-bbox="824 1528 1073 1579">Interrupt</td><td data-bbox="1073 1528 1305 1579">Reserved</td></tr> <tr><td data-bbox="623 1579 824 1629">22</td><td data-bbox="824 1579 1073 1629">Interrupt</td><td data-bbox="1073 1579 1305 1629">Reserved</td></tr> <tr><td data-bbox="623 1629 824 1680">23</td><td data-bbox="824 1629 1073 1680">Interrupt</td><td data-bbox="1073 1629 1305 1680">Reserved</td></tr> </tbody> </table>	eMIOS Channel	DMA = 0	DMA = 1	0	Interrupt	DMA request	1	Interrupt	DMA request	2	Interrupt	DMA request	3	Interrupt	DMA request	4	Interrupt	DMA request	5	Interrupt	Reserved	6	Interrupt	Reserved	7	Interrupt	Reserved	8	Interrupt	DMA request	9	Interrupt	DMA request	10	Interrupt	Reserved	11	Interrupt	Reserved	12	Interrupt	Reserved	13	Interrupt	Reserved	14	Interrupt	Reserved	15	Interrupt	Reserved	16	Interrupt	Reserved	17	Interrupt	Reserved	18	Interrupt	Reserved	19	Interrupt	Reserved	20	Interrupt	Reserved	21	Interrupt	Reserved	22	Interrupt	Reserved	23	Interrupt	Reserved
eMIOS Channel	DMA = 0	DMA = 1																																																																										
0	Interrupt	DMA request																																																																										
1	Interrupt	DMA request																																																																										
2	Interrupt	DMA request																																																																										
3	Interrupt	DMA request																																																																										
4	Interrupt	DMA request																																																																										
5	Interrupt	Reserved																																																																										
6	Interrupt	Reserved																																																																										
7	Interrupt	Reserved																																																																										
8	Interrupt	DMA request																																																																										
9	Interrupt	DMA request																																																																										
10	Interrupt	Reserved																																																																										
11	Interrupt	Reserved																																																																										
12	Interrupt	Reserved																																																																										
13	Interrupt	Reserved																																																																										
14	Interrupt	Reserved																																																																										
15	Interrupt	Reserved																																																																										
16	Interrupt	Reserved																																																																										
17	Interrupt	Reserved																																																																										
18	Interrupt	Reserved																																																																										
19	Interrupt	Reserved																																																																										
20	Interrupt	Reserved																																																																										
21	Interrupt	Reserved																																																																										
22	Interrupt	Reserved																																																																										
23	Interrupt	Reserved																																																																										
Table 10-9. MPC5567 Interrupt Request Sources/Page 10-20	<p data-bbox="464 1667 1464 1694">In the "Description" column, correct the description of the following DSPI interrupt sources.</p> <p data-bbox="464 1724 1000 1751">DSPI_BSR[TFFF] — DSPI B transfer FIFO fill flag</p> <p data-bbox="464 1751 1000 1778">DSPI_BSR[TCF] — DSPI B transfer complete flag</p> <p data-bbox="464 1778 1024 1806">DSPI_BSR[RFDF] — DSPI B receive FIFO drain flag</p>																																																																											

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description						
Section 9.3.1 eDMA Microarchitecture/ Page 9-29	In the Memory controller sub-bullet, delete the line "The hooks to a BIST controller for the local TCD memory are included in this module".						
Section 9.2.2.13: eDMA Interrupt Request Register (EDMA_IRQRL)/ Page 9-17	In the third paragraph, remove the last line "without the need to perform a read-modify-write sequence to the EDMA_IRQRL".						
Section 8.3: Initialization and Application Information/Page 8-15	<p>Replace the whole section with the following information: The Error Correction Code (ECC) is used to verify the contents of the internal SRAM and flash memories. This is done by generating ECC check bits. Typically ECC check bits are calculated on writes and then used on reads to detect and correct errors.</p> <ul style="list-style-type: none"> • SRAM—Eight ECC check bits for each 64-bit SRAM data doubleword. • Flash—Eight ECC check bits for each 64-bit flash data doubleword. <p>After Power on Reset (POR), the contents of internal SRAM is random and the corresponding ECC check bits are unknown. To prevent generating ECC errors during reads, an initialization routine must perform 64 bit writes to all SRAM locations. Because the flash module is non-volatile, the ECC check bits are calculated and stored when the flash is programmed. Transparent to the application, the ECC uses the check bits to automatically correct single-bit memory errors. Multi-bit memory errors are not correctable. If the ECC detects a multi-bit error, an exception is generated. The type of exception generated by a multi-bit error depends on the settings of the EE and ME in the Machine State Register (MSR), as shown in the following table. When error reporting is enabled, as long as its priority is 0, an interrupt request is generated to the interrupt controller (INTC) even though the INTC request is not serviced.</p> <div style="text-align: center;"> <p>MSR[EE] and MSR[ME] Bit Settings</p> <table border="1" data-bbox="501 1020 1427 1289"> <thead> <tr> <th data-bbox="505 1024 670 1079">Field</th> <th data-bbox="670 1024 1424 1079">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="505 1079 670 1184">EE</td> <td data-bbox="670 1079 1424 1184">External interrupt enable. 0 External input interrupts disabled. 1 External interrupts enabled.</td> </tr> <tr> <td data-bbox="505 1184 670 1289">ME</td> <td data-bbox="670 1184 1424 1289">Machine check enable. 0 Machine check interrupts disabled. Enters machine check. 1 Machine interrupts enabled.</td> </tr> </tbody> </table> </div> <p>A non-correctable data ECC error executes one of the following actions, regardless of whether non-correctable reporting is enabled</p>	Field	Description	EE	External interrupt enable. 0 External input interrupts disabled. 1 External interrupts enabled.	ME	Machine check enable. 0 Machine check interrupts disabled. Enters machine check. 1 Machine interrupts enabled.
Field	Description						
EE	External interrupt enable. 0 External input interrupts disabled. 1 External interrupts enabled.						
ME	Machine check enable. 0 Machine check interrupts disabled. Enters machine check. 1 Machine interrupts enabled.						

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description																				
	<p style="text-align: center;">Non-correctable Data ECC States</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th data-bbox="532 390 667 443">MSR[EE]</th> <th data-bbox="667 390 808 443">MSR[ME]</th> <th data-bbox="808 390 1003 443">Access Type</th> <th data-bbox="1003 390 1393 443">Result</th> </tr> </thead> <tbody> <tr> <td data-bbox="532 443 667 520">0</td> <td data-bbox="667 443 808 520">0</td> <td data-bbox="808 443 1003 520">Instruction or data</td> <td data-bbox="1003 443 1393 520">Enters checkstop state. A reset is required to resume processing.</td> </tr> <tr> <td data-bbox="532 520 667 598">0</td> <td data-bbox="667 520 808 598">1</td> <td data-bbox="808 520 1003 598">Instruction or data</td> <td data-bbox="1003 520 1393 598">Machine check interrupt (IVOR1).</td> </tr> <tr> <td data-bbox="532 598 667 737">1</td> <td data-bbox="667 598 808 737">X</td> <td data-bbox="808 598 1003 737">Data</td> <td data-bbox="1003 598 1393 737">Data storage interrupt (IVOR2). External interrupt must be enabled. Machine check can be enabled or disabled.</td> </tr> <tr> <td data-bbox="532 737 667 814">1</td> <td data-bbox="667 737 808 814">X</td> <td data-bbox="808 737 1003 814">Instruction</td> <td data-bbox="1003 737 1393 814">Instruction storage interrupt (IVOR3).</td> </tr> </tbody> </table> <p>When the device is in the checkstop state, processing is suspended and cannot resume without a reset. When a debug request is presented to the core while it is in the checkstop state, the core temporarily exits the checkstop state and enters debug mode. When debug mode exits, the core re-enters the checkstop state.</p> <p>If the external interrupt bit in the MSR is enabled, data or instruction stage interrupts are reported when the ECC errors are a result of CPU accesses, regardless of whether non-correctable reporting is enabled.</p> <p>ECC errors generated by other masters (eDMA, etc.) do not generate data or instruction storage exceptions, and the ECSM is used to report these errors. You must initialize the ECSM to enable non-correctable reporting with interrupt generation to detect and report ECC interrupts from the ECSM.</p> <p>Error reporting details can be independently enabled for flash memory and SRAM. To enable non-correctable error reporting and save the error details for:</p> <ul style="list-style-type: none"> • SRAM—set the ERNCR bit in the ECSM Error Configuration Register (ECSM_ECR). • Flash—set the EFNCR bit in ECSM_ECR. <p>When these bits are set and a non-correctable ECC error occurs, error information is recorded in other ECSM registers and an interrupt request is generated on vector 9 of the interrupt controller (INTC).</p> <ul style="list-style-type: none"> • CPU data access error—Generates data storage exception (IVOR2). • CPU instruction access error—Generates instruction storage exception (IVOR3). • Vector 9 of INTC enabled—Generates an external exception (IVOR4) 	MSR[EE]	MSR[ME]	Access Type	Result	0	0	Instruction or data	Enters checkstop state. A reset is required to resume processing.	0	1	Instruction or data	Machine check interrupt (IVOR1).	1	X	Data	Data storage interrupt (IVOR2). External interrupt must be enabled. Machine check can be enabled or disabled.	1	X	Instruction	Instruction storage interrupt (IVOR3).
MSR[EE]	MSR[ME]	Access Type	Result																		
0	0	Instruction or data	Enters checkstop state. A reset is required to resume processing.																		
0	1	Instruction or data	Machine check interrupt (IVOR1).																		
1	X	Data	Data storage interrupt (IVOR2). External interrupt must be enabled. Machine check can be enabled or disabled.																		
1	X	Instruction	Instruction storage interrupt (IVOR3).																		
<p>Section 11.4.3.3, "FM Calibration Routine"/ Page 11-29</p>	<p>Correct the equation at the end of the third paragraph: change value of M from 640 to 480.</p>																				
<p>Table 11-6. FMPLL_SYNSR Field Descriptions/ Page 11-19</p>	<p>LOCK bit: Modify the LOCK bit to read: PLL lock status bit. Indicates whether the FMPLL has acquired lock. If the LOCK bit is read when the FMPLL simultaneously loses lock or acquires lock, the bit does not reflect the current condition of the FMPLL.</p> <p>If operating in bypass mode, LOCK remains cleared after reset. See the frequency as defined in the MPC5567 <i>Microcontroller Data Sheet</i> for the lock/unlock range.</p>																				

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description																																																																																																																																								
<p>Table 6-135, “SIU_DISR Field Descriptions”/ Page 6-108</p>	<ul style="list-style-type: none"> • Bit 14-15–TRIGSELB: Correct the input select description as follows: 00: Replace the term “Invalid value” with “No Trigger” 01: Replace the term “Invalid value” with “No Trigger” 10: Add the term PCSC[4] • Bit 20-21– SCKSELC [0:1]: Correct the clock input select description as follows: 10: Add the term SCKB (Master) • Bit 22-23–TRIGSELC: Correct the input select description as follows: 00: Replace the term “Invalid value” with “No Trigger” 01: Replace the term “Invalid value” with “No Trigger” • Bit 30-31–TRIGSELD: Correct the input select description as follows: 00: Replace the term “Invalid value” with “No Trigger” 01: Replace the term “Invalid value” with “No Trigger” 																																																																																																																																								
<p>Figure 11-9, “Synthesizer Status Register (FMPLL_SYNSR)/Page 11-17</p>	<p>Correct the figure to reflect bits 23:28 and bits 30:31 as read-only.</p> <p>Addr Base + 0x0004 Access: User R/W</p> <p>ss:</p> <table border="1" style="width:100%; border-collapse: collapse; text-align: center;"> <tr> <td></td> <td>0</td><td>1</td><td>2</td><td>3</td> <td>4</td><td>5</td><td>6</td><td>7</td> <td>8</td><td>9</td><td>10</td><td>11</td> <td>12</td><td>13</td><td>14</td><td>15</td> </tr> <tr> <td>R</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> </tr> <tr> <td>W</td> <td colspan="16" style="background-color: #cccccc;"></td> </tr> <tr> <td>Reset</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> </tr> </table> <table border="1" style="width:100%; border-collapse: collapse; text-align: center;"> <tr> <td></td> <td>16</td><td>17</td><td>18</td><td>19</td> <td>20</td><td>21</td><td>22</td><td>23</td> <td>24</td><td>25</td><td>26</td><td>27</td> <td>28</td><td>29</td><td>30</td><td>31</td> </tr> <tr> <td>R</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>LOLF</td><td>LOC</td> <td>MO DE</td><td>PLL SEL</td><td>PLL REF</td><td>LOC KS</td> <td>LOC K</td><td>LOC F</td><td>CAL DO NE</td><td>CAL PAS S</td> </tr> <tr> <td>W</td> <td colspan="7" style="background-color: #cccccc;"></td> <td>w1c</td><td></td> <td></td><td></td><td></td><td></td> <td>w1c</td><td></td><td></td> </tr> <tr> <td>Reset</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td><td>0</td> <td>–¹</td><td>–¹</td><td>–¹</td><td>–¹</td> <td>–²</td><td>0</td><td>0</td><td>0</td> </tr> </table> <p>¹ Reset state determined during reset configuration. ² Reset state determined during reset.</p> <p>Note: “w1c” signifies that this bit is cleared by writing a 1 to it.</p> <p style="text-align: center;">Synthesizer Status Register (FMPLL_SYNSR)</p>		0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	W																	Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	R	0	0	0	0	0	0	LOLF	LOC	MO DE	PLL SEL	PLL REF	LOC KS	LOC K	LOC F	CAL DO NE	CAL PAS S	W								w1c						w1c			Reset	0	0	0	0	0	0	0	0	– ¹	– ¹	– ¹	– ¹	– ²	0	0	0
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15																																																																																																																									
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0																																																																																																																									
W																																																																																																																																									
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0																																																																																																																									
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31																																																																																																																									
R	0	0	0	0	0	0	LOLF	LOC	MO DE	PLL SEL	PLL REF	LOC KS	LOC K	LOC F	CAL DO NE	CAL PAS S																																																																																																																									
W								w1c						w1c																																																																																																																											
Reset	0	0	0	0	0	0	0	0	– ¹	– ¹	– ¹	– ¹	– ²	0	0	0																																																																																																																									
<p>Section 10.5.5.2 , “Ensuring Coherency”/ Page 10-36</p>	<p>Add the following sentence before GetResource source code: “Processor recognition of interrupts must be enabled before executing the GetResource code sequence.”</p> <p>Insert a blank line between the GetResource and ReleaseResource code sequences:</p> <pre>GetResource: raise PRI mbar isync ReleaseResource: mbar lower PRI</pre>																																																																																																																																								

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
Section 10.3.1.3, "INTC Interrupt Acknowledge Register (INTC_IACKR)"/Page 10-12	Remove the first paragraph from the "Note": "The INTC_IACKR must not be read speculatively while in software vector mode. Therefore, for future compatibility, the TLB entry covering the INTC_IACKR must be configured to be guarded."
Table 10-3. INTC Memory Map/Page 10-10	Add the following note at the end of this table: Note: To ensure compatibility with all PowerPC processors, the TLB entry covering the INTC memory map must be configured as guarded, both in software and hardware vector modes. <ul style="list-style-type: none"> • In software vector mode, the INTC_IACKR must not be read speculatively. • In hardware vector mode, guarded writes to the INTC_CPR or INTC_EOIR complete before the interrupt acknowledge signal from the processor asserts.
Table 10-9. MPC5567 Interrupt Request Sources/ Page 10-27	Update the note at the end of this table as following: Note: The INTC has no spurious vector support. Therefore, if an asserted peripheral or software settable interrupt request (whose PRI value in INTC_PSRn is higher than the PRI value in INTC_CPR) negates before the interrupt request to the processor for that peripheral or software settable interrupt request is acknowledged, the interrupt request to the processor still can assert or remain asserted for that peripheral or software settable interrupt request. If the interrupt request to the processor does assert or does remain asserted: <ul style="list-style-type: none"> • The interrupt vector will correspond to that peripheral or software settable interrupt request. • The PRI value in the INTC_CPR will be updated with the corresponding PRI value in INTC_PSRn. Furthermore, clearing the peripheral interrupt request's enable bit in the peripheral or, alternatively, setting its mask bit has the same consequences as clearing its flag bit. Setting its enable bit or clearing its mask bit while its flag bit is asserted has the same effect on the INTC as an interrupt event setting the flag bit.
Table 17-3. FlexRay Memory Map/ Page 17-8	Remove the Strobe Signal Control Register (FR_STBSCR) and mark the row as reserved.
Section 17.3.2.6, "Strobe Signal Control Register (FR_STBSCR)"/17-16	Remove this section.
Table A-2. MPC5561 Detailed Register Map/ Page A-55	Remove the Strobe Port Control Register (STBPCR) and mark the row as reserved.
Section 10.4.2.1.4, "Priority Comparator Submodule"/ Page 10-29	Add the following paragraph to this section: One consequence of the priority comparator design is that once a higher priority interrupt is captured, it must be acknowledged by the CPU before a subsequent interrupt request of even higher priority can be captured. For example, if the CPU is executing a priority level 1 interrupt, and a priority level 2 interrupt request is captured by the INTC, followed shortly by a priority level 3 interrupt request to the INTC, the level 2 interrupt must be acknowledged by the CPU before a new level 3 interrupt will be generated.

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
<p>Figure 11-1. FMPLL Block and Clock Architecture/ Page</p>	<p>Update FlexRay block's clocking to show divide-by-3 FMPLL clock going to Flexray as shown below.</p> <p>NOTE: The clock mode selection and associated package pin settings and FMPLL_SYNSR settings are displayed in Table 11-1.</p>

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
Figure 11-2. FMPLL Bypass Mode/ Page 11-3	<p data-bbox="464 279 1446 338">Update FlexRay block's clocking to show divide-by-3 FMPLL clock going to Flexray as shown below.</p> <p data-bbox="516 999 776 1079">NOTE: The clock mode selection and associated package pin settings and FMPLL_SYNSR settings are displayed in Table 11-1.</p> <p data-bbox="630 1472 857 1535">Core, INTC, eDMA, SIU, BAM, RAMs, eQADC, Flash, XBAR, PBRIDGE_A, PBRIDGE_B</p>

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
<p>Figure 11-3. FMPLL External Reference Mode/ Page 11-4</p>	<p>Update FlexRay block's clocking to show divide-by-3 FMPLL clock going to Flexray as shown below.</p> <p>NOTE: The clock mode selection and associated package pin settings and FMPLL_SYNSR settings are displayed in Table 11-1.</p>

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
<p>Figure 11-4. FMPLL Crystal Reference Mode without FM/ Page 11-5</p>	<p>Update FlexRay block's clocking to show divide-by-3 FMPLL clock going to Flexray as shown below.</p> <p>NOTE: The clock mode selection and associated package pin settings and FMPLL_SYNSR settings are displayed in Table 11-1.</p>

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
<p>Figure 11-5. FMPLL Crystal Reference Mode with FM/ Page 11-6</p>	<p>Update FlexRay block's clocking to show divide-by-3 FMPLL clock going to Flexray as shown below.</p> <p>NOTE: The clock mode selection and associated package pin settings and FMPLL_SYNSR settings are displayed in Table 11-1.</p>
<p>Figure 11-6. FMPLL Dual Controller (1:1) Mode/ Page 11-7</p>	<p>Update FlexRay block's clocking to show divide-by-3 FMPLL clock going to Flexray as shown below.</p>

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description
<p>Section 10.5.5.2, "Ensuring Coherency"/ Page 10-36</p>	<p>Move the content of this section under a new heading Section 10.5.5.2.1, "Interrupt with Blocked Priority".</p> <p>Add the following paragraph to this section: Section 10.5.5.2.2: Raised Priority Preserved Before the instruction after the GetResource system service executes, all pending transactions have completed. These pending transactions can include an ISR for a peripheral or software settable interrupt request whose priority was equal to or lower than the raised priority. Also, during the epilog of the interrupt exception handler for this preempting ISR, the raised priority has been restored from the LIFO to PRI in INTC_CPR. The shared coherent data block now can be accessed coherently. Following figure shows the timing diagram for this scenario, and the table explains the events. The example is for software vector mode, but except for the method of retrieving the vector and acknowledging the interrupt request to the processor, hardware vector mode is identical.</p> <p style="text-align: center;">Raised Priority Preserved Timing Diagram</p>

Table 1. MPC5567RM Rev. 1.0 addendum (continued)

Location	Description																				
	<p style="text-align: center;">Raised Priority Preserved Events</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th data-bbox="475 342 560 394">Event</th> <th data-bbox="560 342 1446 394">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="475 394 560 472">A</td> <td data-bbox="560 394 1446 472">Peripheral interrupt request 200 asserts during execution of ISR108 running at priority 1.</td> </tr> <tr> <td data-bbox="475 472 560 550">B</td> <td data-bbox="560 472 1446 550">Interrupt request to processor asserts. INTVEC in INTC_IACKR updates with vector for that peripheral interrupt request.</td> </tr> <tr> <td data-bbox="475 550 560 627">C</td> <td data-bbox="560 550 1446 627">ISR108 writes to INTC_CPR to raise priority to 3 before accessing shared coherent data block.</td> </tr> <tr> <td data-bbox="475 627 560 705">D</td> <td data-bbox="560 627 1446 705">PRI in INTC_CPR now at 3, reflecting the write. This write, just before accessing data block, is the last instruction the processor executes before being interrupted.</td> </tr> <tr> <td data-bbox="475 705 560 783">E</td> <td data-bbox="560 705 1446 783">Interrupt exception handler prolog acknowledges interrupt by reading INTC_IACKR.</td> </tr> <tr> <td data-bbox="475 783 560 861">F</td> <td data-bbox="560 783 1446 861">PRI of 3 pushed onto LIFO. PRI in INTC_CPR updates to 2, the priority of ISR208.</td> </tr> <tr> <td data-bbox="475 861 560 938">G</td> <td data-bbox="560 861 1446 938">ISR208 clears its flag bit, deasserting its peripheral interrupt request.</td> </tr> <tr> <td data-bbox="475 938 560 1016">H</td> <td data-bbox="560 938 1446 1016">Interrupt exception handler epilog writes to INTC_EOIR.</td> </tr> <tr> <td data-bbox="475 1016 560 1094">I</td> <td data-bbox="560 1016 1446 1094">LIFO pops 3, restoring the raised priority onto PRI in INTC_CPR. Next value to pop from LIFO is the priority from before peripheral interrupt request 100 interrupted. ISR108 now can access data block coherently after interrupt exception handler executes rfi instruction.</td> </tr> </tbody> </table>	Event	Description	A	Peripheral interrupt request 200 asserts during execution of ISR108 running at priority 1.	B	Interrupt request to processor asserts. INTVEC in INTC_IACKR updates with vector for that peripheral interrupt request.	C	ISR108 writes to INTC_CPR to raise priority to 3 before accessing shared coherent data block.	D	PRI in INTC_CPR now at 3, reflecting the write. This write, just before accessing data block, is the last instruction the processor executes before being interrupted.	E	Interrupt exception handler prolog acknowledges interrupt by reading INTC_IACKR.	F	PRI of 3 pushed onto LIFO. PRI in INTC_CPR updates to 2, the priority of ISR208.	G	ISR208 clears its flag bit, deasserting its peripheral interrupt request.	H	Interrupt exception handler epilog writes to INTC_EOIR.	I	LIFO pops 3, restoring the raised priority onto PRI in INTC_CPR. Next value to pop from LIFO is the priority from before peripheral interrupt request 100 interrupted. ISR108 now can access data block coherently after interrupt exception handler executes rfi instruction.
Event	Description																				
A	Peripheral interrupt request 200 asserts during execution of ISR108 running at priority 1.																				
B	Interrupt request to processor asserts. INTVEC in INTC_IACKR updates with vector for that peripheral interrupt request.																				
C	ISR108 writes to INTC_CPR to raise priority to 3 before accessing shared coherent data block.																				
D	PRI in INTC_CPR now at 3, reflecting the write. This write, just before accessing data block, is the last instruction the processor executes before being interrupted.																				
E	Interrupt exception handler prolog acknowledges interrupt by reading INTC_IACKR.																				
F	PRI of 3 pushed onto LIFO. PRI in INTC_CPR updates to 2, the priority of ISR208.																				
G	ISR208 clears its flag bit, deasserting its peripheral interrupt request.																				
H	Interrupt exception handler epilog writes to INTC_EOIR.																				
I	LIFO pops 3, restoring the raised priority onto PRI in INTC_CPR. Next value to pop from LIFO is the priority from before peripheral interrupt request 100 interrupted. ISR108 now can access data block coherently after interrupt exception handler executes rfi instruction.																				
<p>Section 11.3.1.1 Synthesizer Control Register (FMPLL_SYNCR)</p>	<p>Changed the last note in PREDIV field description from “To use the 8–20 MHz OSC, the PLL predivider must be configured for divide-by-two operation by tying PLLCFG[2] low (set PREDIV to 0b000). To use the 40 MHz OSC, the PLL predivider must be configured for divide-by-2 operation by setting PLLCFG[2] high (set PREDIV to 0b001). After reset, PREDIV must not be configured to less than divide-by-2 so long as a 40 MHz crystal is used.” to “When using an 8 to 20 MHz reference clock (crystal or external clock), PLLCFG[2] should be set low for devices that have a PLLCFG[2] pin. This sets the default predivider (PREDIV) to 0b000. To use a crystal or external reference greater than 20 MHz (up to 40 MHz), the PLL predivider must be configured for divide-by-2 operation by setting PLLCFG[2] high. This sets the default predivider (PREDIV) to 0b001. After reset, PREDIV must not be configured to a value less than divide-by-2 (with a 40 MHz crystal/reference).”</p>																				

2 Revision history

Table 2 provides a revision history for this document.

Table 2. Revision History Table

Rev. Number	Substantive Changes	Date of Release
1.0	<ul style="list-style-type: none"> • Initial release. Correct errors in chapter 12, “External Bus Interface (EBI).” 	10/2009
2.0	<ul style="list-style-type: none"> • Correct error in chapter 9, “Enhanced Direct Memory Access (eDMA).” • Correct errors in chapter 10, “Interrupt Controller (INTC).” • Correct errors in chapter 5, “Peripheral Bridge (PBRIDGE A and PBRIDGE B).” • Correct peripheral bridge name errors in appendix A, “MPC5567 Register Map.” • Correct unified channel block diagram in chapter 18, “Enhanced Modular Input/Output Subsystem (eMIOS).” • Correct errors in chapter 10, MPC5567 Interrupt Request Sources table • Correct the table shown in EMIOS_CCRn: DMA bit description. • Clarify the description in Section 9.4.1, “eDMA Microarchitecture”. • Clarify the description in Section 9.3.1.13, “eDMA Interrupt Request Registers (EDMA_IRQRL).” • Correct the ECSM initialization information in Section 8.3: Initialization and Application Information. • Clarify the code sequence in Section 10.5.5.2: Ensuring Coherency • Clarify note in the INTC Interrupt Acknowledge Register • Add a note in the INTC Memory Map table • Clarify note at the end of the MPC5567 Interrupt Request Sources table • Add a paragraph to the Section 10.4.2.1.4, “Priority Comparator Submodule” • Correct Flexray block clocking in Figure 11-1, “FMPLL and Clock Architecture” • Correct Flexray block clocking in Figure 11-2, “FMPLL Bypass Mode” • Correct Flexray block clocking in Figure 11-3, “FMPLL External Reference Mode” • Correct Flexray block clocking in Figure 11-4, “FMPLL Crystal Reference Mode Without FM” • Correct Flexray block clocking in Figure 11-5, “FMPLL Crystal Reference Mode With FM” • Correct Flexray block clocking in Figure 11-6, “FMPLL Dual-Controller (1:1) Mode” • Update Section 10.5.5.2, “Ensuring Coherency” • Updated the last note in PREDIV field description of Synthesizer Control Register (FMPLL_SYNCR). 	04/2012

How to Reach Us:**Home Page:**

www.freescale.com

Web Support:

<http://www.freescale.com/support>

USA/Europe or Locations Not Listed:

Freescale Semiconductor, Inc.
Technical Information Center, EL516
2100 East Elliot Road
Tempe, Arizona 85284
+1-800-521-6274 or +1-480-768-2130
www.freescale.com/support

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
www.freescale.com/support

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064
Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor China Ltd.
Exchange Building 23F
No. 118 Jianguo Road
Chaoyang District
Beijing 100022
China
+86 10 5879 8000
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
1-800-441-2447 or 303-675-2140
Fax: 303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.



Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2009–2012. All rights reserved.

MPC5567RMAD
Rev. 2
04/2012

MPC5567 Microcontroller Reference Manual

Devices Supported:
MPC5567

MPC5567RM
Rev. 1
01/2007



How to Reach Us:

Home Page:

www.freescale.com

E-mail:

support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor
Technical Information Center, CH370
1300 N. Alma School Road
Chandler, Arizona 85224
+1-800-521-6274 or +1-480-768-2130
support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064, Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 26668334
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
P.O. Box 5405
Denver, Colorado 80217
1-800-441-2447 or 303-675-2140
Fax: 303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.



Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2006. All rights reserved.

MPC5567RM
Rev. 1
01/2007

Chapter 1 Introduction

1.1	Overview	1-1
1.2	Features	1-4
1.3	MPC556x Family Comparison	1-12
1.4	Detailed Features	1-13
	1.4.1 e200z6 Core Overview	1-13
	1.4.2 System Bus Crossbar Switch	1-14
	1.4.3 eDMA	1-15
	1.4.4 INTC	1-15
	1.4.5 FMPLL	1-15
	1.4.6 EBI	1-16
	1.4.7 Calibration Bus	1-16
	1.4.8 SIU	1-16
	1.4.9 ECSM	1-16
	1.4.10 Flash	1-16
	1.4.11 Cache	1-17
	1.4.12 SRAM	1-17
	1.4.13 BAM	1-17
	1.4.14 eMIOS	1-18
	1.4.15 eTPU	1-18
	1.4.16 eQADC	1-18
	1.4.17 DSPI	1-18
	1.4.18 eSCI	1-19
	1.4.19 FlexCAN	1-19
	1.4.20 NDI	1-19
	1.4.21 JTAGC	1-19
	1.4.22 FEC	1-20
	1.4.23 Dual Channel FlexRay Controller	1-20
1.5	MPC5500 Family Memory Map	1-22
1.6	Multi-Master Operation Memory Map	1-25
1.7	Revision History	1-26

Chapter 2 e200z6 Core Complex

2.1	Introduction	2-1
	2.1.1 Block Diagram	2-2
	2.1.2 Overview	2-2
	2.1.3 Features	2-3
	2.1.4 Microarchitecture Summary	2-5
2.2	Core Registers and Programmer's Model	2-6
	2.2.1 Power Architecture Registers	2-8
	2.2.2 Core-Specific Registers	2-11
	2.2.3 e200Z6 Core Complex Features Not Supported in the Device	2-12

2.3	Functional Description	2-13
2.3.1	Memory Management Unit (MMU)	2-13
2.3.2	L1 Cache	2-21
2.3.3	Interrupt Types	2-28
2.3.4	Bus Interface Unit (BIU)	2-30
2.3.5	Timer Facilities	2-30
2.3.6	Signal Processing Extension APU (SPE APU)	2-31
2.3.7	SPE Programming Model	2-31
2.4	External References	2-31
2.5	Power Architecture Instruction Extensions - VLE	2-32
2.6	Document Revision History	2-32

Chapter 3 Reset

3.1	Introduction	3-1
3.2	External Signal Description	3-2
3.2.1	Reset Input ($\overline{\text{RESET}}$)	3-2
3.2.2	Reset Output ($\overline{\text{RSTOUT}}$)	3-2
3.2.3	Reset Configuration ($\overline{\text{RSTCFG}}$)	3-2
3.2.4	Weak Pull Configuration (WKPCFG)	3-3
3.2.5	Boot Configuration (BOOTCFG[0:1])	3-3
3.3	Memory Map/Register Definition	3-3
3.3.1	Register Descriptions	3-3
3.4	Functional Description	3-6
3.4.1	Reset Vector Locations	3-6
3.4.2	Reset Sources	3-7
3.4.3	Reset Configuration and Configuration Pins	3-10
3.4.4	Reset Configuration Timing	3-15
3.4.5	Reset Flow	3-17
3.5	Revision History	3-19

Chapter 4 Signal Description

4.1	Block Diagram	4-1
4.2	External Signal Descriptions	4-3
4.3	Detailed Signal Description	4-21
4.3.1	Reset and Configuration Signals	4-21
4.3.2	External Bus Interface (EBI) Signals	4-22
4.3.3	Nexus Signals	4-25
4.3.4	JTAG Signals	4-27
4.3.5	FlexCAN Signals	4-27
4.3.6	eSCI Signals	4-28
4.3.7	Deserial/Serial Peripheral Interface (DSPI) Signals	4-29
4.3.8	eQADC Signals	4-32

4.3.9	eTPU Signals	4-35
4.3.10	eMIOS Signals	4-40
4.3.11	General-Purpose Input / Output Signals	4-42
4.3.12	Calibration Bus and Fast Ethernet Controller (FEC) Signals	4-42
4.3.13	Clock Synthesizer Signals	4-46
4.3.14	Power / Ground Signals	4-47
4.3.15	I/O Power/Ground Segmentation	4-49
4.4	eTPU Pin Connections and Serialization	4-51
4.4.1	ETPUA[0:15]	4-51
4.4.2	ETPUA[16:31]	4-52
4.5	eMIOS Pin Connections and Serialization	4-54
4.6	Document Revision History	4-55

Chapter 5 Peripheral Bridge (PBRIDGE_A, PBRIDGE_B)

5.1	Introduction	5-1
5.1.1	Block Diagram	5-1
5.1.2	Overview	5-1
5.1.3	Features	5-3
5.1.4	Modes of Operation	5-3
5.2	External Signal Description	5-4
5.3	Memory Map/Register Definition	5-4
5.3.1	Register Descriptions	5-5
5.4	Functional Description	5-11
5.4.1	Access Support	5-11
5.4.2	Peripheral Write Buffering	5-12
5.4.3	General Operation	5-13
5.5	Document Revision History	5-14

Chapter 6 System Integration Unit (SIU)

6.1	Introduction	6-1
6.1.1	Block Diagram	6-2
6.1.2	Overview	6-2
6.1.3	Features	6-3
6.1.4	Modes of Operation	6-3
6.1.5	Normal Mode	6-3
6.1.6	Debug Mode	6-3
6.2	External Signal Description	6-4
6.2.1	Detailed Signal Descriptions	6-4
6.3	Memory Map and Register Definition	6-7
6.3.1	Register Descriptions	6-8
6.4	Functional Description	6-95
6.4.1	System Configuration	6-95

6.4.2	Reset Control	6-96
6.4.3	External Interrupt	6-97
6.4.4	GPIO Operation	6-97
6.4.5	Internal Multiplexing	6-98
6.5	Document Revision History	6-101

Chapter 7 Crossbar Switch (XBAR)

7.1	Introduction	7-1
7.1.1	Block Diagram	7-1
7.1.2	Overview	7-2
7.1.3	Features	7-2
7.1.4	Modes of Operation	7-3
7.2	Memory Map/Register Definition	7-3
7.2.1	Register Descriptions	7-4
7.3	Functional Description	7-8
7.3.1	Overview	7-8
7.3.2	General Operation	7-8
7.3.3	Master Ports	7-9
7.3.4	Slave Ports	7-10
7.3.5	Priority Assignment	7-10
7.3.6	Arbitration	7-10
7.4	Revision History	7-12

Chapter 8 Error Correction Status Module (ECSM)

8.1	Introduction	8-1
8.1.1	Overview	8-1
8.1.2	Features	8-2
8.2	Memory Map and Register Definition	8-2
8.2.1	Register Descriptions	8-3
8.3	Initialization/Application Information	8-15
8.4	Document Revision History	8-16

Chapter 9 Enhanced Direct Memory Access (eDMA)

9.1	Introduction	9-1
9.1.1	Overview	9-1
9.1.2	Features	9-2
9.1.3	Modes of Operation	9-3
9.2	Memory Map and Register Definition	9-3
9.2.1	Memory Map	9-3
9.2.2	Register Descriptions	9-6
9.3	Functional Description	9-28

9.3.1	eDMA Microarchitecture	9-28
9.3.2	eDMA Basic Data Flow	9-29
9.3.3	eDMA Performance	9-32
9.4	Initialization / Application Information	9-35
9.4.1	eDMA Initialization	9-35
9.4.2	DMA Programming Errors	9-37
9.4.3	DMA Request Assignments	9-38
9.4.4	DMA Arbitration Mode Considerations	9-40
9.4.5	DMA Transfer	9-41
9.4.6	TCD Status	9-44
9.4.7	Channel Linking	9-45
9.4.8	Dynamic Programming	9-47
9.5	Document Revision History	9-47

Chapter 10 Interrupt Controller (INTC)

10.1	Introduction	10-1
10.1.1	Block Diagram	10-1
10.1.2	Overview	10-2
10.1.3	Features	10-4
10.1.4	Modes of Operation	10-5
10.2	External Signal Description	10-7
10.3	Memory Map/Register Definition	10-9
10.3.1	Register Descriptions	10-10
10.4	Functional Description	10-15
10.4.1	Interrupt Request Sources	10-15
10.4.2	Priority Management	10-28
10.4.3	Details on Handshaking with Processor	10-29
10.5	Initialization/Application Information	10-31
10.5.1	Initialization Flow	10-31
10.5.2	Interrupt Exception Handler	10-32
10.5.3	ISR, RTOS, and Task Hierarchy	10-33
10.5.4	Order of Execution	10-34
10.5.5	Priority Ceiling Protocol	10-35
10.5.6	Selecting Priorities According to Request Rates and Deadlines	10-36
10.5.7	Software Settable Interrupt Requests	10-37
10.5.8	Lowering Priority Within an ISR	10-37
10.5.9	Negating an Interrupt Request Outside of its ISR	10-38
10.5.10	Examining LIFO contents	10-38
10.6	Document Revision History	10-39

Chapter 11

Frequency Modulated Phase Locked Loop and System Clocks (FMPLL)

11.1	Introduction	11-1
11.1.1	Block Diagrams	11-1
11.1.2	Overview	11-8
11.1.3	Features	11-8
11.1.4	FMPLL Modes of Operation	11-9
11.2	External Signal Description	11-13
11.3	Memory Map/Register Definition	11-13
11.3.1	Register Descriptions	11-13
11.4	Functional Description	11-20
11.4.1	Clock Architecture	11-20
11.4.2	Clock Operation	11-22
11.4.3	Clock Configuration	11-25
11.5	Document Revision History	11-32

Chapter 12

External Bus Interface (EBI)

12.1	Introduction	12-1
12.1.1	Block Diagram	12-2
12.1.2	Overview	12-3
12.1.3	Features	12-3
12.1.4	Modes of Operation	12-4
12.2	External Signal Description	12-6
12.2.1	Detailed Signal Descriptions	12-7
12.2.2	Signal Function and Direction by Mode	12-10
12.2.3	Signal Pad Configuration by Mode	12-11
12.3	Memory Map and Register Definition	12-13
12.3.1	Register Descriptions	12-13
12.4	Functional Description	12-20
12.4.1	External Bus Interface Features	12-20
12.4.2	External Bus Operations	12-26
12.5	Initialization/Application Information	12-58
12.5.1	Booting from External Memory	12-58
12.5.2	Running with SDR (Single Data Rate) Burst Memories	12-59
12.5.3	Running with Asynchronous Memories	12-59
12.5.4	Connecting an MCU to Multiple Memories	12-62
12.5.5	Dual-MCU Operation with Reduced Pinout MCUs (MPC5567)	12-62
12.5.6	Summary of Differences from MPC5xx	12-64
12.6	Document Revision History	12-65

Chapter 13 Flash Memory

13.1	Introduction	13-1
13.1.1	Block Diagram	13-1
13.1.2	Overview	13-1
13.1.3	Features	13-3
13.1.4	Modes of Operation	13-3
13.2	External Signal Description	13-4
13.2.1	Voltage for Flash Only (V_{FLASH})	13-4
13.2.2	Program and Erase Voltage for Flash Only (V_{PP})	13-4
13.3	Memory Map/Register Description	13-4
13.3.1	Flash Memory Map	13-5
13.3.2	Register Descriptions	13-8
13.4	Functional Description	13-21
13.4.1	Flash Bus Interface Unit (FBIU)	13-21
13.4.2	Flash Memory Array: User Mode	13-24
13.4.3	Flash Memory Array: Stop Mode	13-35
13.4.4	Flash Memory Array: Reset	13-35
13.5	Document Revision History	13-36

Chapter 14 Internal Static RAM (SRAM)

14.1	Introduction	14-1
14.1.1	Block Diagram	14-1
14.1.2	Overview	14-1
14.1.3	Features	14-1
14.2	Modes of Operation	14-1
14.2.1	Normal (Functional) Mode	14-1
14.2.2	Standby Mode	14-1
14.3	External Signal Description	14-2
14.4	Memory Map/Register Definition	14-2
14.5	Functional Description	14-2
14.6	SRAM ECC Mechanism	14-2
14.6.1	Access Timing	14-3
14.6.2	Reset Operation	14-4
14.7	Initialization/Application Information	14-4
14.7.1	Example Code	14-4
14.8	Document Revision History	14-5

Chapter 15

Boot Assist Module (BAM)

15.1	Introduction	15-1
	15.1.1 Overview	15-1
	15.1.2 Features	15-1
	15.1.3 Modes of Operation	15-2
15.2	Memory Map and Register Definition	15-2
	15.2.1 Memory Map	15-3
15.3	Functional Description	15-3
	15.3.1 BAM Program Resources	15-3
	15.3.2 BAM Program Operation	15-3
	15.3.3 Interrupts	15-17
15.4	Revision History	15-18

Chapter 16

Fast Ethernet Controller (FEC)

16.1	Introduction	16-1
	16.1.1 Block Diagram	16-1
	16.1.2 Overview	16-3
	16.1.3 Features	16-4
16.2	Modes of Operation	16-4
	16.2.1 Full and Half Duplex Operation	16-4
	16.2.2 Interface Options	16-5
	16.2.3 Address Recognition Options	16-5
	16.2.4 Internal Loopback	16-5
16.3	Programming Model	16-5
	16.3.1 Top Level Module Memory Map	16-6
	16.3.2 Detailed Memory Map (Control/Status Registers)	16-6
	16.3.3 MIB Block Counters Memory Map	16-7
	16.3.4 Registers	16-9
16.4	Functional Description	16-32
	16.4.1 Initialization Sequence	16-32
	16.4.2 User Initialization (Prior to Asserting ECR[ETHER_EN])	16-33
	16.4.3 Microcontroller Initialization	16-34
	16.4.4 User Initialization (After Asserting ECR[ETHER_EN])	16-34
	16.4.5 Network Interface Options	16-34
	16.4.6 FEC Frame Transmission	16-35
	16.4.7 FEC Frame Reception	16-36
	16.4.8 Ethernet Address Recognition	16-37
	16.4.9 Hash Algorithm	16-39
	16.4.10 Full Duplex Flow Control	16-42
	16.4.11 Inter-Packet Gap (IPG) Time	16-43
	16.4.12 Collision Handling	16-43
	16.4.13 Internal and External Loopback	16-43

16.4.14 Ethernet Error-Handling Procedure	16-44
16.5 Buffer Descriptors	16-45
16.5.1 Driver/DMA Operation with Buffer Descriptors	16-45
16.5.2 Ethernet Receive Buffer Descriptor (RxBd)	16-47
16.5.3 Ethernet Transmit Buffer Descriptor (TxBD)	16-49
16.6 Revision History	16-51

Chapter 17 FlexRay

17.1 Introduction	17-1
17.1.1 FlexRay Protocol	17-1
17.1.2 Overview	17-1
17.1.3 Block Diagram	17-3
17.1.4 Features	17-4
17.1.5 Modes of Operation	17-5
17.2 External Signal Description	17-6
17.2.1 Detailed Signal Descriptions	17-7
17.3 Memory Map and Register Description	17-8
17.3.1 Module Memory Map	17-8
17.3.2 Register Descriptions	17-12
17.4 Functional Description	17-78
17.4.1 Message Buffer Concept	17-78
17.4.2 Physical Message Buffer	17-78
17.4.3 Message Buffer Types	17-79
17.4.4 FlexRay Memory Layout	17-85
17.4.5 Physical Message Buffer Description	17-87
17.4.6 Individual Message Buffer Functional Description	17-96
17.4.7 Individual Message Buffer Search	17-121
17.4.8 Individual Message Buffer Reconfiguration	17-123
17.4.9 Receive FIFO	17-124
17.4.10 Channel Device Modes	17-129
17.4.11 External Clock Synchronization	17-131
17.4.12 Sync Frame ID and Sync Frame Deviation Tables	17-132
17.4.13 MTS Generation	17-135
17.4.14 Sync Frame and Startup Frame Transmission	17-136
17.4.15 Sync Frame Filtering	17-137
17.4.16 Strobe Signal Support	17-137
17.4.17 Timer Support	17-139
17.4.18 Slot Status Monitoring	17-140
17.4.19 Interrupt Support	17-143
17.5 Initialization/Application Information	17-147
17.5.1 FlexRay Initialization Sequence	17-147
17.5.2 Number of Usable Message Buffers	17-148

17.5.3	FlexRay Shut Down Sequence	17-149
17.5.4	Protocol Control Command Execution	17-149
17.5.5	Protocol Reset Command	17-150
17.6	Document Revision History	17-151

Chapter 18

Enhanced Modular Input/Output Subsystem (eMIOS)

18.1	Introduction	18-1
18.1.1	Block Diagram	18-2
18.1.2	Overview	18-3
18.1.3	Features	18-3
18.1.4	Modes of Operation	18-3
18.2	External Signal Description	18-5
18.2.1	Overview	18-5
18.3	Memory Map/Register Definition	18-6
18.3.1	Register Description	18-8
18.4	Functional Description	18-22
18.4.1	Bus Interface Unit (BIU)	18-22
18.4.2	STAC Client Submodule	18-22
18.4.3	Global Clock Prescaler Submodule (GCP)	18-24
18.4.4	Unified Channel (UC)	18-24
18.5	Initialization / Application Information	18-66
18.5.1	Considerations on Changing a UC Mode	18-66
18.5.2	Generating Correlated Output Signals	18-66
18.5.3	Time Base Generation	18-66
18.6	Document Revision History	18-67

Chapter 19

Enhanced Time Processing Unit (eTPU)

19.1	Introduction	19-1
19.1.1	The Device eTPU Implementation	19-1
19.1.2	Block Diagram	19-2
19.1.3	eTPU Operation Overview	19-3
19.1.4	Features	19-8
19.2	Modes of Operation	19-10
19.2.1	User Configuration Mode	19-10
19.2.2	User Mode	19-10
19.2.3	Debug Mode	19-11
19.2.4	Module Disable Mode	19-11
19.2.5	eTPU Mode Selection	19-11
19.3	External Signal Description	19-11
19.3.1	Overview	19-11
19.3.2	Detailed Signal Description	19-11
19.4	Memory Map and Register Definition	19-13

19.4.1	Memory Map	19-13
19.4.2	Register Description	19-13
19.5	Functional Description	19-42
19.6	Initialization/Application Information	19-42
19.7	Document Revision History	19-42

Chapter 20

Enhanced Queued Analog-to-Digital Converter (eQADC)

20.1	Introduction	20-1
20.1.1	Block Diagram	20-2
20.1.2	Overview	20-2
20.1.3	Features	20-4
20.1.4	Modes of Operation	20-5
20.2	External Signal Description	20-8
20.3	Memory Map and Register Definition	20-11
20.3.1	eQADC Memory Map	20-11
20.3.2	eQADC Register Descriptions	20-14
20.3.3	On-Chip ADC Registers	20-38
20.4	Functional Description	20-45
20.4.1	Data Flow in the eQADC	20-45
20.4.2	Command/Result Queues	20-61
20.4.3	eQADC Command FIFOs	20-61
20.4.4	Result FIFOs	20-84
20.4.5	On-Chip ADC Configuration and Control	20-88
20.4.6	Internal/External Multiplexing	20-96
20.4.7	eQADC eDMA/Interrupt Request	20-100
20.4.8	eQADC Synchronous Serial Interface (SSI) Submodule	20-103
20.4.9	Analog Submodule	20-108
20.5	Initialization/Application Information	20-110
20.5.1	Multiple Queues Control Setup Example	20-110
20.5.2	eQADC/eDMA Controller Interface	20-114
20.5.3	Sending Immediate Command Setup Example	20-115
20.5.4	Modifying Queues	20-116
20.5.5	Command Queue and Result Queue Usage	20-117
20.5.6	ADC Result Calibration	20-118
20.5.7	eQADC versus QADC	20-121
20.6	Revision History	20-124

Chapter 21

Deserial Serial Peripheral Interface (DSPI)

21.1	Introduction	21-1
21.1.1	Block Diagram	21-2
21.1.2	Overview	21-2
21.1.3	Features	21-3

21.1.4	Modes of Operation	21-4
21.2	External Signal Description	21-5
21.2.1	Signal Overview	21-5
21.2.2	Signal Names and Descriptions	21-6
21.3	Memory Map and Register Definition	21-7
21.3.1	Memory Map	21-7
21.3.2	Register Descriptions	21-8
21.4	Functional Description	21-32
21.4.1	Modes of Operation	21-33
21.4.2	Start and Stop of DSPI Transfers	21-35
21.4.3	Serial Peripheral Interface (SPI) Configuration	21-35
21.4.4	Deserial Serial Interface (DSI) Configuration	21-38
21.4.5	Combined Serial Interface (CSI) Configuration	21-48
21.4.6	DSPI Baud Rate and Clock Delay Generation	21-51
21.4.7	Transfer Formats	21-53
21.4.8	Continuous Serial Communications Clock	21-60
21.4.9	Interrupts/DMA Requests	21-61
21.4.10	Power Saving Features	21-63
21.5	Initialization/Application Information	21-64
21.5.1	How to Change Queues	21-64
21.5.2	Baud Rate Settings	21-64
21.5.3	Delay Settings	21-65
21.5.4	MPC5xx QSPI Compatibility with the DSPI	21-66
21.5.5	Calculation of FIFO Pointer Addresses	21-67
21.6	Document Revision History	21-68

Chapter 22

Enhanced Serial Communication Interface (eSCI)

22.1	Introduction	22-1
22.1.1	Block Diagram	22-1
22.1.2	Overview	22-2
22.1.3	Features	22-2
22.1.4	Modes of Operation	22-2
22.2	External Signal Description	22-2
22.2.1	Overview	22-3
22.2.2	Detailed Signal Description	22-3
22.3	Memory Map and Register Definition	22-3
22.3.1	Overview	22-3
22.3.2	Module Memory Map	22-3
22.3.3	Register Descriptions	22-4
22.4	Functional Description	22-17
22.4.1	Overview	22-17
22.4.2	Data Format	22-18
22.4.3	Baud Rate Generation	22-18
22.4.4	Transmitter	22-20

22.4.5 Receiver	22-24
22.4.6 Single-Wire Operation	22-30
22.4.7 Loop Operation	22-31
22.4.8 Modes of Operation	22-32
22.4.9 Interrupt Operation	22-32
22.4.10 Using the LIN Hardware	22-35
22.5 Document Revision History	22-40

Chapter 23

FlexCAN2 Controller Area Network

23.1 Introduction	23-1
23.1.1 Block Diagram	23-1
23.1.2 Overview	23-2
23.1.3 Features	23-3
23.1.4 Modes of Operation	23-4
23.2 External Signal Description	23-4
23.2.1 Overview	23-4
23.2.2 Detailed Signal Description	23-5
23.3 Memory Map/Register Definition	23-5
23.3.1 Memory Map	23-5
23.3.2 Message Buffer Structure	23-7
23.3.3 Register Descriptions	23-9
23.4 Functional Description	23-24
23.4.1 Overview	23-24
23.4.2 Transmit Process	23-24
23.4.3 Receive Process	23-25
23.4.4 Message Buffer Handling	23-27
23.4.5 CAN Protocol Related Features	23-28
23.4.6 Modes of Operation Details	23-31
23.4.7 Interrupts	23-32
23.4.8 Bus Interface	23-33
23.5 Initialization/Application Information	23-33
23.5.1 FlexCAN2 Initialization Sequence	23-33
23.5.2 FlexCAN2 Addressing and RAM Size	23-34
23.6 Document Revision History	23-34

Chapter 24

Voltage Regulator Controller (VRC) and POR Module

24.1 Introduction	24-1
24.1.1 Block Diagram	24-1
24.2 External Signal Description	24-2
24.2.1 Detailed Signal Description	24-2
24.3 Memory Map/Register Definition	24-3
24.4 Functional Description	24-3

24.4.1	Voltage Regulator Controller	24-3
24.4.2	POR Circuits	24-3
24.5	Initialization/Application Information	24-5
24.5.1	Voltage Regulator Example	24-5
24.5.2	Recommended Power Transistors	24-5
24.5.3	Power Sequencing	24-5
24.6	Document Revision History	24-7

Chapter 25

IEEE 1149.1 Test Access Port Controller (JTAGC)

25.1	Introduction	25-1
25.1.1	Block Diagram	25-1
25.1.2	Overview	25-2
25.1.3	Features	25-2
25.1.4	Modes of Operation	25-2
25.2	External Signal Description	25-4
25.3	Memory Map/Register Definition	25-4
25.3.1	Instruction Register	25-4
25.3.2	Bypass Register	25-5
25.3.3	Device Identification Register	25-5
25.3.4	Boundary Scan Register	25-5
25.4	Functional Description	25-6
25.4.1	JTAGC Reset Configuration	25-6
25.4.2	IEEE 1149.1-2001 (JTAG) Test Access Port	25-6
25.4.3	TAP Controller State Machine	25-6
25.4.4	JTAGC Instructions	25-8
25.4.5	Boundary Scan	25-10
25.5	Initialization/Application Information	25-11
25.6	Document Revision History	25-11

Chapter 26

Nexus Development Interface

26.1	Introduction	26-1
26.1.1	Block Diagram	26-2
26.1.2	Features	26-3
26.1.3	Modes of Operation	26-4
26.2	External Signal Description	26-6
26.2.1	Detailed Signal Descriptions	26-6
26.3	Memory Map	26-7
26.4	NDI Functional Description	26-11
26.4.1	Enabling Nexus Clients for TAP Access	26-11
26.4.2	Configuring the NDI for Nexus Messaging	26-12
26.4.3	Programmable MCKO Frequency	26-12
26.4.4	Nexus Messaging	26-13

26.4.5	System Clock Locked Indication	26-13
26.5	Nexus Port Controller (NPC)	26-13
26.5.1	Overview	26-14
26.5.2	Features	26-14
26.6	Memory Map/Register Definition	26-14
26.6.1	Memory Map	26-14
26.6.2	Register Descriptions	26-14
26.7	NPC Functional Description	26-17
26.7.1	NPC Reset Configuration	26-17
26.7.2	Auxiliary Output Port	26-18
26.8	NPC Initialization/Application Information	26-25
26.8.1	Accessing NPC Tool-Mapped Registers	26-25
26.9	Nexus Single eTPU Development Interface (NSEDI)	26-26
26.10	e200z6 Class 3 Nexus Module (NZ6C3)	26-26
26.10.1	Introduction	26-26
26.10.2	Block Diagram	26-27
26.10.3	Overview	26-27
26.10.4	Features	26-28
26.10.5	Enabling Nexus3 Operation	26-29
26.10.6	TCODEs Supported by NZ6C3	26-29
26.11	NZ6C3 Memory Map/Register Definition	26-34
26.11.1	Development Control Register 1, 2 (DC1, DC2)	26-35
26.11.2	Development Status Register (DS)	26-37
26.11.3	Read/Write Access Control/Status (RWCS)	26-38
26.11.4	Read/Write Access Address (RWA)	26-39
26.11.5	Read/Write Access Data (RWD)	26-39
26.11.6	Watchpoint Trigger Register (WT)	26-40
26.11.7	Data Trace Control Register (DTC)	26-41
26.11.8	Data Trace Start Address Registers 1 and 2 (DTSA _n)	26-42
26.11.9	Data Trace End Address Registers 1 and 2 (DTEA _n)	26-43
26.11.10	NZ6C3 Register Access via JTAG / OnCE	26-43
26.11.11	Ownership Trace	26-44
26.11.12	Program Trace	26-46
26.11.13	Data Trace	26-55
26.11.14	Watchpoint Support	26-60
26.11.15	NZ6C3 Read/Write Access to Memory-Mapped Resources	26-62
26.11.16	Examples	26-67
26.11.17	IEEE, 1149.1 (JTAG) RD/WR Sequences	26-69
26.12	Nexus Crossbar eDMA Interface (NXDM) and Nexus Crossbar FlexRay Interface (NXFR)	26-71
26.12.1	Block Diagrams	26-72
26.12.2	Features	26-72
26.13	External Signal Description	26-72
26.13.1	Rules for Output Messages	26-73
26.13.2	Auxiliary Port Arbitration	26-73
26.14	NXDM and NXFR Programmers Model	26-73

26.14.1NXDM and NXFR Nexus Register Map	26-73
26.14.2NXDM and NXFR Registers	26-74
26.14.3Functional Description	26-82
26.14.4Enabling NXDM and NXFR Operation	26-82
26.14.5TCODEs Supported by NXDM and NXFR	26-83
26.14.6 Watchpoint Support	26-88
26.15 Revision History	26-89

Appendix A MPC5567 Register Map

Appendix B Calibration

B.1 Overview	2-1
B.2 Calibration Bus	2-3
B.3 Device Specific Information	2-5
B.3.1 MPC5567 Calibration Bus Implementation	2-5
B.4 Signals and Pads	2-5
B.4.1 $\overline{\text{CAL_CS}}[0, 2:3]$ — Calibration Chip Selects 0, 2 and 3	2-5
B.4.2 Pad Ring	2-6
B.4.3 CLKOUT	2-6
B.5 Packaging	2-6
B.6 Power Supplies	2-6
B.7 Integration Logic Functionality	2-7
B.8 Application Information	2-7
B.8.1 Enabling Calibration Reflection Suppression	2-7
B.8.2 Communication With Development Tool Using I/O	2-7
B.8.3 Matching Access Delay to Internal Flash With Calibration Memory	2-7

Chapter 1

Introduction

1.1 Overview

The MPC5567 microcontroller (MCU) is a member of the MPC5500 family of next generation powertrain microcontrollers built on the Power Architecture™. The MPC5500 family contains a host processor core that complies with the Power Architecture embedded category, which is 100 percent user mode compatible with the original Power PC™ user instruction set architecture (UISA). This family of parts contains many new features coupled with high-performance CMOS technology to provide significant performance improvement over the MPC565.

The e200z6 CPU of the MPC5500 family is part of the family of CPU cores that implement versions built on the Power Architecture embedded category. This core also has additional instructions, including digital signal processing (DSP) instructions, beyond the classic PowerPC instruction set.

The MPC5567 has two levels of memory hierarchy. The fastest accesses are to the unified cache (8-kilobytes in the MPC5567). The next level in the hierarchy contains up to 80 kilobytes of internal SRAM and 2 Mbytes of flash memory. Both the internal SRAM and the flash memory can hold instructions and data. The external bus interface has been designed to support most of the standard memories used with the MPC5xx family.

The complex I/O timer functions of the MPC5500 family are performed by an enhanced time processor unit engine (eTPU) — one in the MPC5567. The eTPU engine controls 32 hardware channels. The eTPU has been enhanced over the TPU by providing 24-bit timers, double action hardware channels, variable number of parameters per channel, angle clock hardware, and additional control and arithmetic instructions. The eTPU can be programmed using a high-level programming language. The less complex timer functions of the MPC5500 family are performed by the enhanced modular input/output system (eMIOS). The eMIOS' 24 hardware channels are capable of single action, double action, pulse-width modulation (PWM), and modulus counter operation. Motor control capabilities include edge-aligned and center-aligned PWM.

Off-chip communication is performed by a suite of serial protocols including controller area networks (FlexCANs) — five (MPC5567); an enhanced deserial/serial peripheral interface (DSPI) — three (MPC5567); and enhanced serial communications interfaces (eSCIs). The DSPIs support pin reduction through hardware serialization and deserialization of timer channels and general-purpose input/output (GPIO) signals.

The MCU of the MPC5567 has two on-chip 40-channel enhanced queued dual analog to digital converters (eQADC).


The system integration unit (SIU) performs several chip-wide configuration functions. Pad configuration and general-purpose input and output (GPIO) are controlled from the SIU. External interrupts and reset

Introduction

control are also found in the SIU. The internal multiplexer submodule (SIU_DISR) provides multiplexing of eQADC trigger sources, daisy chaining the DSPIs, and external interrupt signal multiplexing.

The MPC5567 has a fast Ethernet controller (FEC) with a built-in FIFO and a DMA controller.

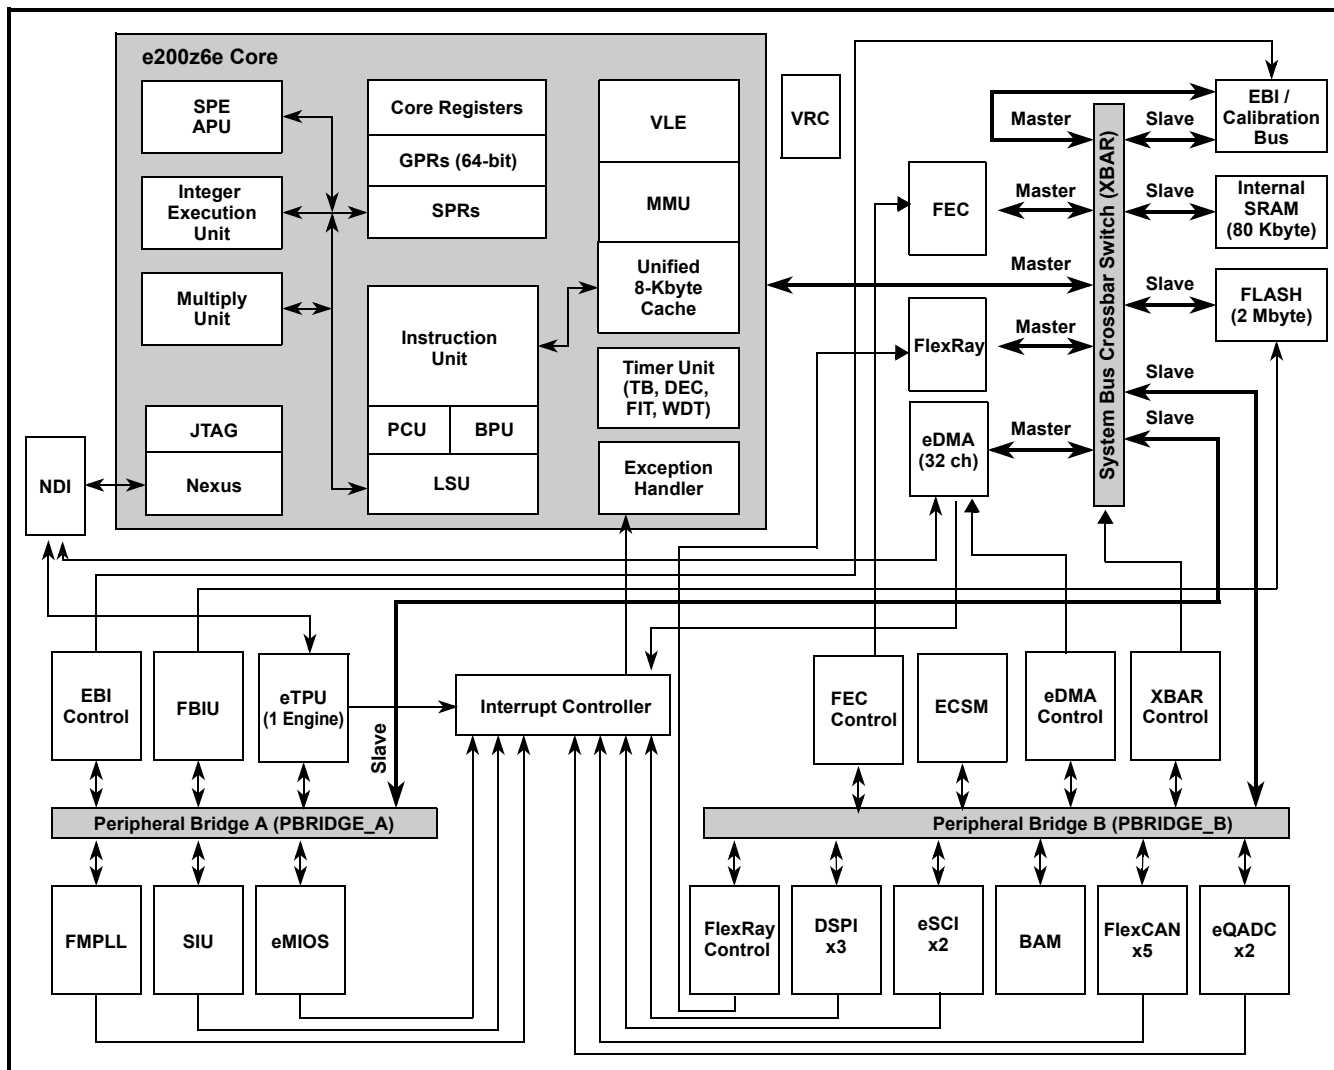Figure 1-1 is a block diagram of the MPC5567.



LEGEND

MPC5567 Device Modules

- BAM** – Boot assist module
- CAN** – Controller area network (FlexCAN)
- DSPI** – Deserial/serial peripheral interface
- EBI** – External bus interface
- ECSM** – Error correction status module
- eDMA** – Enhanced direct memory access
- eMIOS** – Enhanced modular I/O system
- eQADC** – Enhanced queued analog/digital converter
- eSCI** – Enhanced serial communications interface
- FBIU** – Flash bus interface unit
- FEC** – FEC
- FlexRay** – FlexRay
- FMPLL** – Frequency modulated phase-locked loop
- INTC** – Interrupt controller
- NDI** – Nexus developmental interface
- SIU** – System integration unit
- SRAM** – Internal Static RAM
- VRC** – Voltage Regulator Controller
- XBAR** – System bus crossbar switch

e200z6e Core Components

- APU** – Auxiliary processing unit
- BIU** – Bus interface unit
- BPU** – Branch processing unit
- DEC** – Decrementer
- FIT** – Fixed interval timer
- GPR** – General-purpose register
- JTAG** – JTAG controller
- LSU** – Load/store unit
- MMU** – Memory management unit
- PCU** – Program counter unit
- SPE** – Signal processing engine
- SPR** – Special purpose register
- TB** – Time base
- VLE** – Variable length encoding
- WDT** – Watchdog timer
- ↔** – System Bus

Figure 1-1. MPC5567 Block Diagram

1.2 Features

This section provides a high-level description of the features found in the MPC5567.

- Operating parameters
 - Fully static operation, up to 132 MHz
 - -40 to 150 °C junction temperature
 - Low-power design
 - Less than 1.2 Watts power dissipation
 - Designed for dynamic power management of core and peripherals
 - Software-controlled clock gating of peripherals
 - Separate power supply for stand-by operation for portion of internal SRAM
 - Fabricated in 0.13 μm process
 - 1.5 V internal logic
 - Input and output pins with 3.0 V–5.25 V range
 - 35%/65% V_{DDEH} CMOS switch levels (with hysteresis)
 - Selectable hysteresis
 - Selectable slew rate control
 - External bus support 1.62 V–3.6 V operation and Nexus pins support 2.5 V–3.6 V operation
 - Selectable drive strength control
 - Unused pins configurable as GPIO
 - Designed with EMI reduction techniques
 - Frequency modulated phase-locked loop
 - On-chip bypass capacitance
 - Selectable slew rate and drive strength
- High-performance e200z6 core processor
 - 32-bit CPU built on Power Architecture™
 - Freescale Variable Length Encoding (VLE) enhancements for code size footprint reduction
 - 32 64-bit general-purpose registers (GPRs)
 - Memory management unit (MMU) with 32-entry fully-associative translation look-aside buffer (TLB)
 - Branch processing unit
 - Fully pipelined load/store unit
 - 8 kilobyte unified cache with line locking
 - 2-way set associative
 - Two 32-bit fetches per clock
 - 8-entry store buffer
 - Way locking
 - Supports assigning cache as instruction or data only on a per-way basis

- Supports tag and data parity
- Vectored interrupt support
- Interrupt latency < 70 ns @132 MHz (measured from interrupt request to execution of first instruction of interrupt exception handler)
- Reservation instructions for implementing read-modify-write constructs (internal SRAM and flash)
- Signal processing engine (SPE) auxiliary processing unit (APU) operating on 64-bit GPRs
- Floating point
 - IEEE® 754 compatible with software wrapper
 - Single precision in hardware, double precision with software library
 - Conversion instructions between single precision floating point and fixed point
- Long cycle time instructions, except for guarded loads, do not increase interrupt latency in the MPC5567. To reduce latency, long cycle time instructions are aborted upon interrupt requests.
- Extensive system development support through Nexus debug module
- System bus crossbar switch (XBAR)
 - In the MPC5567, five master ports, five slave ports.
 - 32-bit address bus, 64-bit data bus
 - Simultaneous accesses from different masters to different slaves (there is no clock penalty when a parked master accesses a slave)
- Enhanced direct memory access (eDMA) controller
 - 32 channels support independent 8-, 16-, 32-bit single value or block transfers
 - Supports variable sized queues and circular queues
 - Source and destination address registers are independently configured to post-increment or remain constant
 - Each transfer is initiated by a peripheral, CPU, or eDMA channel request
 - Each eDMA channel can optionally send an interrupt request to the CPU on completion of a single value or block transfer
- Interrupt controller (INTC)
 - 280 total interrupt vectors (MPC5567)
 - 249 (MPC5567) peripheral interrupt requests
 - Eight software settable sources
 - 23 reserved
 - Unique 9-bit vector per interrupt source
 - 16 priority levels with fixed hardware arbitration within priority levels for each interrupt source
 - Priority elevation for shared resources
- Frequency modulated phase-locked loop (FMPLL)
 - Input clock frequencies from
 - 8 MHz to 20 MHz and 16 MHz to 40 MHz

- Current controlled oscillator (ICO) range from 48 MHz to maximum device frequency
- Reduced frequency divider (RFD) for reduced frequency operation without re-lock
- Four selectable modes of operation
- Programmable frequency modulation
- Lock detect circuitry continuously monitors lock status
- Loss-of-clock (LOC) detection for reference and feedback clocks
- Self-clocked mode (SCM) operation
- On-chip loop filter (reduces number of external components required)
- Engineering clock output configurable to divide-by-2 to 126 of the system clock frequency
- External bus interface (EBI)
 - 1.8 V–3.3 V I/O nominal I/O voltage
 - MPC5567 specifications:
 - 496 and 416 BGA: 32-bit data bus, 26-bit address bus
 - 324 BGA: 16-bit data bus, 20-bit address bus is default.
 - 208 MAPBGA: no external bus
 - In the 26-bit address bus, the two most significant bits (ADDR[6:7]) are multiplexed with the two least significant bits (ADDR[30:31]).
 - Memory controller with support for various memory types
 - Non-burst SDR flash and SRAM
 - Asynchronous/legacy flash and SRAM
 - Most standard memories used with the MPC5xx family
 - Configurable bus speed modes
 - 1/2 of system frequency
 - 1/4 of system frequency
 - Support for external master accesses to internal addresses (master – slave system only)
 - Burst support
 - Bus monitor
 - User selectable
 - Programmable timeout period (with 8 external bus clock resolution)
 - Chip selects:
 - Four chip selects: $\overline{\text{CS}}[0:3]$ multiplexed with ADDR[8:11].
 - Four write/byte enable (WE[0:3]/BE[0:3]) signals in the 416 and 496 pin packages, two write/byte enable (WE[0:1]/BE[0:1]) signals in the 324-pin package
 - Configurable wait states (via chip selects)
 - Optional automatic CLKOUT gating to save power and reduce EMI
 - Compatible with MPC5xx external bus (with some limitations)
 - Selectable drive strengths; 10 pF, 20 pF, 30 pF, 50 pF

- Calibration bus interface
 - Calibration bus interface only accessible through VertiCal assembly top connector (496 package)
 - 1.8 V-3.3 V I/O nominal voltage
 - Memory controller shared with EBI
 - 16-bit data bus
 - 21-bit address bus with the least significant address bit (ADDR31) being not supported
 - Up to 22 bit address space providing a 4 Mbyte addressing range (the most significant two bits shared with $\overline{\text{CAL_CS}}[2:3]$)
 - Chip selects: up to three chip selects ($\overline{\text{CAL_CS}}0$ and $\overline{\text{CAL_CS}}[2:3]$)(shared with $\overline{\text{CAL_ADDR}}[10:11]$)
- System integration unit (SIU)
 - Centralized GPIO control of bus pins:
 - 416 and 496 CSP BGA package: 225 pins
 - 324 BGA package: 150 pins
 - 208 package: 82 pins
 - Centralized pad control on a per-pin basis
 - System reset monitoring and generation
 - External interrupt inputs, filtering and control
 - Internal multiplexer submodule
- Error correction status module (ECSM)
 - Configurable error-correcting codes (ECC) reporting for internal SRAM and Flash memories
- On-chip FLASH
 - 2 Mbytes (MPC5567) burst flash memory
 - 256 Kbyte \times 64 bit configuration
 - Censorship protection scheme to prevent flash content visibility
 - Hardware read-while-write feature that allows blocks to be erased/programmed while other blocks are being read (used for EEPROM emulation and data calibration)
 - 20 blocks (MPC5567) with sizes ranging from 16 Kbytes to 128 Kbytes to support features such as boot block, operating system block, and EEPROM emulation. Blocks are structured as follows:
 - 2 x 16 Kbytes
 - 2 x 48 Kbytes
 - 2 x 64 Kbytes
 - 14 x 128 Kbytes
 - Read while write with multiple partitions
 - Parallel programming mode to support rapid end of line programming
 - Hardware programming state machine

- Configurable cache memory, 0 – 8 Kbytes
 - 2-way set-associative unified (instruction and data) cache
 - Decouples processor performance from system memory performance
- On-chip internal static RAM (SRAM)
 - 80 Kbytes general-purpose SRAM of which 32 Kbytes are on standby power
 - ECC performs single-bit correction, double-bit error detection
- Boot assist module (BAM)
 - Enables and manages the transition of MCU from reset to user code execution in the following configurations:
 - User application can boot from internal or external Flash memory
 - Download and execution of code via FlexCAN or eSCI
 - User application can boot with either classic PowerPC code or VLE code
- Enhanced modular I/O system (eMIOS)
 - 24 orthogonal channels with double action, PWM, and modulus counter functionality
 - Supports all DASM and PWM modes of MIOS14 (MPC5xx)
 - Four selectable time bases plus shared time or angle counter bus
 - DMA and interrupt request support
 - Motor control capability
- Enhanced time processor unit (eTPU)
 - One engine in the MPC5567
 - 32-channel engine
 - 24-bit timer resolution
 - 12 Kbyte shared code memory, 2.5 Kbyte shared data memory
 - The eTPU engine is an event-triggered timer subsystem
 - High level assembler/compiler
 - Variable number of parameters allocatable per channel
 - Double match/capture channels
 - Angle clock hardware support
 - Shared time or angle counter bus for all eTPU and eMIOS modules
 - DMA and interrupt request support
 - Nexus Class 3 Debug support (with some Class 4 support)
- Enhanced queued analog/digital converter (eQADC)
 - Two independent ADCs with 12-bit A/D resolution
 - Common mode conversion range of 0–5 V
 - 40 single-ended input channels, expandable to 65 channels with external multiplexers on 416 and 324 BGA packages
 - 34 single-ended input channels, expandable to 57 channels with external multiplexers on 208 BGA package

- Eight channels can be used as four pairs of differential analog input channels
- 10-bit accuracy at 400 ksamples/s, 8-bit accuracy at 800 ksamples/s
- Supports eight FIFO queues with fixed priority in the MPC5567
- Queue modes with priority-based preemption; initiated by software command, internal (eTPU and eMIOS), or external triggers
- DMA and interrupt request support
- Supports all functional modes from QADC (MPC5xx family)
- Three (MPC5567) deserial serial peripheral interface modules (DSPI)
 - SPI
 - Full duplex communication ports with interrupt and eDMA request support
 - Supports all functional modes from QSPI submodule of QSMCM (MPC5xx family)
 - Support for queues in RAM
 - Six chip selects, expandable to 64 with external demultiplexers
 - Programmable frame size, baud rate, clock delay, and clock phase on a per frame basis
 - Modified SPI mode for interfacing to peripherals with longer setup time requirements
 - Deserial serial interface (DSI)
 - Pin reduction by hardware serialization and deserialization of eTPU and eMIOS channels
 - Chaining of DSI submodules
 - Triggered transfer control and change in data transfer control (for reduced EMI)
- Two (MPC5567) enhanced serial communication interface (eSCI) modules
 - UART mode provides NRZ format and half or full duplex interface
 - eSCI bit rate up to 1 Mbps
 - Advanced error detection, and optional parity generation and detection
 - Word length programmable as 8 or 9 bits
 - Separately enabled transmitter and receiver
 - LIN Support
 - DMA support
 - Interrupt request support
- 5 (MPC5567) FlexCANs
 - 64 message buffers each
 - Full implementation of the CAN protocol specification, Version 2.0B
 - Based on and including all existing features of the Freescale TouCAN module
 - Programmable acceptance filters
 - Individual RX filtering per message buffer
 - Short latency time for high priority transmit messages
 - Arbitration scheme according to message ID or message buffer number
 - Listen-only mode capabilities

- Programmable clock source: system clock or oscillator clock
- Reception queue possible by setting more than one RX message buffer with the same ID
- Backwards compatibility with previous FlexCAN modules
- Nexus development interface (NDI)
 - Per IEEE®-ISTO 5001-2003
 - Real-time development support for PowerPC core and eTPU engines through Nexus Class 3 (some Class 4 support)
 - Data trace of eDMA accesses
 - Data trace of FlexRay accesses
 - Read and write access
 - Configured via the IEEE® 1149.1 (JTAG) port
 - High-bandwidth mode for fast message transmission
 - Reduced bandwidth mode for reduced pin usage
- IEEE® 1149.1 JTAG controller (JTAGC)
 - IEEE® 1149.1-2001 test access port (TAP) interface
 - A JCOMP input that provides the ability to share the TAP. Selectable modes of operation include JTAGC/debug or normal system operation.
 - A 5-bit instruction register that supports IEEE® 1149.1-2001 defined instructions
 - A 5-bit instruction register that supports additional public instructions
 - Three test data registers: a bypass register, a boundary scan register, and a device identification register
 - A TAP controller state machine that controls the operation of the data registers, instruction register and associated circuitry
- Voltage regulator controller
 - Provides a low-cost solution to power the core logic. It reduces the number of power supplies required from the customer power supply chip.
- POR block
 - Provides initial reset condition up to the voltage at which pins ($\overline{\text{RESET}}$) can be read safely. It does not guarantee the safe operation of the chip at specified minimum operating voltages.
- Fast Ethernet controller (FEC)

Only the 416 BGA package of the MPC5567 has a fast Ethernet controller (FEC) module that supports the following features:

 - IEEE® 802.3 MAC (compliant with IEEE® 802.3 1998 edition)
 - Built-in FIFO and DMA controller
 - Fully software compatible to the FEC module of Freescale's industry standard PowerQUICC communications controller
 - Full compliance with the IEEE 802.3 standard for 10/100 base-T
 - Support for different Ethernet physical interfaces:

- IEEE® 802.3 MII
- 10Mbps 7-wire interface (industry standard)
- MII management interface for control and status
- Large on-chip transmit and receive FIFOs to support a variety of bus latencies
- Retransmission from the transmit FIFO after a collision
- Automatic internal flushing of the receive FIFO for runts and collisions
- External BD tables of user-definable size allow nearly unlimited flexibility in management of transmit and receive buffer memory
- Address recognition for broadcast, single-station address, promiscuous mode, and multicast hashing
- Ethernet channel uses DMA burst transactions to transfer data to and from external/system memory
- Dual FlexRay controller
 - Full implementation of FlexRay Protocol Specification 2.1
 - 128 configurable message buffers can be handled
 - Message buffers configurable as TX, RX, or RXFIFO
 - Message buffer size configurable
 - Message filtering for all message buffers based on FrameID, cycle count and message ID
 - Programmable acceptance filters for RXFIFO message buffers
 - Dual channel, each at up to 10 Mbit/s data rate
 - Bus guardian support for each channel

1.3 MPC556x Family Comparison

Table 1. MPC5500 Family Members

MPC5500 Device Module		MPC5554	MPC5567
PowerPC Core		e200z6	e200z6
Variable Length Instruction Support		No	Yes
Cache		32k Unified ¹	8k Unified ²
Memory Management Unit (MMU)		32 entry	32 entry
Crossbar		3x5	5x5
Core Nexus		Class 3+ (NZ6C3)	Class 3+ (NZ6C3)
SRAM		64k	64k
Flash	Main Array	2M ³	2M ³
	Shadow Block	1k	1k
External Bus (EBI)	Data Bus	32 bit ⁴	32-bit ⁴
	Address Bus	24	26 ⁵
Calibration Bus		No	Yes
Direct Memory Access (DMA)		64 channel	32 channel
DMA Nexus		Class 3	Class 3
Serial		2	2
eSCI_A		Yes	Yes
eSCI_B		Yes	Yes
Controller Area Network (CAN)		3	5 ⁶
CAN_A		64 buf	64 buf
CAN_B		64 buf	64 buf
CAN_C		64 buf	64 buf
CAN_D		No	64 buf
CAN_E		No	64 buf
SPI		4	3
DSPI_A		Yes	No
DSPI_B		Yes	Yes
DSPI_C		Yes	Yes
DSPI_D		Yes	Yes
eMIOS		24 channel	24 channel
eTPU		64 channel	32 channel
eTPU_A		Yes	Yes
eTPU_B		Yes	No
Code Memory		16k	12k

Table 1. MPC5500 Family Members (continued)

MPC5500 Device Module	MPC5554	MPC5567
eTPU (continued) Parameter RAM	3k	2.5k
Nexus	Class 3	Class 3
Interrupt Controller	300 channel	281 channel
Analog to Digital Converter (eQADC)	40 channel	40 channel
ADC_0	Yes	Yes
ADC_1	Yes	Yes
Fast Ethernet Controller (FEC)	No	Yes ⁷
FlexRay	No	Yes
FlexRay Nexus	No	Class 3
Phase Lock Loop (PLL)	FM	FM
Maximum System Frequency ⁸	132 MHz	132 MHz
Crystal Range	8–20 MHz	8–20 MHz and 16–40 MHz
Voltage Regulator Controller (VRC)	Yes	Yes

¹ 8-way associative

² 2-way associative

³ 32-byte flash page size for programming

⁴ May not be externally available in some package configurations

⁵ Either ADDR[8:31] or ADDR[6:29] can be selected.

⁶ Updated FlexCAN module with optional individual receive filters

⁷ The FEC signals are shared with the calibration bus.

⁸ Initial automotive temperature range qualification.

1.4 Detailed Features

The following sections provide detailed information about each of the on-chip modules.

1.4.1 e200z6 Core Overview

The device uses the e200z6 core explained in detail in the *e200z6 PowerPC™ Core Reference Manual*. The e200z6 CPU uses a seven stage pipeline for instruction execution. The instruction fetch 1, instruction fetch 2, instruction decode/register file read, execute1, execute2/memory access1, execute3/memory access2, and register writeback stages operate in an overlapped fashion, allowing single-clock instruction execution for most instructions.

The integer execution unit consists of a 32-bit arithmetic unit (AU), a logic unit (LU), a 32-bit barrel shifter, a mask-insertion unit (MIU), a condition register manipulation unit (CRU), a count-leading-zeros unit (CLZ), a 32x32 hardware multiplier array, result feed-forward hardware, and support hardware for division.

Most arithmetic and logical operations are executed in a single cycle with the exception of multiply and divide instructions, which are implemented with a pipelined hardware array. The CLZ unit operates in a single clock cycle.

The instruction unit contains a program counter (PC) incrementer and a dedicated branch address adder to minimize delays during change of flow operations. Sequential prefetching is performed to ensure a supply of instructions into the execution pipeline. Branch target prefetching is performed to accelerate taken branches. Prefetched instructions are placed into an instruction buffer capable of holding six sequential instructions and two branch target instructions.

Branch target addresses are calculated in parallel with branch instruction decode, resulting in execution time of three clocks. Conditional branches which are not taken execute in a single clock. Branches with successful lookahead and target prefetching have an effective execution time of one clock.

Memory load and store operations are provided for byte, halfword, word (32-bit), and doubleword data with automatic zero or sign extension of byte and halfword load data. These instructions can be pipelined to allow effective single cycle throughput. Load and store multiple word instructions allow low overhead context save and restore operations. The load/store unit contains a dedicated effective address adder to allow effective address generation to be optimized.

The condition register unit supports the condition register (CR) and condition register operations defined by the Power Architecture technology. The condition register consists of eight 4-bit fields that reflect the results of certain operations, such as move, integer and floating-point compare, arithmetic, and logical instructions, and provide a mechanism for testing and branching.

Vectored and auto-vectored interrupts are supported by the CPU. Vectored interrupt support is provided to allow multiple interrupt sources to have unique interrupt handlers invoked with no software overhead.

The signal processing extension (SPE) APU supports vector instructions (SIMD) operating on 16- and 32-bit fixed-point data types, as well as 32-bit IEEE®-754 single-precision floating-point formats, and supports single-precision floating-point operations in a pipelined fashion. The 64-bit general-purpose register file is used for source and destination operands, and there is a unified storage model for single-precision floating-point data types of 32-bits and the normal integer type. Low latency fixed-point and floating-point add, subtract, multiply, divide, compare, and conversion operations are provided, and most operations can be pipelined.

The CPU includes support for Variable Length Encoding (VLE) instruction enhancements. This allows the classic PowerPC instruction set to be represented by a modified instruction set made up of a mixture of 16-bit and 32-bit instructions. This results in a significantly smaller code size footprint without affecting performance noticeably. The classic PowerPC instruction set and VLE instruction set are both available concurrently. Regions of the memory map are designated as PPC or VLE using an additional configuration bit in each table look-aside buffer (TLB) entry in the MMU.

1.4.2 System Bus Crossbar Switch

The system bus's XBAR multi-port crossbar switch supports simultaneous connections between five (MPC5567) master ports and five slave ports. The crossbar supports a 32-bit address bus width and a 64-bit data bus width at all master and slave ports.

The crossbar allows for concurrent transactions to occur from any master port to any slave port. It is possible for all master ports and slave ports to be in use at the same time as a result of independent master requests. If a slave port is simultaneously requested by more than one master port, arbitration logic will select the higher priority master and grant it ownership of the slave port. All other masters requesting that

slave port will be stalled until the higher priority master completes its transactions. By default, requesting masters will be treated with equal priority and will be granted access to a slave port in round-robin fashion, based upon the ID of the last master to be granted access.

1.4.3 eDMA

The enhanced direct memory access (eDMA) controller is a second-generation module capable of performing complex data movements via 32 programmable channels, with minimal intervention from the CPU. The hardware micro architecture includes a DMA engine which performs source and destination address calculations, and the actual data movement operations, along with an SRAM-based memory containing the transfer control descriptors (TCD) for the channels. This implementation is utilized to minimize the overall module size.

1.4.4 INTC

The interrupt controller (INTC) provides priority-based preemptive scheduling of interrupt requests, suitable for statically scheduled real-time systems. The INTC allows interrupt request servicing from 280 total interrupt vectors (MPC5567).

For high-priority interrupt requests, the time from the assertion of the interrupt request from the peripheral to when the processor is executing the interrupt service routine (ISR) has been minimized. The INTC provides a unique vector for each interrupt request source for quick determination of which ISR needs to be executed. It also provides an ample number of priorities so that lower priority ISRs do not delay the execution of higher priority ISRs. To allow the appropriate priorities for each source of interrupt request, the priority of each interrupt request is software configurable.

When multiple tasks share a resource, coherent accesses to that resource must be supported. The INTC supports the priority ceiling protocol for coherent accesses. By providing a modifiable priority mask, the priority level can be raised temporarily so that no task can preempt another task that shares the same resource.

Multiple processors can assert interrupt requests to each other through software settable interrupt requests (by using application software to assert requests). These maskable interrupt requests can be used to split the software into a high-priority portion and a low-priority portion for servicing the interrupt requests. The high-priority portion is initiated by a peripheral interrupt request, but then the ISR asserts a software settable interrupt request to finish the servicing in a lower priority ISR.

1.4.5 FMPLL

The frequency modulated PLL (FMPLL) allows the user to generate high speed system clocks from an 8 MHz to 20 MHz crystal oscillator or an external clock generator. An additional configurable mode allows operation with a 40 MHz crystal. Furthermore, the FMPLL supports programmable frequency modulation of the system clock. The PLL multiplication factor, output clock divider ratio, modulation depth, and modulation rate are all software configurable.

1.4.6 EBI

The external bus interface (EBI) controls data transfer across the crossbar switch to/from memories or peripherals in the external address space. The EBI is available on the 416 packages only. The EBI also enables an external master to access internal address space. The EBI includes a memory controller that generates interface signals to support a variety of external memories. The memory controller supports single data rate (SDR) burst mode flash, external SRAM, and asynchronous memories. In addition, the EBI supports up to four regions (via chip selects), along with programmed region-specific attributes.

1.4.7 Calibration Bus

The calibration bus controls data transfer across the crossbar switch to/from memories or peripherals connected to the *VertiCal* connector. The calibration bus is only available when the silicon is packaged in the *VertiCal* calibration system. The bus shares the memory controller and most of the control logic with the EBI but the two buses come out on two completely independent sets of pads. The calibration bus memory controller supports single data rate (SDR) non-burst mode flash, SRAM, and asynchronous memories. In addition, the bus supports up to three regions via dedicated calibration chip selects (two chip selects multiplexed with two address bits), along with programmed region-specific attributes.

1.4.8 SIU

The device's system integration unit (SIU) controls MCU reset configuration, pad configuration, external interrupt, general-purpose I/O (GPIO), internal peripheral multiplexing, and the system reset operation. The reset configuration module contains the external pin boot configuration logic. The pad configuration module controls the static electrical characteristics of I/O pins. The GPIO module provides uniform and discrete input/output control of the I/O pins of the MCU. The reset controller performs reset monitoring of internal and external reset sources, and drives the RSTOUT pin. The SIU is accessed by the e200z6 core through the crossbar switch.

1.4.9 ECSM

The error correction status module (ECSM) provides status information regarding platform memory errors reported by error-correcting codes.

1.4.10 Flash

The MPC5567 provides 2 Mbytes of programmable, non-volatile, flash memory storage. The non-volatile memory (NVM) can be used for instruction and/or data storage.

The device's flash also contains a flash bus interface unit (FBIU) that interfaces the system bus to a dedicated flash memory array controller. The FBIU supports a 64-bit data bus width at the system bus port, and a 256-bit read data interface to Flash memory. The FBIU contains two 256-bit prefetch buffers, and a prefetch controller that prefetches sequential lines of data from the flash array into the buffer. Prefetch buffer hits allow no-wait responses. Normal flash array accesses are registered in the FBIU and are forwarded to the system bus on the following cycle, incurring three wait-states. Prefetch operations may

be automatically controlled, and may be restricted to servicing a single bus master. Prefetches may also be restricted to being triggered for instruction or data accesses.

1.4.11 Cache

The e200z6 core supports an 8-Kbyte, 2-way set-associative, unified (instruction and data) cache with a 32-byte line size. The cache improves system performance by providing low-latency data to the e200z6 instruction and data pipelines, which decouples processor performance from system memory performance. The cache is virtually indexed and physically tagged. The e200z6 does not provide hardware support for cache coherency in a multi-master environment. Software must be used to maintain cache coherency with other possible bus masters.

Both instruction and data accesses are performed using a single bus connected to the cache. Addresses from the processor to the cache are virtual addresses used to index the cache array. The memory management unit (MMU) provides the virtual to physical translation for use in performing the cache tag compare. The MMU may also be configured so that virtual addresses are passed through to the cache as the physical address untranslated. If the physical address matches a valid cache tag entry, the access hits in the cache. For a read operation, the cache supplies the data to the processor, and for a write operation, the data from the processor updates the cache. If the access does not match a valid cache tag entry (misses in the cache) or a write access must be written through to memory, the cache performs a bus cycle on the system bus.

1.4.12 SRAM

The MPC5500 family's internal SRAM module provides a general-purpose memory block that supports mapped read/write accesses from any master. The SRAM size is 80 Kbytes. Included within the SRAM block is a 32-Kbyte block powered by a separate supply for standby operation and ECC error correction and detection.

1.4.13 BAM

The boot assist module (BAM) is a block of read-only memory that is programmed once by Freescale and is identical for all MCUs with an e200z6 core. The BAM program is executed every time the MCU is powered on or reset in normal mode. The BAM supports the following four modes of booting.

- Booting from internal flash memory
- Single master booting from external memory
- Serial boot loading (a program is downloaded into RAM via eSCI or the FlexCAN and then executed).
- The BAM also reads the reset configuration half word (RCHW) from flash memory (either internal or external) and configures the device hardware accordingly. The BAM sets up the MMU to cover all resources and maps all physical addresses to logical addresses with minimum address translation. It sets up the MMU to allow user boot code to execute as either Classic PowerPC Book E code (default) or as Freescale VLE code.

1.4.14 eMIOS

The enhanced modular I/O system (eMIOS) module provides the functionality to generate or measure time events. A unified channel (UC) module is employed that provides a superset of the functionality of all the MIOS channels, while providing a consistent user interface. This allows more flexibility as each unified channel can be programmed for different functions in different applications. In order to identify up to two timed events, each UC contains two comparators, a time base selector, and registers. This structure is able to produce match events, which can be configured to measure or generate a waveform. Alternatively, input events can be used to capture the time base, allowing measurement of an input signal.

1.4.15 eTPU

The enhanced time processing unit (eTPU) is an enhanced co-processor designed for timing control. Operating in parallel with the host CPU, the eTPU processes instructions and real-time input events, performs output waveform generation, and accesses shared data without host intervention. Consequently, for each timer event, the CPU setup and service times are minimized or eliminated. In the MCU, the TPU engine is grouped together with shared instruction and data RAM to form a powerful time processing subsystem. The MPC5567 has one eTPU engine, High-level assembler/compiler and documentation allows customers to develop their own functions on the eTPU. The eTPU supports several features of older TPU versions, making it easy to port older applications.

1.4.16 eQADC

The enhanced queued analog to digital converter (eQADC) module provides accurate and fast conversions for a wide range of applications. The eQADC provides a parallel interface to two on-chip analog to digital converters (ADCs), and a single master-to-single slave serial interface to an off-chip external device. The two on-chip ADCs are architected to allow access to all the analog channels.

The eQADC transfers commands from multiple command FIFOs (CFIFOs) to the on-chip ADCs or to the external device. The module can also receive data from the on-chip ADCs or from an off-chip external device into multiple result FIFOs (RFIFOs) in parallel, independently of the CFIFOs. The eQADC supports software and external hardware triggers from other modules to initiate transfers of commands from the CFIFOs to the on-chip ADCs or to the external device. It also monitors the fullness of CFIFOs and RFIFOs, and accordingly generates eDMA or interrupt requests to control data movement between the FIFOs and the system memory, which is external to the eQADC.

1.4.17 DSPI

The deserial serial peripheral interface (DSPI) module provides a synchronous serial interface for communication between the MCU and external devices. The DSPI supports pin-count reduction through serialization and deserialization of eTPU channels, eMIOS channels and memory-mapped registers. The channels and register content are transmitted using a SPI-like protocol. The MPC5567 has three DSPI modules (DSPI_B, DSPI_C, and DSPI_D).

The DSPIs have three configurations:

- Serial peripheral interface (SPI) configuration where the DSPI operates as a SPI with support for queues
- Deserial serial interface (DSI) configuration where the DSPI serializes eTPU and eMIOS output channels and deserializes the received data by placing it on the eTPU and eMIOS input channels
- Combined serial interface (CSI) configuration where the DSPI operates in both SPI and DSI configurations interleaving DSI frames with SPI frames, giving priority to SPI frames

For queued operations, the SPI queues reside in system memory external to the DSPI. Data transfers between the memory and the DSPI FIFOs are accomplished through the use of the eDMA controller or through host software.

1.4.18 eSCI

The enhanced serial communications interface (eSCI) allows asynchronous serial communications with peripheral devices and other MCUs. It includes special support to interface to local interconnect network (LIN) slave devices. The MPC5567 has two eSCI modules (eSCI_A and eSCI_B).

1.4.19 FlexCAN

The MCU contains five controller area network (FlexCAN) modules. Each FlexCAN module is a communication controller implementing the CAN protocol according to CAN Specification version 2.0B. The CAN protocol was designed to be used primarily as a vehicle serial data bus, meeting the specific requirements of this field: real-time processing, reliable operation in the EMI environment of a vehicle, cost-effectiveness and required bandwidth. Each FlexCAN module contains 64 message buffers.

1.4.20 NDI

The Nexus development interface (NDI) module provides real-time development support capabilities for the MPC5500 family's MCU built on the Power Architecture in compliance with the IEEE®-ISTO 5001-2003 standard. This development support is supplied for MCUs without requiring external address and data pins for internal visibility. The NDI module is an integration of several individual Nexus modules that are selected to provide the development support interface for the MPC5500 family. The NDI module interfaces to the host processor, to one or dual eTPU processors, and internal buses to provide development support as per the IEEE®-ISTO 5001-2003 standard. The development support provided includes program trace, data trace, watchpoint trace, ownership trace, run-time access to the MCU's internal memory map, Nexus trace of eDMA transfers, and access to the Power Architecture and eTPU internal registers during halt, via the auxiliary port. The Nexus interface also supports a JTAG only mode using only the JTAG pins.

1.4.21 JTAGC

The JTAG controller (JTAGC) module provides the means to test chip functionality and connectivity while remaining transparent to system logic when not in test mode. Testing is performed via a boundary scan technique, as defined in the IEEE® 1149.1-2001 standard. All data input to and output from the JTAGC

module is communicated in serial format. The JTAGC module is compliant with the IEEE® 1149.1-2001 standard.

1.4.22 FEC

The MPC5567 FEC includes these distinctive features:

- IEEE 802.3 MAC (compliant with IEEE 802.3 1998 edition)
- Fully software compatible to the FEC module of Freescale's industry standard PowerQUICC communications controller
- MII management interface for control and status
- Built-in FIFO and DMA controller
- Support for different Ethernet physical interfaces:
 - IEEE 802.3 MII
 - 10 Mbps 7-wire interface (industry standard)
- Support for full-duplex operation (200 Mbps throughput) with a system clock of 100 MHz.
- Support for half-duplex operation (100 Mbps throughput) with a system clock of 50 MHz.
- IEEE 802.3 full duplex flow control
- Programmable max frame length supports IEEE 802.1 VLAN tags and priority
- Retransmission from transmit FIFO following a collision (no system bus utilization)
- Automatic internal flushing of the receive FIFO for runts (collision fragments) and address recognition rejects (no system bus utilization)
- Address recognition
 - Frames with broadcast address may be always accepted or always rejected
 - Exact match for single 48-bit individual (unicast) address
 - Hash (64-bit hash) check of individual (unicast) addresses
 - Hash (64-bit hash) check of group (multicast) addresses
 - Promiscuous mode
- RMON and IEEE statistics
- Interrupts for network activity and error conditions

1.4.23 Dual Channel FlexRay Controller

The MCU contains one dual-channel FlexRay controller. The controller fully implements the FlexRay Protocol Specification 2.1. The FlexRay protocol is designed to facilitate implementation of fault tolerant, time-triggered, highly dependable automotive control systems by offering a fault tolerant clock synchronization mechanism — which maintains the global time across the functional nodes of a network with a precision (jitter) of maximum 1 μ s at a data rate of 10 Mbit/s — redundant communication channels and support for bus guardian operation on each channel.

The FlexRay controller is implemented with both AMBA crossbar (XBAR) master and IP bus slave interfaces. The master interface allows the module direct access to the system RAM which in turn

facilitates very flexible message buffer configuration options (see below). Regions of system RAM can be designated as available to be written by selected XBAR master device or devices only. This allows FlexRay payload data to be protected from being overwritten by other XBAR master devices e.g. CPU or eDMA. The CPU always has access to the message buffers in system RAM. The buffers are locked prior to CPU access to prevent FlexRay module accesses and thus ensure data coherency. The CPU can access configuration and status information through the IP bus slave interface.

The FlexRay controller provides the following features:

- FlexRay communication system implementation
 - Full implementation of FlexRay Protocol Specification 2.1
 - Bus guardian specification V2.0 compliant bus guardian interface
 - Electrical physical layer specification V2.0 compliant bus driver interface
- 128 configurable message buffers which can be configured as
 - Receive message buffers
 - Single-buffered transmit message buffers
 - Double-buffered transmit message buffers
 - Transmit message buffers configurable for state or event semantics
- Transmit and receive buffers have
 - Individual frame ID filtering
 - Individual channel ID filtering
 - Individual cycle counter filtering
- Configurable number of the above message buffers can be defined as a receive FIFO (RxFIFO) with the following:
 - Global frame ID filtering
 - Global channel ID filtering
 - Global message ID filtering in the dynamic segment
- Configurable message buffer layout
- Message payload length from 2 byte minimum to 254 byte maximum
- Dynamic reconfiguration of message buffers in static and dynamic segment
- Dual channel implementation, with each channel running at configurable data rates up to 10 Mbit/s
- Programmable clock source: system clock or oscillator clock
- Maskable interrupts provided linked to transmission and reception of messages, network global time, error conditions, etc.
 - Facilitates application synchronization to the FlexRay network timebase through
- Absolute timer, which can be configured to generate an interrupt in a given time slot in each or defined communication cycles
- Relative timer, which can be used to generate a periodic interrupt based on the FlexRay timebase
- Advanced protocol and status features
 - Fractional macroticks are supported for clock correction

- Configurable static slot action point offset
- Configurable minislot action point offset
- Configurable counters, status indicators and interrupts dedicated to error signaling
- Measured value indicators for the clock synchronization provided to host

1.5 MPC5500 Family Memory Map

This section describes the MPC5500 family memory map. All addresses in the device, including those that are reserved, are identified in the tables. The addresses represent the physical addresses assigned to each module. Logical addresses are translated by the MMU into physical addresses.

Under software control of the MMU, the logical addresses allocated to modules may be changed on a minimum of a 4-Kbyte boundary. Peripheral modules may be redundantly mapped. The customer must use the MMU to prevent corruption.

Table 1-2 shows an overview of the device memory map. It is intended to illustrate how the crossbar switch integrates into the memory map.

Table 1-2. MPC5567 Memory Map Overview (Single Chip or Single Master Mode)

Base Address	XBAR Slave Port	Addr[0:2]	Size	Use
0x0000_0000	Flash	0b000	2 Mbytes	Flash Memory Array
0x0020_0000			(14 Mbytes – 512 bytes)	Reserved
0x00FF_FC00			1 Kbyte	Flash Shadow Row
0x0100_0000			496 Mbytes	Emulation mapping of Flash
0x2000_0000	EBI and Calibration ¹	0b001	512 Mbytes ²	External Bus Interface
0x4000_0000	Internal SRAM	0b010	96 Kbytes	Internal SRAM
0x4001_7FFF			(512 Mbytes - 96 Kbytes)	Reserved
0x6000_0000	Reserved	0b011 - 0b101	1536 Mbytes	Reserved
0xC000_0000	Bridge A Peripherals	0b110	63 Mbytes	Reserved
0xC3F0_0000			512 Kbytes	Platform Peripherals A
0xC3F8_0000			512 Kbytes	
0xC400_0000	Reserved		(512 Mbytes – 64 Mbytes)	Reserved
0xE000_0000	Reserved	0b111	(512 Mbytes – 64 Mbytes)	Reserved
0xFC00_0000	Bridge B Peripherals		63 Mbytes	Reserved
0xFFFF0_0000			512 Kbytes	Platform Peripherals B
0xFFFF8_0000			512 Kbytes	

- ¹ A suggested convention to follow is to place EBI from 0x2000_0000 to 0x2FFF_FFFF and to place calibration space from 0x3000_0000 to 0x3FFF_FFFF. Hardware, however, does not force any restriction on EBI versus calibration space.
- ² Using four chip select signals and 24 address bus signals, 64 Mbytes can be mapped into the external memory space in single-master mode. Using four chip select signals and 26 address bus signals, 256 Mbytes can be mapped into the external memory space in single-master mode.

Table 1-3. MPC5567 Detailed Memory Map

Address Range ¹	Allocated Size ¹ (bytes)	Used Size (bytes)	Use
0x0000_0000–0x001F_FFFF (MPC5567)	2 Mbytes	2.0 Mbytes (MPC5567)	Flash Memory Array
0x20_0000–0x00FF_FBFF	14 Mbytes – 1 Kbyte (Total of Flash Shadow Row)	N/A	Reserved
0x00FF_FC00–0x00FF_FFFF	1 Kbyte	1 Kbyte	Flash Shadow Row
0x0100_0000–0x1FFF_FFFF	496 Mbytes	2 Mbytes	Emulation Mapping of Flash Array
0x2000_0000–0x3FFF_FFFF	512 Mbytes	N/A	External Memory ²
0x4000_0000–0x4000_7FFF	32 Kbytes	32 Kbytes	Internal SRAM Array, Standby Powered
0x4000_8000–0x4001_3FFF	48 Kbytes	48 Kbytes	Internal SRAM Array
0x4001_4000 – 0xBFFF_FFFF	2048 Mbytes–80 Kbytes (Total of SRAM)	N/A	Reserved
Bridge A Peripherals			
0xC000_0000–0xC3EF_FFFF	63 M	N/A	Reserved
0xC3F0_0000–0xC3F0_3FFF	16 K	—	Bridge A Registers
0xC3F0_4000–0xC3F7_FFFF	496K	N/A	Reserved
0xC3F8_0000–0xC3F8_3FFF	16 Kbytes	—	FMPLL Registers
0xC3F8_4000–0xC3F8_7FFF	16 Kbytes	48	External Bus Interface (EBI) Configuration Registers
0xC3F8_8000–0xC3F8_BFFF	16 Kbytes	28	Flash Configuration Registers
0xC3F8_C000–0xC3F8_FFFF	16 Kbytes	N/A	Reserved
0xC3F9_0000–0xC3F9_3FFF	16 Kbytes	2.5 Kbytes	System Integration Unit (SIU)
0xC3F9_4000–0xC3F9_FFFF	48 Kbytes	N/A	Reserved
0xC3FA_0000–0xC3FA_3FFF	16 Kbytes	1056	Modular Timer System (eMIOS/MTS)
0xC3FA_4000–0xC3FB_FFFF	112 Kbytes	N/A	Reserved
0xC3FC_0000–0xC3FC_3FFF	16 Kbytes	3 Kbytes	Enhanced Time Processing Unit (eTPU) Registers
0xC3FC_4000–0xC3FC_7FFF	16 Kbytes	N/A	Reserved
0xC3FC_8000–0xC3FC_8BFF	16 Kbytes	2.5 Kbytes (MPC5567)	eTPU Shared Data Memory (Parameter RAM)

Table 1-3. MPC5567 Detailed Memory Map (continued)

Address Range ¹	Allocated Size ¹ (bytes)	Used Size (bytes)	Use
0xC3FC_C000–0xC3FC_CBFF	16 Kbytes	2.5 Kbytes (MPC5567)	eTPU Shared Data Memory (Parameter RAM) mirror
0xC3FD_0000–0xC3FD_2FFF	16 Kbytes	12 Kbytes (MPC5567)	eTPU Shared Code RAM
0xC3FD_4000–0xC3FF_FFFF	176 Kbytes	N/A	Reserved
0xC400_0000–0xDFFF_FFFF	(512 Mbytes–64 Mbytes)	N/A	Reserved
Bridge B Peripherals			
0xE000_0000–0xFBFF_FFFF	(512 Mbytes–64 Mbytes)	N/A	Reserved
0xFC00_0000–0xFFEF_FFFF	63 Mbytes	N/A	Reserved
0xFFF0_0000–0xFFF0_3FFF	16 K	N/A	Bridge B Registers
0xFFF0_4000–0xFFF0_7FFF	16 K	N/A	System Bus Crossbar Switch (XBAR)
0xFFF0_8000–0xFFF0_FFFF	32 K	N/A	Reserved
0xFFF1_0000–0xFFF3_FFFF	192 K	N/A	Reserved
0xFFF4_0000–0xFFF4_3FFF	16 K	N/A	ECSM
0xFFF4_4000–0xFFF4_7FFF	16 K	N/A	DMA Controller 2 (eDMA)
0xFFF4_8000–0xFFF4_BFFF	16 K	N/A	Interrupt Controller (INTC)
0xFFF4_C000–0xFFF4_FFFF	16 K	N/A	Fast Ethernet Controller (FEC)
0xFFF5_0000–0xFFF7_FFFF	192 K	N/A	Reserved
0xFFF8_0000–0xFFF8_3FFF	16 Kbytes	164	Enhanced Queued Analog-to-Digital Converter (eQADC)
0xFFF8_4000–0xFFF8_FFFF	48 Kbytes	N/A	Reserved
0xFFF9_0000–0xFFF9_3FFF	16 Kbytes	N/A	Reserved
0xFFF9_4000–0xFFF9_7FFF	16 Kbytes	200	Deserial Serial Peripheral Interface (DSPI_B)
0xFFF9_8000–0xFFF9_BFFF	16 Kbytes	200	Deserial Serial Peripheral Interface (DSPI_C)
0xFFF9_C000–0xFFF9_FFFF	16 Kbytes	200	Deserial Serial Peripheral Interface (DSPI_D)
0xFFFA_0000–0xFFFA_FFFF	64 Kbytes	N/A	Reserved
0xFFFB_0000–0xFFFB_3FFF	16 Kbytes	44	Serial Communications Interface (SCI_A)
0xFFFB_4000–0xFFFB_7FFF	16 Kbytes	44	Serial Communications Interface (SCI_B)
0xFFFB_8000–0xFFFB_FFFF	32 Kbytes	N/A	Reserved
0xFFFC_0000–0xFFFC_3FFF	16 Kbytes	1152	Controller Area Network (FlexCAN_A)
0xFFFC_4000–0xFFFC_7FFF	16 Kbytes	1152	Controller Area Network (FlexCAN_B)
0xFFFC_8000–0xFFFC_BFFF	16 Kbytes	1152	Controller Area Network (FlexCAN_C)

Table 1-3. MPC5567 Detailed Memory Map (continued)

Address Range ¹	Allocated Size ¹ (bytes)	Used Size (bytes)	Use
0xFFFC_C000–0xFFFC_FFFF	16 Kbytes	1152	Controller Area Network (FlexCAN_D)
0xFFFD_0000–0xFFFD_3FFF	16 Kbytes	1152	Controller Area Network (FlexCAN_E)
0xFFFD_4000–0xFFFD_FFFF	80 Kbytes	N/A	Reserved
0xFFFE_0000–0xFFFE_3FFF	16 Kbytes	1152	FlexRay
0xFFFE_4000–0xFFFF_7FFF	16 Kbytes	N/A	Reserved
0xFFFE_8000–0xFFFE_BFFF	16 Kbytes	1152	Reserved
0xFFFE_C000–0xFFFF_BFFF	64 Kbytes	N/A	Reserved
0xFFFF_C000–0xFFFF_FFFF ³	16 Kbytes	16 Kbytes	Boot Assist Module (BAM)

¹If allocated size > used size, then the base address for the module is the lowest address of the listed address range, unless noted otherwise.

² A suggested convention to follow is to place EBI from 0x2000_0000 to 0x2FFF_FFFF and to place calibration space from 0x3000_0000 to 0x3FFF_FFFF. Hardware, however, does not force any restriction on EBI versus calibration space.

³BAM address range is configured so that 4Kbyte BAM occupies 0xFFFF_F000–0xFFFF_FFFF

1.6 Multi-Master Operation Memory Map

When the MCU acts as a slave in a multi-master system, the external bus interface (EBI) translates the 24-bit external address to a 32-bit internal address. [Table 1-4](#) lists the translation parameters.

Table 1-4. External to Internal Memory Map Translation Table for Slave Mode

Ext Addr[8:11] ¹	Internal Addr[0:11]	Size (bytes)	Internal Slave	Internal Address Range
0b0xxx	N/A	8 Mbytes	N/A	N/A–Off-chip Flash Access
0b10xx	0b0000_0000_00xx	4 Mbytes	Internal FLASH Array	0x0000_0000–0x003F_FFFF
0b1100	0b0100_0000_0000	1 Mbyte	Internal SRAM	0x4000_0000–0x4000_FFFF
0b1101	0b0110_0000_0000	1 Mbyte	Reserved ²	0x6000_0000–0x600F_FFFF
0b1110	0b1100_0011_1111	1 Mbyte	Bridge A Peripherals	0xC3F0_0000–0xC3FF_FFFF
0b1111	0b1111_1111_1111	1 Mbyte	Bridge B Peripherals	0xFFFF0_0000–0xFFFF_FFFF

¹Only the lower 24 address signals (addr[8:31]) are available off-chip for external master accesses.

²Reserved for a future module that requires its own crossbar slave port.

[Table 1-5](#) shows the memory map for the MCU acting as a slave in a multi-master system from the point of view of the external master.

Table 1-5. MPC5567 Family Slave Memory Map as Seen from an External Master

External Address Range ¹	Size (bytes)	Use
0x00_0000 ² – 0x7F_FFFF	8 Mbytes	N/A–Used for Off-chip Memory Accesses
0x80_0000–0x9F_FFFF (MPC5567)	2 Mbytes	Slave Flash ³

Table 1-5. MPC5567 Family Slave Memory Map as Seen from an External Master (continued)

External Address Range ¹	Size (bytes)	Use
0xA0_0000–0xBF_FFFF (MPC5567)	2 Mbytes	Reserved
0xC0_0000 – 0xC1_3FFF	80 Kbytes	Slave Internal SRAM
0xC1_4000 – 0xCF_FFFF	1 Mbyte–80 Kbytes (less total SRAM)	Reserved
0xD0_0000 – 0xDF_FFFF	1 Mbyte	Reserved
0xE0_0000 – 0xEF_FFFF	1 Mbyte	Slave Bridge A Peripherals
0xF0_0000 – 0xFF_FFFF	1 Mbyte	Slave Bridge B Peripherals

¹Only the lower 24 address signals (addr[8:31]) are available off-chip for external master accesses.

²This address range is not part of the MPC5500 family slave memory map, rather it is shown to illustrate the addressing scheme for off-chip accesses in multi-master mode.

³The shadow row of the slave flash is not accessible by an external master.

NOTE

When multi-master mode is enabled, the bus is permanently granted to the external master. Therefore the MPC5567 MCU cannot be a master on a multi-master bus, only a slave.

1.7 Revision History

Table 1-7. Revision History Table

Rev. No.	Date	Sections	Substantial Change(s)
Rev. 1	1/19/2007	Throughout	01/07: Public release of document.

Chapter 2

e200z6 Core Complex

2.1 Introduction

The core complex of the device consists of the e200z6 core, an 8 Kbyte unified cache memory, a 32-entry memory management unit (MMU), a Nexus class 3 block, and a bus interface unit (BIU). The e200z6 core is the central processing unit (CPU) in the device. The e200z6 core is part of the family of CPU cores that implement versions built on the Power Architecture™ embedded category.

The host processor core of the device complies with the Power Architecture embedded category, which is 100 percent user mode compatible with the original Power PC™ user instruction set architecture (UISA). However, in the Power Architecture definition, the original floating-point resources (used by a SIMD design supporting single-precision vector and single-precision scalar operations) are provided that share the GPRs defined for integer instructions.

Refer to the *e200z6 PowerPC™ Core Reference Manual* for more information on the e200z6 core.

2.1.1 Block Diagram

Figure 2-1 shows a block diagram of the e200z6 core complex.

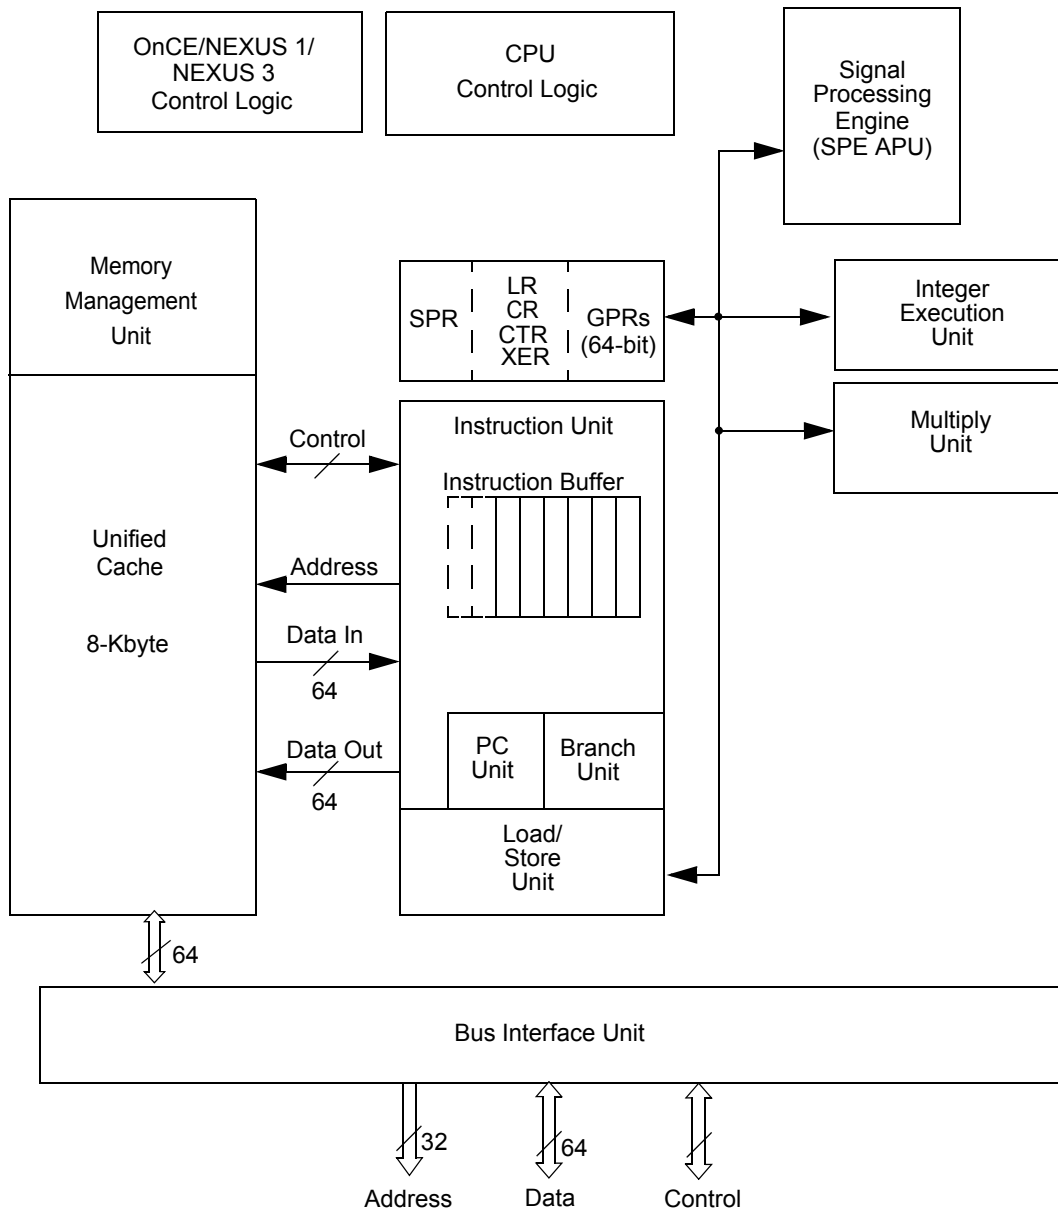


Figure 2-1. e200z6 Block Diagram

2.1.2 Overview

The e200z6 core integrates an integer execution unit, branch control unit, instruction fetch and load/store units, and a multi-ported register file capable of sustaining three read and two write operations per clock. Most integer instructions execute in a single-clock cycle. Branch target prefetching is performed by the branch target address cache to allow single-cycle branches in many cases.

The e200z6 core complex is built on a single-issue, 32-bit Power Architecture design with 64-bit general-purpose registers (GPRs). Power Architecture floating-point instructions are not supported in hardware, but are trapped and may be emulated by software. A signal processing extension (SPE) auxiliary processing unit (APU) is provided to support real-time fixed point and single-precision floating point operations using the general-purpose registers. All arithmetic instructions that execute in the core operate on data in the GPRs. The registers have been extended to 64-bits in order to support vector instructions defined by the SPE APU. These instructions operate on 16-bit or 32-bit data types, and produce vector or scalar results.

In addition to the base Power Architecture instruction set, the e200z6 core also implements the VLE (Variable Length Encoding) APU, providing improved code density.

2.1.3 Features

The following is a list of some key features of the e200z6:

- Single issue, 32-bit CPU built on the Power Architecture embedded category
- Implements the VLE APU for reduced code footprint. Refer to *EREF: A Programmer's Reference Manual for Freescale Book E Processors* and to *VLEPIM: Variable Length Encoding (VLE) Extension Programming Interface Manual*.
- In-order execution and retirement
- Precise exception handling
- Branch target address cache
 - Dedicated branch address calculation adder
 - Branch target prefetching
 - Branch lookahead buffers of depth 2
- Load/store unit
 - Pipelined operation supports throughput of one load or store operation per cycle
- 64-bit general-purpose register file
- Memory management unit (MMU) with 32-entry fully-associative TLB and multiple page size support
- 8 kilobyte, 2-way set associative unified cache
- Periodic timer and watchdog functions
- Periodic system integrity may be monitored through parallel signature checks
- Signal processing extension APU supporting fixed-point and single-precision floating-point operations, using the 64-bit general-purpose register file
- Nexus class 3 real-time development unit
- Power management
 - Low-power design
 - Dynamic power management of execution units, caches, and MMUs

2.1.3.1 Instruction Unit Features

The features of the instruction unit are the following:

- 64-bit path to cache supports fetching of two 32-bit instructions per clock, or up to four 16-bit VLE APU instructions per clock
- Instruction buffer holds up to six sequential instructions
- Dedicated PC incrementer supporting instruction prefetches
- Branch target address cache with dedicated branch address adder, and branch lookahead logic supporting single cycle execution of successful lookahead branches

2.1.3.2 Integer Unit Features

The integer unit supports single-cycle execution of most integer instructions:

- 32-bit AU for arithmetic and comparison operations
- 32-bit LU for logical operations
- 32-bit priority encoder for count leading zeros function
- 32-bit single cycle barrel shifter for static shifts and rotates
- 32-bit mask unit for data masking and insertion
- Divider logic for signed and unsigned divides in 6-16 clocks with minimized execution timing
- Pipelined 32x32 hardware multiplier array supports 32x32->32 multiply with three clock latency, one clock throughput

2.1.3.3 Load/Store Unit Features

The load/store unit supports load, store, and the load multiple / store multiple instructions:

- 32-bit effective address adder for data memory address calculations
- Pipelined operation supports throughput of one load or store operation per cycle
- Dedicated 64-bit interface to memory supports saving and restoring of up to two registers per cycle for load multiple and store multiple word instructions

2.1.3.4 MMU Features

The features of the MMU are as follows:

- Virtual memory support
- 32-bit virtual and physical addresses
- 8-bit process identifier
- 32-entry fully associative TLB
- Support for nine page sizes (4, 16, 64, and 256 Kbytes, 1, 4, 16, 64, and 256 Mbytes)
- Entry flush protection

2.1.3.5 L1 Cache Features

The features of the cache are as follows:

- 8 kilobyte, 2-way set associative unified cache
- Copyback and writethrough support
- 8-entry store buffer
- Push buffer
- Linefill buffer
- 32-bit address bus plus attributes and control
- Separate unidirectional 64-bit read data bus and 64-bit write data bus
- Supports cache line locking
- Supports way allocation
- Cache power usage can be minimized

2.1.3.6 BIU Features

The features of the e200z6 BIU are as follows:

- 32-bit address bus plus attributes and control
- Separate unidirectional 64-bit read data bus and 64-bit write data bus
- Overlapped, in-order accesses

2.1.4 Microarchitecture Summary

The e200z6 processor utilizes a seven stage pipeline for instruction execution. The instruction fetch 1, instruction fetch 2, instruction decode/register file read, execute1, execute2/memory access1, execute3/memory access2, and register writeback stages operate in an overlapped fashion, allowing single clock instruction execution for most instructions.

The integer execution unit consists of a 32-bit arithmetic unit (AU), a logic unit (LU), a 32-bit barrel shifter (shifter), a mask-insertion unit (MIU), a condition register manipulation unit (CRU), a count-leading-zeros unit (CLZ), a 32x32 hardware multiplier array, result feed-forward hardware, and support hardware for division.

Most arithmetic and logical operations are executed in a single cycle with the exception of multiply, which is implemented with a pipelined hardware array, and the divide instructions. A count-leading-zeros unit operates in a single clock cycle.

The instruction unit contains a PC incrementer and a dedicated branch address adder to minimize delays during change of flow operations. Sequential prefetching is performed to ensure a supply of instructions into the execution pipeline. Branch target prefetching is performed to accelerate taken branches. Prefetched instructions are placed into an instruction buffer capable of holding six sequential instructions.

Branch target addresses are calculated in parallel with branch instruction decode, resulting in execution time of three clocks. Conditional branches which are not taken execute in a single clock. Branches with successful lookahead and target prefetching have an effective execution time of one clock.

Memory load and store operations are provided for byte, halfword, word (32-bit), and doubleword data with automatic zero or sign extension of byte and halfword load data as well as optional byte reversal of data. These instructions can be pipelined to allow effective single cycle throughput. Load and store multiple word instructions allow low overhead context save and restore operations. The load/store unit contains a dedicated effective address adder to allow effective address generation to be optimized.

The condition register unit supports the condition register (CR) and condition register operations defined by the Power Architecture embedded category. The condition register consists of eight 4-bit fields that reflect the results of certain operations, such as move, integer and floating-point compare, arithmetic, and logical instructions, and provide a mechanism for testing and branching.

Vectored and auto-vectored interrupts are supported by the CPU. Vectored interrupt support is provided to allow multiple interrupt sources to have unique interrupt handlers invoked with no software overhead.

The SPE APU supports vector instructions operating on 16- and 32-bit fixed-point data types, as well as 32-bit IEEE-754 single-precision floating-point formats, and supports single-precision floating-point operations in a pipelined fashion. The 64-bit general-purpose register file is used for source and destination operands, and there is a unified storage model for single-precision floating-point data types of 32-bits and the normal integer type. Low latency fixed-point and floating-point add, subtract, multiply, divide, compare, and conversion operations are provided, and most operations can be pipelined.

2.2 Core Registers and Programmer's Model

This section describes the registers implemented in the e200z6 core. It includes an overview of registers defined by the Power Architecture embedded category, highlighting differences in how these registers are implemented in the e200z6 core, and provides a detailed description of core-specific registers. Full descriptions of the architecture-defined register set are provided in the Power Architecture embedded category.

The Power Architecture embedded category defines register-to-register operations for all computational instructions. Source data for these instructions are accessed from the on-chip registers or are provided as immediate values embedded in the opcode. The three-register instruction format allows specification of a target register distinct from the two source registers, thus preserving the original data for use by other instructions. Data is transferred between memory and registers with explicit load and store instructions only.

e200z6 extends the general-purpose registers to 64-bits for supporting SPE APU operations. Power Architecture instructions operate on the lower 32 bits of the GPRs only, and the upper 32 bits are unaffected by these instructions. SPE vector instructions operate on the entire 64-bit register. The SPE APU defines load and store instructions for transferring 64-bit values to/from memory.

[Figure 2-2](#) and [Figure 2-3](#) show the complete e200z6 register set. [Figure 2-2](#) shows the registers that are accessible while in supervisor mode, and [Figure 2-3](#) shows the set of registers that are accessible while in user mode. The number to the right of the special-purpose registers (SPRs) is the decimal number used in the instruction syntax to access the register (for example, the integer exception register (XER) is SPR 1).

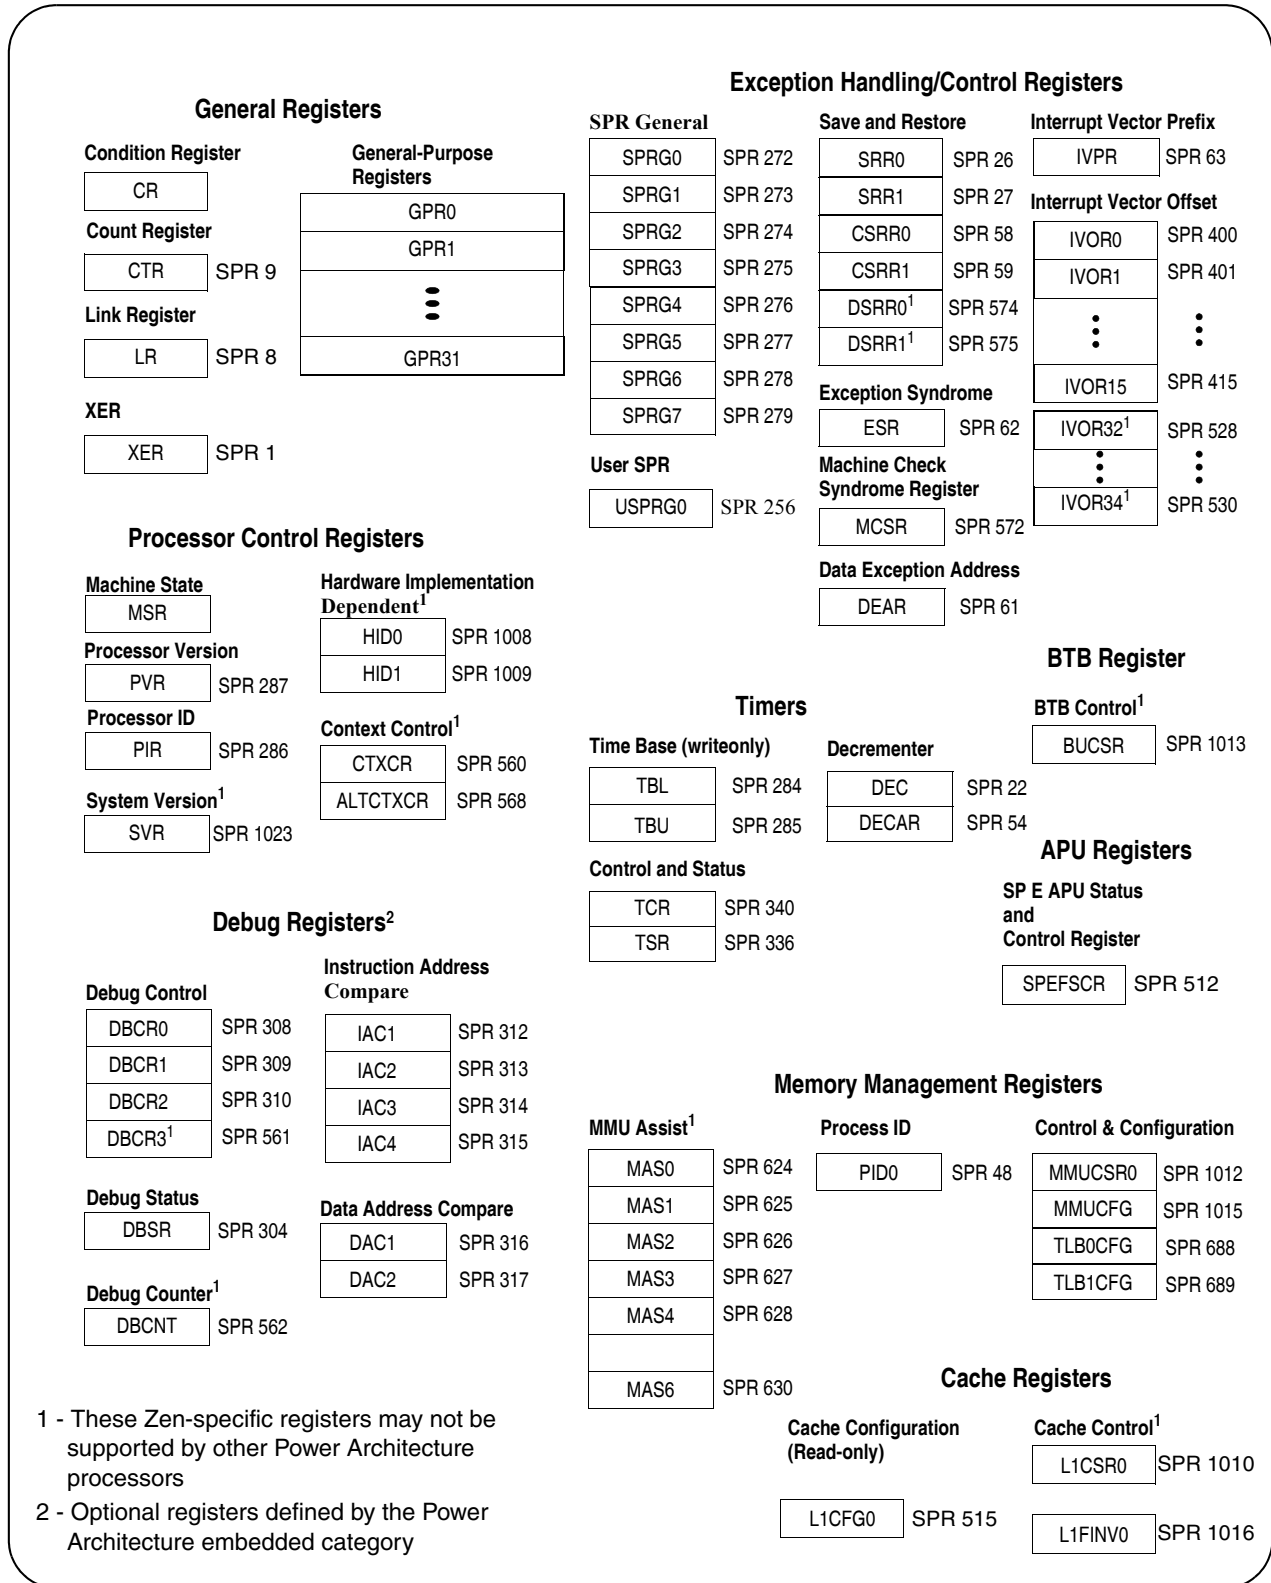


Figure 2-2. Supervisor Mode Programmer's Model

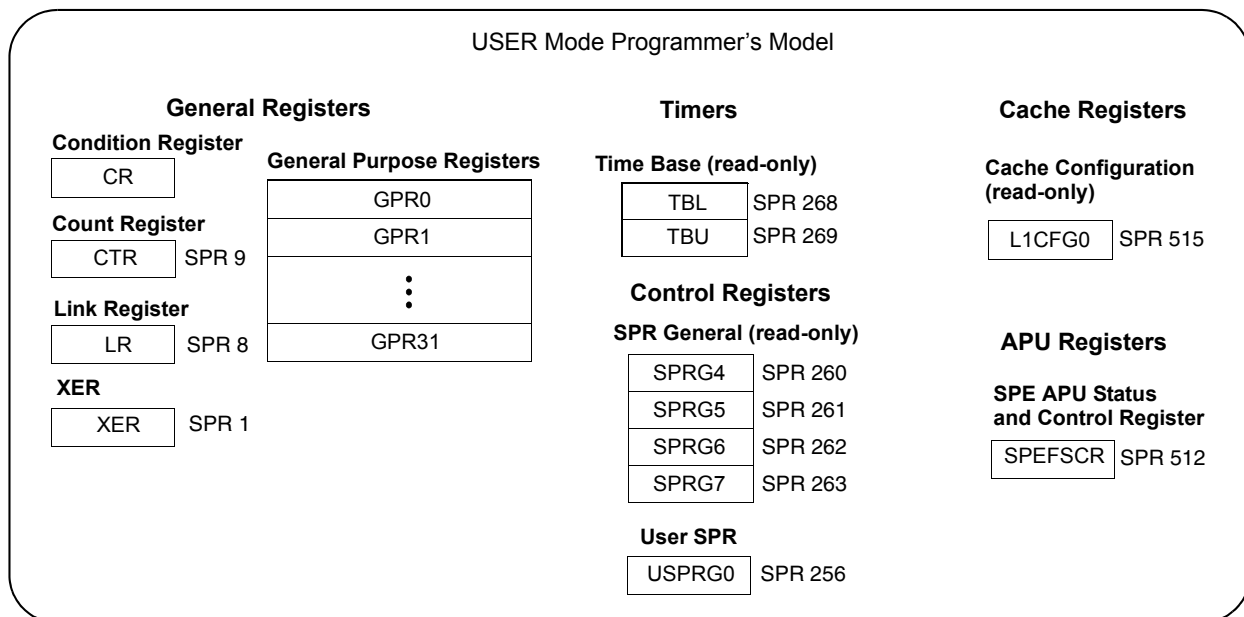


Figure 2-3. User Mode Programmer's Model

2.2.1 Power Architecture Registers

e200z6 supports most of the registers defined by the Power Architecture embedded category. Notable exceptions are the floating point registers FPR0-FPR31 and FPSCR. The e200z6 does not support the Power Architecture floating point architecture in hardware. The supported Power Architecture embedded category registers are described as follows:

2.2.1.1 User-Level Registers

The user-level registers can be accessed by all software with user or supervisor privileges. They include the following:

- General-purpose registers (GPRs). The thirty-two 64-bit GPRs (GPR0–GPR31) serve as data source or destination registers for integer and SPE APU instructions and provide data for generating addresses. PowerPC Book E instructions affect only the lower 32 bits of the GPRs. SPE APU instructions are provided which operate on the entire 64-bit register.
- Condition register (CR). The 32-bit CR consists of eight 4-bit fields, CR0–CR7, that reflect results of certain arithmetic operations and provide a mechanism for testing and branching. The remaining user-level registers are SPRs. Note that the PowerPC architecture provides the **mtspr** and **mfspir** instructions for accessing SPRs.
- Integer exception register (XER). The XER indicates overflow and carries for integer operations.
- Link register (LR). The LR provides the branch target address for the branch conditional to link register (**bclr**, **bclrl**) instructions, and is used to hold the address of the instruction that follows a branch and link instruction, typically used for linking to subroutines.

- Count register (CTR). The CTR holds a loop count that can be decremented during execution of appropriately coded branch instructions. The CTR also provides the branch target address for the branch conditional to count register (**bcctr**, **bcctrl**) instructions.
- The time-base facility (TB) consists of two 32-bit registers: time-base upper (TBU) and time-base lower (TBL). These two registers are accessible in a read-only fashion to user-level software.
- SPRG–SPRG7. The PowerPC Book E architecture defines software-use special purpose registers (SPRGs). SPRG4–SPRG7 are accessible in a read-only fashion by user-level software. The e200z6 does not allow user mode access to the SPRG3 register (defined as implementation dependent by Book E).
- USPRG0. The PowerPC Book E architecture defines user software-use special purpose register USPRG0 which is accessible in a read-write fashion by user-level software.

2.2.1.2 Supervisor-Level Only Registers

In addition to the registers accessible in user mode, supervisor-level software has access to additional control and status registers an operating system used for configuration, exception handling, and other operating system functions. The Power Architecture embedded category defines the following supervisor-level registers:

- Processor control registers
 - Machine state register (MSR). The MSR defines the state of the processor. The MSR can be modified by the move to machine state register (**mtmsr**), system call (**sc**), and return from exception (**rfi**, **rfdi**, **rfdi**) instructions. It can be read by the move from machine state register (**mfmsr**) instruction. When an interrupt occurs, the contents of the MSR are saved to one of the machine state save/restore registers (SRR1, CSRR1, DSRR1).
 - Processor version register (PVR). This register is a read-only register that identifies the version (model) and revision level of the processor built on the Power Architecture.
 - Processor identification register (PIR). This read-only register is provided to distinguish the processor from other processors in the system.
- Storage control register
 - Process ID register (PID, also referred to as PID0). This register is provided to indicate the current process or task identifier. It is used by the MMU as an extension to the effective address, and by external Nexus 2/3/4 modules for ownership trace message generation. The Power Architecture embedded category allows for multiple PIDs; e200z6 implements only one.
- Interrupt registers
 - Data exception address register (DEAR). After a data storage interrupt (DSI), alignment interrupt, or data TLB miss interrupt, the DEAR is set to the effective address (EA) generated by the faulting instruction.
 - Software-use special purpose registers (SPRGs). The SPRG0–SPRG7 registers are provided for operating system use.
 - Exception syndrome register (ESR). The ESR register provides a syndrome to differentiate between the different kinds of exceptions which can generate the same interrupt.

- Interrupt vector prefix register (IVPR) and the interrupt vector offset registers (IVOR1–IVOR15). These registers together provide the address of the interrupt handler for different classes of interrupts.
- Save/restore registers (SRR0, SRR1). SRR0 holds the effective address for the instruction at which execution resumes when an **rfi** instruction is executed at the end of a non-critical class interrupt handler routine. SRR1 is used to save machine state on a non-critical interrupt, and stores the MSR register contents. The MSR value is restored when an **rfi** instruction is executed at the end of a non-critical class interrupt handler routine.
- Critical save/restore registers (CSRR0, CSRR1). CSRR0 holds the effective address for the instruction at which execution resumes when an **rftci** instruction is executed at the end of a critical class interrupt handler routine. CSRR1 is used to save machine state on a critical interrupt, and stores the MSR register contents. The MSR value is restored when an **rftci** instruction is executed at the end of a critical class interrupt routine.
- Debug facility registers
 - Debug control registers (DBCR0–DBCR2). These registers provide control for enabling and configuring debug events.
 - Debug status register (DBSR). This register contains debug event status.
 - Instruction address compare registers (IAC1–IAC4). These registers contain addresses and/or masks which are used to specify instruction address compare debug events.
 - Data address compare registers (DAC1, DAC2). These registers contain addresses and/or masks which are used to specify data address compare debug events.
 - e200z6 does not implement the data value compare registers (DVC1, DVC2).
- Timer registers
 - The clock inputs for the timers are connected to the internal system clock.
 - Time base (TB). The TB is a 64-bit structure provided for maintaining the time of day and operating interval timers. The TB consists of two 32-bit registers, time-base upper (TBU) and time-base lower (TBL). The time-base registers can be written to by supervisor-level software only, but can be read by both user and supervisor-level software.
 - Decrementer register (DEC). This register is a 32-bit decrementing counter that provides a mechanism for causing a decrementer exception after a programmable delay.
 - Decrementer auto-reload (DECAR). This register is provided to support the auto-reload feature of the decrementer.
 - Timer control register (TCR). This register controls decrementer, fixed-interval timer, and watchdog timer options.
 - Timer status register (TSR). This register contains status on timer events and the most recent watchdog timer-initiated processor reset.

More details about these registers can be found in the Power Architecture embedded category specifications.

2.2.2 Core-Specific Registers

The Power Architecture embedded category allows implementation-specific registers. Those incorporated in the e200z6 core are as follows:

2.2.2.1 User-Level Registers

The user-level registers can be accessed by all software with either user or supervisor privileges. They include the following:

- Signal processing extension APU status and control register (SPEFSCR). The SPEFSCR contains all fixed-point and floating-point exception signal bits, exception summary bits, exception enable bits, and rounding control bits needed for compliance with the IEEE 754 standard.
- The L1 cache configuration register (L1CFG0). This read-only register allows software to query the configuration of the L1 unified cache.

2.2.2.2 Supervisor-Level Registers

The following supervisor-level registers are defined in e200z6 core in addition to the Power Architecture embedded category registers described above:

- Configuration registers
 - Hardware implementation-dependent register 0 (HID0). This register controls various processor and system functions.
 - Hardware implementation-dependent register 1 (HID1). This register controls various processor and system functions.
- Exception handling and control registers
 - Debug save/restore registers (DSRR0, DSRR1). DSRR0 holds the effective address for the instruction at which execution resumes when an **rfdi** instruction is executed at the end of a debug interrupt handler routine. DSRR1 is used to save machine state on a debug interrupt, and stores the MSR register contents. The MSR value is restored when an **rfdi** instruction is executed at the end of a debug interrupt handler routine.
 - When enabled, the DSRR0 register is used to save the address of the instruction at which execution continues when **rfdi** executes at the end of a debug interrupt handler routine.
 - Interrupt vector offset registers (IVOR32–IVOR34). These registers provide the address of the interrupt handler for different classes of interrupts.
- Debug facility registers
 - Debug control register 3 (DBCR3)—This register provides control for debug functions not described in the Power Architecture embedded category.
 - Debug counter register (DBCNT)—This register provides counter capability for debug functions.
- Cache registers
 - L1 cache configuration register (L1CFG0) is a read-only register that allows software to query the configuration of the L1 cache.

- L1 cache control and status register (L1CSR0) control the operation of the L1 unified cache such as cache enabling, cache invalidation, cache locking, etc.
- L1 cache flush and invalidate register (L1FINV0) controls software flushing and invalidation of the L1 unified cache.
- Memory management unit registers
 - MMU configuration register (MMUCFG) is a read-only register that allows software to query the configuration of the MMU.
 - MMU assist (MAS0-MAS4, MAS6) registers. These registers provide the interface to the core from the memory management unit.
 - MMU control and status register (MMUCSR0) controls invalidation of the MMU.
 - TLB configuration registers (TLBCFG0, TLBCFG1) are read-only registers that allow software to query the configuration of the TLBs.
- System version register (SVR). This register is a read-only register that identifies the version (model) and revision level of the system which includes an e200z6 processor built on Power Architecture embedded category.

More details about these registers can be found in the e200z6 core reference.

2.2.3 e200z6 Core Complex Features Not Supported in the Device

The device implements a subset of the e200z6 core complex features. The e200z6 core complex features that are *not* supported in the device are described in [Table 2-1](#).

Table 2-1. e200z6 Features Not Supported in the Device Core

Description	Function / Category
These events are disabled: external debug event (DEVT2) unconditional debug event (UDE)	
The e200z6 core halted state and stopped state are not supported.	Power management
The following low-power modes are not supported: Doze mode Nap mode Sleep mode Time-base interrupt wake-up from low-power mode is not supported.	Power management
Core wake up is not supported. The MSR[WE] bit in the machine state register is not supported. The OCR[WKUP] bit in the Zen OnCE control register (OCR) has no effect.	Power management
The machine check input pin is not supported. HID0 [EMCP] has no effect, and MCSR[MCP] always reads a negated value.	Machine check

Table 2-1. e200z6 Features Not Supported in the Device Core (continued)

Description	Function / Category
Least significant halfword of processor version register (PVR) is 0x 0000, which contains these three bitfields: MBG Use = 0x00 MBG Rev = 0x0 MBG ID = 0x0 The PVR register has two bitfields in the device.	PVR value
Reservation management logic external to the e200z6 is not implemented.	Reservation management
The system version register (SVR) of the e200z6 is 0x 0000_0000	Verification
The Decrementer Counters are always enabled in the e200z6	Time Base
Timer External Clock is not connected to any clock and should therefore never be selected.	Time Base
The CTXCR and ALTCXTCR registers are not supported.	Context control

2.3 Functional Description

The following sections describe the function of the various blocks within the e200z6 core.

2.3.1 Memory Management Unit (MMU)

The memory management unit (MMU) is an implementation built on the Power Architecture embedded category with a 32-entry fully associative translation lookaside buffer (TLB). The Power Architecture embedded category divides the effective and real address space into pages. The page represents the granularity of effective address translation, permission control, and memory/cache attributes. The e200z6 MMU supports the following nine page sizes: (4, 16, 64, and 256 Kbytes, 1, 4, 16, 64, and 256 Mbytes).

2.3.1.1 Translation Lookaside Buffer (TLB)

The TLB consists of a 32-entry, fully associative content addressable memory (CAM) array. To perform a lookup, the CAM is searched in parallel for a matching TLB entry. The contents of this TLB entry are then concatenated with the page offset of the original effective address. The result constitutes the real (physical) address of the access. [Table 2-2](#) shows the TLB entry bit definitions.

Table 2-2. TLB Entry Bit Definitions

Field	Comments
V	Valid bit for entry
TS	Translation address space (compared against AS bit)
TID[0:7]	Translation ID (compared against PID0 or '0')
EPN[0:19]	Effective page number (compared against effective address)
RPN[0:19]	Real page number (translated address)

Table 2-2. TLB Entry Bit Definitions (continued)

Field	Comments
SIZE[0-3]	Page size (4K/16K/64K/256K/1M/4M/16M/64M/256Mbytes)
SX, SW, SR	Supervisor execute, write, and read permission bits
UX, UW, UR	User execute, write, and read permission bits
WIMGE	Translation attributes (Write-through required, cache-inhibited, memory coherence required, guarded, endian)
U0-U3	User bits—used only by software
IPROT	Invalidation protect
VLE	VLE page indicator

The TLB is accessed indirectly through several MMU assist (MAS) registers; refer to [Section 2.3.1.5, “MMU Assist Registers \(MAS0–MAS4, MAS6\),”](#) and the *e200z6 PowerPC™ Core Reference Manual* for more details. Software can write and read the MMU Assist registers with **mtspr** (move to SPR) and **mf spr** (move from SPR) instructions. These registers contain information related to reading and writing a given entry within the TLB. Data is read from the TLB into the MAS registers with a **tlbre** (TLB read entry) instruction. Data is written to the TLB from the MAS registers with a **tlbwe** (TLB write entry) instruction.

2.3.1.2 Translation Flow

The effective address, concatenated with the address space value of the corresponding MSR bit (MSR[IS] or MSR[DS]), is compared to the appropriate number of bits of the EPN field and the TS field of TLB entries. If the contents of the effective address plus the address space bit matches the EPN field and TS bit of the TLB entry, that TLB entry is a candidate for a possible translation match. In addition to a match in the EPN field and TS, a matching TLB entry must match with the current process ID of the access (in PID0), or have a TID value of 0, indicating the entry is globally shared among all processes.

[Figure 2-4](#) shows the translation match logic for the effective address plus its attributes, collectively called the virtual address, and how it is compared with the corresponding fields in the TLB entries.

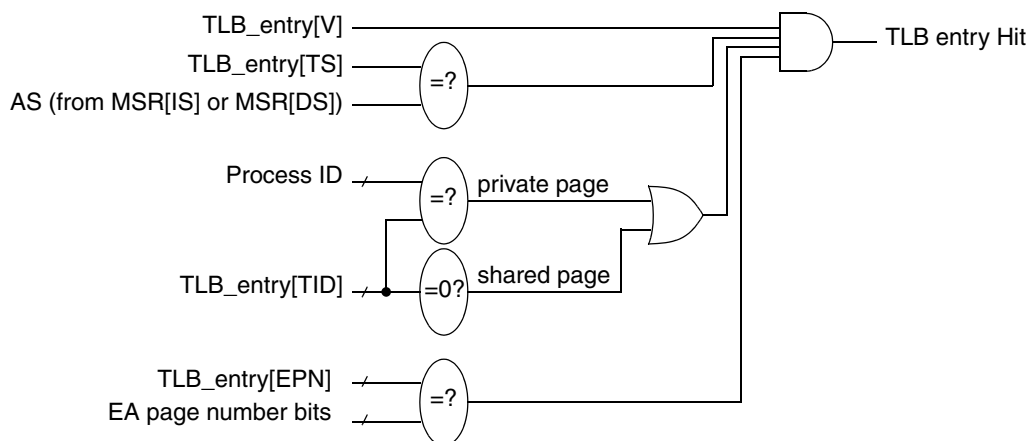


Figure 2-4. Virtual Address and TLB-Entry Compare Process

2.3.1.3 Effective to Real Address Translation

Instruction accesses are generated by sequential instruction fetches or due to a change in program flow (branches and interrupts). Data accesses are generated by load, store, and cache management instructions. The instruction fetch, branch, and load/store units generate 32-bit effective addresses. The MMU translates this effective address to a 32-bit real address which is then used for memory accesses. Figure 2-5 shows the effective to real address translation flow.

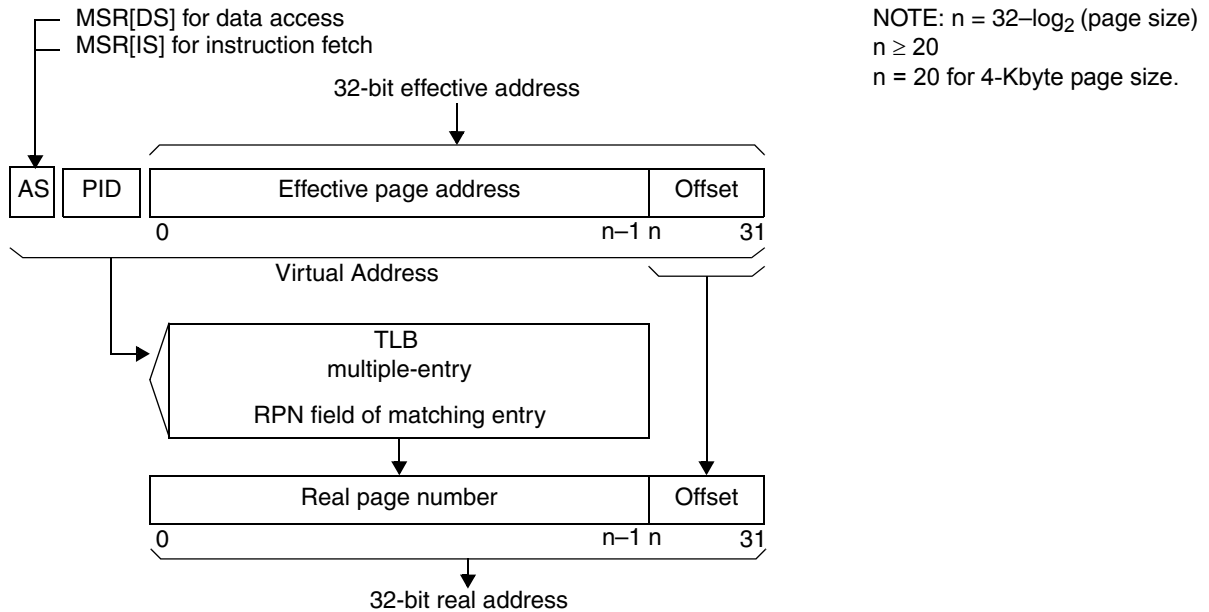


Figure 2-5. Effective to Real Address Translation Flow

2.3.1.4 Permissions

The application software may restrict access to virtual pages by selectively granting permissions for user mode read, write, and execute, and supervisor mode read, write, and execute on a per-page basis. For example, program code might be execute-only and data structures may be mapped as read/write/no-execute.

The UX, SX, UW, SW, UR, and SR access control bits are provided to support selective permissions (access control):

- SR—Supervisor read permission. Allows loads and load-type cache management instructions to access the page while in supervisor mode.
- SW—Supervisor write permission. Allows stores and store-type cache management instructions to access the page while in supervisor mode.
- SX—Supervisor execute permission. Allows instruction fetches to access the page and instructions to be executed from the page while in supervisor mode.
- UR—User read permission. Allows loads and load-type cache management instructions to access the page while in user mode.
- UW—User write permission. Allows stores and store-type cache management instructions to access the page while in user mode.

- UX—User execute permission. Allows instruction fetches to access the page and instructions to be executed from the page while in user mode.

If the translation match was successful, the permission bits are checked as shown in Figure 2-6. If the access is not allowed by the access permission mechanism, the processor generates an instruction or data storage interrupt (ISI or DSI).

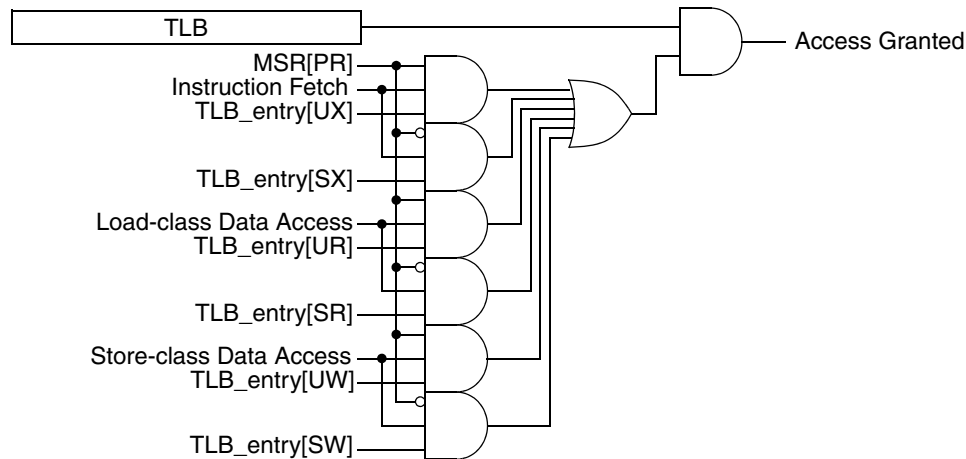


Figure 2-6. Granting of Access Permission

2.3.1.5 MMU Assist Registers (MAS0–MAS4, MAS6)

The e200z6 uses six special purpose registers (MAS0, MAS1, MAS2, MAS3, MAS4, and MAS6) to facilitate reading, writing, and searching the TLBs. The MAS registers can be read or written using the **mf spr** and **mt spr** instructions. The e200z6 does not implement the MAS5 register, present in other Freescale EIS designs, because the **tlbsx** instruction only searches based on a single SPID value.

Additional information on the MAS_n registers is available in the *e200z6 PowerPC™ Core Reference Manual*. The MAS0 register is shown in Figure 2-7.

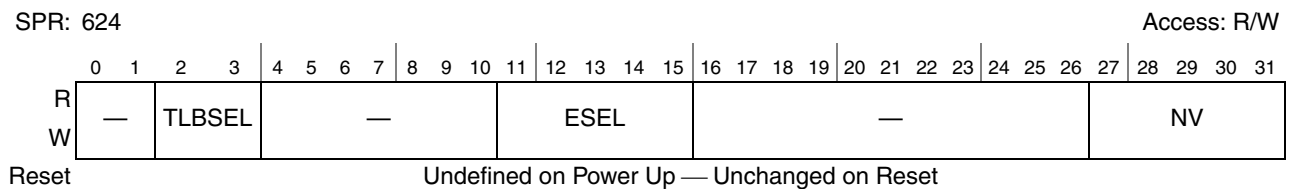


Figure 2-7. MAS Register 0 (MAS0) Format

MAS0 fields are defined in Table 2-3.


Table 2-3. MAS0 — MMU Read/Write and Replacement Control

Field	Description
0–1	Reserved, should be cleared.
2–3 TLBSEL	Selects TLB for access. 01 TLB1 (ignored by the e200z6, should be written to 01 for future compatibility)

Table 2-3. MAS0 — MMU Read/Write and Replacement Control (continued)

Field	Description
4–10	Reserved, should be cleared.
11–15 ESEL	Entry select for TLB1.
16–26	Reserved, should be cleared.
27–31 NV	Next replacement victim for TLB1 (software managed). Software updates this field; it is copied to the ESEL field on a TLB error.

The MAS1 register is shown in [Figure 2-8](#).

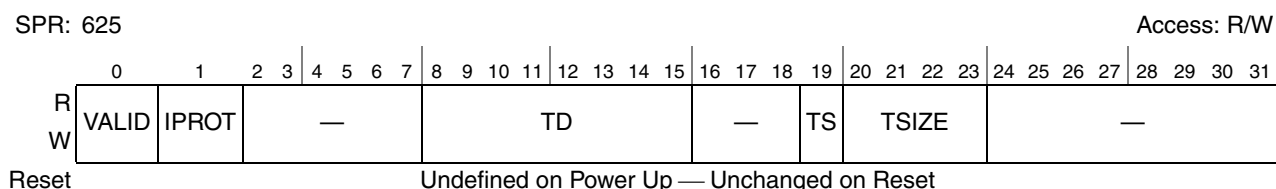
Figure 2-8. MMU Assist Register 1 (MAS1)

MAS1 fields are defined in [Table 2-4](#).

Table 2-4. MAS1 — Descriptor Context and Configuration Control

Field	Description
0 VALID	TLB entry valid. 0 This TLB entry is invalid. 1 This TLB entry is valid.
1 IPROT	Invalidation protect 0 Entry is not protected from invalidation. 1 Entry is protected from invalidation. Protects TLB entry from invalidation by tlbivax (TLB1 only), or flash invalidates through MMUCSR0[TLB1_FI].
2–7	Reserved, should be cleared.
8–15 TID	Translation ID bits. This field is compared with the current process IDs of the effective address to be translated. A TID value of 0 defines an entry as global and matches with all process IDs.
16–18	Reserved, should be cleared.
19 TS	Translation address space. This bit is compared with the IS or DS fields of the MSR (depending on the type of access) to determine if this TLB entry may be used for translation.

Table 2-4. MAS1 — Descriptor Context and Configuration Control (continued)

Field	Description
20–23 TSIZE	Entry page size. Supported page sizes are: 0001 4 Kbytes 0110 4 Mbytes 0010 16 Kbytes 0111 16 Mbytes 0011 64 Kbytes 1000 64 Mbytes 0100 256 Kbytes 1001 256 Mbytes 0101 1 Mbyte All other values are undefined.
24–31	Reserved, should be cleared.

The MAS2 register is shown in [Figure 2-9](#).

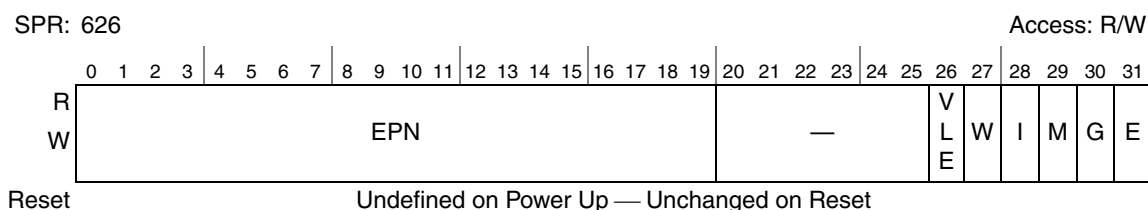


Figure 2-9. MMU Assist Register 2 (MAS2)

MAS2 fields are defined in [Table 2-5](#).


Table 2-5. MAS2 — EPN and Page Attributes

Field	Description
0–19 EPN	Effective page number [0:19].
20–25	Reserved, should be cleared.
26 VLE	Power Architecture VLE. 0 This page is a standard Book E page. 1 This page is a Power Architecture VLE page.
27 W	Write-through required. 0 This page is considered write-back with respect to the caches in the system. 1 All stores performed to this page are written through to main memory.
28 I	Cache inhibited. 0 This page is considered cacheable. 1 This page is considered cache-inhibited.
29 M	Memory coherence required. The e200z6 does <u>not</u> support the memory coherence required attribute, and thus it is ignored. 0 Memory coherence is not required. 1 Memory coherence is required.

Table 2-5. MAS2 — EPN and Page Attributes (continued)

Field	Description
30 G	Guarded. The e200z6 ignores the guarded attribute (other than for generation of the <i>p_hprot[4:2]</i> attributes on an external access) because no speculative or out-of-order processing is performed. 0 Access to this page are not guarded, and can be performed before it is known if they are required by the sequential execution model. 1 All loads and stores to this page are performed without speculation (that is, they are known to be required).
31 E	Endianness. Determines endianness for the corresponding page. 0 The page is accessed in big-endian byte order. 1 The page is accessed in true little-endian byte order.

The MAS3 register is shown in [Figure 2-10](#).

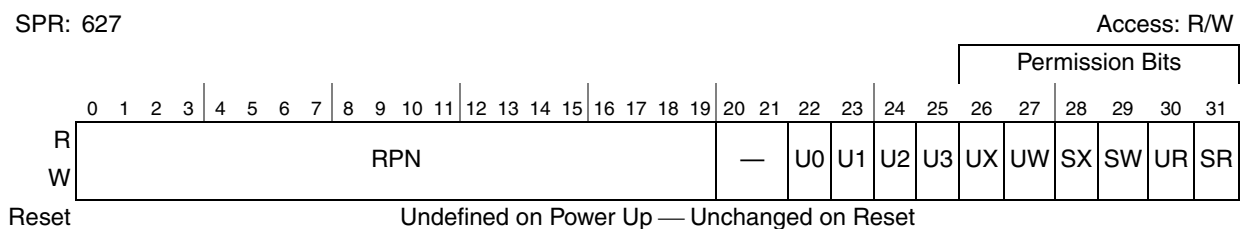

Figure 2-10. MMU Assist Register 3 (MAS3)

MAS3 fields are defined in [Table 2-6](#).

Table 2-6. MAS3—RPN and Access Control

Field	Description
0–19 RPN	Real page number. Only bits that correspond to a page number are valid. Bits that represent offsets within a page are ignored and should be zero.
20–21	Reserved, should be cleared.
22–25 U0–U3	User bits.
26–31 PERMIS	Permission bits (UX, UW, SX, SW, UR, SR).

The MAS4 register is shown in [Figure 2-11](#).

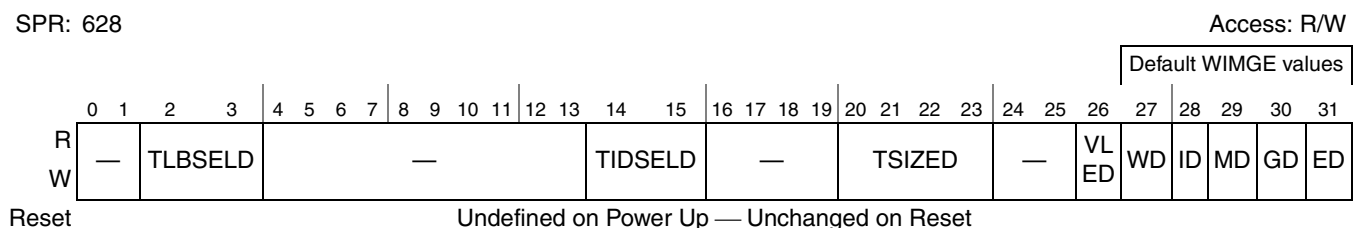
Figure 2-11. MMU Assist Register 4 (MAS4)

MAS4 fields are defined in [Table 2-7](#).

Table 2-7. MAS4—Hardware Replacement Assist Configuration Register

Field	Description
0–1	Reserved, should be cleared.
2–3 TLBSELD	Default TLB selected 01 TLB1 (ignored by the e200z6, should be written to 01 for future compatibility)
4–13	Reserved, should be cleared.
14–15 TIDSELD	Default PID# to load TID from 00 PID0 01 Reserved, do not use 10 Reserved, do not use 11 TIDZ (0x00) (Use all zeros, the globally shared value)
16–19	Reserved, should be cleared.
20–23 TSIZED	Default TSIZE value
24–25	Reserved, should be cleared.
26 VLED	Default VLED value
27–31 DWIMGE	Default WIMGE values

The MAS6 register is shown in [Figure 2-12](#).

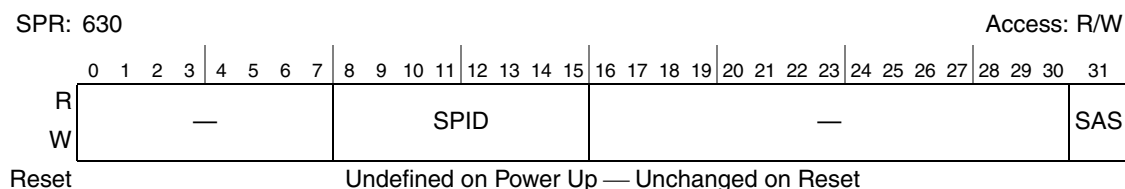


Figure 2-12. MMU Assist Register 6 (MAS6)

MAS6 fields are defined in [Table 2-8](#).

Table 2-8. MAS6—TLB Search Context Register 0

Field	Description
0–7	Reserved, should be cleared.
8–15 SPID	PID value for searches
16–30	Reserved, should be cleared.
31 SAS	AS value for searches

2.3.2 L1 Cache

The e200z6 processor supports a 8-Kbyte, 2-way set-associative, unified (instruction and data) cache with a 32-byte line size. The cache improves system performance by providing low-latency data to the e200z6 instruction and data pipelines, which decouples processor performance from system memory performance. The cache is virtually indexed and physically tagged. The e200z6 does not provide hardware support for cache coherency in a multi-master environment. Software must be used to maintain cache coherency with other possible bus masters.

Both instruction and data accesses are performed using a single bus connected to the cache. Addresses from the processor to the cache are virtual addresses used to index the cache array. The MMU provides the virtual to physical translation for use in performing the cache tag compare. If the physical address matches a valid cache tag entry, the access hits in the cache. For a read operation, the cache supplies the data to the processor, and for a write operation, the data from the processor updates the cache. If the access does not match a valid cache tag entry (misses in the cache) or a write access must be written through to memory, the cache performs a bus cycle on the system bus. Figure 2-13 shows a block diagram of the unified cache in the e200z6.

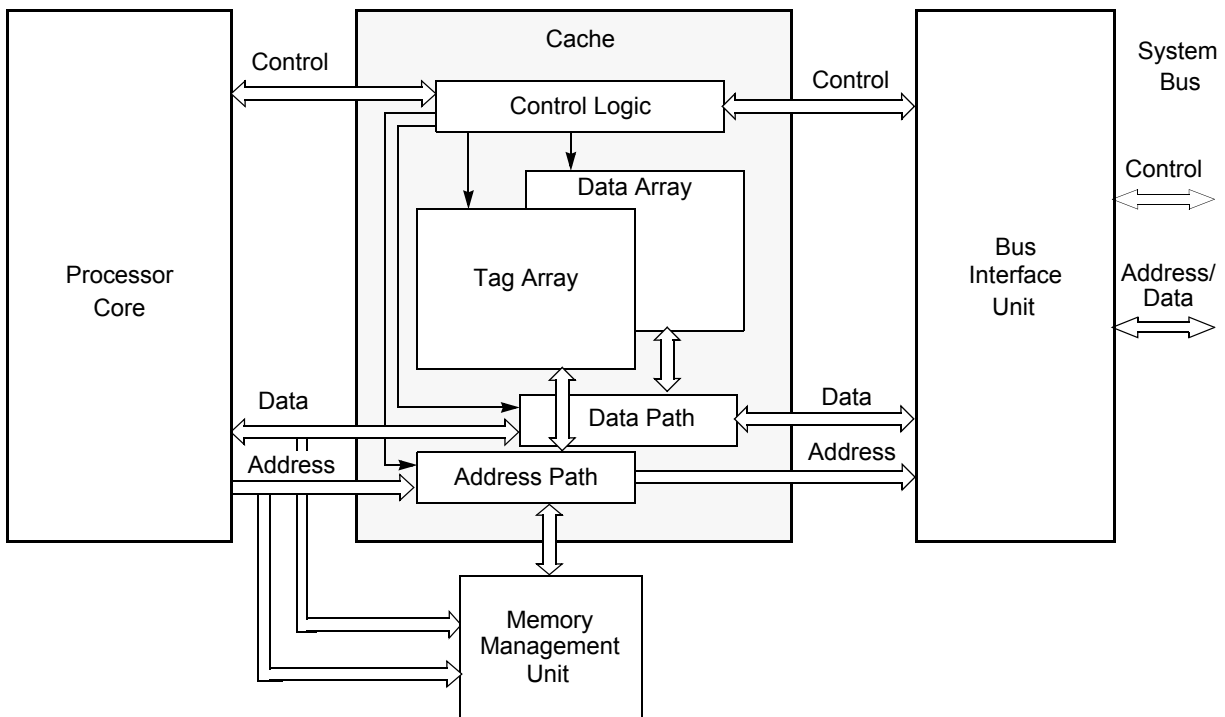


Figure 2-13. e200z6 Unified Cache Block Diagram

2.3.2.1 Cache Organization

The e200z6 cache is organized as two ways of 128 sets with each line containing 32 bytes (four doublewords) plus parity of storage. Figure 2-14 illustrates the cache organization, terminology used, the cache line format, and cache tag formats.

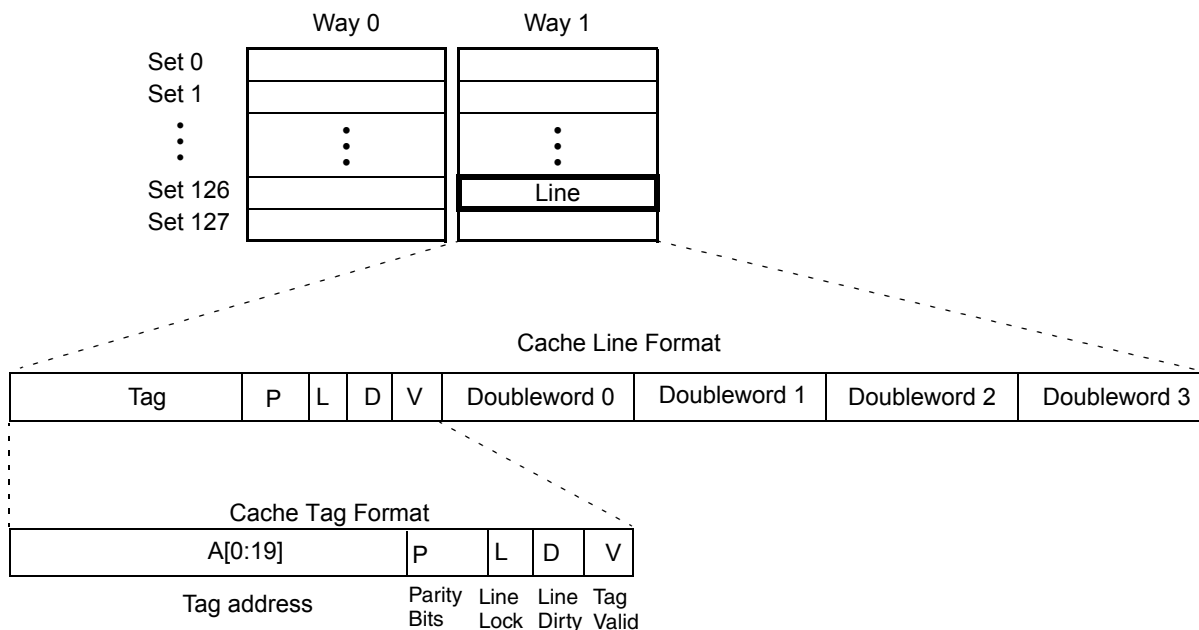


Figure 2-14. Cache Organization and Line Format

2.3.2.2 Cache Lookup

After it is enabled, the unified cache will be searched for a tag match on all instruction fetches and data accesses from the CPU. If a match is found, the cached data is forwarded on a read access to the instruction fetch unit or the load/store unit (data access), or is updated on a write access, and may also be written-through to memory if required.

When a read miss occurs, if there is a TLB hit and the cache inhibit bit (WIMGE=0bx0xxx) of the hitting TLB entry is clear, the translated physical address is used to fetch a four doubleword cache line beginning with the requested doubleword (critical doubleword first). The line is fetched and placed into the appropriate cache block and the critical doubleword is forwarded to the CPU. Subsequent doublewords may be streamed to the CPU if they have been requested and streaming is enabled via the DSTRM bit in the LICSR0 register.

During a cache line fill, doublewords received from the bus are placed into a cache linefill buffer, and may be forwarded (streamed) to the CPU if such a request is pending. Accesses from the CPU following delivery of the critical doubleword may be satisfied from the cache (hit under fill, non-blocking) or from the linefill buffer if the requested information has been already received.

The cache always fills an entire line, thereby providing validity on a line-by-line basis. A cache line is always in one of the following states: invalid, valid, or dirty (and valid). For invalid lines, the V bit is clear, causing the cache line to be ignored during lookups. Valid lines have their V bit set and D bit cleared, indicating the line contains valid data consistent with memory. Dirty cache lines have the D and V bits set, indicating that the line has valid entries that have not been written to memory. In addition, a cache line may be locked (L bit set) indicating the line is not available for replacement.

The cache should be explicitly invalidated after a hardware reset; reset does not invalidate the cache lines. Following initial power-up, the cache contents will be undefined. The L, D, and V bits may be set on some lines, necessitating the invalidation of the cache by software before being enabled.

Figure 2-15 illustrates the general flow of cache operation.

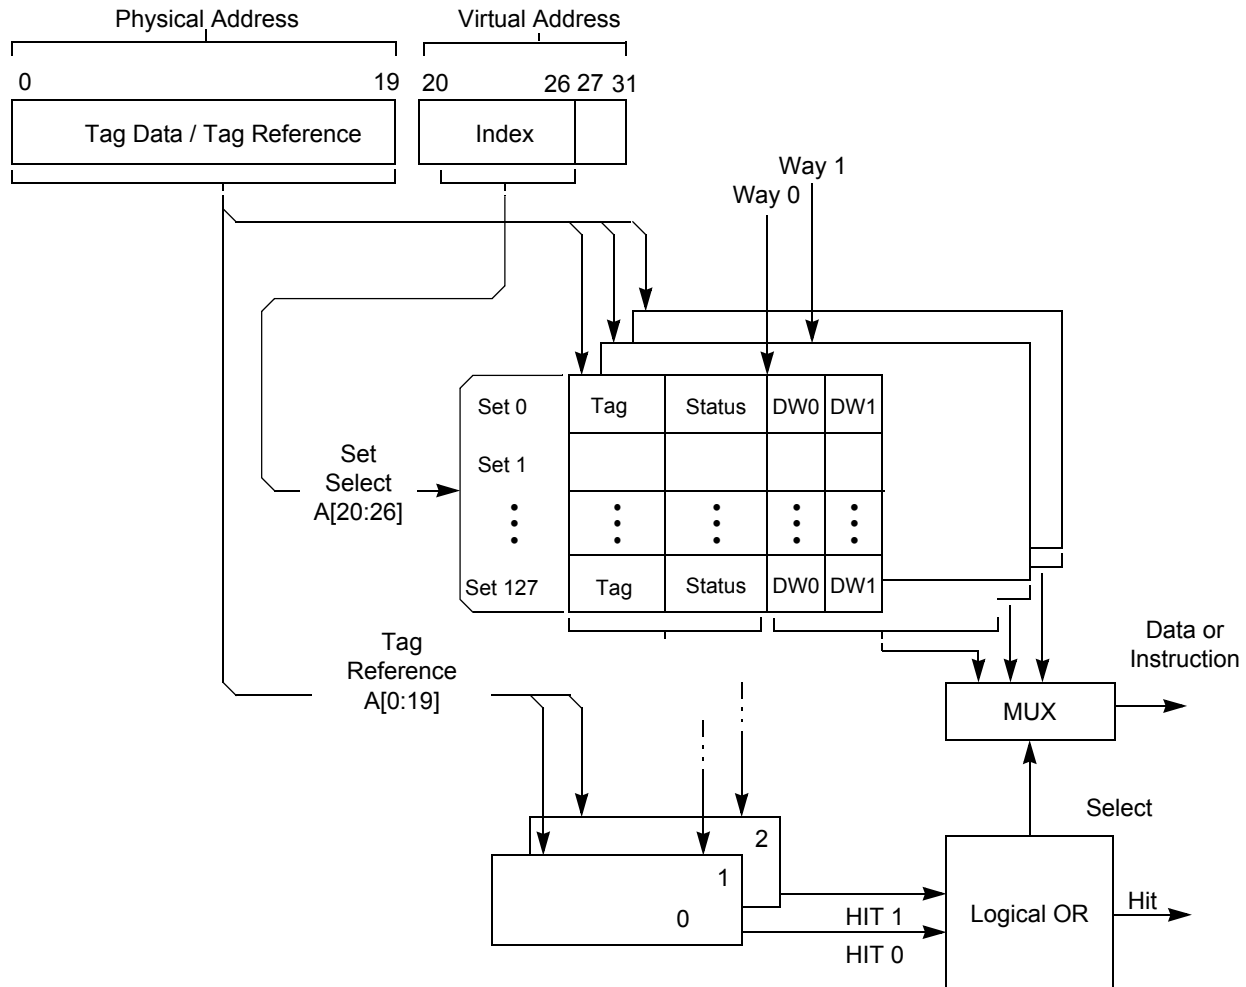


Figure 2-15. Cache Lookup Flow

To determine if the address is already allocated in the cache the following steps are taken:

1. The cache set index, virtual address bits A[20:26] are used to select one cache set. A set is defined as the grouping of eight lines (one from each way), corresponding to the same index into the cache array.
2. The higher order physical address bits A[0:19] are used as a tag reference or used to update the cache line tag field.
3. The eight tags from the selected cache set are compared with the tag reference. If any one of the tags matches the tag reference and the tag status is valid, a cache hit has occurred.

- Virtual address bits A[27:28] are used to select one of the four doublewords in each line. A cache hit indicates that the selected doubleword in that cache line contains valid data (for a read access), or can be written with new data depending on the status of the W access control bit from the MMU (for a write access).

2.3.2.3 Cache Line Replacement Algorithm

On a cache read miss, the cache controller uses a pseudo-round-robin replacement algorithm to determine which cache line will be selected to be replaced. There is a single replacement counter for the entire cache. The replacement algorithm acts as follows: on a miss, if the replacement pointer is pointing to a way which is not enabled for replacement by the type of the miss access (the selected line or way is locked), it is incremented until an available way is selected (if any). After a cache line is successfully filled without error, the replacement pointer increments to point to the next cache way.

2.3.2.4 Cache Power Reduction

The device provides additional user control over cache power utilization via the L1CSR0[WID], [AWID], [WDD], and [AWDD] way disable bits and the L1CSR0[WAM] control bit. When WAM is set to 1, ways that are disabled for allocation on miss by a particular access type (instruction or data) via the L1CSR0[WID], [AWID], [WDD], and [AWDD] way disable bits are also disabled (not selected) during normal cache lookup operations, thus avoiding the power associated with reading tag and data information for a disabled way. This provides the capability of disabling some ways for instruction accesses and some ways for data accesses in order to reduce power. In doing so however, certain restrictions must be followed, and the ability to lock by way is no longer functional, since a locked way would never be accessed.

When setting WAM to 1, restrictions are required to avoid coherency issues between instruction and data accesses, and to avoid multiple ways hitting on a given access. The restriction on coherency is due to the fact that a given line could possibly be present twice in the cache; a copy in a way disabled for instruction access which can be read and written by data accesses, and a second copy in a way disabled for data access which can be executed via an instruction fetch. A data write to the line will result in the possibility of instruction fetches obtaining stale data, in the same manner as exists in a non-unified cache. Another restriction is that multiple hits to the same line must be avoided on any given instruction or data access. This must be avoided by controlling the ways via the L1CSR0[WID,] [WDD], [AWID], and [AWDD] bits such that no common way exists that can be accessed by both instructions and data, or by ensuring that MMU permissions are set so that no cacheable page has X (execute) permission which also has R (read) or W (write) permission, i.e. can be cacheable and accessed with both instruction and data accesses.

When WAM is set to 1, ways disabled for instruction access are not affected by the **icbt**, **icble**, **icbtls**, and **icbi** instructions. Ways disabled for data accesses are not affected by the **dcba**, **dcbf**, **dcbi**, **dcble**, **dcbst**, **dcbt**, **dcbtls**, **dcbstst**, **dcbststls**, and **dcbz** instructions. Cache control operations using L1CSR0[CINV] and L1FINV0 operations are not affected by the WAM setting and proceed normally.

2.3.2.5 L1 Cache Control and Status Register 0 (L1CSR0)

The L1 cache control and status register 0 (L1CSR0) is a 32-bit register. The L1CSR0 register is accessed using a **mfscr** or **mtscr** instruction. The SPR number for L1CSR0 is 1010 in decimal. The L1CSR0 register is shown in [Figure 2-16](#).

The correct sequence necessary to change the value of L1CSR0 is as follows:

1. **msync**
2. **isync**
3. **mtscr** L1CSR0

WID	0	WDD	0	WAM	CWM	DPB	DSB	DSTR	CPE	0	CUL	CLO	CLFC	0	CABT	GINV	CE														
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31

SPR - 1010; Read/Write; Reset - 0x0

Figure 2-16. L1 Cache Control and Status Register 0 (L1CSR0)

The L1CSR0 bits are described in [Table 2-9](#).

Table 2-9. L1CSR0 Field Descriptions

Bits	Name	Description
0:1	WID	Way instruction disable. 0 = The corresponding way is available for replacement by instruction miss line fills. 1 = The corresponding way is not available for replacement by instruction miss line fills. Bit 0 corresponds to way 0. Bit 1 corresponds to way 1. The WID and WDD bits may be used for locking ways of the cache, and also are used in determining the replacement policy of the cache.
2:3	—	Reserved
4:5	WDD	Way data disable. 0 = The corresponding way is available for replacement by data miss line fills. 1 = The corresponding way is not available for replacement by data miss line fills. Bit 4 corresponds to way 0. Bit 5 corresponds to way 1. The WID and WDD bits may be used for locking ways of the cache, and also are used in determining the replacement policy of the cache.
6:9	—	Reserved

Table 2-9. L1CSR0 Field Descriptions (continued)

Bits	Name	Description
10	WAM	<p>Way access mode</p> <p>0 = Ways not enabled for replacement on a particular access type are still checked for a cache hit for accesses of that type but are not replaced by an access miss of that type.</p> <p>1 = Ways not enabled for replacement on a particular access type (instruction vs. data) via the WID and WDD fields are disabled and no lookup is performed for accesses of that type. Selecting WAM = 1 helps minimize power consumption.</p> <p>Software <i>must</i> ensure that the required instruction to data coherency is maintained when using the power-saving feature of the WAM control. In addition, the cache should be invalidated prior to changing the value of this bit. Use of a dcbf followed by an icbi, msync, isync for modified lines which may be executed is required in order to maintain proper operation.</p>
11	CWM	<p>Cache write mode</p> <p>0 = Cache operates in writethrough mode</p> <p>1 = Cache operates in copyback mode</p> <p>When set to writethrough mode, the “W” page attribute from an optional MMU is ignored and all writes are treated as writethrough required. When set, write accesses are performed in copyback mode unless the “W” page attribute from an optional MMU is set.</p>
12	DPB	<p>Disable push buffer</p> <p>0 = Push buffer enabled</p> <p>1 = Push buffer disabled</p>
13	DSB	<p>Disable store buffer</p> <p>0 = store buffer enabled</p> <p>1 = store buffer disabled</p>
14	DSTRM	<p>Disable streaming</p> <p>0 = streaming is enabled</p> <p>1 = streaming is disabled</p>
15	CPE	<p>Cache parity enable</p> <p>0 = parity checking is disabled</p> <p>1 = parity checking is enabled</p>
16–20	—	Reserved
21	CUL	<p>Cache unable to lock</p> <p>Indicates a lock set instruction was not effective in locking a cache line. This bit is set by hardware on an “unable to lock” condition (other than lock overflows), and will remain set until cleared by software writing 0 to this bit location.</p>
22	CLO	<p>Cache lock overflow</p> <p>Indicates a lock overflow (overlocking) condition occurred. This bit is set by hardware on an “overlocking” condition, and will remain set until cleared by software writing 0 to this bit location.</p>
23	CLFC	<p>Cache lock bits flash clear</p> <p>When written to a 1, a cache lock bits flash clear operation is initiated by hardware. Once complete, this bit is reset to 0. Writing a 1 while a flash clear operation is in progress will result in an undefined operation. Writing a 0 to this bit while a flash clear operation is in progress will be ignored. Cache lock bits flash clear operations require approximately cycles to complete. Clearing occurs regardless of the enable (CE) value.</p>

Table 2-9. L1CSR0 Field Descriptions (continued)

Bits	Name	Description
24:28	—	Reserved
29	CABT	Cache operation aborted Indicates a cache invalidate or a cache lock bits flash clear operation was aborted prior to completion. This bit is set by hardware on an aborted condition, and will remain set until cleared by software writing 0 to this bit location.
30	CINV	Cache invalidate 0 = No cache invalidate 1 = Cache invalidation operation When written to a 1, a cache invalidation operation is initiated by hardware. Once complete, this bit is reset to 0. Writing a 1 while an invalidation operation is in progress will result in an undefined operation. Writing a 0 to this bit while an invalidation operation is in progress will be ignored. Cache invalidation operations require approximately cycles to complete. Invalidation occurs regardless of the enable (CE) value.
31	CE	Cache Enable 0 = Cache is disabled 1 = Cache is enabled When disabled, cache lookups are not performed for normal load or store accesses. Other L1CSR0 cache control operations are still available. Also, operation of the store buffer is not affected by CE.

2.3.2.6 L1 Cache Configuration Register 0 (L1CFG0)

The L1 cache configuration register 0 (L1CFG0) is a 32-bit read-only register. L1CFG0 provides information about the configuration of the L1 cache design. The contents of the L1CFG0 register can be read using a **mfsp** instruction. The SPR number for L1CFG0 is 515 in decimal. The L1CFG0 register is shown in [Figure 2-17](#).

CARCH	CWPA	CFAHA	CFISWA	0	CBSIZE	CREPL	CLA	CPA	CNWAY	CSize																					
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
01	1	0	1	0	0	00	10	1	1	00000001 (2 way)	00000001000 (8 Kbyte)																				

SPR - 515; Read-only

Figure 2-17. L1 Cache Configuration Register 0 (L1CFG0)

The L1CFG0 bits are described in [Table 2-10](#).

Table 2-10. L1CFG0 Field Descriptions

Bits	Name	Description
0–1	CARCH	Cache architecture 01 - The cache architecture is unified
2	CWPA	Cache way partitioning available 1 - The cache supports partitioning of way availability for I/D accesses

Table 2-10. L1CFG0 Field Descriptions (continued)

Bits	Name	Description
3	CFAHA	Cache flush all by hardware available 0 - The cache does not support flush all in hardware
4	CFISWA	Cache flush/invalidate by set and way available 1 - The cache supports flushing/invalidation by set and way via the L1FINV0 spr
5-6	—	Reserved—read as zeros
7-8	CBSIZE	Cache block size 00 - The cache implements a block size of 32 bytes
9-10	CREPL	Cache replacement policy 10 - The cache implements a pseudo-round-robin replacement policy
11	CLA	Cache locking APU available 1 - The cache implements the line locking APU
12	CPA	Cache parity available 1 - The cache implements parity
13:20	CNWAY	Number of ways in the data cache 0x01 - The cache is 2-way set-associative
21:31	CSIZE	Cache size 0x008 - The size of the cache is 8 KBytes

2.3.3 Interrupt Types

The interrupts implemented in the device and the exception conditions that cause them are listed in [Table 2-11](#).

Table 2-11. Interrupts and Conditions

Interrupt Type	Interrupt Vector Offset Register	Enables ¹	State Saved In	Causing Conditions
System reset	none, vector to 0xFFFF_FFFC			<ul style="list-style-type: none"> Reset by assertion of $\overline{\text{RESET}}$ Watchdog timer reset control Debug reset control
Critical input	IVOR0	IVOR0 is not supported in the device		
Machine check	IVOR 1	ME	CSSR[0:1]	<ul style="list-style-type: none"> Machine check exception and MSR[ME] = 1 ISI, ITLB error on first instruction fetch for an exception handler Parity error signaled on cache access Write bus error on buffered store or cache line push
Data storage	IVOR 2	—	SRR[0:1]	<ul style="list-style-type: none"> Access control Byte ordering due to misaligned access across page boundary to pages with mismatched E bits Cache locking exception Precise external termination error
Instruction storage	IVOR 3	—	SRR[0:1]	<ul style="list-style-type: none"> Access control. Precise external termination error.

Table 2-11. Interrupts and Conditions (continued)

Interrupt Type	Interrupt Vector Offset Register	Enables ¹	State Saved In	Causing Conditions
External input	IVOR 4 ²	EE, src	SRR[0:1]	External interrupt is asserted and MSR[EE]=1
Alignment	IVOR 5	—	SRR[0:1]	<ul style="list-style-type: none"> • lmw, stmw not word aligned • lwarx or stwcx. not word aligned • dcbz with disabled cache or no cache present, or to W or I storage • SPE ld and st instructions not properly aligned
Program	IVOR 6	—	SRR[0:1]	Illegal, privileged, trap, FP enabled, AP enabled, unimplemented operation
Floating-point unavailable	IVOR 7	—	SRR[0:1]	MSR[FP]=0 and attempt to execute a Book E floating point operation
System call	IVOR 8	—	SRR[0:1]	Execution of the system call (sc) instruction
AP unavailable	IVOR 9	—	SRR[0:1]	Unused by e200z6
Decrementer	IVOR 10	EE, DIE	SRR[0:1]	Decrementer timeout, and as specified in <i>Book E: Enhanced PowerPC™ Architecture, Rev 1.0</i> , Ch. 8, pg. 194–195 and in the <i>e200Z6 PowerPC™ Core Reference Manual, Rev 0</i> .
Fixed interval timer	IVOR 11	EE, FIE	SRR[0:1]	Fixed-interval timer timeout and as specified in <i>Book E: Enhanced PowerPC™ Architecture, Rev 1.0</i> , Ch. 8, pg. 195–196 and in the <i>e200Z6 PowerPC™ Core Reference Manual, Rev 0</i> .
Watchdog timer	IVOR 12	CE, WIE	CSRR[0:1]	Watchdog timeout: as specified in <i>Book E: Enhanced PowerPC™ Architecture, Rev 1.0</i> , Ch. 8, pg. 196–197 and in the <i>e200Z6 PowerPC™ Core Reference Manual, Rev 0</i> .
Data TLB error	IVOR 13	—	SRR[0:1]	Data translation lookup did not match a valid entry in the TLB
Instruction TLB error	IVOR 14	—	SRR[0:1]	Instruction translation lookup did not match a valid entry in the TLB
Debug	IVOR 15	DE, IDM	CSSR[0:1]	Debugger when HIDO[DAPUEN] = 0. Caused by trap, instruction address compare, data address compare, instruction complete, branch taken, return from interrupt, interrupt taken, debug counter, external debug event, unconditional debug event
		DE, IDM	DSRR[0:1]	Debugger when HIDO[DAPUEN] = 1, and caused by same conditions as above.
Reserved	IVOR 16–31			
SPE unavailable exception	IVOR 32	—	SRR[0:1]	SPE APU instruction when MSR[SPE] = 0, and see Section 5.6.18 “SPE APU Unavailable Interrupt” in the <i>e200Z6 PowerPC™ Core Reference Manual, Rev 0</i> .

Table 2-11. Interrupts and Conditions (continued)

Interrupt Type	Interrupt Vector Offset Register	Enables ¹	State Saved In	Causing Conditions
SPE data exception	IVOR 33	—	SRR[0:1]	SPE FP data exception and see Section 5.6.19 “SPE Floating-Point Data Interrupt” in the <i>e200Z6 PowerPC™ Core Reference Manual</i> , Rev 0.
SPE round exception	IVOR 34	—	SRR[0:1]	Inexact result from floating-point instruction. See Section 5.6.20 “SPE Floating-Point Round Interrupt” in the <i>e200Z6 PowerPC™ Core Reference Manual</i> , Rev 0.

¹ CE, ME, EE, DE are in the MSR. DIE, FIE, and WIE are in the TCR. “src” signifies the individual enable for each INTC source. The debug interrupt, IVOR 15, also requires EDM = 0 (EDM and IDM are in the DBCR0 register).

2.3.4 Bus Interface Unit (BIU)

The BIU encompasses control and data signals supporting instruction and data transfers. A data bus width of 64-bits is implemented. The memory interface supports read and write transfers of 8, 16, 24, 32, and 64 bits, supports burst transfers of four doublewords, and operates in a pipelined fashion.

Single-beat transfers are supported for cache-inhibited read and write cycles, and write-buffer writes. Burst transfers of four doublewords are supported for cache linefill and copyback operations.

2.3.5 Timer Facilities

The core provides a set of registers to provide fixed interval timing and watchdog functions for the system. All of these must be initialized during start-up. The registers associated with fixed interval timer and watchdog functions are the following:

- Timer control register (TCR)—provides control of the timer and watchdog facilities.
- Timer status register (TSR)—provides status of the timer facilities.
- Time base registers (TBU and TBL)—two 32-bit registers (upper and lower) that are concatenated to provide a long-period, 64-bit counter.
- Decrementer register (DEC)—a decrementing counter that is updated at the same rate as the time base. The DEC provides a means of signaling an exception after a specified amount of time. The DEC is typically used as a general-purpose software timer. Note that the decrementer always runs when the system is clocked, and may be written to by software at any time.
- Decrementer auto reload register (DECAR)—provides a value that is automatically reloaded (if enabled) into the decrementer register when the decrementer reaches 0.

For more information on the fixed-interval timer, watchdog timer, and timer and counter registers, refer to the *e200z6 PowerPC™ Core Reference Manual* and *EREF: A Programmer's Reference Manual for Freescale Book E Processors*.

2.3.6 Signal Processing Extension APU (SPE APU)

2.3.6.1 Overview

The Power Architecture embedded category 32-bit instructions operate on the lower (least significant) 32 bits of the 64-bit GPRs. New SPE instructions are defined that view the 64-bit register as being composed of a vector of two 32-bit elements, and some of the instructions also read or write 16-bit elements. These new instructions can also be used to perform scalar operations by ignoring the results of the upper 32-bit half of the register file.

Some instructions are defined that produce a 64-bit scalar result. Vector fixed-point instructions operate on a vector of two 32-bit or four 16-bit fixed-point numbers resident in the 64-bit GPRs. Vector floating-point instructions operate on a vector of two 32-bit single-precision floating-point numbers resident in the 64-bit GPRs. Scalar floating-point instructions operate on the lower half of GPRs. These single-precision floating-point instructions do not have a separate register file; there is a single shared register file for all instructions. [Figure 2-18](#) shows two different representations of the 64-bit GPRs. The shaded half is the only region operated on by the 32-bit Power Architecture embedded category instructions.

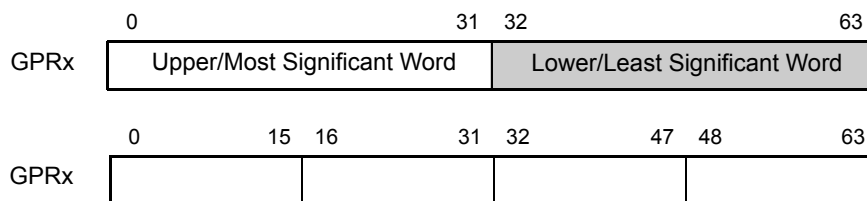


Figure 2-18. 64-bit General-Purpose Registers

2.3.7 SPE Programming Model

Not all SPE instructions record events such as overflow, saturation, and negative/positive result. See the description of the individual SPE instruction in the e200z6 core reference for information on which conditions are recorded and where they are recorded. Most SPE instructions record conditions to the SPEFSCR. Vector compare instructions store the result of the comparison into the condition register (CR).

The e200z6 core has a 64-bit architectural accumulator register that holds the results of the SPE multiply accumulate (MAC) fixed-point instructions. The accumulator allows back-to-back execution of dependent fixed-point MAC instructions, something that is found in the inner loops of DSP code such as filters. The accumulator is partially visible to the programmer in that its results do not have to be explicitly read to use them. Instead, they are always copied into a 64-bit destination GPR specified as part of the instruction. The accumulator however, has to be explicitly cleared when starting a new MAC loop. Based on the type of instruction, the accumulator can hold either a single 64-bit value or a vector of two 32-bit elements.

2.4 External References

In addition to the Power Architecture instructions, the device supports e200z6 core-specific instructions and SPE APU instructions and VLE instructions. For further information see the following documents:

- *e200z6 PowerPC™ Core Reference Manual*
- *PowerPC™ Microprocessor Family: The Programming Environment for 32-bit Microprocessors*
- *Book E: Enhanced PowerPC™ Architecture*
- *EREF: A Programmer's Reference Manual for Freescale Book E Processors*
- *VLEPIM: Variable Length Encoding (VLE) Extension Programming Interface Manual*
- *Addendum to e200z6 PowerPC™ Core Reference Manual: e200z6 with VLE*
- *Errata to e200z6 PowerPC™ Core Reference Manual, Rev. 0*

2.5 Power Architecture Instruction Extensions - VLE

The variable length encoding (VLE) provides an extension to 32-bit Power Architecture. There are additional operations defined using an alternate instruction encoding to enable reduced code footprint. This alternate encoding set is selected on an instruction page basis. A single page attribute bit selects between standard Power Architecture instruction encodings and VLE instructions for that page of memory. This page attribute is an extension to the Power Architecture page attributes. Pages can be freely intermixed, allowing for a mixture of code using both types of encodings.

Instruction encodings in pages marked as using the VLE extension are either 16 or 32 bits long, and are aligned on 16-bit boundaries. Therefore, all instruction pages marked as VLE are required to use big-endian byte ordering.

This section describes the various extensions to Power Architecture instructions to support the VLE extension.

rfci, rfdi, rfi—no longer mask bit 62 of CSRR0, DSRR0, or SRR0 respectively. The destination address is [D,C]SRR0[32:62] || 0b0.

bclr, bclrl, bcctr, bcctrl—no longer mask bit 62 of the LR or CTR respectively. The destination address is [LR,CTR][32:62] || 0b0.

2.6 Document Revision History

Table 2-12. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1, Draft A	Throughout.	01/07: First public release

Chapter 3 Reset

3.1 Introduction

The following reset sources are supported in this MCU:

- Power-on reset
- External reset
- Loss-of-lock reset
- Loss-of-clock reset
- Watchdog timer/debug reset
- JTAG reset
- Checkstop reset
- Software system reset
- Software external reset

All reset sources are processed by the reset controller, which is located in the SIU module. The reset controller monitors the reset input sources, and upon detection of a reset event, resets internal logic and controls the assertion of the $\overline{\text{RSTOUT}}$ pin. The $\overline{\text{RSTOUT}}$ signal may be automatically asserted by writing the SER bit in the SIU_SRCR to 1. The $\overline{\text{RSTOUT}}$ signal will stay asserted for a number of system clocks¹ determined by the configuration of the PLL (See Section 3.2.2, “Reset Output (RSTOUT)”). This does not reset the MCU. All other reset sources initiate an internal reset of the MCU.

For all reset sources, the BOOTCFG[0:1] and PLLCFG[0:1] signals can be used to determine the boot mode and the configuration of the FMPLL, respectively. If the $\overline{\text{RSTCFG}}$ pin is asserted during reset, the values on the BOOTCFG[0:1] pins are latched in the SIU_RSR 4 clock cycles prior to the negation of the $\overline{\text{RSTOUT}}$ pin, determining the boot mode. The values on the PLLCFG[0:1] pins are latched at the negation of the $\overline{\text{RSTOUT}}$ pin, determining the configuration of the FMPLL. If the $\overline{\text{RSTCFG}}$ pin is negated during reset, the FMPLL defaults to normal operation (PLL enabled) with a crystal reference and the boot mode (latched in the SIU_RSR) is defaulted to internal boot from flash.

The reset status register (SIU_RSR) gives the source of the last reset and indicates whether a glitch has occurred on the $\overline{\text{RESET}}$ pin. The SIU_RSR is updated for all reset sources.

All reset sources initiate execution of the MCU's boot assist module (BAM) program with the exception of the software external reset.

The reset configuration half word (RCHW) provides several basic functions at reset. It provides a means to locate the boot code, determines if flash memory is programmed or erased, enables or disables the

1. Unless noted otherwise, the use of 'clock' or 'clocks' in this section is a reference to the system clock.

watchdog timer, configures the MMU to boot as either classic PowerPC Book E code or as Freescale VLE code, and if booting externally, sets the bus size. The location of the RCHW is specified by the state of the BOOTCFG[0:1] pins. These pins determine whether the RCHW is located in internal flash, located in external memory, or whether a serial or CAN boot is configured. A complete description of the BOOTCFG[0:1] pins may be found in [Chapter 4, “Signal Description.”](#) The BAM program reads the values of the BOOTCFG[0:1] pins from the BOOTCFG field of the SIU_RSR, then reads the RCHW from the specified location and uses the RCHW value to determine and execute the specified boot procedure. See [Section 3.4.3, “Reset Configuration and Configuration Pins,”](#) for a complete description.

3.2 External Signal Description

3.2.1 Reset Input ($\overline{\text{RESET}}$)

The $\overline{\text{RESET}}$ pin is an active low input that is asserted by an external device during a power-on or external reset. The internal reset signal asserts only if the $\overline{\text{RESET}}$ pin is asserted for 10 clock cycles. Assertion of the $\overline{\text{RESET}}$ pin while the device is in reset causes the reset cycle to start over. The $\overline{\text{RESET}}$ pin also has an associated glitch detector which detects spikes greater than 2 clocks in duration that fall below the switch point of the input buffer logic. Refer to [Section 6.4.2.1, “RESET Pin Glitch Detect.”](#)

3.2.2 Reset Output ($\overline{\text{RSTOUT}}$)

The $\overline{\text{RSTOUT}}$ pin is an active low output that uses a push/pull configuration. The $\overline{\text{RSTOUT}}$ pin is driven to the low state by the MCU for all internal and external reset sources.

After the negation of the $\overline{\text{RESET}}$ input, if the PLL is configured for 1:1 (dual controller) mode or bypass mode, the $\overline{\text{RSTOUT}}$ signal is asserted for 16000 clocks, plus 4 clocks for sampling of the configuration pins. If the PLL is configured for any other operating mode, the $\overline{\text{RSTOUT}}$ signal is asserted for 2400 clocks, plus 4 clocks for sampling of the configuration pins. See [Section 11.1.4, “FMPLL Modes of Operation”](#) for details of PLL configuration.

The $\overline{\text{RSTOUT}}$ pin can also be asserted by a write to the SER bit of the system reset control register (SIU_SRCR).

NOTE

During a power on reset, $\overline{\text{RSTOUT}}$ is three-stated.

3.2.3 Reset Configuration ($\overline{\text{RSTCFG}}$)

The $\overline{\text{RSTCFG}}$ input is used to enable the BOOTCFG[0:1] and PLLCFG[0:1] pins during reset. If $\overline{\text{RSTCFG}}$ is negated during reset, the BOOTCFG and PLLCFG pins are not sampled at the negation of $\overline{\text{RSTOUT}}$. In that case, the default values for BOOTCFG and PLLCFG are used. If $\overline{\text{RSTCFG}}$ is asserted during reset, the values on the BOOTCFG and PLLCFG pins are sampled and configure the boot and FMPLL modes.

In the 208 package there is no RSTCFG pin; this signifies that external bus access is not available in this package. After reset the device resets to the values of PLLCFG before reset. The device does not reset to the crystal reference mode as do the other packages.

3.2.4 Weak Pull Configuration (WKPCFG)

WKPCFG determines whether specified eTPU and EMIOS pins are connected to a weak pull up or weak pull down during and immediately after reset.

3.2.5 Boot Configuration (BOOTCFG[0:1])

BOOTCFG determines the function and state of the following pins after execution of the BAM reset: $\overline{CS}[0:3]$, $ADDR[8:31]$, $DATA[0:31]$, RD_WR , \overline{BDIP} , $\overline{WE}[0:3]$, \overline{OE} , \overline{TS} , \overline{TA} , \overline{TEA} . Refer to the boot modes detailed in Section 6.4.1.1, “Boot Configuration,” and in Table 6-52.

Note that BOOTCFG0 does not function in the 208 pin package.

3.3 Memory Map/Register Definition

Table 3-1 summarizes the reset controller registers. The base address of the system integration unit is 0xC3F9_0000.

Table 3-1. Reset Controller Memory Map

Address	Register Name	Register Description	Size (bits)
Base + 0xC	SIU_RSR	Reset status register	32
Base + 0x10	SIU_SRCR	System reset control register	32

3.3.1 Register Descriptions

This section describes all the reset controller registers. It includes details about the fields in each register, the number of bits per field, the reset value of the register, and the function of the register.

3.3.1.1 Reset Status Register (SIU_RSR)

The reset status register (SIU_RSR) reflects the most recent source, or sources, of reset. This register contains one bit for each reset source. A bit set to logic 1 indicates the type of reset that occurred. Simultaneous reset requests cause more than one bit to be set at the same time. Once set, the reset source bits in the SIU_RSR remain set until another reset occurs. A software external reset causes the SERF bit to be set, but no previously set bits in the SIU_RSR will be cleared. Additional information about the SIU_RSR may be found in Section 6.3.1.2, “Reset Status Register (SIU_RSR).”

The SIU_RSR also contains the values latched at the last reset on the WKPCFG and BOOTCFG[0:1] pins and a RESET input pin glitch flag. The reset glitch flag bit (RGF) is cleared by writing a 1 to the bit. A write of 0 has no effect on the bit state. The SIU_RSR can be read at all times.

Reset

Address: Base + 0x0C

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	PORS	ERS	LLRS	LCRS	WDRS	CRS	0	0	0	0	0	0	0	0	SSRS	SERF
W	[Reserved]															
Reset ¹	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	WKP CFG	0	0	0	0	0	0	0	0	0	0	0	0	BOOTCFG	RGF	
W	[Reserved]															
Reset ²	— ²	0	0	0	0	0	0	0	0	0	0	0	0	— ³	— ³	0

¹ The RESET values for this register are defined for power-on reset only.

² The RESET value of this bit or field is determined by the value latched on the associated pin or pins at the negation of the last reset.

³ The RESET value of this bit or field is determined by the value latched on the associated pin or pins at the negation of the last reset. BOOTCFG can also be loaded with a default instead of what is on the associated pin or pins.

Figure 3-1. Reset Status Register (SIU_RSR)

Table 3-2. SIU_RSR Field Descriptions

Field	Description
0 PORS	Power-on reset status 0 No power-on reset has occurred. 1 A power-on reset has occurred.
1 ERS	External reset status 0 No external reset has occurred. 1 An external reset has occurred. The ERS bit is also set during a POR event.
2 LLRS	Loss-of-lock reset status 0 No loss-of-lock reset has occurred. 1 A loss-of-lock reset has occurred.
3 LCRS	Loss-of-clock reset status 0 No loss-of-clock reset has occurred. 1 A loss-of-clock reset has occurred due to a loss of the reference or failure of the FMPLL.
4 WDRS	Watchdog timer/debug reset status 0 No watchdog timer or debug reset has occurred. 1 A watchdog timer or debug reset has occurred.
5 CRS	Checkstop reset status 0 No enabled checkstop reset has occurred. 1 An enabled checkstop reset has occurred.
6–13	Reserved.
14 SSRS	Software system reset status 0 No software system reset has occurred. 1 A software system reset has occurred.
15 SERF	Software external reset flag 0 No software external reset has occurred. 1 A software external reset has occurred.

Table 3-2. SIU_RSR Field Descriptions (continued)

Field	Description
16 WKPCFG	Weak pull configuration pin status 0 WKPCFG pin latched during the last reset was logic 0 and weak pull down is the default setting. 1 WKPCFG pin latched during the last reset was logic 1 and weak pull up is the default setting.
17–28	Reserved.
29–30 BOOTCFG	Reset configuration pin status. Holds the value of the BOOTCFG[0:1] pins that was latched 4 clocks before the last negation of the \overline{RSTOUT} pin, if the \overline{RSTCFG} pin was asserted. If the \overline{RSTCFG} pin was negated at the last negation of \overline{RSTOUT} , the BOOTCFG field is set to the value 0b00. The BOOTCFG field is used by the BAM program to determine the location of the reset configuration half word. See Table 3-10 for a translation of the reset configuration half word location from the BOOTCFG field value.
31 RGF	\overline{RESET} glitch flag. Set by the MCU when the \overline{RESET} pin is asserted for more than 2 clocks clock cycles, but less than the minimum \overline{RESET} assertion time of 10 consecutive clocks to cause a reset. This bit is cleared by the reset controller for a valid assertion of the \overline{RESET} pin or a power-on reset or a write of 1 to the bit. 0 No glitch was detected on the \overline{RESET} pin. 1 A glitch was detected on the \overline{RESET} pin.

3.3.1.2 System Reset Control Register (SIU_SRCR)

The system reset control register (SIU_SRCR) allows software to generate either a software system reset or software external reset. The software system reset causes an internal reset sequence, while the software external reset only causes the external \overline{RSTOUT} pin to be asserted. When written to 1, the SER bit automatically clears after a predetermined number of clock cycles (See Section 3.2.2, “Reset Output (\overline{RSTOUT})”). If the value of the SER bit is 1 and a 0 is written to the bit, the bit is cleared and the \overline{RSTOUT} pin is negated regardless of whether the relevant number of clocks has expired.

The CRE bit in the SIU_SRCR allows software to enable a checkstop reset. If enabled, a checkstop reset will occur if the checkstop reset input to the reset controller is asserted. The checkstop reset is enabled by default.

Address: Base + 0x10

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	SSR	SER	0	0	0	0	0	0	0	0	0	0	0	0	0	0	CRE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
W																																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1 ¹	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

¹ The CRE bit is reset to 1 by POR. Other resets sources do not reset the bit value.

Figure 3-2. System Reset Control Register (SIU_SRCR)

Table 3-3. SIU_SRCR Field Descriptions

Field	Description
0 SSR	Software system reset. Writing a 1 to this bit causes an internal reset and assertion of the $\overline{\text{RSTOUT}}$ pin. The bit is automatically cleared by all reset sources except the software external reset. 0 Do not generate a software system reset. 1 Generate a software system reset.
1 SER	Software external reset. Writing a 1 to this bit causes an software external reset. The $\overline{\text{RSTOUT}}$ pin is asserted for a predetermined number of clock cycles (See Section 3.2.2, “Reset Output (RSTOUT)”), but the MCU is not reset. The bit is automatically cleared when the software external reset completes. 0 Do not generate an software external reset. 1 Generate an software external reset.
2–15	Reserved.
16 CRE	Checkstop reset enable Writing a 1 to this bit enables a checkstop reset when the e200z6 core enters a checkstop state. The CRE bit defaults to checkstop reset enabled. This bit is reset at POR. 0 No reset occurs when the e200z6 core enters a checkstop state. 1 A reset occurs when the e200z6 core enters a checkstop state.
17–31	Reserved.

3.4 Functional Description

3.4.1 Reset Vector Locations

The reset vector contains a pointer to the instruction where code execution begins after BAM execution. The location of the reset vector is determined by boot mode, as illustrated in Table 3-4.

Table 3-4. Reset Vector Locations

Boot Mode	Reset Vector Location
External Boot	0x0000_0004 (assuming 0x0000_0000 has a valid RCHW)
Internal Boot	Next word address after the first valid RCHW found. The BAM searches the lowest address of each of the six low address space blocks in flash memory for a valid RCHW. Hence, the possible reset vector locations are: 0x0000_0004 0x0000_4004 0x0001_0004 0x0001_C004 0x0002_0004 0x0003_0004
Serial Boot	Specified over serial download

3.4.2 Reset Sources

3.4.2.1 FMPLL Lock

A loss of lock of the FMPLL can cause a reset (provided the SIU is enabled by the FMPLL_SYNCR[LOLRE] bit). Furthermore, reset will remain asserted, regardless of the source of reset, until after the FMPLL has locked.

3.4.2.2 Flash High Voltage

There is no flash access gating signal implemented in this device. However, the device is held in reset for a long enough period of time to guarantee that high voltage circuits are reset and stabilized and that flash memory is accessible.

3.4.2.3 Reset Source Descriptions

For the following reset source descriptions refer to the reset flow diagrams in [Figure 3-5](#) and [Figure 3-6](#). [Figure 3-5](#) shows the reset flow for assertion of the $\overline{\text{RESET}}$ pin. [Figure 3-6](#) shows the internal processing of reset for all reset sources.

3.4.2.3.1 Power-on Reset

The power-on reset (POR) circuit is designed to detect a POR event and ensure that the $\overline{\text{RESET}}$ signal is correctly sensed. The POR is not intended to be used to detect falling power supply voltages. External supply monitoring should be provided. The output signals from the power-on reset circuits are active low signals. All power-on reset output signals are combined into one POR signal at the V_{DD} level and input to the reset controller. Although assertion of the power-on reset signal causes reset, the $\overline{\text{RESET}}$ pin must be asserted during a power-on reset to guarantee proper operation of the MCU.

The PLLCFG[0:1] and $\overline{\text{RSTCFG}}$ pins determine the configuration of the FMPLL. If the $\overline{\text{RSTCFG}}$ pin is asserted at the negation of $\overline{\text{RSTOUT}}$, the PLLCFG[0:1] pins set the operating mode of the FMPLL. If $\overline{\text{RSTCFG}}$ is asserted anytime during the assertion of $\overline{\text{RSTOUT}}$, the FMPLL will switch to the mode specified by the PLLCFG[0:1] pins. The values on the $\overline{\text{RSTCFG}}$ and the PLLCFG[0:1] pins must be kept constant once $\overline{\text{RSTCFG}}$ is asserted to avoid transient mode changes in the FMPLL. If $\overline{\text{RSTCFG}}$ is in the negated state at the negation of $\overline{\text{RSTOUT}}$, the FMPLL defaults to enabled with a crystal reference. See [Chapter 11, “Frequency Modulated Phase Locked Loop and System Clocks \(FMPLL\),”](#) for more details on the operation of the FMPLL and the PLLCFG[0:1] pins.

The signal on the WKPCFG pin determines whether weak pull up or pull down devices are enabled after reset on the eTPU and eMIOS pins. The WKPCFG pin is applied starting at the assertion of the internal reset signal, as indicated by the assertion of $\overline{\text{RSTOUT}}$. Refer to [Figure 3-4](#) and see [Chapter 4, “Signal Description,”](#) for information on WKPCFG and $\overline{\text{RSTOUT}}$.

Once the $\overline{\text{RESET}}$ input pin is negated, the reset controller checks if the FMPLL is locked. The internal reset signal and $\overline{\text{RSTOUT}}$ are kept asserted until the FMPLL is locked. After the FMPLL is locked, the reset controller waits an additional predetermined number of clock cycles (See [Section 3.2.2, “Reset Output \(RSTOUT\)”](#)) before negating the $\overline{\text{RSTOUT}}$ pin. The WKPCFG and BOOTCFG[0:1] pins are sampled 4 clock cycles before the negation of $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the

SIU_RSR (note that the BOOTCFG[0:1] pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). In addition, the PORs and ERS bits are set, and all other reset status bits are cleared in the reset status register.

3.4.2.3.2 External Reset

When the reset controller detects assertion of the $\overline{\text{RESET}}$ pin, the internal reset signal and $\overline{\text{RSTOUT}}$ are asserted. Starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$), the value on the WKPCFG pin is applied; at the same time the PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted. Once the RESET pin is negated and the FMPLL loss of lock request signal is negated, the reset controller waits the predetermined number of clock cycles (see Section 3.2.2, “Reset Output (RSTOUT)”).

Once the clock count finishes, the WKPCFG and BOOTCFG[0:1] pins are sampled (note that the BOOTCFG[0:1] pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). The reset controller then waits 4 clock cycles before the negating $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the SIU_RSR. In addition, the ERS bit is set, and all other reset status bits in the SIU_RSR are cleared.

3.4.2.3.3 Loss-of-Lock Reset

A loss-of-lock reset occurs when the FMPLL loses lock and the loss-of-lock reset enable (LOLRE) bit in the FMPLL synthesizer control register (FMPLL_SYNCR) is set. The internal reset signal is asserted (as indicated by assertion of $\overline{\text{RSTOUT}}$). Starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$), the value on the WKPCFG pin is applied; at the same time the PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted. Once the FMPLL locks, the reset controller waits until the predetermined clock count finishes (See Section 3.2.2, “Reset Output (RSTOUT)”) and then the WKPCFG and BOOTCFG[0:1] pins are sampled (note that the BOOTCFG[0:1] pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). The reset controller then waits 4 clock cycles before negating $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the SIU_RSR. In addition, the LLRS bit is set, and all other reset status bits in the SIU_RSR are cleared. Refer to Chapter 11, “Frequency Modulated Phase Locked Loop and System Clocks (FMPLL),” for more information on loss-of-lock.

3.4.2.3.4 Loss-of-Clock Reset

A loss-of-clock reset occurs when the FMPLL detects a failure in either the reference signal or FMPLL output, and the loss-of-clock reset enable (LOCRES) bit in the FMPLL_SYNCR is set. The internal reset signal is asserted (as indicated by assertion of $\overline{\text{RSTOUT}}$). Starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$), the value on the WKPCFG pin is applied; at the same time the PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted. Once the FMPLL has a clock and is locked, the reset controller waits the predetermined clock cycles (See Section 3.2.2, “Reset Output (RSTOUT)”) before negating $\overline{\text{RSTOUT}}$. When the clock count finishes the WKPCFG and BOOTCFG[0:1] pins are sampled (note that the BOOTCFG[0:1] pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). The reset controller then waits 4 clock cycles before the negating $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the SIU_RSR. In addition, the LCRES bit is set, and all other reset status bits in the SIU_RSR are cleared. Refer to Section 11.4.2.6, “Loss-of-Clock Detection,” for more information on loss-of-clock.

3.4.2.3.5 Watchdog Timer/Debug Reset

A watchdog timer reset occurs when the e200z6 core watchdog timer is enabled, and a time-out occurs with the enable next watchdog timer (EWT) and watchdog timer interrupt status (WIS) bits set in the timer

status register (TSR), and with the watchdog reset control (WRC) field in the timer control register (TCR) configured for a reset. The WDRS bit in the SIU_RSR is also set when a debug reset command is issued from a debug tool. To determine whether the WDRS bit was set due to a watchdog timer or debug reset, check the WRS field in the e200z6 core TSR. The effect of a watchdog timer or debug reset request is the same for the reset controller. Starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$), the value on the WKPCFG pin is applied; at the same time the PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted. Once the FMPLL is locked, the reset controller waits the predetermined number of clock cycles (See [Section 3.2.2, “Reset Output \(RSTOUT\)”](#)) before negating $\overline{\text{RSTOUT}}$. When the clock count finishes the WKPCFG and $\overline{\text{BOOTCFG}}[0:1]$ pins are sampled (note that the $\overline{\text{BOOTCFG}}[0:1]$ pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). The reset controller then waits 4 clock cycles before the negating $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the SIU_RSR. In addition, the WTRS bit is set, and all other reset status bits in the SIU_RSR are cleared. Refer to the e200z6 Core Guide for more information on the watchdog timer and debug operation.

3.4.2.3.6 Checkstop Reset

When the e200z6 core enters a checkstop state, and the checkstop reset is enabled (the CRE bit in the system reset control register (SIU_SRCR) is set), a checkstop reset occurs. Starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$), the value on the WKPCFG pin is applied; at the same time the PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted. Once the FMPLL is locked, the reset controller waits a predetermined number of clock cycles (See [Section 3.2.2, “Reset Output \(RSTOUT\)”](#)) before negating $\overline{\text{RSTOUT}}$. When the clock count finishes the WKPCFG and $\overline{\text{BOOTCFG}}[0:1]$ pins are sampled (note that the $\overline{\text{BOOTCFG}}[0:1]$ pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). The reset controller then waits 4 clock cycles before the negating $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the SIU_RSR. In addition, the CRS bit is set, and all other reset status bits in the SIU_RSR are cleared. Refer to e200z6 Core Guide for more information.

3.4.2.3.7 JTAG Reset

A system reset occurs when JTAG is enabled and either the EXTEST, CLAMP, or HIGHZ instructions are executed by the JTAG controller. Starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$), the value on the WKPCFG pin is applied; at the same time the PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted.

Once the JTAG reset request has negated and the FMPLL is locked, the reset controller waits a predetermined number of clock cycles (See [Section 3.2.2, “Reset Output \(RSTOUT\)”](#)) before negating $\overline{\text{RSTOUT}}$. When the clock count finishes the WKPCFG and $\overline{\text{BOOTCFG}}[0:1]$ pins are sampled (note that the $\overline{\text{BOOTCFG}}[0:1]$ pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted), and their associated bits/fields are updated in the SIU_RSR. The reset source status bits in the SIU_RSR are unaffected. Refer to [Chapter 25, “IEEE 1149.1 Test Access Port Controller \(JTAGC\)”](#), for more information.

3.4.2.3.8 Software System Reset

A software system reset is caused by a write to the SSR bit in the system reset control register (SIU_SRCR). A write of 1 to the SSR bit causes an internal reset of the MCU. The internal reset signal is asserted (as indicated by assertion of $\overline{\text{RSTOUT}}$). The value on the WKPCFG pin is applied starting at the assertion of the internal reset signal (as indicated by assertion of $\overline{\text{RSTOUT}}$); at the same time the

PLLCFG[0:1] values are applied if $\overline{\text{RSTCFG}}$ is asserted. Once the FMPLL locks, the reset controller waits a predetermined number of clock cycles (See [Section 3.2.2, “Reset Output \(RSTOUT\)”](#)) before negating $\overline{\text{RSTOUT}}$. When the clock count finishes the $\overline{\text{WKPCFG}}$ and $\overline{\text{BOOTCFG}}[0:1]$ pins are sampled (note that the $\overline{\text{BOOTCFG}}[0:1]$ pins are only sampled if $\overline{\text{RSTCFG}}$ is asserted). The reset controller then waits 4 clock cycles before negating $\overline{\text{RSTOUT}}$, and the associated bits/fields are updated in the SIU_RSR. In addition, the SSRS bit is set, and all other reset status bits in the SIU_RSR are cleared.

3.4.2.3.9 Software External Reset

A write of 1 to the SER bit in the SIU_SRCR causes the external $\overline{\text{RSTOUT}}$ pin to be asserted for a predetermined number of clocks (See [Section 3.2.2, “Reset Output \(RSTOUT\)”](#)). The SER bit automatically clears after the clock cycle expires. A software external reset does not cause a reset of the MCU, the BAM program is not executed, the PLLCFG[0:1], BOOTCFG[0:1], and WKPCFG pins are not sampled. The SERF bit in the SIU_RSR is set, but no other status bits are affected. The SERF bit in the SIU_RSR is not automatically cleared after the clock count expires, and remains set until cleared by software or another reset besides the software external reset occurs.

For a software external reset, the e200z6 core will continue to execute instructions, timers that are enabled will continue to operate, and interrupt requests will continue to be processed. It is the responsibility of the application to ensure devices connected to $\overline{\text{RSTOUT}}$ are not accessed during a software external reset, and to determine how to manage MCU resources.

3.4.3 Reset Configuration and Configuration Pins

The microcontroller and the BAM perform a reset configuration that allows certain functions of the MCU to be controlled and configured at reset. This reset configuration is defined by:

- Configuration pins
- A reset configuration half word (RCHW), if present
- Serial port, if a serial boot is used

The following sections describe these configuration pins and the RCHW.

3.4.3.1 $\overline{\text{RSTCFG}}$ Pin

[Table 3-5](#) shows the $\overline{\text{RSTCFG}}$ pin settings for configuring the MCU to use a default or a custom configuration. Refer to [Chapter 4, “Signal Description”](#) for more information about the $\overline{\text{RSTCFG}}$ pin.

Table 3-5. $\overline{\text{RSTCFG}}$ Settings

$\overline{\text{RSTCFG}}$	Description
1	Use default configuration of: – booting from internal flash – clock source is a crystal on FMPLL
0	Get configuration information from: – $\overline{\text{BOOTCFG}}[0:1]$ – $\overline{\text{PLLCFG}}[0:1]$

3.4.3.2 WKPCFG Pin (Reset Weak Pull Up/Pull Down Configuration)

As shown in [Table 3-6](#), the signal on the WKPCFG pin determines whether specific eTPU and eMIOS pins are connected to weak pull up or weak pull down devices during and after reset (see [Chapter 4, “Signal Description,”](#) for the eTPU and eMIOS pins that are affected by WKPCFG). For all reset sources except the software external reset, the WKPCFG pin is applied starting at the assertion of the internal reset signal (as indicated by the assertion of $\overline{\text{RSTOUT}}$). If the WKPCFG signal is logic high at this time, pull up devices will be enabled on the eTPU and eMIOS pins. If the WKPCFG signal is logic low at the assertion of the internal reset signal, pull down devices will be enabled on those pins. The value on WKPCFG must be held constant during reset to avoid oscillations on the eTPU and eMIOS pins caused by switching pull up/down states. The final value of WKPCFG is latched 4 clock cycles before the negation of $\overline{\text{RSTOUT}}$. After reset, software may modify the weak pull up/down selection for all I/O pins through the PCRs in the SIU.

Table 3-6. WKPCFG Settings

WKPCFG	Description
0	Weak pull down applied to eTPU and eMIOS pins at reset
1	Weak pull up applied to eTPU and eMIOS pins at reset

Also refer to [Chapter 4, “Signal Description,”](#) for information about the WKPCFG pin.

3.4.3.3 BOOTCFG[0:1] Pins (MCU Configuration)

In addition to specifying the RCHW location, the values latched on the BOOTCFG[0:1] pins at reset are used to initialize the internal flash memory enabled/disabled state, and whether no arbitration or external arbitration of the external bus interface is selected. Additionally, the RCHW can determine either directly or indirectly how the MMU is configured, how the external bus is configured, CAN or eSCI module and pin configuration, Nexus enabling, and password selection.

Also refer to [Chapter 4, “Signal Description,”](#) for information about the BOOTCFG pins.

3.4.3.4 PLLCFG[0:1] Pins

The role of PLLCFG pins in PLL configuration is explained in [Section 11.1.4, “FMPLL Modes of Operation.”](#) Also refer to [Chapter 4, “Signal Description,”](#) for information about the PLLCFG pins.

Table 3-7. PLLCFG[0:1] and RSTCFG in Configuration

RSTCFG	PLLCFG0	PLLCFG1	Clock Mode	MODE	PLLSEL	PLLREF
1	PLLCFG pins ignored		Crystal reference (default)	1	1	1
0	0	0	Bypass Mode	0	0	0
0	0	1	External reference	1	1	0
0	1	0	Crystal reference	1	1	1
0	1	1	1:1 Mode	1	0	0

3.4.3.5 Reset Configuration Half Word

3.4.3.5.1 Reset Configuration Half Word Definition

The RCHW is read from either external memory or internal flash memory. If a valid RCHW is not found, a CAN/SCI boot is initiated. The RCHW is a collection of control bits that specify a minimum MCU configuration after reset and define the desired mode of operation of the BAM program. At reset the RCHW provides a means to locate the boot code, determines if flash memory is programmed or erased, enables or disables the watchdog timer, configures the MMU to boot as either classic PowerPC Book E code or as Freescale VLE code, and if booting externally, sets the bus size. The user should refer to the appropriate register given by the RCHW bit descriptions for a detailed description of each control bit.

NOTE

Do not configure the RCHW to a 32-bit bus size for devices with only a 16-bit data bus.

If booting from internal flash or external memory, the user must insure that the RCHW is the correct value for the desired configuration, and that it is located at the proper location in memory. The boot ID of the RCHW must be read as 0x5A. `BOOT_BLOCK_ADDRESS` is explained in [Section 15.3.2.2.5](#), “Reset Configuration Half Word Read.”

The fields of the RCHW are shown in [Figure 3-3](#).

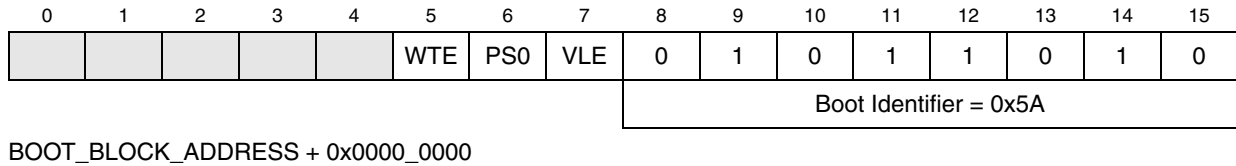


Figure 3-3. RCHW Fields

Table 3-8. Internal Boot RCHW Field Descriptions

Field	Description
0–4	Reserved: These bit values are ignored when the halfword is read. Write to 0 for future compatibility.
5 WTE	<p>Watchdog timer enable. This is used to enable or disable the e200z6 watchdog timer through the BAM program. The configuration of the watchdog timer function is managed through the timer control register (TCR).</p> <p>0 BAM does not write the e200z6 timebase registers (TBU and TBL) nor enable the e200z6 core watchdog timer.</p> <p>1 BAM writes the e200z6 timebase registers (TBU and TBL) to 0x0000_0000_0000_0000 and enables the e200z6 core watchdog timer with a time-out period of 3×2^{17} system clock cycles. (Example: For 8 MHz crystal → 12MHz system clock → 32.7mS time-out. For 20 MHz crystal → 30 MHz system clock → 13.1mS time-out)</p>
6 PS0	<p>Port size. Defines the width of the data bus connected to the memory on $\overline{CS0}$. After system reset, $\overline{CS0}$ is changed to a 16-bit port by the BAM which fetches the RCHW from either 16- or 32-bit external memories. Then the BAM reconfigures the EBI either as a 16-bit bus or a 32-bit bus, according to the settings of this bit.</p> <p>0 32-bit $\overline{CS0}$ port size 1 16-bit $\overline{CS0}$ port size</p> <p>Note: Used only in external boot mode. Do not set the port to 32-bits if the device only has a 16-bit data bus.</p>
7 VLE	<p>VLE Code Indicator. This bit is used to configure the MMU for the boot block to execute as either Classic PowerPC Book E code or as Freescale VLE code.</p> <p>0 = Boot code executes as Classic PowerPC Book E code 1 = Boot code executes as Freescale VLE code</p>
8–15 BOOTID[0:7]	<p>Boot identifier. This field serves two functions. First, it is used to indicate which block in flash memory contains the boot program. Second, it identifies whether the flash memory is programmed or invalid. The value of a valid boot identifier is 0x5A (0b01011010). The BAM program checks the first half word of each flash memory block starting at block 0 until a valid boot identifier is found. If all blocks in the low address space of the internal flash are checked and no valid boot identifier is found, then the internal flash is assumed to be invalid and a CAN/SCI boot is initiated. For an external boot, only block 0 is checked for a valid boot identifier, and if not found, a CAN/SCI boot is initiated.</p>

3.4.3.5.2 Invalid RCHW

If the device is configured for a boot from internal flash, a valid boot ID must be read at the lowest address of one of the six LAS blocks in internal flash memory. If the device is configured for a boot from external memory, a valid boot ID must be read at 0x00_0000 of $\overline{CS0}$. Refer to [Chapter 15, “Boot Assist Module \(BAM\)”](#) for more information.

If a valid RCHW is not found, a serial boot is initiated. A serial boot does not use a RCHW. The watchdog timer is enabled. For serial boot entered from a failed external boot, the port size remains configured as 16

bits wide. For serial boot entered from a failed internal boot, the external bus is never configured and remains in the reset state of GPIO inputs.

3.4.3.5.3 Reset Configuration Half Word Source

The reset configuration half word (RCHW) specifies a minimal MCU configuration after reset. The RCHW also contains bits that control the BAM program flow. See [Section 15.3.2.1.1, “Finding Reset Configuration Half Word”](#) for information on the BAM using the RCHW. The RCHW is read and applied each time the BAM program executes, which is for every power-on, external, or internal reset event. The only exception to this is the software external reset. See [Section 3.4.3.5, “Reset Configuration Half Word,”](#) for detailed descriptions of the bits in the RCHW. The RCHW is read from one of the following locations:

- The lowest address (0x00_0000) of an external memory device, enabled by chip select CS0 using either a 16- or 32-bit data bus
- The lowest address of one of the six low address space (LAS) blocks in the internal flash memory. (2 x 16K; 2 x 48K; 2 x 64K)

At the negation of the $\overline{\text{RSTOUT}}$ pin, the BOOTCFG field in the RSR has been updated. If BOOTCFG0 is asserted, then the BAM program reads the RCHW from address 0x0000_0000 in the external memory connected to $\overline{\text{CS0}}$ (the BAM first configures the MMU and $\overline{\text{CS0}}$ such that address 0x0000_0000 is translated to 0x2000_0000 and then directed to $\overline{\text{CS0}}$). When BOOTCFG0 is asserted, BOOTCFG1 determines whether external arbitration must be enabled to fetch the RCHW.

If BOOTCFG0 and BOOTCFG1 are negated at the negation of the $\overline{\text{RSTOUT}}$ pin, then the BAM program attempts to read the RCHW from the first address of each of the 6 blocks in the low address space (LAS) of internal flash. [Table 3-9](#) shows the LAS addresses.

Table 3-9. LAS Block Memory Addresses

Block	Address
0	0x0000_0000
1	0x0000_4000
2	0x0001_0000
3	0x0001_C000
4	0x0002_0000
5	0x0003_0000

If the RCHW stored in either internal or external flash is invalid (boot identifier field of RCHW is not 0x5A), or if BOOTCFG0 is negated and BOOTCFG1 is asserted at the negation of the $\overline{\text{RSTOUT}}$ pin, then RCHW is not applicable, and serial boot mode is performed. [Table 3-10](#) summarizes the RCHW location options.


Table 3-10. Reset Configuration Half Word Sources

$\overline{\text{RSTCFG}}$	BOOTCFG0	BOOTCFG1	Boot Identifier Field (RCHW)	Boot Mode	Configuration Word Source
1	—	—	Valid	Internal	The lowest address of one of the six low address spaces (LAS) in internal flash memory.
			Invalid	Serial	Not applicable
0	0	0	Valid	Internal	The lowest address of one of the six low address spaces (LAS) in internal flash memory.
			Invalid	Serial	Not applicable
0	0	1	—	Serial	Not applicable
0	1	0	Valid	External Boot, No Arbitration	The lowest address (0x00_0000) of an external memory device, enabled by chip select CS0 using either 16- or 32-bit data bus
			Invalid	Serial	Not applicable
0	1	1	External Arbitration Not Supported		

3.4.4 Reset Configuration Timing

The timing diagram in [Figure 3-4](#) shows the sampling of the BOOTCFG[0:1], WKPCFG, and PLLCFG[0:1] pins for a power-on reset. The timing diagram is also valid for internal/external resets assuming that V_{DD} , V_{DDSYN} , and V_{DDEH6} are within valid operating ranges. The values of the PLLCFG[0:1] pins are latched at the negation of the $\overline{\text{RSTOUT}}$ pin, if the $\overline{\text{RSTCFG}}$ pin is asserted at the negation of $\overline{\text{RSTOUT}}$. The value of the WKPCFG signal is applied at the assertion of the internal reset signal (as indicated by the assertion of $\overline{\text{RSTOUT}}$). The values of the WKPCFG and BOOTCFG[0:1] pins are latched 4 clock cycles before the negation of $\overline{\text{RSTOUT}}$ and stored in the reset status register (SIU_RSR). BOOTCFG[0:1] are latched only if $\overline{\text{RSTCFG}}$ is asserted. WKPCFG is not dependent on $\overline{\text{RSTCFG}}$.

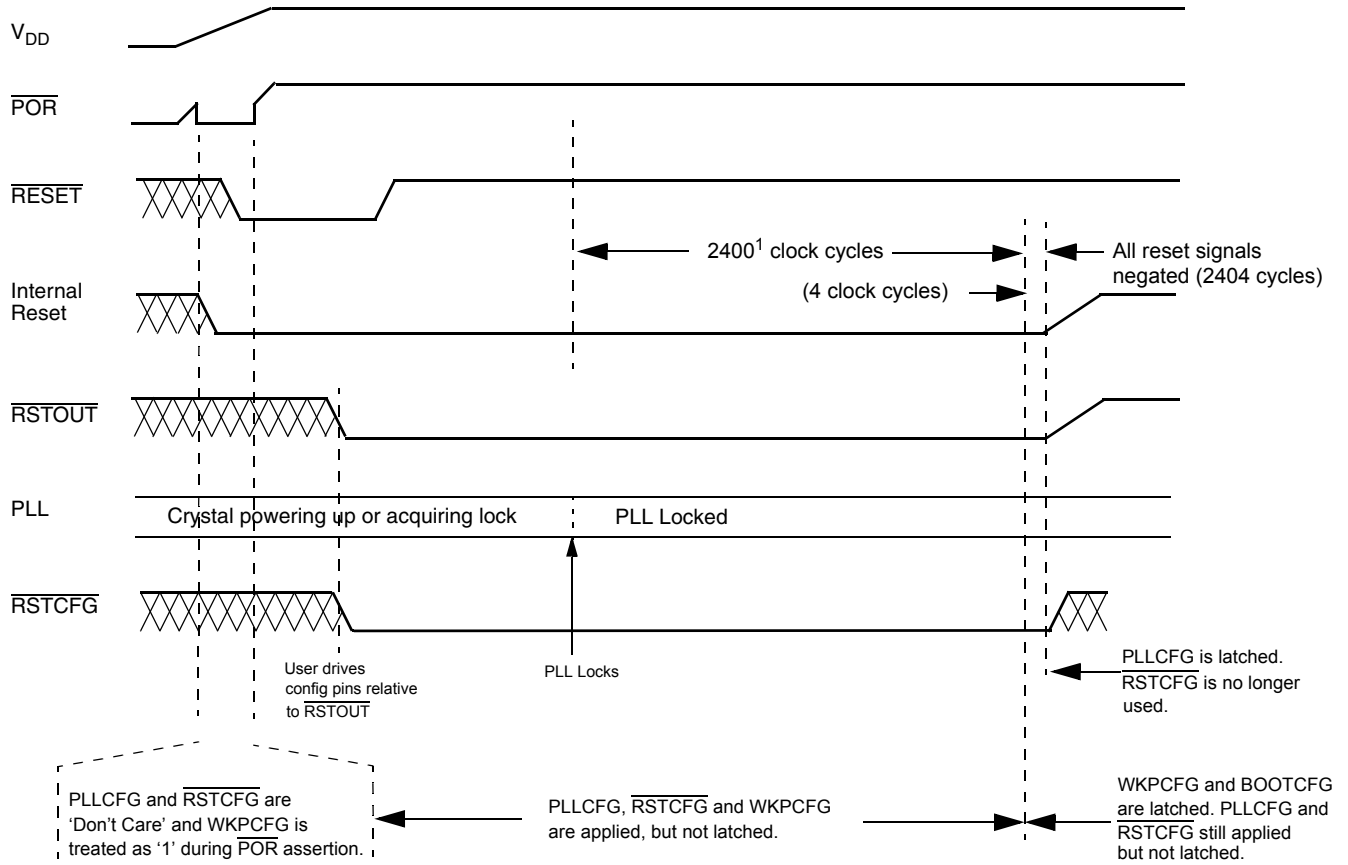Reset



¹ This clock count is dependent on the configuration of the FMPLL (See Section 4.2.2, "RSTOUT"). If the FMPLL is configured for 1:1 (dual controller) operation or for bypass mode, this clock count is 16000.

Figure 3-4. Reset Configuration Timing

3.4.5 Reset Flow


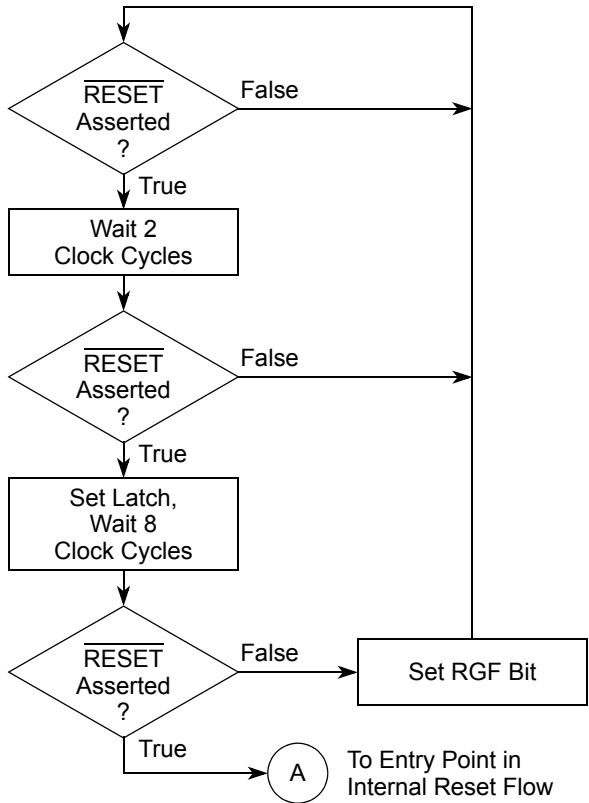


Figure 3-5. External Reset Flow Diagram

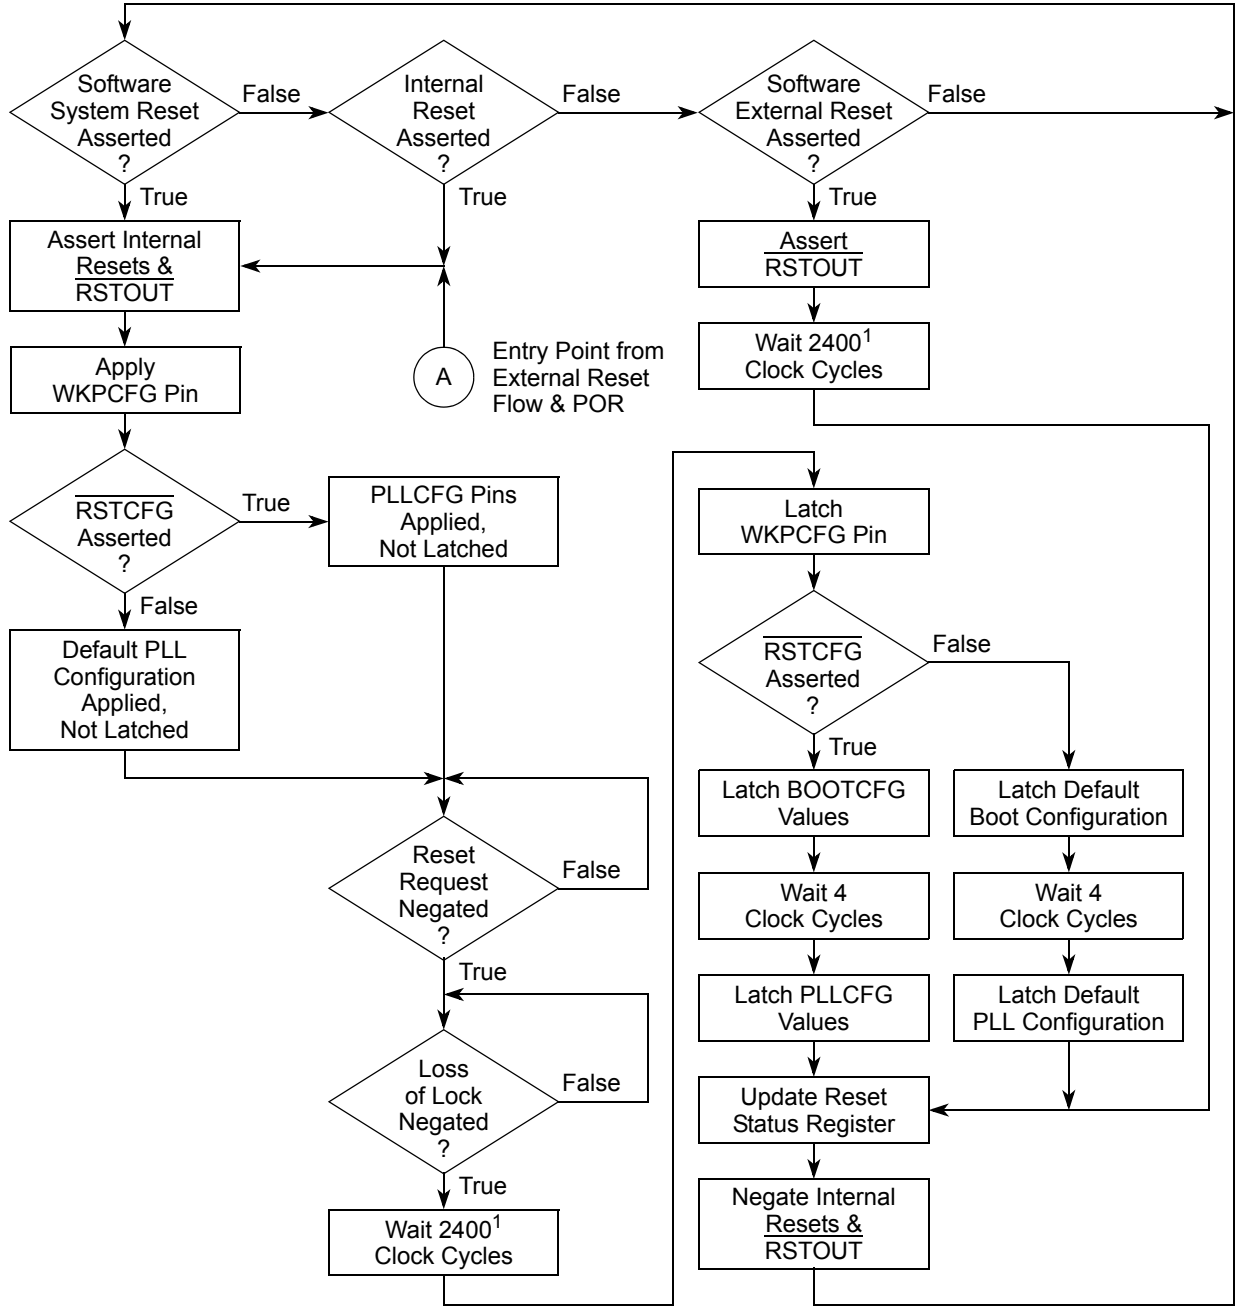

NOTES:
¹ The clock count depends on the configuration of the FMPLL (refer to Section 5.3.1.2, 'RSTOUT').
 If the FMPLL is configured in 1:1 (dual controller) or bypass mode, the clock count is 16000.

Figure 3-6. Internal Reset Flow Diagram

3.5 Revision History

Table 3-11. Revision History Table

Rev. No.	Date	Sections	Substantial Change(s)
Rev. 1	1/19/2007	Throughout	01/07: Public release of document.

Chapter 4

Signal Description

This chapter describes the external device signals, including a table of signal properties, detailed descriptions of the available signals, and the I/O pin power/ground segmentation.

4.1 Block Diagram

To provide an extensive feature set as well as compatibility between the MPC5500 family of devices, the majority of balls on the packages multiplex signal functions to a single pin. [Figure 4-1](#) shows only the signals that are available on the device. Signal functions that are not available on the device are not shown in the diagram. Primary signal functions that are not available on the device but are used as pin labels in the ball grid array (BGA) map are listed in [Table 4-1](#).

Signal Description

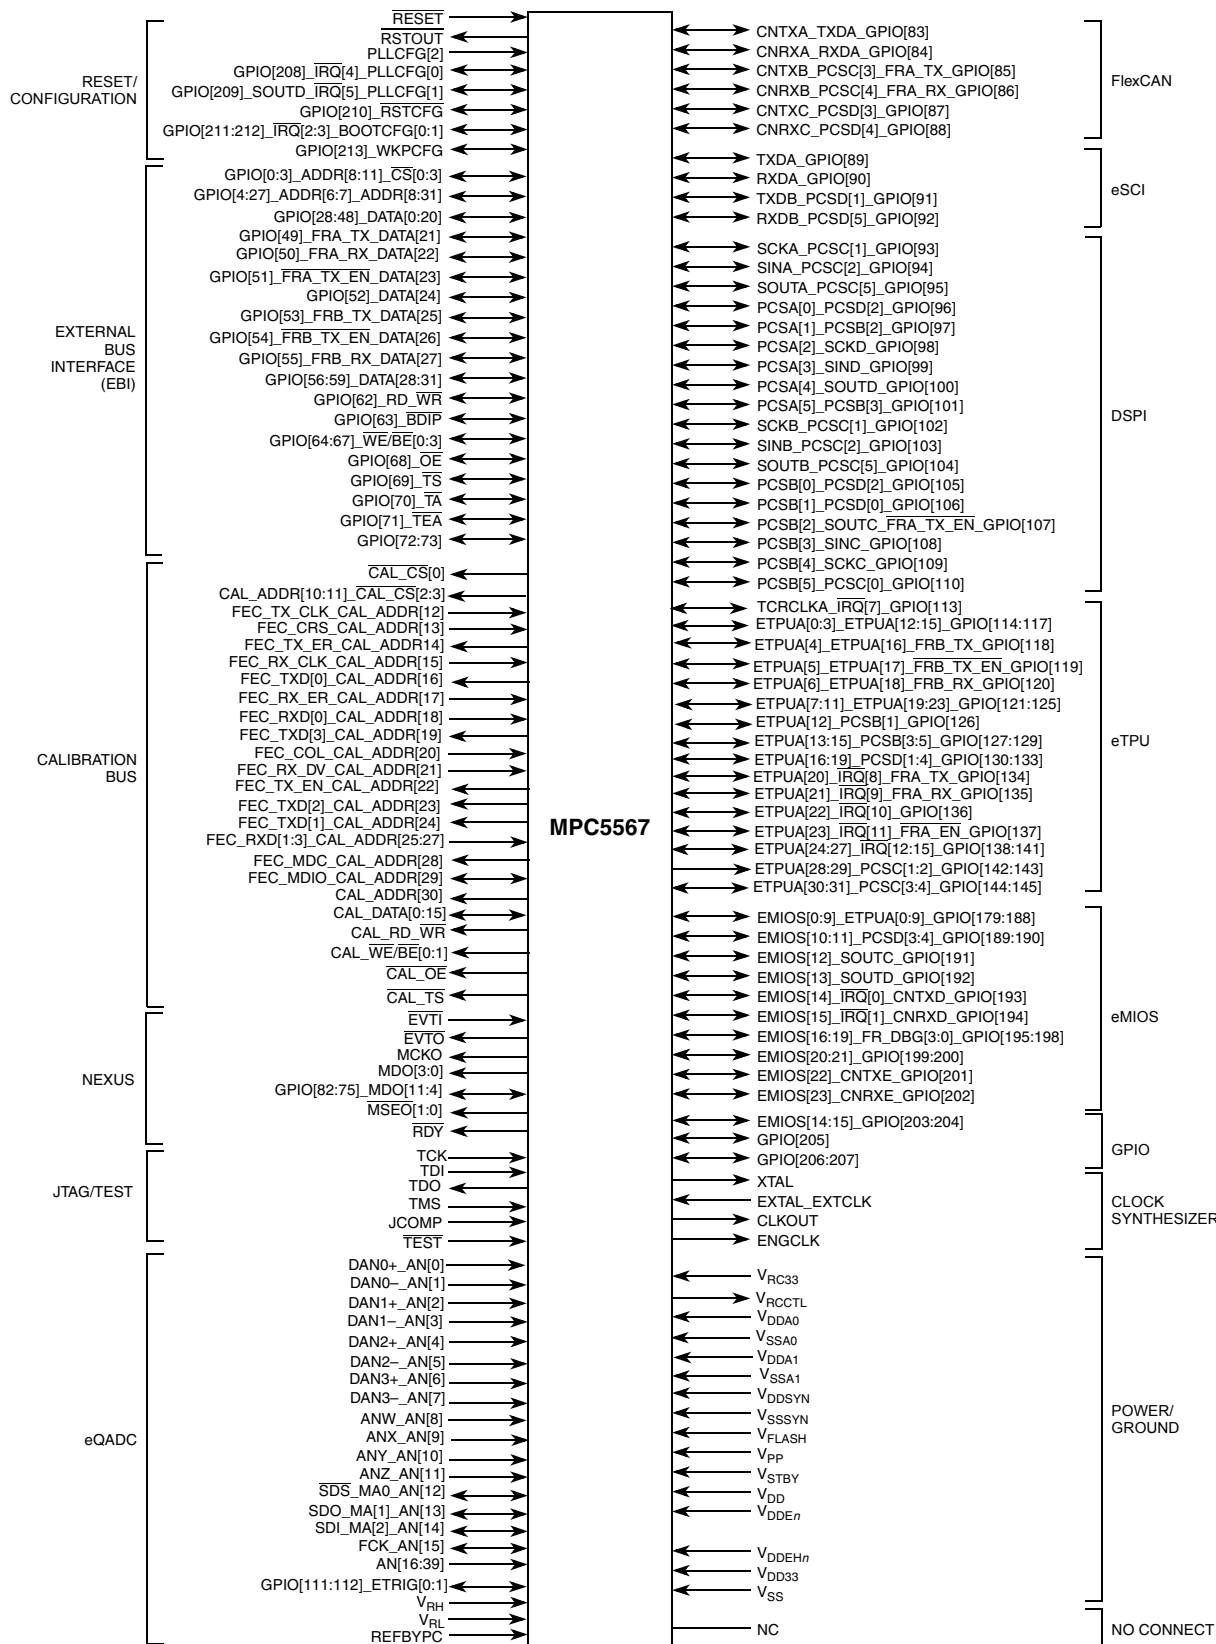


Figure 4-1. MPC5567 Signals

4.2 External Signal Descriptions

This section summarizes the external signal functions, their static electrical characteristics, and pad configuration settings for this device. The signal properties and their electrical characteristics are set in the system integration unit (SIU) pad configuration (PCR) registers.

Signal functions are multiplexed to each ball on the BGA in a function hierarchy: primary, main primary, alternate, second alternate, and general-purpose input/output (I/O). For example, in the signal PCSA[3]_SIND_GPIO[99], the primary signal function is PCSA[3], the first alternate signal function is SIND, and the GPIO function is a generic general-purpose I/O signal. Multiplexing signal functions allows for more flexibility when configuring the device, as well as providing compatibility with other devices in the MPC5500 product family.

The primary signal function name is used in the ball grid array (BGA) map to identify the location of the ball; however, the primary signal function is not always valid for all devices. As shown in Figure 4-2, when the primary signal function is not available on the device, a dash appears in the following signal table columns: signal functions, P/A/G, and I/O type.

No primary function available

Table 4-1. Signal Properties

Signal Names	Signal Functions	P/A/G	I/O Type	Voltage	Pad Type	S
						During Reset
PCSA[3]_ ²¹ SIND_ GPIO[99]	— DSPI_D Data Input GPIO	— A G	— I I/O	VDDEH6	MH	— / Up

Primary functions are listed first
Secondary functions are alternative functions
 GPIO functions are general functions listed last

Table footnote

Figure 4-2. Primary Function Not Available on Device

The entries in the P/A/G column designate the position in the signal function hierarchy for multiplexed functions. These symbols correspond to binary values for the pin assignment (PA) field in the SIU_PCR registers that determine the active signal function. The PA field is from 1- to 3-bits wide, depending on the PCR register. Figure 4-3 explains the symbol definitions used in the P/A/G column for Table 4-1.

P/A/G Symbol	PA Function Type	PA Bits			# of fs per bit
		3	4	5	
G	General-purpose I/O	0	0	0	1-bit 2 fs
P	Primary	0	0	1	2-bits 3 fs
A	Alternate	0	1	0	
MP	Main	0	1	1	3-bits > 3 fs
A2	Second alternate	1	0	0	
All other values reserved for future use.		n	n	n	

Bit 3 in the SUI_PCR registers is bit 0 in the PA field.
 Bit 5 in the SUI_PCR registers is bit 2 in the PA field.

PA[0:2]

The main function is used for device compatibility.

Figure 4-3. Understanding the P/A/G Column Entries

The following table lists the valid signal function and their properties for this device:

Table 4-1. MPC5567 Signal Properties

Signal Names ¹	Signal Functions ²	P/ A/ G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
Reset / Configuration Signals											
RESET	External Reset Input	P	I	V _{DDEH6}	SH	RESET / Up	RESET / Up	AA27	W26	R22	L16
RSTOUT	External Reset Output	P	O	V _{DDEH6}	SH	RSTOUT / Low	RSTOUT / High	W26	V25	P21	K15
PLLCFG[0]_ IRQ[4]_ GPIO[208]	PLLMRFM Mode Selection External Interrupt Request GPIO	P A G	I I I/O	V _{DDEH6}	MH	PLLCFG / Up	- / Up	AB27	AB25	V21	M14
PLLCFG[1]_ IRQ[5]_ SOUTD_ GPIO[209]	PLLMRFM Reference Selection External Interrupt Request DSPI D Data Output GPIO	P A A2 G	I I O I/O	V _{DDEH6}	MH	PLLCFG / Up	- / Up	AA26	AA24	U20	N15
PLLCFG[2] ⁹	PLLMRFM Configuration Input 2	P	I	V _{DDEH6}	MH	PLLCFG / -	- / -	V27	Y25	T21	— ⁹
RSTCFG_ GPIO[210]	Reset Configuration Input GPIO	P G	I I/O	V _{DDEH6}	SH	RSTCFG / Up	- / Up	Y28	V26	P22	—
BOOTCFG[0]_ IRQ[2]_ GPIO[211]	Boot Configuration Input External Interrupt Request GPIO	P A G	I I I/O	V _{DDEH6}	SH	BOOTCFG / Down	- / Down	AB26	AA25	U21	—
BOOTCFG[1]_ IRQ[3]_ GPIO[212]	Boot Configuration Input External Interrupt Request GPIO	P A G	I I I/O	V _{DDEH6}	SH	BOOTCFG / Down	- / Down	AB24	Y24	T20	M15
WKPCFG_ GPIO[213]	Weak Pull Configuration Input GPIO	P G	I I/O	V _{DDEH6}	SH	WKPCFG / Up	- / Up	AA24	Y23	R19	L15
External Bus Interface (EBI) ¹⁰ Signals											
CS[0]_ ADDR[8]_ ^{11, 12} GPIO[0]	External Chip Selects External Address Bus ^{11, 12} GPIO	P A G	O I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	T7	P4	M4	R1
CS[1:3]_ ADDR[9:11]_ ^{11, 12} GPIO[1:3]	External Chip Selects External Address Bus ^{11, 12} GPIO	P A G	O I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	R5, P5, R7	P3, P2, P1	M3, N2, N1	—
ADDR[8:11]_ ^{11, 12} GPIO[4:7]	External Address Bus ^{11, 12} GPIO	P G	I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	Y5, Y3, AA3, AB3	V4, W3:4, Y3	—	—

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
ADDR[12:29] __ ¹² GPIO[8:25]	External Address Bus ¹² GPIO	P G	I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	Y7, AC3, AC5, AB5, T3, T2, T1, V2, W1:2, Y1:2, AA2, AB2, AC2, AD2, AD3, AD1	AA4, AA3, AB4, AB3, U1, V2, V1, W2, W1, Y2, Y1, AA2, AA1, AB2, AC1:2, AD1, AE1	T3, U3:4, V3, P1:2, R1:2, T1:2, U1:2, V1:2, W1, Y2:1, AA1	—
ADDR[30:31] __ ¹² ADDR[6:7] __ ¹⁴ GPIO[26:27]	External Address Bus ¹² External Address Bus ¹⁴ GPIO	P A G	I/O I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	AF2, AE3	AD2, AC3	W3, V4	—
DATA[0:15] __ GPIO[28:43]	External Data Bus ¹² GPIO	P G	I/O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AG11, AF12, AG13, AH13, AG14, AH15, AG15, AH16, AB12, AF10, AD13, AF11, AB15, AD12, AD15, AF13	AE8, AF9, AE9, AF10, AE10, AF12, AE11, AF13, AC11, AD11, AC12, AD12, AC14, AD13, AC15, AD14	AB4, AA5, AB5:7, AA8, AB8, AA9, Y6:8, W9:10, Y10, W11, Y11	—
DATA[16:20] __ GPIO[44:48]	External Data Bus ¹² GPIO	P G	I/O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AF5, AG5, AH5, AG6:7	AF3, AE4, AF4, AE5, AF6	—	—
DATA[21] __ FRA_TX_ GPIO[49]	External Data Bus ¹² FlexRay A Transmit Data GPIO	P A G	I/O O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AG8	AE6	—	—
DATA[22] __ FRA_RX_ GPIO[50]	External Data Bus ¹² FlexRay A Receive Data GPIO	P A G	I/O I I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AG9	AF7	—	—
DATA[23] __ FRA_TX_EN_ GPIO[51]	External Data Bus ¹² FlexRay A Transmit Enable GPIO	P A G	I/O O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AH9	AE7	—	—
DATA[24] __ GPIO[52]	External Data Bus ¹² GPIO	P G	I/O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AD7	AD5	—	—

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/ A/ G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
DATA[25]_ FRB_TX_ GPIO[53]	External Data Bus ¹² FlexRay B Transmit Data GPIO	P A G	I/O O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AF6	AD6	—	—
DATA[26]_ FRB_TX_EN_ GPIO[54]	External Data Bus ¹² FlexRay B Transmit Enable GPIO	P A G	I/O O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AB9	AC6	—	—
DATA[27]_ FRB_RX_ GPIO[55]	External Data Bus ¹² FlexRay B Receive Data GPIO	P A G	I/O I I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AF7	AD7	—	—
DATA[28]_ GPIO[56]	External Data Bus ¹² GPIO	P G	I/O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AD8	AC7	—	—
DATA[29:31]_ GPIO[57:59]	External Data Bus ¹² GPIO	P G	I/O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AF8, AD10:11	AD8, AC9:10	—	—
RD_W _R _ GPIO[62]	External Read/Write GPIO	P G	I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	U3	T3	P3	—
BDIP_ GPIO[63]	External Burst Data In Progress GPIO	P G	O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	N1	N1	M1	—
WE/BE[0:1]_ GPIO[64:65]	External Write/Byte Enable ¹⁵ GPIO	P G	O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	U5, T5	R4, R3	N4, N3	—
WE/BE[2:3]_ GPIO[66:67]	External Write/Byte Enable ¹⁵ GPIO	P G	O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	N3, P1	R2, R1	—	—
OE_ GPIO[68]	External Output Enable GPIO	P G	O I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AF16	AE12	AB9	T3
T _S _ GPIO[69]	External Transfer Start GPIO	P G	I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	W3	V3	T4	—
T _A _ GPIO[70]	External Transfer Acknowledge GPIO	P G	I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	V3	U3	R4	—
T _{EA} _ GPIO[71]	External Transfer Error Acknowledge GPIO	P G	I/O I/O	V _{DDE2}	F	- / Up	- / Up ¹³	N2	N2	—	—
B _R ¹⁶ GPIO[72]	GPIO —	— G	— I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AF17	AE13	—	—
B _G ¹⁵ GPIO[73]	GPIO —	— G	— I/O	V _{DDE3}	F	- / Up	- / Up ¹³	AG16	AE14	—	—
FEC¹⁷ Calibration Bus Signals											
CAL_CS[0]	Calibration Chip Select	P	O	V _{DDE12}	F	- / Up	- / Up	AB11		—	—
CAL_CS[2]_ CAL_ADDR[10]	Calibration Chip Select Calibration Address	P A	O O	V _{DDE12}	F	- / Up	- / Up	AA10	—	—	—
CAL_CS[3]_ CAL_ADDR[11]	Calibration Chip Select Calibration Address	P A	O O	V _{DDE12}	F	- / Up	- / Up	AB10	—	—	—
CAL_ADDR[12]_ FEC_TX_CLK ¹⁷	Calibration Address Bus Ethernet Transmit Clock	P A	O I	V _{DDE12}	F	- / Up	- / Up	AA14	A19	—	—

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
CAL_ADDR[13]_FEC_CRS ¹⁷	Calibration Address Bus Ethernet Carrier Detect	P A	O I	V _{DDE12}	F	- / Up	- / Up	R8	D18	—	—
CAL_ADDR[14]_FEC_TX_ER ¹⁷	Calibration Address Bus Ethernet Transmit Error	P A	O O	V _{DDE12}	F	- / Up	- / Up	AA15	A20	—	—
CAL_ADDR[15]_FEC_RX_CLK ¹⁷	Calibration Address Bus Ethernet Receive Clock	P A	O I	V _{DDE12}	F	- / Up	- / Up	W7	J26	—	—
CAL_ADDR[16]_FEC_TXD[0] ¹⁷	Calibration Address Bus Ethernet Transmit Data Bus	P A	O O	V _{DDE12}	F	- / Up	- / Up	P7	B20	—	—
CAL_ADDR[17]_FEC_RX_ER ¹⁷	Calibration Address Bus Ethernet Receive Error	P A	O I	V _{DDE12}	F	- / Up	- / Up	P8	G26	—	—
CAL_ADDR[18]_FEC_RXD[0] ¹⁷	Calibration Address Bus Ethernet Receive Data Bus	P A	O I	V _{DDE12}	F	- / Up	- / Up	U7	K26	—	—
CAL_ADDR[19]_FEC_TXD[3] ¹⁷	Calibration Address Bus Ethernet Transmit Data Bus	P A	O O	V _{DDE12}	F	- / Up	- / Up	N7	C19	—	—
CAL_ADDR[20]_FEC_COL ¹⁷	Calibration Address Bus Ethernet Collision Detect	P A	O I	V _{DDE12}	F	- / Up	- / Up	M8	D17	—	—
CAL_ADDR[21]_FEC_RX_DV ¹⁷	Calibration Address Bus Ethernet Receive Data Valid	P A	O I	V _{DDE12}	F	- / Up	- / Up	M7	H25	—	—
CAL_ADDR[22]_FEC_TX_EN ¹⁷	Calibration Address Bus Ethernet Transmit Enable	P A	O O	V _{DDE12}	F	- / Up	- / Up	V7	C18	—	—
CAL_ADDR[23]_FEC_TXD[2] ¹⁷	Calibration Address Bus Ethernet Transmit Data Bus	P A	O O	V _{DDE12}	F	- / Up	- / Up	L8	B18	—	—
CAL_ADDR[24]_FEC_TXD[1] ¹⁷	Calibration Address Bus Ethernet Transmit Data Bus	P A	O O	V _{DDE12}	F	- / Up	- / Up	T8	B19	—	—
CAL_ADDR[25]_FEC_RXD[1] ¹⁷	Calibration Address Bus Ethernet Receive Data Bus	P A	O I	V _{DDE12}	F	- / Up	- / Up	K8	K25	—	—
CAL_ADDR[26]_FEC_RXD[2] ¹⁷	Calibration Address Bus Ethernet Receive Data Bus	P A	O I	V _{DDE12}	F	- / Up	- / Up	L7	K24	—	—
CAL_ADDR[27]_FEC_RXD[3] ¹⁷	Calibration Address Bus Ethernet Receive Data Bus	P A	O I	V _{DDE12}	F	- / Up	- / Up	U8	J25	—	—
CAL_ADDR[28]_FEC_MDC ¹⁷	Calibration Address Bus Ethernet Management Clock	P A	O O	V _{DDE12}	F	- / Up	- / Up	V8	J24	—	—
CAL_ADDR[29]_FEC_MDIO ¹⁷	Calibration Address Bus Ethernet Management Data I/O	P A	O I/O	V _{DDE12}	F	- / Up	- / Up	AB13	L23	—	—
CAL_ADDR[30]	Calibration Address Bus	P	O	V _{DDE12}	F	- / Up	- / Up	AB14	—	—	—
CAL_DATA[0:7]	Calibration Data Bus	P	I/O	V _{DDE12}	F	- / Up	- / Up	W21, Y22, V21, W22, U21:22, T21:22	—	—	—

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
CAL_DATA[8:15]	Calibration Data Bus	P	I/O	V _{DDE12}	F	- / Up	- / Up	AA17, AB16, AA18, AB17, AA19, AB19, AA20, AB20	—	—	—
CAL_RD_ \overline{WR}	Calibration Read/Write	P	O	V _{DDE12}	F	- / Up	- / Up	W8	—	—	—
CAL_ $\overline{WE/BE}$ [0:1]	Calibration Write/Byte Enable	P	O	V _{DDE12}	F	- / Up	- / Up	Y8, AA7	—	—	—
CAL_OE	Calibration Output Enable	P	O	V _{DDE12}	F	- / Up	- / Up	AD16	—	—	—
CAL_TS	Calibration Transfer Start	P	O	V _{DDE12}	F	- / Up	- / Up	AA11	—	—	—
NEXUS Signals											
\overline{EVTI}	Nexus Event In	P	I	V _{DDE7}	F	I / Up	\overline{EVTI} / Up	G26	F25	F21	E15
\overline{EVTO}	Nexus Event Out	P	O	V _{DDE7}	F	O / Low	\overline{EVTO} / High	G27	F26	F22	D15
MCKO	Nexus Message Clock Out	P	O	V _{DDE7}	F	O / Low	MCKO / Enabled ¹⁸	H26	G24	G20	F15
MDO[0] ¹⁹	Nexus Message Data Out	P	O	V _{DDE7}	F	O / High	MDO / Low	C25	B24	B20	A14
MDO[3:1]	Nexus Message Data Out	P	O	V _{DDE7}	F	O / Low	MDO / Low	C23, B21, C24	C22, D21, C23	D18, C18:19	B13, A13, B14
MDO[11:4] _{GPIO} ²⁰	Nexus Message Data Out GPIO	P G	O I/O	V _{DDE7}	F	O / Low	- / Down	A23, C22, A20, A24, B23, B20, C20, B24	A22, B21, C20, A23, B22, C21, D20, B23	A17:18, B17, A19, B18, D17, C17, B19	—
\overline{MSEO} [1:0]	Nexus Message Start/End Out	P	O	V _{DDE7}	F	O / High	\overline{MSEO} / High	G24, H24	G23, F23	G22, G21	E16, C15
\overline{RDY}	Nexus Ready Output	P	O	V _{DDE7}	F	O / High	\overline{RDY} / High	J24	H23	G19	—
JTAG / TEST Signals											
TCK	JTAG Test Clock Input	P	I	V _{DDE7}	F	TCK / Down	TCK / Down	E27	D25	D21	C16
TDI	JTAG Test Data Input	P	I	V _{DDE7}	F	TDI / Up	TDI / Up	E28	D26	D22	E14
TDO	JTAG Test Data Output	P	O	V _{DDE7}	F	TDO / Up ²¹	TDO / Up	F27	E25	E21	F14
TMS	JTAG Test Mode Select Input	P	I	V _{DDE7}	F	TMS / Up	TMS / Up	E26	E24	E20	D14
JCOMP	JTAG TAP Controller Enable	P	I	V _{DDE7}	F	JCOMP / Down	JCOMP / Down	F26	F24	F20	F16
\overline{TEST}	Test Mode Select	P	I	V _{DDE7}	F	\overline{TEST} / Up	\overline{TEST} / Up	F28	E26	E22	D16

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
FlexCAN Signals											
CNTXA_ TXDA_ GPIO[83]	FlexCAN A Transmit eSCI A Transmit GPIO	P A G	O O I/O	V _{DDEH4}	SH	I / Up	- / Up ²²	AF22	AD21	Y17	P12
CNRXA_ RXDA_ GPIO[84]	FlexCAN A Receive eSCI A Receive GPIO	P A G	I I I/O	V _{DDEH4}	SH	- / Up	- / Up ²²	AG22	AE22	AA18	R12
CNTXB_ PCSC[3]_ FRA_TX_ GPIO[85]	FlexCAN B Transmit DSPI C Peripheral Chip Select FlexRay A Transmit Data GPIO	P A A2 G	O O O I/O	V _{DDEH4}	MH	- / Up	- / Up	AG23	AF22	AB18	T12
CNRXB_ PCSC[4]_ FRA_RX_ GPIO[86]	FlexCAN B Receive DSPI C Peripheral Chip Select FlexRay A Receive Data GPIO	P A A2 G	I O I I/O	V _{DDEH4}	MH	- / Up	- / Up	AH23	AF23	AB19	R13
CNTXC_ PCSD[3]_ GPIO[87]	FlexCAN C Transmit DSPI D Peripheral Chip Select GPIO	P A G	O O I/O	V _{DDEH6}	MH	- / Up	- / Up	W24	V23	P19	K13
CNRXC_ PCSD[4]_ GPIO[88]	FlexCAN C Receive DSPI D Peripheral Chip Select GPIO	P A G	I O I/O	V _{DDEH6}	MH	- / Up	- / Up	Y26	W24	R20	L14
eSCI Signals											
TXDA_ GPIO[89]	eSCI A Transmit Data GPIO	P G	O I/O	V _{DDEH6}	SH	- / Up	- / Up	V24	U24	N20	J14
RXDA_ GPIO[90]	eSCI A Receive Data GPIO	P G	I I/O	V _{DDEH6}	SH	- / Up	- / Up	U26	V24	P20	K14
TXDB_ PCSD[1]_ GPIO[91]	eSCI B Transmit Data DSPI D Peripheral Chip Select GPIO	P A G	O O I/O	V _{DDEH6}	MH	- / Up	- / Up	Y27	W25	R21	L13
RXDB_ PCSD[5]_ GPIO[92]	eSCI B Receive Data DSPI D Peripheral Chip Select GPIO	P A G	I O I/O	V _{DDEH6}	MH	- / Up	- / Up	Y24	W23	T19	M13
DSPI Signals											
SCKA_ ²³ PCSC[1]_ GPIO[93]	— DSPI C Peripheral Chip Select GPIO	— A G	— O I/O	V _{DDEH6}	MH	- / Up	- / Up	U27	R26	L22	—
SINA_ ²³ PCSC[2]_ GPIO[94]	— DSPI C Peripheral Chip Select GPIO	— A G	— O I/O	V _{DDEH6}	MH	- / Up	- / Up	P27	R25	L21	—
SOUTA_ ²³ PCSC[5]_ GPIO[95]	— DSPI C Peripheral Chip Select GPIO	— A G	— O I/O	V _{DDEH6}	MH	- / Up	- / Up	P24	R24	L20	—
PCSA[0]_ ²³ PCSD[2]_ GPIO[96]	— DSPI D Peripheral Chip Select GPIO	— A G	— O I/O	V _{DDEH6}	MH	- / Up	- / Up	R24	T24	M20	—

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/ A/ G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
PCSA[1]_ ²³ PCSB[2]_ GPIO[97]	— DSPI B Peripheral Chip Select GPIO	— A G	— O I/O	V _{DDEH6}	MH	– / Up	– / Up	T24	T23	M19	—
PCSA[2]_ ²³ SCKD_ GPIO[98]	— DSPI D Clock GPIO	— A G	— I/O I/O	V _{DDEH6}	MH	– / Up	– / Up	N26	T25	M21	J15
PCSA[3]_ ²³ SIND_ GPIO[99]	— DSPI D Data Input GPIO	— A G	— I I/O	V _{DDEH6}	MH	– / Up	– / Up	N24	P23	K19	H13
PCSA[4]_ ²³ SOUTD_ GPIO[100]	— DSPI D Data Output GPIO	— A G	— O I/O	V _{DDEH6}	MH	– / Up	– / Up	U24	U23	N19	—
PCSA[5]_ ²³ PCSB[3]_ GPIO[101]	— DSPI B Peripheral Chip Select GPIO	— A G	— O I/O	V _{DDEH6}	MH	– / Up	– / Up	T26	U25	N21	—
SCKB_ ²⁴ PCSC[1]_ GPIO[102]	DSPI B Clock DSPI C Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH10} ²⁴	MH	– / Up	– / Up	T27	P25	K21	J16
SINB_ ²⁴ PCSC[2]_ GPIO[103]	DSPI B Data Input DSPI C Peripheral Chip Select GPIO	P A G	I O I/O	V _{DDEH10}	MH	– / Up	– / Up	P28	M26	H22	G15
SOUTB_ ²⁴ PCSC[5]_ GPIO[104]	DSPI B Data Output DSPI C Peripheral Chip Select GPIO	P A G	O O I/O	V _{DDEH10}	MH	– / Up	– / Up	N28	N23	J19	G13
PCSB[0]_ ²⁴ PCSD[2]_ GPIO[105]	DSPI B Peripheral Chip Select DSPI D Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH10}	MH	– / Up	– / Up	R27	N25	J21	G16
PCSB[1]_ ²⁴ PCSD[0]_ GPIO[106]	DSPI B Peripheral Chip Select DSPI D Peripheral Chip Select GPIO	P A G	O I/O I/O	V _{DDEH10}	MH	– / Up	– / Up	R28	N26	J22	H16
PCSB[2]_ ²⁴ SOUTC_ FRA_TX_EN_ GPIO[107]	DSPI B Peripheral Chip Select DSPI C Data Output FlexRay A Transmit Enable GPIO	P A A2 G	O O O I/O	V _{DDEH10}	MH	– / Up	– / Up	T28	P26	K22	H15
PCSB[3]_ ²⁴ SINC_ GPIO[108]	DSPI B Peripheral Chip Select DSPI C Data Input GPIO	P A G	O I I/O	V _{DDEH6}	MH	– / Up	– / Up	M27	N24	J20	G14
PCSB[4]_ ²⁴ SCKC_ GPIO[109]	DSPI B Peripheral Chip Select DSPI C Clock GPIO	P A G	O I/O I/O	V _{DDEH6}	MH	– / Up	– / Up	N27	P24	K20	H14
PCSB[5]_ ²⁴ PCSC[0]_ GPIO[110]	DSPI B Peripheral Chip Select DSPI C Peripheral Chip Select GPIO	P A G	O I/O I/O	V _{DDEH6}	MH	– / Up	– / Up	M26	R23	L19	J13

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
eQADC Signals											
AN[0]_ DAN0+	Single-Ended Analog Input Positive Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[0]/-	C9	B7	B8	B5
AN[1]_ DAN0-	Single-Ended Analog Input Negative Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[1]/-	B8	A7	A8	A6
AN[2]_ DAN1+	Single-Ended Analog Input Positive Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[2]/-	G12	D9	D10	D6
AN[3]_ DAN1-	Single-Ended Analog Input Negative Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[3]/-	E10	C8	C9	C7
AN[4]_ DAN2+	Single-Ended Analog Input Positive Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[4]/-	C10	B8	B9	B6
AN[5]_ DAN2-	Single-Ended Analog Input Negative Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[5]/-	B9	A8	A9	A7
AN[6]_ DAN3+	Single-Ended Analog Input Positive Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[6]/-	G13	D10	D11	D7
AN[7]_ DAN3-	Single-Ended Analog Input Negative Terminal Differential Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[7]/-	E11	C9	C10	C8
AN[8]_ ANW	Single-Ended Analog Input External Multiplexed Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[8]/-	E7	C4	C5	—
AN[9]_ ANX	Single-Ended Analog Input External Multiplexed Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[9]/-	C4	D6	D7	A2
AN[10]_ ANY	Single-Ended Analog Input External Multiplexed Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[10]/-	E6	D7	D8	—
AN[11]_ ANZ	Single-Ended Analog Input External Multiplexed Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[11]/-	B6	A4	A5	A3
AN[12]_ MA[0]_ SDS	Single-Ended Analog Input Mux Address eQADC Serial Data Strobe	MP ²⁶ A G ²⁷	I O O	V _{DDEH9}	MHA ²⁸	I/-	AN[12]/-	H15	D15	A16	A12
AN[13]_ MA[1]_ SDO	Single-Ended Analog Input Mux Address eQADC Serial Data Out	MP ²⁶ A G ²⁷	I O O	V _{DDEH9}	MHA ²⁸	I/-	AN[13]/-	G15	C15	B16	B12
AN[14]_ MA[2]_ SDI	Single-Ended Analog Input Mux Address eQADC Serial Data In	MP ²⁶ A G ²⁷	I O I	V _{DDEH9}	MHA ²⁸	I/-	AN[14]/-	E16	B15	C16	C12
AN[15]_ FCK	Single-Ended Analog Input eQADC Free Running Clock	MP ²⁶ G ²⁷	I O	V _{DDEH9}	MHA ²⁸	I/-	AN[15]/-	C16	A15	D16	C13
AN[16:18]	Single-Ended Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[16:18]/-	B7, E8, H12	A6, C5, D8	B7, C6, D9	C6, C4, D5
AN[19:20]	Single-Ended Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[19:20]/-	C7:8	B5:6	B6, C7	—
AN[21]	Single-Ended Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[21]/-	E9	C7	C8	B4

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
AN[22:25]	Single-Ended Analog Input	P	I	V _{DDA0} ²⁵	A	I/-	AN[22:25]/-	C11, B11, H13, E12	B10, A10, D11, C11	C11, B11, D12, C12	B8, C9, D8, B9
AN[26]	Single-Ended Analog Input	P	I	V _{DDA0} ²⁵	A	I/-	AN[26]/-	C12	B11	B12	—
AN[27:28]	Single-Ended Analog Input	P	I	V _{DDA0} ²⁵	A	I/-	AN[27:28]/-	B12, A13	A11:12	A12:13	A10, B10
AN[29]	Single-Ended Analog Input	P	I	V _{DDA0} ²⁵	A	I/-	AN[29]/-	E13	D12	D13	—
AN[30:35]	Single-Ended Analog Input	P	I	V _{DDA0} ²⁵	A	I/-	AN[30:35]/-	C13, B13:14, E14, G14, A14	C12, B12:13, C13, D13, A13	C13, B13:14, C14, D14, A14	D9:10, C10:11, C5, D11
AN[36:39]	Single-Ended Analog Input	P	I	V _{DDA1} ²⁵	A	I/-	AN[36:39]/-	C5, B5, B4, C6	B3, A3, D5, B4	B4, A4, D6, B5	F4, E3, B3, D2
GPIO[111]	GPIO	G	I/O	V _{DDEH8}	SH	-/Up	-/Up	A16	B16	—	—
GPIO[112]	GPIO	G	I/O	V _{DDEH8}	SH	-/Up	-/Up	B16	A16	—	—
V _{RH}	Voltage Reference High	P	I	V _{DDA0} ²⁵	V _{DDINT}	-/-	V _{RH}	A9	A9	A10	A8
V _{RL}	Voltage Reference Low	P	I	V _{DDA0} ²⁵	V _{SSINT}	-/-	V _{RL}	A10	C10	A11	A9
REFBYPC	Reference Bypass Capacitor Input	P	I	V _{DDA0} ²⁵	V _{DDINT}	-/-	REFBYPC	B10	B9	B10	B7
eTPU Signals											
TCRCLKA_ IRQ[7]_ GPIO[113]	eTPU A TCR Clock External Interrupt Request GPIO	P A G	I I I/O	V _{DDEH1}	SH	-/Up	-/Up	N5	N4	M2	L4
ETPUA[0:3]_ ETPUA[12:15]_ GPIO[114:117]	eTPU A Channels eTPU A Channels (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	M5, G8, M3, L3	N3, M4:2	L3:4, K3, L2	N3, M3, P2, P1
ETPUA[4]_ ETPUA[16]_ FRB_TX_ GPIO[118]	eTPU A Channel eTPU A Channel (Output Only) FlexRay B Transmit Data GPIO	P A A2 G	I/O O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	L2	M1	L1	N2
ETPUA[5]_ ETPUA[17]_ FRB_TX_EN_ GPIO[119]	eTPU A Channel eTPU A Channel (Output Only) FlexRay B Transmit Enable GPIO	P A A2 G	I/O O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	H9	L4	K4	M4
ETPUA[6]_ ETPUA[18]_ FRB_RX_ GPIO[120]	eTPU A Channel eTPU A Channel (Output Only) FlexRay B Receive Data GPIO	P A A2 G	I/O O I I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	M2	L3	J3	L3
ETPUA[7]_ ETPUA[19]_ GPIO[121]	eTPU A Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	K3	L2	K2	K3

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/ A/ G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
ETPUA[8]_ ETPUA[20]_ GPIO[122]	eTPU A Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	K2	L1	K1	N1
ETPUA[9]_ ETPUA[21]_ GPIO[123]	eTPU A Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	G9	K4	J4	M2
ETPUA[10]_ ETPUA[22]_ GPIO[124]	eTPU A Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	L5	K3	H3	M1
ETPUA[11]_ ETPUA[23]_ GPIO[125]	eTPU A Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	J3	K2	J2	L2
ETPUA[12]_ PCSB[1]_ GPIO[126]	eTPU A Channel DSPI B Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	J2	K1	J1	L1
ETPUA[13]_ PCSB[3]_ GPIO[127]	eTPU A Channel DSPI B Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	G10	J4	G4	J4
ETPUA[14]_ PCSB[4]_ GPIO[128]	eTPU A Channel DSPI B Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	K5	J3	G3	J3
ETPUA[15]_ PCSB[5]_ GPIO[129]	eTPU A Channel DSPI B Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	H3	J2	H2	K2
ETPUA[16]_ PCSD[1]_ GPIO[130]	eTPU A Channel DSPI D Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	K1	J1	H1	K1
ETPUA[17]_ PCSD[2]_ GPIO[131]	eTPU A Channel DSPI D Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	H10	H4	F3	H3
ETPUA[18]_ PCSD[3]_ GPIO[132]	eTPU A Channel DSPI D Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	J5	H3	F4	H4
ETPUA[19]_ PCSD[4]_ GPIO[133]	eTPU A Channel DSPI D Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	G3	H2	G2	J2
ETPUA[20]_ IRQ[8]_ FRA_TX_ GPIO[134]	eTPU A Channel External Interrupt Request FlexRay A Transmit Data GPIO	P A G	I/O I O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	J1	H1	G1	J1
ETPUA[21]_ IRQ[9]_ FRA_RX_ GPIO[135]	eTPU A Channel External Interrupt Request FlexRay A Receive Data GPIO	P A G	I/O I I I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	H11	G4	E4	G4
ETPUA[22]_ IRQ[10]_ GPIO[136]	eTPU A Channel External Interrupt Request GPIO	P A G	I/O I I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	F3	G2	F2	H2

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
ETPUA[23]_ IRQ[11]_ FRA_TX_EN_ GPIO[137]	eTPU A Channel External Interrupt Request FlexRay A TX Enable GPIO	P A A2 G	I/O I O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	H2	G1	F1	H1
ETPUA[24:26]_ IRQ[12:14]_ GPIO[138:140]	eTPU A Channel (Output Only) External Interrupt Request GPIO	P A G	O I I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	G2, H5, G5	F1, G3, F3	E1, E3, D3	G1, G3, F3
ETPUA[27]_ IRQ[15]_ GPIO[141]	eTPU A Channel (Output Only) External Interrupt Request GPIO	P A G	O I I/O	V _{DDEH1}	SH	-/ WKPCFG	-/ WKPCFG	E3	F2	E2	G2
ETPUA[28]_ PCSC[1]_ GPIO[142]	eTPU A Channel (Output Only) DSPI C Peripheral Chip Select GPIO	P A G	O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	F1	E1	D1	F1
ETPUA[29]_ PCSC[2]_ GPIO[143]	eTPU A Channel (Output Only) DSPI C Peripheral Chip Select GPIO	P A G	O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	F2	E2	D2	F2
ETPUA[30]_ PCSC[3]_ GPIO[144]	eTPU A Channel DSPI C Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	E1	D1	C1	E1
ETPUA[31]_ PCSC[4]_ GPIO[145]	eTPU A Channel DSPI C Peripheral Chip Select GPIO	P A G	I/O O I/O	V _{DDEH1}	MH	-/ WKPCFG	-/ WKPCFG	E2	D2	C2	E2
eMIOS Signals											
EMIOS[0:2]_ ETPUA[0:2]_ GPIO[179:181]	eMIOS Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AD17, AD21, P21	AF15, AE15, AC16	AB10:11 , W12	T4:5, N7
EMIOS[3:5]_ ETPUA[3:5]_ GPIO[182:184]	eMIOS Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	R22, AD18, AD22	AD15, AF16, AE16	AA11, AB12, AA12	R6, R5, T6
EMIOS[6:7]_ ETPUA[6:7]_ GPIO[185:186]	eMIOS Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	P22, AD19	AD16, AF17	Y12, AB13	P7, T7
EMIOS[8:9]_ ETPUA[8:9]_ GPIO[187:188]	eMIOS Channel eTPU A Channel (Output Only) GPIO	P A G	I/O O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	N21, AD23	AC17, AE17	W13, AA13	P8, R7
EMIOS[10:11]_ PCSD[3:4]_ GPIO[189:190]	eMIOS Channel PCSD GPIO	P A G	I/O I/O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	N22, AG18	AD17, AF18	Y13, AB14	N8, R8
EMIOS[12]_ SOUTC_ GPIO[191]	eMIOS Channel (Output Only) DSPI C Data Output GPIO	P A G	O O I/O	V _{DDEH4}	MH	-/ WKPCFG	-/ WKPCFG	M21	AC18	W15	N10
EMIOS[13]_ SOUTD_ GPIO[192]	eMIOS Channel (Output Only) DSPI D Data Output GPIO	P A G	O O I/O	V _{DDEH4}	MH	-/ WKPCFG	-/ WKPCFG	AF18	AE18	AA14	T8

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
EMIOS[14]_ IRQ[0]_ CNTXD_ GPIO[193]	eMIOS Channel (Output Only) External Interrupt Request 0 FlexCAN D Transmit GPIO	P A A2 G	O I O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AH19	AF19	AB15	R9
EMIOS[15]_ IRQ[1]_ CNRXD_ GPIO[194]	eMIOS Channel (Output Only) External Interrupt Request 1 FlexCAN D Receive GPIO	P A A2 G	O I I I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	M22	AD18	Y14	T9
EMIOS[16]_ FR_DBG[3]_ GPIO[195]	eMIOS Channel FlexRay Debug 3 GPIO	P A2 G	I/O I/O O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AG19	AE19	AA15	P9
EMIOS[17]_ FR_DBG[2]_ GPIO[196]	eMIOS Channel FlexRay Debug 2 GPIO	P A2 G	I/O I/O O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AF19	AD19	Y17	P10
EMIOS[18]_ FR_DBG[1]_ GPIO[197]	eMIOS Channel FlexRay Debug 1 GPIO	P A2 G	I/O I/O O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AH20	AF20	AB16	T10
EMIOS[19]_ FR_DBG[0]_ GPIO[198]	eMIOS Channel FlexRay Debug 0 GPIO	P A2 G	I/O I/O O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AG20	AE20	AA16	R10
EMIOS[20]_ GPIO[199]	eMIOS Channel GPIO	P G	I/O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AG21	AF21	AB17	T11
EMIOS[21]_ GPIO[200]	eMIOS Channel GPIO	P G	I/O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	L21	AC19	W16	N11
EMIOS[22]_ CNTXE_ GPIO[201]	eMIOS Channel FlexCAN E Transmit GPIO	P A2 G	I/O O I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AF20	AD20	Y16	P11
EMIOS[23]_ CNRXE_ GPIO[202]	eMIOS Channel FlexCAN E Receive GPIO	P A2 G	I/O I I/O	V _{DDEH4}	SH	-/ WKPCFG	-/ WKPCFG	AF21	AE21	AA17	R11
GPIO Signals											
EMIOS[14:15]_ ²⁹ GPIO[203:204]	eMIOS Channel Output Only GPIO	P G	O I/O	V _{DDEH4}	SH	- / Up	- / Up	J26, H27	H24, G25	H20:21	—
GPIO[205] ³⁰	GPIO	G	I/O	V _{DDEH8}	MH	- / Up	- / Up	B22	A21	—	—
GPIO[206:207] ^{31, 32}	GPIO	G	I/O	V _{DDE3}	F	- / Up	- / Up	AH10, AG10	AF8, AD10	AA7, Y9	R4, P5
Clock Synthesizer Signals											
XTAL	Crystal Oscillator Output	P	O	V _{DDSYN}	A	O / -	XTAL ³³ / -	AD28	AB26	V22	P16
EXTAL_ EXTCLK ³⁴	Crystal Oscillator Input External Clock Input	P A	I	V _{DDSYN}	A	I / -	EXTAL ³⁵ / -	AC28	AA26	U22	N16
CLKOUT	System Clock Output	P	O	V _{DDE5}	F	CLKOUT / Enabled	CLKOUT / Enabled	AF25	AE24	AA20	—
ENGCLK	Engineering Clock Output	P	O	V _{DDE5}	F	ENGCLK / Enabled	ENGCLK / Enabled	AG26	AF25	AB21	T14

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
Power / Ground Signals											
V _{RC33} ³⁶	Voltage Regulator Control Supply	P	I	3.3V	V _{DDINT}	N.A.	V _{RC33}	AD26	AC25	W21	P15
V _{RCCTL}	Voltage Regulator Control Output	P	O	3.3V	V _{DDINT}	N.A.	V _{RCCTL}	AC26	AB24	V20	N14
V _{DDA0} ³⁷	Analog Power Input ADC0	P	I	5.0V	V _{DDINT}	N.A.	V _{DDA0}	E15	C14	C15	B11
V _{SSA0} ³⁷	Analog Ground Input ADC0	P	I	—	V _{SSINT}	N.A.	V _{SSA0}	A15, B15	A14, B14	A15, B15	A11
V _{DDA1} ³⁷	Analog Power Input ADC1	P	I	5.0V	V _{DDINT}	N.A.	V _{DDA1}	A5	A5	A6	A4
V _{SSA1} ³⁷	Analog Ground Input ADC1	P	I	—	V _{SSINT}	N.A.	V _{SSA1}	A6	C6	A7	A5
V _{DDSYN}	Clock Synthesizer Power Input	P	I	3.3V	V _{DDE}	N.A.	V _{DDSYN}	AD27	AC26	W22	R16
V _{SSSYN}	Clock Synthesizer Ground Input	P	I	—	V _{SSE}	N.A.	V _{SSSYN}	AC27	Y26	T22	M16
V _{FLASH} ³⁸	Flash Read Supply Input	P	I	3.3V	V _{DDINT}	N.A.	V _{FLASH}	W27	U26	N22	—
V _{PP} ³⁹	Flash Program/Erase Supply Input	P	I	5.0V	V _{DDINT}	N.A.	V _{PP}	W28	T26	M22	K16
V _{STBY} ⁴⁰	SRAM Standby Power Input	P	I	0.8V–1.2V	V _{STBY}	N.A.	V _{STBY}	B3	A2	A3	C1
V _{DD}	Internal Logic Supply Input	P	I	1.5V	V _{DD}	N.A.	V _{DD}	B25, C2, D3, D27, F5, H7, J8, Y21, AA9, AA22, AB8, AC24, AD4, AD6, AE26, AF4, AF27, AG3	A24, B1, C2, C26, D3, E4, AB23, AC5, AC24, AD4, AD25, AE3, AE26, AF2	A2, A20, B3, C4, C22, D5, V19, W5, W20, Y4, Y21, AA3, AA22, AB2	B1, C2, D3, E4, B16, P13, R14, T15, N5, P4, R3, T2
V _{DDE2} ⁴¹	External I/O Supply Input	P	I	1.8V–3.3V	—	N.A.	V _{DDE2}	M11, N11:13, P11:13, R1, V5, AA5, AC1	M10:11, N10:11, P10:11, R10:11, T1, T4, T10, T12:15, U11:15, Y4, AB1, AC8, AC13, AF5, AF11	M9:10, N11, P11, R3, W2, W6, W8, Y5, AA4, AA6, AA10, AB3	P6

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
V _{DDE3} ³⁵	External I/O Supply Input	P	I	1.8V–3.3V	—	N.A.	V _{DDE3}	T14, U13:14, V12:14, AD9, AD14, AH6, AH14	—	—	—
V _{DDE5}	External I/O Supply Input	P	I	1.8V–3.3V	—	N.A.	V _{DDE5}	AF23, AG24, AH24	AC21, AD22, AE23, AF24,	W17, Y18, AA19, AB20,	T13
V _{DDE7}	External I/O Supply Input	P	I	1.8V–3.3V	—	N.A.	V _{DDE7}	C27, D26, F24, H22, J21, L15:18, M11, M18, N11:13, N18	B26, C25, D24, E23, K14:17, L17, M17, N17	B22, C21, D20, E19, F19, J14	E13
V _{DDE12}	External I/O Supply Input – Calibration	P	I	1.8V–3.3V	—	N.A.	V _{DDE12}	K7, N8, R11:13, R17:18, R21, T11:12, T15, T18, U2, U11, U15:16, V15:17, V22, AA13, AA16, AB18, AB21, AE2, AG4, AG12	H26, K23	—	—
V _{DDE13}	External I/O Supply Input – Calibration	P	I	1.8V–3.3V	—	N.A.	V _{DDE13}	—	A18, D19	—	—
V _{DDEH1}	External I/O Supply Input	P	I	3.3V–5.0V	—	N.A.		G11, J7	E3, F4	H4	K4
V _{DDEH4}	External I/O Supply Input	P	I	3.3V–5.0V	—	N.A.		AD20	AC20	W14	N9
V _{DDEH6}	External I/O Supply Input	P	I	3.3V–5.0V	—	N.A.		V26	AA23	U19	F13
V _{DDEH8}	External I/O Supply Input	P	I	3.3V–5.0V	—	N.A.		C21	D22	—	—
V _{DDEH9} ⁴²	External I/O Supply Input	P	I	3.3V–5.0V	—	N.A.		H14	D14	D15	D12
V _{DDEH10}	External I/O Supply Input	P	I	3.3V–5.0V	—	N.A.		K24	J23	H19	—

Table 4-1. MPC5567 Signal Properties (continued)

Signal Names ¹	Signal Functions ²	P/A/G	I/O Type	Voltage ³	Pad Type ⁴	Status		Pin Labels / Package Type ⁵			
						During Reset ⁶	After Reset ⁷	496	416	324	208 ⁸
V _{DD33} ⁴³	I/O Pad Pre-driver and Level Shifter Reference Voltage Input	P	I	3.3V	V _{DD33}	N.A.	3.3V	B26, D2, W5, AE27, AF9	A25, C1, U4, AD9, AD26	A21, B1, P4, W7, Y22	A15, D1, N6, N12
V _{SS}	Ground	P	—	—	—	N.A.	V _{SS}	A1, A2, A27, A28, B1, B2, B27, B28, C3, C26, E5, E24, G7, G22, H8, H21, L11:14, M12:17, N14:17, P14:17, R14:16, T13, T16:17, U12, U17:18, V7, V18, AA8, AA21, AB7, AB22, AD5, AF3, AF26, AG1:2, AG27:28, AH1:2, AH27:28	A1, A26, B2, B25, C3, C24, D4, D23, K10:13, L10:16, M12:16, N12:16, P12:17, R12:17, T11, T16, T17, U10, U16:17, AC4, AC23, AD3, AD24, AE2, AE25, AF1, AF26	A1, A22, B2, B21, C3, C20, D4, D19, J9:13, K9:14, L9:14, M11:14, N9:10, N12:14, P9:10, P12:14, W4, W19, Y3, Y20, AA2, AA21, AB1, AB22	A1, B2, C3, D4, D13, C14, B15, A16, N13, P14, R15, T16, N4, P3, R2, T1, G7:10, H7:10, J7:10, K7:10, Y3, Y20
No Connect (2)											
NC ⁴⁴	No Connect	N.A.	N.A.	N.A.	N.A.	N.A.	N.A.	A19, B17:19, C17:19, E17:23, G16:21, H16:20, J22, J27:28, K21:22, K26:28, L22, L24, L26:27, M24, P2, R2, AA12, AG17	A17, B17, C16:17, D16, L24:26, M23:25, T2, U2, AC22, AD23, AF14	W18, Y19	—

¹ The primary signal name is used as the pin label on the BGA map for identification purposes. However, the primary signal function is not available on all devices and is indicated by a dash in the following table columns: signal functions, P/A/G, and I/O type.

- 2 Each line in the signal name column corresponds to a separate signal function on the pin. For all device I/O pins, the primary, alternate, or GPIO signal functions are designated in the PA field of the system integration unit (SIU) PCR registers except where explicitly noted.
- 3 V_{DDE} (fast I/O) and V_{DDEH} (slow I/O) power supply inputs are grouped into segments. Each segment of V_{DDEH} pins can connect to a separate 3.3–5.0V (+/- 5%) power supply input. Each segment of V_{DDE} pins can connect to a separate 1.8V–3.3V (+/- 5%) power supply, with the exception of the V_{DDE2} and V_{DDE3} segments that are shorted together and must use the same power supply input. This segment is labeled V_{DDE2} in the BGA map. Refer to [Table 4-2](#) for a definition of the I/O pins that are powered by each segment.
- 4 The pad type is indicated by one of the abbreviations; F for fast, MH for medium (high voltage), MHA for medium (high voltage) and analog, SH for slow (high voltage), A for analog. Some pads have two types, depending on the signal function selected.
- 5 The 496 package is only available as an internal component of the 416, 324, and 208 VertiCal base devices and is not available directly to customers.
- 6 The status during reset pin is sampled after the internal POR is negated. Prior to exiting POR, the signal has a high impedance. The terminology used in this column is: O—output, I—input, Up—weak pullup enabled, Down—weak pulldown enabled, Low—output driven low, High—output driven high. A dash on the left side of the slash denotes that both the input and output buffers for the pin are off. A dash on the right side of the slash denotes that there is no weak pullup/down enabled on the pin. The signal name to the left or right of the slash indicates the pin is enabled.
- 7 The function after reset of a GPI function is general-purpose input. A dash on the left side of the slash denotes that both the input and output buffers for the pin are off. A dash on the right side of the slash denotes that there is no weak pullup/down enabled on the pin.
- 8 Availability currently not planned. Consult factory for availability.
- 9 In the 208 package, PLLCFG[2] is not available and is tied high, internal to the device package, which enforces the 16–40 MHz oscillator/clock mode.
- 10 The EBI is specified and tested at 1.8V and 3.3V.
- 11 Do not configure both ADDR[8:11]_GPIO[4:7] and \overline{CS} [0:3]_ADDR[8:11]_GPIO[0:3] signal functions as ADDR[8:11]. Only configure one signal function and pin to provide the address input.
- 12 When using the EBI functions, select the function in the SIU_PCR register and enable the EBI functions in the EBI for these pins. Both the SIU and EBI configurations must match for proper operation.
- 13 The function and state of the pin after execution of the BAM program is determined by the BOOTCFG[0:1] pins. Refer to [Table 15-7](#) for details on the external bus interface (EBI) configuration after execution of the BAM program.
- 14 The ADDR[6:7] function increases the memory space for master accesses and cannot be used for slave accesses to the chip.
- 15 The $\overline{WE}/\overline{BE}$ [0:1]_GPIO[64:65], $\overline{WE}/\overline{BE}$ [2:3]_GPIO[66:67], and CAL_ $\overline{WE}/\overline{BE}$ [0:1] functions are specified using the PA field in the SIU_PCR registers. To specify whether these functions are write enable or byte enable, use the EBI_BR[0] through EBI_BR[3], and EBI_CAL_BR[0] through EBI_CAL_BR[3] registers for each chip select region.
- 16 The \overline{BR} and \overline{BG} primary signal functions are not implemented on the MPC5567, however the pin label remain \overline{BR} and \overline{BG} on the BGA map.
- 17 The 416 package does not have a calibration bus, therefore the primary calibration signal functions are not available. The fast ethernet (FEC) signals are available on the 416 package as alternate functions and are muxed with the primary calibration signal functions.
- 18 MCKO is only enabled if debug mode is enabled. Debug mode can be enabled before or after exiting system reset (RSTOUT negated).
- 19 MDO[0] is driven high following a power-on reset (POR) until the system clock achieves lock, at which time it is negated. There is an internal pullup on MDO[0].
- 20 The function of the MDO[11:4]_GPIO[82:75] pins is selected during a debug port reset by the \overline{EVTI} pin. When functioning as MDO[11:4] the pad configuration specified by the SIU does not apply. Refer to [4.3.3.4](#) for more detail on MDO[11:4] pin operation.
- 21 The pullup on TDO is functional only when not in JTAG mode (JCOMP negated).
- 22 The function and state of the FlexCAN A and eSCI A pins after the BAM program executes is determined by BOOTCFG[0:1] pins. Refer to [Table 15-9](#) for details on the FlexCAN and eSCI pin configurations after the BAM executes.
- 23 The primary signal is not available on this device and is listed only for reference to the pin label in the BGA map.
- 24 To allow DSPI segments to operate at different operating voltages, you can connect V_{DDEH6} and V_{DDEH10} to separate power supplies, however this configuration is not compatible with the MPC5554. For MPC5554 compatibility, connect V_{DDEH6} and V_{DDEH10} to the same power supply (3V–5.25V).
- 25 All analog input channels are connected to both ADC blocks. These pins must *only* use an ESD rail supply.
- 26 To use this analog function (AN[12]), set the PA field of the corresponding SIU_PCR register to 0b11.
- 27 To use the serial data strobe functions, set the PA fields of the corresponding SIU_PCR registers to 0b00.
- 28 If analog features are used, tie V_{DDEH9} to V_{DDA1} .
- 29 Because other pins on this device are already named EMIO[14:15], the pin labels used on the BGA map are GPIO[203:204] for this function.
- 30 The GPIO[205] pin is a protect-for-pin for configuring an external boot for a Double Data Rate (DDR) memory.
- 31 GPIO[206:207] pins are protect-for-pins for double data rate memory data strobes.
- 32 GPIO[206:207] can be selected as the source for the eQADC trigger in the eQADC trigger input select register (SIU_ETISR).
- 33 The function after reset of the XTAL pin is determined by the value of the signal on the PLLCFG[1] pin. Ground the XTAL pin when using bypass mode.
- 34 When the FMPLL is configured for external reference mode, the V_{DDE5} supply affects the acceptable signal levels for the external reference mode. Refer to [Section 11.1.4.2, “External Reference Mode.”](#)
- 35 The function after reset of the EXTAL_EXTCLK pin is determined by the value of the signal on the PLLCFG[1] pin. The operating voltage for the EXTAL function is 3.3V; the operating voltage for the EXTCLK function is 1.62V–3.6V.
- 36 V_{RC33} is the 3.3V input for the voltage regulator control.
- 37 The $V_{DDA\#}$ and $V_{SSA\#}$ supply inputs have separate traces in the package substrate. Each trace is bonded to a separate pad location, which provides isolation between the analog and digital sections within each ADC.
- 38 V_{FLASH} is not available on the 208 package.
- 39 V_{PP} can be tied to 5.0V for both the read operation and program/erase operation.

Signal Description

- ⁴⁰ If battery-backed SRAM is not used, tie the V_{STBY} pin to V_{SS} .
- ⁴¹ Both V_{DDE2} and V_{DDE3} pins are labeled as V_{DDE2} pins on the BGA maps.
- ⁴² The V_{DDEH9} segment can be powered by 3.0V–5.0V for mux addresses or SSI functions; however, the V_{DDEH9} segment must comply with the V_{DDA} specifications (4.5V–5.25V) for analog input functions.
- ⁴³ All pins with pad type F are driven to the high state if the V_{DDE} segment is powered before V_{DD33} .
- ⁴⁴ These no connect (NC) pins are reserved for the clock and inverted clock outputs for the DDR memory interface.

4.3 Detailed Signal Description

This section provides detailed descriptions of the signal functions available for the device.

4.3.1 Reset and Configuration Signals

4.3.1.1 External Reset Input RESET

The $\overline{\text{RESET}}$ input is asserted by an external device to reset the all modules of the device MCU. The $\overline{\text{RESET}}$ pin should be asserted during a power-on reset. Refer to [Section 3.2.1, “Reset Input \(RESET\).”](#)

4.3.1.2 External Reset Output RSTOUT

The $\overline{\text{RSTOUT}}$ output is a push/pull output that is asserted during an internal device reset. The pin may also be asserted by software without causing an internal reset of the device MCU. Refer to [Section 3.2.2, “Reset Output \(RSTOUT\).”](#)

NOTE

During an internal power-on reset (POR), $\overline{\text{RSTOUT}}$ is tri-stated.

4.3.1.3 PLL Configuration Mode 0 / External Interrupt Request / GPIO PLLCFG[0]_IRQ[4]_GPIO[208]

PLLCFG[0]_IRQ[4]_GPIO[208] are sampled on the negation of the $\overline{\text{RESET}}$ input pin, if the $\overline{\text{RSTCFG}}$ pin is asserted at that time. The values are used to configure the FMPLL mode of operation. The alternative function is an external interrupt request input.

4.3.1.4 PLL Configuration Mode 1 / External Interrupt Request / DSPI / GPIO PLLCFG[1]_IRQ[5]_SOUTD_GPIO[209]

PLLCFG[1]_IRQ[5]_SOUTD_GPIO[209] — If the $\overline{\text{RSTCFG}}$ signal is asserted, these functions are sampled at that time when the $\overline{\text{RESET}}$ input pin negates. The values are used to configure the FMPLL operation mode. The alternative function is an external interrupt request input, and the second alternative function is the data output for the DSPI module D.

4.3.1.5 PLL Configuration Mode 2 PLLCFG[2]

PLLCFG[2] is a configuration input signal that configures the 324 or 416 packages for PLL operation in either 8–20 MHz or 16–40 MHz. While reset is asserted, if PLLCFG[2] is high, PREDIV resets to 1. In the 208 package, PLLCFG[2] is not available and is tied high, internal to the device package, which enforces the 16–40 MHz oscillator/clock mode.

4.3.1.6 Reset Configuration Input / GPIO $\overline{\text{RSTCFG_GPIO}}[210]$

The $\overline{\text{RSTCFG}}$ input is used to enable the $\text{BOOTCFG}[0:1]$ and $\text{PLLCFG}[0:1]$ pins during reset. If $\overline{\text{RSTCFG}}$ is negated during reset, the BOOTCFG and PLLCFG pins are not sampled at the negation of $\overline{\text{RSTOUT}}$. In that case, the default values for BOOTCFG and PLLCFG are used. If $\overline{\text{RSTCFG}}$ is asserted during reset, the values on the BOOTCFG and PLLCFG pins are sampled and configure the boot and FMPLL modes.

4.3.1.7 Reset Configuration / External Interrupt Request / GPIO $\text{BOOTCFG}[0:1]_{\overline{\text{IRQ}}}[2:3]_{\text{GPIO}}[211:212]$

$\text{BOOTCFG}[0:1]_{\overline{\text{IRQ}}}[2:3]_{\text{GPIO}}[211:212]$ are sampled on the negation of the $\overline{\text{RSTOUT}}$ pin, if the $\overline{\text{RSTCFG}}$ pin is asserted at that time. The values are used by the boot assist module (BAM) program to determine the boot configuration of the device. The alternative functions are the external interrupt request inputs (IRQs).

NOTE

For the 208 package of the device, $\text{BOOTCFG}[0]$ is not available and always selects internal or serial boot mode.

4.3.1.8 Weak Pull Configuration / GPIO $\text{WKPCFG_GPIO}[213]$

$\text{WKPCFG_GPIO}[213]$ determines whether specified eTPU and eMIOS pins are connected to a weak pullup or weak pulldown during and immediately after reset.

4.3.2 External Bus Interface (EBI) Signals

4.3.2.1 External Chip Selects / External Address / GPIO $\overline{\text{CS}}[0]_{\text{ADDR}}[8]_{\text{GPIO}}[0]$

$\overline{\text{CS}}[0]_{\text{ADDR}}[8]_{\text{GPIO}}[0]$ is an EBI chip select output signals. $\text{ADDR}[8]$ is the alternative signal function and is an external bus address function.

4.3.2.2 External Chip Selects / External Address / GPIO $\overline{\text{CS}}[1:3]_{\text{ADDR}}[9:11]_{\text{GPIO}}[1:3]$

$\overline{\text{CS}}[1:3]_{\text{ADDR}}[9:11]_{\text{GPIO}}[1:3]$ are the EBI chip select output signals. The alternative function is the $\text{ADDR}[9:11]$ and is an external bus address function.

4.3.2.3 External Address / GPIO $\text{ADDR}[8:11]_{\text{GPIO}}[4:7]$

$\text{ADDR}[8:11]_{\text{GPIO}}[4:7]$ are the EBI address signals.

4.3.2.4 External Address / GPIO ADDR[12:29]_GPIO[8:25]

ADDR[12:26]_GPIO[8:22] are the EBI address signals.

4.3.2.5 External Address / Master Address Expansion / GPIO ADDR[30:31]_ADDR[6:7]_GPIO[26:27]

ADDR[30:31]_ADDR[6:7]_GPIO[26:27] are the EBI address signals. ADDR[6:7] is the alternative signal function and is only used to increase the memory space for master accesses and are not used for slave accesses to the chip.

4.3.2.6 External Data / GPIO DATA[0:20]_GPIO[28:48]

DATA[0:20]_GPIO[28:48] are the EBI data signals.

4.3.2.7 External Data / FlexRay A Transmit / GPIO DATA[21]_FRA_TX_GPIO[49]

DATA[21]_FRA_TX_GPIO[49] is an EBI data signal. The alternative function is the FlexRay A transmit.

4.3.2.8 External Data / FlexRay A Receive / GPIO DATA[22]_FRA_RX_GPIO[50]

DATA[22]_FRA_RX_GPIO[50] is an EBI data signal. The alternative function is a FlexRay A receive function.

4.3.2.9 External Data / FlexRay Transmit Enable / GPIO DATA[23]_FRA_TX_EN_GPIO[51]

DATA[23]_FRA_TX_EN_GPIO[51] is an EBI data signal. The alternative function is a FlexRay A transmit enable.

4.3.2.10 External Data / GPIO DATA[24]_GPIO[52]

DATA[24]_GPIO[52] is an EBI data signal.

4.3.2.11 External Data / FlexRay B Transmit / GPIO DATA[25]_FRB_TX_GPIO[53]

DATA[25]_FRB_TX_GPIO[53] is an EBI data signal. The alternative function is FlexRay B transmit.

4.3.2.12 External Data / FlexRay B Transmit Enable / GPIO
DATA[26]_FRB_TX_EN_GPIO[54]

DATA[26]_FRB_TX_EN_GPIO[54] is an EBI data signal. The alternative function is the FlexRay B transmit enable.

4.3.2.13 External Data / FlexRay B Receive / GPIO
DATA[27]_FRB_RX_GPIO[55]

DATA[27]_FRB_RX_GPIO[55] is an EBI data signal. The alternative function is the FlexRay B receive.

4.3.2.14 External Data / GPIO
DATA[28]_GPIO[56]

DATA[28]_GPIO[56] is an EBI data signal.

4.3.2.15 External Data / GPIO
DATA[29]_GPIO[57]

DATA[29]_GPIO[57] is an EBI data signal.

4.3.2.16 External Data / GPIO
DATA[30]_GPIO[58]

DATA[30]_GPIO[58] is an EBI data signal.

4.3.2.17 External Data / GPIO
DATA[31]_GPIO[59]

DATA[31]_GPIO[59] is an EBI data signal.

4.3.2.18 External Read/Write / GPIO
RD_WR_GPIO[62]

RD_WR_GPIO[62] indicates whether an external bus transfer is a read or write operation.

4.3.2.19 External Burst Data In Progress / GPIO
BDIP_GPIO[63]

BDIP_GPIO[63] indicates that an EBI burst transfer is in progress.

4.3.2.19.1 External Write/Byte Enable / GPIO
WE/BE[0:3]_GPIO[64:67]

WE/BE[0:3]_GPIO[64:67] specify which data pins contain valid data for an external bus transfer.

4.3.2.20 External Output Enable / GPIO $\overline{\text{OE_GPIO}}[68]$

$\overline{\text{OE_GPIO}}[68]$ indicates that the EBI is ready to accept read data.

4.3.2.21 External Transfer Start / GPIO $\overline{\text{TS_GPIO}}[69]$

$\overline{\text{TS_GPIO}}[69]$ is asserted by the EBI owner to indicate the start of a transfer.

4.3.2.22 External Transfer Acknowledge / GPIO $\overline{\text{TA_GPIO}}[70]$

$\overline{\text{TA_GPIO}}[70]$ is asserted by the EBI owner to acknowledge that the slave has completed the current transfer.

4.3.2.23 External Transfer Error Acknowledge / GPIO $\overline{\text{TEA_GPIO}}[71]$

$\overline{\text{TEA_GPIO}}[71]$ indicates that an error occurred in the current external bus transfer.

4.3.2.24 External Bus Request / GPIO $\overline{\text{BR_GPIO}}[72]$

The primary signal function of $\overline{\text{BR_GPIO}}[72]$ is a bus request. This signal is not available on MPC5567. Only the GPIO[72] pin has GPIO functionality.

4.3.2.25 External Bus Grant / GPIO $\overline{\text{BG_GPIO}}[73]$

The primary signal function of $\overline{\text{BG_GPIO}}[73]$ is a bus grant. This signal is not available on MPC5567. Only the GPIO[73] pin has GPIO functionality.

4.3.3 Nexus Signals

4.3.3.1 Nexus Event In $\overline{\text{EVTI}}$

$\overline{\text{EVTI}}$ is an input that is read on the negation of $\overline{\text{TRST}}$ to enable or disable the Nexus debug port. After reset, the $\overline{\text{EVTI}}$ pin is used to initiate program and data trace synchronization messages or generate a breakpoint.

4.3.3.2 **Nexus Event Out** **$\overline{\text{EVTO}}$**

$\overline{\text{EVTO}}$ is an output that provides timing to a development tool for a single watchpoint or breakpoint occurrence.

4.3.3.3 **Nexus Message Clock Out** **MCKO**

MCKO is a free-running clock output to the development tools which is used for timing of the MDO and MSEO signals.

4.3.3.4 **Nexus Message Data Out** **MDO[0]**

MDO[0] is a trace message output to the development tools. In addition, MDO[0] indicates the lock status of the system clock following a power-on reset. MDO[0] is driven high following a power-on reset until the system clock achieves lock, at which time it is then negated. There is an internal pullup on MDO[0].

4.3.3.5 **Nexus Message Data Out** **MDO[3:1]**

MDO[3:1] are the trace message outputs to the development tools.

4.3.3.6 **Nexus Message Data Out / GPIO** **MDO[11:4]_GPIO[82:75]**

MDO[11:4]_GPIO[82:75] are the trace message outputs to the development tools for full-port mode. These pins function as GPIO when the Nexus port controller (NPC) operates in reduced-port mode.

4.3.3.7 **Nexus Message Start/End Out** **$\overline{\text{MSEO}}$ [1:0]**

$\overline{\text{MSEO}}$ [1:0] are outputs that indicate when messages start and end on the MDO pins.

4.3.3.8 **Nexus Ready Output** **$\overline{\text{RDY}}$**

$\overline{\text{RDY}}$ is an output that indicates to the development tools the data is ready to be read from or written to the Nexus read/write access registers.

4.3.4 JTAG Signals

4.3.4.1 JTAG Test Clock Input TCK

TCK provides the clock input for the on-chip test logic.

4.3.4.2 JTAG Test Data Input TDI

TDI provides the serial test instruction and data input for the on-chip test logic.

4.3.4.3 JTAG Test Data Output TDO

TDO provides the serial test data output for the on-chip test logic.

4.3.4.4 JTAG Test Mode Select Input TMS

TMS controls test mode operations for the on-chip test logic.

4.3.4.5 JTAG Compliance Input JCOMP

The JCOMP pin is used to enable the JTAG TAP controller.

4.3.4.6 Test Mode Enable Input $\overline{\text{TEST}}$

The $\overline{\text{TEST}}$ pin is used to place the chip in test mode. It should be negated for normal operation.

4.3.5 FlexCAN Signals

4.3.5.1 FlexCAN A Transmit / eSCI Transmit / GPIO CNTXA_TXDA_GPIO[83]

CNTXA_TXDA_GPIO[83] is the transmit pin for the FlexCAN A module. The alternative function is the transmit pin for the eSCI A module.

4.3.5.2 FlexCAN A Receive / eSCI Receive / GPIO CNRXA_RXDA_GPIO[84]

CNRXA_RXDA_GPIO[84] is the receive pin for the FlexCAN A module. The alternative function is the receive pin for the eSCI A module.

4.3.5.3 FlexCAN B Transmit / DSPI C Chip Select / FlexRay A Transmit / GPIO CNTXB_PCSC[3]_FRA_TX_GPIO[85]

CNTXB_PCSC[3]_FRA_TX_GPIO[85] is the transmit pin for the FlexCAN B module. The alternative function is a peripheral chip select output for the DSPI C module and a FlexRay A transmit.

4.3.5.4 FlexCAN B Receive / DSPI C Chip Select / FlexRay A Receive / GPIO CNRXB_PCSC[4]_FRA_RX_GPIO[86]

CNRXB_PCSC[4]_FRA_RX_GPIO[86] is the receive pin for the FlexCAN B module. The alternative function is a peripheral chip select output for the DSPI C module and a FlexRay A receive.

4.3.5.5 FlexCAN C Transmit / DSPI D Chip Select / GPIO CNTXC_PCSD[3]_GPIO[87]

CNTXC_PCSD[3]_GPIO[87] is the transmit pin for the FlexCAN C module. The alternative function is PCSD[3], a peripheral chip select for the DSPI D module.

4.3.5.6 FlexCAN A Receive / DSPI D Chip Select / GPIO CNRXC_PCSD[4]_GPIO[88]

CNRXC_PCSD[4]_GPIO[88] is the receive pin for the FlexCAN C module. The alternative function is PCSD[4], a peripheral chip select for the DSPI D module.

4.3.6 eSCI Signals

4.3.6.1 eSCI A Transmit / GPIO TXDA_GPIO[89]

TXDA_GPIO[89] is the transmit pin for the eSCI A module.

4.3.6.2 eSCI A Receive / GPIO RXDA_GPIO[90]

RXDA_GPIO[90] is the receive pin for the eSCI A module. The pin is an input for the RXD function only, but as GPIO the pin is input or output based on the SIU PCR configuration.

4.3.6.3 eSCI B Transmit / DSPI D Chip Select / GPIO TXDB_PCSD[1]_GPIO[91]

TXDB_PCSD[1]_GPIO[91] is the transmit pin for the eSCI B module. The alternative function is a peripheral chip select output for the DSPI D module.

4.3.6.4 eSCI B Receive / DSPI D Chip Select / GPIO RXDB_PCSD[5]_GPIO[92]

RXDB_PCSD[5]_GPIO[92] is the transmit pin for the eSCI B module. The secondary function is a peripheral chip select for the DSPI D module.

4.3.7 Deserial/Serial Peripheral Interface (DSPI) Signals

4.3.7.1 DSPI A Clock / DSPI C Chip Select / GPIO SCKA_PCSC[1]_GPIO[93]

SCKA_PCSC[1]_GPIO[93] — Because the SCKA primary signal function is reserved on the MPC5567, there is no primary signal function for this ball on this device. The alternative signal function is the PCSC[1], a peripheral chip select for the DSPI C module and is available on the MPC5567.

4.3.7.2 DSPI A Data Input / DSPI C Chip Select / GPIO SINA_PCSC[2]_GPIO[94]

SINA_PCSC[2]_GPIO[94] — Because the SINA primary signal function is reserved on the MPC5567, there is no primary signal function for this ball on this device. Therefore, the alternative signal function is the PCSC[2], a peripheral chip select for the DSPI C module and is available on the MPC5567.

4.3.7.3 DSPI A Data Output / DSPI C Chip Select / GPIO SOUTA_PCSC[5]_GPIO[95]

SOUTA_PCSC[5]_GPIO[95] — Because the SOUTA primary function is reserved on the MPC5567, there is no primary signal function for this ball on this device. Therefore, the alternative function is the PCSC[5], a peripheral chip select for the DSPI C module and is available on the MPC5567.

4.3.7.4 DSPI_A Chip Select / DSPI D Chip Select / GPIO PCSA[0]_PCSD[2]_GPIO[96]

PCSA[0]_PCSD[2]_GPIO[96] — Because the PCSA[0] primary function is reserved on the MPC5567, there is no primary signal function for this ball on this device. Therefore, the alternative function is the PCSD[2], a peripheral chip select for the DSPI D module.

4.3.7.5 DSPI A Chip Select / DSPI B Chip Select / GPIO PCSA[1]_PCSB[2]_GPIO[97]

PCSA[1]_PCSB[2]_GPIO[97] — Because the PCSA[1] primary function is reserved on the MPC5567, there is no primary signal function for this device. Therefore, the alternative function is the PCSB[2], a peripheral chip select for the DSPI B module.

4.3.7.6 DSPI A Chip Select / DSPI D Clock / GPIO PCSA[2]_SCKD_GPIO[98]

PCSA[2]_SCKD_GPIO[98] — Because the PCSA[2] primary function is reserved on the MPC5567, there is no primary signal function for this device. Therefore, the alternative function is the SCKD, a DSPI clock pin for the DSPI D module.

4.3.7.7 DSPI A Chip Select / DSPI D Data Input / GPIO PCSA[3]_SIND_GPIO[99]

PCSA[3]_SIND_GPIO[99] — Because the PCSA[3] primary function is reserved on the MPC5567, there is no primary signal function for this device. Therefore, the alternative function is the SIND, a DSPI clock pin for the DSPI D module.

4.3.7.8 DSPI A Chip Select / DSPI D Data Output / GPIO PCSA[4]_SOUTD_GPIO[100]

PCSA[4]_SOUTD_GPIO[100] — Because the PCSA[4] primary function is reserved on the MPC5567, there is no primary signal function for this device. Therefore, the alternative function is the SOUTD, a DSPI data output pin for the DSPI D module.

4.3.7.9 DSPI A Chip Select / DSPI B Chip Select / GPIO PCSA[5]_PCSB[3]_GPIO[101]

PCSA[5]_PCSB[3]_GPIO[101] — Because the PCSA[5] primary function is reserved on the MPC5567, there is no primary signal function for this device. Therefore, the alternative function is PCSB[3], a peripheral chip select output pin for the DSPI B module.

4.3.7.10 DSPI B Clock / DSPI C Chip Select / GPIO SCKB_PCSC[1]_GPIO[102]

SCKB_PCSC[1]_GPIO[102] — SCKB is the primary function, and is the SPI clock pin for the DSPI B module. The alternative function is PCSC[1], a chip select output for the DSPI C module.

4.3.7.11 DSPI B Data Input / DSPI C Chip Select / GPIO SINB_PCSC[2]_GPIO[103]

SINB_PCSC[2]_GPIO[103] — SINB is the primary function and is the data input pin for the DSPI B module. The alternative function is a chip select output for the DSPI C module.

4.3.7.12 DSPI B Data Output / DSPI C Chip Select / GPIO SOUTB_PCSC[5]_GPIO[104]

SOUTB_PCSC[5]_GPIO[104] — SOUTB is the primary function and is the data output pin for the DSPI B module. The alternative function is a chip select output for the DSPI C module.

4.3.7.13 DSPI B Chip Select / DSPI D Chip Select / GPIO PCSB[0]_PCSD[2]_GPIO[105]

PCSB[0]_PCSD[2]_GPIO[105] — PCSB[0] is the primary function and is a DSPI B peripheral chip select output pin. It also is a slave select (\overline{SS}) input pin for the DSPI B module slave mode operation. The alternative function is PCSD[2] and is a chip select output for the DSPI D module.

4.3.7.14 DSPI B Chip Select / DSPI D Chip Select / GPIO PCSB[1]_PCSD[0]_GPIO[106]

PCSB[1]_PCSD[0]_GPIO[106] — PCSB[1] is the primary a peripheral chip select output pin for the DSPI B module. The alternative function is PCSD[0] and is a DSPI D peripheral chip select output that also is a slave select (\overline{SS}) input pin for DSPI D module slave mode operation.

4.3.7.15 DSPI B Chip Select / DSPI C Data Output / FlexRay A Transmit Enable / GPIO PCSB[2]_SOUTC_ $\overline{FRA_TX_EN}$ _GPIO[107]

PCSB[2]_SOUTC_ $\overline{FRA_TX_EN}$ _GPIO[107] — PCSB[2] is the primary function and is a peripheral chip select output pin for the DSPI B module. SOUTC is the alternative function and is the data output for the DSPI C module. $\overline{FRA_TX_EN}$ is the second alternative function and is the FlexRay A transmit enable.

4.3.7.16 DSPI B Chip Select / DSPI C Data Input / GPIO PCSB[3]_SINC_GPIO[108]

PCSB[3]_SINC_GPIO[108] — PCSB[3] is the primary function and is a peripheral chip select output pin for the DSPI B module. SINC is the alternative function and is the data input for the DSPI C module.

4.3.7.17 DSPI B Chip Select / DSPI C Clock / GPIO PCSB[4]_SCKC_GPIO[109]

PCSB[4]_SCKC_GPIO[109] — PCSB[4] is the primary function and is a peripheral chip select output pin for the DSPI B module. SCKC is the alternative function and is the SPI clock for the DSPI C module.

4.3.7.18 DSPI B Chip Select / DSPI C Chip Select / GPIO PCSB[5]_PCSC[0]_GPIO[110]

PCSB[5]_PCSC[0]_GPIO[110] — PCSB[5] is the primary function and is a peripheral chip select output pin for the DSPI B module. PCSC[0] is the alternative function and is a DSPI C peripheral chip select output but also is a slave select (\overline{SS}) input pin for DSPI C module slave mode operation.

4.3.8 eQADC Signals

4.3.8.1 Analog Input / Differential Analog Input AN[0]_DAN0+

AN[0] is a single-ended analog input to the two on-chip ADCs. DAN0+ is the positive terminal of the differential analog input DAN0 (DAN0+ to DAN0-).

4.3.8.2 Analog Input / Differential Analog Input AN[1]_DAN0-

AN[1] is a single-ended analog input to the two on-chip ADCs. DAN0- is the negative terminal of the differential analog input DAN0 (DAN0+ to DAN0-).

4.3.8.3 Analog Input / Differential Analog Input AN[2]_DAN1+

AN[2] is a single-ended analog input to the two on-chip ADCs. DAN1+ is the positive terminal of the differential analog input DAN1 (DAN1+ to DAN1-).

4.3.8.4 Analog Input / Differential Analog Input AN[3]_DAN1-

AN[3] is a single-ended analog input to the two on-chip ADCs. DAN1- is the negative terminal of the differential analog input DAN1 (DAN1+ to DAN1-).

4.3.8.5 Analog Input / Differential Analog Input AN[4]_DAN2+

AN[4] is a single-ended analog input to the two on-chip ADCs. DAN2+ is the positive terminal of the differential analog input DAN2 (DAN2+ to DAN2-).

4.3.8.6 Analog Input / Differential Analog Input AN[5]_DAN2-

AN[5] is a single-ended analog input to the two on-chip ADCs. DAN2- is the negative terminal of the differential analog input DAN2 (DAN2+ to DAN2-).

4.3.8.7 Analog Input / Differential Analog Input AN[6]_DAN3+

AN[6] is a single-ended analog input to the two on-chip ADCs. DAN3+ is the positive terminal of the differential analog input DAN3 (DAN3+ to DAN3-).

4.3.8.8 Analog Input / Differential Analog Input AN[7]_DAN3–

AN[7] is a single-ended analog input to the two on-chip ADCs. DAN3– is the negative terminal of the differential analog input DAN3 (DAN3+ to DAN3–).

4.3.8.9 Analog Input / Multiplexed Analog Input AN[8]_ANW

AN[8] is an analog input pin. ANW is an analog input in external multiplexed mode.

4.3.8.10 Analog Input / Multiplexed Analog Input AN[9]_ANX

AN[9] is an analog input pin. ANX is an analog input in external multiplexed mode.

4.3.8.11 Analog Input / Multiplexed Analog Input AN[10]_ANY

AN[10] is an analog input pin. ANY is an analog input in external multiplexed mode.

4.3.8.12 Analog Input / Multiplexed Analog Input AN[11]_ANZ

AN[11] is an analog input pin. ANZ is an analog input in external multiplexed mode.

NOTE

Attempts to convert the input voltage applied to AN[12], AN[13], AN[14], and AN[15] while a non-eQADC function is selected causes an undefined conversion result.

4.3.8.13 Analog Input / Mux Address 0 / eQADC Serial Data Strobe AN[12]_MA[0]_SDS

AN[12]_MA[0]_SDS is an analog input pin. The alternative function, MA[0], is a MUX address pin. SDS is the serial data strobe for the eQADC SSI; this function is selected by setting the PA field of SIU_PCR215 to GPIO. This pin has reduced analog to digital conversion accuracy as compared to the AN[0:7] and AN[16:39] analog input pins because they are powered by V_{DDEH9} and can be used as digital pins for the synchronous serial interface (SSI) to external ADCs or used as the multiplexor digital outputs (MA[0]).

SDS is the serial data select output that is muxed with AN[12] and MA[0]. It indicates to the external (slave) device when it can latch incoming serial data, when it can output its own serial data, and when it must abort a data transmission. SDS corresponds to the chip select signal in a conventional SPI interface.

This pin is configured by setting the pad configuration register, SIU_PCR215.

4.3.8.14 Analog Input / Mux Address 1 / eQADC Serial Data Out AN[13]_MA[1]_SDO

AN[13]_MA[1]_SDO is an analog input pin. The alternative function, MA[1], is a MUX address pin. SDO is the serial data output for the eQADC SSI; this function is selected by setting the PA field of SIU_PCR216 to GPIO. This pin has reduced analog to digital conversion accuracy as compared to the AN[0:7] and AN[16:39] analog input pins because they are powered by V_{DDEH9} and can be used as digital pins for the synchronous serial interface (SSI) to external ADCs or used as the multiplexor digital outputs (MA[1]).

This pin is configured by setting the pad configuration register, SIU_PCR216.

4.3.8.15 Analog Input / Mux Address 2 / eQADC Serial Data In AN[14]_MA[2]_SDI

AN[14]_MA[2]_SDI is an analog input pin. The alternative function, MA[2], is a MUX address pin. SDI is the serial data input for the eQADC SSI; this function is selected by setting the PA field of SIU_PCR217 to GPIO. This pin has reduced analog to digital conversion accuracy as compared to the AN[0:7] and AN[16:39] analog input pins because they are powered by V_{DDEH9} and can be used as digital pins for the synchronous serial interface (SSI) to external ADCs or used as the multiplexor digital outputs (MA[2]).

This pin is configured by setting the pad configuration register, SIU_PCR217.

4.3.8.16 Analog Input / eQADC Free-Running Clock AN[15]_FCK

AN[15]_FCK is an analog input pin. The alternative function is the free-running clock for the eQADC SSI. This pin has reduced analog to digital conversion accuracy as compared to the AN[0:7] and AN[16:39] analog input pins.

This pin is configured by setting the pad configuration register, SIU_PCR218.

4.3.8.17 Analog Input AN[16:39]

AN[16:39] are analog input pins.

4.3.8.18 External Trigger / GPIO ETRIG[0:1]_GPIO[111:112]

External trigger signals trigger a software or hardware event. The eQADC can detect rising edge, falling edge, high level, and low level on each of the external trigger signals. The eQADC also supports configurable digital filters for these external trigger signals.

The eQADC external trigger input pins can be connected to the eTPU, the eMIOS, or an external signal. The source is selected by configuring the eQADC trigger source in the SIU_ETISR register. See [Section 6.3.1.158, “eQADC Trigger Input Select Register \(SIU_ETISR\).”](#)

ETRIG[0] is the external trigger for CFIFO0, CFIFO2, and CFIFO4, and ETRIG[1] serves as the external trigger for CFIFO1, CFIFO3, and CFIFO5.

GPIO[111:112] are general-purpose input output functions.

4.3.8.19 Voltage Reference High

V_{RH}

V_{RH} is the voltage reference high input pin for the eQADC.

4.3.8.20 Voltage Reference Low

V_{RL}

V_{RL} is the voltage reference low input pin for the eQADC.

4.3.8.21 Reference Bypass Capacitor REFBYPC

REFBYPC is a bypass capacitor input for the eQADC. The REFBYPC pin is used to connect an external bias capacitor between the REFBYPC pin and V_{RL} . The value of this capacitor must be 100 nF. This bypass capacitor is used to provide a stable reference voltage for the ADC.

4.3.9 eTPU Signals

4.3.9.1 eTPU A TCR Clock / External Interrupt Request / GPIO TCRCLKA_ \overline{IRQ} [7]_ GPIO[113]

TCRCLKA_ \overline{IRQ} [7]_ GPIO[113] is the TCR clock input for the eTPU A module. The alternative function is an external interrupt request input for the SIU module.

4.3.9.2 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[0]_ETPUA[12]_ GPIO[114]

ETPUA[0]_ETPUA[12]_ GPIO[114] is an input/output pin for the eTPU A module. ETPUA[0] is the primary function and is an input/output channel for the eTPU A module. The alternative function, ETPUA[12], is an output channel for the eTPU A module. When configured as ETPUA[12], the pin functions as output only. ETPUA[12] is an alternative function and is only for eTPU A module output channels.

4.3.9.3 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[1]_ETPUA[13]_ GPIO[115]

ETPUA[1]_ETPUA[13]_ GPIO[115] is an input/output channel pin for the eTPU A module. ETPUA[1] is the primary function and is an input/output channel for the eTPU A module. The alternative function, ETPUA[13], is an output channel for the eTPU A module. When configured as ETPUA[13], the pin functions as output only.

**4.3.9.4 eTPU A Channel / eTPU A Channel (Output Only) / GPIO
ETPUA[2]_ETPUA[14]_GPIO[116]**

ETPUA[2]_ETPUA[14]_GPIO[116] is an input/output channel pin for the eTPU A module. ETPUA[2] is the primary functions and is an input/output channel for the eTPU A module. The alternative function is an output channel for the eTPU A module. When configured as ETPUA[14], the pin functions as output only.

**4.3.9.5 eTPU A Channel / eTPU A Channel (Output Only) / GPIO
ETPUA[3]_ETPUA[15]_GPIO[117]**

ETPUA[3]_ETPUA[15]_GPIO[117] is an input/output channel pin for the eTPU A module. ETPUA[3] is the primary functions and is an input/output channel for the eTPU A module. The alternative function is an output channel for the eTPU A module. When configured as ETPUA[15], the pin functions as output only.

**4.3.9.6 eTPU A Channel / eTPU A Channel (Output Only) / FlexRay B Transmit / GPIO
ETPUA[4]_ETPUA[16]_FRB_TX_GPIO[118]**

ETPUA[4]_ETPUA[16]_FRB_TX_GPIO[118] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[16], is an output channel for the eTPU A module. When configured as ETPUA[16], the pin functions as output only. FRB_TX is the second alternative function and is the FlexRay B transmit.

**4.3.9.7 eTPU A Channel / eTPU A Channel (Output Only) / FlexRay B Transmit Enable / GPIO
ETPUA[5]_ETPUA[17]_FRB_TX_EN_GPIO[119]**

ETPUA[5]_ETPUA[17]_FRB_TX_EN_GPIO[119] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[17], is an output channel for the eTPU A module. When configured as ETPUA[17], the pin functions as output only. The second alternative function is the FlexRay B transmit enable.

**4.3.9.8 eTPU A Channel / eTPU A Channel (Output Only) / FlexRay B Receive / GPIO
ETPUA[6]_ETPUA[18]_FRB_RX_GPIO[120]**

ETPUA[6]_ETPUA[18]_FRB_RX_GPIO[120] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[18], is an output channel for the eTPU A module. When configured as ETPUA[18], the pin functions as output only. The second alternative function is the FlexRay B receive.

4.3.9.9 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[7]_ETPUA[19]_GPIO[121]

ETPUA[7]_ETPUA[19]_GPIO[121] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[19], is an output channel for the eTPU A module. When configured as ETPUA[19], the pin functions as output only.

4.3.9.10 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[8]_ETPUA[20]_GPIO[122]

ETPUA[8]_ETPUA[20]_GPIO[122] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[20], is an output channel for the eTPU A module. When configured as ETPUA[20], the pin functions as output only.

4.3.9.11 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[9]_ETPUA[21]_GPIO[123]

ETPUA[9]_ETPUA[21]_GPIO[123] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[21], is an output channel for the eTPU A module. When configured as ETPUA[21], the pin functions as output only.

4.3.9.12 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[10]_ETPUA[22]_GPIO[124]

ETPUA[10]_ETPUA[22]_GPIO[124] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[22], is an output channel for the eTPU A module. When configured as ETPUA[22], the pin functions as output only.

4.3.9.13 eTPU A Channel / eTPU A Channel (Output Only) / GPIO ETPUA[11]_ETPUA[23]_GPIO[125]

ETPUA[11]_ETPUA[23]_GPIO[125] is an input/output channel pin for the eTPU A module. The alternative function, ETPUA[23], is an output channel for the eTPU A module. When configured as ETPUA[23], the pin functions as output only.

4.3.9.14 eTPU A Channel / DSPI B Chip Select / GPIO ETPUA[12]_PCSB[1]_GPIO[126]

ETPUA[12]_PCSB[1]_GPIO[126] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI B module.

4.3.9.15 eTPU A Channel / DSPI B Chip Select / GPIO ETPUA[13]_PCSB[3]_GPIO[127]

ETPUA[13]_PCSB[3]_GPIO[127] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI B module.

**4.3.9.16 eTPU A Channel / DSPI B Chip Select / GPIO
ETPUA[14]_PCSB[4]_GPIO[128]**

ETPUA[14]_PCSB[4]_GPIO[128] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI B module.

**4.3.9.17 eTPU A Channel / DSPI B Chip Select / GPIO
ETPUA[15]_PCSB[5]_GPIO[129]**

ETPUA[15]_PCSB[5]_GPIO[129] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI B module.

**4.3.9.18 eTPU A Channel / DSPI D Chip Select / GPIO
ETPUA[16]_PCSD[1]_GPIO[130]**

ETPUA[16]_PCSD[1]_GPIO[130] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI D module.

**4.3.9.19 eTPU A Channel / DSPI D Chip Select / GPIO
ETPUA[17]_PCSD[2]_GPIO[131]**

ETPUA[17]_PCSD[2]_GPIO[131] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI D module.

**4.3.9.20 eTPU A Channel / DSPI D Chip Select / GPIO
ETPUA[18]_PCSD[3]_GPIO[132]**

ETPUA[18]_PCSD[3]_GPIO[132] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI D module.

**4.3.9.21 eTPU A Channel / DSPI D Chip Select / GPIO
ETPUA[19]_PCSD[4]_GPIO[133]**

ETPUA[19]_PCSD[4]_GPIO[133] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI D module.

**4.3.9.22 eTPU A Channel / External Interrupt / FlexRay A Transmit / GPIO
ETPUA[20]_IRQ[8]_FRA_TX GPIO[134]**

ETPUA[20]_IRQ[8]_FRA_TX_GPIO[134] is an input/output channel pin for the eTPU A module. The alternative functions are an external interrupt request inputs for the SIU module and the second alternative function is the FlexRay A transmit.

4.3.9.23 eTPU A Channel / External Interrupt / FlexRay A Receive / GPIO ETPUA[21]_IRQ[9]_FRA_RX_GPIO[135]

ETPUA[21]_IRQ[9]_FRA_RX_GPIO[135] is an input/output channel pin for the eTPU A module. The alternative functions are an external interrupt request inputs for the SIU module and the second alternative function is the FlexRay A receive.

4.3.9.24 eTPU A Channel / External Interrupt / GPIO ETPUA[22]_IRQ[10]_GPIO[136]

ETPUA[22]_IRQ[10]_GPIO[136] is an input/output channel pin for the eTPU A module. The alternative functions are an external interrupt request inputs for the SIU module.

4.3.9.25 eTPU A Channel / External Interrupt / FlexRay A Transmit Enable / GPIO ETPUA[23]_IRQ[11]_FRA_TX_EN / GPIO[137]

ETPUA[23]_IRQ[11]_FRA_TX_EN_GPIO[137] is an input/output channel pin for the eTPU A module. The alternative functions are an external interrupt request inputs for the SIU module and the second alternative function is the FlexRay A transmit enable.

4.3.9.26 eTPU A Channel (Output Only) / External Interrupt / GPIO ETPUA[24:27]_IRQ[12:15]_GPIO[138:141]

ETPUA[24:27]_IRQ[12:15]_GPIO[138:141] are output channel pins for the eTPU A module. The alternative function is external interrupt request inputs for the SIU module.

4.3.9.27 eTPU A Channel (Output Only) / DSPI C Chip Select / GPIO ETPUA[28]_PCSC[1]_GPIO[142]

ETPUA[28]_PCSC[1]_GPIO[142] is an output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI C module.

4.3.9.28 eTPU A Channel (Output Only) / DSPI C Chip Select / GPIO ETPUA[29]_PCSC[2]_GPIO[143]

ETPUA[29]_PCSC[2]_GPIO[143] is an output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI C module.

4.3.9.29 eTPU A Channel / DSPI C Chip Select / GPIO ETPUA[30]_PCSC[3]_GPIO[144]

ETPUA[30]_PCSC[3]_GPIO[144] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI C module.

4.3.9.30 eTPU A Channel / DSPI C Chip Select / GPIO ETPUA[31]_PCSC[4]_GPIO[145]

ETPUA[31]_PCSC[4]_GPIO[145] is an input/output channel pin for the eTPU A module. The alternative function is a peripheral chip select for the DSPI C module.

4.3.10 eMIOS Signals

4.3.10.1 eMIOS Channel / eTPU A Channel (Output Only) / GPIO eMIOS[0:9]_ETPUA[0:9]_GPIO[179:188]

EMIOS[0:9]_ETPUA[0:9]_GPIO[179:188] is an input/output channel pin for the eMIOS module. The alternative function is output channels for the eTPU A module; that is, when configured as ETPUA[0:9], the pins function as outputs only.

4.3.10.2 eMIOS Channel / DSPI D Chip Select / GPIO EMIOS[10:11]_PCSD[3:4]_GPIO[189:190]

EMIOS[10:11]_PCSD[3:4]_GPIO[189:190] is an input/output channel pin for the eMIOS module. PCSD[3:4]_ is the alternative function is a peripheral chip select for the DSPI D module.

4.3.10.3 eMIOS Channel (Output Only) / DSPI C Data Output / GPIO EMIOS[12]_SOUTC_GPIO[191]

EMIOS[12]_SOUTC_GPIO[191] is an output channel pin for the eMIOS module. The alternative function is the data output for the DSPI C module.

4.3.10.4 eMIOS Channel (Output Only) / DSPI D Data Output / GPIO EMIOS[13]_SOUTD_GPIO[192]

EMIOS[13]_SOUTD_GPIO[192] is an output channel pin for the eMIOS module. The alternative function is the data output for the DSPI D module.

4.3.10.5 eMIOS Channel (Output Only) / External Interrupt Request / FlexCAN Transmit Data / GPIO EMIOS[14]_IRQ[0]_CNTXD_GPIO[193]

EMIOS[14]_IRQ[0]_CNTXD_GPIO[193] is an output channel pin for the eMIOS module. The alternative function is an external interrupt request input and the second alternative function is the FlexCAN transmit data.

4.3.10.6 eMIOS Channel (Output Only) / External Interrupt Request / FlexCAN Receive Data / GPIO EMIOS[15]_IRQ[1]_CNRXD_GPIO[194]

EMIOS[15]_IRQ[1]_CNRXD_GPIO[194] is an output channel pin for the eMIOS module. The alternative function is an external interrupt request input and the second alternative function is the FlexCAN receive.

4.3.10.7 eMIOS Channel / FlexRay Debug / GPIO EMIOS[16]_FR_DBG[3]_GPIO[195]

EMIOS[16]_FR_DBG[3]_GPIO[195] is an input/output channel pin for the eMIOS module. The alternative function is used to debug FlexRay.

4.3.10.8 eMIOS Channel / FlexRay Debug / GPIO EMIOS[17]_FR_DBG[2]_GPIO[196]

EMIOS[17]_FR_DBG[2]_GPIO[196] is an input/output channel pin for the eMIOS module. The alternative function is used to debug FlexRay.

4.3.10.9 eMIOS Channel / FlexRay Debug / GPIO EMIOS[18]_FR_DBG[1]_GPIO[197]

EMIOS[18]_FR_DBG[1]_GPIO[197] is an input/output channel pin for the eMIOS module. The alternative function is used to debug FlexRay.

4.3.10.10 eMIOS Channel / FlexRay Debug / GPIO EMIOS[19]_FR_DBG[0]_GPIO[198]

EMIOS[19]_FR_DBG[0]_GPIO[198] is an input/output channel pin for the eMIOS module. The alternative function is used to debug FlexRay.

4.3.10.11 eMIOS Channel / GPIO EMIOS[20:21]_GPIO[199:200]

EMIOS[20:21]_GPIO[199:200] is an input/output channel pin for the eMIOS module.

4.3.10.12 eMIOS Channel / FlexCAN Transmit / GPIO EMIOS[22]_CNTXE_GPIO[201]

EMIOS[22]_CNTXE_GPIO[201] is an input/output channel pin for the eMIOS module. The alternative function is used for FlexCAN transmit.

4.3.10.13 eMIOS Channel / FlexCAN Receive / GPIO EMIOS[23]_CNRXE_GPIO[202]

EMIOS[23]_CNRXE_GPIO[202] is an input/output channel pin for the eMIOS module. The alternative function is used for FlexCAN receive.

4.3.11 General-Purpose Input / Output Signals

4.3.11.1 eMIOS Channel (Output Only) / GPIO EMIOS[14:15]_GPIO[203:204]

The EMIOS[14:15]_GPIO[203:204] pins' primary function is EMIOS[14:15]. When configured as EMIOS[14:15], the pins function as output channels for the eMIOS module. Because other balls on the BGA map are already named EMIOS[14:15], the ball names on the BGA map for these signals are named GPIO[203:204]. The general-purpose I/O function for these pins is GPIO.

4.3.11.2 GPIO GPIO[205]

The GPIO[205] only has GPIO functionality. This pin is reserved for double data rate memory interface support. Note that the pad type for GPIO[205] is MH (3.0V to 5.5V).

4.3.11.3 GPIO GPIO[206:207]

GPIO[206:207] have GPIO functionality. The GPIO pins are reserved for double data rate memory (DDRAM) interface support. Note that the pad types for GPIO[206:207] are F (1.62V to 3.6V). See [Section 6.3.1.113, "Pad Configuration Registers 206 - 207 \(SIU_PCR206 - SIU_PCR207\)."](#)

The GPIO[206:207] pins can be selected as sources for the ADC trigger in the SIU_ETISR.

4.3.12 Calibration Bus and Fast Ethernet Controller (FEC) Signals

4.3.12.1 Calibration Chip Select 0 / GPIO $\overline{\text{CAL_CS}}[0]$

$\overline{\text{CAL_CS}}[0]$ is the primary function and selects the primary chip for calibration. It is available on the 496 package only.

4.3.12.2 Calibration Chip Select / Calibration Address $\overline{\text{CAL_CS}}[2:3]$ _CAL_ADDR[10:11]

$\overline{\text{CAL_CS}}[2:3]$ are calibration chip selects and are the primary functions. CAL_ADDR[10:11] are the alternative functions and are calibration addresses. It is available on the 496 package only.

4.3.12.3 Calibration Address / FEC Transmit Clock CAL_ADDR[12]_FEC_TX_CLK

CAL_ADDR[12] is the primary function and is a calibration address. It is available on the 496 package only. The fast ethernet signal FEC_TX_CLK is the FEC transmit clock and is the alternative function. It is available on the 496 and 416 packages.

4.3.12.4 Calibration Address / FEC Transmit Carrier Sense Data CAL_ADDR[13]_FEC_CR

CAL_ADDR[13] is the primary function and is a calibration address. It is available on the 496 package only. The fast ethernet signal FEC_CR is the alternative function and is the FEC carrier sense data. It is available on the 496 and 416 packages.

4.3.12.5 Calibration Address / FEC Transmit Error CAL_ADDR[14]_FEC_TX_ER

CAL_ADDR[14] is the primary function and is a calibration address. It is available on the 496 package only. FEC_TX_ER is the alternative function and is the FEC transmit error. It is available on the 496 and 416 packages.

4.3.12.6 Calibration Address / FEC Receive Clock CAL_ADDR[15]_FEC_RX_CLK

CAL_ADDR[15] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RX_CLK is the alternative function and is the FEC receive clock. It is available on the 496 and 416 packages.

4.3.12.7 Calibration Address / FEC Transmit Data CAL_ADDR[16]_FEC_TXD[0]

CAL_ADDR[16] is the primary function and is a calibration address. It is available on the 496 package only. FEC_TXD[0] is the alternative function and is the FEC transmit data. It is available on the 496 and 416 packages.

4.3.12.8 Calibration Address / FEC Receive Error CAL_ADDR[17]_FEC_RX_ER

CAL_ADDR[17] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RX_ER is the alternative function and is the FEC receive error. It is available on the 496 and 416 packages.

4.3.12.9 Calibration Address / FEC Receive Data
CAL_ADDR[18]_FEC_RXD[0]

CAL_ADDR[18] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RXD[0] is the alternative function and is the FEC receive data. It is available on the 496 and 416 packages.

4.3.12.10 Calibration Address / FEC Transmit Data
CAL_ADDR[19]_FEC_TXD[3]

CAL_ADDR[19] is the primary function and is a calibration address. It is available on the 496 package only. FEC_TXD[3] is the alternative function and is the FEC transmit data. It is available on the 496 and 416 packages.

4.3.12.11 Calibration Address / FEC Collision Detect
CAL_ADDR[20]_FEC_COL

CAL_ADDR[20] is the primary function and is a calibration address. It is available on the 496 package only. FEC_COL is the alternative function and is the FEC collision detect. It is available on the 496 and 416 packages.

4.3.12.12 Calibration Address / FEC Receive Data Valid
CAL_ADDR[21]_FEC_RX_DV

CAL_ADDR[21] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RX_DV is the alternative function and is the FEC receive data valid. It is available on the 496 and 416 packages.

4.3.12.13 Calibration Address / FEC Transmit Enable
CAL_ADDR[22]_FEC_TX_EN

CAL_ADDR[22] is the primary function and is a calibration address. It is available on the 496 package only. FEC_TX_EN is the alternative function and is the FEC transmit enable. It is available on the 496 and 416 packages.

4.3.12.14 Calibration Address / FEC Transmit Data
CAL_ADDR[23]_FEC_TXD[2]

CAL_ADDR[23] is the primary function and is a calibration address. It is available on the 496 package only. FEC_TXD[2] is the alternative function and is the FEC transmit data. It is available on the 496 and 416 packages.

4.3.12.15 Calibration Address / FEC Transmit Data CAL_ADDR[24]_FEC_TXD[1]

CAL_ADDR[24] is the primary function and is a calibration address. It is available on 496 package only. FEC_TXD[1] is the alternative function and is the FEC transmit data. It is available on the 496 and 416 packages.

4.3.12.16 Calibration Address / FEC Receive Data CAL_ADDR[25]_FEC_RXD[1]

CAL_ADDR[25] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RXD[1] is the alternative function and is the FEC receive data. It is available on the 496 and 416 packages.

4.3.12.17 Calibration Address / FEC Receive Data CAL_ADDR[26]_FEC_RXD[2]

CAL_ADDR[26] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RXD[2] is the alternative function and is the FEC receive data. It is available on the 496 and 416 packages.

4.3.12.18 Calibration Address / FEC Receive Data CAL_ADDR[27]_FEC_RXD[3]

CAL_ADDR[27] is the primary function and is a calibration address. It is available on the 496 package only. FEC_RXD[3] is the alternative function and is the FEC receive data. It is available on the 496 and 416 packages.

4.3.12.19 Calibration Address / FEC Management Clock Output CAL_ADDR[28]_FEC_MDC

CAL_ADDR[28] is the primary function and is a calibration address. It is available on the 496 package only. FEC_MDC is the alternative function and is the FEC Management Clock Output. It is available on the 496 and 416 packages.

4.3.12.20 Calibration Address / FEC Management Data I/O CAL_ADDR[29]_FEC_MDIO

CAL_ADDR[29] is the primary function and is a calibration address. It is available on the 496 package only. FEC_MDIO is the alternative function and is the FEC Management Data I/O. It is available on the 496 and 416 packages.

4.3.12.21 Calibration Address (496 package only) **CAL_ADDR[30]**

CAL_ADDR[30] is the primary function and is a calibration address. It is available on the 496 package only.

4.3.12.22 Calibration Data **CAL_DATA[0:15]**

CAL_DATA[0:15] is the primary function and is a calibration address. It is available on the 496 package only.

4.3.12.23 Calibration Read/Write **CAL_RD_WR**

$\overline{\text{CAL_RD_WR}}$ is the primary function and is a calibration read/write signal function. It is available on the 496 package only.

4.3.12.24 Calibration Write/Byte Enable **CAL_WE/BE[0:1]**

$\overline{\text{CAL_WE/BE[0:1]}}$ is the primary function and is a calibration write enable and byte enable. It is available on the 496 package only.

4.3.12.25 Calibration Output Enable **CAL_OE**

$\overline{\text{CAL_OE}}$ is the primary function and is a calibration output enable. It is available on the 496 package only.

4.3.12.26 Calibration Transfer Start **CAL_TS**

$\overline{\text{CAL_TS}}$ is the primary function and is a calibration transfer start. It is available on the 496 package only.

4.3.13 Clock Synthesizer Signals

4.3.13.1 Crystal Oscillator Output **XTAL**

XTAL is the output pin for an external crystal oscillator.

4.3.13.2 Crystal Oscillator Input / External Clock Input EXTAL_EXTCLK

EXTAL is the input pin for an external crystal oscillator or an external clock source. The alternative function is the external clock input. The function of this pin is determined by the PLLCFG configuration pins.

4.3.13.3 System Clock Output CLKOUT

CLKOUT is the device system clock output.

4.3.13.4 Engineering Clock Output ENGCLK

ENGCLK is a 50% duty cycle output clock with a maximum frequency of the device system clock divided by two. ENGCLK is not synchronous to CLKOUT.

4.3.14 Power / Ground Signals

4.3.14.1 Voltage Regulator Control Supply Input V_{RC33}

V_{RC33} is the 3.3V supply input pin for the on-chip 1.5V regulator control circuit.

4.3.14.2 Voltage Regulator Control Output V_{RCCTL}

V_{RCCTL} is the output pin for the on-chip 1.5V regulator control circuit.

4.3.14.3 eQADC Analog Supply V_{DDAn}

V_{DDAn} is the analog supply input pin for the eQADC.

4.3.14.4 eQADC Analog Ground Reference V_{SSAn}

V_{SSAn} is the analog ground reference input pin for the eQADC.

4.3.14.5 Clock Synthesizer Power Input V_{DDSYN}

V_{DDSYN} is the power supply input for the FMPLL.

4.3.14.6 Clock Synthesizer Ground Input V_{SSSYN}

V_{SSSYN} is the ground reference input for the FMPLL.

4.3.14.7 Flash Read Supply Input V_{FLASH}

V_{FLASH} is the on-chip Flash read supply input.

4.3.14.8 Flash Program/Erase Supply Input V_{PP}

V_{PP} is the on-chip Flash program/erase supply input.

4.3.14.9 SRAM Standby Power Input V_{STBY}

V_{STBY} is the power supply input that is used to maintain a portion of the contents of internal SRAM during power down. If not used, tie V_{STBY} to V_{SS} .

4.3.14.10 Internal Logic Supply Input V_{DD}

V_{DD} is the 1.5V logic supply input.

4.3.14.11 External I/O Supply Input V_{DDEn}

V_{DDE} is the 1.8V to 3.3V, with a tolerance of $\pm 10\%$ external I/O supply input.

4.3.14.12 External I/O Supply Input V_{DDEHn}

V_{DDEHn} is the 3.3V to 5.0V, with a tolerance of -10% to $+5\%$ external I/O supply input.

4.3.14.13 Fixed 3.3V Internal Supply Input V_{DD33}

V_{DD33} is the 3.3V internal supply input.

4.3.14.14 Ground V_{SS}

V_{SS} is the ground reference input.

4.3.15 I/O Power/Ground Segmentation

Table 4-2 gives the preliminary power/ground segmentation. Each segment provides the power and ground for the I/O pins and can be powered by any voltage within the allowed voltage range regardless of the power on the other segments. The power/ground segmentation applies regardless of whether a particular pin is configured for its primary function or GPIO.

Table 4-2. MPC5567 Device Power/Ground Segmentation

Power Segment	Voltage ¹	I/O Pins Powered by Segment
V _{DDA0}	5.0V	AN[22:35], V _{RH} , V _{RL} , REFBYPC
V _{DDA1}	5.0V	AN[0:7], AN[8]_ANW, AN[9]_ANX, AN[10]_ANY, AN[11]_ANZ, AN[16:21], AN[36:39]
V _{DDE2}	1.8V–3.3V	$\overline{CS}[0]_{ADDR[8]_{GPIO[0]}}$, $\overline{CS}[1:3]_{ADDR[9:11]_{GPIO[1:3]}}$, ADDR[8:11]_GPIO[4:7], ADDR[12:29]_GPIO[8:25], ADDR[30:31]_ADDR[6:7]_GPIO[26:27], RD_WR_GPIO[62], $\overline{BDIP}_{GPIO[63]}$, $\overline{WE/BE}[0:3]_{GPIO[64:67]}$, $\overline{TS}_{GPIO[69]}$, $\overline{TA}_{GPIO[70]}$, $\overline{TEA}_{GPIO[71]}$,
V _{DDE3} ²	1.8V–3.3V	DATA[0:20]_GPIO[28:48], DATA[21]_FRA_TX_GPIO[49], DATA[22]_FRA_RX_GPIO[50], DATA[23]_FRA_TX_EN_GPIO[51], DATA[24]_GPIO[52], DATA[25]_FRB_TX_GPIO[53], DATA[26]_FRB_TX_EN_GPIO[54], DATA[27]_FRB_RX_GPIO[55], DATA[28]_GPIO[56], DATA[29:31]_GPIO[57:59], $\overline{OE}_{GPIO[68]}$, BR_GPIO[72], $\overline{BG}_{GPIO[73]}$, GPIO[206:207]
V _{DDE5}	1.8V–3.3V	CLKOUT, ENGCLK
V _{DDE7}	1.8V–3.3V	\overline{EVTI} , $\overline{EVT0}$, MCKO, MDO[3:0], MDO[11:4]_GPIO[82:75], $\overline{MSEO}[1:0]$, \overline{RDY} , TCK, TDI, TDO, TMS, JCOMP, \overline{TEST}
V _{DDE12}	1.8V–3.3V	$\overline{CAL_CS}[0]$, $\overline{CAL_CS}[2:3]_{CAL_ADDR[10:11]}$, CAL_ADDR[12]_FEC_TX_CLK, CAL_ADDR[13]_FEC_CRS, CAL_ADDR[14]_FEC_TX_ER, CAL_ADDR[15]_FEC_RX_CLK, CAL_ADDR[16]_FEC_TXD[0], CAL_ADDR[17]_FEC_RX_ER, CAL_ADDR[18]_FEC_RXD[0], CAL_ADDR[19]_FEC_TXD[3], CAL_ADDR[20]_FEC_COL, CAL_ADDR[21]_FEC_RX_DV, CAL_ADDR[22]_FEC_TX_EN, CAL_ADDR[23]_FEC_TXD[0], CAL_ADDR[24]_FEC_TXD[1], CAL_ADDR[25]_FEC_RXD[1], CAL_ADDR[26]_FEC_RXD[2], CAL_ADDR[27]_FEC_RXD[3], CAL_ADDR[28]_FEC_MDC, CAL_ADDR[29]_FEC_MDIO, CAL_ADDR[30], CAL_DATA[0:15], CAL_RD_WR, $\overline{CAL_WE/BE}[0:1]$, $\overline{CAL_OE}$, $\overline{CAL_TS}$
V _{DDEH1}	3.3V–5.0V	TCRCLKA_ $\overline{IRQ}[7]$, ETPUA[0:3]_ETPUA[12:15]_GPIO[114:117], ETPUA[4]_ETPUA[16]_FRB_TX_GPIO[118], ETPUA[5]_ETPUA[17]_FRB_TX_EN_GPIO[119], ETPUA[6]_ETPUA[18]_FRB_RX_GPIO[120], ETPUA[7:11]_ETPUA[19:23]_GPIO[125], ETPUA[12]_PSCB[1]_GPIO[126], ETPUA[13:15]_PSCB[3:5]_GPIO[127:129], ETPUA[16:19]_PSCD[1:3]_GPIO[130:133], ETPUA[20]_ $\overline{IRQ}[8]$ _FR_TX_GPIO[134], ETPUA[21]_ $\overline{IRQ}[9]$ _FRA_RX_GPIO[135], ETPUA[22]_ $\overline{IRQ}[10]$ _GPIO[136], ETPUA[23]_ $\overline{IRQ}[11]$ _FRA_TX_EN_GPIO[136], ETPUA[24:27]_ $\overline{IRQ}[12:15]$ _GPIO[138:141], ETPUA[28]_PCSC[1:4]_GPIO[142:145],

Table 4-2. MPC5567 Device Power/Ground Segmentation (continued)

Power Segment	Voltage ¹	I/O Pins Powered by Segment
V _{DDEH4}	3.3V–5.0V	CNTXA_TXDA_GPIO[83], CNRXA_RXDA_GPIO[84], CNTXB_PCSC[3]_FRA_TX_GPIO[85], CNRXB_PCSC[4]_FRA_RX_GPIO[86], EMIOS[0:9]_ETPUA[0:9]_GPIO[179:188], EMIOS[10:11]_PCSD[3:4]_GPIO[189:190], EMIOS[12]_SOUTC_GPIO[191], EMIOS[13]_SOUTD_GPIO[192], EMIOS[14]_IRQ[0]_CNTXD_GPIO[193], EMIOS[15]_IRQ[1]_CNRXD_GPIO[194], EMIOS[16:19]_FR_DBG[3:0]_GPIO[195:198], EMIOS[20:21]_GPIO[199:200], EMIOS[22]_CNTXE_GPIO[201], EMIOS[23]_CNRXE_GPIO[202], EMIOS[14:15]_GPIO[203:204]
V _{DDEH6}	3.3V–5.0V	RESET, RSTOUT, PLLCFG[0]_IRQ[4]_GPIO[208], PLLCFG[1]_IRQ[5]_SOUTD_GPIO[209], PLLCFG[2], RSTCFG, BOOTCFG[0:1]_IRQ[2:3]_GPIO[212:213], WKPCFG_GPIO[213], CNTXC_PSCD[3]_GPIO[87], CNRXC_PSCD[4]_GPIO[88], TXDA_GPIO[89], RXDA_GPIO[90], TXDB_PCSD[1]_GPIO[91], RXDB_PCSD[5]_GPIO[92], PCSC[1:2]_GPIO[93:94], PCSC[5]_GPIO[95], PCSD[2]_GPIO[96], PCSB[2]_GPIO[97], SCKD_GPIO[98], SIND_GPIO[99], SOUTD_GPIO[100], PCSB[3]_GPIO[101], PCSB[3]_SINC_GPIO[108], PCSB[4]_SCKC_GPIO[109], PCSB[5]_PCSC[0]_GPIO[110]
V _{DDEH8}	3.3V–5.0V	ETRIG[0:1]_GPIO[111:112], GPIO[205]
V _{DDEH9}	3.3V–5.0V	AN[12]_MA[0]_SDS, AN[13]_MA[1]_SDO, AN[14]_MA[2]_SDI, AN[15]_FCK
V _{DDEH10}	3.3V–5.0V	SCKB_PCSC[1]_GPIO[102], SINB_PCSC[2]_GPIO[103], SOUTB_PCSC[5]_GPIO[104], PCSB[0]_PCSD[2]_GPIO[105], PCSB[1]_PCSD[0]_GPIO[106], PCSB[2]_SOUTC_FRA_TX_EN_GPIO[107]
V _{DDSYN}	3.3V	EXTAL, XTAL
V _{DD}	1.5V	V _{DD}
—	3.3V	V _{DD33} , V _{RC33} , V _{RCCTL} , V _{DDA1} , V _{DDSYN} , V _{FLASH}
—	5.0V	V _{PP} , V _{DDA1}
V _{DDE_n}	1.8V–3.3V	V _{DDE2} , V _{DDE3} , V _{DDE5} , V _{DDE7} , V _{DDE12}
V _{DDEH_n}	3.3V–5.0V	V _{DDEH1} , V _{DDEH4} , V _{DDEH6} , V _{DDEH8} , V _{DDEH9} , V _{DDEH10}
V _{STBY}	1.0V	V _{STBY}
V _{SSA0}	GND	V _{SSA0}
V _{SSA1}	GND	V _{SSA1}
V _{SSSYN}	GND	V _{SSSYN}
V _{SS}	GND	V _{SS}
NC	—	NC

¹ These are nominal power supply voltages. For actual minimum and maximum operating voltage specifications, refer to the MPC5567 Data Sheet.

² The V_{DDE2} and V_{DDE3} segments are shorted together and must use the same power supply input. The V_{DDE3} pins in this segment are also labeled V_{DDE2} in the BGA map.

4.4 eTPU Pin Connections and Serialization

4.4.1 ETPUA[0:15]

The ETPUA[0:15] module channels connect to external pins or may be serialized out through the DSPIC module. A diagram for the ETPUA[0:15] to SOUTC connection is given in Figure 4-4. The full list of connections is given in Table 4-3. Although not shown in Figure 4-4, the output channels of ETPUA[12:15] are connected to the ETPUA[0:3]_ETPUA[12:15]_GPIO[114:117] pins.

The eTPU TCRA clock input is connected to an external pin only.

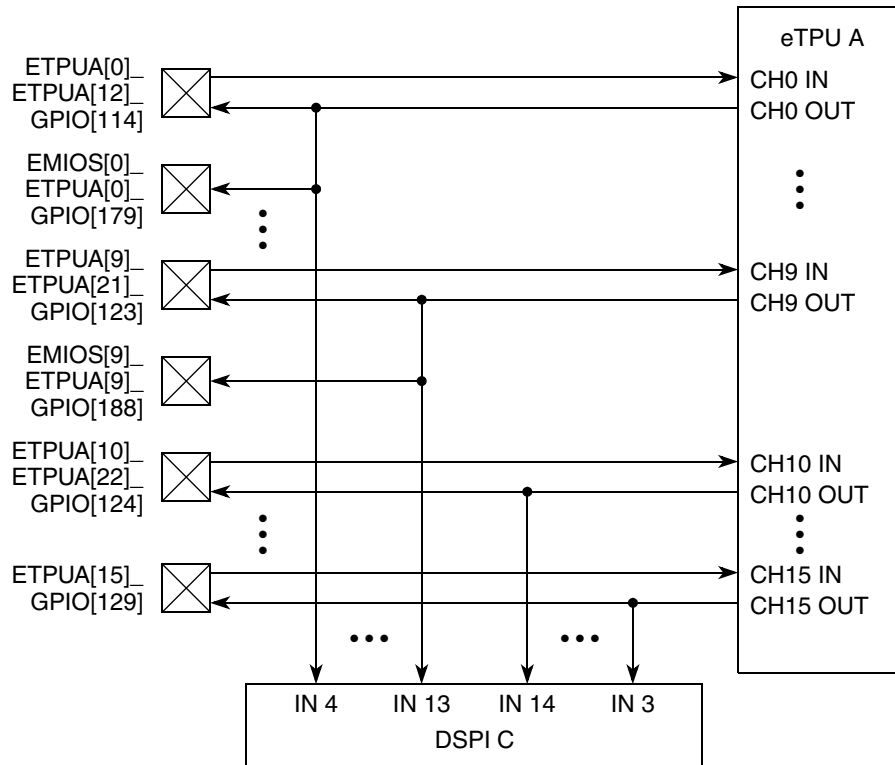


Figure 4-4. ETPUA[0:15]—DSPI C I/O Connections

Table 4-3. ETPUA[0:15]—DSPI C I/O Mapping

DSPI C Serialized Input	eTPU A Channel Output
15	11
14	10
13	9
12	8
11	7
10	6
9	5

Table 4-3. ETPUA[0:15]—DSPI C I/O Mapping (continued)

DSPI C Serialized Input	eTPU A Channel Output
8	4
7	3
6	2
5	1
4	0
3	15
2	14
1	13
0	12

4.4.2 ETPUA[16:31]

ETPUA[16:23,30:31] connect to external pins for the input and output function. ETPUA[16:21,24:29] are serialized out on the DSPI B and DSPI D modules and ETPUA[22:23,30:31] are not serialized out. ETPUA[24:29] connect to external pins for only the output function. [Figure 4-5](#) shows the connections for ETPUA16 and applies to ETPUA[16:21]. [Figure 4-6](#) shows the connections for ETPUA24 and applies to TPUA[24:29]. The full ETPUA to DSPI B connections are given in [Table 4-4](#), and ETPU A to DSPI D in [Table 4-5](#). Although not shown in [Figure 4-5](#), the output channels of ETPUA[16:23] are also connected to the ETPUA[4:11]_ETPUA[16:23]_GPIO[118:125] pins.

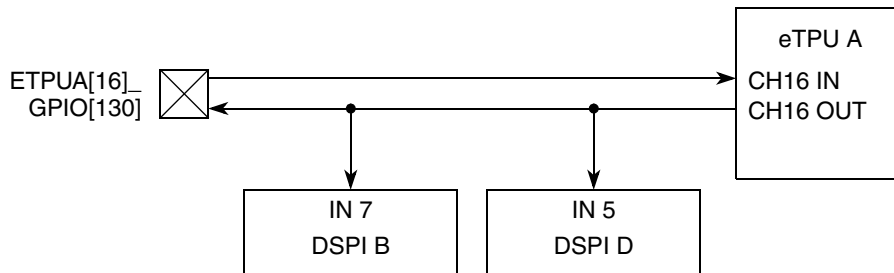


Figure 4-5. ETPUA[16:21]—DSPI B—DSPI D I/O Connections

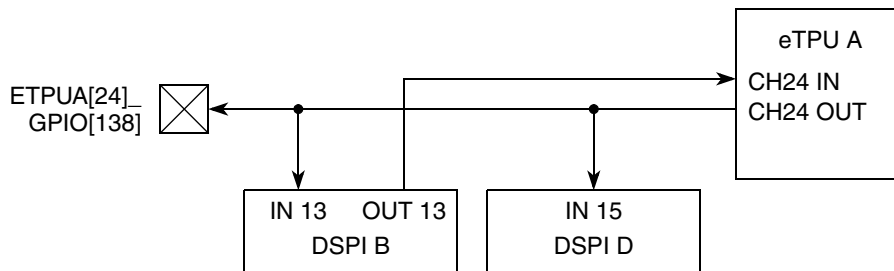


Figure 4-6. ETPUA[24:29]—DSPI B—DSPI D I/O Connections

Table 4-4. ETPUA[16:31]—DSPI B I/O Mapping

DSPI B Serialized Inputs / Outputs ¹	eTPU A Channel Output	eTPU A Channel Input
13	24	24
12	25	25
11	26	26
10	27	27
9	28	28
8	29	29
7	16	—
6	17	—
5	18	—
4	19	—
3	20	—
2	21	—

¹ DSPI B serialized input channels 0, 1, 14, and 15 are connected to eMIOS channels. DSPI B serialized output channels 14, 15 are connected to eMIOS channels. DSPI B serialized output channels 0 through 7 are not connected.

Table 4-5. ETPUA[16:31]—DSPI D I/O Mapping

DSPI D Serialized Inputs ¹	eTPU A Channel Output
15	24
14	25
13	26
12	27
11	28
10	29
5	16
4	17
3	18
2	19
1	20
0	21

¹ DSPI D serialized input channels 6 through 9 are connected to eMIOS channels.

4.5 eMIOS Pin Connections and Serialization

The eMIOS channels connect to external pins or can be serialized in and out of the device. Both the input and output channels of EMIOS[0:11, 16:23] connect to pins, but only the output channels of EMIOS[12:15] connect to pins. The output channels of EMIOS[10:13] can be serialized OUT, and the inputs of EMIOS[12:15] can be serialized IN. The DSPI connections for EMIOS[10:11] are given in Figure 4-7, Figure 4-8 for EMIOS[12:13], and Figure 4-9 for EMIOS[14:15].

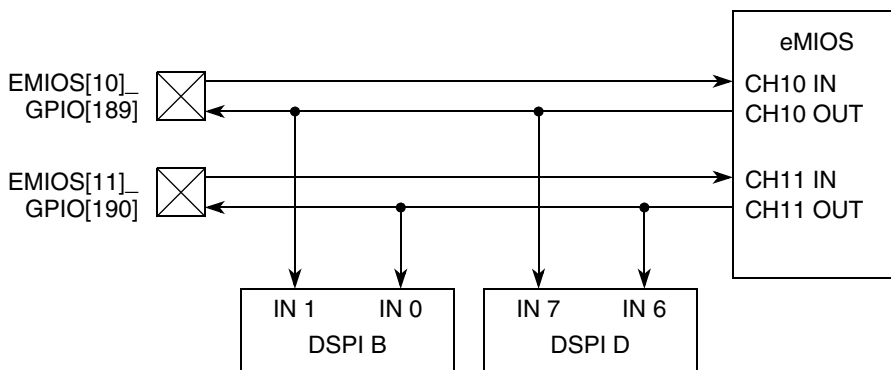


Figure 4-7. EMIOS[10:11]—DSPI B—DSPI D I/O Connections

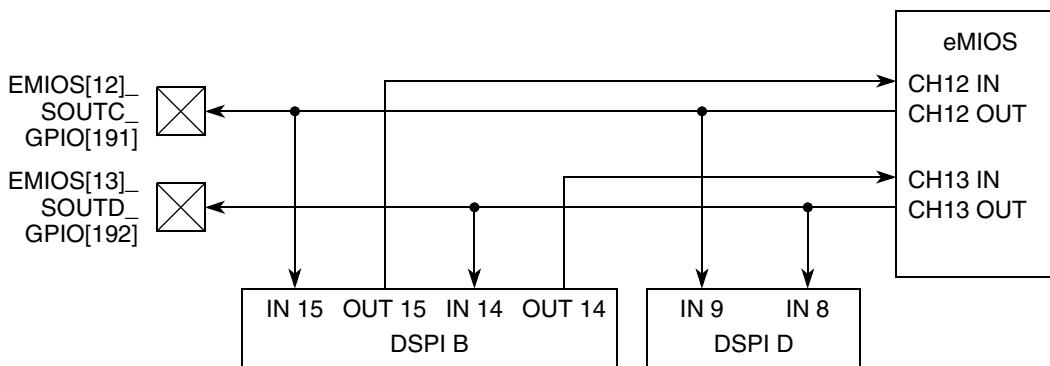


Figure 4-8. EMIOS[12:13]—DSPI B—DSPI D I/O Connections

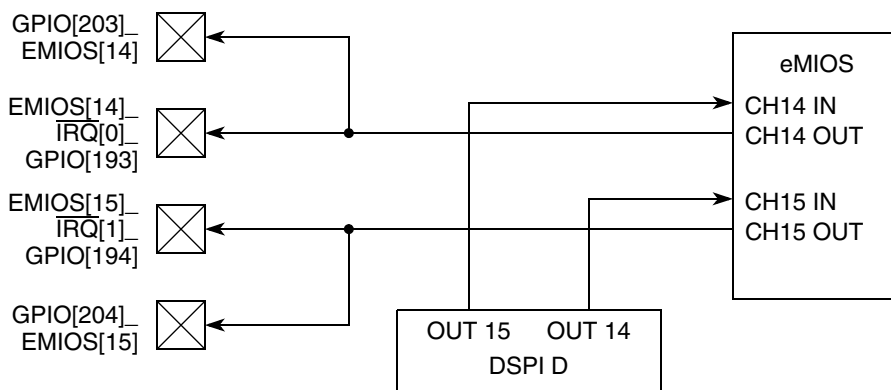


Figure 4-9. EMIOS[14:15]—DSPI D I/O Connections

4.6 Document Revision History

Table 4-6. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	This is the first public version of this document.

Chapter 5

Peripheral Bridge (PBRIDGE_A, PBRIDGE_B)

5.1 Introduction

5.1.1 Block Diagram

The PBRIDGE is the interface between the system bus and on-chip peripherals as shown in [Figure 5-1](#).

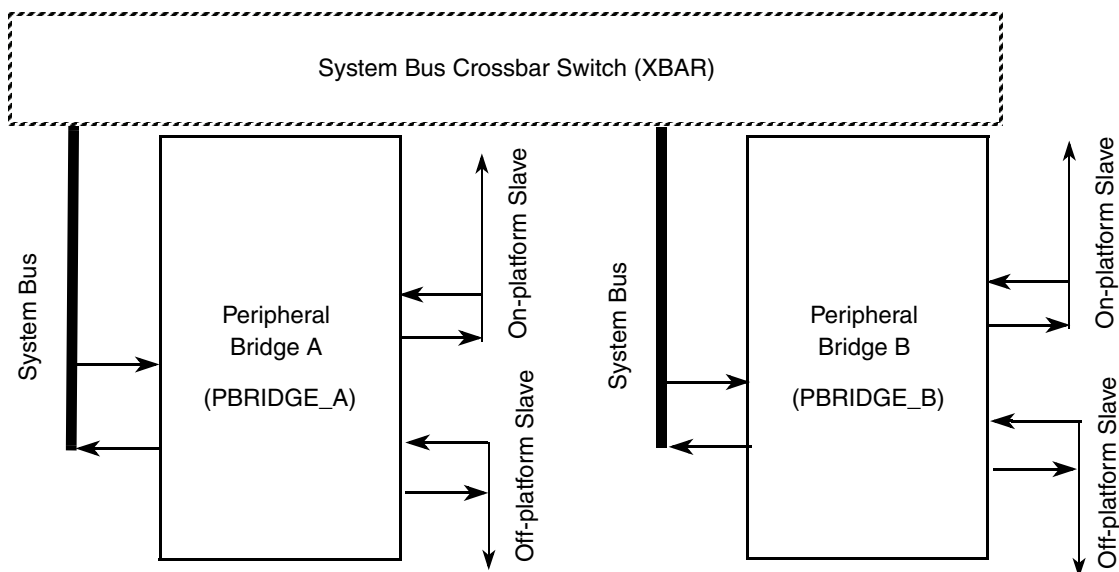


Figure 5-1. PBRIDGE Interface

5.1.2 Overview

There are two peripheral bridges, PBRIDGE_A and PBRIDGE_B, which act as interfaces between the system bus and lower bandwidth peripherals. In this manual, PBRIDGE refers to either of these bridges, as their functionality is identical. The only difference is the peripherals to which they connect. Accesses that fall within the address space of the PBRIDGE are decoded to provide individual module selects for peripheral devices on the slave bus interface.

5.1.2.1 Access Protections

The PBRIDGE provides programmable access protections for both masters and peripherals. It allows the privilege level of a master to be overridden, forcing it to user mode privilege, and allows masters to be designated as trusted or untrusted. Peripherals may require supervisor privilege level for access, may restrict access to a trusted master only, and may be write-protected. See [Table 5-1](#) for a list of master/slave

IDs and the peripherals associated with each master and slave. More information on access protection may be found in [Section 13.3.2.9, “Flash Bus Interface Unit Access Protection Register \(FLASH_BIUAPR\).”](#)

Table 5-1. Peripheral Bridge Master/Slave ID Table

XBAR Port	XBS port Module	Master ID	Peripheral
Master 0	e200z6 Core—CPU	0	—
	e200z6—Nexus	1	—
Master 1	eDMA	2	—
Master 2	EBI	3	—
Master 3	FEC	4	—
Master 6	FlexRay	6	—
Slave 0	FLASH		—
Slave 1	EBI		—
Slave 3	SRAM		—
Slave 6	PBRIDGE_A		PBRIDGE_A
			FMPLL
			EBI Control
			FLASH Control
			SIU
			eMIOS
			eTPU reg
			eTPU PRAM
			eTPU PRAM Mirror
	eTPU SCM		

Table 5-1. Peripheral Bridge Master/Slave ID Table (continued)

XBAR Port	XBS port Module	Master ID	Peripheral
Slave 7	PBRIDGE_B		PBRIDGE_B
			XBAR
			ESCM
			eDMA Control
			INTC
			FEC
			eQADC
			DSPIB
			DSPIC
			DSPID
			eSCIA
			eSCIB
			CANA
			CANB
			CANC
			CAND
			CANE
	FlexRay		
	BAM		

5.1.3 Features

The following list summarizes the key features of the PBRIDGE:

- Supports the slave interface signals. This interface is only meant for slave peripherals.
- Supports 32-bit slave peripherals. (Byte, halfword, and word reads and writes are supported to each.)
- Supports a pair of slave accesses for 64-bit instruction fetches.
- Provides configurable per-module write buffering support.
- Provides configurable per-module and per-master access protections.

5.1.4 Modes of Operation

The PBRIDGE has only one operating mode.

5.2 External Signal Description

The PBRIDGE has no external signals.

5.3 Memory Map/Register Definition

The memory maps for the 32-bit PBRIDGE registers are shown in [Table 5-2](#) and [Table 5-3](#).

Table 5-2. PBRIDGE_A Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xC3F0_0000)	PBRIDGE_A_MPCR	Master privilege control register	32
Base + 0x004– Base + 0x01F	—	Reserved	—
Base + 0x020	PBRIDGE_A_PACR0	Peripheral access control register 0	32
Base + 0x024– Base + 0x03F	—	Reserved	—
Base + 0x040	PBRIDGE_A_OPACR0	Off-platform peripheral access control register 0	32
Base + 0x044	PBRIDGE_A_OPACR1	Off-platform peripheral access control register 1	32
Base + 0x048	PBRIDGE_A_OPACR2	Off-platform peripheral access control register 2	32
Base + 0x04C– Base + 0x053	—	Reserved	—

Table 5-3. PBRIDGE_B Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xFFF0_0000)	PBRIDGE_B_MPCR	Master privilege control register	32
Base + 0x004– Base + 0x01F	—	Reserved	—
Base + 0x020	PBRIDGE_B_PACR0	Peripheral access control register 0	32
Base + 0x024– Base + 0x027	—	Reserved	—
Base + 0x028	PBRIDGE_B_PACR2	Peripheral access control register 2	32
Base + 0x02C– Base + 0x03F	—	Reserved	—
Base + 0x040	PBRIDGE_B_OPACR0	Off-platform peripheral access control register 0	32
Base + 0x044	PBRIDGE_B_OPACR1	Off-platform peripheral access control register 1	32
Base + 0x048	PBRIDGE_B_OPACR2	Off-platform peripheral access control register 2	32
Base + 0x04C	PBRIDGE_B_OPACR3	Off-platform peripheral access control register 3	32
Base + 0x050– Base + 0x053	—	Reserved	—

5.3.1 Register Descriptions

There are three types of registers that control each PBRIDGE. All registers are 32-bit registers and can only be accessed in supervisor mode by trusted bus masters. Additionally, these registers must only be read from or written to by a 32-bit aligned access. PBRIDGE registers are mapped into the PBRIDGE_A and PBRIDGE_B address spaces. The protection and access fields of the MPCR, PACR, and OPACR registers are 4 bits in width.

5.3.1.1 Master Privilege Control Register (PBRIDGE_x_MPCR)

Each master privilege control register (PBRIDGE_x_MPCR) specifies 4-bit access fields defining the access privilege level associated with a bus master in the platform, as well as specifying whether write accesses from this master are bufferable. The registers provide one field per bus master.

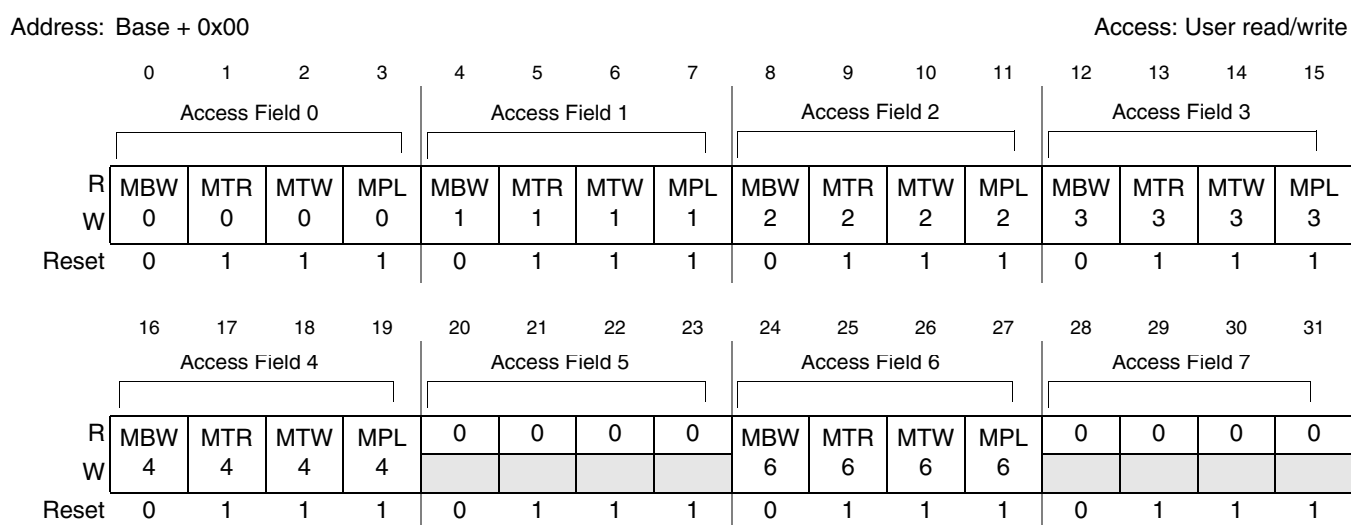


Figure 5-2. Master Privilege Control Registers (PBRIDGE_x_MPCR)

Table 5-4. PBRIDGE_x_MPCR Field Descriptions

Field	Description
0 MBW0	Master buffer writes. Determines whether the PBRIDGE is enabled to buffer writes from the CPU. Writes not able to be buffered by default. 0 Write accesses from the CPU are not bufferable 1 Write accesses from the CPU are allowed to be buffered
1 MTR0	Master trusted for reads. Determines whether the CPU is trusted for read accesses. Trusted by default. 0 The CPU is not trusted for read accesses. 1 The CPU is trusted for read accesses.
2 MTW0	Master trusted for writes. Determines whether the master is trusted for write accesses. Trusted by default. 0 The CPU is not trusted for write accesses. 1 The CPU is trusted for write accesses.

Table 5-4. PBRIDGE_x_MPCR Field Descriptions (continued)

Field	Description
3 MPL0	Master privilege level. Determines how the privilege level of the CPU is determined. Accesses not forced to user mode by default. 0 Accesses from the CPU are forced to user mode. 1 Accesses from the CPU are not forced to user mode.
4 MBW1	Master buffer writes. Determines whether the PBRIDGE is enabled to buffer writes from the Nexus. Writes not able to be buffered by default. 0 Write accesses from the Nexus are not bufferable 1 Write accesses from the Nexus are allowed to be buffered
5 MTR1	Master trusted for reads. Determines whether the Nexus is trusted for read accesses. Trusted by default. 0 The Nexus is not trusted for read accesses. 1 The Nexus is trusted for read accesses.
6 MTW1	Master trusted for writes. Determines whether the master is trusted for write accesses. Trusted by default. 0 The Nexus is not trusted for write accesses. 1 The Nexus is trusted for write accesses.
7 MPL1	Master privilege level. Determines how the privilege level of the Nexus is determined. Accesses not forced to user mode by default. 0 Accesses from the Nexus are forced to user mode. 1 Accesses from the Nexus are not forced to user mode.
8 MBW2	Master buffer writes. Determines whether the PBRIDGE is enabled to buffer writes from the eDMA. Writes not able to be buffered by default. 0 Write accesses from the eDMA are not bufferable 1 Write accesses from the eDMA are allowed to be buffered
9 MTR2	Master trusted for reads. Determines whether the eDMA is trusted for read accesses. Trusted by default. 0 The eDMA is not trusted for read accesses. 1 The eDMA is trusted for read accesses.
10 MTW2	Master trusted for writes. Determines whether the master is trusted for write accesses. Trusted by default. 0 The eDMA is not trusted for write accesses. 1 The eDMA is trusted for write accesses.
11 MPL2	Master privilege level. Determines how the privilege level of the eDMA is determined. Accesses not forced to user mode by default. 0 Accesses from the eDMA are forced to user mode. 1 Accesses from the eDMA are not forced to user mode.
12 MBW3	Master buffer writes. Determines whether the PBRIDGE is enabled to buffer writes from the EBI. Writes not able to be buffered by default. 0 Write accesses from the EBI are not bufferable 1 Write accesses from the EBI are allowed to be buffered
13 MTR3	Master trusted for reads. Determines whether the EBI is trusted for read accesses. Trusted by default. 0 The EBI is not trusted for read accesses. 1 The EBI is trusted for read accesses.
14 MTW3	Master trusted for writes. Determines whether the master is trusted for write accesses. Trusted by default. 0 The EBI is not trusted for write accesses. 1 The EBI is trusted for write accesses.
15 MPL3	Master privilege level. Determines how the privilege level of the EBI is determined. Accesses not forced to user mode by default. 0 Accesses from the EBI are forced to user mode. 1 Accesses from the EBI are not forced to user mode.

Table 5-4. PBRIDGE_x_MPCR Field Descriptions (continued)

Field	Description
16 MBW4	Master buffer writes. Determines whether the PBRIDGE is enabled to buffer writes from the FEC. Writes not able to be buffered by default. 0 Write accesses from the FEC are not bufferable 1 Write accesses from the FEC are allowed to be buffered
17 MTR4	Master trusted for reads. Determines whether the FEC is trusted for read accesses. Trusted by default. 0 The FEC is not trusted for read accesses. 1 The FEC is trusted for read accesses.
18 MTW4	Master trusted for writes. Determines whether the master is trusted for write accesses. Trusted by default. 0 The FEC is not trusted for write accesses. 1 The FEC is trusted for write accesses.
19 MPL4	Master privilege level. Determines how the privilege level of the FEC is determined. Accesses not forced to user mode by default. 0 Accesses from the FEC are forced to user mode. 1 Accesses from the FEC are not forced to user mode.
20-23	Reserved
24 MBW6	Master buffer writes. Determines whether the PBRIDGE is enabled to buffer writes from the FlexRay. Writes not able to be buffered by default. 0 Write accesses from the FlexRay are not bufferable 1 Write accesses from the FlexRay are allowed to be buffered
25 MTR6	Master trusted for reads. Determines whether the FlexRay is trusted for read accesses. Trusted by default. 0 The FlexRay is not trusted for read accesses. 1 The FlexRay is trusted for read accesses.
26 MTW6	Master trusted for writes. Determines whether the master is trusted for write accesses. Trusted by default. 0 The FlexRay is not trusted for write accesses. 1 The FlexRay is trusted for write accesses.
27 MPL6	Master privilege level. Determines how the privilege level of the FlexRay is determined. Accesses not forced to user mode by default. 0 Accesses from the FlexRay are forced to user mode. 1 Accesses from the FlexRay are not forced to user mode.
28-31	Reserved

5.3.1.2 Peripheral Access Control Registers (PBRIDGE_x_PACR) and Off-Platform Peripheral Access Control Registers (PBRIDGE_x_OPACR)

Each of the PBRIDGE on-platform peripherals has a 4-bit access field in a peripheral access control register (PACR) that defines the access levels supported by the given module. A single PACR contains up to eight of these module-access fields, and the PACR register structure is shown in [Table 5-2](#) and [Table 5-3](#). The PACR registers with their access fields are shown in [Figure 5-3](#). There are three PACR registers, one for bridge A and two for bridge B.

Also, each of the off-platform peripherals has a 4-bit access field in an off-platform peripheral access control register (PBRIDGE_x_OPACR) that defines the access levels supported by the given module. Each OPACR contains up to eight of these module-access fields, and the OPACR register structure is

shown in Table 5-2 and Table 5-3. The OPACR registers with their access fields are shown in Figure 5-4. Seven OPACR registers are used, three for bridge A, and four for bridge B.

NOTE

Not all members of the MPC5500 family have PBRIDGE_x_PACR and PBRIDGE_x_OPACR. On the parts that do not have them, writes to their addresses will receive a transfer error. If ensuring code compatibility across all family members is wanted, then writes to those addresses must be qualified with SIU_MIDR[PARTNUM].

NOTE

PBRIDGE_x_PACR and PBRIDGE_x_OPACR should be written with a read/modify/write for code compatibility.

The type of peripheral designated by each PACR and OPACR access field is shown in Table 5-6.

		Address: Base + 0x20 (PBRIDGE_A_PACR0 and PBRIDGE_B_PACR0) Base + 0x28 (PBRIDGE_B_PACR2)																Access: User read/write	
		Access Field 0				Access Field 1				Access Field 2				Access Field 3					
		0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15		
R	W	BW0 ¹	SP0	WP0	TP0	BW1	SP1	WP1	TP1	BW2	SP2	WP2	TP2	BW3	SP3	WP3	TP3		
		Reset A_PACR0	0	1 ²	0	1 ²	0	0	0	0	0	0	0	0	0	0	0	0	
Reset B_PACR0	0	1 ²	0	1 ²	0	1 ²	0	0	0	0	0	0	0	0	0	0			
Reset B_PACR2	0	1 ²	0	0	0	1 ²	0	0	0	1 ²	0	0	0	1 ²	0	0			
		Access Field 4				Access Field 5				Access Field 6				Access Field 7					
		16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31		
R	W	BW4	SP4	WP4	TP4	BW5	SP5	WP5	TP5	BW6	SP6	WP6	TP6	BW7	SP7	WP7	TP7		
		Reset A_PACR0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Reset B_PACR0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
Reset B_PACR2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			

¹ In PBRIDGE_A_PACR0 and in PBRIDGE_B_PACR0, the BW0 bit is not writeable.

² The default value is 0b0000 for PACR peripheral access fields that are unused or not connected.

Figure 5-3. Peripheral Access Control Registers (PBRIDGE_x_PACRn)

Address: Base + 0x40 (PBRIDGE_x_OPACR0); Access: User read/write
 Base + 0x44 (PBRIDGE_x_OPACR1);
 Base + 0x48 (PBRIDGE_x_OPACR2);
 Base + 0x4C (PBRIDGE_B_OPACR3)

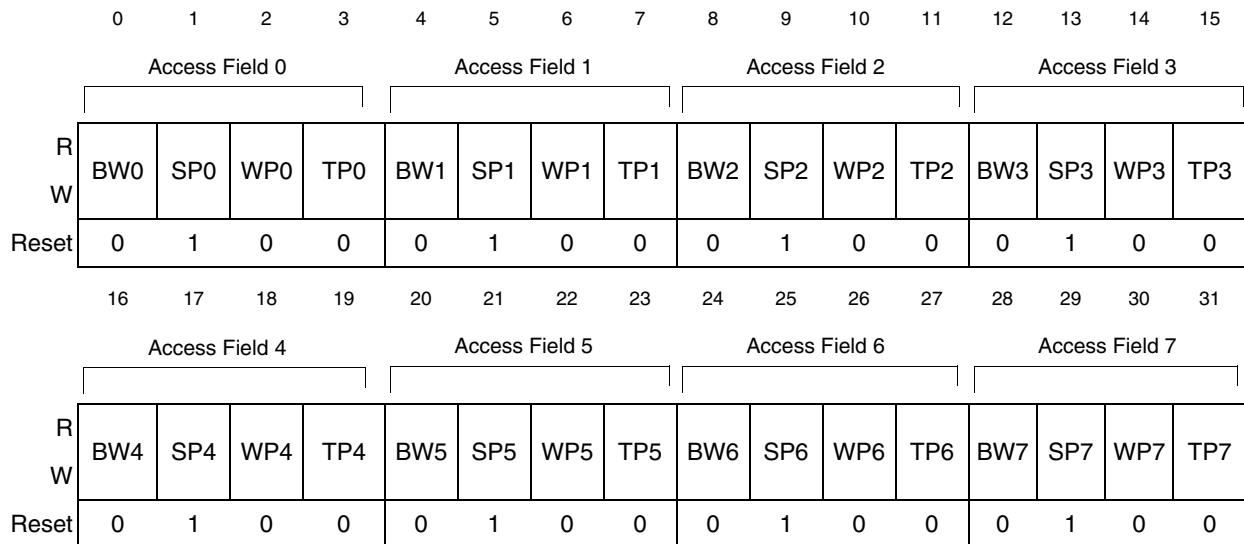


Figure 5-4. Off-platform Peripheral Access Control Registers (PBRIDGE_x_OPACRn)

Table 5-5. PBRIDGE_x_PACRn and PBRIDGE_x_OPACRn Field Descriptions

Field	Description
0, 4, 8, 12, 16, 20, 24, 28 BWn ¹	Buffer writes. Determines whether write accesses to this peripheral are allowed to be buffered. Write accesses not bufferable by default 0 Write accesses to this peripheral are not bufferable by the PBRIDGE. 1 Write accesses to this peripheral are allowed to be buffered by the PBRIDGE. Note: In PBRIDGE_A_PACR0 and PBRIDGE_B_PACR0, the BW0 bit is not writeable.
1, 5, 9, 13, 17, 21, 25, 29 SPn	Supervisor protect. Determines whether the peripheral requires supervisor privilege level for access. Supervisor privilege level required by default. 0 This peripheral does not require supervisor privilege level for accesses. 1 This peripheral requires supervisor privilege level for accesses. The PBRIDGE_x_MPCR[MPLy] control bit for the master must be set. If not, the access is terminated with an error response and no peripheral access is initiated on the slave bus.
2, 6, 10, 14, 18, 22, 26, 30 WPn	Write protect. Determines whether the peripheral allows write accesses. Write accesses allowed by default. 0 This peripheral allows write accesses. 1 This peripheral is write protected. If a write access is attempted, the access is terminated with an error response and no peripheral access is initiated on the slave bus.
3, 7, 11, 15, 19, 23, 27, 31 TPn	Trusted protect. Determines whether the peripheral allows accesses from an untrusted master. 0 Accesses from an untrusted master are allowed. 1 Accesses from an untrusted master are not allowed. If an access is attempted by an untrusted master, the access is terminated with an error response and no peripheral access is initiated on the slave bus.

¹ In PBRIDGE_A_PACR0 and PBRIDGE_B_PACR0, the BW0 bit is not writeable.

Presence or absence of a module’s 4-bit access field in either a PBRIDGE_x_PACR or PBRIDGE_x_OPACR is based on whether the associated peripheral is present on the device. When absent, the corresponding field is not implemented and will read as 0’s. Writes will be ignored.

NOTE

Table 5-6 lists all of the access fields in the PACRs and OPACRs in both PBRIDGE_A and PBRIDGE_B, and each of the associated peripherals present on the device.

Table 5-6. PACR/OPACR Access Control Registers and Peripheral Mapping

Register	Register Address	Peripheral Access Field #	Peripheral Type	Access Field Default Value
PBRIDGE_A				
PBRIDGE_A_PACR0	PBRIDGE_A_Base + 0x020	0	PBRIDGE_A	0b0101
		1–7	—	0b0000
PBRIDGE_A_OPACR0	PBRIDGE_A_Base + 0x040	0	FMPLL	0b0100
		1	EBI Control	0b0100
		2	Flash Control	0b0100
		3	—	0b0100
		4	SIU	0b0100
		5–7	—	0b0100
PBRIDGE_A_OPACR1	PBRIDGE_A_Base + 0x044	0	eMIOS	0b0100
		1–7	—	0b0100
PBRIDGE_A_OPACR2	PBRIDGE_A_Base + 0x048	0	eTPU	0b0100
		1	—	0b0100
		2	eTPU PRAM	0b0100
		3	eTPU PRAM Mirror	0b0100
		4	eTPU SCM	0b0100
		5–7	—	0b0100
PBRIDGE_B				
PBRIDGE_B_PACR0	PBRIDGE_B_Base + 0x020	0	PBRIDGE_B	0b0101
		1	XBAR	0b0100
		2–7	—	0b0000
PBRIDGE_B_PACR2	PBRIDGE_B_Base + 0x028	0	ESCM	0b0100
		1	eDMA	0b0100
		2	INTC	0b0100
		3	FEC	0b0100
		4–7	—	0b0000

Table 5-6. PACR/OPACR Access Control Registers and Peripheral Mapping (continued)

Register	Register Address	Peripheral Access Field #	Peripheral Type	Access Field Default Value
PBRIDGE_B_OPACR0	PBRIDGE_B_Base + 0x040	0	eQADC	0b0100
		1–4	—	0b0100
		5	DSPI_B	0b0100
		6	DSPI_C	0b0100
		7	DSPI_D	0b0100
PBRIDGE_B_OPACR1	PBRIDGE_B_Base + 0x044	0–3	—	0b0100
		4	eSCI_A	0b0100
		5	eSCI_B	0b0100
		6–7	—	0b0100
PBRIDGE_B_OPACR2	PBRIDGE_B_Base + 0x048	0	FlexCAN_A	0b0100
		1	FlexCAN_B	0b0100
		2	FlexCAN_C	0b0100
		3	FlexCAN_D	0b0100
		4	FlexCAN_E	0b0100
		5–7	—	0b0100
PBRIDGE_B_OPACR3	PBRIDGE_B_Base + 0x04C	0	FlexRay	0b0100
		1–6	—	0b0100
		7	BAM	0b0100

5.4 Functional Description

The PBRIDGE serves as an interface between a system bus and the peripheral (slave) bus. It functions as a protocol translator. Support is provided for generating a pair of 32-bit peripheral accesses when targeted by a 64-bit system bus access. No other bus-sizing access support is provided.

Accesses that fall within the address space of the PBRIDGE are decoded to provide individual module selects for peripheral devices on the slave bus interface.

5.4.1 Access Support

Aligned 64-bit accesses, aligned word and halfword accesses, as well as byte accesses are supported for 32-bit peripherals. Peripheral registers must not be misaligned, although no explicit checking is performed by the PBRIDGE.

NOTE

Data accesses that cross a 32-bit boundary are not supported.

5.4.2 Peripheral Write Buffering

The PBRIDGE provides programmable write buffering capability to allow certain write accesses to be buffered in the PBRIDGE for later completion, while terminating the system bus access early. This provides improved performance in systems where frequent writes to a slow peripheral are performed. Write buffering must only be enabled for masters and peripherals for which an error termination from the slave bus will either not occur, or is safe to ignore.

When write buffering is enabled, all accesses through the PBRIDGE will still occur in-order; no bypassing of buffered writes is supported.

Write buffering is controllable on a per-master and per-peripheral basis.

NOTE

Write buffering will cause the processor core to believe that the write has completed before it actually has completed in the peripheral. If write buffering is enabled for a peripheral, the actual write will take an additional two system clock cycles plus any additional system clock cycles that the register needs. Most registers in the MPC5500 family only will delay the write by two clock cycles, but some registers will take longer. This early termination, as seen by the processor core, can defeat the **mbar** or **msync** instruction between the write to clear a flag bit and the write to the INTC_EOIR. Refer to !.” Therefore, if write buffering is enabled for a peripheral that has a flag bit, insert instructions between the **mbar** or **msync** instruction and the write to the INTC_EOIR that will consume at least the number of system clock cycles that the actual write is delayed.

5.4.2.1 Read Cycles

Read accesses are possible with the PBRIDGE when the requested access size is 32-bits or smaller, and is not misaligned across a 32-bit boundary. 64-bit data reads (not instruction) are not supported.

5.4.2.2 Write Cycles

Write accesses are possible with the PBRIDGE when the requested access size is 32-bits or smaller. Misaligned writes that cross a 32-bit boundary are not supported. 64-bit data writes (not instruction) are not supported.

5.4.2.3 Buffered Write Cycles

Single clock write responses to the system bus are possible with the PBRIDGE when the requested write access is bufferable. If the requested access does not violate the permissions check, and if both master and peripheral are enabled for buffering writes, the PBRIDGE will internally buffer the write cycle. The write cycle is terminated early with zero system bus wait states. The access proceeds normally on the slave interface, but error responses are ignored.

All accesses are initiated and completed in order on the slave interface, regardless of buffering. If the buffer is full, a following write cycle will stall until it can either be buffered (if bufferable) or can be

initiated. If the buffer has valid entries, a following read cycle will stall until the buffer is emptied and the read cycle can be completed.

5.4.3 General Operation

Slave peripherals are modules that contain readable/writable control and status registers. The system bus master reads and writes these registers through the PBRIDGE. The PBRIDGE generates module enables, the module address, transfer attributes, byte enables, and write data as inputs to the slave peripherals. The PBRIDGE captures read data from the slave interface and drives it on the system bus.

Separate interface ports are provided for on-platform and off-platform peripherals. The distinction between on-platform and off-platform is made to allow platform-based designs incorporating the PBRIDGE to separate the interface ports to allow for ease of timing closure. In addition, module selects and control register storage for on-platform peripherals are allocated at synthesis time, allowing only needed resources to be implemented. Off-platform module selects and control register storage do not have the same degree of configurability.

The modules that are on-platform and those that are off-platform are detailed in [Table 5-7](#).

Table 5-7. On-Platform and Off-Platform Peripherals

On-Platform	Off-Platform
Enhanced Direct Memory Access (eDMA)	Deserial Serial Peripheral Interface (DSPI)
PBridge A and B	Enhanced Queued Analog-to-Digital Converter (eQADC)
Interrupt Controller (INTC)	Enhanced Serial Communication Interface (eSCI)
Error Correction Status Module (ECSM)	FlexCAN Controller Area Network
System Bus Crossbar Switch (XBAR)	Boot Assist Module (BAM)
Fast Ethernet Controller (FEC)	System Integration Unit (SIU)
	Enhanced Modular Input/Output Subsystem (eMIOS)
	Frequency Modulated Phase Locked Loop (FMPLL)
	Enhanced Time Processing Unit (eTPU)
	External Bus Interface (EBI)
	Flash Bus Interface Unit (FBIU)
	FlexRay

The PBRIDGE occupies a 64 Mbyte portion of the address space. A 0.5 Mbyte portion of this space is allocated to on-platform peripherals. The remaining 63.5 Mbytes are available for off-platform devices. The register maps of the slave peripherals are located on 16-Kbyte boundaries. Each slave peripheral is allocated one 16-Kbyte block of the memory map, and is activated by one of the module enables from the PBRIDGE. Up to thirty-two 16-Kbyte external slave peripherals may be implemented, occupying contiguous blocks of 16 Kbytes. Two global external slave module enables are available for the remaining 63 Mbytes of address space to allow for customization and expansion of addressed peripheral devices. In addition, a single non-global module enable is also asserted whenever any of the 32 non-global module enables is asserted.

The PBRIDGE is responsible for indicating to slave peripherals if an access is in supervisor or user mode. The PBRIDGE may block user mode accesses to certain slave peripherals or it may allow the individual slave peripherals to determine if user mode accesses are allowed. In addition, peripherals may be designated as write-protected. The PBRIDGE supports the notion of trusted masters for security purposes. Masters may be individually designated as trusted for reads, trusted for writes, or trusted for both reads and writes, as well as being forced to look as though all accesses from a master are in user mode privilege level.

The PBRIDGE also supports buffered writes, allowing write accesses to be terminated on the system bus in a single clock cycle, and then subsequently performed on the slave interface. Write buffering is controllable on a per-peripheral basis. The PBRIDGE implements a two-entry 32-bit write buffer.

5.5 Document Revision History

Table 5-8. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout	01/07: First public release.

Chapter 6

System Integration Unit (SIU)

6.1 Introduction

This chapter describes the device system integration unit (SIU), which controls MCU reset configuration, pad configuration, external interrupt, general-purpose I/O (GPIO), internal peripheral multiplexing, and the system reset operation.

6.1.1 Block Diagram

Figure 6-1 is a block diagram of the SIU. The signals shown are external pins to the device. The SIU registers are accessed through the crossbar switch. Note that the power-on reset detection module, pad interface/pad ring module, and peripheral I/O channels are external to the SIU.

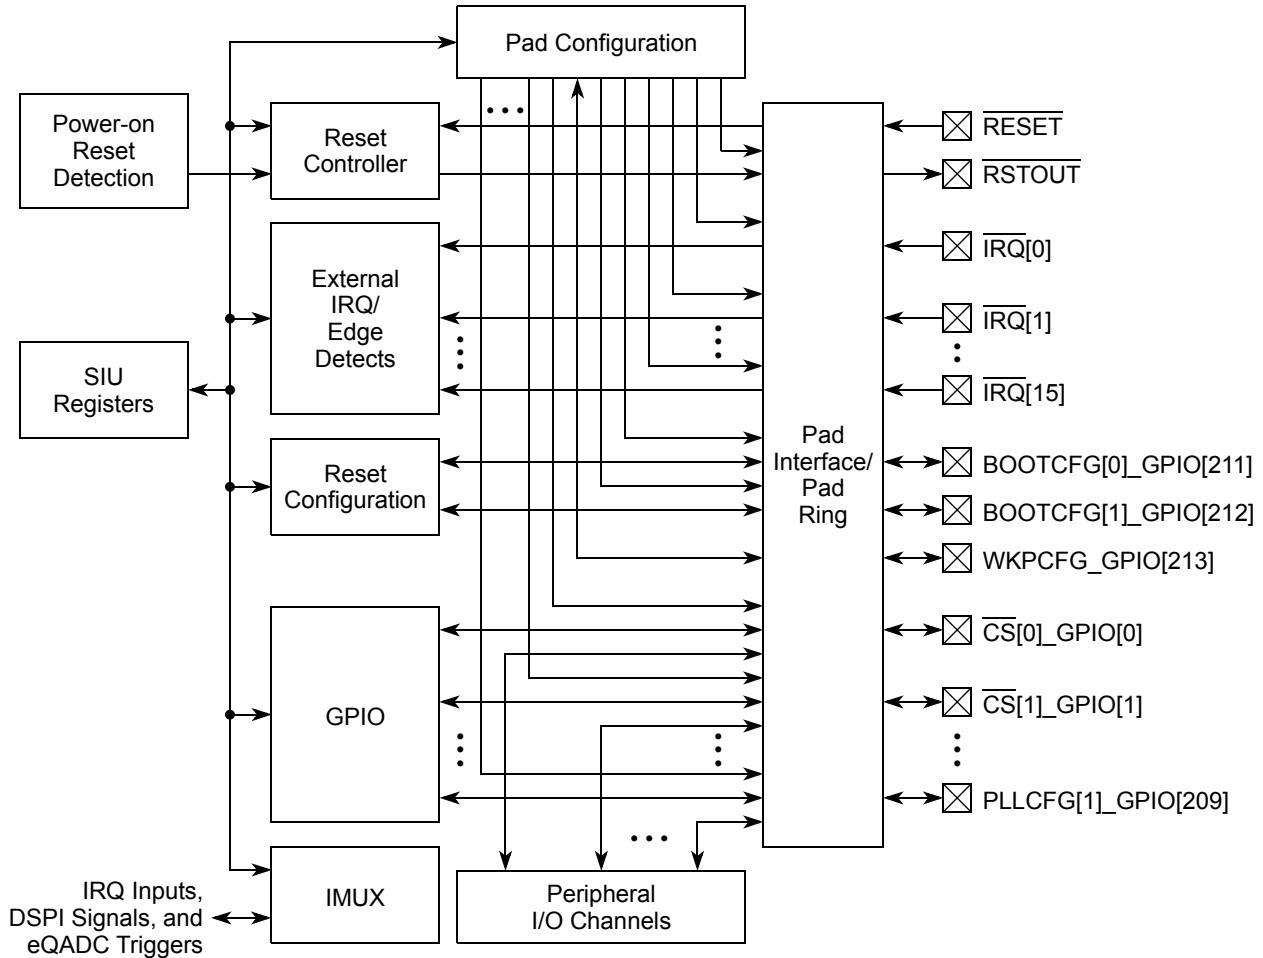


Figure 6-1. SIU Block Diagram

6.1.2 Overview

The device system integration unit (SIU) controls MCU reset configuration, pad configuration, external interrupt, general-purpose I/O (GPIO), internal peripheral multiplexing, and the system reset operation. The reset configuration module contains the external pin boot configuration logic. The pad configuration module controls the static electrical characteristics of I/O pins. The GPIO module provides uniform and discrete input/output control of the I/O pins of the MCU. The reset controller performs reset monitoring of internal and external reset sources, and drives the $\overline{\text{RSTOUT}}$ pin. The SIU is accessed by the e200z6 core through the system bus crossbar switch (XBAR) and the peripheral bridge A (PBRIDGE_A).

6.1.3 Features

Features include the following:

- System configuration
 - MCU reset configuration via external pins
 - Pad configuration control
- System reset monitoring and generation
 - Power-on reset support
 - Reset status register providing last reset source to software
 - Glitch detection on reset input
 - Software controlled reset assertion
- External Interrupt
 - 16 interrupt requests
 - Rising or falling edge event detection
 - Programmable digital filter for glitch rejection
- GPIO
 - GPIO function on 178 I/O pins.
 - Dedicated input and output registers for each GPIO pin.
- Internal Multiplexing
 - Allows serial and parallel chaining of DSPIs
 - Allows flexible selection of eQADC trigger inputs
 - Allows selection of interrupt requests between external pins and DSPI

6.1.4 Modes of Operation

6.1.5 Normal Mode

In normal mode, the SIU provides the register interface and logic that controls system configuration, the reset controller, and GPIO. The SIU continues operation with no changes in stop mode.

6.1.6 Debug Mode

SIU operation in debug mode is identical to operation in normal mode.

6.2 External Signal Description

Table 6-1 lists the external pins used by the SIU.

Table 6-1. SIU Signal Properties

Name	Function	I/O Type	Pad Type	Pull Up/Down ¹
Resets				
$\overline{\text{RESET}}$	Reset Input	Input	—	Up
RSTOUT	Reset Output	Output	Slow	—
System Configuration				
GPIO[0:210]	General-Purpose I/O	I/O	Slow	Up/Down
BOOTCFG[0]_GPIO[211]	Boot Configuration Input / General-Purpose I/O	Input I/O	Slow	Down Up/Down
BOOTCFG[1]_GPIO[212]	Boot Configuration Input / General-Purpose I/O	Input I/O	Slow	Down Up/Down
WKPCFG_GPIO[213]	Weak Pull Configuration Pin / General-Purpose I/O	Input I/O	Slow	Up Up/Down
External Interrupt				
$\overline{\text{IRQ}}[0:5, 7:15]^2$	External Interrupt Request Input	Input	Slow	— ³

¹ Internal weak pull up/down. The reset weak pull up/down state is given by the pull up/down state for the primary pin function. For example, the reset weak pull up/down state of the BOOTCFG[0]_GPIO[211] pin is weak pull up enabled.

² The IRQ pins are multiplexed with other functions on the chip.

³ The weak pull up/down state at reset for the $\overline{\text{IRQ}}[0:15]$ depends on the pins that they are shared with. The weak pull up/down state for these pins is as follows:

$\overline{\text{IRQ}}[0, 1, 4, 5, 7, 12, 13, 14]$: Up

$\overline{\text{IRQ}}[2,3,15]$: Down

$\overline{\text{IRQ}}[8:11]$: WKPCFG

6.2.1 Detailed Signal Descriptions

6.2.1.1 Reset Input ($\overline{\text{RESET}}$)

The $\overline{\text{RESET}}$ pin is an active low input. The $\overline{\text{RESET}}$ pin is asserted by an external device during a power-on or external reset. The internal reset signal asserts only if the $\overline{\text{RESET}}$ pin asserts for 10 clock cycles.

Assertion of the $\overline{\text{RESET}}$ pin while the device is in reset causes the reset cycle to start over. The $\overline{\text{RESET}}$ pin has a glitch detector which detects spikes greater than 2 clock cycles in duration that fall below the switch point of the input buffer logic of the V_{DDEH} input pins. The switch point lies between the maximum V_{IL} and minimum V_{IH} specifications for the V_{DDEH} input pins.

6.2.1.2 Reset Output ($\overline{\text{RSTOUT}}$)

The $\overline{\text{RSTOUT}}$ pin is an active low output that uses a push/pull configuration. The $\overline{\text{RSTOUT}}$ pin is driven to the low state by the MCU for all internal and external reset sources. After the negation of the $\overline{\text{RESET}}$ input, $\overline{\text{RSTOUT}}$ is asserted for 2404 clock cycles; except that if the PLL is configured for dual-controller mode, $\overline{\text{RSTOUT}}$ is asserted for 16004 clocks.

The $\overline{\text{RSTOUT}}$ pin can also be asserted for 2400 clock cycles by a write to the SER bit of the system reset control register (SIU_SRCR).

NOTE

During a power on reset, $\overline{\text{RSTOUT}}$ is tri-stated.

6.2.1.3 General-Purpose I/O Pins (GPIO[0:213])

The GPIO pins provide general-purpose input and output function. The GPIO pins are generally multiplexed with other I/O pin functions. Each GPIO input and output is separately controlled by an eight-bit input (SIU_GPDI) or output (SIU_GPDO) register. See Section 6.3.1.156, “GPIO Pin Data Output Registers 0–213 (SIU_GPDO_n)” and Section 6.3.1.157, “GPIO Pin Data Input Registers 0–213 (SIU_GPDI_n)”.

6.2.1.4 Boot Configuration Pins (BOOTCFG[0:1])

The boot configuration pins specify the boot mode initiated by the boot assist module (BAM) program. BOOTCFG[0:1] are input pins that are sampled 4 clock cycles before the negation of the $\overline{\text{RSTOUT}}$ pin, and the values latched are stored in the reset status register (SIU_RSR). This occurs for all reset sources except a debug port reset and a software external reset. The BOOTCFG[0:1] pins are only sampled if the $\overline{\text{RSTCFG}}$ pin is asserted during reset. Otherwise, if the $\overline{\text{RSTCFG}}$ pin is negated during reset, the BOOTCFG[0:1] pins are not sampled, the BAM defaults to boot from internal Flash, and the BOOTCFG field in the SIU_RSR is set to the boot from internal Flash value (0b00). The latched BOOTCFG[0:1] values are also driven as output signals from the SIU.

The BOOTCFG pin values are used only if the $\overline{\text{RSTCFG}}$ pin is asserted during the assertion of $\overline{\text{RSTOUT}}$. Otherwise, the default values for the BOOTCFG bits in the SIU_RSR are used.

Table 6-2. BOOTCFG[0:1] Configuration

Value	Meaning
0b00	Boot from Internal Flash Memory
0b01	FlexCAN / eSCI Boot
0b10	Boot from External Memory (No Arbitration)
0b11	Boot from External Memory (External Arbitration)

6.2.1.5 I/O Pin Weak Pull Up Reset Configuration Pin (WKPCFG)

The WKPCFG pin is applied at the assertion of the internal reset signal (indicated by the assertion of $\overline{\text{RSTOUT}}$), and is sampled 4 clock cycles before the negation of the $\overline{\text{RSTOUT}}$ pin. The value is used to

configure whether the eTPU and eMIOS pins are connected to internal weak pull up or weak pull down devices after reset. The value latched on the WKPCFG pin at reset is stored in the reset status register (SIU_RSR), and is updated for all reset sources except the debug port reset and software external reset. The setting of the WKPCFG pin must be valid until the negation of $\overline{\text{RSTOUT}}$.

6.2.1.6 External Interrupt Request Input Pins (IRQ)

The $\overline{\text{IRQ}}[0:5,7:15]$ connect to the SIU IRQ inputs. SIU_ETISR select register 1 is used to select the $\overline{\text{IRQ}}[0:5,7:15]$ pins as inputs to the IRQs. The Digital Filter Length field in Section 6.3.1.11, “IRQ Digital Filter Register (SIU_IDFR)” specifies the minimum number of system clocks that the signals on the $\overline{\text{IRQ}}[0] - \overline{\text{IRQ}}[15]$ pins must be held at a logic level to be recognized as a valid state change. A counter for each IRQ pin, which counts at the system clock rate, is used to transition between rising and falling edge events, and is enabled if either rising or falling edge events are enabled for that pin. The counters are cleared on a transition of the corresponding IRQ pin and when the counter reaches the value specified in the SIU_IDFR, the current IRQ pin state is latched. If the previous filtered state of the IRQ pin does not match the current state, and the corresponding rising or falling edge event is enabled, the IRQ Flag bit in Section 6.3.1.4, “External Interrupt Status Register (SIU_EISR)” is set. For example, if the previous filtered state was logic 0, and the current latched state is logic 1, and rising edge event is enabled for the IRQ pin, the corresponding IRQ Flag bit will be set. When the counter for an IRQ pin is not enabled, the state of the IRQ pin is held in the current and previous state latches. The counter operates independently of IRQ or overrun flag bit clearing. Clearing an IRQ or overrun flag bit does not clear or reload the counter.

Rising or falling edge events are enabled by setting the corresponding bits in the SIU_IREER or the SIU_IFEER. If the same bit location is set in both registers, both rising and falling edge events will cause the corresponding IRQ Flag bit in Section 6.3.1.4, “External Interrupt Status Register (SIU_EISR)” to be set.

6.2.1.6.1 External Interrupts

The $\overline{\text{IRQ}}[n]$ pins map to 16 independent interrupt request outputs from the SIU. An interrupt request is asserted when the corresponding IRQ flag bit is set in Section 6.3.1.4, “External Interrupt Status Register (SIU_EISR)” with the corresponding dma/interrupt request enable bit set in Section 6.3.1.5, “DMA/Interrupt Request Enable Register (SIU_DIRER),” and the corresponding dma/interrupt select bit cleared in Section 6.3.1.6, “DMA/Interrupt Request Select Register (SIU_DIRSR).” The IRQ flag bit is set when an event as defined by the Section 6.3.1.9, “IRQ Rising-Edge Event Enable Register (SIU_IREER),” occurs on the corresponding $\overline{\text{IRQ}}n$ pin.

6.2.1.6.2 DMA Transfers

The $\overline{\text{IRQ}}[n]$ pins map to 16 independent DMA request outputs from the SIU. A DMA request is asserted when the corresponding IRQ flag bit is set in Section 6.3.1.4, “External Interrupt Status Register (SIU_EISR),” with the corresponding DMA/interrupt request enable bit set in Section 6.3.1.5, “DMA/Interrupt Request Enable Register (SIU_DIRER),” and the corresponding DMA/interrupt select bit set in Section 6.3.1.6, “DMA/Interrupt Request Select Register (SIU_DIRSR).” A DMA done signal is input to the SIU for each DMA request output. The assertion of a DMA done signal clears the corresponding IRQ Flag bit.

6.2.1.6.3 Overruns

An overrun interrupt request exists for each overrun flag in the SIU. In addition, there is one overrun interrupt request output from the SIU which is the logical OR of all of the overrun interrupt requests. An overrun interrupt request is asserted if any of the same bit locations are set in [Section 6.3.1.7, “Overrun Status Register \(SIU_OSR\),”](#) and [Section 6.3.1.8, “Overrun Request Enable Register \(SIU_ORER\).”](#) An overrun occurs if an edge-triggered event occurs on an $\overline{\text{IRQ}}[n]$ pin while the corresponding IRQ flag bit is set in [Section 6.3.1.4, “External Interrupt Status Register \(SIU_EISR\).”](#)

6.2.1.6.4 Edge Detects

The $\overline{\text{IRQ}}[n]$ pins can be used as edge detect pins. Edge detect operation is enabled by selecting rising or falling edge events in [Section 6.3.1.9, “IRQ Rising-Edge Event Enable Register \(SIU_IREER\),”](#) with dma/interrupt requests disabled. The external IRQ status register reflects whether the desired edge has been captured on each pin.

6.3 Memory Map and Register Definition

[Table 6-3](#) is the address map for the SIU registers. All register addresses are given as an offset of the SIU base address.

Table 6-3. SIU Address Map

Address	Register Name	Register Description	Size (bits)
Base (0xC3F9_0000)	—	Reserved	—
Base + 0x4	SIU_MIDR	MCU ID register	32
Base + 0x8	—	Reserved	—
Base + 0xC	SIU_RSR	Reset status register	32
Base + 0x10	SIU_SRCR	System reset control register	32
Base + 0x14	SIU_EISR	SIU external interrupt status register	32
Base + 0x20	SIU_OSR	Overrun status register	32
Base + 0x24	SIU_ORER	Overrun request enable register	32
Base + 0x28	SIU_IREER	IRQ rising-edge event enable register	32
Base + 0x2C	SIU_IFEER	IRQ falling-edge event enable register	32
Base + 0x30	SIU_IDFR	IRQ digital filter register	32
Base + 0x34– Base + 0x3F	—	Reserved	—
Base + 0x40– Base + 0x20C	SIU_PCR0– SIU_PCR230	Pad configuration registers 0–230	16
Base + 0x20E– Base + 0x5FF	—	Reserved	—
Base + 0x600– Base + 0x6D5	SIU_GPDO0– SIU_GPDO213	GPIO pin data output registers 0–213	8

Table 6-3. SIU Address Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x6D6– Base + 0x7FF	—	Reserved	—
Base + 0x800– Base + 0x8D5	SIU_GPDI0– SIU_GPDI213	GPIO pin data input registers 0–213	8
Base + 0x8D6– Base + 0x8FF	—	Reserved	—
Base + 0x900– Base + 0x903	SIU_ETISR	eQADC trigger input select register	32
Base + 0x904– Base + 0x907	SIU_EIISR	External IRQ input select register	32
Base + 0x908– Base + 0x90B	SIU_DISR	DSPI input select register	32
Base + 0x90C– Base + 0x97F	—	Reserved	—
Base + 0x980	SIU_CCR	Chip configuration register	32
Base + 0x984	SIU_ECCR	External clock control register	32
Base + 0x988	SIU_CARH	Compare A high register	32
Base + 0x98C	SIU_CARL	Compare A low register	32
Base + 0x990	SIU_CBRH	Compare B high register	32
Base + 0x994	SIU_CBRL	Compare B low register	32
Base + 0x998– Base + 0x9FF	—	Reserved	—

6.3.1 Register Descriptions

6.3.1.1 MCU ID Register (SIU_MIDR)

The SIU_MIDR contains the part identification number and mask revision number specific to the device. The part number is a read-only field that is mask programmed with the part number of the device. The part number is changed if a new module is added to the device or a memory size is changed, for example. It is not changed for bug fixes or process changes. The mask number is a read-only field that is mask programmed with the specific mask revision level of the device. The current value applies to revision 0 and will be updated for each mask revision.

R	PARTNUM																
W																	
Reset 208 pin	0	1	0	1	0	1	0	1	0	1	1	0	0	1	0 ¹	1	
Reset 324 pin	0	1	0	1	0	1	0	1	0	1	1	0	0	1	0 ¹	1	
Reset 416 pin	0	1	0	1	0	1	0	1	0	1	1	0	0	1	0 ¹	1	
Reset 208 pin CSP	0	1	0	1	0	1	0	1	0	1	1	0	0	1	0 ¹	1	
Reset 324 pin CSP	0	1	0	1	0	1	0	1	0	1	1	0	0	1	0 ¹	1	
Reset 416 pin CSP (496 pin pkg)	0	1	0	1	0	1	0	1	0	1	1	0	0	1	0 ¹	1	
Reg Addr	SIU Base + 0x4																
R	CSP	PKG				0	0	0	0	MASKNUM_MAJOR				MASKNUM_MINOR			
W																	
Reset 208 pin	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Reset 324 pin	0	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	
Reset 416 pin	0	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	
Reset 208 pin CSP	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Reset 324 pin CSP	1	1	0	1	0	0	0	0	0	0	0	0	0	0	0	0	
Reset 416 pin CSP (496 pin pkg)	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	
Reg Addr	SIU Base + 0x4																

Figure 6-2. MPC5567 MCU ID Register (SIU_MIDR)

¹ For the MPC5567, bit 14 has the value of 1.

Table 6-4. SIU_MIDR Field Descriptions

Field	Description
0–15 PARTNUM	MCU part number. Read-only, mask programmed part identification number of the MCU. This number reads 0x5567.
16 CSP	CSP configuration: 0 Standard package 1 CSP package

Table 6-4. SIU_MIDR Field Descriptions (continued)

Field	Description
17-19 PKG	Package settings. PKG selects which pin packages are used for the MPC55xx device. 000 Selects for Legacy compatibility 010 Reserved 011 Selects the 416 package The PCKCFG[2:3] pins are used to set the values.
20-23	Reserved
24-27 MASKNUM_MAJOR [0:3]	Major revision number of MCU mask. Read-only, mask programmed mask number of the MCU. Reads 0x0 for the initial mask set of the device, and will change sequentially for each mask set.
28-31 MASKNUM_MINOR [0:3]	Minor revision number of MCU mask. Read-only, mask programmed mask number of the MCU. Reads 0x0 for the initial mask set of the device, and will change sequentially for each mask set.

6.3.1.2 Reset Status Register (SIU_RSR)

The SIU_RSR reflects the most recent source, or sources of reset, and the state of configuration pins at reset. This register contains one bit for each reset source, indicating that the last reset was power-on reset (POR), external, software system, software external reset, watchdog, loss of PLL lock, loss of clock or checkstop reset. A reset status bit set to logic 1 indicates the type of reset that occurred. Once set, the reset source status bits in the SIU_RSR remain set until another reset occurs. In the following cases more than one reset bit is set:

- If a power-on reset request has negated and the device is still in the resulting reset, and then an external reset is requested, both the power-on and external reset status bits will be set. In this case, the device started the reset sequence due to a power-on reset request, but it ended the reset sequence after an external reset request.
- If a software external reset is requested, the SERF flag bit is set, but no previously set bits in the SIU_RSR will be cleared. The SERF bit is cleared by writing a 1 to the bit location or when another reset source is asserted.
- If any of the loss of clock, loss of lock, watchdog or checkstop reset requests occur on the same clock cycle, and no other higher priority reset source is requesting reset (See [Table 6-5](#)), the reset status bits for all of the requesting resets will be set.

Simultaneous reset requests are prioritized. When reset requests of different priorities occur on the same clock cycle, the lower priority reset request will be ignored. Only the highest priority reset request's status bit will be set. Except for a power-on reset request and condition • above, all reset requests of any priority are ignored until the device exits reset.

Table 6-5. Reset Source Priorities

Reset Source	Priority
Power on reset (POR) and external reset (Group 0)	Highest
Software system reset (Group 1)	

Table 6-5. Reset Source Priorities

Reset Source	Priority
Loss of clock, loss of lock, watchdog, checkstop (Group 2)	
Software external reset (Group 3)	Lowest

The WKPCFG bit contains the value of the signal on the WKPCFG pin at the last reset. The BOOTCFG field contains the values on the BOOTCFG[0:1] pins at the last reset.

Address: Base + 0xC

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	PORS	ERS	LLRS	LCRS	WDRS	CRS	0	0	0	0	0	0	0	0	SSRS	SERF
W																
Reset ¹	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	WKPCFG ²	0	0	0	0	0	0	0	0	0	0	0	0	BOOTCFG		RGF
W																
Reset ¹	U ²	0	0	0	0	0	0	0	0	0	0	0	0	U ³	0	

¹ The reset status register receives its reset values during power-on reset.

² The reset value of the WKPCFG bit is determined by the value on the WKPCFG pin at reset.

³ The reset value of the BOOTCFG field is determined by the values on the BOOTCFG[0:1] pins at reset.

Figure 6-3. Reset Status Register (SIU_RSR)
Table 6-6. SIU_RSR Field Descriptions

Field	Description
0 PORS	Power-on reset status. 0 Another reset source has been acknowledged by the reset controller since the last assertion of the power-on reset input. 1 The power-on reset input to the reset controller has been asserted and no other reset source has been acknowledged since that assertion of the power-on reset input except an external reset.
1 ERS	External reset status. 0 The last reset source acknowledged by the reset controller was not a valid assertion of the $\overline{\text{RESET}}$ pin. 1 The last reset source acknowledged by the reset controller was a valid assertion of the $\overline{\text{RESET}}$ pin.
2 LLRS	Loss of lock reset status. 0 The last reset source acknowledged by the reset controller was not a loss of PLL lock reset. 1 The last reset source acknowledged by the reset controller was a loss of PLL lock reset.
3 LCRS	Loss of clock reset status. 0 The last reset source acknowledged by the reset controller was not a loss of clock reset. 1 The last reset source acknowledged by the reset controller was a loss of clock reset.
4 WDRS	Watchdog timer/debug reset status. 0 The last reset source acknowledged by the reset controller was not a watchdog timer or debug reset. 1 The last reset source acknowledged by the reset controller was a watchdog timer or debug reset.

Table 6-6. SIU_RSR Field Descriptions (continued)

Field	Description
5 CRS	Checkstop reset status. 0 The last reset source acknowledged by the reset controller was not an enabled checkstop reset. 1 The last reset source acknowledged by the reset controller was an enabled checkstop reset.
6–13	Reserved.
14 SSRS	Software system reset status. 0 The last reset source acknowledged by the reset controller was not a software system reset. 1 The last reset source acknowledged by the reset controller was a software system reset.
15 SERF	Software external reset flag. 0 The software external reset input to the reset controller has not been asserted or this bit has been cleared by writing a 1 to it. 1 The software external reset input to the reset controller has been asserted while this bit was a 0.
16 WKPCFG	Weak pull configuration pin status 0 The WKPCFG pin value latched during the last reset was a logical 0 and weak pull down is the default setting 1 The WKPCFG pin value latched during the last reset was a logical 1 and weak pullup is the default setting
17–28	Reserved.
29–30 BOOTCFG	Reset configuration pin status. Holds the value of the BOOTCFG pins that were latched on the last negation of the \overline{RSTOUT} pin, if the \overline{RSTCFG} pin was asserted. If the \overline{RSTCFG} pin was not asserted at the last negation of \overline{RSTOUT} , and the lower half or least significant half word of the censorship control word equals 0xFFFF or 0x0000, the BOOTCFG field is set to the value 0b10. Otherwise, if the \overline{RSTCFG} pin was negated at the last negation of \overline{RSTOUT} and the lower half of the censorship control word does not equal 0xFFFF or 0x0000, then the BOOTCFG field is set to the value 0b00. The BOOTCFG field is used by the BAM program to determine the location of the reset configuration half word. See Table 3-10 for a translation of the reset configuration half word location from the BOOTCFG field value.
31 RGF	Reset glitch flag. Set by the reset controller when a glitch is detected on the \overline{RESET} pin. This bit is cleared by the assertion of the power-on reset input to the reset controller, or a write of 1 to the RGF bit. See Section 6.4.2.1 , “ RESET Pin Glitch Detect ,” for more information on glitch detection. 0 No glitch has been detected on the \overline{RESET} pin. 1 A glitch has been detected on the \overline{RESET} pin.

6.3.1.3 System Reset Control Register (SIU_SRCR)

The system reset control register allows software to generate either a system or external reset. The software system reset causes an internal reset, while the software external reset only causes the external \overline{RSTOUT} pin to be asserted. When written to 1, the SER bit automatically clears.

Address: Base + 0x10

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	SSR ¹	SER	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	CRE	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	1 ²	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

¹ The SSR bit always reads as 0. A write of 0 to this bit has no effect.

² The CRE bit is set to 1 by POR. Other resets sources do not reset the bit value.

Figure 6-4. System Reset Control Register (SIU_SRCR)
Table 6-7. SIU_SRCR Field Descriptions

Field	Description
0 SSR	Software system reset. Used to generate a software system reset. Writing a 1 to this bit causes an internal reset. The software system reset is processed as a synchronous reset. The bit is automatically cleared on the assertion of any other reset source except a software external reset. 0 Do not generate a software system reset. 1 Generate a software system reset.
1 SER	Software external reset. Used to generate a software external reset. Writing a 1 to this bit causes the $\overline{\text{RSTOUT}}$ pin to be asserted for 2400 clocks, but the internal reset is not asserted. The bit is automatically cleared when the software external reset completes or any other reset source is asserted. Once a software external reset has been initiated, the $\overline{\text{RSTOUT}}$ pin is negated if this bit is cleared before the 2400 clock period expires. 0 Do not generate a software external reset. 1 Generate a software external reset. Note: If the PLL is configured for dual controller mode writing a 1 to SER causes the $\overline{\text{RSTOUT}}$ pin to be asserted for 16000 clocks. Refer to Section 3.2.2, "Reset Output (RSTOUT)."
2–15	Reserved.
16 CRE	Checkstop reset enable. Writing a 1 to this bit enables a reset when the checkstop reset request input is asserted. The checkstop reset request input is a synchronous internal reset source. The CRE bit defaults to checkstop reset enabled at POR. If this bit is cleared, it remains cleared until the next POR. 0 No reset occurs when the checkstop reset input to the reset controller is asserted. 1 A reset occurs when the checkstop reset input to the reset controller is asserted.
17–31	Reserved.

6.3.1.4 External Interrupt Status Register (SIU_EISR)

The external interrupt status register is used to record edge-triggered events on the $\overline{\text{IRQ}}[0] - \overline{\text{IRQ}}[15]$ inputs to the SIU. When an edge-triggered event is enabled in the SIU_IREER or SIU_IFEER for an $\overline{\text{IRQ}}[n]$ input and then sensed, the corresponding SIU_EISR flag bit is set. The IRQ flag bit is set regardless of the state of the corresponding DMA/interrupt request enable bit in SIU_DIRER. The IRQ flag bit

remains set until cleared by software or through the servicing of a DMA request. The IRQ flag bits are cleared by writing a 1 to the bits. A write of 0 has no effect.

Address: Base + 0x14

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	EIF15	EIF14	EIF13	EIF12	EIF11	EIF10	EIF9	EIF8	EIF7	EIF6	EIF5	EIF4	EIF3	EIF2	EIF1	EIF0
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-5. SIU External Interrupt Status Register (SIU_EISR)

Table 6-8. SIU_EISR Field Descriptions

Field	Description
0–15	Reserved
16–31 EIF n	External interrupt request flag n . This bit is set when an edge-triggered event occurs on the corresponding $\overline{IRQ}[n]$ input. Cleared by writing a 1. 0 No edge-triggered event has occurred on the corresponding $\overline{IRQ}[n]$ input. 1 An edge-triggered event has occurred on the corresponding $\overline{IRQ}[n]$ input.

6.3.1.5 DMA/Interrupt Request Enable Register (SIU_DIRER)

The SIU_DIRER allows the assertion of a DMA or interrupt request if the corresponding flag bit is set in the SIU_EISR. The external interrupt request enable bits enable the interrupt or DMA request. There is only one interrupt request from the SIU to the interrupt controller. The EIRE bits allow selection of which external interrupt request flag bits cause assertion of the one interrupt request signal.

Address: Base + 0x18

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE	EIRE
W	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-6. SIU DMA/Interrupt Request Enable Register (SIU_DIRER)

Table 6-9. SIU_DIRER Field Descriptions

Field	Description
0–15	Reserved.
16–31 EIRE n	External interrupt request enable n . Enables the assertion of the interrupt request from the SIU to the interrupt controller when an edge-triggered event occurs on the $\overline{\text{IRQ}}[n]$ pin. 0 External interrupt request is disabled. 1 External interrupt request is enabled.

6.3.1.6 DMA/Interrupt Request Select Register (SIU_DIRSR)

The SIU_DIRSR allows selection between a DMA or interrupt request for events on the $\overline{\text{IRQ}}[0]$ – $\overline{\text{IRQ}}[3]$ inputs. The SIU_DIRSR selects between DMA and interrupt requests. If the corresponding bits are set in SIU_EISR and the SIU_DIRER, then the DMA/interrupt request select bit determines whether a DMA or interrupt request is asserted.

Address: Base + 0x1C

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	DIRS 3	DIRS 2	DIRS 1	DIRS 0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-7. DMA/Interrupt Request Select Register (SIU_DIRSR)
Table 6-10. SIU_DIRER Field Descriptions

Field	Description
0–27	Reserved.
28–31 DIRS n	DMA/interrupt request select n . Selects between a DMA or interrupt request when an edge-triggered event occurs on the corresponding $\overline{\text{IRQ}}[n]$ pin. 0 Interrupt request is selected. 1 DMA request is selected.

6.3.1.7 Overrun Status Register (SIU_OSR)

The SIU_OSR contains flag bits that record an overrun.

Address: Base + 0x20

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	OVF15	OVF14	OVF13	OVF12	OVF11	OVF10	OVF9	OVF8	OVF7	OVF6	OVF5	OVF4	OVF3	OVF2	OVF1	OVF0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-8. Overrun Status Register (SIU_OSR)

Table 6-11. SIU_OSR Field Descriptions

Field	Function
0–15	Reserved.
16–31 OVF n	Overrun flag n . This bit is set when an overrun occurs on the corresponding $\overline{IRQ}[n]$ pin. 0 No overrun has occurred on the corresponding $\overline{IRQ}[n]$ pin. 1 An overrun has occurred on the corresponding $\overline{IRQ}[n]$ pin.

6.3.1.8 Overrun Request Enable Register (SIU_ORER)

The SIU_ORER contains bits to enable an overrun if the corresponding flag bit is set in the SIU_OSR. If any overrun request enable bit and the corresponding flag bit are set, the single combined overrun request from the SIU to the interrupt controller is asserted.

Address: Base + 0x24

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ORE15	ORE14	ORE13	ORE12	ORE11	ORE10	ORE9	ORE8	ORE7	ORE6	ORE5	ORE4	ORE3	ORE2	ORE1	ORE0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-9. Overrun Request Enable Register (SIU_ORER)

Table 6-12. SIU_ORER Field Descriptions

Field	Function
0–15	Reserved.
16–31 ORE _n	Overrun request enable <i>n</i> . Enables the corresponding overrun request when an overrun occurs on the corresponding $\overline{\text{IRQ}}[n]$ pin. 0 Overrun request is disabled. 1 Overrun request is enabled.

6.3.1.9 IRQ Rising-Edge Event Enable Register (SIU_IREER)

The SIU_IREER allows rising edge-triggered events to be enabled on the corresponding $\overline{\text{IRQ}}[n]$ pins. Rising and falling edge events can be enabled by setting the corresponding bits in both the SIU_IREER and SIU_IFEER.

Address: Base + 0x2

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0		0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	IREE 15	IREE 14	IREE 13	IREE 12	IREE 11	IREE 10	IREE 9	IREE 8	IREE 7	IREE 6	IREE 5	IREE 4	IREE 3	IREE 2	IREE 1	IREE 0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-10. IRQ Rising-Edge Event Enable Register (SIU_IREER)
Table 6-13. SIU_IREER Field Descriptions

Field	Function
0–15	Reserved.
16–31 IREE _n	IRQ rising-edge event enable <i>n</i> . Enables rising-edge-triggered events on the corresponding $\overline{\text{IRQ}}[n]$ pin. 0 Rising edge event is disabled. 1 Rising edge event is enabled.

6.3.1.10 IRQ Falling-Edge Event Enable Register (SIU_IFEER)

The SIU_IFEER allows falling edge-triggered events to be enabled on the corresponding $\overline{\text{IRQ}}[n]$ pins. Rising and falling edge events can be enabled by setting the corresponding bits in both the SIU_IREER and SIU_IFEER.

Address: Base + 0x2C

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	IFEE	IFEE1	IREE	IFEE	IFEE	IFEE	IFEE9	IFEE8	IFEE7	IFEE6	IFEE5	IFEE4	IFEE3	IFEE2	IFEE1	IFEE0
W	15	4	13	12	11	10										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-11. IRQ Falling-Edge Event Enable Register (SIU_IFEER)

Table 6-14. SIU_IFEER Field Descriptions

Field	Function
0–15	Reserved.
16–31 IFEE n	IRQ falling-edge event enable n . Enables falling-edge-triggered events on the corresponding $\overline{IRQ}[n]$ pin. 0 Falling edge event is disabled. 1 Falling edge event is enabled.

6.3.1.11 IRQ Digital Filter Register (SIU_IDFR)

The SIU_IDFR specifies the amount of digital filtering on the $\overline{IRQ}[0]$ – $\overline{IRQ}[15]$ pins. The digital filter length field specifies the number of system clocks that define the period of the digital filter and the minimum time a signal must be held in the active state on the IRQ pins to be recognized as an edge-triggered event.

Address: Base + 0x30

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	DFL			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 6-12. External IRQ Digital Filter Register (SIU_IDFR)

Table 6-15. SIU_IDFR Field Descriptions

Field	Function
0–27	Reserved.
28–31 DFL	Digital filter length. Defines the digital filter period on the IRQ _n inputs according to the following equation: $\text{Filter Period} = (\text{SystemClockPeriod} \times 2^{\text{DFL}}) + 1(\text{SystemClockPeriod})$ For a 100-MHz system clock, this gives a range of 20ns to 328us. The minimum time of three clocks accounts for synchronization of the IRQ input pins with the system clock.

6.3.1.12 Pad Configuration Registers (SIU_PCR)

The following subsections define the SIU_PCRs for all device pins that allow configuration of the pin function, direction, and static electrical attributes. The information presented pertains to which bits and fields are active for a given pin or group of pins, and the reset state of the register. Note that the reset state of SIU_PCRs given in the following sections is that prior to execution of the BAM program. The BAM program may change certain SIU_PCRs based on the reset configuration. See the BAM section of the manual for more detail.

The SIU_PCRs are 16-bit registers that are read or written as 16-bit values aligned on 16-bit boundaries, or as 32-bit values aligned on 32-bit address boundaries. [Table 6-16](#) describes the SIU_PCR fields.

NOTE

The fields available in a given SIU_PCR depend on the type of pad it controls. See the specific SIU_PCR definition.

All device pin names begin with the primary function, followed by the alternate function, and then GPIO. In some cases the third function, a secondary alternate, comes before the GPIO. Those exceptions are noted in the documentation. For example, for SIU_PCR85 and the pin CNTXB_PCSC[3]_GPIO[85], CNTXB is the primary function and PCSC[3] is the alternate function. For identification of the source module for primary and alternate functions, and the description of these signals, refer to [Chapter 4, “Signal Description,”](#) of this manual. Refer to the chapter for the specific module that uses the signal for an additional signal description.

[Figure 6-13](#) shows a sample PCR register with all bit fields displayed:

R	0	0	0											
W				PA	OBE	IBE	DSC	ODE	HYS	SRC	WPE	WPS		

Figure 6-13. Sample PCR Register

Table 6-16. SIU_PCR Field Descriptions

Field	Description																																																																																							
0–2	Reserved.																																																																																							
3–5 PA[0:2]	<p>Pin assignment. Selects the function of a multiplexed pad. A separate port enable output signal from the SIU is asserted for each value of this register. The size of the field can be from 1 to 3 bits, depending on the amount of multiplexing on the pad.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="9">PA Bit Field</th> <th rowspan="2">Pin Function¹</th> </tr> <tr> <th colspan="3">1-bit² (2 Functions)</th> <th colspan="3">2-bit² (3 Functions)</th> <th colspan="3">3-bit (4 Functions)</th> </tr> </thead> <tbody> <tr> <td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td> <td>0</td><td>0</td><td>0</td> <td>GPIO</td> </tr> <tr> <td>0</td><td>0</td><td>1</td> <td>0</td><td>0</td><td>1</td> <td>0</td><td>0</td><td>1</td> <td>Primary Function</td> </tr> <tr> <td colspan="3" rowspan="6" style="background-color: #cccccc;"></td> <td>0</td><td>1</td><td>0</td> <td>0</td><td>1</td><td>0</td> <td>Alternate Function 1</td> </tr> <tr> <td>0</td><td>1</td><td>1</td> <td>0</td><td>1</td><td>1</td> <td>Primary Function</td> </tr> <tr> <td colspan="3" rowspan="4" style="background-color: #cccccc;"></td> <td>1</td><td>0</td><td>0</td> <td>1</td><td>0</td><td>0</td> <td>Alternate Function 2</td> </tr> <tr> <td>1</td><td>0</td><td>1</td> <td>1</td><td>0</td><td>1</td> <td>Reserved</td> </tr> <tr> <td>1</td><td>1</td><td>0</td> <td>1</td><td>1</td><td>0</td> <td>Reserved</td> </tr> <tr> <td>1</td><td>1</td><td>1</td> <td>1</td><td>1</td><td>1</td> <td>Reserved</td> </tr> </tbody> </table> <p>¹ For all SIU_PCRs that do not comply with these rules, the PA definition is given explicitly with the SIU_PCR definition.</p> <p>² For future software compatibility, it is recommended that all PA fields be treated as 3-bit fields, with the unused bits written as 0.</p>	PA Bit Field									Pin Function ¹	1-bit ² (2 Functions)			2-bit ² (3 Functions)			3-bit (4 Functions)			0	0	0	0	0	0	0	0	0	GPIO	0	0	1	0	0	1	0	0	1	Primary Function				0	1	0	0	1	0	Alternate Function 1	0	1	1	0	1	1	Primary Function				1	0	0	1	0	0	Alternate Function 2	1	0	1	1	0	1	Reserved	1	1	0	1	1	0	Reserved	1	1	1	1	1	1	Reserved
PA Bit Field									Pin Function ¹																																																																															
1-bit ² (2 Functions)			2-bit ² (3 Functions)			3-bit (4 Functions)																																																																																		
0	0	0	0	0	0	0	0	0	GPIO																																																																															
0	0	1	0	0	1	0	0	1	Primary Function																																																																															
			0	1	0	0	1	0	Alternate Function 1																																																																															
			0	1	1	0	1	1	Primary Function																																																																															
						1	0	0	1	0	0	Alternate Function 2																																																																												
						1	0	1	1	0	1	Reserved																																																																												
						1	1	0	1	1	0	Reserved																																																																												
						1	1	1	1	1	1	Reserved																																																																												
6 OBE	<p>Output buffer enable. Enables the pad as an output and drives the output buffer enable signal.</p> <p>0 Output buffer for the pad is disabled. 1 Output buffer for the pad is enabled.</p>																																																																																							
7 IBE	<p>Input buffer enable. Enables the pad as an input and drives the input buffer enable signal.</p> <p>0 Input buffer for the pad is disabled. 1 Input buffer for the pad is enabled.</p>																																																																																							
8–9 DSC[0:1]	<p>Drive strength control. Controls the pad drive strength. Drive strength control pertains to pins with the fast I/O pad type.</p> <p>00 10 pF Drive Strength 01 20 pF Drive Strength 10 30 pF Drive Strength 11 50 pF Drive Strength</p>																																																																																							
10 ODE	<p>Open drain output enable. Controls output driver configuration for the pads. Either open drain or push/pull driver configurations can be selected. This feature applies to output pins only.</p> <p>0 Open drain is disabled for the pad (push/pull driver enabled). 1 Open drain is enabled for the pad.</p>																																																																																							
11 HYS	<p>Input hysteresis. Controls whether hysteresis is enabled for the pad.</p> <p>0 Hysteresis is disabled for the pad. 1 Hysteresis is enabled for the pad.</p>																																																																																							

Table 6-16. SIU_PCR Field Descriptions (continued)

Field	Description
12–13 SRC[0:1]	Slew rate control. Controls slew rate for the pad. Slew rate control pertains to pins with slow or medium I/O pad types, and the output signals are driven according to the value of this field. Actual slew rate is dependent on the pad type and load. See the electrical specification for this information 00 Minimum slew rate 01 Medium slew rate 10 Reserved 11 Maximum slew rate
14 WPE	Weak pull up/down enable. Controls whether the weak pull up/down devices are enabled/disabled for the pad. Pull up/down devices are enabled by default. 0 Weak pull device is disabled for the pad. 1 Weak pull device is enabled for the pad.
15 WPS	Weak pull up/down select. Controls whether weak pull up or weak pull down devices are used for the pad when weak pull up/down devices are enabled. The WKPCFG pin determines whether pull up or pull down devices are enabled during reset. The WPS bit determines whether weak pull up or pull down devices are used after reset, or for pads in which the WKPCFG pin does not determine the reset weak pull up/down state. 0 The pull down value is enabled for the pad. 1 The pull up value is enabled for the pad.

6.3.1.13 Pad Configuration Register 0 (SIU_PCR0)

The SIU_PCR0 registers control the pin function, direction, and static electrical attributes of the $\overline{CS}[0_ADDR[8]_GPIO[0]$ pins.

SIU_BASE+0x40

R	0	0	0	0	PA ¹	OBE ²	IBE ³	DSC	ODE ⁴	HYS	0	0	WPE ⁵	WPS ⁵
W														
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	1	1

 = Unimplemented or Reserved

- ¹ The PA fields in SIU_PCR[0] and SIU_PCR[4] must not be configured simultaneously to select ADDR[8]. Only one pin is to be configured to provide the address input.
- ² When configured as $\overline{CS}[0]$, the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ³ When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ⁴ When configured as $\overline{CS}[0]$, set the ODE bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as $\overline{CS}[0]$.

Figure 6-14. $\overline{CS}[0_ADDR[8]_GPIO[0]$ Pad Configuration Register (SIU_PCR0)

6.3.1.14 Pad Configuration Registers 1-3 (SIU_PCR1-3)

The SIU_PCR1- SIU_PCR3 registers control the pin function, direction, and static electrical attributes of the $\overline{CS}[1:3]_ADDR[9:11]_GPIO[1:3]$ pins.

SIU_BASE+0x42 - SIU_BASE+0x46 (3)

R	0	0	0	0	PA ¹	OBE ²	IBE ³	DSC	ODE ⁴	HYS	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ The PA fields in PCR1 - 3 and PCR5 - 7 must not be configured simultaneously to select ADDR[9:11]. Only configure one pin to provide the address input.
- ² When configured as $\overline{CS}[1:3]$, the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ³ When the pad is configured as an output, setting the IBE bit to 1 sends the pin state to the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ⁴ When configured as $\overline{CS}[1:3]$, set the ODE bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as $\overline{CS}[1:3]$.

Figure 6-15. $\overline{CS}[1:3]$ _ADDR[9:11]_GPIO[1:3] Pad Configuration Registers (SIU_PCR1 - SIU_PCR3)

6.3.1.15 Pad Configuration Registers 4 - 7 (SIU_PCR4 - SIU_PCR7)

The SIU_PCR4 - SIU_PCR7 registers control the pin function, direction, and static electrical attributes of the ADDR[8:11]_GPIO[4:7] pins.

SIU_BASE+0x48 - SIU_BASE+0x4E (4)

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	DSC	ODE ⁴	HYS ⁵	0	0	WPE ⁶	WPS ⁶	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ The PA fields in PCR0 - 3 and PCR4 - 7 must not be configured simultaneously to select ADDR[8:11]. Only configure one pin to provide the address input.
- ² When configured as ADDR[8:11] the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ³ When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ⁴ When configured as ADDR[8:11] set the ODE bit to 0.
- ⁵ When EBI is enabled, set the HYS bit to 0.
- ⁶ See the EBI section for weak pull up settings when configured as ADDR[8:11].

Figure 6-16. ADDR[8:11]_GPIO[4:7] Pad Configuration Registers (SIU_PCR4 - SIU_PCR7)

6.3.1.16 Pad Configuration Registers 8 - 22 (SIU_PCR8 - SIU_PCR22)

The SIU_PCR8 - SIU_PCR22 registers control the pin function, direction, and static electrical attributes of the ADDR[12:26]_GPIO[8:22] pins.

SIU_BASE+0x50 - SIU_BASE+0x6C (15)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as ADDR[12:26], the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ³ When configured as ADDR[12:26], set the ODE bit to 0.
- ⁴ When EBI is enabled, set the HYS bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as ADDR[8:26].

Figure 6-17. ADDR[12:26]_GPIO[8:22] Pad Configuration Registers (SIU_PCR8 - SIU_PCR22)

6.3.1.17 Pad Configuration Registers 23 - 25 (SIU_PCR23 - SIU_PCR25)

The SIU_PCR23 - SIU_PCR25 registers control the pin function, direction, and static electrical attributes of the ADDR[27:29]_GPIO[23:25] pins.

SIU_BASE+0x6E - SIU_BASE+0x72 (3)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as ADDR[27:29], the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ³ When configured as ADDR[27:29], set the ODE bit to 0.
- ⁴ When EBI is enabled, set the HYS bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as ADDR[27:29].

Figure 6-18. ADDR[27:29]_GPIO[23:25] Pad Configuration Registers (SIU_PCR23 - SIU_PCR25)

6.3.1.18 Pad Configuration Registers 26 - 27 (SIU_PCR26 - SIU_PCR27)

The SIU_PCR26- SIU_PCR27 registers control the pin function, direction, and static electrical attributes of the ADDR[30:31]_ADDR[6:7]_GPIO[26:27] pins.

SIU_BASE+0x74 - SIU_BASE+0x76 (2)

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as ADDR[30:31] or ADDR[6:7], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as ADDR[30:31] or ADDR[6:7], set the ODE bit to 0.
- ⁴ When EBI is enabled, set the HYS bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as ADDR[30:31] or ADDR[6:7].

Figure 6-19. ADDR[30:31]_ADDR[6:7]_GPIO[26:27] Pad Configuration Registers (SIU_PCR26 - SIU_PCR27)

6.3.1.19 Pad Configuration Registers 28 - 43 (SIU_PCR28 - SIU_PCR43)

The SIU_PCR28 - SIU_PCR43 registers control the pin function, direction, and static electrical attributes of the DATA[0:15]_GPIO[28:43] pins.

SIU_BASE+0x78 - SIU_BASE+0x96 (16)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[0:15], the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ³ When configured as DATA[0:15], set the ODE bit to 0.
- ⁴ When EBI is enabled, set the HYS bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[0:15].

Figure 6-20. DATA[0:15]_GPIO[28:43] Pad Configuration Registers (SIU_PCR28 - SIU_PCR43)

6.3.1.20 Pad Configuration Registers 44-48 (SIU_PCR44–SIU_PCR48)

The SIU_PCR44-48 register controls the pin function, direction, and static electrical attributes of the DATA[16:20]_GPIO[44:48] pins.

SIU_BASE+0x98, SIU_BASE+0x9A, SIU_BASE+0x9C, SIU_BASE+0x9E, SIU_BASE+0xA0

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[16:20], the OBE bit has no effect. When configured as GPO, set the OBE bit to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, set the IBE bit to 1.
- ³ When configured as DATA[16:20], set the ODE bit to 0.
- ⁴ When EBI is enabled, set the HYS bit to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[16:20].

Figure 6-21. DATA[16:20]_GPIO[44:48] Pad Configuration Registers (SIU_PCR44–48)

6.3.1.21 Pad Configuration Registers 49 (SIU_PCR49)

The SIU_PCR49 register controls the pin function, direction, and static electrical attributes of the DATA[21]_FRA_TX_GPIO[49] pin.

SIU_BASE+0xA2

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[21] or FRA_TX, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[21] or FRA_TX, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[21] or FRA_TX.

Figure 6-22. DATA[21]_FRA_TX_GPIO[49] Pad Configuration Registers (SIU_PCR49)

6.3.1.22 Pad Configuration Registers 50 (SIU_PCR50)

The SIU_PCR50 register controls the pin function, direction, and static electrical attributes of the DATA[22]_FRA_RX_GPIO[50] pin.

SIU_BASE+0xA4

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[22] or FRA_RX, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[22] or FRA_RX, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[22] or FRA_RX.

Figure 6-23. DATA[22]_FRA_RX_GPIO[50] Pad Configuration Registers (SIU_PCR50)

6.3.1.23 Pad Configuration Registers 51 (SIU_PCR51)

The SIU_PCR51 register controls the pin function, direction, and static electrical attributes of the DATA[23]_FRA_TX_EN_GPIO[51] pin.

SIU_BASE+0xA6

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[23] or FRA_TX_EN, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[23] or FRA_TX_EN, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[23] or FRA_TX_EN.

Figure 6-24. DATA[23]_FRA_TX_EN_GPIO[51] Pad Configuration Registers (SIU_PCR51)

6.3.1.24 Pad Configuration Registers 52 (SIU_PCR52)

The SIU_PCR52 register controls the pin function, direction, and static electrical attributes of the DATA[24]_GPIO[52] pin.

SIU_BASE+0xA8

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[24] or, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[24] or, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[24] or.

Figure 6-25. DATA[24]_GPIO[52] Pad Configuration Registers (SIU_PCR52)

6.3.1.25 Pad Configuration Registers 53 (SIU_PCR53)

The SIU_PCR53 register controls the pin function, direction, and static electrical attributes of the DATA[25]_FRB_TX_GPIO[53] pin.

SIU_BASE+0xAA

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[25]FRB_TX, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[25] or FRB_TX the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[25] or FRB_TX.

Figure 6-26. DATA[25]_FRB_TX_GPIO[53] Pad Configuration Registers (SIU_PCR53)

6.3.1.26 Pad Configuration Registers 54 (SIU_PCR54)

The SIU_PCR54 register controls the pin function, direction, and static electrical attributes of the DATA[26]_FRB_TX_EN_GPIO[54] pin.

SIU_BASE+0xAC

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[26] or FRB_TX_EN, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[26] or FRB_TX_EN, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[26] or FRB_TX_EN.

Figure 6-27. DATA[26]_FRB_TX_EN_GPIO[54] Pad Configuration Registers (SIU_PCR54)

6.3.1.27 Pad Configuration Registers 55 (SIU_PCR55)

The SIU_PCR55 register controls the pin function, direction, and static electrical attributes of the DATA[27]_FRB_RX_GPIO[55] pin.

SIU_BASE+0xAE

R	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W															
RESET:	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[27] or FRB_RX, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[27] or FRB_RX, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[27] or FRB_RX.

Figure 6-28. DATA[27]_FRB_RX_GPIO[55] Pad Configuration Registers (SIU_PCR55)

6.3.1.28 Pad Configuration Registers 56 (SIU_PCR56)

The SIU_PCR56 register controls the pin function, direction, and static electrical attributes of the DATA[28]_FRB_BGEM_GPIO[56] pin.

SIU_BASE+0xB0

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[28] or, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[28] or, the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[28] or.

Figure 6-29. DATA[28]_GPIO[56] Pad Configuration Registers (SIU_PCR56)

6.3.1.29 Pad Configuration Registers 57 (SIU_PCR57)

The SIU_PCR57 register controls the pin function, direction, and static electrical attributes of the DATA[29]_GPIO[57] pin.

SIU_BASE+0xB2

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[29], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[29] the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[29].

Figure 6-30. DATA[29]_GPIO[57] Pad Configuration Registers (SIU_PCR57)

6.3.1.30 Pad Configuration Registers 58 (SIU_PCR58)

The SIU_PCR58 register controls the pin function, direction, and static electrical attributes of the DATA[30]_GPIO[58] pin.

SIU_BASE+0xB4

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[30], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[30], the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[30].

Figure 6-31. DATA[30]_GPIO[58] Pad Configuration Registers (SIU_PCR58)

6.3.1.31 Pad Configuration Registers 59 (SIU_PCR59)

The SIU_PCR59 register controls the pin function, direction, and static electrical attributes of the DATA[31]_GPIO[59] pin.

SIU_BASE+0xB6

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as DATA[31], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³ When configured as DATA[31], the ODE bit should be set to 0.
- ⁴ When EBI is enabled, the HYS bit should be set to 0.
- ⁵ See the EBI section for weak pull up settings when configured as DATA[31].

Figure 6-32. DATA[31]_GPIO[59] Pad Configuration Registers (SIU_PCR59)

6.3.1.32 Pad Configuration Registers 60-61 (SIU_PCR60 - SIU_PCR61)

The SIU_PCR[60-61] registers are unimplemented in the device.

6.3.1.33 Pad Configuration Register 62 (SIU_PCR62)

The SIU_PCR62 register controls the pin function, direction, and static electrical attributes of the RD_WR_GPIO[62] pin.

SIU_BASE+0xBC

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as RD_ \overline{WR} , the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

³When configured as RD_ \overline{WR} , the ODE bit should be set to 0.

⁴When EBI is enabled, the HYS bit should be set to 0.

⁵See the EBI section for weak pull up settings when configured as RD_ \overline{WR} .

Figure 6-33. RD_ \overline{WR} _GPIO[62] Pad Configuration Register (SIU_PCR62)

6.3.1.34 Pad Configuration Register 63 (SIU_PCR63)

The SIU PCR63 register controls the pin function, direction, and static electrical attributes of the $\overline{BDIP_GPIO}$ [63] pin.

SIU_BASE+0xBE

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS	0	0	WPE ⁴	WPS ⁴	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as \overline{BDIP} , the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

³When configured as \overline{BDIP} , the ODE bit should be set to 0.

⁴See the EBI section for weak pull up settings when configured as \overline{BDIP} .

Figure 6-34. $\overline{BDIP_GPIO}$ [63] Pad Configuration Register (SIU_PCR63)

6.3.1.35 Pad Configuration Registers 64 - 65 (SIU_PCR64 - SIU_PCR65)

The SIU_PCR64 - SIU_PCR65 registers control the pin function, direction, and static electrical attributes of the $\overline{WE/BE}$ [0:1]_GPIO[64:65] pins. Note that the PA bit in the PCR64 - 65 registers selects between the write enable/byte enable and GPIO functions. The WEBS bit in the EBI Base Registers selects between the write enable and byte enable function.

SIU_BASE+0xC0 - SIU_BASE+0xC2 (2)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS	0	0	WPE ⁴	WPS ⁴
W															
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as $\overline{WE}/\overline{BE}[0:1]$, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

³When configured as $\overline{WE}/\overline{BE}[0:1]$, the ODE bit should be set to 0.

⁴See the EBI section for weak pull up settings when configured as $\overline{WE}/\overline{BE}[0:1]$.

Figure 6-35. $\overline{WE}/\overline{BE}[0:1]$ _GPIO[64:65] Pad Configuration Registers (SIU_PCR64 - SIU_PCR65)

6.3.1.36 Pad Configuration Registers 66 - 67 (SIU_PCR66 - SIU_PCR67)

The SIU_PCR66 - SIU_PCR67 registers control the pin function, direction, and static electrical attributes of the $\overline{WE}/\overline{BE}[2:3]$ _GPIO[66:67] pins. Note that the PA bit in the PCR66 - 67 registers selects between the write enable/byte enable and GPIO functions. The WEBS bit in the EBI Base Registers selects between the write enable and byte enable function.

SIU_BASE+0xC4 - SIU_BASE+0xC6 (2)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS	0	0	WPE ⁴	WPS ⁴
W															
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as $\overline{WE}/\overline{BE}[2:3]$, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

³When configured as $\overline{WE}/\overline{BE}[2:3]$, the ODE bit should be set to 0.

⁴See the EBI section for weak pull up settings when configured as $\overline{WE}/\overline{BE}[2:3]$.

Figure 6-36. $\overline{WE}/\overline{BE}[2:3]$ _GPIO[66:67] Pad Configuration Registers (SIU_PCR66 - SIU_PCR67)

6.3.1.37 Pad Configuration Register 68 (SIU_PCR68)

The SIU_PCR68 register controls the pin function, direction, and static electrical attributes of the \overline{OE} _GPIO[68] pin. The \overline{OE} function is not available in the 208 MAP BGA package. Only the GPIO function is available on this pin in the 208 package.

SIU_BASE+0xC8

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as \overline{OE} , the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

³When configured as \overline{OE} , the ODE bit should be set to 0.

⁴When EBI is enabled, the HYS bit should be set to 0.

⁵See the EBI section for weak pull up settings when configured as \overline{OE} .

Figure 6-37. \overline{OE} _GPIO[68] Pad Configuration Register (SIU_PCR68)

6.3.1.38 Pad Configuration Register 69 (SIU_PCR69)

The SIU_PCR69 register controls the pin function, direction, and static electrical attributes of the \overline{TS} _GPIO[69] pin.

SIU_BASE+0xCA

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as \overline{TS} , the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

³When configured as \overline{TS} , the ODE bit should be set to 0.

⁴When EBI is enabled, the HYS bit should be set to 0.

⁵See the EBI section for weak pull up settings when configured as \overline{TS} .

Figure 6-38. \overline{TS} _GPIO[69] Pad Configuration Register (SIU_PCR69)

6.3.1.39 Pad Configuration Register 70 (SIU_PCR70)

The SIU_PCR70 register controls the pin function, direction, and static electrical attributes of the \overline{TA} _GPIO[70] pin.

SIU_BASE+0xCC

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹When configured as \overline{TA} , the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³When configured as \overline{TA} and external master operation is enabled, the ODE bit should be set to 0.
- ⁴When EBI is enabled, the HYS bit should be set to 0.
- ⁵See the EBI section for weak pull up settings when configured as \overline{TA} .

Figure 6-39. \overline{TA} _GPIO[70] Pad Configuration Register (SIU_PCR70)

6.3.1.40 Pad Configuration Register 71 (SIU_PCR71)

The SIU_PCR71 register controls the pin function, direction, and static electrical attributes of the TEA_GPIO[71] pin.

SIU_BASE+0xCE

R	0	0	0	0	0	PA	OBE ¹	IBE ²	DSC	ODE ³	HYS ⁴	0	0	WPE ⁵	WPS ⁵	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹When configured as \overline{TEA} , the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.
- ³When configured as \overline{TEA} and external master operation is enabled, the ODE bit should be set to 0.
- ⁴When EBI is enabled, the HYS bit should be set to 0.
- ⁵See the EBI section for weak pull up settings when configured as \overline{TEA} .

Figure 6-40. \overline{TEA} _GPIO[71] Pad Configuration Register (SIU_PCR71)

6.3.1.41 Pad Configuration Register 72 (SIU_PCR72)

The SIU_PCR72 register controls the pin function, direction, and static electrical attributes of the $\overline{\text{BR_GPIO}}[72]$ pin. This register allows selection of the GPIO functions.

SIU_BASE+0xD0

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	DSC	ODE	HYS ⁴	0	0	WPE	WPS
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The $\overline{\text{BR}}$ function (0b1) is disabled in the MPC5567.

²When configured as GPO the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

⁴When EBI is enabled, the HYS bit should be set to 0.

Figure 6-41. $\overline{\text{BR_GPIO}}[72]$ Pad Configuration Register (SIU_PCR72)

6.3.1.42 Pad Configuration Register 73 (SIU_PCR73)

The SIU_PCR73 register controls the pin function, direction, and static electrical attributes of the $\overline{\text{BG_GPIO}}[73]$ pin. This register allows selection of the GPIO functions.

SIU_BASE+0xD2

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	DSC	ODE	HYS ⁴	0	0	WPE	WPS
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹ The $\overline{\text{BG}}$ function (0b1) is disabled in the MPC5567.

² When configured as GPO, the OBE bit should be set to 1.

³ When configured as GPO, the IBE bit may be set to 1 to reflect the pin state in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

⁴ When EBI is enabled, the HYS bit should be set to 0.

Figure 6-42. GPIO[73] Pad Configuration Register (SIU_PCR73)

6.3.1.43 Pad Configuration Register 74 (SIU_PCR74)

The SIU_PCR[74] register is unimplemented in the device.

6.3.1.44 Pad Configuration Register 75 - 82 (SIU_PCR75 - SIU_PCR82)

The SIU_PCR75 - SIU_PCR82 registers control the pin function, direction, and static electrical attributes of the MDO[11:4]_{_GPIO}[82:75] pins. GPIO is the default function at reset for these pins.

The Full Port Mode (FPM) bit in the Nexus Port Controller (NPC) Port Configuration Register controls whether the pins function as MDO[11:4] or GPIO[82:75]. The pad interface port enable for these pins is driven by the NPC block. When the FPM bit is set, the NPC enables the MDO port enable, and disables GPIO. When the FPM bit is cleared, the NPC disables the MDO port enable, and enables GPIO.

SIU_BASE+0xD6 - SIU_BASE+0xE4 (8)

R	0	0	0	0	0	0	OBE ¹	IBE ¹	DSC	ODE ²	HYS ³	0	0	WPE ⁴	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

- ¹ This bit applies only to GPIO operation.
- ² The ODE bit should be set to 0 for MDO operation.
- ³ The HYS bit has no effect on MDO operation.
- ⁴ The WPE bit should be set to 0 for MDO operation.

Figure 6-43. MDO[11:4]_GPIO[82:75] Pad Configuration Register (SIU_PCR75 - SIU_PCR82)

6.3.1.45 Pad Configuration Register 83 (SIU_PCR83)

The SIU_PCR83 register controls the pin function, direction, and static electrical attributes of the CNTXA_TXDA_GPIO[83] pins.

SIU_BASE+0xE6

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as CNTXA or TXDA, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-44. CNTXA_TXDA_GPIO[83] Pad Configuration Register (SIU_PCR83)

6.3.1.46 Pad Configuration Register 84 (SIU_PCR84)

The SIU_PCR84 register controls the pin function, direction, and static electrical attributes of the CNRXA_RXDA_GPIO[84] pins.

SIU_BASE+0xE8

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as CNRXA or RXDA, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-45. CNRXA_RXDA_GPIO[84] Pad Configuration Register (SIU_PCR84)

6.3.1.47 Pad Configuration Register 85 (SIU_PCR85)

The SIU_PCR85 register controls the pin function, direction, and static electrical attributes of the CNTXB_PCSC[3]_FRA_TX_GPIO[85] pin. This register allows selection of the CNTXB_PCSC[3], FRA_TX, and GPIO functions.

SIU_BASE+0xEA

R	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W													
RESET:	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as PCS or FRA_TX, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-46. CNTXB_PCSC[3]_FRA_TX_GPIO[85] Pad Configuration Register (SIU_PCR85)

6.3.1.48 Pad Configuration Register 86 (SIU_PCR86)

The SIU_PCR86 register controls the pin function, direction, and static electrical attributes of the PCSC[4]_FRA_RX_GPIO[86] pin. This register allows selection of the CNRXB_PCSC[4], FRA_RX, and GPIO functions.

SIU_BASE+0xEC

R	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W													
RESET:	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹When configured as PCS or FRA_RX, the OBE bit has not effect. When configured as GPO, the OBE bit should be set to 1.
- ²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-47. PCSC[4]_FRA_RX_GPIO[86] Pad Configuration Register (SIU_PCR86)

6.3.1.49 Pad Configuration Register 87 (SIU_PCR87)

The SIU_PCR87 register controls the pin function, direction, and static electrical attributes of the CNTXC_PCSD[3]_GPIO[87] pin.

SIU_BASE+0xEE

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as CNTXC, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-48. CNTXC_PCSD[3]_GPIO[87] Pad Configuration Register (SIU_PCR87)

6.3.1.50 Pad Configuration Register 88 (SIU_PCR88)

The SIU_PCR88 register controls the pin function, direction, and static electrical attributes of the CNRXC_PCSD[4]_GPIO[88] pin.

SIU_BASE+0xF0

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as CNRXC or PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-49. CNRXC_GPIO[88] Pad Configuration Register (SIU_PCR88)

6.3.1.51 Pad Configuration Register 89 (SIU_PCR89)

The SIU_PCR89 register controls the pin function, direction, and static electrical attributes of the TXDA_GPIO[89] pin.

SIU_BASE+0xF2

R	0	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as TXDA, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. For SCI loop back operation the IBE bit must be set to 1. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-50. TXDA_GPIO[89] Pad Configuration Register (SIU_PCR89)

6.3.1.52 Pad Configuration Register 90 (SIU_PCR90)

The SIU_PCR90 register controls the pin function, direction, and static electrical attributes of the RXDA_GPIO[90] pin.

SIU_BASE+0xF4

R	0	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹ When configured as RXDA, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-51. RXDA_GPIO[90] Pad Configuration Register (SIU_PCR90)

6.3.1.53 Pad Configuration Register 91 (SIU_PCR91)

The SIU_PCR91 register controls the pin function, direction, and static electrical attributes of the TXDB_PCS[1]_GPIO[91] pin.

SIU_BASE+0xF6

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

- ¹When configured as TXDB or PCS[1], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. For SCI loop back operation the IBE bit must be set to 1. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-52. TXDB_PCS[1]_GPIO[91] Pad Configuration Register (SIU_PCR91)

6.3.1.54 Pad Configuration Register 92 (SIU_PCR92)

The SIU_PCR92 register controls the pin function, direction, and static electrical attributes of the RXDB_PCSD[5]_GPIO[92] pin.

SIU_BASE+0xF8

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as RXDB, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-53. RXDB_GPIO[92] Pad Configuration Register (SIU_PCR92)

6.3.1.55 Pad Configuration Register 93 (SIU_PCR93)

The SIU_PCR93 register controls the pin function, direction, and static electrical attributes of the SCKA_PCSC[1]_GPIO[93] pin. This register allows selection of the PCSC[1] and GPIO functions.

SIU_BASE+0xFA

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The SCKA function is not available on the MPC5567

²When configured as PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-54. SCKA_PCSC[1]_GPIO[93] Pad Configuration Register (SIU_PCR93)

6.3.1.56 Pad Configuration Register 94 (SIU_PCR94)

The SIU_PCR94 register controls the pin function, direction, and static electrical attributes of the SINA_PCSC[2]_GPIO[94] pin. This register allows selection of the PCSC[2] and GPIO functions.

SIU_BASE+0xFC

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The SINA function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-55. SINA_PCSC[2]_GPIO[94] Pad Configuration Register (SIU_PCR94)

6.3.1.57 Pad Configuration Register 95 (SIU_PCR95)

The SIU_PCR95 register controls the pin function, direction, and static electrical attributes of the PCSC[5]_GPIO[95] pin. This register allows selection of the PCSC[5] and GPIO functions.

SIU_BASE+0xFE

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The SOUTA function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-56. SOUTA_PCSC[5]_GPIO[95] Pad Configuration Register (SIU_PCR95)

6.3.1.58 Pad Configuration Registers 96 (SIU_PCR96)

The SIU_PCR96 registers control the pin function, direction, and static electrical attributes of the PCSA[0]_PCSD[2]_GPIO[96] pin. This register allows selection of the PCSD[2] and GPIO functions.

SIU_BASE+0x100

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The PCSA[0] function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as PCSD[2], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-57. PCSD[2]_GPIO[96] Pad Configuration Register (SIU_PCR96)

6.3.1.59 Pad Configuration Registers 97 (SIU_PCR97)

The SIU_PCR97 registers control the pin function, direction, and static electrical attributes of the PCSA[1]_PCSB[2]_GPIO[97] pin. This register allows selection of the PCSB[2] and GPIO functions.

SIU_BASE+0x102

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The PCSA[1] function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-58. PCSA[1]_PCSB[2]_GPIO[97] Pad Configuration Register (SIU_PCR97)

6.3.1.60 Pad Configuration Register 98 (SIU_PCR98)

The SIU_PCR98 register controls the pin function, direction, and static electrical attributes of the PCSA[2]_SCKD_GPIO[98] pin. This register allows selection of the SCKD and GPIO functions.

SIU_BASE+0x104

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The PCSA[2] function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as PCS, the OBE bit has no effect. When configured as SCKD, the OBE bit should be set to 1 for master operation, and set to 0 for slave operation. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-59. PCSA[2]_SCKD_GPIO[98] Pad Configuration Register (SIU_PCR98)

6.3.1.61 Pad Configuration Register 99 (SIU_PCR99)

The SIU_PCR99 register controls the pin function, direction, and static electrical attributes of the PCSA[3]_SIND_GPIO[99] pin. This register allows selection of the SIND and GPIO functions.

SIU_BASE+0x106

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS		
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The PCSA[3] function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-60. PCSA[3]_SIND_GPIO[99] Pad Configuration Register (SIU_PCR99)

6.3.1.62 Pad Configuration Register 100 (SIU_PCR100)

The SIU_PCR100 register controls the pin function, direction, and static electrical attributes of the PCSA[4]_SOUTD_GPIO[100] pin. This register allows selection of the SOUTD and GPIO functions.

SIU_BASE+0x108

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The PCSA[4] function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as SOUTD, the OBE bit has no effect. When configured as GPO, set the OBE to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-61. PCSA[4]_SOUTD_GPIO[100] Pad Configuration Register (SIU_PCR100)

6.3.1.63 Pad Configuration Registers 101 (SIU_PCR101)

The SIU_PCR101 register controls the pin function, direction, and static electrical attributes of the PCSA[5]_PCSB[3]_GPIO[101] pin. This register allows selection of the PCSB[3] and GPIO functions.

SIU_BASE+0x10A

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹The PCSA[5] function is not available on the MPC5567. Do not select b'01 or b'11 for the PA field.

²When configured as PCSB[3], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-62. PCSA[5]_PCSB[3]_GPIO[101] Pad Configuration Register (SIU_PCR101)

6.3.1.64 Pad Configuration Register 102 (SIU_PCR102)

The SIU_PCR102 register controls the pin function, direction, and static electrical attributes of the SCKB_PCSC[1]_GPIO[102] pin.

SIU_BASE+0x10C

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as SCK, the OBE bit should be set to 1 for master operation, and set to 0 for slave operation. When configured as GPO, the OBE bit should be set to 1.

²When configured as SCK in slave operation the IBE bit should be set to 1. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-63. SCKB_PCSC[1]_GPIO[102] Pad Configuration Register (SIU_PCR102)

6.3.1.65 Pad Configuration Register 103 (SIU_PCR103)

The SIU_PCR103 register controls the pin function, direction, and static electrical attributes of the SINB_PCSC[2]_GPIO[103] pin.

SIU_BASE+0x10E

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as SIN, the OBE bit should be set to 0. When configured as PCS, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption.

Figure 6-64. SINB_PCSC[2]_GPIO[103] Pad Configuration Register (SIU_PCR103)

6.3.1.66 Pad Configuration Register 104 (SIU_PCR104)

The SIU_PCR104 register controls the pin function, direction, and static electrical attributes of the SOUTB_PCSC[5]_GPIO[104] pin.

SIU_BASE+0x110

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as SOUT or PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-65. SOUTB_PCSC[5]_GPIO[104] Pad Configuration Register (SIU_PCR104)

6.3.1.67 Pad Configuration Register 105 (SIU_PCR105)

The SIU_PCR105 register controls the pin function, direction, and static electrical attributes of the PCSB[0]_PCSD[2]_GPIO[105] pin.

SIU_BASE+0x112

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as PCSB[0], the OBE bit should be set to 1 for master operation, and set to 0 for slave operation. When configured as PCSD[2], the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When configured as PCSB[0] in slave operation, the IBE bit should be set to 1. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-66. PCSB[0]_PCSD[2]_GPIO[105] Pad Configuration Register (SIU_PCR105)

6.3.1.68 Pad Configuration Register 106 (SIU_PCR106)

The SIU_PCR106 register controls the pin function, direction, and static electrical attributes of the PCSB[1]_PCSD[0]_GPIO[106] pin.

SIU_BASE+0x114

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as PCSB[1], the OBE bit has no effect. When configured as PCSD[0], the OBE bit should be set to 1 for master operation, and set to 0 for slave operation. When configured as GPO, the OBE bit should be set to 1.

²When configured as PCSD[0] in slave operation, the IBE bit should be set to 1. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-67. PCSB[1]_GPIO[106] Pad Configuration Register (SIU_PCR106)

6.3.1.69 Pad Configuration Register 107 (SIU_PCR107)

The SIU_PCR107 register controls the pin function, direction, and static electrical attributes of the PCSB[2]_SOUTC_FRA_TX_EN_GPIO[107] pin.

SIU_BASE+0x116

R	0	0	0	PA				OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																	
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as PCS or SOUT, or FRA_TX_EN, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-68. PCSB[2]_SOUTC_FRA_TX_EN_GPIO[107] Pad Configuration Register (SIU_PCR107)

6.3.1.70 Pad Configuration Register 108 (SIU_PCR108)

The SIU_PCR108 register controls the pin function, direction, and static electrical attributes of the PCSB[3]_SINC_GPIO[108] pin.

SIU_BASE+0x118

R	0	0	0	0	PA				OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W																	
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as PCS or SIN, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-69. PCSB[3]_SINC_GPIO[108] Pad Configuration Register (SIU_PCR108)

6.3.1.71 Pad Configuration Register 109 (SIU_PCR109)

The SIU_PCR109 register controls the pin function, direction, and static electrical attributes of the PCSB[4]_SCKC_GPIO[109] pin.

SIU_BASE+0x11A

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as SCK, the OBE bit should be set to 1 for master operation, and set to 0 for slave operation. When configured as PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When configured as SCK in slave operation, the IBE bit should be set to 1. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-70. PCSB[4]_SCKC_GPIO[109] Pad Configuration Register (SIU_PCR109)

6.3.1.72 Pad Configuration Register 110 (SIU_PCR110)

The SIU_PCR110 register controls the pin function, direction, and static electrical attributes of the PCSB[5]_PCSC[0]_GPIO[110] pin.

SIU_BASE+0x11C

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as PCSB[5], the OBE bit has no effect. When configured as PCSC[0], the OBE bit should be set to 1 for master operation, and set to 0 for slave operation. When configured as GPO, the OBE bit should be set to 1.

²When configured as PCSC[0] in slave operation, the IBE bit should be set to 1. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-71. PCSB[5]_PCSC[0]_GPIO[110] Pad Configuration Register (SIU_PCR110)

6.3.1.73 Pad Configuration Register 111 - 112 (SIU_PCR111 - SIU_PCR112)

The SIU_PCR111 - SIU_PCR112 registers control the pin function, direction, and static electrical attributes of the GPIO[111:112] pins.

SIU_BASE+0x11E - SIU_BASE+0x120 (2)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-72. GPIO[111:112] Pad Configuration Register (SIU_PCR111 - SIU_PCR112)

6.3.1.74 Pad Configuration Register 113 (SIU_PCR113)

The SIU_PCR113 register controls the pin function, direction, and static electrical attributes of the TCRCLKA_IRQ[7]_GPIO[113] pin.

SIU_BASE+0x122

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as TCRCLKA or IRQ, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-73. TCRCLKA_IRQ[7]_GPIO[113] Pad Configuration Register (SIU_PCR113)

6.3.1.75 Pad Configuration Register 114 - 117 (SIU_PCR114 - SIU_PCR117)

The SIU_PCR114 - SIU_PCR117 registers control the pin function, direction, and static electrical attributes of the ETPUA[0:3]_ETPUA[12:15]_GPIO[114:117] pins. Only the output channels of ETPUA[12:15] are connected to pins. Both the input and output channels of ETPUA[0:3] are connected to pins.

SIU_BASE+0x124 - 0x12A

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for ETPUA[0:3], and GPIO[114:117] when configured as outputs. When configured as ETPUA[12:15], the OBE bit has no effect.

²The IBE bit must be set to 1 for both ETPUA[0:3], and GPIO[114:117] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[0:3] pin is determined by the WKPCFG pin.

Figure 6-74. ETPUA[0:3]_ETPUA[12:15]_GPIO[114:117] Pad Configuration Register (SIU_PCR114 - SIU_PCR117)

6.3.1.76 Pad Configuration Register 118 (SIU_PCR118)

The SIU_PCR118 registers control the pin function, direction, and static electrical attributes of the ETPUA[4]_ETPUA[16]_FRB_TX_GPIO[118] pins. Only the output channel of ETPUA[16] is connected to the pin. Both the input and output channels of ETPUA[4] are connected to pins.

SIU_BASE+0x12C

R	0	0	0	PA			OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for both ETPUA[4], and GPIO[118] when configured as output. When configured as ETPUA[16] or FRB_TX the OBE bit has no effect.

²The IBE bit must be set to 1 for both ETPUA[4], and GPIO[118] when configured as input. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the FRB_TX and ETPUA[4] pin is determined by the WKPCFG pin.

Figure 6-75. ETPUA[4]_ETPUA[16]_FRB_TX_GPIO[118] Pad Configuration Register (SIU_PCR118)

6.3.1.77 Pad Configuration Register 119 (SIU_PCR119)

The SIU_PCR119 registers control the pin function, direction, and static electrical attributes of the ETPUA[5]_ETPUA[17]_FRB_TX_EN_GPIO[119] pins. Only the output channels of ETPUA[17] are connected to pins. Both the input and output channels of ETPUA[5] are connected to pins.

SIU_BASE+0x12E

R	0	0	0	PA			OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for ETPUA[5], and GPIO[119] when configured as outputs. When configured as ETPUA[17] or FRB_TX_EN, the OBE bit has no effect.

²The IBE bit must be set to 1 for both ETPUA[5] and GPIO[119] when configured as input. When configured as ETPUA[17] or when ETPUA[5] or GPIO are configured as outputs, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the FRB_TX_EN and ETPUA[5] pin is determined by the WKPCFG pin.

Figure 6-76. ETPUA[5]_ETPUA[17]_FRB_TX_EN_GPIO[119] Pad Configuration Register (SIU_PCR119)

6.3.1.78 Pad Configuration Register 120 (SIU_PCR120)

The SIU_PCR120 registers control the pin function, direction, and static electrical attributes of the ETPUA[6]_ETPUA[18]_FRB_RX_GPIO[120] pins. Only the output channels of ETPUA[18] are connected to pins. Both the input and output channels of ETPUA[6] are connected to pins.

SIU_BASE+0x130

R	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W													
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1

U³

= Unimplemented or Reserved

- ¹ The OBE bit must be set to 1 for both FR_B_RX and GPIO[120] when configured as outputs. When configured as ETPUA[18] or FRB_RX, the OBE bit has no effect.
- ² The IBE bit must be set to 1 for both ETPUA[6], FRB_RX, and GPIO[120] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³ The weak pull up/down selection at reset for the FRB_RX ETPUA[6] pin is determined by the WKPCFG pin.

Figure 6-77. ETPUA[6]_ETPUA[18]_FRB_RX_GPIO[120] Pad Configuration Register (SIU_PCR120)

6.3.1.79 Pad Configuration Register 121 (SIU_PCR121)

The SIU_PCR121 registers control the pin function, direction, and static electrical attributes of the ETPUA[7]_ETPUA[19]_GPIO[121] pins. Only the output channels of ETPUA[19] are connected to pins. Both the input and output channels of ETPUA[7] are connected to pins.

SIU_BASE+0x132

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1

U³

= Unimplemented or Reserved

- ¹ The OBE bit must be set to 1 for both ETPUA[7] and GPIO[121] when configured as outputs. When configured as ETPUA[19], the OBE bit has no effect.
- ² The IBE bit must be set to 1 for both ETPUA[7] and GPIO[121] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³ The weak pull up/down selection at reset for the ETPUA[7] pin is determined by the WKPCFG pin.

Figure 6-78. ETPUA[7]_ETPUA[19]_GPIO[121] Pad Configuration Register (SIU_PCR121)

6.3.1.80 Pad Configuration Register 122 (SIU_PCR122)

The SIU_PCR122 registers control the pin function, direction, and static electrical attributes of the ETPUA[8]_ETPUA[20]_GPIO[122] pins. Only the output channels of ETPUA[20] are connected to pins. Both the input and output channels of ETPUA[8] are connected to pins.

SIU_BASE+0x134

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹ The OBE bit must be set to 1 for both ETPUA[8] and GPIO[122] when configured as outputs. When configured as ETPUA[20], the OBE bit has no effect.
- ² The IBE bit must be set to 1 for both ETPUA[8] and GPIO[122] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³ The weak pull up/down selection at reset for the ETPUA[8] pin is determined by the WKPCFG pin.

Figure 6-79. ETPUA[8]_ETPUA[20]_GPIO[122] Pad Configuration Register (SIU_PCR122)

6.3.1.81 Pad Configuration Register 123 (SIU_PCR123)

The SIU_PCR123 registers control the pin function, direction, and static electrical attributes of the ETPUA[9]_ETPUA[21]_GPIO[123] pins. Only the output channels of ETPUA[21] are connected to pins. Both the input and output channels of ETPUA[9] are connected to pins.

SIU_BASE+0x136

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹ The OBE bit must be set to 1 for both ETPUA[9] and GPIO[123] when configured as outputs. When configured as ETPUA[21], the OBE bit has no effect.
- ² The IBE bit must be set to 1 for both ETPUA[9] and GPIO[123] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³ The weak pull up/down selection at reset for the ETPUA[9] pin is determined by the WKPCFG pin.

Figure 6-80. ETPUA[9]_ETPUA[21]_GPIO[123] Pad Configuration Register (SIU_PCR123)

6.3.1.82 Pad Configuration Register 124 (SIU_PCR124)

The SIU_PCR124 registers control the pin function, direction, and static electrical attributes of the ETPUA[10]_ETPUA[22]_GPIO[124] pins. Only the output channels of ETPUA[22] are connected to pins. Both the input and output channels of ETPUA[10] are connected to pins.

SIU_BASE+0x138

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹ The OBE bit must be set to 1 for both ETPUA[10] and GPIO[124] when configured as outputs. When configured as ETPUA[22] the OBE bit has no effect.
- ² The IBE bit must be set to 1 for both ETPUA[10] and GPIO[124] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³ The weak pull up/down selection at reset for the ETPUA[10] pin is determined by the WKPCFG pin.

Figure 6-81. ETPUA[10]_ETPUA[22]_GPIO[124] Pad Configuration Register (SIU_PCR124)

6.3.1.83 Pad Configuration Register 125 (SIU_PCR125)

The SIU_PCR125 registers control the pin function, direction, and static electrical attributes of the ETPUA[11]_ETPUA[23]_GPIO[125] pins. Only the output channels of ETPUA[23] are connected to pins. Both the input and output channels of ETPUA[11] are connected to pins.

SIU_BASE+0x13A

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹ The OBE bit must be set to 1 for both ETPUA[11] and GPIO[125] when configured as outputs. When configured as ETPUA[23], the OBE bit has no effect.
- ² The IBE bit must be set to 1 for both ETPUA[11] and GPIO[125] when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³ The weak pull up/down selection at reset for the ETPUA[11] pin is determined by the WKPCFG pin.

Figure 6-82. ETPUA[11]_ETPUA[23]_GPIO[125] Pad Configuration Register (SIU_PCR125)

6.3.1.84 Pad Configuration Register 126 (SIU_PCR126)

The SIU_PCR126 register controls the pin function, direction, and static electrical attributes of the ETPUA[12]_PCSB[1]_GPIO[126] pin.

SIU_BASE+0x13C

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.

²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[12] pin is determined by the WKPCFG pin.

Figure 6-83. ETPUA[12]_PCSB[1]_GPIO[126] Pad Configuration Register (SIU_PCR126)

6.3.1.85 Pad Configuration Register 127 (SIU_PCR127)

The SIU_PCR127 register controls the pin function, direction, and static electrical attributes of the ETPUA[13]_PCSB[3]_GPIO[127] pin.

SIU_BASE+0x13E

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.

²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[13] pin is determined by the WKPCFG pin.

Figure 6-84. ETPUA[13]_PCSB[3]_GPIO[127] Pad Configuration Register (SIU_PCR127)

6.3.1.86 Pad Configuration Register 128 (SIU_PCR128)

The SIU_PCR128 register controls the pin function, direction, and static electrical attributes of the ETPUA[14]_PCSB[4]_GPIO[128] pin.

SIU_BASE+0x140

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.

²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[14] pin is determined by the WKPCFG pin.

Figure 6-85. ETPUA[14]_PCSB[4]_GPIO[128] Pad Configuration Register (SIU_PCR128)

6.3.1.87 Pad Configuration Register 129 (SIU_PCR129)

The SIU_PCR129 register controls the pin function, direction, and static electrical attributes of the ETPUA[15]_PCSB[5]_GPIO[129] pin.

SIU_BASE+0x142

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.
- ²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³The weak pull up/down selection at reset for the ETPUA[15] pin is determined by the WKPCFG pin.

Figure 6-86. ETPUA[15]_PCSB[5]_GPIO[129] Pad Configuration Register (SIU_PCR129)

6.3.1.88 Pad Configuration Register 130 (SIU_PCR130)

The SIU_PCR130 register controls the pin function, direction, and static electrical attributes of the ETPUA[16]_PCSD[1]_GPIO[130] pin.

SIU_BASE+0x144

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.
- ²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.
- ³The weak pull up/down selection at reset for the ETPUA[16] pin is determined by the WKPCFG pin.

Figure 6-87. ETPUA[16]_PCSD[1]_GPIO[130] Pad Configuration Register (SIU_PCR130)

6.3.1.89 Pad Configuration Register 131 (SIU_PCR131)

The SIU_PCR131 register controls the pin function, direction, and static electrical attributes of the ETPUA[17]_PCSD[2]_GPIO[131] pin.

SIU_BASE+0x146

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.

²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[17] pin is determined by the WKPCFG pin.

Figure 6-88. ETPUA[17]_PCSD[2]_GPIO[131] Pad Configuration Register (SIU_PCR131)

6.3.1.90 Pad Configuration Register 132 (SIU_PCR132)

The SIU_PCR132 register controls the pin function, direction, and static electrical attributes of the ETPUA[18]_PCSD[3]_GPIO[132] pin.

SIU_BASE+0x148

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.

²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[18] pin is determined by the WKPCFG pin.

Figure 6-89. ETPUA[18]_PCSD[3]_GPIO[132] Pad Configuration Register (SIU_PCR132)

6.3.1.91 Pad Configuration Register 133 (SIU_PCR133)

The SIU_PCR133 register controls the pin function, direction, and static electrical attributes of the ETPUA[19]_PCSD[4]_GPIO[133] pin.

SIU_BASE+0x14A

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. The OBE bit must be set to 1 for both ETPUA and GPIO when configured as outputs.

²The IBE bit must be set to 1 for both ETPUA and GPIO when configured as inputs. When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register.

³The weak pull up/down selection at reset for the ETPUA[19] pin is determined by the WKPCFG pin.

Figure 6-90. ETPUA[19]_PCSD[4]_GPIO[133] Pad Configuration Register (SIU_PCR133)

6.3.1.92 Pad Configuration Register 134 (SIU_PCR134)

The SIU_PCR134 register controls the pin function, direction, and static electrical attributes of the ETPUA[20]_IRQ[8]_FRA_TX_GPIO[134] pins. Both the input and output channels of ETPUA[20] are connected to pins.

SIU_BASE+0x14C

R	0	0	0	PA			OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ³

= Unimplemented or Reserved

¹When configured as IRQ, the OBE bit has no effect. The OBE bit must be set to 1 for ETPUA[20], FRA_TX, and GPIO[134] when configured as outputs.

²When the pad is configured as an outputs, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for ETPUA[20] and GPIO[134] when configured as inputs.

³The weak pull up/down selection at reset for the FRA_TXETPUA[20] pin is determined by the WKPCFG pin.

Figure 6-91. ETPUA[20]_IRQ[8]_FRA_TX_GPIO[134] Pad Configuration Register (SIU_PCR134)

6.3.1.93 Pad Configuration Register 135 (SIU_PCR135)

The SIU_PCR135 register controls the pin function, direction, and static electrical attributes of the ETPUA[21]_IRQ[9]_FRA_RX_GPIO[135] pins. Both the input and output channels of ETPUA[21] are connected to pins.

SIU_BASE+0x14E

R	0	0	0	PA			OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ³

= Unimplemented or Reserved

¹When configured as IRQ, the OBE bit has no effect. The OBE bit must be set to 1 for ETPUA[21] and GPIO[135] when configured as outputs.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both ETPUA[21] and GPIO[135] when configured as inputs.

³The weak pull up/down selection at reset for the FRA_RXETPUA[21] pin is determined by the WKPCFG pin.

Figure 6-92. ETPUA[21]_IRQ[9]_FRA_RX_GPIO[135] Pad Configuration Register (SIU_PCR135)

6.3.1.94 Pad Configuration Register 136 (SIU_PCR136)

The SIU_PCR136 register controls the pin function, direction, and static electrical attributes of the ETPUA[22]_IRQ[10]_GPIO[136] pins. Both the input and output channels of ETPUA[22] are connected to pins.

SIU_BASE+0x150

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as $\overline{\text{IRQ}}$, the OBE bit has no effect. The OBE bit must be set to 1 for ETPUA[22] and GPIO[136] when configured as outputs.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD I register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for ETPUA[22] and GPIO[136] when configured as inputs.

³The weak pull up/down selection at reset for the ETPUA[22] pin is determined by the WKPCFG pin.

Figure 6-93. ETPUA[22] $\overline{\text{IRQ}}$ [10]_GPIO[136] Pad Configuration Register (SIU_PCR136)

6.3.1.95 Pad Configuration Register 137 (SIU_PCR137)

The SIU_PCR137 register controls the pin function, direction, and static electrical attributes of the ETPUA[23] $\overline{\text{IRQ}}$ [11]_FRA_TX_EN_GPIO[137] pins. Both the input and output channels of ETPUA[23] are connected to pins.

SIU_BASE+0x152

R	0	0	0		PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as $\overline{\text{IRQ}}$, the OBE bit has no effect. The OBE bit must be set to 1 for ETPUA[23], $\overline{\text{FRA_TX_EN}}$ and GPIO[137] when configured as outputs.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD I register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for ETPUA[23], and GPIO[137] when configured as inputs.

³The weak pull up/down selection at reset for the $\overline{\text{FRA_TX_EN}}$ ETPUA[23] pin is determined by the WKPCFG pin.

Figure 6-94. ETPUA[23] $\overline{\text{IRQ}}$ [11]_FRA_TX_EN_GPIO[137] Pad Configuration Register (SIU_PCR137)

6.3.1.96 Pad Configuration Register 138 - 141 (SIU_PCR138 - SIU_PCR141)

The SIU_PCR138 - SIU_PCR141 registers control the pin function, direction, and static electrical attributes of the ETPUA[24:27] $\overline{\text{IRQ}}$ [12:15]_GPIO[138:141] pins. Only the output channels of ETPUA[24:27] are connected to pins.

SIU_BASE+0x154 - SIU_BASE+0x15A

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹When configured as ETPUA[24:27] or IRQ, the OBE bit has no effect. The OBE bit must be set to 1 for GPIO[138:141] when configured as outputs.
- ²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for GPIO[138:141] when configured as inputs.
- ³The weak pull up/down selection at reset for the ETPUA[24:27] pins is determined by the WKPCFG pin.

**Figure 6-95. ETPUA[24:27]_IRQ[12:15]_GPIO[138:141]
Pad Configuration Register (SIU_PCR138 - SIU_PCR141)**

6.3.1.97 Pad Configuration Register 142-143 (SIU_PCR142-143)

The SIU_PCR142-143 register controls the pin function, direction, and static electrical attributes of the ETPUA[28:29]_PCSC[1:2]_GPIO[142:143] pin. Only the output channels of ETPUA[28:29] are connected to the pin.

SIU_BASE+0x15C - SIU_BASE+0x15E

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

- ¹When configured as ETPUA or PCS, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.
- ²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for GPIO when configured as input.
- ³The weak pull up/down selection at reset for the ETPUA[28:29] pin is determined by the WKPCFG pin.

Figure 6-96. ETPUA[28:29]_PCSC[1:2]_GPIO[142:143] Pad Configuration Register (SIU_PCR142-143)

6.3.1.98 Pad Configuration Register 144-145 (SIU_PCR144-145)

The SIU_PCR144-145 register controls the pin function, direction, and static electrical attributes of the ETPUA[30:31]_PCSC[3:4]_GPIO[144:145] pin.

SIU_BASE+0x160 + SIU_BASE+0x162

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹When configured as PCS, the OBE bit has no effect. When configured as ETPUA output or GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for ETPUA or GPIO when configured as input.

³The weak pull up/down selection at reset for the ETPUA[30:31] pin is determined by the WKPCFG pin.

Figure 6-97. ETPUA[30:31]_PCSC[3:4]_GPIO[144:145] Pad Configuration Register (SIU_PCR144-145)

6.3.1.99 Pad Configuration Register 146 - 178 (SIU_PCR146 - SIU_PCR178)

The SIU_PCR146 - SIU_PCR178 registers are unimplemented in the device.

6.3.1.100 Pad Configuration Register 179 - 188 (SIU_PCR179 - SIU_PCR188)

The SIU_PCR179 - SIU_PCR188 registers control the pin function, direction, and static electrical attributes of the EMIOS[0:9]_ETPUA[0:9]_GPIO[179:188] pins. Both the input and output functions of EMIOS[0:9], and only the output channels of ETPUA[0:9] are connected to pins.

SIU_BASE+0x1A6 - SIU_BASE+0x1B8 (10)

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹ The OBE bit must be set to 1 for both EMIOS[0:9] and GPIO[179:188] when configured as outputs.

² When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[0:9] and GPIO[179:188] when configured as inputs.

³ The weak pull up/down selection at reset for the EMIOS[0:9] pins is determined by the WKPCFG pin.

Figure 6-98. EMIOS[0:9]_ETPUA[0:9]_GPIO[179:188] Pad Configuration Register (SIU_PCR179 - SIU_PCR188)

6.3.1.101 Pad Configuration Register 189 - 190 (SIU_PCR189 - SIU_PCR190)

The SIU_PCR189 - SIU_PCR190 registers control the pin function, direction, and static electrical attributes of the EMIOS[10:11]_PCSD[3:4]_GPIO[189:190] pins. Both the input and output functions of EMIOS[10:11] are connected to pins.

SIU_BASE+0x1BA - SIU_BASE+0x1BC (2)

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for both EMIOS[10:11] and GPIO[189:190] when configured as outputs.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[10:11] and GPIO[189:190] when configured as inputs.

³The weak pull up/down selection at reset for the EMIOS[10:11] pins is determined by the WKPCFG pin.

Figure 6-99. EMIOS[10:11]_PCSD[3:4]_GPIO[189:190] Pad Configuration Register (SIU_PCR189 - SIU_PCR190)

6.3.1.102 Pad Configuration Register 191 (SIU_PCR191)

The SIU_PCR191 register controls the pin function, direction, and static electrical attributes of the EMIOS[12]_SOUTC_GPIO[191] pin. Only the output of EMIOS[12] is connected to the pin.

SIU_BASE+0x1BE

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for GPIO[191] when configured as an output.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for GPIO[191] when configured as an input.

³The weak pull up/down selection at reset for the EMIOS[12] pin is determined by the WKPCFG pin.

Figure 6-100. EMIOS[12]_SOUTC_GPIO[191] Pad Configuration Register (SIU_PCR191)

6.3.1.103 Pad Configuration Register 192 (SIU_PCR192)

The SIU_PCR192 register controls the pin function, direction, and static electrical attributes of the EMIOS[13]_SOUTD_GPIO[192] pin. Only the output of EMIOS[13] is connected to the pin.

SIU_BASE+0x1C0

R	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for GPIO[192] when configured as an output.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for GPIO[192] when configured as an input.

³The weak pull up/down selection at reset for the EMIOS[13] pin is determined by the WKPCFG pin.

Figure 6-101. EMIOS[13]_SOUTD_GPIO[192] Pad Configuration Register (SIU_PCR192)

6.3.1.104 Pad Configuration Register 193 (SIU_PCR193)

The SIU_PCR193 registers control the pin function, direction, and static electrical attributes of the EMIOS[14] $\overline{\text{IRQ}}[0]$ _CNTXD_GPIO[193] pin. Both input and output functions of EMIOS[14] are connected to pins.

SIU_BASE+0x1C2 - SIU_BASE+0x1C4

R	0	0	0		PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1 U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for GPIO[193] when configured as outputs.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for GPIO[193] and CNTXD, when configured as inputs.

³The weak pull up/down selection at reset for the EMIOS[14] pins is determined by the WKPCFG pin.

Figure 6-102. EMIOS[14] $\overline{\text{IRQ}}[0]$ _CNTXD_GPIO[193] Pad Configuration Register (SIU_PCR193)

6.3.1.105 Pad Configuration Register 194 (SIU_PCR194)

The SIU_PCR194 registers control the pin function, direction, and static electrical attributes of the EMIOS[15] $\overline{\text{IRQ}}[1]$ _CNRXD_GPIO[194] pins. Both input and output functions of EMIOS[15] are connected to pins.

SIU_BASE+0x1C2 - SIU_BASE+0x1C8

R	0	0	0	PA			OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ³

= Unimplemented or Reserved

¹The OBE bit must be set to 1 for GPIO[194] when configured as outputs.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for GPIO[194] and CNRXD, when configured as inputs.

³The weak pull up/down selection at reset for the EMIOS[15] pins is determined by the WKPCFG pin.

Figure 6-103. EMIOS[15]_IRQ[1]_CNRXD_GPIO[194] Pad Configuration Register (SIU_PCR194)

6.3.1.106 Pad Configuration Register 195 - 198 (SIU_PCR195 - SIU_PCR198)

The SIU_PCR195 - SIU_PCR198 registers control the pin function, direction, and static electrical attributes of the EMIOS[16:19]_FR_DBG[3:0]_GPIO[195:198] pins. Both the input and output functions of EMIOS[16:19] are connected to pins.

SIU_BASE+0x1C6 - SIU_BASE+0x1CC (4)

R	0	0	0	PA ¹			OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ⁴

= Unimplemented or Reserved

¹The PA function using the 0b010 value is disabled on this device.

²The OBE bit must be set to 1 for EMIOS[16:19] and GPIO[195:198] when configured as outputs.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[16:19] and GPIO[195:198] when configured as inputs.

⁴The weak pull up/down selection at reset for the EMIOS[16:19] pins is determined by the WKPCFG pin.

Figure 6-104. EMIOS[16:19]_FR_DBG[0:3]_GPIO[195:198] Pad Configuration Register (SIU_PCR195 - SIU_PCR198)

6.3.1.107 Pad Configuration Register 199 (SIU_PCR199)

The SIU_PCR199 register controls the pin function, direction, and static electrical attributes of the EMIOS[20]_GPIO[199] pins. Both the input and output functions of EMIOS[20] are connected to pins.

SIU_BASE+0x1CE

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ⁴

= Unimplemented or Reserved

¹The PA function using the 0b010 value is disabled on this device.

²The OBE bit must be set to 1 for EMIOS[20] and GPIO[199] when configured as outputs.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[20] and GPIO[199] when configured as inputs.

⁴The weak pull up/down selection at reset for the EMIOS[20] pins is determined by the WKPCFG pin.

Figure 6-105. EMIOS[20]_GPIO[199] Pad Configuration Register (SIU_PCR199)

6.3.1.108 Pad Configuration Register 200 (SIU_PCR200)

The SIU_PCR200 register controls the pin function, direction, and static electrical attributes of the EMIOS[21]_GPIO[200] pins. Both the input and output functions of EMIOS[21] are connected to pins.

SIU_BASE+0x1D0

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ⁴

= Unimplemented or Reserved

¹The PA function using the 0b010 value is disabled on this device.

²The OBE bit must be set to 1 for EMIOS[21] and GPIO[200] when configured as outputs.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[21] and GPIO[200] when configured as inputs.

⁴The weak pull up/down selection at reset for the EMIOS[21] pins is determined by the WKPCFG pin.

Figure 6-106. EMIOS[21]_GPIO[200] Pad Configuration Register (SIU_PCR200)

6.3.1.109 Pad Configuration Register 201 (SIU_PCR201)

The SIU_PCR201 register controls the pin function, direction, and static electrical attributes of the EMIOS[22]_CNTXE_GPIO[201] pins. Both the input and output functions of EMIOS[22] are connected to pins.

SIU_BASE+0x1D2

R	0	0	0	PA ¹			OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ⁴

= Unimplemented or Reserved

¹The PA function using the 0b010 value is disabled on this device.

²The OBE bit must be set to 1 for EMIOS[22] and GPIO[201] when configured as outputs.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[22] and GPIO[201] when configured as inputs.

⁴The weak pull up/down selection at reset for the EMIOS[22] pins is determined by the WKPCFG pin.

Figure 6-107. EMIOS[22]_CNTXE_GPIO[201] Pad Configuration Register (SIU_PCR201)

6.3.1.110 Pad Configuration Register 202 (SIU_PCR202)

The SIU_PCR202 register controls the pin function, direction, and static electrical attributes of the EMIOS[23]_CNRXE_GPIO[202] pins. Both the input and output functions of EMIOS[23] are connected to pins.

SIU_BASE+0x1D4

R	0	0	0	PA ¹			OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	U ⁴

= Unimplemented or Reserved

¹The PA function using the 0b010 value is disabled on this device.

²The OBE bit must be set to 1 for EMIOS[23] and GPIO[202] when configured as outputs.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. The IBE bit must be set to 1 for both EMIOS[23] and GPIO[202] when configured as inputs.

⁴The weak pull up/down selection at reset for the EMIOS[23] pins is determined by the WKPCFG pin.

Figure 6-108. EMIOS[23]_CNRXE_GPIO[202] Pad Configuration Register (SIU_PCR202)

6.3.1.111 Pad Configuration Register 203 - 204 (SIU_PCR203 - SIU_PCR204)

The SIU_PCR203 - SIU_PCR204 registers control the pin function, direction, and static electrical attributes of the EMIOS[14:15]_GPIO[203:204] pins. Only the output functions of EMIOS[14:15] are connected to these pins.

These pins are named GPIO[203:204] because other balls are already named EMIOS[14:15]. The primary function of these pins is EMIOS, however, out of reset, they are configured for GPIO use. These pins are not affected by WKPCFG.

SIU_BASE+0x1D6 - SIU_BASE+0x1D8 (2)

R	0	0	0	0	0	PA	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as EMIOS the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

Figure 6-109. EMIOS[14:15]_GPIO[203:204] Pad Configuration Register (SIU_PCR203 - SIU_PCR204)

6.3.1.112 Pad Configuration Registers 205 (SIU_PCR205)

The SIU_PCR205 register controls the direction and static electrical attributes of the GPIO[205] pin. This register is separate from the PCRs for GPIO[206:207] since GPIO[205] is a medium pad type with slew rate control and GPIO[206:207] are fast pad types with drive strength control. The PA bit is not implemented for this PCR because GPIO is the only pin function.

SIU_BASE+0x1DA

R	0	0	0	0	0	0	OBE ¹	IBE ²	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹ When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. When configured as GPI, the IBE bit should be set to 1.

Figure 6-110. GPIO[205] Pad Configuration Registers (SIU_PCR205)

6.3.1.113 Pad Configuration Registers 206 - 207 (SIU_PCR206 - SIU_PCR207)

The SIU_PCR206 - SIU_PCR207 registers control the pin function, direction, and static electrical attributes of the GPIO[206:207] pins. These registers are separate from the PCR for GPIO[205] since GPIO[206:207] are fast pad types with drive strength control and GPIO[205] is a medium pad type with slew rate control. The PA bit is not implemented for these PCRs since GPIO is the only pin function.

NOTE

The GPIO[206:207] pins have the capability to trigger the ADCs. For the ETRIG functionality, these GPIO pins need to be set as GPIO and then select the GPIO ADC trigger in the (SIU_ETISR) - see [Section 6.3.1.158, “eQADC Trigger Input Select Register \(SIU_ETISR\).”](#) The input source for each SIN, SS, SCK, and Trigger signal is individually specified in the DSPI input select register (SIU_DISR).

SIU_BASE+0x1DC - SIU_BASE+0x1DE (2)

R	0	0	0	0	0	0	OBE ¹	IBE ²	DSC	ODE	HYS	0	0	WPE	WPS
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

¹When configured as GPO, the OBE bit should be set to 1.

²When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. When configured as GPI, the IBE bit should be set to 1.

Figure 6-111. GPIO[206:207] Pad Configuration Registers (SIU_PCR206 - SIU_PCR207)

6.3.1.114 Pad Configuration Register 208 (SIU_PCR208)

The SIU_PCR208 register control the pin function, direction, and static electrical attributes of the PLLCFG[0]_IRQ[4]_GPIO[208] pin.

SIU_BASE+0x1E0

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS ⁴	SRC	WPE	WPS		
W																
RESET:	0	0	0	0	1	1	0	0	0	0	0	1	0	0	1	1

= Unimplemented or Reserved

¹The PLLCFG function applies only during reset when the \overline{RSTCFG} pin is asserted during reset. The PA field should be set to 0b10 for $\overline{IRQ}[4]$ and set to 0b00 for GPIO[208].

²When configured as IRQ, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

⁴When configured as \overline{IRQ} , the HYS bit should be set to 1.

Figure 6-112. PLLCFG[0]_IRQ[4]_GPIO[208] Pad Configuration Register (SIU_PCR208)

6.3.1.115 Pad Configuration Register 209 (SIU_PCR209)

The SIU_PCR209 registers control the pin function, direction, and static electrical attributes of the PLLCFG[1]_IRQ[5]_SOUTD_GPIO[209] pins.

SIU_BASE+0x1E2

R	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS ⁴	SRC	WPE	WPS	
W														
RESET:	0	0	0	0	1	1	0	0	0	1	0	0	1	1

= Unimplemented or Reserved

¹The PLLCFG function applies only during reset when the \overline{RSTCFG} pin is asserted during reset. The PA field should be set to 0b010 for $\overline{IRQ}[5]$, 0b100 for SOUTD, and 0b000 for GPIO[209].

²When configured as IRQ, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPD1 register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

⁴When configured as IRQ, the HYS bit should be set to 1.

Figure 6-113. PLLCFG[1]_IRQ[5]_SOUTD_GPIO[209] Pad Configuration Register (SIU_PCR209)

6.3.1.116 Pad Configuration Register 210 (SIU_PCR210)

The SIU_PCR210 register controls the pin function, direction, and static electrical attributes of the $\overline{\text{RSTCFG_GPIO}}[210]$ pin.

SIU_BASE+0x1E4

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	1	0	0	0	0	0	1	0	0	1	1

= Unimplemented or Reserved

¹ $\overline{\text{RSTCFG}}$ function is only applicable during reset. The PA bit must be set to 0 for GPIO operation

²When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. When configured as GPI, the IBE bit should be set to 1.

Figure 6-114. $\overline{\text{RSTCFG_GPIO}}[210]$ Pad Configuration Register (SIU_PCR210)

6.3.1.117 Pad Configuration Register 211 - 212 (SIU_PCR211 - SIU_PCR212)

The SIU_PCR211 - SIU_PCR212 registers control the pin function, direction, and static electrical attributes of the $\text{BOOTCFG}[0:1]_{\overline{\text{IRQ}}}[2:3]_{\text{GPIO}}[211:212]$ pins.

SIU_BASE+0x1E6 - SIU_BASE+0x1E8 (2)

R	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS ⁴	SRC	WPE	WPS	
W															
RESET:	0	0	0	0	1	1	0	0	0	0	1	0	0	1	0

= Unimplemented or Reserved

¹The BOOTCFG function applies only during reset when the $\overline{\text{RSTCFG}}$ pin is asserted during reset. The PA field should be set to 0b10 for $\overline{\text{IRQ}}[2:3]$ and set to 0b00 for $\text{GPIO}[211:212]$.

²When configured as IRQ, the OBE bit has no effect. When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. Setting the IBE bit to 0 reduces power consumption. When configured as GPI, the IBE bit should be set to 1.

⁴When configured as IRQ, the HYS bit should be set to 1.

Figure 6-115. $\text{BOOTCFG}[0:1]_{\overline{\text{IRQ}}}[2:3]_{\text{GPIO}}[211:212]$ Pad Configuration Register (SIU_PCR211 - SIU_PCR212)

6.3.1.118 Pad Configuration Register 213 (SIU_PCR213)

The SIU_PCR213 register controls the pin function, direction, and static electrical attributes of the $\text{WKPCFG_GPIO}[213]$ pin.

SIU_BASE+0x1EA

R	0	0	0	0	0	PA ¹	OBE ²	IBE ³	0	0	ODE	HYS	SRC	WPE	WPS	
W																
RESET:	0	0	0	0	0	1	0	0	0	0	0	1	0	0	1	1

= Unimplemented or Reserved

¹WKPCFG function is only applicable during reset. The PA bit must be set to 0 for GPIO operation

²When configured as GPO, the OBE bit should be set to 1.

³When the pad is configured as an output, setting the IBE bit to 1 allows the pin state to be reflected in the corresponding GPDI register. When configured as GPI, the IBE bit should be set to 1.

Figure 6-116. WKPCFG_GPIO[213] Pad Configuration Register (SIU_PCR213)

6.3.1.119 Pad Configuration Register 214 (SIU_PCR214)

The SIU_PCR214 register controls the enabling/disabling and drive strength of the ENGCLK pin. The ENGCLK pin is enabled and disabled by setting and clearing the OBE bit. The ENGCLK pin is enabled during reset.

SIU_BASE+0x1EC

R	0	0	0	0	0	0	OBE	0	DSC	0	0	0	0	0	0
W															
RESET:	0	0	0	0	0	0	1	0	1	1	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-117. ENGLCK Pad Configuration Register (SIU_PCR214)

6.3.1.120 Pad Configuration Register 215 (SIU_PCR215)

The SIU_PCR215 register controls the pin function, direction, and static electrical attributes of the AN[12]_MA[0]_SDS pin.

SIU_BASE+0x1EE

R	0	0	0	0	PA ^{1, 2}	0	0	0	0	ODE	0	SRC	0	0
W														
RESET:	0	0	0	0	1	1	0	0	0	0	0	0	0	0

= Unimplemented or Reserved

¹ Input and output buffers are enabled/disabled based on PA selection. Both input and output buffer disabled for AN[12] function. Output buffer only enabled for MA[0] and SDS functions.

² To select the SDS function, set the PA field to 0.

Figure 6-118. AN[12]_MA[0]_SDS Pad Configuration Register (SIU_PCR215)

PA — Pin Assignment

The PA field for PCR215 is given in [Table 6-17](#).

Table 6-17. PCR215 PA Field Definition

PA Field	Pin Function
0b00	SDS
0b01	Reserved
0b10	MA[0]
0b11	AN[12]

6.3.1.121 Pad Configuration Register 216 (SIU_PCR216)

The SIU_PCR216 register controls the pin function, direction, and static electrical attributes of the AN[13]_MA[1]_SDO pin.

SIU_BASE+0x1F0

R	0	0	0	0	PA ^{1, 2}	0	0	0	0	ODE	0	SRC	0	0
W														
RESET:	0	0	0	0	1	1	0	0	0	0	0	0	0	0

 = Unimplemented or Reserved

¹ Input and output buffers are enabled/disabled based on PA selection. Both input and output buffer disabled for AN[13] function. Output buffer only enabled for MA[1] and SDO functions.

² To select the SDO function, set the PA field to 0.

Figure 6-119. AN[13]_MA[1]_SDO Pad Configuration Register (SIU_PCR216)

PA — Pin Assignment

The PA field for PCR216 is given in [Table 6-18](#).

Table 6-18. PCR216 PA Field Definition

PA Field	Pin Function
0b00	SDO
0b01	Reserved
0b10	MA[1]
0b11	AN[13]

6.3.1.122 Pad Configuration Register 217 (SIU_PCR217)

The SIU_PCR217 register controls the pin function, direction, and static electrical attributes of the AN[14]_MA[2]_SDI pin.

SIU_BASE+0x1F2

R	0	0	0	0	PA ^{1, 2}	0	0	0	0	ODE	HYS	SRC	WPE ³	WPS ⁴	
W															
RESET:	0	0	0	0	1	1	0	0	0	0	0	0	0	0	0

= Unimplemented or Reserved

- ¹ Input and output buffers are enabled/disabled based on PA selection. Both input and output buffer disabled for AN[14] function. Output buffer only enabled for MA[2] function and input buffer only enabled for SDI functions.
- ² To select the SDI function, set the PA field to 0.
- ³ The WPE bit should be set to 0 when configured as an analog input or MA[2], and set to 1 when configured as SDI.
- ⁴ The WPS bit should be set to 1 when configured as SDI.

Figure 6-120. AN[14]_MA[2]_SDI Pad Configuration Register (SIU_PCR217)

PA — Pin Assignment

The PA field for PCR217 is given in [Table 6-19](#).

Table 6-19. PCR217 PA Field Definition

PA Field	Pin Function
0b00	SDI
0b01	Reserved
0b10	MA[2]
0b11	AN[14]

6.3.1.123 Pad Configuration Register 218 (SIU_PCR218)

The SIU_PCR218 register controls the pin function, direction, and static electrical attributes of the AN[15]_FCK pin.

SIU_BASE+0x1F4

R	0	0	0	0	0	PA ^{1, 2}	0	0	0	0	ODE	0	SRC	0	0
W															
RESET:	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0

= Unimplemented or Reserved

- ¹ Input and output buffers are enabled/disabled based on PA selection. Both input and output buffer disabled for AN[15] function. Output buffer only enabled for FCK function.
- ² To select the FCK function, set the PA field to 0.

Figure 6-121. AN[15]_FCK Pad Configuration Register (SIU_PCR218)

The PA field for PCR218 is given in [Table 6-20](#).

Table 6-20. PCR218 PA Field Definition

PA Field	Pin Function
0b0	FCK
0b1	AN[15]

6.3.1.124 Pad Configuration Register 219 (SIU_PCR219)

The SIU_PCR219 register controls the drive strength of the MCKO pin.

SIU_BASE+0x1F6

R	0	0	0	0	0	0	0	0	DSC	0	0	0	0	0	0	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-122. MCKO Pad Configuration Register (SIU_PCR219)

6.3.1.125 Pad Configuration Register 223 - 220 (SIU_PCR223 - SIU_PCR220)

The SIU_PCR223 - SIU_PCR220 registers control the drive strength of the MDO[3:0] pins.

SIU_BASE+0x1F8 -SIU_BASE+0x1FE(4)

R	0	0	0	0	0	0	0	0	DSC	0	0	0	0	0	0	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-123. MDO[3:0] Pad Configuration Register (SIU_PCR223 - SIU_PCR220)

6.3.1.126 Pad Configuration Register 225 - 224 (SIU_PCR225 - SIU_PCR224)

The SIU_PCR225 - SIU_PCR224 registers control the drive strength of the $\overline{\text{MSEO}}[1:0]$ pins.

SIU_BASE+0x200 -SIU_BASE+0x202 (2)

R	0	0	0	0	0	0	0	0	DSC	0	0	0	0	0	0	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-124. $\overline{\text{MSEO}}[1:0]$ Pad Configuration Register (SIU_PCR225 - SIU_PCR224)

6.3.1.127 Pad Configuration Register 226 (SIU_PCR226)

The SIU_PCR226 register controls the drive strength of the $\overline{\text{RDY}}$ pin.

SIU_BASE+0x204

R	0	0	0	0	0	0	0		DSC	0	0	0	0	0	0	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-125. RDY Pad Configuration Register (SIU_PCR226)

6.3.1.128 Pad Configuration Register 227 (SIU_PCR227)

The SIU_PCR227 register controls the drive strength of the $\overline{\text{EVTO}}$ pin.

SIU_BASE+0x206

R	0	0	0	0	0	0	0		DSC	0	0	0	0	0	0	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-126. EVTO Pad Configuration Register (SIU_PCR227)

6.3.1.129 Pad Configuration Register 228 (SIU_PCR228)

The SIU_PCR228 register controls the drive strength of the TDO pin.

SIU_BASE+0x208

R	0	0	0	0	0	0	0		DSC	0	0	0	0	0	0	
W																
RESET:	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-127. TDO Pad Configuration Register (SIU_PCR228)

6.3.1.130 Pad Configuration Register 229 (SIU_PCR229)

The SIU_PCR229 register controls the enabling/disabling and drive strength of the CLKOUT pin. The CLKOUT pin is enabled and disabled by setting and clearing the OBE bit. The CLKOUT pin is enabled during reset.

SIU_BASE+0x20A

R	0	0	0	0	0	0		OBE	0	DSC	0	0	0	0	0	0	
W																	
RESET:	0	0	0	0	0	0	0	1	0	1	1	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-128. CLKOUT Pad Configuration Register (SIU_PCR229)

6.3.1.131 Pad Configuration Register 230 (SIU_PCR230)

The SIU_PCR230 register controls the slew rate of the $\overline{\text{RSTOUT}}$ pin.

SIU_BASE+0x20C

R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	SRC		0	0
W	[Unimplemented or Reserved]														1	1	0	0	
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0

[Unimplemented or Reserved] = Unimplemented or Reserved

Figure 6-129. $\overline{\text{RSTOUT}}$ Pad Configuration Register (SIU_PCR230)

6.3.1.132 Pad Configuration Register 231 - 255 (SIU_PCR231 - SIU_PCR255)

The SIU_PCR231- SIU_PCR255 registers are unimplemented in the device.

6.3.1.133 Pad Configuration Register 256 (SIU_PCR256)

The SIU_PCR256 register controls the pin function, direction, and static electrical attributes of the CAL_CS[0] pin.

SIU_BASE+0x240

R	0	0	0	0	0	PA	0	0	DSC	0	0	0	0	0	0
W	[Unimplemented or Reserved]					0	0	[Unimplemented or Reserved]		[Unimplemented or Reserved]					
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

[Unimplemented or Reserved] = Unimplemented or Reserved

Figure 6-130. CAL_CS[0] Pad Configuration Register (SIU_PCR256)

Table 6-21. PCR256 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_CS[0]

6.3.1.134 Pad Configuration Register 257-8 (SIU_PCR257 - SIU_PCR258)

The SIU_PCR257-8 register controls the pin function, direction, and static electrical attributes of the CAL_CS[2:3]_CAL_ADDR[10:11] pins.

SIU_BASE+0x242 - SIU_BASE+244 (2)

R	0	0	0	0	PA	0	0	DSC	0	0	0	0	0	0	
W	[Unimplemented or Reserved]					0	0	[Unimplemented or Reserved]		[Unimplemented or Reserved]					
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

[Unimplemented or Reserved] = Unimplemented or Reserved

Figure 6-131. CAL_CS[2:3]_CAL_ADDR[10:11] Pad Configuration Registers (SIU_PCR257-8)

Table 6-22. PCR257-8 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_CS[2:3]
0b11	CAL_CS[2:3]
0b10	CAL_ADDR[10:11]

6.3.1.135 Pad Configuration Register 259 (SIU_PCR259)

The SIU_PCR259 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[12]_FEC_TX_CLK pins.

SIU_BASE+0x246

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-132. CAL_ADDR[12]_FEC_TX_CLK Pad Configuration Registers (SIU_PCR259)
Table 6-23. PCR257-8 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[12]
0b11	CAL_ADDR[12]
0b10	FEC_TX_CLK

6.3.1.136 Pad Configuration Register 260 (SIU_PCR260)

The SIU_PCR260 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[13]_FEC_CRS pins.

SIU_BASE+0x248

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-133. CAL_ADDR[13]_FEC_CRS Pad Configuration Registers (SIU_PCR260)

Table 6-24. PCR260 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[13]
0b11	CAL_ADDR[13]
0b10	FEC_CRS

6.3.1.137 Pad Configuration Register 261 (SIU_PCR261)

The SIU_PCR261 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[14]_FEC_TX_ER pins.

SIU_BASE+0x24A

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

 = Unimplemented or Reserved

Figure 6-134. CAL_ADDR[14]_FEC_TX_ER Pad Configuration Registers (SIU_PCR261)
Table 6-25. PCR261 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[14]
0b11	CAL_ADDR[14]
0b10	FEC_TX_ER

6.3.1.138 Pad Configuration Register 262 (SIU_PCR262)

The SIU_PCR262 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[15]_FEC_RX_CLK pins.

SIU_BASE+0x24C

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

 = Unimplemented or Reserved

Figure 6-135. CAL_ADDR[15]_FEC_RX_CLK Pad Configuration Registers (SIU_PCR262)

Table 6-26. PCR262 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[15]
0b11	CAL_ADDR[15]
0b10	FEC_RX_CLK

6.3.1.139 Pad Configuration Register 263 (SIU_PCR263)

The SIU_PCR263 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[16]_FEC_TXD[0] pins.

SIU_BASE+0x24E

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-136. CAL_ADDR[16]_FEC_TXD[0] Pad Configuration Registers (SIU_PCR263)

Table 6-27. PCR263 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[16]
0b11	CAL_ADDR[16]
0b10	FEC_TXD[0]

6.3.1.140 Pad Configuration Register 264 (SIU_PCR264)

The SIU_PCR264 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[17]_FEC_RX_ER pins.

SIU_BASE+0x250

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-137. CAL_ADDR[17]_FEC_RX_ER Pad Configuration Registers (SIU_PCR264)

Table 6-28. PCR264 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[17]
0b11	CAL_ADDR[17]
0b10	FEC_RX_ER

6.3.1.141 Pad Configuration Register 265 (SIU_PCR265)

The SIU_PCR265 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[18]_FEC_RXD[0] pins.

SIU_BASE+0x252

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-138. CAL_ADDR[18]_FEC_RXD[0] Pad Configuration Registers (SIU_PCR265)
Table 6-29. PCR265 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[18]
0b11	CAL_ADDR[18]
0b10	FEC_RXD[0]

6.3.1.142 Pad Configuration Register 266 (SIU_PCR266)

The SIU_PCR266 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[19]_FEC_TXD[3] pins.

SIU_BASE+0x254

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-139. CAL_ADDR[19]_FEC_TXD[3] Pad Configuration Registers (SIU_PCR266)


Table 6-30. PCR266 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[19]
0b11	CAL_ADDR[19]
0b10	FEC_TXD[3]

6.3.1.143 Pad Configuration Register 267 (SIU_PCR267)

The SIU_PCR267 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[20]_FEC_COL pins.

SIU_BASE+0x256



= Unimplemented or Reserved

Figure 6-140. CAL_ADDR[20]_FEC_COL Pad Configuration Registers (SIU_PCR267)


Table 6-31. PCR267 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[20]
0b11	CAL_ADDR[20]
0b10	FEC_COL

6.3.1.144 Pad Configuration Register 268 (SIU_PCR268)

The SIU_PCR268 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[21]_FEC_RX_DV pins.

SIU_BASE+0x258



= Unimplemented or Reserved

Figure 6-141. CAL_ADDR[21]_FEC_RX_DV Pad Configuration Registers (SIU_PCR268)

Table 6-32. PCR268 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[21]
0b11	CAL_ADDR[21]
0b10	FEC_RX_DV

6.3.1.145 Pad Configuration Register 269 (SIU_PCR269)

The SIU_PCR269 register controls the pin function, direction, and static electrical attributes of the CAL_ADDR[22]_FEC_TX_EN pins.

SIU_BASE+0x25A

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-142. CAL_ADDR[22]_FEC_TX_EN Pad Configuration Registers (SIU_PCR269)
Table 6-33. PCR269 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[22]
0b11	CAL_ADDR[22]
0b10	FEC_TX_EN

6.3.1.146 Pad Configuration Register 270-271 (SIU_PCR270-271)

The SIU_PCR270 -271 registers controls the pin function, direction, and static electrical attributes of the CAL_ADDR[23:24]_FEC_TXD[2:1] pins.

SIU_BASE+0x25C - SIU_BASE+0x25E

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-143. CAL_ADDR[23:24]_FEC_TXD[2:1] Pad Configuration Registers (SIU_PCR270-271)

Table 6-34. PCR270-271 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[23:24]
0b11	CAL_ADDR[23:24]
0b10	FEC_TXD[2:1]

6.3.1.147 Pad Configuration Register 272-274 (SIU_PCR272-274)

The SIU_PCR272-274 registers controls the pin function, direction, and static electrical attributes of the CAL_ADDR[25:27]_FEC_RXD[1:3] pins.

SIU_BASE+0x260 - SIU_BASE+0x264

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-144. CAL_ADDR[25:27]_FEC_RXD[1:3] Pad Configuration Registers (SIU_PCR272-274)

Table 6-35. PCR272-274 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[25:27]
0b11	CAL_ADDR[25:27]
0b10	FEC_RXD[1:3]

6.3.1.148 Pad Configuration Register 275 (SIU_PCR275)

The SIU_PCR275 registers controls the pin function, direction, and static electrical attributes of the CAL_ADDR[28]_FEC_MDC pins.

SIU_BASE+0x266

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

= Unimplemented or Reserved

Figure 6-145. CAL_ADDR[28]_FEC_MDC Pad Configuration Registers (SIU_PCR275)

Table 6-36. PCR275 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b01	CAL_ADDR[28]
0b11	CAL_ADDR[28]
0b10	FEC_MDC

6.3.1.149 Pad Configuration Register 276 (SIU_PCR276)

The SIU_PCR276 registers controls the pin function, direction, and static electrical attributes of the CAL_ADDR[29]_FEC_MDIO pins.

SIU_BASE+0x268

R	0	0	0	0	PA	OBE	IBE	DSC	ODE	HYS	0	0	WPE	WPS
W														
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	1	1

 = Unimplemented or Reserved

Figure 6-146. CAL_ADDR[29]_FEC_MDIO Pad Configuration Registers (SIU_PCR276)
Table 6-37. PCR276 PA Field Definition

PA Field	Pin Function
0b00	Reserved
0b01	CAL_ADDR[29]
0b11	CAL_ADDR[29]
0b10	FEC_MDIO

6.3.1.150 Pad Configuration Register 277 (SIU_PCR277)

The SIU_PCR277 registers controls the pin function, direction, and static electrical attributes of the CAL_ADDR[30] pins.

SIU_BASE+0x26A

R	0	0	0	0	0	PA	0	0	DSC	0	0	0	0	0	0
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0


 = Unimplemented or Reserved


Figure 6-147. CAL_ADDR[30] Pad Configuration Registers (SIU_PCR277)
Table 6-38. PCR277 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_ADDR[30]

6.3.1.151 Pad Configuration Register 278-293 (SIU_PCR278-293)

The SIU_PCR278-293 registers controls the pin function, direction, and static electrical attributes of the CAL_DATA[0:15] pins.

SIU_BASE+0x26C - SIU_BASE+0x28A



= Unimplemented or Reserved

Figure 6-148. CAL_DATA[0:15] Pad Configuration Registers (SIU_PCR278-293)


Table 6-39. PCR278-293 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_DATA[0:15]

6.3.1.152 Pad Configuration Register 294 (SIU_PCR294)

The SIU_PCR294 register controls the pin function, direction, and static electrical attributes of the CAL_RD_WR pins.

SIU_BASE+0x28C



= Unimplemented or Reserved

Figure 6-149. CAL_RD_WR Pad Configuration Registers (SIU_PCR294)

Table 6-40. PCR294 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_RD_WR

6.3.1.153 Pad Configuration Register 295-296 (SIU_PCR295-296)

The SIU_PCR295-296 register controls the pin function, direction, and static electrical attributes of the CAL_WE/BE[0:1] pins.

SIU_BASE+0x28E - SIU_BASE+0x290

R	0	0	0	0	0	PA	0	0	DSC	0	0	0	0	0	0
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-150. CAL_WE/BE[0:1] Pad Configuration Registers (SIU_PCR295-296)
Table 6-41. PCR295-296 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_WE/BE[0:1]

6.3.1.154 Pad Configuration Register 297 (SIU_PCR297)

The SIU_PCR297 register controls the pin function, direction, and static electrical attributes of the CAL_OE pin.

SIU_BASE+0x292

R	0	0	0	0	0	PA	0	0	DSC	0	0	0	0	0	0
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-151. CAL_OE Pad Configuration Registers (SIU_PCR297)
Table 6-42. PCR297 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_OE

6.3.1.155 Pad Configuration Register 298 (SIU_PCR298)

The SIU_PCR298 register controls the pin function, direction, and static electrical attributes of the CAL_TS pin.

SIU_BASE+0x294

R	0	0	0	0	0	PA	0	0	DSC	0	0	0	0	0	0
W															
RESET:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

= Unimplemented or Reserved

Figure 6-152. CAL_TS Pad Configuration Registers (SIU_PCR298)

Table 6-43. PCR298 PA Field Definition

PA Field	Pin Function
0b0	Reserved
0b1	CAL_TS

6.3.1.156 GPIO Pin Data Output Registers 0–213 (SIU_GPDO n)

The definition of the 8-bit SIU_GPDO n registers, with each register specifying the drive data for a single GPIO pin, is given in Figure 6-153. The n notation in the name of the 178 SIU_GPDO n registers corresponds to the pins with the same GPIO pin numbers. For example, PDO0 is the pin data output bit for the $\overline{CS}[0]$ _GPIO[0] pin and is found in SIU_GPDO0, and PDO213 is the pin data output bit for the WKPCFG_GPIO[213] pin and is found in SIU_GPDO213. The GPDO address for a particular pin is equal to the GPIO pin number with an offset of SIU_BASE + 0x600.

The SIU_GPDO n registers are written to by software to drive data out on the external GPIO pin. Each register drives a single external GPIO pin, which allows the state of the pin to be controlled independently from other GPIO pins. Writes to the SIU_GPDO n registers have no effect on pin states if the pins are configured as inputs by the associated Pad Configuration Registers. The SIU_GPDO n register values are automatically driven to the GPIO pins without software update if the direction of the GPIO pins is changed from input to output.

Writes to the SIU_GPDO n registers have no effect on the state of the corresponding pins when the pins are configured for their primary function by the corresponding PCR.

	0	1	2	3	4	5	6	7
R	0	0	0	0	0	0	0	0
W								PDO n
Reset	0	0	0	0	0	0	0	0
Reg Addr	SIU_BASE + 0x600 + n							

Figure 6-153. GPIO Pin Data Output Register 0–213 (SIU_GPDO n)
Table 6-44. SIU_GPDO n Field Descriptions

Name	Description
PDO n	Pin data out. Stores the data to be driven out on the external GPIO pin associated with the register. If the register is read, it will return the value written. 0 V_{OL} is driven on the external GPIO pin when the pin is configured as an output. 1 V_{OH} is driven on the external GPIO pin when the pin is configured as an output.

6.3.1.157 GPIO Pin Data Input Registers 0–213 (SIU_GPDI n)

The definition of the 8-bit SIU_GPDI n registers, with each register specifying the drive data for a single GPIO pin, is given in Figure 6-154. The n notation in the name of the 178 SIU_GPDI n registers

corresponds to the pins with the same GPIO pin numbers. For example, PDI0 is the pin data input bit for the $\overline{CS}[0]_{\text{GPIO}}[0]$ pin and is found in SIU_GPDI0, and PDI213 is the pin data input bit for the WKPCFG_GPIO[213] pin and is found in SIU_GPDI213. The GPDI address for a particular pin is equal to the GPIO pin number with an offset of SIU_BASE + 0x800. Gaps exist in this memory space where the pin is not available in the package.

The SIU_GPDI n registers are read-only registers that allow software to read the input state of an external GPIO pin. Each register represents the input state of a single external GPIO pin. If the GPIO pin is configured as an output, and the input buffer enable (IBE) bit is set in the associated pad configuration register, the SIU_GPDI n register reflects the actual state of the output pin.

	0	1	2	3	4	5	6	7
R	0	0	0	0	0	0	0	PDI n
W								
Reset	0	0	0	0	0	0	0	0
Reg Addr	SIU_BASE + 0x800 + n							

Figure 6-154. GPIO Pin Data Input Register 0–213 (SIU_GPDI n)

Table 6-45. SIU_GPDI n Field Description

Name	Description
PDI n	Pin data in. This bit reflects the input state on the external GPIO pin associated with the register. If PCR n [IBE] = 1, then: 0 Signal on pin is less than or equal to V _{IL} . 1 Signal on pin is greater than or equal to V _{IH} .

6.3.1.158 eQADC Trigger Input Select Register (SIU_ETISR)

The SIU_ETISR selects the source for the eQADC trigger inputs. The eQADC trigger numbers 0-5 specified by TSEL(0-5) correspond to CFIFO numbers 0-5. To calculate the CFIFO number that each trigger is connected to, divide the DMA channel number by 2. So, for example, eQADC CFIFO 1 (connected to DMA channel 2) can be triggered by eTPUA[31] or eMIOS[11] or ETRIG[1]. To select a trigger, the corresponding TSEL must be initialized.

When an eQADC trigger is connected, the timer output is connected to the eQADC CFIFO trigger input. To trigger the eQADC, output must change to the state that the eQADC recognizes as a trigger. Bear in mind there are rising or falling edges, and low or high gated trigger types, so it might be possible to have the eQADC trigger immediately if desired.

Table 6-46. Trigger Interconnections

TSEL Field (Trigger Number)	eQADC CFIFO	eQADC DMA Channel	eTPUA Channel	eMIOS Channel	ETRIG Input	GPIO[206] / GPIO[207]
0	0	0	eTPUA[30]	eMIOS[10]	ETRIG[0]	GPIO[206]
1	1	2	eTPUA[31]	eMIOS[11]	ETRIG[1]	GPIO[207]

Table 6-46. Trigger Interconnections (continued)

TSEL Field (Trigger Number)	eQADC CFIFO	eQADC DMA Channel	eTPUA Channel	eMIOS Channel	ETRIG Input	GPIO[206] / GPIO[207]
2	2	4	eTPUA[29]	eMIOS[15]	ETRIG[0]	GPIO[206]
3	3	6	eTPUA[28]	eMIOS[14]	ETRIG[1]	GPIO[207]
4	4	8	eTPUA[27]	eMIOS[13]	ETRIG[0]	GPIO[206]
5	5	10	eTPUA[26]	eMIOS[12]	ETRIG[1]	GPIO[207]

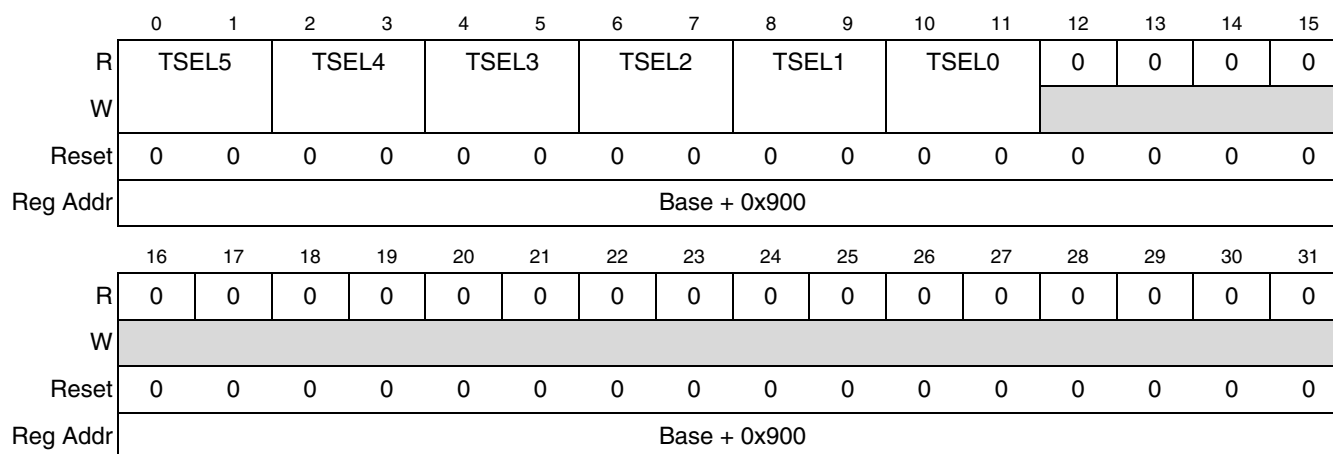


Figure 6-155. eQADC Trigger Input Select Register (SIU_ETISR)

Table 6-47. SIU_ETISR Field Descriptions

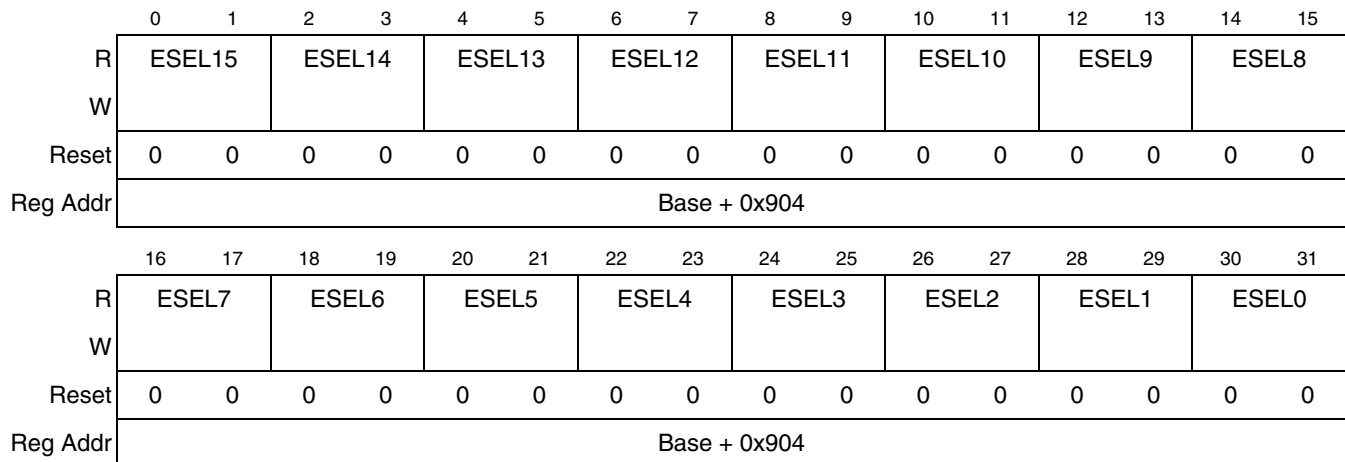
Bits	Name	Description
0–1	TSEL5 [0:1]	eQADC trigger input select 5. Specifies the input for eQADC trigger 5. 00 GPIO[207] 01 ETPUA[26] channel 10 EMIOS[12] channel 11 ETRIG[1] pin
2–3	TSEL4 [0:1]	eQADC trigger input select 4. Specifies the input for eQADC trigger 4. 00 GPIO[206] 01 ETPUA[27] channel 10 EMIOS[13] channel 11 ETRIG[0] pin
4–5	TSEL3 [0:1]	eQADC trigger input select 3. Specifies the input for eQADC trigger 3. 00 GPIO[207] 01 10 EMIOS[14] channel 11 ETRIG[1] pin
6–7	TSEL2 [0:1]	eQADC trigger input select 2. Specifies the input for eQADC trigger 2 00 GPIO[206] 01 ETPUA[29] channel 10 EMIOS[15] channel 11 ETRIG[0] pin

Table 6-47. SIU_ETISR Field Descriptions (continued)

Bits	Name	Description
8–9	TSEL1 [0:1]	eQADC trigger input select 1. Specifies the input for eQADC trigger 1 00 GPIO[207] 01 ETPUA[31] channel 10 EMIOS[11] channel 11 ETRIG[1] pin
10–11	TSEL0 [0:1]	eQADC trigger input select 0. Specifies the input for eQADC trigger 0 00 GPIO[206] 01 ETPUA[30] channel 10 EMIOS[10] channel 11 ETRIG[0] pin
12–31	—	Reserved.

6.3.1.159 External $\overline{\text{IRQ}}$ Input Select Register (SIU_EISR)

The SIU_EISR selects the source for the external interrupt/DMA inputs.


Figure 6-156. External $\overline{\text{IRQ}}$ Input Select Register 1 (SIU_EISR)
Table 6-48. SIU_EISR Field Descriptions

Bits	Name	Description
0–1	ESEL15 [0:1]	External $\overline{\text{IRQ}}$ input select 15. Specifies the input for $\overline{\text{IRQ}}$ [15]. 00 $\overline{\text{IRQ}}$ [15] pin 01 DSP1_B[15] serialized input (EMIOS[12] pin) 10 DSP1_C[0] serialized input (ETPUA[12] pin) 11
2–3	ESEL14 [0:1]	External $\overline{\text{IRQ}}$ input select 14. Specifies the input for $\overline{\text{IRQ}}$ [14]. 00 $\overline{\text{IRQ}}$ [14] pin 01 DSP1_B[14] serialized input (EMIOS[13] pin) 10 DSP1_C[15] serialized input (ETPUA[11] pin) 11 DSP1_D[0] serialized input (ETPUA[21] pin)

Table 6-48. SIU_EIISR Field Descriptions (continued)

Bits	Name	Description
4–5	ESEL13 [0:1]	External IRQ input select 13. Specifies the input for $\overline{\text{IRQ}}[13]$. 00 $\overline{\text{IRQ}}[13]$ pin 01 DSPI_B[13] serialized input (ETPUA[24] pin) 10 DSPI_C[14] serialized input (ETPUA[10] pin) 11 DSPI_D[15] serialized input (ETPUA[24] pin)
6–7	ESEL12 [0:1]	External IRQ input select 12. Specifies the input for $\overline{\text{IRQ}}[12]$. 00 $\overline{\text{IRQ}}[12]$ pin 01 DSPI_B[12] serialized input (ETPUA[25] pin) 10 DSPI_C[13] serialized input (ETPUA[9] pin) 11 DSPI_D[14] serialized input (ETPUA[25] pin)
8–9	ESEL11 [0:1]	External IRQ input select 11. Specifies the input for $\overline{\text{IRQ}}[11]$. 00 $\overline{\text{IRQ}}[11]$ pin 01 DSPI_B[11] serialized input (ETPUA[26] pin) 10 DSPI_C[12] serialized input (ETPUA[8] pin) 11 DSPI_D[13] serialized input (ETPUA[26] pin)
10–11	ESEL10 [0:1]	External IRQ input select 10. Specifies the input for $\overline{\text{IRQ}}[10]$. 00 $\overline{\text{IRQ}}[10]$ pin 01 DSPI_B[10] serialized input (ETPUA[27] pin) 10 DSPI_C[11] serialized input (ETPUA[7] pin) 11 DSPI_D[12] serialized input (ETPUA[27] pin)
12–13	ESEL9 [0:1]	External IRQ input select 9. Specifies the input for $\overline{\text{IRQ}}[9]$. 00 $\overline{\text{IRQ}}[9]$ pin 01 DSPI_B[9] serialized input (ETPUA[28] pin) 10 DSPI_C[10] serialized input (ETPUA[6] pin) 11 DSPI_D[11] serialized input (ETPUA[28] pin)
14–15	ESEL8 [0:1]	External IRQ input select 8. Specifies the input for $\overline{\text{IRQ}}[8]$. 00 $\overline{\text{IRQ}}[8]$ pin 01 DSPI_B[8] serialized input (ETPUA[29] pin) 10 DSPI_C[9] serialized input (ETPUA[5] pin) 11 DSPI_D[10] serialized input (ETPUA[29] pin)
16–17	ESEL7 [0:1]	External IRQ input select 7. Specifies the input for $\overline{\text{IRQ}}[7]$. 00 $\overline{\text{IRQ}}[7]$ pin 01 DSPI_B[7] serialized input (ETPUA[16] pin) 10 DSPI_C[8] serialized input (ETPUA[4] pin) 11 DSPI_D[9] serialized input (EMIOS[12] pin)
18–19	ESEL6 [0:1]	External IRQ input select 6. Specifies the input for $\overline{\text{IRQ}}[6]$. 00 Reserved 01 DSPI_B[6] serialized input (ETPUA[17] pin) 10 DSPI_C[7] serialized input (ETPUA[3] pin) 11 DSPI_D[8] serialized input (EMIOS[13] pin)
20–21	ESEL5 [0:1]	External IRQ input select 5. Specifies the input for $\overline{\text{IRQ}}[5]$. 00 $\overline{\text{IRQ}}[5]$ pin 01 DSPI_B[5] serialized input (ETPUA[18] pin) 10 DSPI_C[6] serialized input (ETPUA[2] pin) 11

Table 6-48. SIU_EISR Field Descriptions (continued)

Bits	Name	Description
22–23	ESEL4 [0:1]	External IRQ input select 4. Specifies the input for $\overline{\text{IRQ}}[4]$. 00 $\overline{\text{IRQ}}[4]$ pin 01 DSP1_B[4] serialized input (ETPUA[19] pin) 10 DSP1_C[5] serialized input (ETPUA[1] pin) 11 DSP1_D[6] serialized input (EMIOS[11] pin)
24–25	ESEL3 [0:1]	External IRQ input select 3. Specifies the input for $\overline{\text{IRQ}}[3]$. 00 $\overline{\text{IRQ}}[3]$ pin 01 DSP1_B[3] serialized input (ETPUA[20] pin) 10 DSP1_C[4] serialized input (ETPUA[0] pin) 11 DSP1_D[5] serialized input (ETPUA[16] pin)
26–27	ESEL2 [0:1]	External IRQ input select 2. Specifies the input for $\overline{\text{IRQ}}[2]$. 00 $\overline{\text{IRQ}}[2]$ pin 01 DSP1_B[2] serialized input (ETPUA[21] pin) 10 DSP1_C[3] serialized input (ETPUA[15] pin) 11 DSP1_D[4] serialized input (ETPUA[17] pin)
28–29	ESEL1 [0:1]	External IRQ input select 1. Specifies the input for $\overline{\text{IRQ}}[1]$. 00 $\overline{\text{IRQ}}[1]$ pin 01 DSP1_B[1] serialized input (EMIOS[10] pin) 10 DSP1_C[2] serialized input (ETPUA[14] pin) 11 EMIOS[15] pin
30–31	ESEL0 [0:1]	External IRQ input select 0. Specifies the input for $\overline{\text{IRQ}}[0]$. 00 $\overline{\text{IRQ}}[0]$ pin 01 DSP1_B[0] serialized input (EMIOS[11] pin) 10 DSP1_C[1] serialized input (ETPUA[5] pin) 11 EMIOS[14] pin

6.3.1.160 DSPI Input Select Register (SIU_DISR)

Within the MPC55xx family of devices, the SIU_DISR specifies the source of each DSPI data input, slave select, clock input, and trigger input to allow serial and parallel chaining of the DSPI modules.

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	SINSELB		SSSELB		SCKSELB		TRIGSELB	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x908															
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	SINSELC		SSSELC		SCKSELC		TRIGSELC		SINSELD		SSSELD		SCKSELD		TRIGSELD	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x908															

Figure 6-157. DSPI Input Select Register (SIU_DISR)

Table 6-49. SIU_DISR Field Descriptions

Bits	Name	Description
0–7	Reserved	
8–9	SINSELB [0:1]	DSPI_B data input select. Specifies the source of DSPI_B data input. 00 SINB_PCSC[2]_GPIO[103] pin 01 Reserved 10 SOUTC 11 SOUTD
10–11	SSSELB [0:1]	DSPI_B slave select input select. Specifies the source of the DSPI_B slave select input. 00 PCSB[0]_PCSD[2]_GPIO[105] pin 01 Reserved 10 PCSC[0] (Master) 11 PCSD[0] (Master)
12–13	SCKSELB [0:1]	DSPI_B clock input select. Specifies the source of the DSPI_B clock input. 00 SCKB_PCSC[1]_GPIO[102] pin 01 Reserved 10 SCKC (Master) 11 SCKD (Master)
14–15	TRIGSELB [0:1]	DSPI_B trigger input select. Specifies the source of the DSPI_B trigger input for master or slave mode. 00 Reserved 01 Reserved 10 11 PCSD[4]
16–17	SINSELC [0:1]	DSPI_C data input select. Specifies the source of the DSPI_C data input. 00 PCSA[2]_SINC_GPIO[108] pin 01 Reserved 10 SOUTB 11 SOUTD
18–19	SSSELC [0:1]	DSPI_C slave select input select. Specifies the source of the DSPI_C slave select input. 00 PCSB[5]_PCSC[0]_GPIO[110] pin 01 Reserved 10 PCSB[0] (Master) 11 PCSD[0] (Master)
20–21	SCKSELC [0:1]	DSPI_C clock input select. Specifies the source of the DSPI_C clock input when in slave mode. 00 PCSB[4]_SCKC_GPIO[109] pin 01 Reserved 10 11 SCKD (Master)
22–23	TRIGSELC [0:1]	DSPI_C trigger input select. Specifies the source of the DSPI_C trigger input for master or slave mode. 00 Reserved 01 Reserved 10 PCSB[4] 11 PCSD[4]

Table 6-49. SIU_DISR Field Descriptions (continued)

Bits	Name	Description
24–25	SINSELD [0:1]	DSPI_D data input select. Specifies the source of the DSPI_D data input. 00 PCSA[3]_SIND_GPIO[99] pin 01 Reserved 10 SOUTB 11 SOUTC
26–27	SSSELD [0:1]	DSPI_D slave select input select. Specifies the source of the DSPI_D slave select input. 00 PCSB[1]_PCSD[0]_GPIO[106] pin 01 Reserved 10 PCSB[0] (Master) 11 PCSC[0] (Master)
28–29	SCKSELD [0:1]	DSPI_D clock input select. Specifies the source of the DSPI_D clock input in slave mode. 00 PCSA[2]_SCKD_GPIO[98] pin 01 Reserved 10 SCKB (Master) 11 SCKC (Master)
30–31	TRIGSELD [0:1]	DSPI_D trigger input select. Specifies the source of the DSPI_D trigger input for master or slave mode. 00 Reserved 01 Reserved 10 PCSB[4] 11 PCSC[4]

6.3.1.161 Chip Configuration Register (SIU_CCR)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	MATCH	DISNEX
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	X ¹
Reg Addr	Base + 0x980															
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	CSRE	TEST
W																
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	CSRE	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x980															

Figure 6-158. Chip Configuration Register (SIU_CCR)

¹ When system reset negates, the value in this bit depends on the censorship control word and the boot configuration bits.

Table 6-50. SIU_CCR Field Descriptions

Bits	Name	Description
0–13	—	Reserved.
14	MATCH	Compare register match. Holds the value of the match input signal to the SIU. The match input is asserted if the values in the SIU_CARH/SIU_CARL and SIU_CBRH/SIU_CBRL are equal. The MATCH bit is reset by the synchronous reset signal. 0 The content of SIU_CARH/SIU_CARL does not match the content of SIU_CBRH/SIU_CBRL 1 The content of SIU_CARH/SIU_CARL matches the content of SIU_CBRH/SIU_CBRL
15	DISNEX	Disable Nexus. Holds the value of the Nexus disable input signal to the SIU. When system reset negates, the value in this bit depends on the censorship control word and the boot configuration bits. 0 Nexus disable input signal is negated. 1 Nexus disable input signal is asserted.
16–29	—	Reserved.
31	TEST	Test mode enable. Allows reads or writes to undocumented registers used only for production tests. Since these production test registers are undocumented, estimating the impact of errant accesses to them is impossible. The application should not change this bit from its negated state at reset. 0 Undocumented production test registers cannot be read or written. 1 Undocumented production test registers can be read or written.

6.3.1.162 External Clock Control Register (SIU_ECCR)

The SIU_ECCR controls the timing relationship between the system clock and the external clocks ENGCLK and CLKOUT. All bits and fields in the SIU_ECCR are read/write and are reset by the synchronous reset signal.

R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Reg Addr	Base + 0x984															
R	0	0	ENGDIV						0	0	0	0	EBTS	0	EBDF	
W																
Reset	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	1
Reg Addr	Base + 0x984															

Figure 6-159. External Clock Control Register (SIU_ECCR)

Table 6-51. SIU_ECCR Field Descriptions

Bits	Name	Description
28	EBTS	External bus tap select. Changes the phase relationship between the system clock and CLKOUT. Changing the phase relationship so that CLKOUT is advanced in relation to the system clock increases the output hold time of the external bus signals to a non-0 value. It also increases the output delay times, increases the input hold times to non-0 values, and decreases the input setup times. Refer to the Electrical Specifications for how the EBTS bit affects the external bus timing. 0 External bus signals have 0 output hold times. 1 External bus signals have non-0 output hold times. Note: The EBTS bit must not be modified while an external bus transaction is in progress.
29	—	Reserved.
30–31	EBDF [0:1]	External bus division factor. Specifies the frequency ratio between the system clock and the external clock, CLKOUT. The EBDF field must not be changed during an external bus access or while an access is pending. The CLKOUT frequency is divided from the system clock frequency according to the descriptions below. This divider must be kept as divide-by-2 when operating in dual controller mode. 00 Reserved 01 Divide by 2 10 Reserved 11 Divide by 4

6.3.1.163 Compare A High Register (SIU_CARH)

The compare registers are not intended for general application use, but are used temporarily by the BAM during boot and intended optionally for communication with calibration tools. After reset, calibration tools can immediately write a non-0 value to these registers. The application code, using the registers then as read only, can read them to determine if a calibration tool is attached and operate appropriately.

The compare registers can be used just like 128 bits of memory mapped RAM that is always 0 out of reset, or they can perform a 64-bit to 64-bit compare. The compare function is continuous (combinational logic — not requiring a start or stop). The compare result appears in the MATCH bit in the SIU_CCR register.

The SIU_CARH holds the 32-bit value that is compared against the value in the SIU_CBRH register. The CMPAH field is read/write and is reset by the synchronous reset signal.

R	CMPAH															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x988															
R	CMPAH															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x988															

Figure 6-160. Compare A High Register (SIU_CARH)

6.3.1.164 Compare A Low Register (SIU_CARL)

The SIU_CARL register holds the 32-bit value that is compared against the value in the SIU_CBRL register. The CMPAL field is read/write and is reset by the synchronous reset signal.

R	CMPAL															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x98C															
R	CMPAL															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x98C															

Figure 6-161. Compare A Low Register (SIU_CARL)

6.3.1.165 Compare B High Register (SIU_CBRH)

The SIU_CBRH holds the 32-bit value that is compared against the value in the SIU_CARH. The CMPBH field is read/write and is reset by the synchronous reset signal.

R	CMPBH															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x990															
R	CMPBH															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x990															

Figure 6-162. Compare B High Register (SIU_CBRH)

6.3.1.166 Compare B Low Register (SIU_CBRL)

The SIU_CBRL holds the 32-bit value that is compared against the value in the SIU_CARL. The CMPBL field is read/write and is reset by the synchronous reset signal.

R	CMPBL															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x994															
R	CMPBL															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Reg Addr	Base + 0x994															

Figure 6-163. Compare B Low Register (SIU_CBRL)

6.4 Functional Description

The following sections provide an overview of the SIU operation.

6.4.1 System Configuration

6.4.1.1 Boot Configuration

The BOOTCFG[0:1] pins are used to determine the boot mode initiated by the BAM program, and whether external arbitration is selected for external booting. The BAM program uses the BOOTCFG field to determine where to read the reset configuration word, and whether to initiate a CAN or SCI boot. See [Section 15.3.2.2.5, “Reset Configuration Half Word Read,”](#) of the BAM chapter for detail on the RCHW. [Table 6-52](#) defines the boot modes specified by the BOOTCFG[0:1] pins. If the $\overline{\text{RSTCFG}}$ pin is asserted during the assertion of $\overline{\text{RSTOUT}}$, except in the case of a software external reset, the BOOTCFG pins are latched 4 clock cycles prior to the negation of the $\overline{\text{RSTOUT}}$ pin and are used to update the SIU_RSR and

the BAM boot mode. Otherwise, if $\overline{\text{RSTCFG}}$ is negated during the assertion of $\overline{\text{RSTOUT}}$, the BOOTCFG pins are ignored and the boot mode defaults to ‘Boot from Internal Flash Memory.’

Table 6-52. BOOTCFG[0:1] Configuration

Value	Meaning
0b00	Boot from Internal Flash Memory
0b01	FlexCAN/eSCI Boot
0b10	Boot from External Memory (No Arbitration)
0b11	Boot from External Memory (External Arbitration)

6.4.1.2 Pad Configuration

The pad configuration registers (SIU_PCR) in the SIU allow software control of the static electrical characteristics of external pins. The pad configuration registers allow control over the following external pin characteristics:

- Weak pull up/down enable/disable
- Weak pull up/down selection
- Slew-rate selection for outputs
- Drive strength selection for outputs
- Input buffer enable (when direction is configured for output)
- Input hysteresis enable/disable
- Open drain/push-pull output selection
- Multiplexed function selection
- Data direction selection

The pad configuration registers are provided to allow centralized control over external pins that are shared by more than one module. Each pad configuration register controls a single pin.

6.4.2 Reset Control

The reset controller logic is located in the SIU. See the Reset section of this manual for detail on reset operation.

6.4.2.1 $\overline{\text{RESET}}$ Pin Glitch Detect

The reset controller provides a glitch detect feature on the $\overline{\text{RESET}}$ pin. If the reset controller detects that the $\overline{\text{RESET}}$ pin is asserted for more than 2 clock cycles, the event is latched. Once the latch is set, if the $\overline{\text{RESET}}$ pin is negated before 10 clock cycles is reached, the reset controller sets the RGF bit without affecting any of the other bits in the reset status register. The latch is cleared when the RGF bit is set or a valid reset is recognized. The RGF bit remains set until cleared by software or the $\overline{\text{RESET}}$ pin is asserted for 10 clock cycles. The reset controller does not respond to assertions of the $\overline{\text{RESET}}$ pin if a reset cycle is already being processed.

6.4.3 External Interrupt

There are sixteen external interrupt inputs $\overline{\text{IRQ}}[0] - \overline{\text{IRQ}}[15]$ to the SIU. The IRQ_n inputs can be configured for rising or falling edge events or both. Each $\text{IRQ}[n]$ input has a corresponding flag bit in the external interrupt status register (SIU_EISR). The flag bits for the $\text{IRQ}[4:15]$ inputs are OR'ed together to form one interrupt request to the interrupt controller (OR function performed in the integration glue logic). The flag bits for the $\text{IRQ}[0:3]$ inputs can generate either an interrupt request to the interrupt controller or a DMA transfer request to the DMA controller. Figure 6-164 shows the DMA and interrupt request connections to the interrupt and DMA controllers.

The SIU contains an overrun request for each IRQ and one combined overrun request which is the logical OR of the individual overrun requests. Only the combined overrun request is used in the device, and the individual overrun requests are not connected.

Each IRQ pin has a programmable filter for rejecting glitches on the IRQ signals. The filter length for the IRQ pins is specified in the external IRQ digital filter register (SIU_IDFR).

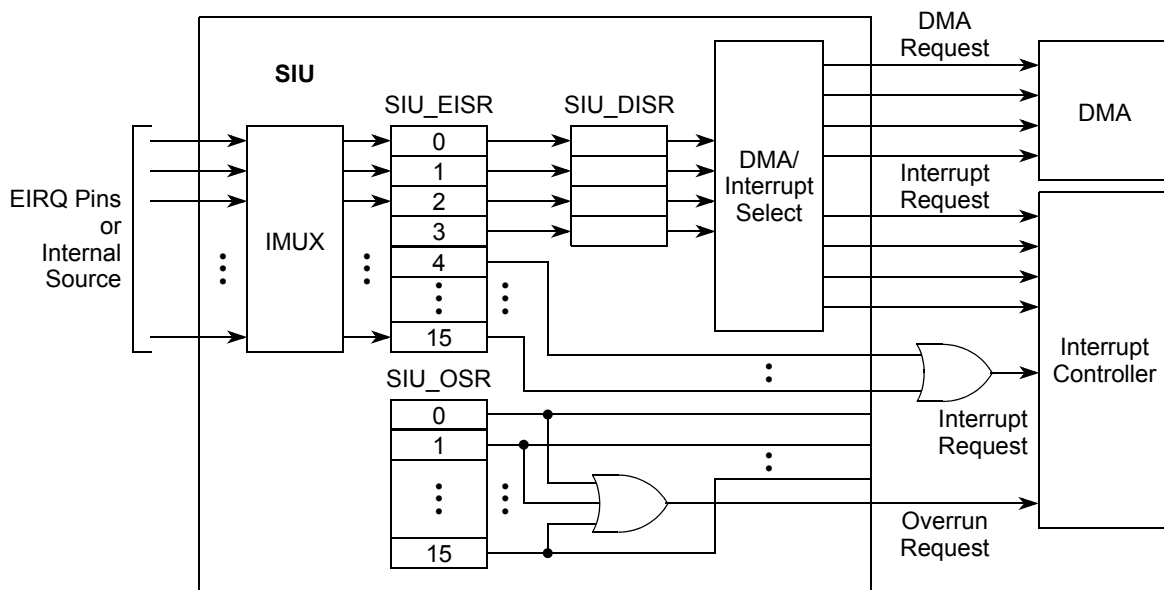


Figure 6-164. SIU DMA/Interrupt Request Diagram

6.4.4 GPIO Operation

All GPIO functionality is provided by the SIU for the device. Each device pin that has GPIO functionality has an associated pin configuration register in the SIU where the GPIO function is selected for the pin. In addition, each device pin with GPIO functionality has an input data register (SIU_GPDI $_n$) and an output data register (SIU_GPDO $_n$).

6.4.5 Internal Multiplexing

The internal multiplexing select registers (SIU_ETISR, SIU_EISR, and SIU_DISR) select the input source for the eQADC external trigger inputs, the SIU external interrupts, and the DSPI signals used for chaining both of the serial and parallel DSPI modules.

A block diagram of the internal multiplexing feature is shown in Figure 6-165. The figure shows the multiplexing of four external signals to an output from the SIU. A 2-bit SEL field from an SIU select register is used to select the input of the multiplexor.

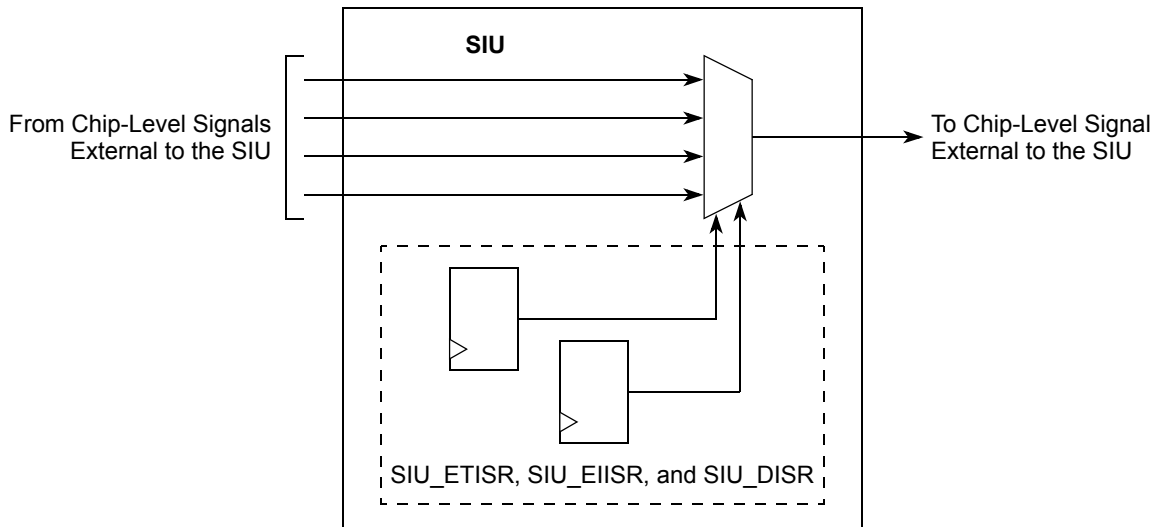


Figure 6-165. Four-to-One Internal Multiplexing Block Diagram

6.4.5.1 eQADC External Trigger Input Multiplexing

The six eQADC external trigger inputs can be connected to either an external pin, an eTPU channel, or an eMIOS channel. The input source for each eQADC external trigger is individually specified in the eQADC trigger input select register (SIU_ETISR). An example of the multiplexing of an eQADC external trigger input is given in Figure 6-166. As shown in the figure, the ETRIG[0] input of the eQADC can be connected to either the ETRIG[0]_GPIO[111] pin, the ETPUA30 channel, the EMIOS[10] channel, or the GPIO[206] pin. The remaining ETRIG inputs are multiplexed in the same manner (see Section 6.3.1.158, “eQADC Trigger Input Select Register (SIU_ETISR)” for the SIU_ETISR[TSEL0]–SIU_ETISR[TSEL5] bit definitions). Note that if an ETRIG input is connected to an eTPU or eMIOS channel, the external pin used by that channel can be used by the alternate function on that pin.

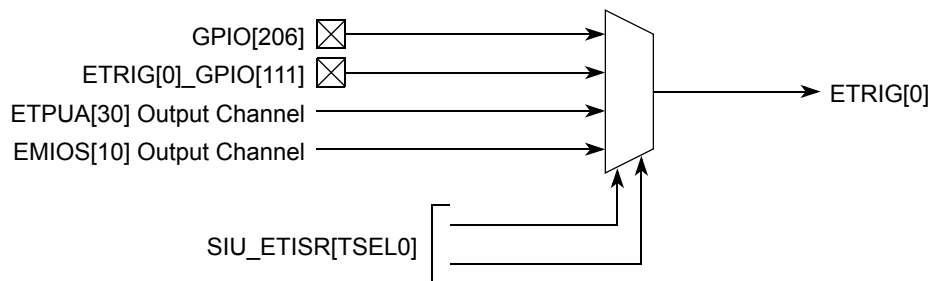
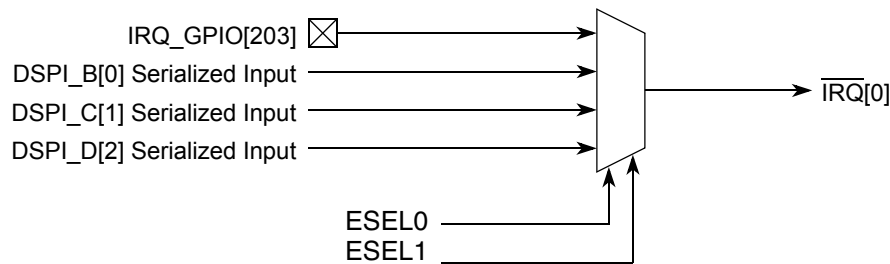


Figure 6-166. eQADC External Trigger Input Multiplexing

6.4.5.2 SIU External Interrupt Input Multiplexing

The sixteen SIU external interrupt inputs can be connected to either an external pin or to serialized output signals from a DSPI module. The input source for each SIU external interrupt is individually specified in the external IRQ input select register (SIU_EIISR). An example of the multiplexing of an SIU external interrupt input is given in [Figure 6-167](#). As shown in the figure, the $\overline{\text{IRQ}}[0]$ input of the SIU can be connected to either the $\overline{\text{IRQ}}[0]_{\text{GPIO}}[203]$ pin, the DSPI_B0 serialized input signal, the DSPI_C1 deserialized output signal, or the DSPI_D2 deserialized output signal. The remaining IRQ inputs are multiplexed in the same manner. The inputs to the IRQ from each DSPI module are offset by 1 so that if more than one DSPI module is connected to the same external device type, a separate interrupt can be generated for each device. This also applies to DSPI modules connected to external devices of different type that have status bits in the same bit location of the deserialized information.


Figure 6-167. DSPI Serialized Input Multiplexing

6.4.5.3 Multiplexed Inputs for DSPI Multiple Transfer Operation

Each DSPI module can be combined in a serial or parallel chain (multiple transfer operation). Serial chaining allows SPI operation with an external device that has more bits than one DSPI module. An example of a serial chain is shown in [Figure 6-168](#). In a serial chain, one DSPI module operates as a master, the second, third, or fourth DSPI modules operate as slaves. The data output (SOUT) of the master is connected to the data input (SIN) of the slave. The SOUT of a slave is connected to the SIN of subsequent slaves until the last module in the chain, where the SOUT is connected to an external pin, which connects to the input of an external SPI device. The slave DSPI and external SPI device use the master peripheral chip select (PCS) and clock (SCK). The trigger input of the master allows a slave DSPI to trigger a transfer when a data change occurs in the slave DSPI and the slave DSPI is operating in change in data mode. The trigger input of the master is connected to $\overline{\text{MTRIG}}$ output of the slave. If more than two DSPIs are chained in change in data mode, a chain must be connected of $\overline{\text{MTRIG}}$ outputs to trigger inputs through the slaves with the last slave $\overline{\text{MTRIG}}$ output connected to the master trigger input.

Parallel chaining allows the PCS and SCK from one DSPI to be used by more than one external SPI device, thus reducing pin utilization of the device MCU. An example of a parallel chain is shown in [Figure 6-169](#). In this example, the SOUT and SIN of the two DSPIs connect to separate external SPI devices, which share a common PCS and SCK.

To support multiple transfer operation of the DSPIs, an input multiplexor is required for the SIN, $\overline{\text{SS}}$, SCK IN, and trigger signals of each DSPI. The input source for the SIN input of a DSPI can be a pin or the

SOUT of any of the other three DSPIs. The input source for the \overline{SS} input of a DSPI can be a pin or the PCS0 of any of the other three DSPIs. The input source for the SCK input of a DSPI can be a pin or the SCK output of any of the other three DSPIs. The input source for the trigger input can be the \overline{PCSS} output of any of the other three DSPIs. The input source for each DSPI SIN, \overline{SS} , SCK, and trigger signal is individually specified in the DSPI input select register (SIU_DISR).

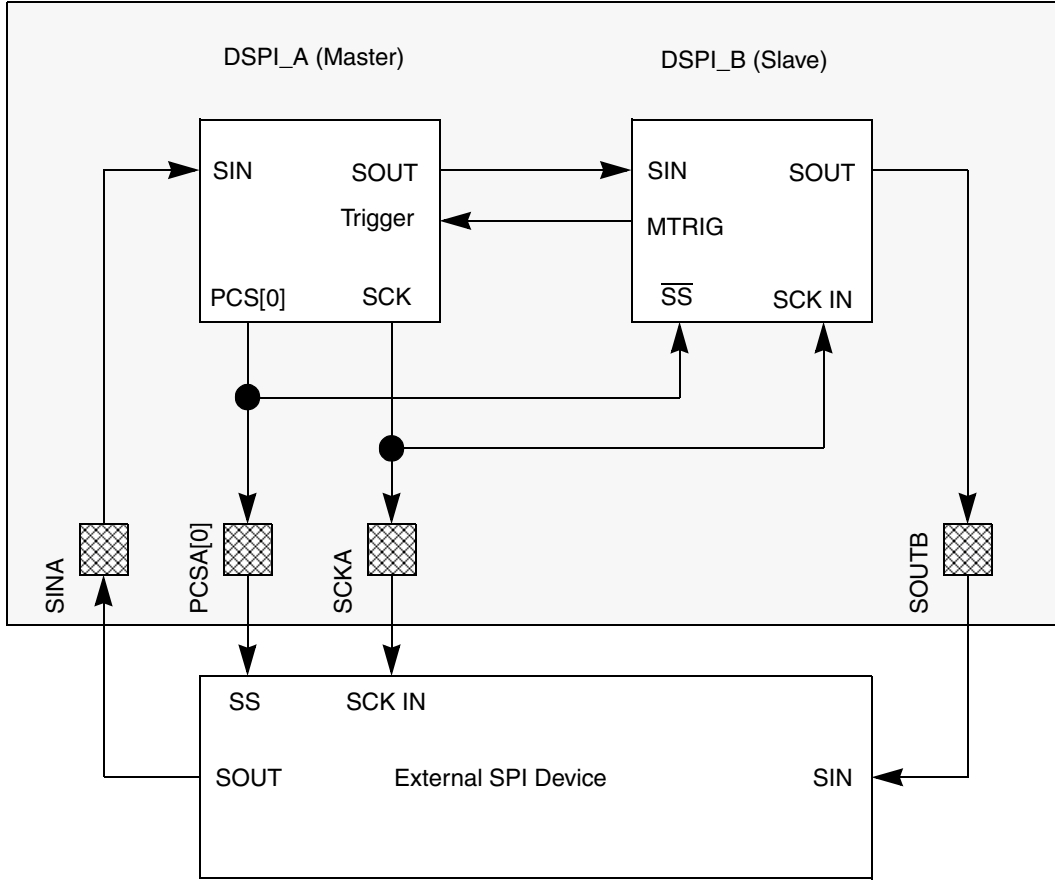


Figure 6-168. DSPI Serial Chaining

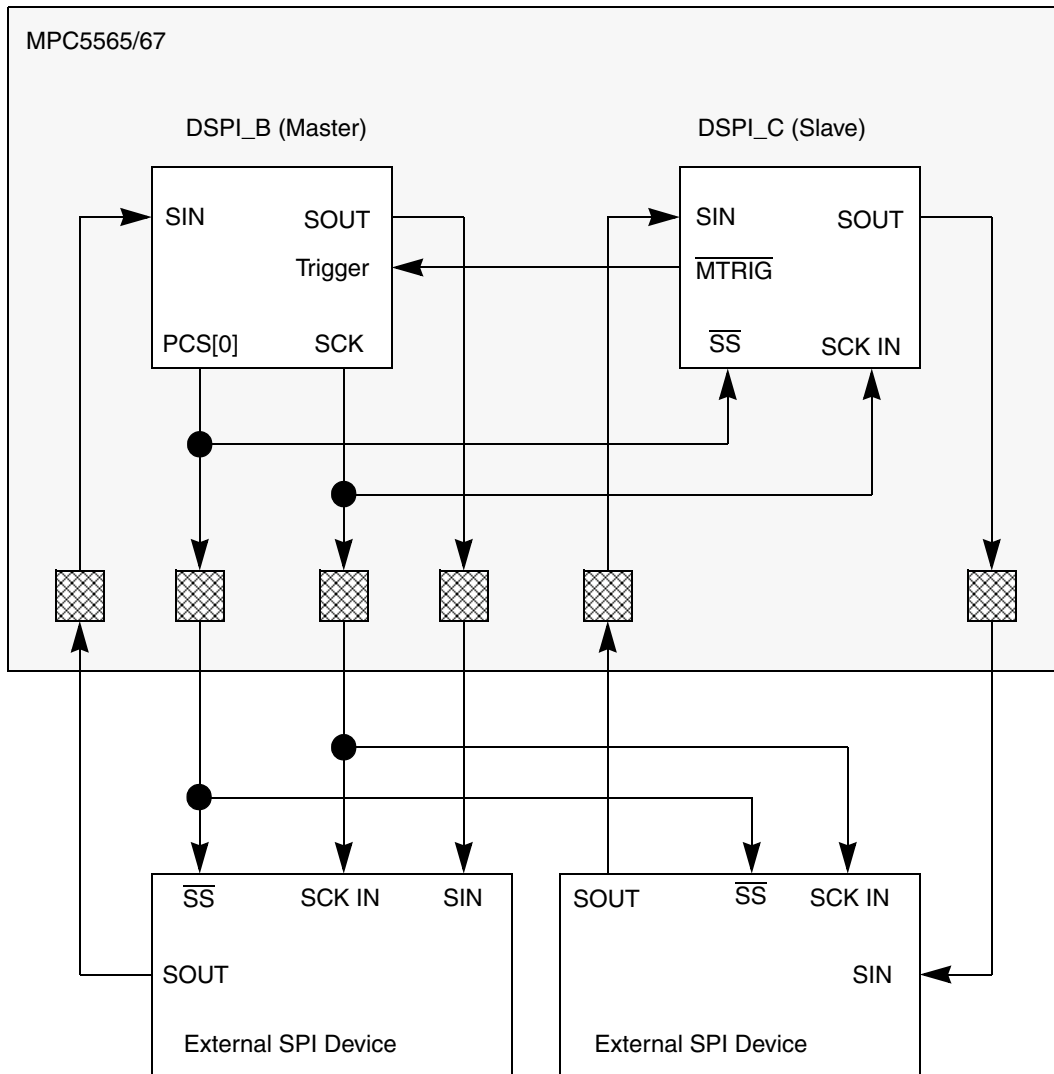


Figure 6-169. DSPI Parallel Chaining

6.5 Document Revision History

Table 53. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout	01/07: First public release.

Chapter 7

Crossbar Switch (XBAR)

7.1 Introduction

This chapter describes the multi-port crossbar switch (XBAR), which supports simultaneous connections between five master ports and five slave ports. XBAR supports a 32-bit address bus width and a 64-bit data bus width at all master and slave ports.

7.1.1 Block Diagram

Figure 7-1 shows a block diagram of the crossbar switch. Table 7-1 gives the crossbar switch port for each master and slave, and the assigned and fixed ID number for each master.

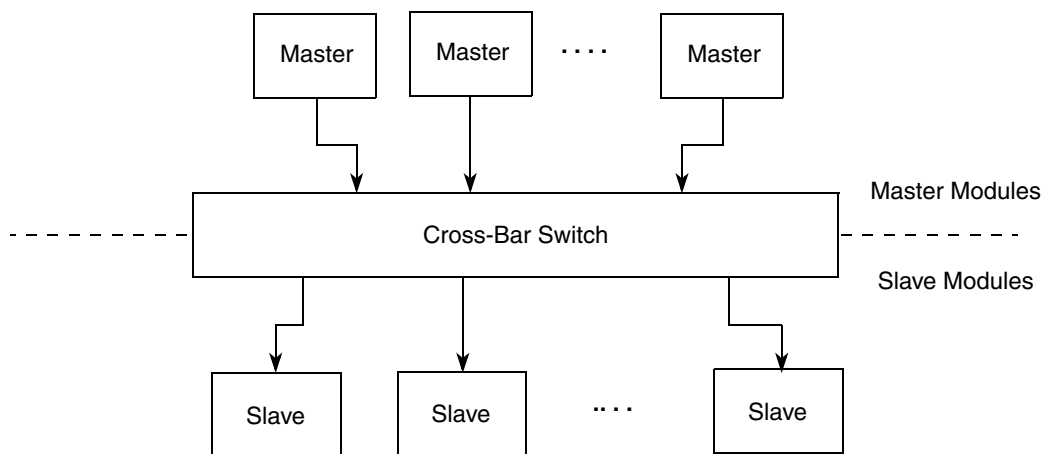


Figure 7-1. XBAR Block Diagram

Table 7-1. XBAR Switch Ports

Module	XBAR Port (Master/Slave)	Master ID
e200z6 core - CPU instruction / data	Master 0	0
e200z6 - Nexus		1
eDMA	Master 1	2
External Bus Interface	Master 2	3
FEC	Master 3	4
FlexRay	Master 6	6

Table 7-1. XBAR Switch Ports (continued)

Module	XBAR Port (Master/Slave)	Master ID
Flash	Slave 0	
External Bus Interface	Slave 1	
Internal SRAM	Slave 3	
Peripheral Bridge A (PBRIDGE_A)	Slave 6	
Peripheral Bridge B (PBRIDGE_B)	Slave 7	

7.1.2 Overview

The XBAR allows for concurrent transactions to occur from any master port to any slave port. It is possible for all master ports and slave ports to be in use at the same time as a result of independent master requests. If a slave port is simultaneously requested by more than one master port, arbitration logic will select the higher priority master and grant it ownership of the slave port. All other masters requesting that slave port will be stalled until the higher priority master completes its transactions.

By default, requesting masters will be granted access based on a fixed priority. A round-robin priority mode also is available. In this mode, requesting masters will be treated with equal priority and will be granted access to a slave port in round-robin fashion, based upon the ID of the last master to be granted access. A block diagram of the XBAR is shown in [Figure 7-1](#).

The XBAR can place each slave port in a low-power park mode so that particular slave port will not dissipate any power transitional address, control or data signals when not being actively accessed by a master port. There is a one-cycle arbitration overhead for exiting low power park mode.

7.1.3 Features

- Five Master ports:
 - core:
 - e200z6 core and Nexus
 - eDMA
 - EBI
 - FEC
 - FlexRay
- Five slave ports
 - Flash (refer to [Chapter 13, “Flash Memory”](#) for information on accessing flash)
 - EBI
 - Internal SRAM
 - Peripheral bridge A

- Peripheral bridge B
- 32-bit address, 64-bit data paths
- Fully concurrent transfers between independent master and slave ports

7.1.4 Modes of Operation

7.1.4.1 Normal Mode

In normal mode, the XBAR provides the register interface and logic that controls crossbar switch configuration.

7.1.4.2 Debug Mode

The XBAR operation in debug mode is identical to operation in normal mode.

7.2 Memory Map/Register Definition

The memory map for the XBAR program-visible registers is shown in [Table 7-2](#).

Table 7-2. XBAR Register Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xFFFF0_4000)	XBAR_MPR0	Master priority register for slave port 0	32
Base + 0x004– Base + 0x00F	—	Reserved	—
Base + 0x010	XBAR_SGPCR0	General-purpose control register for slave port 0	32
Base + 0x014– Base + 0x0FF	—	Reserved	—
Base + 0x100	XBAR_MPR1	Master priority register for slave port 1	32
Base + 0x104– Base + 0x10F	—	Reserved	—
Base + 0x110	XBAR_SGPCR1	General-purpose control register for slave port 1	32
Base + 0x114– Base + 0x02FF	—	Reserved	—
Base + 0x300	XBAR_MPR3	Master priority register for slave port 3	32
Base + 0x304– Base + 0x30F	—	Reserved	—
Base + 0x310	XBAR_SGPCR3	General-purpose control register for slave port 3	32
Base + 0x314– Base + 0x05FF	—	Reserved	—
Base + 0x600	XBAR_MPR6	Master priority register for slave port 6	32

Table 7-2. XBAR Register Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x604– Base + 0x60F	—	Reserved	—
Base + 0x610	XBAR_SGPCR6	General-purpose control register for slave port 6	32
Base + 0x614– Base + 0x06FF	—	Reserved	—
Base + 0x700	XBAR_MPR7	Master priority register for slave port 7	32
Base + 0x704– Base + 0x70F	—	Reserved	—
Base + 0x710	XBAR_SGPCR7	General-purpose control register for slave port 7	32
Base + 0x714– Base + 0x3_FFFF	—	Reserved	—

7.2.1 Register Descriptions

There are two registers for each slave port of the XBAR. The registers can only be accessed in supervisor mode using 32-bit accesses.

The slave SGPCR also features a bit (RO), which when written with a 1, will prevent all slave registers for that port from being written to again until a reset occurs. The registers will still be readable, but future write attempts will have no effect on the registers and will be terminated with an error response.

Please note the difference in numerical values of XBAR Master Port and Master ID as shown in [Table 7-3](#).

Table 7-3. XBAR Switch Ports

Module	XBAR Port (Master/Slave)	Master ID
e200z6 core - CPU instruction / data	Master 0	0
e200z6 - Nexus		1
eDMA	Master 1	2
External Bus Interface	Master 2	3
FEC	Master 3	4
FlexRay	Master 6	6
Flash	Slave 0	
External Bus Interface	Slave 1	
Internal SRAM	Slave 3	
Peripheral Bridge A (PBRIDGE_A)	Slave 6	
Peripheral Bridge B (PBRIDGE_B)	Slave 7	

7.2.1.1 Master Priority Registers (XBAR_MPR_n)

The XBAR_MPR for a slave port sets the priority of each master port when operating in fixed priority mode. They are ignored in round-robin priority mode unless more than one master has been assigned high priority by a slave.

NOTE

Masters must be assigned unique priority levels.

The master priority register can only be accessed in supervisor mode with 32-bit accesses. Once the RO (read only) bit has been set in the slave general-purpose control register, the master priority register can only be read. Attempts to write to it will have no effect on the MPR and will result in an error response.

NOTE

XBAR_MPR should be written with a read/modify/write for code compatibility.

Address: Base + 0x000 (XBAR_MPR0)
 Base + 0x100 (XBAR_MPR1)
 Base + 0x300 (XBAR_MPR3)
 Base + 0x600 (XBAR_MPR6)
 Base + 0x700 (XBAR_MPR7)

Access: Supervisor Read/Write

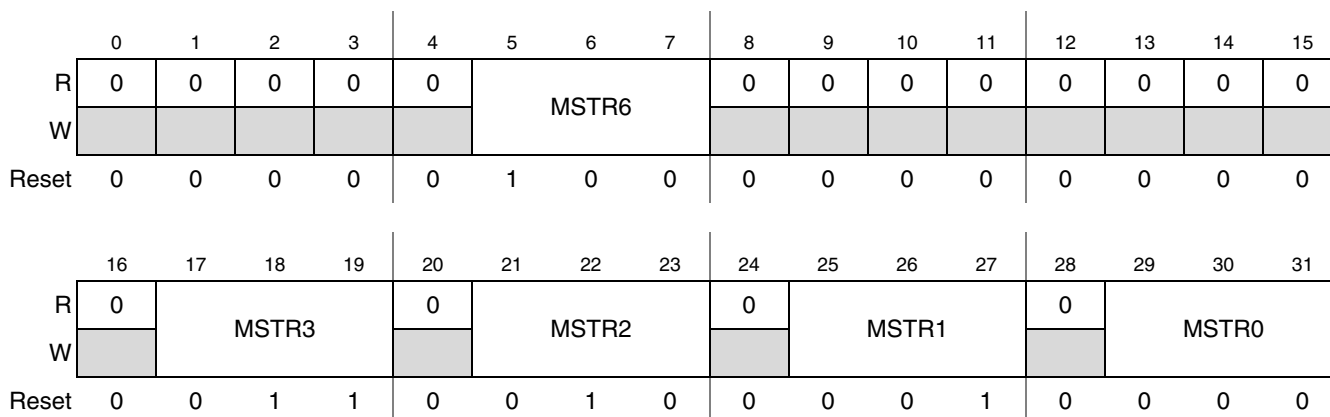


Figure 7-2. Master Priority Registers (XBAR_MPR_n)

Table 7-4. XBAR_MPR_n Descriptions

Field	Description
0–4	Reserved, should be cleared.
5–7 MSTR6	Master 6 priority. Set the arbitration priority for master port 6 on the associated slave port. 000 This master has the highest priority when accessing the slave port. ⋮ 100 This master has the lowest priority when accessing the slave port.
8–12	Reserved, should be cleared.
13–15	Reserved, should be cleared

Table 7-4. XBAR_MPR_n Descriptions (continued)

Field	Description
16	Reserved, should be cleared.
17–19 MSTR3	Master 3 priority. Set the arbitration priority for master port 3 on the associated slave port. 000 This master has the highest priority when accessing the slave port. ⋮ 100 This master has the lowest priority when accessing the slave port.
20	Reserved, should be cleared.
21–23 MSTR2	Master 2 priority. Set the arbitration priority for master port 2 on the associated slave port. 000 This master has the highest priority when accessing the slave port. ⋮ 100 This master has the lowest priority when accessing the slave port.
24	Reserved, should be cleared.
25–27 MSTR1	Master 1 priority. Set the arbitration priority for master port 1 on the associated slave port. 000 This master has the highest priority when accessing the slave port. ⋮ 100 This master has the lowest priority when accessing the slave port.
28	Reserved, should be cleared.
29–31 MSTR0	Master 0 priority. Set the arbitration priority for master port 0 on the associated slave port. 000 This master has the highest priority when accessing the slave port. ⋮ 100 This master has the lowest priority when accessing the slave port.

7.2.1.2 Slave General-Purpose Control Registers (XBAR_SGPCR_n)

The XBAR_SGPCR_n of a slave port controls several features of the slave port, including the following:

- Round-robin or fixed arbitration policy for a particular slave port
- Write protection of any slave port registers
- Parking algorithm used for a slave port

The PARK field indicates which master port this slave port will park on when no active access attempts are being made to the slave and the parking control field is set to park on a specific master.

XBAR_SGPCR_n[PARK] should only be programmed to select master ports that are actually available on the device, otherwise undefined behavior will result. The low-power park feature can result in an overall power savings if the slave port is not saturated; however, an extra clock of latency will result whenever any master tries to access a slave (not being accessed by another master) because it will not be parked on any master.

The XBAR_SGPCR can only be accessed in supervisor mode with 32-bit accesses. Once the RO (read only) bit has been set in the XBAR_SGPCR, the XBAR_SGPCR and the SBAR_MPR can only be read. Attempts to write to them will have no effect and will result in an error response.

NOTE

Some of the unused bits in the SGPCR_n registers are writeable and readable, but they serve no function. Setting any of these bits has no effect on the operation of this module.

Address: Base + 0x010 (XBAR_SGPCR0)
 Base + 0x110 (XBAR_SGPCR1)
 Base + 0x310 (XBAR_SGPCR3)

Access: Read/Write

Base + 0x610 (XBAR_SGPCR6)
 Base + 0x710 (XBAR_SGPCR7)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	RO ¹	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	ARB		0	0	PCTL		0	PARK		
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

¹ Once this bit is set, only hardware reset will clear it.

Figure 7-3. Slave General-Purpose Control Registers (XBAR_SGPCR_n)

Table 7-5. XBAR_SGPCR_n Field Descriptions

Field	Description
0 RO	Read only. Used to force all of a slave port's registers to be read only. Once written to 1 it can only be cleared by hardware reset. 0 All this slave port's registers can be written. 1 All this slave port's registers are read only and cannot be written (attempted writes have no effect and result in an error response).
1–21	Reserved, should be cleared.
22–23 ARB	Arbitration mode. Used to select the arbitration policy for the slave port. This field is initialized by hardware reset. 00 Fixed priority using MPR 01 Round-robin priority 1x Reserved
24–25	Reserved, should be cleared.

Table 7-5. XBAR_SGPCRn Field Descriptions (continued)

Field	Description
26–27 PCTL	<p>Parking control. Used to select the parking algorithm used by the slave port. This field is initialized by hardware reset.</p> <p>00 When no master is making a request, the arbiter will park the slave port on the master port defined by the PARK control field.</p> <p>01 POL – Park on last. When no master is making a request, the arbiter will park the slave port on the last master to own the slave port.</p> <p>10 LPP – Low power park. When no master is making a request, the arbiter will park the slave port on no master and will drive all slave port outputs to a safe state.</p> <p>11 Reserved</p>
28	Reserved, should be cleared.
29–31 PARK	<p>Park. Used to determine which master port this slave port parks on when no masters are actively making requests. PCTL must be set to 00.</p> <p>000 Park on master port 0</p> <p>001 Park on master port 1</p> <p>010 Park on master port 2</p> <p>011 Park on master port 3</p> <p>100 Illegal master port</p> <p>101 Illegal master port</p> <p>110 Park on master port 6</p> <p>111 Illegal master port</p>

7.3 Functional Description

This section describes the functionality of the XBAR in more detail.

7.3.1 Overview

The main goal of the XBAR is to increase overall system performance by allowing multiple masters to communicate concurrently with multiple slaves. In order to maximize data throughput it is essential to keep arbitration delays to a minimum.

This section examines data throughput from the point of view of masters and slaves, detailing when the XBAR will stall masters, or insert bubbles on the slave side.

7.3.2 General Operation

When a master makes an access to the XBAR from an idle master state, the access will be taken immediately by the XBAR. If the targeted slave port of the access is available (that is, the requesting master is currently granted ownership of the slave port), the access will be immediately presented on the slave port. It is possible to make single clock (zero wait state) accesses through the XBAR by a granted master. If the targeted slave port of the access is busy or parked on a different master port, the requesting master will simply see wait states inserted until the targeted slave port can service the master’s request. The latency in servicing the request will depend on each master’s priority level and the responding slave’s access time.

Because the XBAR appears to be just another slave to the master device, the master device will have no knowledge of whether or not it actually owns the slave port it is targeting. While the master does not have control of the slave port it is targeting it will simply be wait-stated.

A master will be given control of a targeted slave port only after a previous access to a different slave port has completed, regardless of its priority on the newly targeted slave port. This prevents deadlock from occurring when a master has an outstanding request to slave port A that has a long response time, has a pending access to a different slave port B, and a lower priority master also makes a request to the different slave port B. In this case, the lower priority master will be granted bus ownership of slave port B after a cycle of arbitration, assuming the higher priority master's slave port A access is not terminated.

Once a master has control of the slave port it is targeting, the master will remain in control of that slave port until it either gives up the slave port by running an IDLE cycle, leaves that slave port for its next access, or loses control of the slave port to a higher priority master with a request to the same slave port. However, since all masters run a fixed-length burst transfer to a slave port, it will retain control of the slave port until that transfer sequence is completed. In round-robin arbitration mode, the current master will be forced to hand off bus ownership to an alternately requesting master at the end of its current transfer sequence.

When a slave bus is being idled by the XBAR, it can be parked on the master port indicated by the PARK bits in the XBAR_SGPCR (slave general-purpose control register), or on the last master to have control of the slave port. This can be done in an attempt to save the initial clock of arbitration delay that would otherwise be seen if the master had to arbitrate to gain control of the slave port. The slave port can also be put into low power park mode in attempt to save power.

7.3.3 Master Ports

The XBAR will terminate an access and it will not be allowed to pass through the XBAR unless the master currently is granted access to the slave port to which the access is targeted. A master access will be taken if the slave port to which the access decodes is either currently servicing the master or is parked on the master. In this case the XBAR will be completely transparent and the master's access will be immediately seen on the slave bus and no arbitration delays will be incurred. A master access will be stalled if the access decodes to a slave port that is busy serving another master, parked on another master or is in low-power park mode.

If the slave port is currently parked on another master or is in low power park mode, and no other master is requesting access to the slave port, then only one clock of arbitration will be incurred. If the slave port is currently serving another master of a lower priority and the master has a higher priority than all other requesting masters, then the master will gain control over the slave port as soon as the data phase of the current access is completed. If the slave port is currently servicing another master of a higher priority, then the master will gain control of the slave port once the other master releases control of the slave port if no other higher priority master is also waiting for the slave port.

A master access will be responded to with an error if the access decodes to a location not occupied by a slave port. This is the only time the XBAR will directly respond with an error response. All other error responses received by the master are the result of error responses on the slave ports being passed through the XBAR.

7.3.4 Slave Ports

The goal of the XBAR with respect to the slave ports is to keep them 100% saturated when masters are actively making requests. In order to do this the XBAR must not insert any bubbles onto the slave bus unless absolutely necessary.

There is only one instance when the XBAR will force a bubble onto the slave bus when a master is actively making a request. This occurs when a handoff of bus ownership occurs and there are no wait states from the slave port. A requesting master which does not own the slave port will be granted access after a one clock delay.

The only other time the XBAR will have control of the slave port is when no masters are making access requests to the slave port and the XBAR is forced to either park the slave port on a specific master, or place the slave port into low power park mode. In these cases, the XBAR will force IDLE for the transfer type.

7.3.5 Priority Assignment

Each master port must be assigned a unique 2-bit priority level in fixed priority mode. If multiple master ports are assigned the same priority level within a register (XBAR_MPR) undefined behavior will result.

7.3.6 Arbitration

XBAR supports two arbitration schemes; a simple fixed-priority comparison algorithm, and a round-robin fairness algorithm. The arbitration scheme is independently programmable for each slave port.

7.3.6.1 Fixed Priority Operation

When operating in fixed-priority arbitration mode, each master is assigned a unique priority level in the XBAR_MPR. If two masters both request access to a slave port, the master with the highest priority in the selected priority register will gain control over the slave port.

Any time a master makes a request to a slave port, the slave port checks to see if the new requesting master's priority level is higher than that of the master that currently has control over the slave port (if any). The slave port does an arbitration check at every clock edge to ensure that the proper master (if any) has control of the slave port.

If the new requesting master's priority level is higher than that of the master that currently has control of the slave port, the higher priority master will be granted control at the termination of any currently pending access, assuming the pending transfer is not part of a burst transfer.

A new requesting master must wait until the end of the fixed-length burst transfer, before it will be granted control of the slave port. But if the new requesting master's priority level is lower than that of the master that currently has control of the slave port, the new requesting master will be forced to wait until the master that currently has control of the slave port is finished accessing the current slave port.

7.3.6.2 Round-Robin Priority Operation

When operating in round-robin mode, each master is assigned a relative priority based on the master port number. This relative priority is compared to the port number of the last master to perform a transfer on

the slave bus. The highest priority requesting master will become owner of the slave bus at the next transfer boundary (accounting for fixed-length burst transfers). Priority is based on how far ahead the port number of the requesting master is to the port number of the last master.

Once granted access to a slave port, a master may perform as many transfers as desired to that port until another master makes a request to the same slave port. The next master in line will be granted access to the slave port when the current transfer is completed, or possibly on the next clock cycle if the current master has no pending access request.

As an example of arbitration in round-robin mode, assume the three masters have ID's 0, 1, and 2. If the last master of the slave port was master 1, and masters 0 and 2 make simultaneous requests, they will be serviced in the order 2 and then 0 assuming no further requests are made.

As another example, if master 1 is waiting on a response from a slow slave and has no further pending access to that slave, no other masters are requesting, and master 0 then makes a request, master 0's request will be granted on the next clock (assuming that master 1's transfer is not a burst transfer), and the request information for master 0 will be driven to the slave as a pending access. If master 2 were to make a request after master 0 has been granted access, but prior to master 0's access being accepted by the slave, master 0 will continue to be granted the slave port, and master 2 will be delayed until the next arbitration boundary, which occurs once the transfer is complete. The round-robin pointer will have been reset to 0, so master 1 could actually be granted the bus next if it has another request which occurs prior to the completion of master 0's transfer. This implies a worst case latency of N transfers for a system with N masters.

Parking may still be used in round-robin mode, but will not affect the round-robin pointer unless the parked master actually performs a transfer. Handoff will occur to the next master in line after one cycle of arbitration.

The slave port does an arbitration check at every clock edge to ensure that the proper master (if any) has control of the slave port.

A new requesting master must wait until the end of the fixed-length burst transfer, before it will be granted control of the slave port. But if the new requesting master's priority level is lower than that of the master that currently has control of the slave port, the new requesting master will be forced to wait until the master that currently has control of the slave port is finished accessing the current slave port.

7.3.6.2.1 Parking

If no master is currently making a request to the slave port then the slave port will be parked. It will park in one of three places, dictated by the PCTL field in the XBAR_SGPCR.

- If the park on specific master mode is selected, then the slave port will park on the master designated by the PARK field. The behavior here is the same as for the POL mode with the exception that a specific master will be parked on instead of the last master to access the slave port. If the master designated by the PARK field tries to access the slave port it will not pay an arbitration penalty, while any other master will pay a one clock penalty.
- If the park on last (POL) mode is selected, then the slave port will park on the last master to access it, passing that master's signals through to the slave bus. When that master accesses the slave port

again it will not pay any arbitration penalty; however, if any other master wishes to access the slave port a one clock arbitration penalty will be imposed.

- If the low power park (LPP) mode is selected, then the slave port will enter low power park mode. It will not recognize any master as being in control of it and it will not select any master's signals to pass through to the slave bus. In this case all slave bus activity will effectively halt because all slave bus signals will not be toggling. This can save power if the slave port will not be in use for some time. However, when a master does make a request to the slave port it will be delayed by one clock since it will have to arbitrate to acquire ownership of the slave port.

7.4 Revision History

Table 7-6. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout	01/07: First public release.

Chapter 8

Error Correction Status Module (ECSM)

8.1 Introduction

The device includes error-correcting code (ECC) implementations to improve the quality and reliability of internal SRAM and internal flash memories. The error correction status module (ECSM), provides a means for the application to collect information on memory errors reported by ECC and/or generic access error information.

8.1.1 Overview

The ECSM provides a set of registers that configure and report ECC errors for the device including accesses to SRAM and flash memory. The application may configure the device for the types of memory errors to be reported, and then query a set of read-only status and information registers to identify any errors that have been signalled.

There are two types of ECC errors: correctable and non-correctable. A correctable ECC error is generated when only one bit is wrong in a 64-bit double word. In this case it is corrected automatically by hardware, and no flags or other indication is set that the error occurred. A non-correctable ECC error is generated when 2 bits in a 64-bit double word are incorrect. Non-correctable ECC errors cause an interrupt, and if enabled, additional error details are available in the ECSM.

Error correction is implemented on 64 bits of data at a time, using 8 bits for ECC for every 64-bit double word. ECC is checked on reads, and calculated on writes per the following:

1. 64 bits containing the desired byte / halfword / word or double word in memory is read, and ECC checked.
2. If the access is a write, then
 - The new byte / halfword / word / double word is merged into the 64 bits.
 - New ECC bits are calculated.
 - The 64 bits and the new ECC bits are written back.

In order to use ECC with SRAM, the SRAM memory must be written to before ECC is enabled. See [Section 8.3, “Initialization/Application Information.”](#)

8.1.2 Features

The ECSM includes these features:

- Configurable for reporting non-correctable errors
- Registers for capturing ECC information for RAM access errors
- Registers for capturing ECC information for flash access errors

8.2 Memory Map and Register Definition

This section details the programming model for the ECSM. [Table 8-1](#) is the memory map for the ECSM registers.

Table 8-2. ECSM Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xFFFF4_0000) + 0x016	ECSM_SWTCR	Software watchdog timer control register ¹	16
Base + 0x018– Base + 0x01A	—	Reserved	—
Base + 0x01B	ECSM_SWTSR	Software watchdog timer service register ¹	8
Base + 0x01C– Base + 0x01E	—	Reserved	—
Base + 0x01F	ECSM_SWTIR	Software watchdog timer interrupt register ¹	8
Base + 0x020– Base + 0x023	—	Reserved	—
Base + 0x024– Base + 0x027	FBOMCR	FEC Burst Optimization Master Control Register	32
Base + 0x028– Base + 0x042	—	Reserved	—
Base + 0x043	ECSM_ECR	ECC configuration register	8
Base + 0x044– Base + 0x046	—	Reserved	—
Base + 0x047	ECSM_ESR	ECC status register	8
Base + 0x048– Base + 0x049	—	Reserved	—
Base + 0x04A	ECSM_EEGR	ECC error generation register	16
Base + 0x04B– Base + 0x04F	—	Reserved	—
Base + 0x050	ECSM_FEAR	Flash ECC address register	32
Base + 0x054– Base + 0x055	—	Reserved	—
Base + 0x056	ECSM_FEMR	Flash ECC master register	8
Base + 0x057	ECSM_FEAT	Flash ECC attribute register	8
Base + 0x058	ECSM_FEDRH	Flash ECC data high register	32

Table 8-2. ECSM Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x05C	ECSM_FEDRL	Flash ECC data low register	32
Base + 0x060	ECSM_REAR	RAM ECC address register	32
Base + 0x064– Base + 0x065	—	Reserved	—
Base + 0x066	ECSM_REMR	RAM ECC master register	8
Base + 0x067	ECSM_REAT	RAM ECC attributes register	8
Base + 0x068	ECSM_REDRH	RAM ECC data high register	32
Base + 0x06C	ECSM_REDRL	RAM ECC data low register	32
Base + 0x070– Base + 0x07F	—	Reserved	—

¹ These registers provide control and configuration for a software watchdog timer, and are included as part of a standard Freescale ECSM module incorporated in the device. The e200z6 core also provides this functionality and is the preferred method for watchdog implementation. See [Section 8.2.1.1, “Software Watchdog Timer Control, Service, and Interrupt Registers \(ECSM_SWTCR, ECSM_SWTSR, and ECSM_SWTIR\).”](#)

8.2.1 Register Descriptions

Attempted accesses to reserved addresses result in an error termination, while attempted writes to read-only registers are ignored and do not terminate with an error. Unless noted otherwise, writes to the programming model must match the size of the register; for example, an n -bit register only supports n -bit writes, etc. Attempted writes of a different size than the register width produce an error termination of the bus cycle and no change to the targeted register.

8.2.1.1 Software Watchdog Timer Control, Service, and Interrupt Registers (ECSM_SWTCR, ECSM_SWTSR, and ECSM_SWTIR)

These registers provide control and configuration for a software watchdog timer, and are included as part of a standard Freescale ECSM module incorporated in the device. The e200z6 core also provides this functionality and is the preferred method for watchdog implementation. In order to optimize code portability to other members of this Power Architecture-based MPU family, use of the watchdog registers in the ECSM is not recommended.

The values in these registers should be left in their reset state. Any change from reset values may cause an unintentional ECSM_SWTIR_SWTIC interrupt.

8.2.1.2 ECC Registers

There are a number of program-visible registers for the sole purpose of reporting and logging of memory failures. These registers include the following:

- ECC configuration register (ECSM_ECR)
- ECC status register (ECSM_ESR)
- ECC Error Generation Register (EEGR)
- Flash ECC address register (ECSM_FEAR)
- Flash ECC master number register (ECSM_FEMR)

Error Correction Status Module (ECSM)

- Flash ECC attributes register (ECSM_FEAT)
- Flash ECC data register (ECSM_FEDR)
- RAM ECC address register (ECSM_REAR)
- RAM ECC master number register (ECSM_REMR)
- RAM ECC attributes register (ECSM_REAT)
- RAM ECC data register (ECSM_REDR)

The details on the ECC registers are provided in the subsequent sections.

8.2.1.3 ECC Configuration Register (ECSM_ECR)

The ECSM_ECR is an 8-bit control register for specifying whether memory errors are reported during RAM or flash accesses. The occurrence of a non-correctable error causes the current access to be terminated with an error condition. In many cases, this error termination is reported directly by the initiating bus master. The ECC reporting logic in the ECSM provides an optional error interrupt mechanism to signal non-correctable memory errors. In addition to the interrupt generation, the ECSM captures specific information (memory address, attributes and data, bus master number, etc.) which may be useful for subsequent failure analysis.

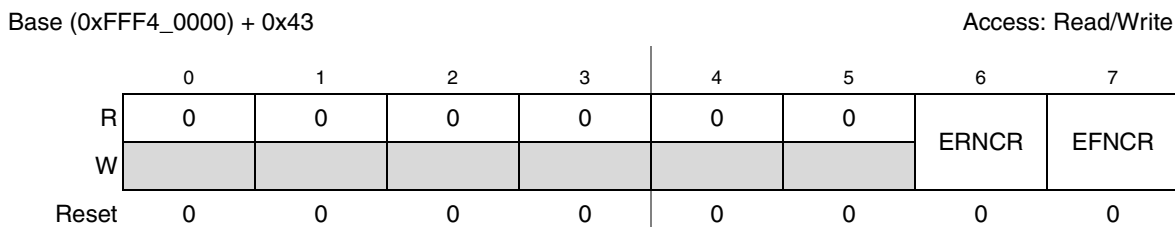


Figure 8-1. ECC Configuration Register (ECSM_ECR)

Table 8-3. ECSM_ECR Field Definitions

Field	Description
0–5	Reserved.
6 ERNCR	Enable RAM non-correctable reporting. The occurrence of a non-correctable multi-bit RAM error generates a ECSM ECC interrupt request as signalled by the assertion of ECSM_ESR[RNCE]. The faulting address, attributes and data are also captured in the REAR, REMR, REAT and REDR registers. 0 Reporting of non-correctable RAM errors is disabled. 1 Reporting of non-correctable RAM errors is enabled.
7 EFNCR	Enable flash non-correctable reporting. The occurrence of a non-correctable multi-bit flash error generates a ECSM ECC interrupt request as signalled by the assertion of ECSM_ESR[FNCE]. The faulting address, attributes and data are also captured in the FEAR, FEMR, FEAT and FEDR registers. 0 Reporting of non-correctable flash errors is disabled. 1 Reporting of non-correctable flash errors is enabled.

8.2.1.4 ECC Status Register (ECSM_ESR)

The ECSM_ESR is an 8-bit control register for signaling which types of properly-enabled ECC events have been detected. The ESR signals the last, properly-enabled memory event to be detected. The generation of the ECSM ECC interrupt request is defined by the boolean equation:

```

ECSM_ECC_IRQ
= ECSM_ECR[ERNCR] & ECSM_ESR[RNCE]      // ram, noncorrectable error
| ECSM_ECR[EFNCR] & ECSM_ESR[FNCE]      // Flash, noncorrectable error
    
```

where the combination of a properly-enabled category in the ECSM_ECR and the detection of the corresponding condition in the ECSM_ESR produces the interrupt request.

The ECSM allows a maximum of one bit of the ECSM_ESR to be asserted at any given time. This preserves the association between the ECSM_ESR and the corresponding address and attribute registers, which are loaded on each occurrence of an properly-enabled ECC event. If there is a pending ECC interrupt and another properly-enabled ECC event occurs, the ECSM hardware automatically handles the ECSM_ESR reporting, clearing the previous data and loading the new state and thus guaranteeing that only a single flag is asserted.

To maintain the coherent software view of the reported event, the following sequence in the ECSM error interrupt service routine is suggested:

1. Read the ECSM_ESR and save it.
2. Read and save all the address and attribute reporting registers.
3. Re-read the ECSM_ESR and verify the current contents matches the original contents. If the two values are different, go back to step 1 and repeat.
4. When the values are identical, write a 1 to the asserted ECSM_ESR flag to negate the interrupt request.

In the event that multiple status flags are signaled simultaneously, ECSM records the event with the RNCE as highest priority, and then FNCE.

Base + 0x47				Access: Read/Write to clear				
	0	1	2	3	4	5	6	7
R	0	0	0	0	0	0	RNCE	FNCE
W							w1c	w1c
Reset	0	0	0	0	0	0	0	0

Figure 8-2. ECC Status Register (ECSM_ESR)

Table 8-4. ECSM_ESR Field Definitions

Field	Description
0–5	Reserved.
6 RNCE	RAM non-correctable error. The occurrence of a properly-enabled non-correctable RAM error generates an ECSM ECC interrupt request. The faulting address, attributes and data are also captured in the REAR, REMR, REAT and REDR registers. To clear this interrupt flag, write a 1 to this bit. Writing a 0 has no effect. 0 No reportable non-correctable RAM error has been detected. 1 A reportable non-correctable RAM error has been detected.
7 FNCE	Flash non-correctable error. The occurrence of a properly-enabled non-correctable flash error generates an ECSM ECC interrupt request. The faulting address, attributes and data are also captured in the FEAR, FEMR, FEAT and FEDR registers. To clear this interrupt flag, write a 1 to this bit. Writing a 0 has no effect. 0 No reportable non-correctable flash error has been detected. 1 A reportable non-correctable flash error has been detected.

8.2.1.5 ECC Error Generation Register (ECSM_EEGR)

The ECSM_EEGR is a 16-bit control register used to force the generation of double-bit data errors in the internal SRAM. This capability provides a mechanism to allow testing of the software service routines associated with memory error logging. The intent is to generate errors during data write cycles, such that subsequent reads of the corrupted address locations generate ECC events, double-bit noncorrectable errors that are terminated with an error response.

If an attempt to force a non-correctable error (by asserting ECSM_EEGR[FRCNCI] or ECSM_EEGR[FRC1NCI]) and ECSM_EEGR[ERRBIT] equals 64, then no data error will be generated.

NOTE

The only allowable values for the 2 control bit enables {FRCNCI, FR1NCI} are {0,0}, {1,0} and {0,1}. The value {1,1} results in undefined behavior.

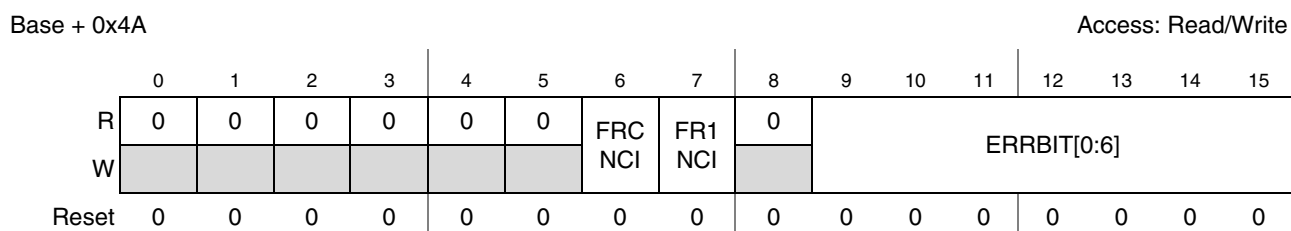


Figure 8-3. ECC Error Generation (ECSM_EEGR) Register

Table 8-5. ECSM_EEGR Field Definitions

Field	Description
0–5	Reserved
6 FRCNCI	Force internal SRAM continuous noncorrectable data errors. 0 No internal SRAM continuous 2-bit data errors are generated. 1 2-bit data errors in the internal SRAM are continuously generated. The assertion of this bit forces the internal SRAM controller to create 2-bit data errors, as defined by the bit position specified in ERRBIT[0:6] and the overall odd parity bit, continuously on every write operation. The normal ECC generation takes place in the RAM controller, but then the polarity of the bit position defined by ERRBIT and the overall odd parity bit are inverted to introduce a 2-bit ECC error in the RAM.
7 FR1NCI	Force internal SRAM one noncorrectable data errors. 0 No internal SRAM single 2-bit data errors are generated. 1 One 2-bit data error in the internal SRAM is generated. The assertion of this bit forces the internal SRAM controller to create one 2-bit data error, as defined by the bit position specified in ERRBIT[0:6] and the overall odd parity bit, on the first write operation after this bit is set. The normal ECC generation takes place in the internal SRAM controller, but then the polarity of the bit position defined by ERRBIT and the overall odd parity bit are inverted to introduce a 2-bit ECC error in the RAM. After this bit has been enabled to generate a single 2-bit error, it must be cleared before being set again to properly re-enable the error generation logic.
8	Reserved
9–15 ERRBIT	Error bit position. Defines the bit position which is complemented to create the data error on the write operation. The bit specified by this field plus the odd parity bit of the ECC code are inverted. The internal SRAM controller follows a vector bit ordering scheme where LSB=0. Errors in the ECC syndrome bits can be generated by setting this field to a value greater than the internal SRAM width. The following association between the ERRBIT field and the corrupted memory bit is defined: if ERRBIT = 0, then RAM[0] is inverted if ERRBIT = 1, then RAM[1] is inverted ... if ERRBIT = 63, then RAM[63] is inverted if ERRBIT = 64, then ECC Parity[0] is inverted if ERRBIT = 65, then ECC Parity[1] is inverted ... if ERRBIT = 71, then ECC Parity[7] is inverted For ERRBIT values greater than 71, no bit position is inverted.

8.2.1.6 Flash ECC Address Register (ECSM_FEAR)

The ECSM_FEAR is a 32-bit register for capturing the address of the last, properly-enabled ECC event in the flash memory. Depending on the state of the ECSM_ECR, an ECC event in the flash causes the address, attributes and data associated with the access to be loaded into the ECSM_FEAR, ECSM_FEMR, ECSM_FEAT, and ECSM_FEDR registers, and the appropriate flag (F1BC or FNCE) in the ECSM_ESR to be asserted.

The address that is captured in ECSM_FEAR is the flash page address as seen on the system bus. Refer to [Section 13.3.2.7, “Address Register \(FLASH_AR\),”](#) to retrieve the double word address.

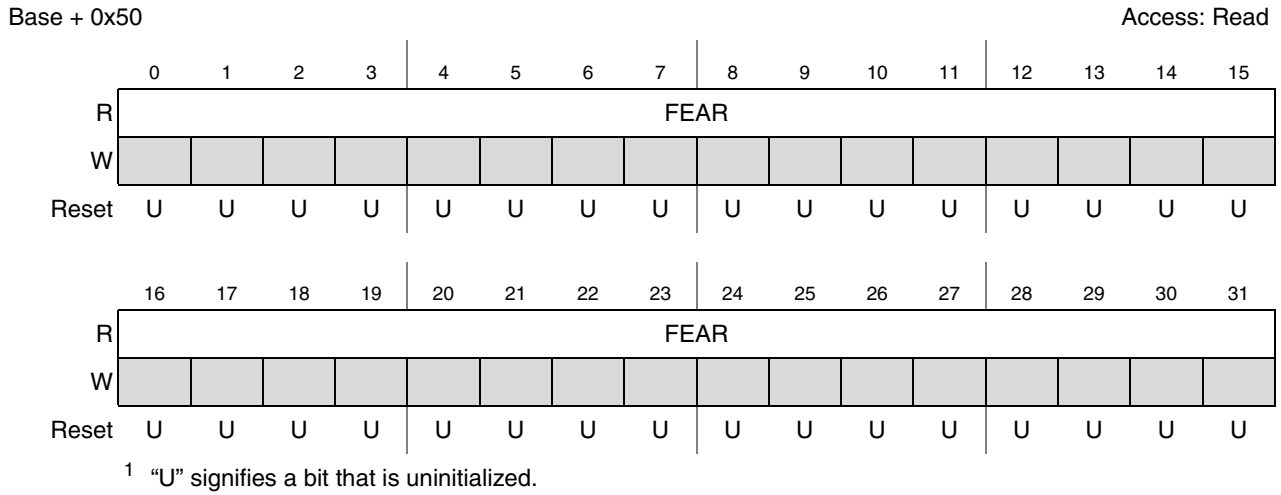


Figure 8-4. Flash ECC Address Register (ECSM_FEAR)

Table 8-6. ECSM_FEAR Field Descriptions

Field	Description
0–31 FEAR [0:31]	Flash ECC address. Contains the faulting access address of the last, properly-enabled flash ECC event.

8.2.1.7 Flash ECC Master Number Register (ECSM_FEMR)

The FEMR is an 8-bit register for capturing the XBAR bus master number of the last, properly-enabled ECC event in the flash memory. Depending on the state of the ECSM_ECR, an ECC event in the flash causes the address, attributes and data associated with the access to be loaded into the ECSM_FEAR, ECSM_FEMR, ECSM_FEAT and ECSM_FEDR registers, and the appropriate flag (FNCE) in the ECSM_ESR to be asserted.

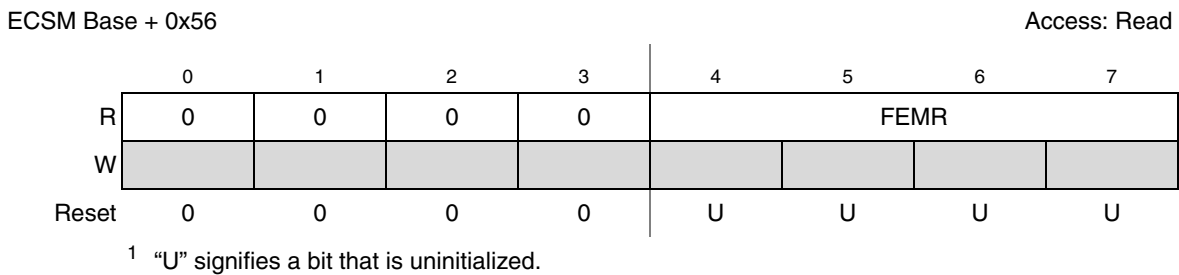


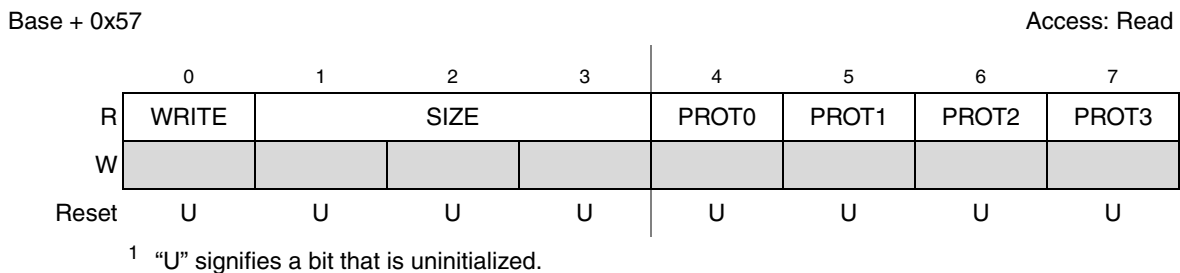
Figure 8-5. Flash ECC Master Number Register (ECSM_FEMR)

Table 8-7. ECSM_FEMR Field Descriptions

Field	Description
0–3	Reserved.
4–7 FEMR [0:3]	Flash ECC master number. Contains the XBAR bus master number of the faulting access of the last, properly-enabled flash ECC event. The reset value of this field is undefined.

8.2.1.8 Flash ECC Attributes Register (ECSM_FEAT)

The ECSM_FEAT is an 8-bit register for capturing the XBAR bus master attributes of the last, properly-enabled ECC event in the flash memory. Depending on the state of the ECSM_ECR register, an ECC event in the flash causes the address, attributes, and data associated with the access to be loaded into the ECSM_FEAR, ECSM_FEMR, ECSM_FEAT, and ECSM_FEDRs, and the appropriate flag (FNCE) in the ECSM_ESR to be asserted.


Figure 8-6. Flash ECC Attributes Register (ECSM_FEAT)
Table 8-8. ECSM_FEAT Field Descriptions

Field	Description
0 WRITE	Write. The reset value of this field is undefined. 0 System bus read access 1 System bus write access
1–3 SIZE [0:2]	Size. The reset value of this field is undefined. 000 8-bit System bus access 001 16-bit System bus access 010 32-bit System bus access 011 64-bit System bus access 1xx Reserved
4 PROT0	Protection: cache. The reset value of this field is undefined. 0 Non-cacheable 1 Cacheable
5 PROT1	Protection: buffer. The reset value of this field is undefined. 0 Non-bufferable 1 Bufferable

Table 8-8. ECSM_FEAT Field Descriptions (continued)

Field	Description
6 PROT2	Protection: mode. The reset value of this field is undefined. 0 User mode 1 Supervisor mode
7 PROT3	Protection: type. The reset value of this field is undefined. 0 I-Fetch 1 Data

8.2.1.9 Flash ECC Data High Register (ECSM_FEDRH)

The ECSM_FEDRH and ECSM_FEDRL are 32-bit registers for capturing the data associated with the last, properly-enabled ECC event in the flash memory. Depending on the state of the ECSM_ECR, an ECC event in the flash causes the address, attributes and data associated with the access to be loaded into the ECSM_FEAR, ECSM_FEMR, ECSM_FEAT and ECSM_FEDRs, and the appropriate flag (FNCE) in the ECSM_ESR to be asserted.

The data captured on a multi-bit non-correctable ECC error is undefined.

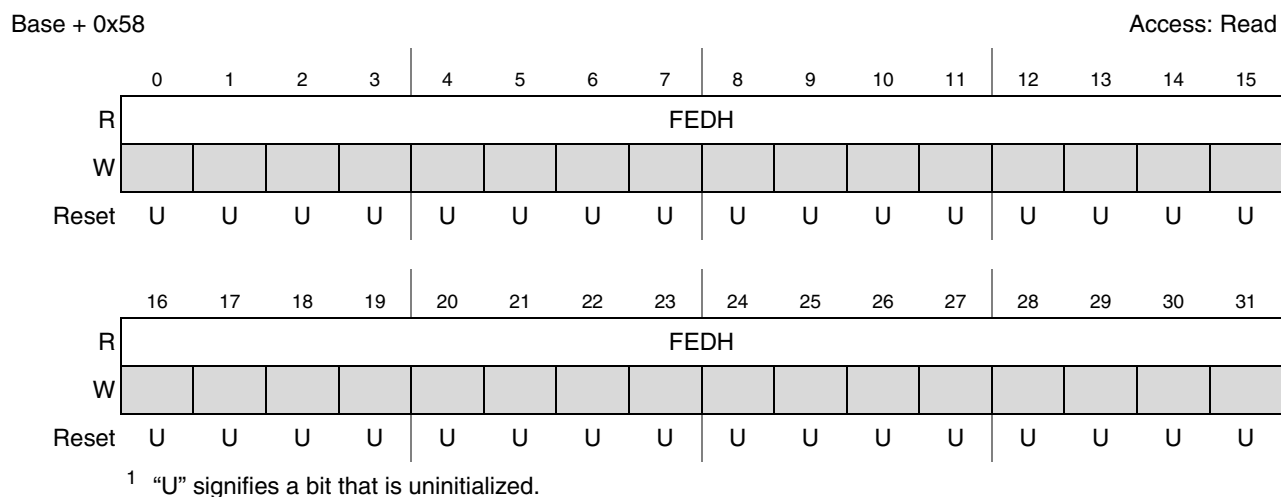


Figure 8-7. Flash ECC Data High Register (ECSM_FEDRH)

Table 8-9. ECSM_FEDRH Field Descriptions

Field	Description
0–31 FEDH [0:31]	Flash ECC data. Contains the data associated with the faulting access of the last, properly-enabled flash ECC event. The register contains the data value taken directly from the data bus. The reset value of this field is undefined.

8.2.1.10 Flash ECC Data Low Registers (ECSM_FEDRL)

The ECSM_FEDRH and ECSM_FEDRL are 32-bit registers for capturing the data associated with the last, properly-enabled ECC event in the flash memory. Depending on the state of the ECSM_ECR, an ECC event in the flash causes the address, attributes and data associated with the access to be loaded into the

ECSM_FEAR, ECSM_FEMR, ECSM_FEAT and ECSM_FEDRs, and the appropriate flag (FNCE) in the ECSM_ESR to be asserted.

The data captured on a multi-bit non-correctable ECC error is undefined.

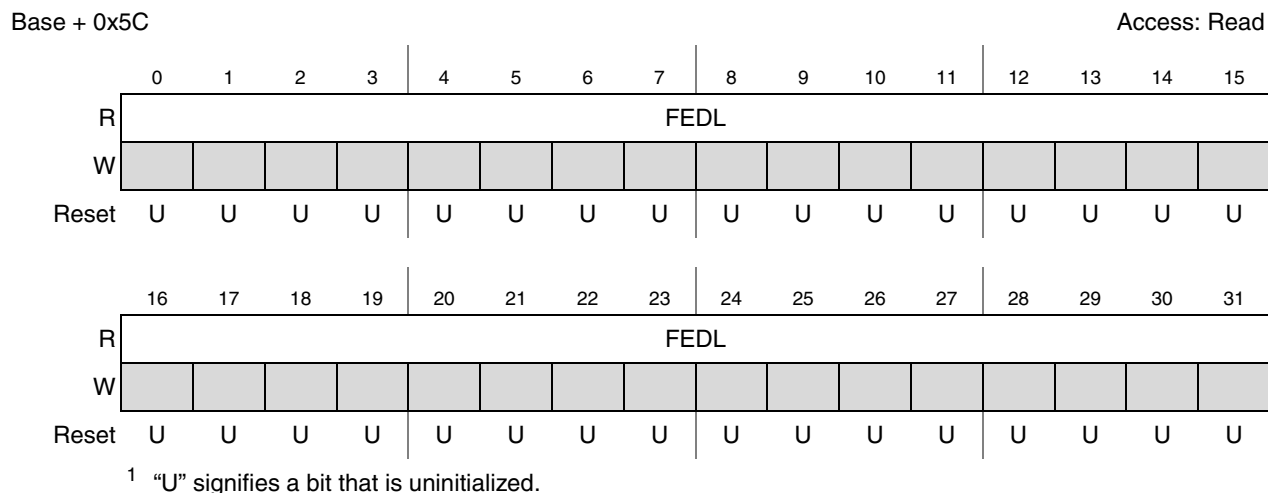



Figure 8-8. Flash ECC Data Low Register (ECSM_FEDRL)

Table 8-10. ECSM_FEDRL Field Descriptions

Field	Description
0–31 FEDL [0:31]	Flash ECC data. Contains the data associated with the faulting access of the last, properly-enabled flash ECC event. The register contains the data value taken directly from the data bus. The reset value of this field is undefined.

8.2.1.11 RAM ECC Address Register (ECSM_REAR)

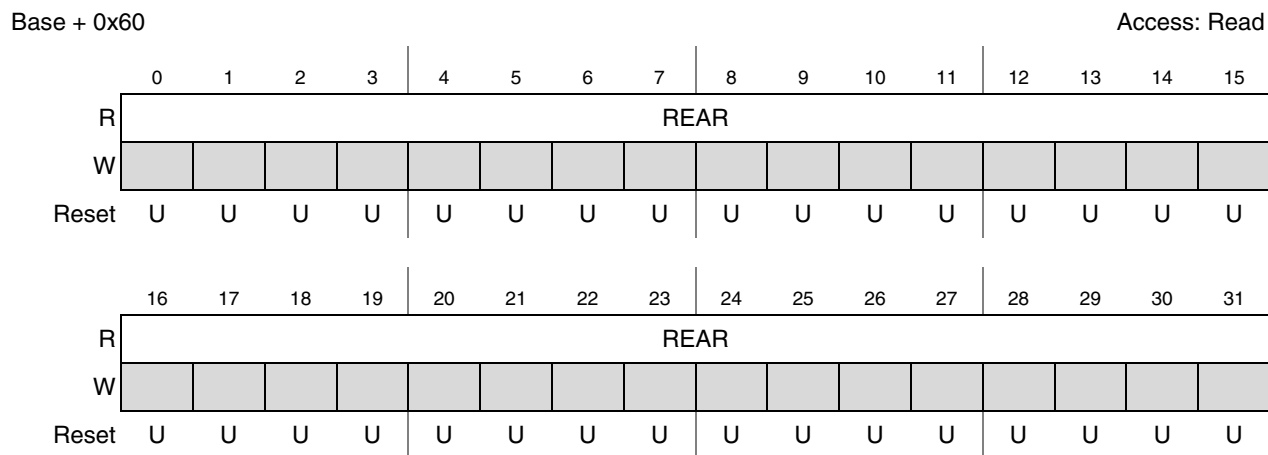The ECSM_REAR is a 32-bit register for capturing the address of the last, properly-enabled ECC event in the RAM memory. Depending on the state of the ECSM_ECR, an ECC event in the RAM causes the address, attributes and data associated with the access to be loaded into the ECSM_REAR, ECSM_REMR, ECSM_REAT and ECSM_REDRs, and the appropriate flag (RNCE) in the ECSM_ESR to be asserted.



¹ “U” signifies a bit that is uninitialized.


Figure 8-9. RAM ECC Address Register (ECSM_REAR)

Table 8-11. ECSM_REAR Field Descriptions

Field	Description
0–31 REAR [0:31]	RAM ECC address. Contains the faulting access address of the last, properly-enabled RAM ECC event. The reset value of this field is undefined.

8.2.1.12 RAM ECC Master Number Register (ECSM_REMR)

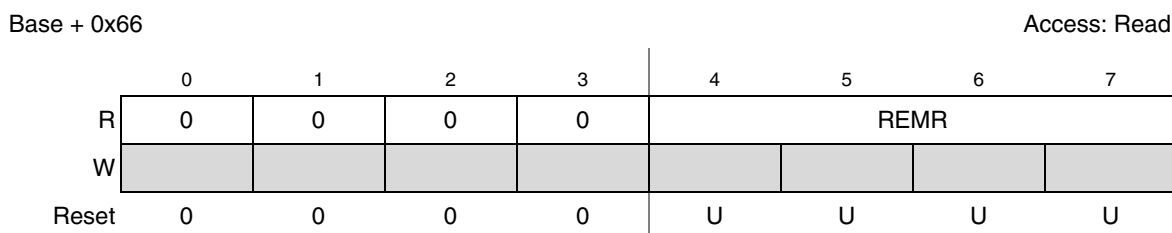The REMR is an 8-bit register for capturing the XBAR bus master number of the last, properly-enabled ECC event in the RAM memory. Depending on the state of the ECSM_ECR, an ECC event in the RAM causes the address, attributes and data associated with the access to be loaded into the ECSM_REAR, ECSM_REMR, ECSM_REAT and ECSM_REDRs, and the appropriate flag (RNCE) in the ECSM_ESR to be asserted.



¹ “U” signifies a bit that is uninitialized.

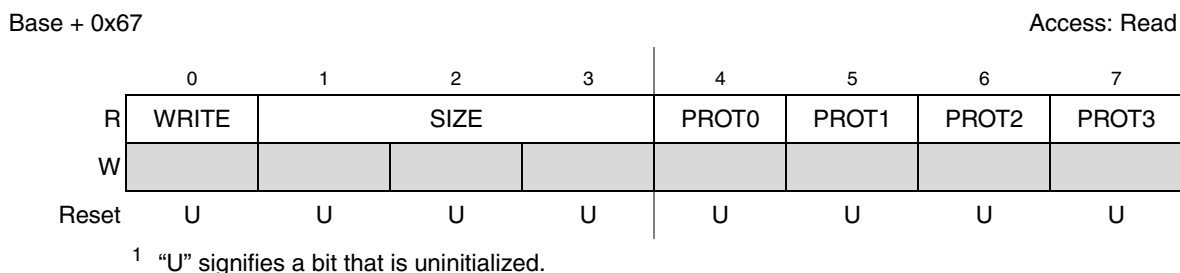
Figure 8-10. RAM ECC Master Number Register (ECSM_REMR)

Table 8-12. ECSM_REMR Field Descriptions

Field	Description
0–3	Reserved.
4-7 REMR [0:3]	RAM ECC master number. Contains the XBAR bus master number of the faulting access of the last, properly-enabled RAM ECC event. The reset value of this field is undefined.

8.2.1.13 RAM ECC Attributes Register (ECSM_REAT)

The ECSM_REAT is an 8-bit register for capturing the XBAR bus master attributes of the last, properly-enabled ECC event in the RAM memory. Depending on the state of the ECSM_ECR, an ECC event in the RAM causes the address, attributes and data associated with the access to be loaded into the ECSM_REAR, ECSM_REMR, ECSM_REAT and ECSM_REDRs, and the appropriate flag (RNCE) in the ECSM_ESR to be asserted.


Figure 8-11. RAM ECC Attributes Register (ECSM_REAT)
Table 8-13. ECSM_REAT Field Descriptions

Field	Description
0 WRITE	Write. The reset value of this field is undefined. 0 System bus read access 1 System bus write access
1–3 SIZE [0:2]	Size. The reset value of this field is undefined. 000 8-bit system bus access 001 16-bit system bus access 010 32-bit system bus access 011 64-bit system bus access 1xx Reserved
4 PROT0	Protection: cache. The reset value of this field is undefined. 0 Non-cacheable 1 Cacheable
5 PROT1	Protection: buffer. The reset value of this field is undefined. 0 Non-bufferable 1 Bufferable

Table 8-13. ECSM_REAT Field Descriptions (continued)

Field	Description
6 PROT2	Protection: mode. The reset value of this field is undefined. 0 User mode 1 Supervisor mode
7 PROT3	Protection: type. The reset value of this field is undefined. 0 I-Fetch 1 Data

8.2.1.14 RAM ECC Data High Register (ECSM_REDRH)

The ECSM_REDRH and ECSM_REDRL are 32-bit registers for capturing the data associated with the last, properly-enabled ECC event in the RAM memory. Depending on the state of the ECSM_ECR, an ECC event in the RAM causes the address, attributes and data associated with the access to be loaded into the ECSM_REAR, ECSM_REMR, ECSM_REAT, and ECSM_REDRH and ECSM_REDRL, and the appropriate flag (RFNCE) in the ECSM_ESR to be asserted.

The data captured on a multi-bit non-correctable ECC error is undefined.

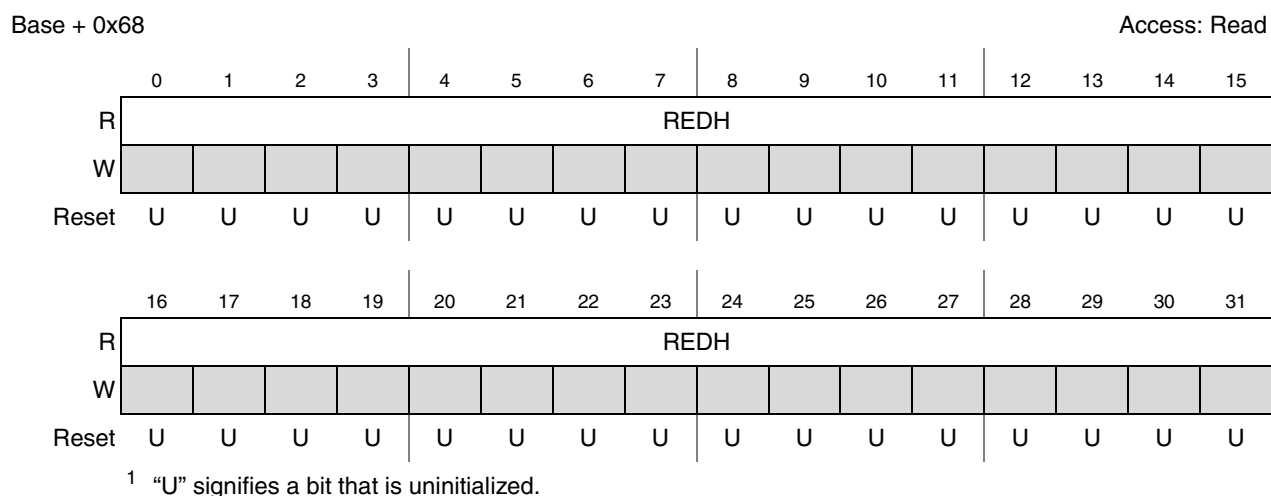


Figure 8-12. RAM ECC Data High Register (ECSM_REDRH)

Table 8-14. ECSM_REDRH Field Descriptions

Field	Description
0–31 REDH [0:31]	RAM ECC data. Contains the data associated with the faulting access of the last, properly-enabled RAM ECC event. The register contains the data value taken directly from the data bus. The reset value of this field is undefined.

8.2.1.15 RAM ECC Data Low Registers (ECSM_REDRL)

The ECSM_REDRH and ECSM_REDRL are 32-bit registers for capturing the data associated with the last, properly-enabled ECC event in the RAM memory. Depending on the state of the ECSM_ECR, an ECC event in the RAM causes the address, attributes and data associated with the access to be loaded into

the ECSM_REAR, ECSM_REMR, ECSM_REAT, ECSM_REDRH, and ECSM_REDRL, and the appropriate flag (RFNCE) in the ECSM_ESR to be asserted.

The data captured on a multi-bit non-correctable ECC error is undefined.

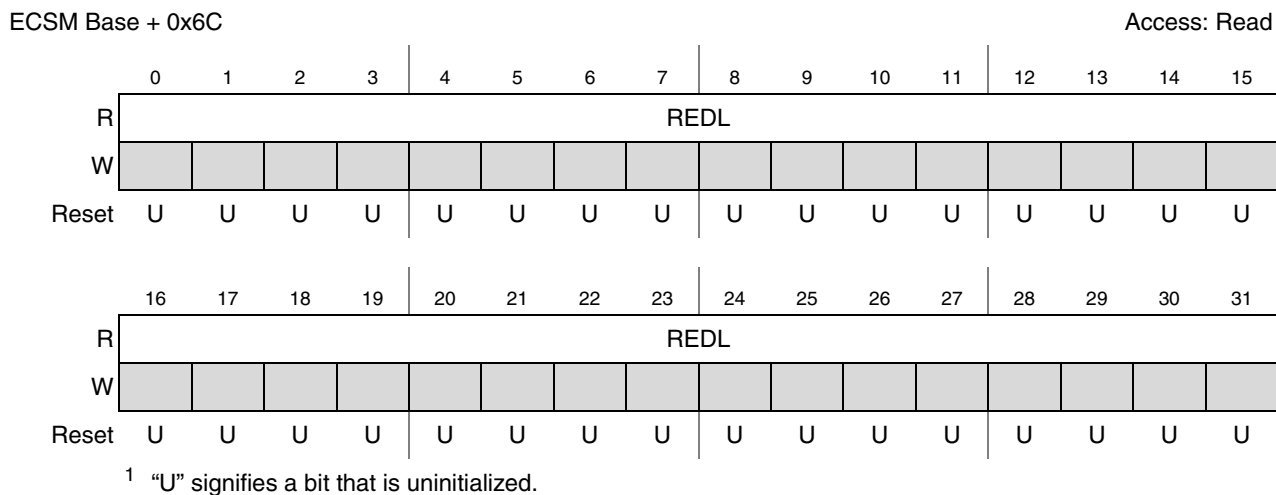


Figure 8-13. RAM ECC Data Low Register (ECSM_REDRL)

Table 8-15. ECSM_REDRL Field Descriptions

Field	Description
0–31 REDL [0:31]	RAM ECC data. Contains the data associated with the faulting access of the last, properly-enabled RAM ECC event. The register contains the data value taken directly from the data bus. The reset value of this field is undefined.

8.3 Initialization/Application Information

In order to use the ECC mechanism for internal SRAM accesses, it is essential for the ECC check bits to be initialized after power on. See [Section 8.3, “Initialization/Application Information.”](#)

All non-correctable ECC errors cause a data storage interrupt (IVOR2) regardless of whether non-correctable reporting is enabled. A data storage interrupt handler can determine:

- The destination asserted an error, the ESR[XTE] bit will be set.
- The address where the error occurred, using the data exception address register (DEAR).

However, details of the ECC error are not reported unless non-correctable reporting is enabled by setting bits ERNCR and EFNCR in the ECSM_ECR. When these bits are set and a non-correctable ECC error occurs, error information is recorded in other ECSM registers and an interrupt request is generated on vector 9 of the INTC. If properly enabled, this INTC vector 9 can cause an external interrupt (IVOR4) along with the data storage interrupt (IVOR2).

To avoid the external interrupt (IVOR4) being generated, the application enables non-correctable reporting in the ECSM, but does not enable that its interrupt be recognized. The INTC_PSR[PRI] value for the ECC error interrupt request is left at its reset value of 0. The 0 priority level is the lowest priority and is never recognized, resulting in only the data storage interrupt (IVOR2) being taken.

8.4 Document Revision History

Table 8-16. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	This is the first public version of this document.

Chapter 9

Enhanced Direct Memory Access (eDMA)

9.1 Introduction

This chapter describes the enhanced Direct Memory Access (eDMA) Controller, a second-generation module capable of performing complex data transfers with minimal intervention from a host processor.

9.1.1 Overview

The enhanced direct memory access (eDMA) controller hardware microarchitecture includes a DMA engine which performs source and destination address calculations, and the actual data movement operations, along with SRAM-based local memory containing the transfer control descriptors (TCD) for the channels.

[Figure 9-1](#) is a block diagram of the eDMA module.

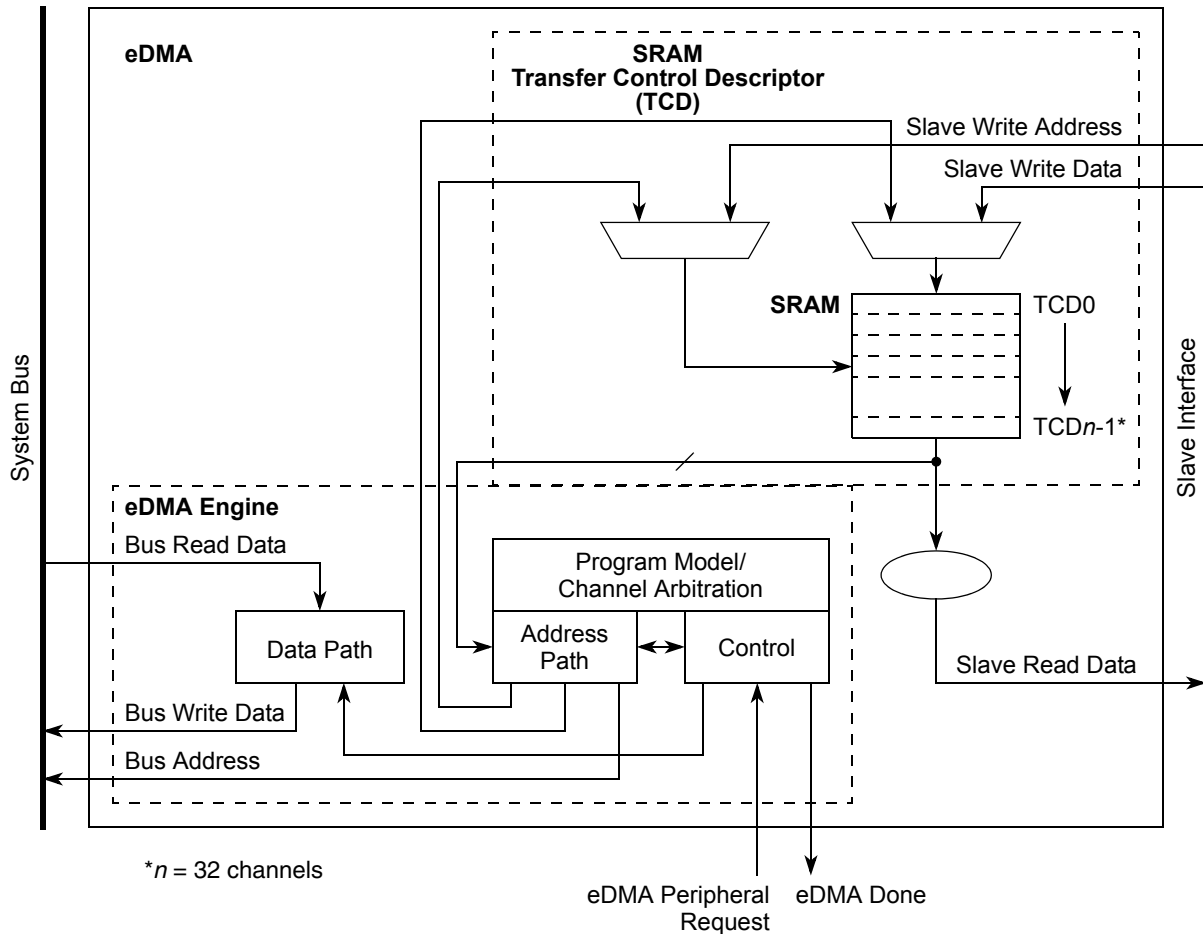


Figure 9-1. eDMA Block Diagram

9.1.2 Features

The eDMA is a highly-programmable data transfer engine, which has been optimized to minimize the required intervention from the host processor. It is intended for use in applications where the data size to be transferred is statically known, and is *not* defined within the data packet itself. The eDMA module features:

- All data movement via dual-address transfers: read from source, write to destination
 - Programmable source, destination addresses, transfer size, plus support for enhanced addressing modes
- 32-channel implementation performs complex data transfers with minimal intervention from a host processor
 - 32 bytes of data registers, used as temporary storage to support burst transfers (refer to SSIZE bit)
 - Connections to the crossbar switch for bus mastering the data movement
- Transfer control descriptor (TCD) organized to support two-deep, nested transfer operations
 - 32-byte TCD per channel stored in local memory

- An inner data transfer loop defined by a minor byte transfer count
- An outer data transfer loop defined by a major iteration count
- Channel activation via one of three methods:
 - Explicit software initiation
 - Initiation via a channel-to-channel linking mechanism for continual transfers
 - Peripheral-paced hardware requests (one per channel)

NOTE

For all three methods, one activation per execution of the minor loop is required

- Support for fixed-priority and round-robin channel arbitration
- Channel completion reported via optional interrupt requests
 - One interrupt per channel, optionally asserted at completion of major iteration count
 - Error terminations are enabled per channel, and logically summed together to form a single error interrupt.
- Support for scatter/gather DMA processing
- Any channel can be programmed so that it can be suspended by a higher priority channel's activation, before completion of a minor loop.

Throughout this chapter, n is used to reference the channel number. Additionally, data sizes are defined as byte (8-bit), half-word (16-bit), word (32-bit) and double-word (64-bit).

9.1.3 Modes of Operation

9.1.3.1 Normal Mode

In normal mode, the eDMA is used to transfer data between a source and a destination. The source and destination can be a memory block or an I/O block capable of operation with the eDMA.

9.1.3.2 Debug Mode

If enabled by `EDMA_CR[EDBG]` and the CPU enters debug mode, the eDMA will not honor any service requests when the debug input signal is asserted. If the signal is asserted during transfer of a block of data described by a minor loop in the current active channel's TCD, the eDMA will continue operation until completion of the minor loop.

9.2 Memory Map and Register Definition

9.2.1 Memory Map

The eDMA's programming model is partitioned into two regions: the first region defines a number of registers providing control functions, while the second region corresponds to the local transfer control descriptor memory.

Table 9-1 is a 32-bit view of the eDMA’s memory map.

Table 9-1. eDMA 32-bit Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xFFFF4_4000)	EDMA_CR	eDMA control register	32
Base + 0x0004	EDMA_ESR	eDMA error status register	32
Base + 0x0008	—	Reserved	—
Base + 0x000C	EDMA_ERQRL	eDMA enable request low register	32
Base + 0x0010	—	Reserved	—
Base + 0x0014	EDMA_EEIRL	eDMA enable error interrupt low register	32
Base + 0x0018	EDMA_SERQR	eDMA set enable request register	8
Base + 0x0019	EDMA_CERQR	eDMA clear enable request register	8
Base + 0x001A	EDMA_SEEIR	eDMA set enable error interrupt register	8
Base + 0x001B	EDMA_CEEIR	eDMA clear enable error interrupt register	8
Base + 0x001C	EDMA_CIRQR	eDMA clear interrupt request register	8
Base + 0x001D	EDMA_CER	eDMA clear error register	8
Base + 0x001E	EDMA_SSBRR	eDMA set start bit register	8
Base + 0x001F	EDMA_CDSBR	eDMA clear done status bit register	8
Base + 0x0020	—	Reserved	—
Base + 0x0024	EDMA_IRQRL	eDMA interrupt request low register	32
Base + 0x0028	—	Reserved	—
Base + 0x002C	EDMA_ERL	eDMA error low register	32
Base + 0x0030– Base + 0x00FF	—	Reserved	—
Base + 0x0100	EDMA_CPR0	eDMA channel 0 priority register	8
Base + 0x0101	EDMA_CPR1	eDMA channel 1 priority register	8
Base + 0x0102	EDMA_CPR2	eDMA channel 2 priority register	8
Base + 0x0103	EDMA_CPR3	eDMA channel 3 priority register	8
Base + 0x0104	EDMA_CPR4	eDMA channel 4 priority register	8
Base + 0x0105	EDMA_CPR5	eDMA channel 5 priority register	8
Base + 0x0106	EDMA_CPR6	eDMA channel 6 priority register	8
Base + 0x0107	EDMA_CPR7	eDMA channel 7 priority register	8
Base + 0x0108	EDMA_CPR8	eDMA channel 8 priority register	8
Base + 0x0109	EDMA_CPR9	eDMA channel 9 priority register	8
Base + 0x010A	EDMA_CPR10	eDMA channel 10 priority register	8
Base + 0x010B	EDMA_CPR11	eDMA channel 11 priority register	8

Table 9-1. eDMA 32-bit Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x010C	EDMA_CPR12	eDMA channel 12 priority register	8
Base + 0x010D	EDMA_CPR13	eDMA channel 13 priority register	8
Base + 0x010E	EDMA_CPR14	eDMA channel 14 priority register	8
Base + 0x010F	EDMA_CPR15	eDMA channel 15 priority register	8
Base + 0x0110	EDMA_CPR16	eDMA channel 16 priority register	8
Base + 0x0111	EDMA_CPR17	eDMA channel 17 priority register	8
Base + 0x0112	EDMA_CPR18	eDMA channel 18 priority register	8
Base + 0x0113	EDMA_CPR19	eDMA channel 19 priority register	8
Base + 0x0114	EDMA_CPR20	eDMA channel 20 priority register	8
Base + 0x0115	EDMA_CPR21	eDMA channel 21 priority register	8
Base + 0x0116	EDMA_CPR22	eDMA channel 22 priority register	8
Base + 0x0117	EDMA_CPR23	eDMA channel 23 priority register	8
Base + 0x0118	EDMA_CPR24	eDMA channel 24 priority register	8
Base + 0x0119	EDMA_CPR25	eDMA channel 25 priority register	8
Base + 0x011A	EDMA_CPR26	eDMA channel 26 priority register	8
Base + 0x011B	EDMA_CPR27	eDMA channel 27 priority register	8
Base + 0x011C	EDMA_CPR28	eDMA channel 28 priority register	8
Base + 0x011D	EDMA_CPR29	eDMA channel 29 priority register	8
Base + 0x011E	EDMA_CPR30	eDMA channel 30 priority register	8
Base + 0x011F	EDMA_CPR31	eDMA channel 31 priority register	8
Base + 0x0120– Base + 0x0FFF	—	Reserved	—
Base + 0x1000	TCD00	eDMA transfer control descriptor 00	256
Base + 0x1020	TCD01	eDMA transfer control descriptor 01	256
Base + 0x1040	TCD02	eDMA transfer control descriptor 02	256
Base + 0x1060	TCD03	eDMA transfer control descriptor 03	256
Base + 0x1080	TCD04	eDMA transfer control descriptor 04	256
Base + 0x10A0	TCD05	eDMA transfer control descriptor 05	256
Base + 0x10C0	TCD06	eDMA transfer control descriptor 06	256
Base + 0x10E0	TCD07	eDMA transfer control descriptor 07	256
Base + 0x1100	TCD08	eDMA transfer control descriptor 08	256
Base + 0x1120	TCD09	eDMA transfer control descriptor 09	256
Base + 0x1140	TCD10	eDMA transfer control descriptor 10	256

Table 9-1. eDMA 32-bit Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x1160	TCD11	eDMA transfer control descriptor 11	256
Base + 0x1180	TCD12	eDMA transfer control descriptor 12	256
Base + 0x11A0	TCD13	eDMA transfer control descriptor 13	256
Base + 0x11C0	TCD14	eDMA transfer control descriptor 14	256
Base + 0x11E0	TCD15	eDMA transfer control descriptor 15	256
Base + 0x1200	TCD16	eDMA transfer control descriptor 16	256
Base + 0x1220	TCD17	eDMA transfer control descriptor 17	256
Base + 0x1240	TCD18	eDMA transfer control descriptor 18	256
Base + 0x1260	TCD19	eDMA transfer control descriptor 19	256
Base + 0x1280	TCD20	eDMA transfer control descriptor 20	256
Base + 0x12A0	TCD21	eDMA transfer control descriptor 21	256
Base + 0x12C0	TCD22	eDMA transfer control descriptor 22	256
Base + 0x12E0	TCD23	eDMA transfer control descriptor 23	256
Base + 0x1300	TCD24	eDMA transfer control descriptor 24	256
Base + 0x1320	TCD25	eDMA transfer control descriptor 25	256
Base + 0x1340	TCD26	eDMA transfer control descriptor 26	256
Base + 0x1360	TCD27	eDMA transfer control descriptor 27	256
Base + 0x1380	TCD28	eDMA transfer control descriptor 28	256
Base + 0x13A0	TCD29	eDMA transfer control descriptor 29	256
Base + 0x13C0	TCD30	eDMA transfer control descriptor 30	256
Base + 0x13E0	TCD31	eDMA transfer control descriptor 31	256
Base + 0x1400– Base + 0x17FC	—	Reserved	—

9.2.2 Register Descriptions

Reading reserved bits in a register will return the value of zero. Writes to reserved bits in a register will be ignored. Reading or writing to a reserved memory location will generate a bus error.

Many of the control registers have a bit width that matches the number of channels implemented in the module, or 32-bits in size.

9.2.2.1 eDMA Control Register (EDMA_CR)

The 32-bit EDMA_CR defines the basic operating configuration of the eDMA.

The eDMA arbitrates channel service requests in two groups (0, 1) of 16 channels each. Group 0 contains channels 0-15, and group 1 contains channels 16-31.

Arbitration within a group can be configured to use either a fixed priority or a round robin. In fixed priority arbitration, the highest priority channel requesting service is selected to execute. The priorities are assigned by the channel priority registers (see Section 9.2.2.15, “eDMA Channel n Priority Registers (EDMA_CPRn)”). In round robin arbitration mode, the channel priorities are ignored and the channels within each group are cycled through, from channel 15 down to channel 0, without regard to priority.

The group priorities operate in a similar fashion. In group fixed priority arbitration mode, channel service requests in the highest priority group are executed first where priority level 1 is the highest and priority level 0 is the lowest. The group priorities are assigned in the GRPnPRI fields of the eDMA control register (EDMA_CR). All group priorities must have unique values prior to any channel service requests occur, otherwise a configuration error will be reported. In group round robin mode, the group priorities are ignored and the groups are cycled through, from group 1 down to group 0, without regard to priority.

Address: Base + 0x0000 Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	GRP1 PRI	0	GRP0 PRI	0	0	0	0	ERGA	ERCA	EDBG	0
W																
Reset	1	1	1	0	0	1	0	0	0	0	0	0	0	0	0	0

Figure 9-2. eDMA Control Register (EDMA_CR)

Table 9-2. EDMA_CR Field Descriptions

Field	Description
0–20	Reserved.
21 GRP1PRI	Channel group 1 priority. Group 1 priority level when fixed priority group arbitration is enabled.
22	Reserved.
23 GRP0PRI	Channel group 0 priority. Group 0 priority level when fixed priority group arbitration is enabled.
24–27	Reserved.
28 ERGA	Enable round robin group arbitration. 0 Fixed priority arbitration is used for selection among the groups. 1 Round robin arbitration is used for selection among the groups.
29 ERCA	Enable round robin channel arbitration. 0 Fixed priority arbitration is used for channel selection within each group. 1 Round robin arbitration is used for channel selection within each group.

Table 9-2. EDMA_CR Field Descriptions (continued)

Field	Description
30 EDBG	Enable debug. 0 The assertion of the system debug control input is ignored. 1 The assertion of the system debug control input causes the eDMA to stall the start of a new channel. Executing channels are allowed to complete. Channel execution will resume when either the system debug control input is negated or the EDBG bit is cleared.
31	Reserved.

9.2.2.2 eDMA Error Status Register (EDMA_ESR)

The EDMA_ESR provides information concerning the last recorded channel error. Channel errors can be caused by a configuration error (an illegal setting in the transfer control descriptor or an illegal priority register setting in fixed arbitration mode) or an error termination to a bus master read or write cycle.

A configuration error is caused when the starting source or destination address, source or destination offsets, minor loop byte count, and the transfer size represent an inconsistent state. The addresses and offsets must be aligned on 0-modulo-transfer_size boundaries, and the minor loop byte count must be a multiple of the source and destination transfer sizes. All source reads and destination writes must be configured to the natural boundary of the programmed transfer size respectively.

In fixed arbitration mode, a configuration error is caused by any two channel priorities being equal within a group, or any group priority levels being equal among the groups. For either type of priority configuration error, the ERRCHN field is undefined. All channel priority levels within a group must be unique and all group priority levels among the groups must be unique when fixed arbitration mode is enabled.

If a scatter/gather operation is enabled upon channel completion, a configuration error is reported if the scatter/gather address (DLAST_SGA) is not aligned on a 32-byte boundary. If minor loop channel linking is enabled upon channel completion, a configuration error is reported when the link is attempted if the TCD.CITER.E_LINK bit does not equal the TCD.BITER.E_LINK bit. All configuration error conditions except scatter/gather and minor loop link error are reported as the channel is activated and assert an error interrupt request if enabled. When properly enabled, a scatter/gather configuration error is reported when the scatter/gather operation begins at major loop completion. A minor loop channel link configuration error is reported when the link operation is serviced at minor loop completion.

If a system bus read or write is terminated with an error, the data transfer is immediately stopped and the appropriate bus error flag is set. In this case, the state of the channel's transfer control descriptor is updated by the eDMA engine with the current source address, destination address, and minor loop byte count at the point of the fault. If a bus error occurs on the last read prior to beginning the write sequence, the write will execute using the data captured during the bus error. If a bus error occurs on the last write prior to switching to the next read sequence, the read sequence will execute before the channel is terminated due to the destination bus error.

The occurrence of any type of error causes the eDMA engine to stop the active channel, and the appropriate channel bit in the eDMA error register to be asserted. At the same time, the details of the error condition are loaded into the EDMA_ESR. The major loop complete indicators, setting the transfer control

descriptor DONE flag and the possible assertion of an interrupt request, are *not* affected when an error is detected. Once the error status has been updated, the eDMA engine continues to operate by servicing the next appropriate channel. A channel that experiences an error condition is not automatically disabled. If a channel is terminated by an error and then issues another service request before the error is fixed, that channel will execute and terminate with the same error condition.

Address: Base + 0x0004

Access: User read-only

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	VLD	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	GPE	CPE	ERRCHN				SAE	SOE	DAE	DOE	NCE	SGE	SBE	DBE		
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 9-3. eDMA Error Status Register (EDMA_ESR)

Table 9-3. EDMA_ESR Field Descriptions

Field	Description
0 VLD	Logical OR of all EDMA_ERH and EDMA_ERL status bits. 0 No EDMA_ER bits are set. 1 At least one EDMA_ER bit is set indicating a valid error exists that has not been cleared.
1–15	Reserved.
16 GPE	Group priority error. 0 No group priority error. 1 The last recorded error was a configuration error among the group priorities indicating not all group priorities are unique.
17 CPE	Channel priority error. 0 No channel priority error. 1 The last recorded error was a configuration error in the channel priorities within a group, indicating not all channel priorities within a group are unique.
18–23 ERRCHN[0:5]	Error channel number. Channel number of the last recorded error (excluding GPE and CPE errors). Note: Do not rely on the number in the ERRCHN field for group and channel priority errors. Group and channel priority errors need to be resolved by inspection. The application code must interrogate the priority registers to find groups or channels with duplicate priority level.
24 SAE	Source address error. 0 No source address configuration error. 1 The last recorded error was a configuration error detected in the TCD.SADDR field, indicating TCD.SADDR is inconsistent with TCD.SSIZE.
25 SOE	Source offset error. 0 No source offset configuration error. 1 The last recorded error was a configuration error detected in the TCD.SOFF field, indicating TCD.SOFF is inconsistent with TCD.SSIZE.

Table 9-3. EDMA_ESR Field Descriptions (continued)

Field	Description
26 DAE	Destination address error. 0 No destination address configuration error. 1 The last recorded error was a configuration error detected in the TCD.DADDR field, indicating TCD.DADDR is inconsistent with TCD.DSIZE.
27 DOE	Destination offset error. 0 No destination offset configuration error. 1 The last recorded error was a configuration error detected in the TCD.DOFF field, indicating TCD.DOFF is inconsistent with TCD.DSIZE.
28 NCE	NBYTES/CITER configuration error. 0 No NBYTES/CITER configuration error. 1 The last recorded error was a configuration error detected in the TCD.NBYTES or TCD.CITER fields, indicating the following conditions exist: <ul style="list-style-type: none"> • TCD.NBYTES is not a multiple of TCD.SSIZE and TCD.DSIZE, or • TCD.CITER is equal to zero, or • TCD.CITER.E_LINK is not equal to TCD.BITER.E_LINK.
29 SGE	Scatter/gather configuration error. 0 No scatter/gather configuration error. 1 The last recorded error was a configuration error detected in the TCD.DLAST_SGA field, indicating TCD.DLAST_SGA is not on a 32-byte boundary. This field is checked at the beginning of a scatter/gather operation after major loop completion if TCD.E_SG is enabled.
30 SBE	Source bus error. 0 No source bus error. 1 The last recorded error was a bus error on a source read.
31 DBE	Destination bus error. 0 No destination bus error. 1 The last recorded error was a bus error on a destination write.

9.2.2.3 eDMA Enable Request Register (EDMA_ERQRL)

The EDMA_ERQRL provides a bit map for the 32 implemented channels to enable the request signal for each channel. EDMA_ERQRL maps to channels 31-0.

The state of any given channel enable is directly affected by writes to this register; the state is also affected by writes to the EDMA_SERQR and EDMA_CERQR. The EDMA_CERQR and EDMA_SERQR are provided so that the request enable for a *single* channel can easily be modified without the need to perform a read-modify-write sequence to the EDMA_ERQRL.

Both the DMA request input signal and this enable request flag must be asserted before a channel's hardware service request is accepted. The state of the eDMA enable request flag does *not* affect a channel service request made explicitly through software or a linked channel request.

Address: Base + 0x000C

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ
W	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ	ERQ
W	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 9-4. eDMA Enable Request Low Register (EDMA_ERQRL)

Table 9-4. EDMA_ERQRL Field Descriptions

Field	Description
0–31 ERQ _n	Enable DMA hardware service request <i>n</i> . 0 The DMA request signal for channel <i>n</i> is disabled. 1 The DMA request signal for channel <i>n</i> is enabled.

As a given channel completes the processing of its major iteration count, there is a flag in the transfer control descriptor that may affect the ending state of the EDMA_ERQR bit for that channel. If the TCD.D_REQ bit is set, then the corresponding EDMA_ERQR bit is cleared after the major loop is complete, disabling the DMA hardware request. Otherwise if the D_REQ bit is cleared, the state of the EDMA_ERQR bit is unaffected.

9.2.2.4 eDMA Enable Error Interrupt Register (EDMA_EEIRL)

The EDMA_EEIRL provides a bit map for the 32 channels to enable the error interrupt signal for each channel. EDMA_EEIRL maps to channels 31-0.

The state of any given channel’s error interrupt enable is directly affected by writes to these registers; it is also affected by writes to the EDMA_SEEIR and EDMA_CEEIR. The EDMA_SEEIR and EDMA_CEEIR are provided so that the error interrupt enable for a *single* channel can easily be modified without the need to perform a read-modify-write sequence to the EDMA_EEIRL.

Both the DMA error indicator and this error interrupt enable flag must be asserted before an error interrupt request for a given channel is asserted.

Address: Base + 0x0014

Access: User read/write

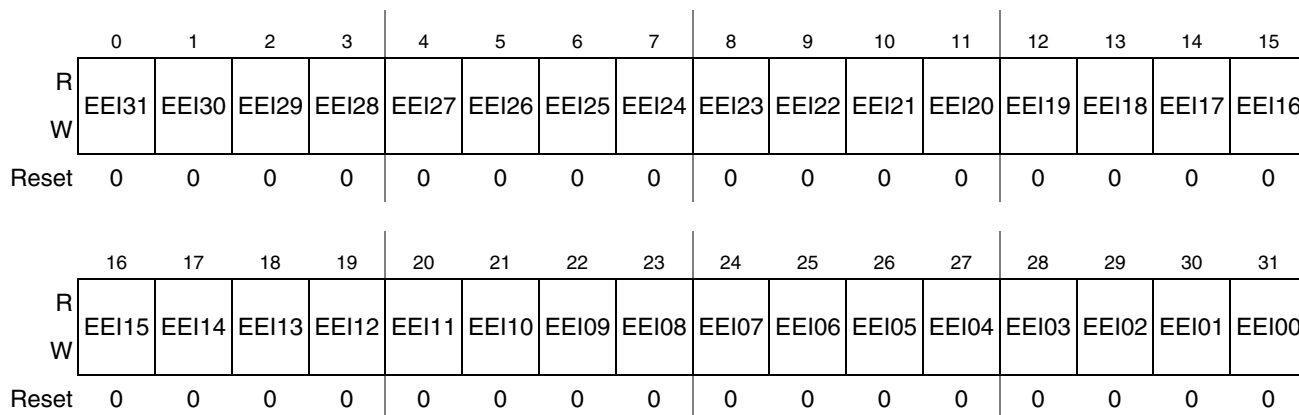


Figure 9-5. eDMA Enable Error Interrupt Low Register (EDMA_EEIRL)

Table 9-5. EDMA_EEIRL Field Descriptions

Field	Description
0–31 EEIn	Enable error interrupt <i>n</i> . 0 The error signal for channel <i>n</i> does not generate an error interrupt. 1 The assertion of the error signal for channel <i>n</i> generate an error interrupt request.

9.2.2.5 eDMA Set Enable Request Register (EDMA_SERQR)

The EDMA_SERQR provides a simple memory-mapped mechanism to set a given bit in the EDMA_ERQRL to enable the DMA request for a given channel. The data value on a register write causes the corresponding bit in the EDMA_ERQRL to be set. Setting bit 1 (SERQ_n) provides a global set function, forcing the entire contents of EDMA_ERQRL to be asserted. Reads of this register return all zeroes.

Address: Base + 0x0018

Access: User write-only

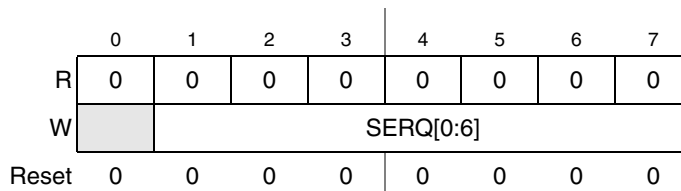


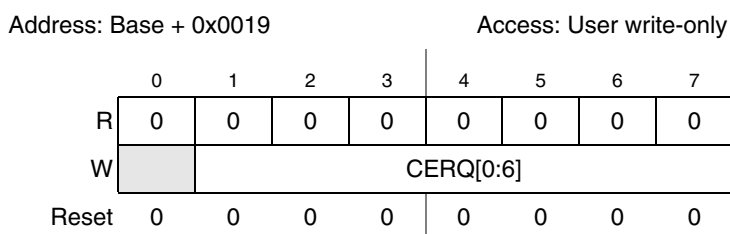
Figure 9-6. eDMA Set Enable Request Register (EDMA_SERQR)

Table 9-6. EDMA_SERQR Field Descriptions

Field	Descriptions
0	Reserved.
1–7 SERQ[0:6]	Set enable request. 0–31 Set corresponding bit in EDMA_ERQRL 32–63 Reserved 64–127 Set all bits in EDMA_ERQRH and EDMA_ERQRL Note: Bit 2 (SERQ1) is not used.

9.2.2.6 eDMA Clear Enable Request Register (EDMA_CERQR)

The EDMA_CERQR provides a simple memory-mapped mechanism to clear a given bit in the EDMA_ERQRL to disable the DMA request for a given channel. The data value on a register write causes the corresponding bit in the EDMA_ERQRL to be cleared. Setting bit 1 (CERQ n) provides a global clear function, forcing the entire contents of the EDMA_ERQRL to be zeroed, disabling all DMA request inputs. Reads of this register return all zeroes.


Figure 9-7. eDMA Clear Enable Request Register (EDMA_CERQR)
Table 9-7. EDMA_CERQR Field Descriptions

Field	Description
0	Reserved.
1–7 CERQ[0:6]	Clear enable request. 0–31 Clear corresponding bit in EDMA_ERQRL 32–63 Reserved 64–127 Clear all bits in EDMA_ERQRH and EDMA_ERQRL Note: Bit 2 (CERQ1) is not used.

9.2.2.7 eDMA Set Enable Error Interrupt Register (EDMA_SEEIR)

The EDMA_SEEIR provides a simple memory-mapped mechanism to set a given bit in the EDMA_EEIRL to enable the error interrupt for a given channel. The data value on a register write causes the corresponding bit in the EDMA_EEIRL to be set. Setting bit 1 (SEEI n) provides a global set function, forcing the entire contents of EDMA_EEIRL to be asserted. Reads of this register return all zeroes.

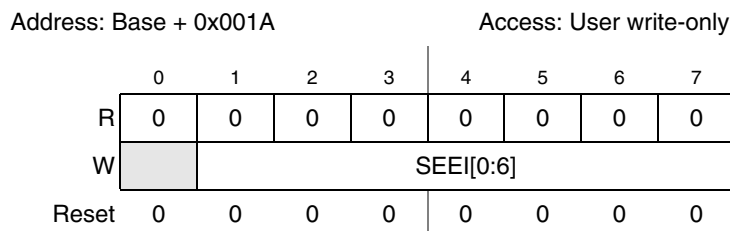


Figure 9-8. eDMA Set Enable Error Interrupt Register (EDMA_SEEIR)

Table 9-8. EDMA_SEEIR Field Descriptions

Field	Description
0	Reserved.
1–7 SEEI[0:6]	Set enable error interrupt. 0–31 Set corresponding bit in EDMA_EIRRL 32–63 Reserved 64–127 Set all bits in EDMA_EEIRH or EDMA_EEIRL Note: Bit 2 (SEEI1) is not used.

9.2.2.8 eDMA Clear Enable Error Interrupt Register (EDMA_CEEIR)

The EDMA_CEEIR provides a simple memory-mapped mechanism to clear a given bit in the EDMA_EEIRL to disable the error interrupt for a given channel. The data value on a register write causes the corresponding bit in the EDMA_EEIRL to be cleared. Setting bit 1 (CEEI_n) provides a global clear function, forcing the entire contents of the EDMA_EEIRL to be zeroed, disabling error interrupts for all channels. Reads of this register return all zeroes.

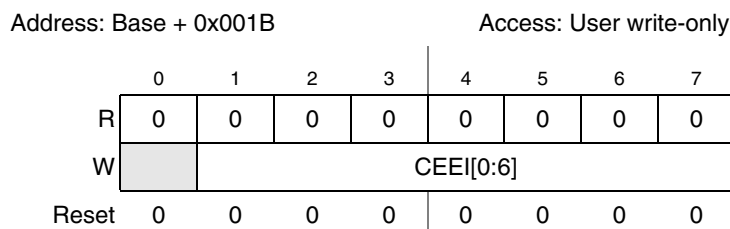


Figure 9-9. eDMA Clear Enable Error Interrupt Register (EDMA_CEEIR)

Table 9-9. EDMA_CEEIR Field Descriptions

Field	Description
0	Reserved.
1–7 CEEI[0:6]	Clear enable error interrupt. 0–31 Clear corresponding bit in EDMA_EEIRL 32–63 Reserved 64–127 Clear all bits in EDMA_EEIRH or EDMA_EEIRL Note: Bit 2 (CEEI1) is not used.

9.2.2.9 eDMA Clear Interrupt Request Register (EDMA_CIRQR)

The EDMA_CIRQR provides a simple memory-mapped mechanism to clear a given bit in the EDMA_IRQRL to disable the interrupt request for a given channel. The given value on a register write causes the corresponding bit in the EDMA_IRQRL to be cleared. Setting bit 1 (CINT_n) provides a global clear function, forcing the entire contents of the EDMA_IRQRL to be zeroed, disabling all DMA interrupt requests. Reads of this register return all zeroes.

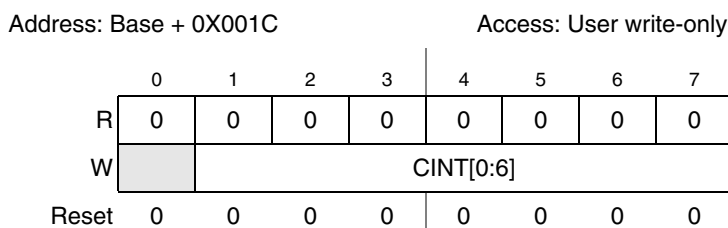


Figure 9-10. eDMA Clear Interrupt Request (EDMA_CIRQR)

Table 9-10. EDMA_CIRQR Field Descriptions

Field	Description
0	Reserved.
1–7 CINT[0:6]	Clear interrupt request. 0–31 Clear corresponding bit in EDMA_IRQRL 32–63 Reserved 64–127 Clear all bits in EDMA_IRQRH or EDMA_IRQRL Note: Bit 2 (CINT1) is not used.

9.2.2.10 eDMA Clear Error Register (EDMA_CER)

The EDMA_CER provides a simple memory-mapped mechanism to clear a given bit in the EDMA_ERL to disable the error condition flag for a given channel. The given value on a register write causes the corresponding bit in the EDMA_ERL to be cleared. Setting bit 1 (CERR_n) provides a global clear function, forcing the entire contents of the EDMA_ERL to be zeroed, clearing all channel error indicators. Reads of this register return all zeroes.

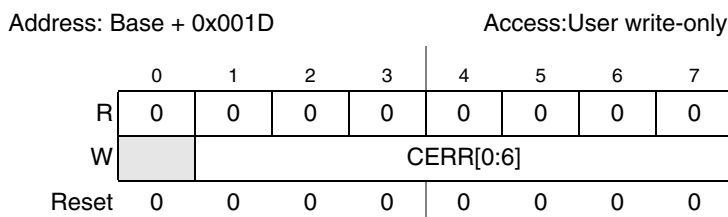


Figure 9-11. eDMA Clear Error Register (EDMA_CER)

Table 9-11. EDMA_CER Field Descriptions

Field	Description
0	Reserved.
1–7 CERR[0:6]	Clear error indicator. 0–31 Clear corresponding bit in EDMA_ERL 32–63 Reserved 64–127 Clear all bits in EDMA_ERH or EDMA_ERL Note: Bit 2 (CERR1) is not used.

9.2.2.11 eDMA Set START Bit Register (EDMA_SSBR)

The EDMA_SSBR provides a simple memory-mapped mechanism to set the START bit in the TCD of the given channel. The data value on a register write causes the START bit in the corresponding transfer control descriptor to be set. Setting bit 1 (SSB n) provides a global set function, forcing all START bits to be set. Reads of this register return all zeroes.

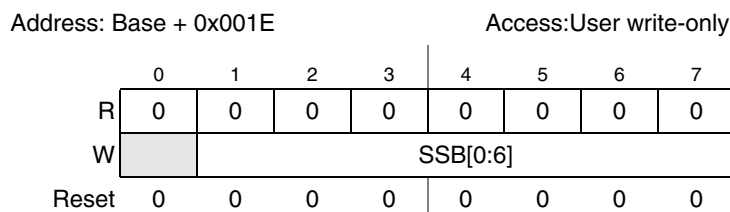


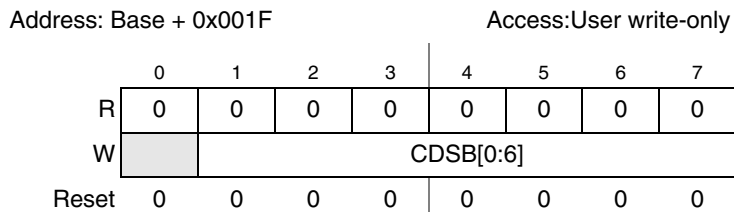
Figure 9-12. eDMA Set START Bit Register (EDMA_SSBR)

Table 9-12. EDMA_SSBR Field Descriptions

Field	Description
0	Reserved.
1–7 SSB[0:6]	Set START bit (channel service request). 0–31 Set the corresponding channel's TCD START bit 32–63 Reserved 64–127 Set all TCD START bits Note: Bit 2 (SSB1) is not used.

9.2.2.12 eDMA Clear DONE Status Bit Register (EDMA_CDSBR)

The EDMA_CDSBR provides a simple memory-mapped mechanism to clear the DONE bit in the TCD of the given channel. The data value on a register write causes the DONE bit in the corresponding transfer control descriptor to be cleared. Setting bit 1 (CDSB n) provides a global clear function, forcing all DONE bits to be cleared.


Figure 9-13. eDMA Clear DONE Status Bit Register (EDMA_CDSBR)
Table 9-13. EDMA_CDSBR Field Descriptions

Field	Description
0	Reserved.
1–7 CDSB[0:6]	Clear DONE status bit. 0–31 Clear the corresponding channel's DONE bit 32–63 Reserved 64–127 Clear all TCD DONE bits Note: Bit 2 (CDSB1) is not used.

9.2.2.13 eDMA Interrupt Request Register (EDMA_IRQRL)

The EDMA_IRQRL provide a bit map for the 32 channels signaling the presence of an interrupt request for each channel. EDMA_IRQRL maps to channels 31-0.

The eDMA engine signals the occurrence of a programmed interrupt upon the completion of a data transfer as defined in the transfer control descriptor by setting the appropriate bit in this register. The outputs of this register are directly routed to the interrupt controller (INTC). During the execution of the interrupt service routine associated with any given channel, it is software's responsibility to clear the appropriate bit, negating the interrupt request. Typically, a write to the EDMA_CIRQR in the interrupt service routine is used for this purpose.

The state of any given channel's interrupt request is directly affected by writes to this register; it is also affected by writes to the EDMA_CIRQR. On writes to the EDMA_IRQRL, a 1 in any bit position clears the corresponding channel's interrupt request. A 0 in any bit position has no affect on the corresponding channel's current interrupt status. The EDMA_CIRQR is provided so the interrupt request for a *single* channel can easily be cleared without the need to perform a read-modify-write sequence to the EDMA_IRQRL.

Address: Base + 0x0024

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT
W	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT	INT
W	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 9-14. eDMA Interrupt Request Low Register (EDMA_IRQRL)

Table 9-14. EDMA_IRQRL Field Descriptions

Field	Description
0–31 INT n	eDMA interrupt request n . 0 The interrupt request for channel n is cleared. 1 The interrupt request for channel n is active.

9.2.2.14 eDMA Error Register (EDMA_ERL)

The EDMA_ERL provides a bit map for the 32 channels signaling the presence of an error for each channel. EDMA_ERL maps to channels 31-0.

The eDMA engine signals the occurrence of a error condition by setting the appropriate bit in this register. The outputs of this register are enabled by the contents of the EDMA_EEIR, then logically summed across groups of 16 and 32 channels to form several group error interrupt requests which is then routed to the interrupt controller. During the execution of the interrupt service routine associated with any DMA errors, it is software’s responsibility to clear the appropriate bit, negating the error interrupt request. Typically, a write to the EDMA_CER in the interrupt service routine is used for this purpose. Recall the normal DMA channel completion indicators, setting the transfer control descriptor DONE flag and the possible assertion of an interrupt request, are *not* affected when an error is detected.

The contents of this register can also be polled and a non-zero value indicates the presence of a channel error, regardless of the state of the EDMA_EEIR. The EDMA_ESR[VLD] bit is a logical OR of all bits in this register and it provides a single bit indication of any errors. The state of any given channel’s error indicators is affected by writes to this register; it is also affected by writes to the EDMA_CER. On writes to EDMA_ERL, a 1 in any bit position clears the corresponding channel’s error status. A 0 in any bit position has no affect on the corresponding channel’s current error status. The EDMA_CER is provided so the error indicator for a *single* channel can easily be cleared.

Address: Base + 0x002C

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR
W	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR	ERR
W	15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 9-15. eDMA Error Low Register (EDMA_ERL)

Table 9-15. EDMA_ERL Field Descriptions

Field	Description
0–31 ERR n	eDMA Error n . 0 An error in channel n has not occurred. 1 An error in channel n has occurred.

Address: Base + 0x0034

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	HRS3	HRS3	HRS2	HRS2	HRS2	HRS2	HRS2	HRS2	HRS2	HRS2	HRS2	HRS2	HRS1	HRS1	HRS1	HRS1
W	1	0	9	8	7	6	5	4	3	2	1	0	9	8	7	6
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	HRS1	HRS1	HRS1	HRS1	HRS1	HRS1	HRS0	HRS0	HRS0	HRS0	HRS0	HRS0	HRS0	HRS0	HRS0	HRS0
W	5	4	3	2	1	0	9	8	7	6	5	4	3	2	1	0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 9-16. EDMA Hardware Request Status Register Low (EDMA_HRSL)


9.2.2.15 eDMA Channel *n* Priority Registers (EDMA_CPR*n*)

Table 9-16. EDMA_HRSL Field Descriptions

Field	Description
0–31 HRSLn	<p>DMA Hardware Request Status</p> <p>0 A hardware service request for channel <i>n</i> is not present.</p> <p>1 A hardware service request for channel <i>n</i> is present.</p> <p>Note: The hardware request status reflects the state of the request as seen by the arbitration logic. Therefore, this status is affected by the EDMA_ERQRL[ERQn] bit.</p>

When the fixed-priority channel arbitration mode is enabled (EDMA_CR[ERCA] = 0), the contents of these registers define the unique priorities associated with each channel within a group. The channel priorities are evaluated by numeric value; that is, 0 is the lowest priority, 1 is the next higher priority, then 2, 3, etc. If software chooses to modify channel priority values, then the software must ensure that the channel priorities contain unique values, otherwise a configuration error will be reported. The range of the priority value is limited to the values of 0 through 15. When read, the GRPPRI bits of the EDMA_CPR*n* register reflect the current priority level of the group of channels in which the corresponding channel resides. GRPPRI bits are not affected by writes to the EDMA_CPR*n* registers. The group priority is assigned in the EDMA_CR. See Figure 9-2 and Table 9-2 for the EDMA_CR definition.

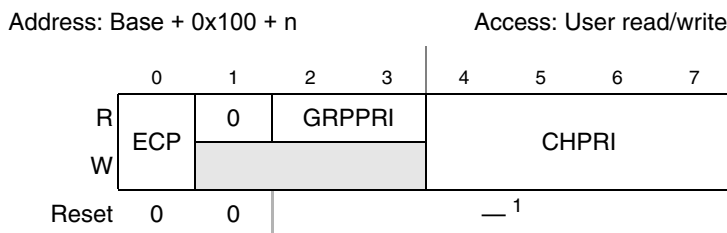Channel preemption is enabled on a per-channel basis by setting the ECP bit in the EDMA_CPR*n* register. Channel preemption allows the executing channel's data transfers to be temporarily suspended in favor of starting a higher priority channel. Once the preempting channel has completed all of its minor loop data transfers, the preempted channel is restored and resumes execution. After the restored channel completes one read/write sequence, it is again eligible for preemption. If any higher priority channel is requesting service, the restored channel will be suspended and the higher priority channel will be serviced. Nested preemption (attempting to preempt a preempting channel) is not supported. Once a preempting channel begins execution, it cannot be preempted. Preemption is only available when fixed arbitration is selected for both group and channel arbitration modes.



¹ The reset value for the group and channel priority fields, GRPPRI[0–1] and CHPRI[0–3], is equal to the corresponding channel number for each priority register; that is, EDMA_CPR31[GRPPRI] = 0b01 and EDMA_CPR31[CHPRI] = 0b1111.

Figure 9-17. eDMA Channel *n* Priority Register (EDMA_CPR*n*)

Table 9-17. EDMA_CPR n Field Descriptions

Field	Description
0 ECP	Enable channel preemption. 0 Channel n cannot be suspended by a higher priority channel's service request. 1 Channel n can be temporarily suspended by the service request of a higher priority channel.
1	Reserved.
2–3 GRPPRI[0:1]	Channel n current group priority. Group priority assigned to this channel group when fixed-priority arbitration is enabled. These two bits are read only; writes are ignored. The reset value for the group priority fields, is equal to the corresponding channel number for each priority register; that is, EDMA_CPR31[GRPPRI] = 0b01.
4–7 CHPRI[0:3]	Channel n arbitration priority. Channel priority when fixed-priority arbitration is enabled. The reset value for the channel priority fields CHPRI[0–3], is equal to the corresponding channel number for each priority register; that is, EDMA_CPR31[CHPRI] = 0b1111.

9.2.2.16 Transfer Control Descriptor (TCD)

Each channel requires a 256-bit transfer control descriptor for defining the desired data movement operation. The channel descriptors are stored in the local memory in sequential order: channel 0, channel 1, ... channel 31. The definitions of the TCD are presented as 23 variable-length fields. [Table 9-18](#) is a field list of the basic TCD structure.

Table 9-18. TCD n 32-bit Memory Structure

eDMA Bit Offset	Length (in Bits)	TCD n Field Name	TCD n Abbreviation	Word #
0x1000 + (32 x n) + 0	32	Source Address	SADDR	Word 0
0x1000 + (32 x n) + 32	5	Source address modulo	SMOD	Word 1
0x1000 + (32 x n) + 37	3	Source data transfer size	SSIZE	
0x1000 + (32 x n) + 40	5	Destination address modulo	DMOD	
0x1000 + (32 x n) + 45	3	Destination data transfer size	DSIZE	
0x1000 + (32 x n) + 48	16	Signed Source Address Offset	SOFF	
0x1000 + (32 x n) + 64	32	Inner minor byte count	NBYTES	Word 2
0x1000 + (32 x n) + 96	32	Last Source Address Adjustment	SLAST	Word 3
0x1000 + (32 x n) + 128	32	Destination Address	DADDR	Word 4
0x1000 + (32 x n) + 160	1	Channel-to-channel Linking on Minor Loop Complete	CITER.E_LINK	Word 5
0x1000 + (32 x n) + 161	6	Current Major Iteration Count or Link Channel Number	CITER or CITER.LINKCH	
0x1000 + (32 x n) + 167	9	Current Major Iteration Count	CITER	
0x1000 + (32 x n) + 176	16	Destination Address Offset (Signed)	DOFF	
0x1000 + (32 x n) + 192	32	Last Destination Address Adjustment / Scatter Gather Address	DLAST_SGA	Word 6

Table 9-18. TCD n 32-bit Memory Structure (continued)

eDMA Bit Offset	Length (in Bits)	TCD n Field Name	TCD n Abbreviation	Word #
0x1000 + (32 x n) + 224	1	Channel-to-channel Linking on Minor Loop Complete	BITER.E_LINK	Word 7
0x1000 + (32 x n) + 225	6	Starting Major Iteration Count or Link Channel Number	BITER or BITER.LINKCH	
0x1000 + (32 x n) + 231	9	Starting Major Iteration Count	BITER	
0x1000 + (32 x n) + 240	2	Bandwidth Control	BWC	
0x1000 + (32 x n) + 242	6	Link Channel Number	MAJOR.LINKCH	
0x1000 + (32 x n) + 248	1	Channel Done	DONE	
0x1000 + (32 x n) + 249	1	Channel Active	ACTIVE	
0x1000 + (32 x n) + 250	1	Channel-to-channel Linking on Major Loop Complete	MAJOR.E_LINK	
0x1000 + (32 x n) + 251	1	Enable Scatter/Gather Processing	E_SG	
0x1000 + (32 x n) + 252	1	Disable Request	D_REQ	
0x1000 + (32 x n) + 253	1	Channel Interrupt Enable When Current Major Iteration Count is Half Complete	INT_HALF	
0x1000 + (32 x n) + 254	1	Channel Interrupt Enable When Current Major Iteration Count Complete	INT_MAJ	
0x1000 + (32 x n) + 255	1	Channel Start	START	

Figure 9-18 and Table 9-19 define the fields of the TCD n structure.

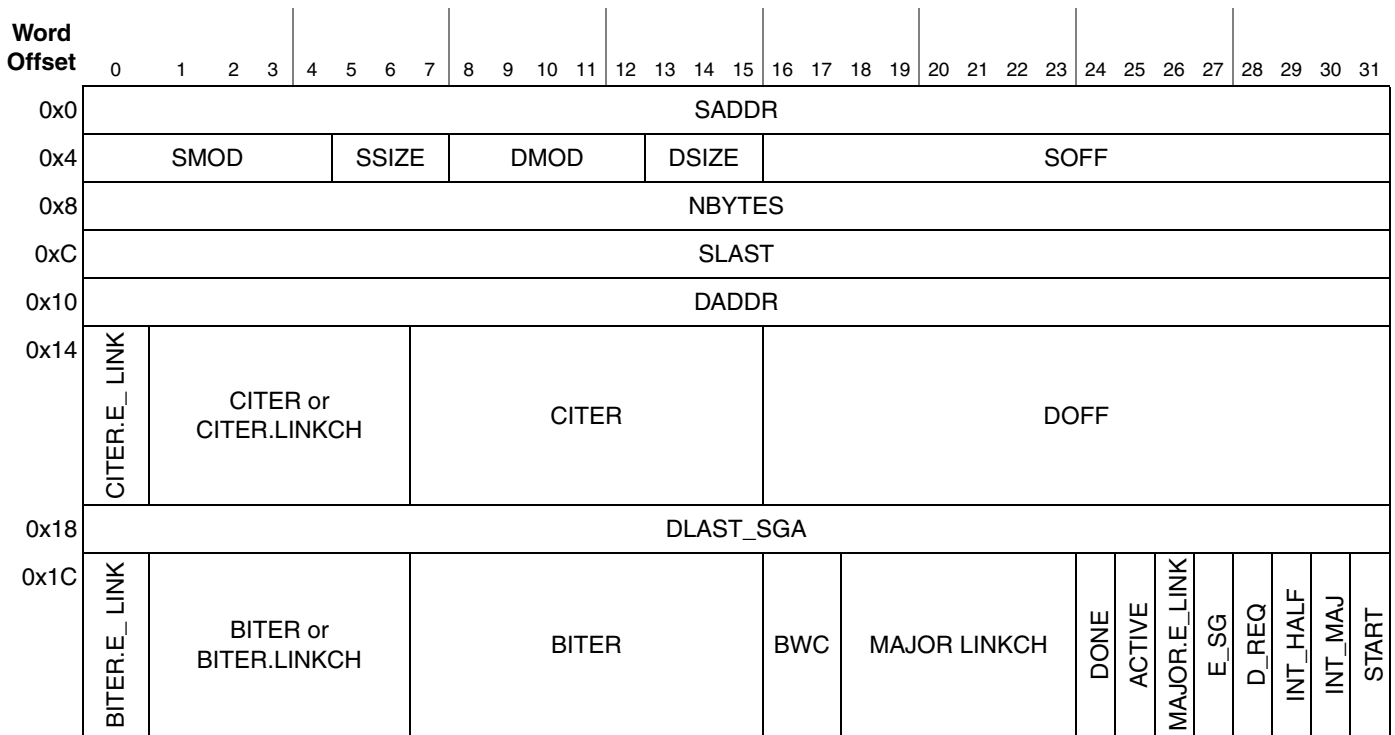


Figure 9-18. TCD Structure

NOTE

The TCD structures for the eDMA channels shown in Figure 9-18 are implemented in internal SRAM. These structures are not initialized at reset. Therefore, all channel TCD parameters must be initialized by the application code before activating that channel.

Table 9-19. TCDn Field Descriptions

Bits / Word Offset [n:n]	Name	Description
0–31 / 0x0 [0:31]	SADDR [0:31]	Source address. Memory address pointing to the source data. Word 0x0, bits 0–31.
32–36 / 0x4 [0:4]	SMOD [0:4]	Source address modulo. 0 Source address modulo feature is disabled. non-0 This value defines a specific address range which is specified to be either the value after SADDR + SOFF calculation is performed or the original register value. The setting of this field provides the ability to easily implement a circular data queue. For data queues requiring power-of-2 “size” bytes, the queue should start at a 0-modulo-size address and the SMOD field should be set to the appropriate value for the queue, freezing the desired number of upper address bits. The value programmed into this field specifies the number of lower address bits that are allowed to change. For this circular queue application, the SOFF is typically set to the transfer size to implement post-increment addressing with the SMOD function constraining the addresses to a 0-modulo-size range.

Table 9-19. TCD_n Field Descriptions (continued)

Bits / Word Offset [n:n]	Name	Description
37–39 / 0x4 [5:7]	SSIZE [0:2]	Source data transfer size. 000 8-bit 001 16-bit 010 32-bit 011 64-bit 100 32-bit 101 32-byte burst (64-bit x 4) 110 Reserved 111 Reserved The attempted specification of a ‘reserved’ encoding will cause a configuration error.
40–44 / 0x4 [8:12]	DMOD [0:4]	Destination address modulo. See the SMOD[0:5] definition.
45–47 / 0x4 [13:15]	DSIZE [0:2]	Destination data transfer size. See the SSIZE[0:2] definition.
48–63 / 0x4 [16:31]	SOFF [0:15]	Source address signed offset. Sign-extended offset applied to the current source address to form the next-state value as each source read is completed.
64–95 / 0x8 [0:31]	NBYTES [0:31]	Inner “minor” byte transfer count. Number of bytes to be transferred in each service request of the channel. As a channel is activated, the contents of the appropriate TCD is loaded into the eDMA engine, and the appropriate reads and writes performed until the complete byte transfer count has been transferred. This is an indivisible operation and cannot be stalled or halted. Once the minor count is exhausted, the current values of the SADDR and DADDR are written back into the local memory, the major iteration count is decremented and restored to the local memory. If the major iteration count is completed, additional processing is performed. Note: The NBYTES value of 0x0000_0000 is interpreted as 0x1_0000_0000, thus specifying a 4 GByte transfer.
96–127 / 0xC [0:31]	SLAST [0:31]	Last source address adjustment. Adjustment value added to the source address at the completion of the outer major iteration count. This value can be applied to “restore” the source address to the initial value, or adjust the address to reference the next data structure.
128–159 / 0x10 [0:31]	DADDR [0:31]	Destination address. Memory address pointing to the destination data.
160 / 0x14 [0]	CITER.E_LINK	Enable channel-to-channel linking on minor loop completion. As the channel completes the inner minor loop, this flag enables the linking to another channel, defined by CITER.LINKCH[0:5]. The link target channel initiates a channel service request via an internal mechanism that sets the TCD.START bit of the specified channel. If channel linking is disabled, the CITER value is extended to 15 bits in place of a link channel number. If the major loop is exhausted, this link mechanism is suppressed in favor of the MAJOR.E_LINK channel linking. 0 The channel-to-channel linking is disabled. 1 The channel-to-channel linking is enabled. Note: This bit must be equal to the BITER.E_LINK bit otherwise a configuration error will be reported.

Table 9-19. TCD_n Field Descriptions (continued)

Bits / Word Offset [n:n]	Name	Description
161–166 / 0x14 [1:6]	CITER [0:5] or CITER.LINKCH [0:5]	Current “major” iteration count or link channel number. If channel-to-channel linking is disabled (TCD.CITER.E_LINK = 0), then <ul style="list-style-type: none"> No channel-to-channel linking (or chaining) is performed after the inner minor loop is exhausted. TCD bits [161:175] are used to form a 15-bit CITER field. otherwise <ul style="list-style-type: none"> After the minor loop is exhausted, the eDMA engine initiates a channel service request at the channel defined by CITER.LINKCH[0:5] by setting that channel’s TCD.START bit.
167–175 / 0x14 [7:15]	CITER [6:14]	Current “major” iteration count. This 9 or 15-bit count represents the current major loop count for the channel. It is decremented each time the minor loop is completed and updated in the transfer control descriptor memory. Once the major iteration count is exhausted, the channel performs a number of operations (for example, final source and destination address calculations), optionally generating an interrupt to signal channel completion before reloading the CITER field from the beginning iteration count (BITER) field. Note: When the CITER field is initially loaded by software, it must be set to the same value as that contained in the BITER field. Note: If the channel is configured to execute a single service request, the initial values of BITER and CITER should be 0x0001.
176–191 / 0x14 [16:31]	DOFF [0:15]	Destination address signed offset. Sign-extended offset applied to the current destination address to form the next-state value as each destination write is completed.
192–223 / 0x18 [0:31]	DLAST_SGA [0:31]	Last destination address adjustment or the memory address for the next transfer control descriptor to be loaded into this channel (scatter/gather). If scatter/gather processing for the channel is disabled (TCD.E_SG = 0) then <ul style="list-style-type: none"> Adjustment value added to the destination address at the completion of the outer major iteration count. This value can be applied to “restore” the destination address to the initial value, or adjust the address to reference the next data structure. Otherwise <ul style="list-style-type: none"> This address points to the beginning of a 0-modulo-32 byte region containing the next transfer control descriptor to be loaded into this channel. This channel reload is performed as the major iteration count completes. The scatter/gather address must be 0-modulo-32 byte, otherwise a configuration error is reported.
224 / 0x1C [0]	BITER.E_LINK	Enables channel-to-channel linking on minor loop complete. As the channel completes the inner minor loop, this flag enables the linking to another channel, defined by BITER.LINKCH[0:5]. The link target channel initiates a channel service request via an internal mechanism that sets the TCD.START bit of the specified channel. If channel linking is disabled, the BITER value is extended to 15 bits in place of a link channel number. If the major loop is exhausted, this link mechanism is suppressed in favor of the MAJOR.E_LINK channel linking. 0 The channel-to-channel linking is disabled. 1 The channel-to-channel linking is enabled. Note: When the TCD is first loaded by software, this field must be set equal to the corresponding CITER field, otherwise a configuration error will be reported. As the major iteration count is exhausted, the contents of this field is reloaded into the CITER field.

Table 9-19. TCD_n Field Descriptions (continued)

Bits / Word Offset [n:n]	Name	Description
225–230 / 0x1C [1:6]	BITER [0:5] or BITER.LINKCH[0:5]	Starting “major” iteration count or link channel number. If channel-to-channel linking is disabled (TCD.BITER.E_LINK = 0), then <ul style="list-style-type: none"> No channel-to-channel linking (or chaining) is performed after the inner minor loop is exhausted. TCD bits [225:239] are used to form a 15-bit BITER field. Otherwise <ul style="list-style-type: none"> After the minor loop is exhausted, the eDMA engine initiates a channel service request at the channel, defined by BITER.LINKCH[0:5], by setting that channel’s TCD.START bit. Note: When the TCD is first loaded by software, this field must be set equal to the corresponding CITER field, otherwise a configuration error will be reported. As the major iteration count is exhausted, the contents of this field is reloaded into the CITER field.
231–239 / 0x1C [7:15]	BITER [6:14]	Starting major iteration count. As the transfer control descriptor is first loaded by software, this field must be equal to the value in the CITER field. As the major iteration count is exhausted, the contents of this field is reloaded into the CITER field. Note: If the channel is configured to execute a single service request, the initial values of BITER and CITER should be 0x0001.
240–241 / 0x1C [16:17]	BWC [0:1]	Bandwidth control. This two-bit field provides a mechanism to effectively throttle the amount of bus bandwidth consumed by the eDMA. In general, as the eDMA processes the inner minor loop, it continuously generates read/write sequences until the minor count is exhausted. This field forces the eDMA to stall after the completion of each read/write access to control the bus request bandwidth seen by the system bus crossbar switch (XBAR). 00 No eDMA engine stalls 01 Reserved 10 eDMA engine stalls for 4 cycles after each r/w 11 eDMA engine stalls for 8 cycles after each r/w
242–247 / 0x1C [18:23]	MAJOR.LINKCH [0:5]	Link channel number. If channel-to-channel linking on major loop complete is disabled (TCD.MAJOR.E_LINK = 0) then <ul style="list-style-type: none"> No channel-to-channel linking (or chaining) is performed after the outer major loop counter is exhausted. Otherwise <ul style="list-style-type: none"> After the major loop counter is exhausted, the eDMA engine initiates a channel service request at the channel defined by MAJOR.LINKCH[0:5] by setting that channel’s TCD.START bit.
248 / 0x1C [24]	DONE	Channel done. This flag indicates the eDMA has completed the outer major loop. It is set by the eDMA engine as the CITER count reaches zero; it is cleared by software or hardware when the channel is activated (when the channel has begun to be processed by the eDMA engine, not when the first data transfer occurs). Note: This bit must be cleared in order to write the MAJOR.E_LINK or E_SG bits.
249 / 0x1C [25]	ACTIVE	Channel active. This flag signals the channel is currently in execution. It is set when channel service begins, and is cleared by the eDMA engine as the inner minor loop completes or if any error condition is detected.

Table 9-19. TCD_n Field Descriptions (continued)

Bits / Word Offset [n:n]	Name	Description
250 / 0x1C [26]	MAJOR.E_LINK	<p>Enable channel-to-channel linking on major loop completion. As the channel completes the outer major loop, this flag enables the linking to another channel, defined by MAJOR.LINKCH[0:5]. The link target channel initiates a channel service request via an internal mechanism that sets the TCD.START bit of the specified channel.</p> <p>NOTE: To support the dynamic linking coherency model, this field is forced to zero when written to while the TCD.DONE bit is set.</p> <p>0 The channel-to-channel linking is disabled. 1 The channel-to-channel linking is enabled.</p>
251 / 0x1C [27]	E_SG	<p>Enable scatter/gather processing. As the channel completes the outer major loop, this flag enables scatter/gather processing in the current channel. If enabled, the eDMA engine uses DLAST_SGA as a memory pointer to a 0-modulo-32 address containing a 32-byte data structure which is loaded as the transfer control descriptor into the local memory.</p> <p>NOTE: To support the dynamic scatter/gather coherency model, this field is forced to zero when written to while the TCD.DONE bit is set.</p> <p>0 The current channel's TCD is "normal" format. 1 The current channel's TCD specifies a scatter gather format. The DLAST_SGA field provides a memory pointer to the next TCD to be loaded into this channel after the outer major loop completes its execution.</p>
252 / 0x1C [28]	D_REQ	<p>Disable hardware request. If this flag is set, the eDMA hardware automatically clears the corresponding EDMA_ERQL bit when the current major iteration count reaches zero.</p> <p>0 The channel's EDMA_ERQL bit is not affected. 1 The channel's EDMA_ERQL bit is cleared when the outer major loop is complete.</p>
253 / 0x1C [29]	INT_HALF	<p>Enable an interrupt when major counter is half complete. If this flag is set, the channel generates an interrupt request by setting the appropriate bit in the EDMA_ERQL when the current major iteration count reaches the halfway point. Specifically, the comparison performed by the eDMA engine is (CITER == (BITER >> 1)). This halfway point interrupt request is provided to support double-buffered (aka ping-pong) schemes, or other types of data movement where the processor needs an early indication of the transfer's progress. CITER = BITER = 1 with INT_HALF enabled will generate an interrupt as it satisfies the equation (CITER == (BITER >> 1)) after a single activation.</p> <p>0 The half-point interrupt is disabled. 1 The half-point interrupt is enabled.</p>
254 / 0x1C [30]	INT_MAJ	<p>Enable an interrupt when major iteration count completes. If this flag is set, the channel generates an interrupt request by setting the appropriate bit in the EDMA_ERQL when the current major iteration count reaches zero.</p> <p>0 The end-of-major loop interrupt is disabled. 1 The end-of-major loop interrupt is enabled.</p>
255 / 0x1C [31]	START	<p>Channel start. If this flag is set, the channel is requesting service. The eDMA hardware automatically clears this flag after the channel begins execution.</p> <p>0 The channel is not explicitly started. 1 The channel is explicitly started via a software initiated service request.</p>

9.3 Functional Description

This section provides an overview of the microarchitecture and functional operation of the eDMA module.

9.3.1 eDMA Microarchitecture

The eDMA module is partitioned into two major modules: the eDMA engine and the transfer control descriptor local memory. Additionally, the eDMA engine is further partitioned into four submodules, which are detailed below.

- eDMA engine
 - Address path: This module implements registered versions of two channel transfer control descriptors: channel ‘x’ and channel ‘y,’ and is responsible for all the master bus address calculations. All the implemented channels provide the exact same functionality. This hardware structure allows the data transfers associated with one channel to be preempted after the completion of a read/write sequence if a higher priority channel service request is asserted while the first channel is active. Once a channel is activated, it runs until the minor loop is completed unless preempted by a higher priority channel. This capability provides a mechanism (optionally enabled by EDMA_CPR n [ECP]) where a large data move operation can be preempted to minimize the time another channel is blocked from execution.

When any other channel is activated, the contents of its transfer control descriptor is read from the local memory and loaded into the registers of the other address path channel {x,y}. Once the inner minor loop completes execution, the address path hardware writes the new values for the TCD n . {SADDR, DADDR, CITER} back into the local memory. If the major iteration count is exhausted, additional processing is performed, including the final address pointer updates, reloading the TCD n .CITER field, and a possible fetch of the next TCD n from memory as part of a scatter/gather operation.

- Data path: This module implements the actual bus master read/write datapath. It includes 32 bytes of register storage (matching the maximum transfer size) and the necessary mux logic to support any required data alignment. The system read data bus is the primary input, and the system write data bus is the primary output.

The address and data path modules directly support the 2-stage pipelined system bus. The address path module represents the 1st stage of the bus pipeline (the address phase), while the data path module implements the 2nd stage of the pipeline (the data phase).

- Program model/channel arbitration: This module implements the first section of eDMA’s programming model as well as the channel arbitration logic. The programming model registers are connected to the slave bus (not shown). The eDMA peripheral request inputs and eDMA interrupt request outputs are also connected to this module (via the Control logic).
- Control: This module provides all the control functions for the eDMA engine. For data transfers where the source and destination sizes are equal, the eDMA engine performs a series of source read, destination write operations until the number of bytes specified in the inner ‘minor loop’ byte count has been moved.

A minor loop interaction is defined as the number of bytes to transfer (n bytes) divided by the transfer size. Transfer size is defined as the following”

if (SSIZE < DSIZE)

transfer size = destination transfer size (# of bytes)

else

transfer size = source transfer size (# of bytes)

Minor loop TCD variables are SOFF, SMOD, DOFF, DMOD, NBYTES, SADDR, DADDR, BWC, ACTIVE, AND START. Major loop TCD variables are DLAST, SLAST, CITER, BITER, DONE, D_REQ, INT_MAJ, MAJOR_LNKCH, and INT_HALF.

For descriptors where the sizes are not equal, multiple access of the smaller size data are required for each reference of the larger size. As an example, if the source size references 16-bit data and the destination is 32-bit data, two reads are performed, then one 32-bit write.

- TCD local memory
 - Memory controller: This logic implements the required dual-ported controller, handling accesses from both the eDMA engine as well as references from the slave bus. As noted earlier, in the event of simultaneous accesses, the eDMA engine is given priority and the slave transaction is stalled. The hooks to a BIST controller for the local TCD memory are included in this module.
 - Memory array: The TCD is implemented using a single-ported, synchronous compiled RAM memory array.

9.3.2 eDMA Basic Data Flow

The basic flow of a data transfer can be partitioned into three segments. As shown in [Figure 9-19](#), the first segment involves the channel service request. In the diagram, this example uses the assertion of the eDMA peripheral request signal to request service for channel n . Channel service request via software and the TCDn.START bit follows the same basic flow as an eDMA peripheral request. The eDMA peripheral request input signal is registered internally and then routed to through the eDMA engine, first through the control module, then into the program model/channel arbitration module. In the next cycle, the channel arbitration is performed, either using the fixed-priority or round-robin algorithm. After the arbitration is complete, the activated channel number is sent through the address path and converted into the required address to access the TCD local memory. Next, the TCD memory is accessed and the required descriptor read from the local memory and loaded into the eDMA engine address path channel $\{x,y\}$ registers. The TCD memory is organized 64-bits in width to minimize the time needed to fetch the activated channel's descriptor and load it into the eDMA engine address path channel $\{x,y\}$ registers.

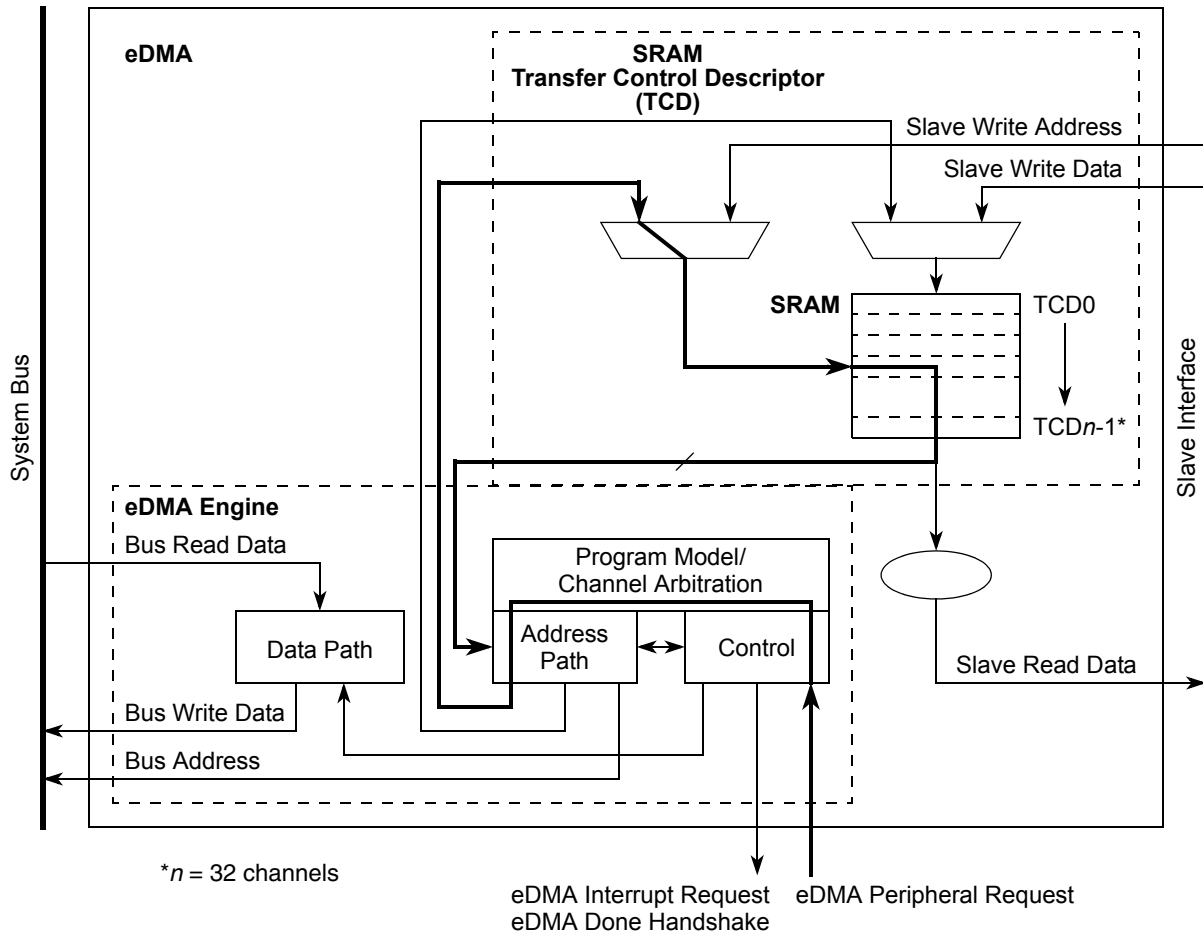
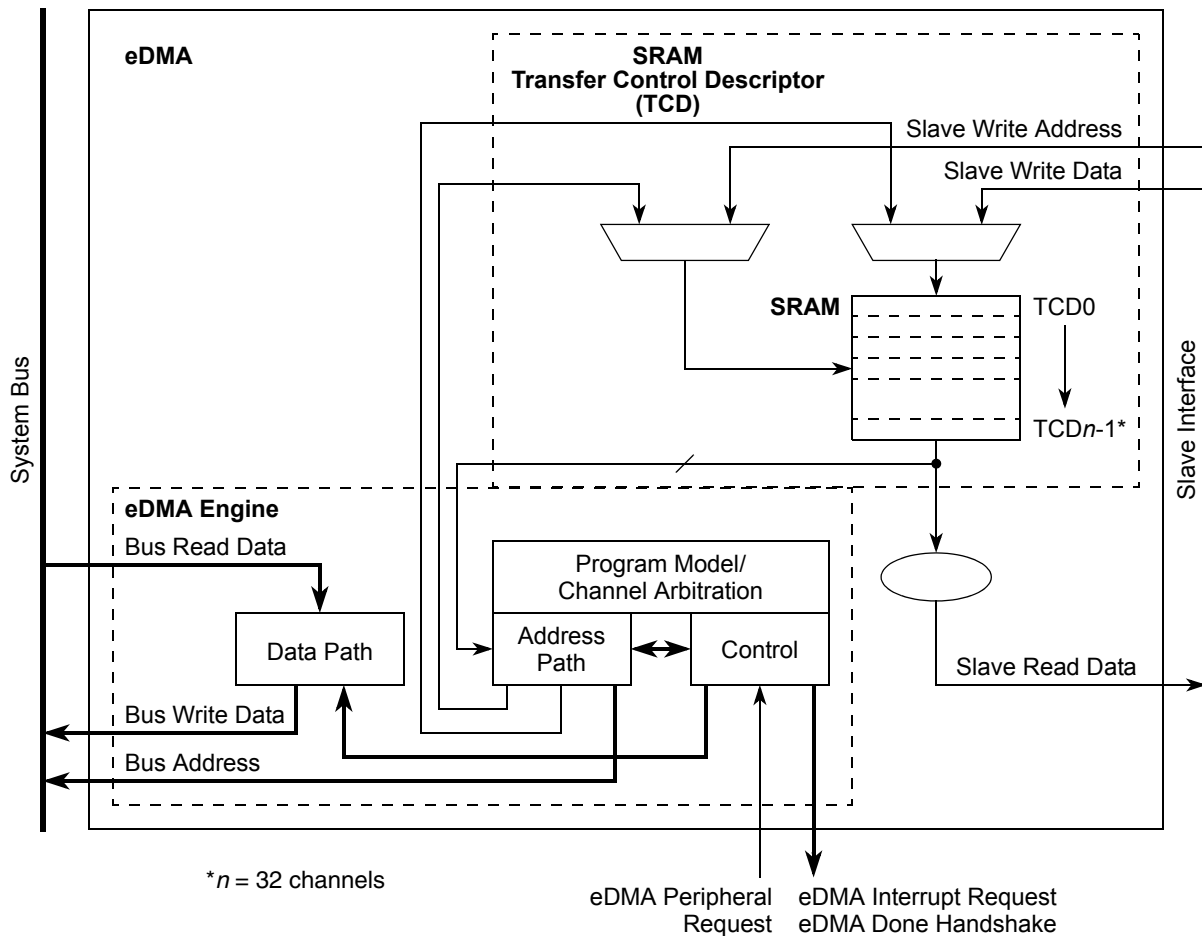


Figure 9-19. eDMA Operation, Part 1

In the second part of the basic data flow as shown in [Figure 9-20](#), the modules associated with the data transfer (address path, data path and control) sequence through the required source reads and destination writes to perform the actual data movement. The source reads are initiated and the fetched data is temporarily stored in the data path module until it is gated onto the system bus during the destination write. This source read/destination write processing continues until the inner minor byte count has been transferred. The eDMA Done Handshake signal is asserted at the end of the minor byte count transfer.


Figure 9-20. eDMA Operation, Part 2

Once the inner minor byte count has been moved, the final phase of the basic data flow is performed. In this segment, the address path logic performs the required updates to certain fields in the channel's TCD: for example., SADDR, DADDR, CITER. If the outer major iteration count is exhausted, then there are additional operations which are performed. These include the final address adjustments and reloading of the BITER field into the CITER. Additionally, assertion of an optional interrupt request occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor. The updates to the TCD memory and the assertion of an interrupt request are shown in [Figure 9-21](#).

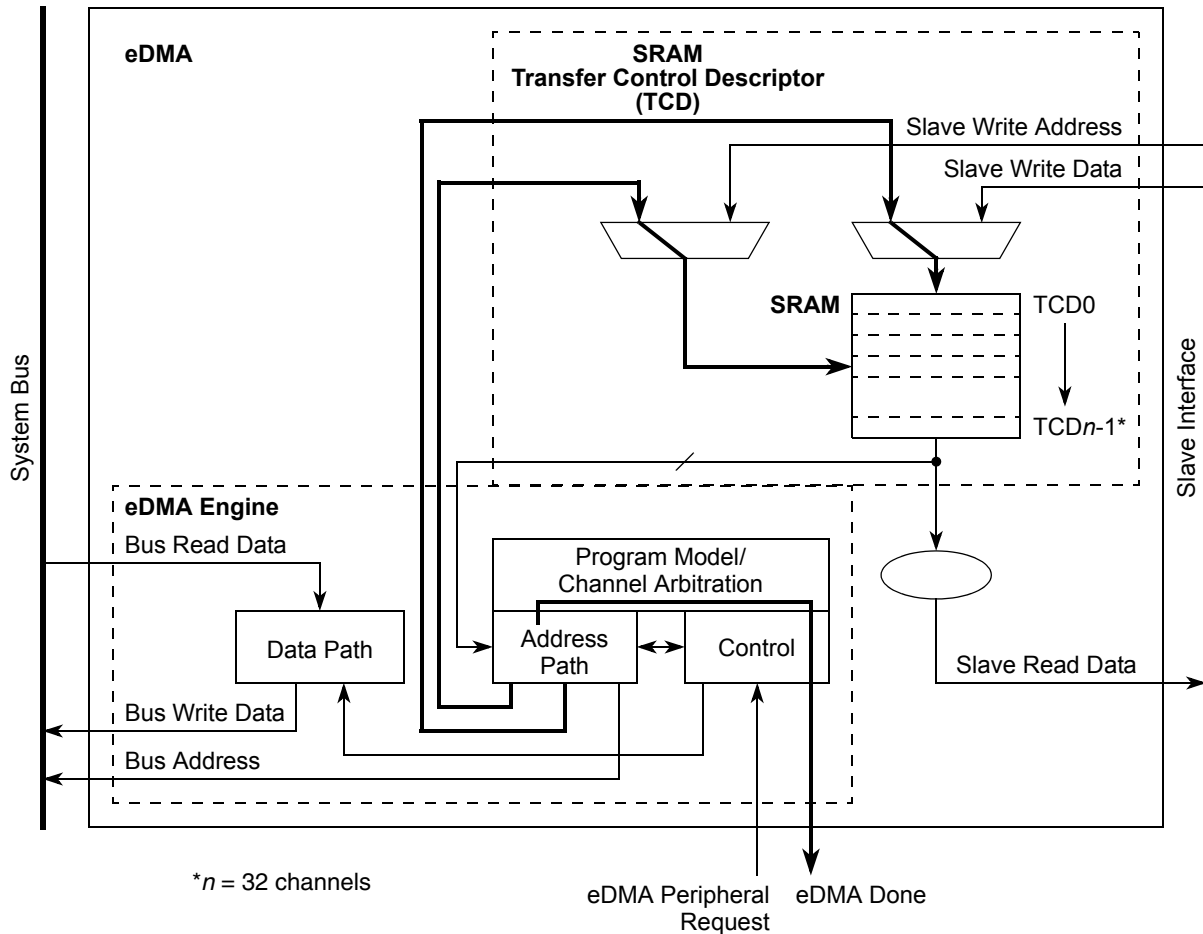


Figure 9-21. eDMA Operation, Part 3

9.3.3 eDMA Performance

This section addresses the performance of the eDMA module, focusing on two separate metrics. In the traditional data movement context, performance is best expressed as the peak data transfer rates achieved using the eDMA. In most implementations, this transfer rate is limited by the speed of the source and destination address spaces. In a second context where device-paced movement of single data values to/from peripherals is dominant, a measure of the requests that can be serviced in a fixed time is a more useful metric. In this environment, the speed of the source and destination address spaces remains important, but the microarchitecture of the eDMA also factors significantly into the resulting metric.

The peak transfer rates for several different source and destination transfers are shown in [Table 9-20](#). The following assumptions apply to [Table 9-20](#) and [Table 9-21](#):

- Internal SRAM can be accessed with zero wait-states when viewed from the system bus data phase.
- All slave reads require two wait-states, and slave writes three wait-states, again viewed from the system bus data phase.
- All slave accesses are 32-bits in size.

[Table 9-20](#) presents a peak transfer rate comparison, measured in Mbytes per second.

Table 9-20. eDMA Peak Transfer Rates (Mbytes/Sec)

System Speed, Transfer Size	Internal SRAM-to-Internal SRAM	32-Bit Slave-to-Internal SRAM	Internal SRAM-to-32-Bit Slave (buffering disabled)	Internal SRAM-to-32-Bit Slave (buffering enabled)
66.7 MHz, 32 bit	66.7	66.7	53.3	88.7
66.7 MHz, 64 bit	133.3	66.7	53.3	88.7
66.7 MHz, 256 bit ¹	213.4	N/A ²	N/A ²	N/A ²
83.3 MHz, 32 bit	83.3	83.3	66.7	110.8
83.3 MHz, 64 bit	166.7	83.3	66.7	110.8
83.3 MHz, 256 bit ¹	266.6	N/A ²	N/A ²	N/A ²
100.0 MHz, 32 bit	100.0	100.0	80.0	133.0
100.0 MHz, 64 bit	200.0	100.0	80.0	133.0
100.0 MHz, 256 bit ¹	320.0	N/A ²	N/A ²	N/A ²
132.0 MHz, 32 bit	132.0	132.0	105.6	175.6
132.0 MHz, 64 bit	264.0	132.0	105.6	175.6
132.0 MHz, 256 bit ¹	422.4	N/A ²	N/A ²	N/A ²

¹ A 256-bit transfer occurs as a burst of four 64-bit beats.

² Not applicable: burst access to a slave port is not supported.

Where the internal-SRAM-to-internal-SRAM transfers occur at the core's datapath width; that is, either 32- or 64-bits per access. For all transfers involving the slave bus, 32-bit transfer sizes are used. In all cases, the transfer rate includes the time to read the source plus the time to write the destination.

The second performance metric is a measure of the number of DMA requests that can be serviced in a given amount of time. For this metric, it is assumed the peripheral request causes the channel to move a single slave-mapped operand to/from internal SRAM. The same timing assumptions used in the previous example apply to this calculation. In particular, this metric also reflects the time required to activate the channel. The eDMA design supports the following hardware service request sequence:

- Cycle 1: eDMA peripheral request is asserted.
- Cycle 2: The eDMA peripheral request is registered locally in the eDMA module and qualified. (TCD.START bit initiated requests start at this point with the registering of the slave write to TCD bit 255).
- Cycle 3: Channel arbitration begins.
- Cycle 4: Channel arbitration completes. The transfer control descriptor local memory read is initiated.
- Cycle 5 - 6: The first two parts of the activated channel's TCD is read from the local memory. The memory width to the eDMA engine is 64 bits, so the entire descriptor can be accessed in four cycles.

- Cycle 7: The first system bus read cycle is initiated, as the third part of the channel’s TCD is read from the local memory. Depending on the state of the crossbar switch, arbitration at the system bus may insert an additional cycle of delay here.
- Cycle 8 – n : The last part of the TCD is read in. This cycle represents the 1st data phase for the read, and the address phase for the destination write.
- The exact timing from this point is a function of the response times for the channel’s read and write accesses. In this case of an slave read and internal SRAM write, the combined data phase time is 4 cycles. For an SRAM read and slave write, it is 5 cycles.
- Cycle $n + 1$: This cycle represents the data phase of the last destination write.
- Cycle $n + 2$: The eDMA engine completes the execution of the inner minor loop and prepares to write back the required TCD n fields into the local memory. The control/status fields at word offset 0x1C in TCD n are read. If the major loop is complete, the MAJOR.E_LINK and E_SG bits are checked and processed if enabled.
- Cycle $n + 3$: The appropriate fields in the first part of the TCD n are written back into the local memory.
- Cycle $n + 4$: The fields in the second part of the TCD n are written back into the local memory. This cycle coincides with the next channel arbitration cycle start.
- Cycle $n + 5$: The next channel to be activated performs the read of the first part of its TCD from the local memory. This is equivalent to Cycle 4 for the first channel’s service request.

Assuming zero wait states on the system bus, DMA requests can be processed every 9 cycles. Assuming an average of the access times associated with slave-to-SRAM (4 cycles) and SRAM-to-slave (5 cycles), DMA requests can be processed every 11.5 cycles ($4 + (4+5)/2 + 3$). This is the time from Cycle 4 to Cycle “ $n + 5$.” The resulting peak request rate, as a function of the system frequency, is shown in Table 9-21. This metric represents millions of requests per second.

Table 9-21. eDMA Peak Request Rate (MReq/Sec)

System Frequency (MHz)	Request Rate (Zero Wait States)	Request Rate (with Wait States)
66.6	7.4	5.8
83.3	9.2	7.2
100.0	11.1	8.7
133.3	14.8	11.6
150.0	16.6	13.0

A general formula to compute the peak request rate (with overlapping requests) is:

$$PEAKreq = freq / [entry + (1 + read_ws) + (1 + write_ws) + exit]$$

where:

PEAKreq - peak request rate

freq - system frequency

entry - channel startup (4 cycles)

read_ws - wait states seen during the system bus read data phase
 write_ws - wait states seen during the system bus write data phase
 exit - channel shutdown (3 cycles)

For example: consider a system with the following characteristics:

- Internal SRAM can be accessed with one wait-state when viewed from the system bus data phase.
- All slave reads require two wait-states, and slave writes three wait-states, again viewed from the system bus data phase.
- System operates at 150 MHz.

For an SRAM to slave transfer,

$$\text{PEAKreq} = 150 \text{ MHz} / [4 + (1 + 1) + (1 + 3) + 3] \text{ cycles} = 11.5 \text{ Mreq/sec}$$

For an slave to SRAM transfer,

$$\text{PEAKreq} = 150 \text{ MHz} / [4 + (1 + 2) + (1 + 1) + 3] \text{ cycles} = 12.5 \text{ Mreq/sec}$$

Assuming an even distribution of the two transfer types, the average peak request rate would be:

$$\text{PEAKreq} = (11.5 \text{ Mreq/sec} + 12.5 \text{ Mreq/sec}) / 2 = 12.0 \text{ Mreq/sec}$$

The minimum number of cycles to perform a single read/write, zero wait states on the system bus, from a cold start (where no channel is executing, eDMA is idle) are the following:

- 11 cycles for a software (TCD.START bit) request
- 12 cycles for a hardware (eDMA peripheral request signal) request

Two cycles account for the arbitration pipeline and one extra cycle on the hardware request resulting from the internal registering of the eDMA peripheral request signals. For the peak request rate calculations above, the arbitration and request registering is absorbed in or overlap the previous executing channel.

NOTE

When channel linking or scatter/gather is enabled, a two-cycle delay is imposed on the next channel selection and startup. This allows the link channel or the scatter/gather channel to be eligible and considered in the arbitration pool for next channel selection.

9.4 Initialization / Application Information

9.4.1 eDMA Initialization

A typical initialization of the eDMA would have the following sequence:

1. Write the EDMA_CR if a configuration other than the default is desired.
2. Write the channel priority levels into the EDMA_CPR_n registers if a configuration other than the default is desired.
3. Enable error interrupts in the EDMA_EEIRL and/or EDMA_EEIRH registers if so desired.
4. Write the 32-byte TCD for each channel that may request service.

5. Enable any hardware service requests via the EDMA_ERQRH and/or EDMA_ERQRL registers.
6. Request channel service by either software (setting the TCD.START bit) or by hardware (slave device asserting its eDMA peripheral request signal).

Once any channel requests service, a channel is selected for execution based on the arbitration and priority levels written into the programmer's model. The eDMA engine will read the entire TCD, including the primary transfer control parameter shown in [Table 9-22](#), for the selected channel into its internal address path module. As the TCD is being read, the first transfer is initiated on the system bus unless a configuration error is detected. Transfers from the source (as defined by the source address, TCD.SADDR) to the destination (as defined by the destination address, TCD.DADDR) continue until the specified number of bytes (TCD.NBYTES) have been transferred. When the transfer is complete, the eDMA engine's local TCD.SADDR, TCD.DADDR, and TCD.CITER are written back to the main TCD memory and any minor loop channel linking is performed, if enabled. If the major loop is exhausted, further post processing is executed: for example, interrupts, major loop channel linking, and scatter/gather operations, if enabled.

Table 9-22. TCD Primary Control and Status Fields

TCD Field Name	Description
START	Control bit to explicitly start channel when using a software initiated DMA service (Automatically cleared by hardware)
ACTIVE	Status bit indicating the channel is currently in execution
DONE	Status bit indicating major loop completion (Cleared by software when using a software initiated DMA service)
D_REQ	Control bit to disable DMA request at end of major loop completion when using a hardware-initiated DMA service
BWC	Control bits for "throttling" bandwidth control of a channel
E_SG	Control bit to enable scatter-gather feature
INT_HALF	Control bit to enable interrupt when major loop is half complete
INT_MAJ	Control bit to enable interrupt when major loop completes

[Figure 9-22](#) shows how each DMA request initiates one minor loop transfer (iteration) without CPU intervention. DMA arbitration can occur after each minor loop, and one level of minor loop DMA preemption is allowed. The number of minor loops in a major loop is specified by the beginning iteration count (biter).

Example Memory Array			Current Major Loop Iteration Count (CITER)
DMA Request		Minor Loop	Major Loop
	⋮		
DMA Request		Minor Loop	Major Loop
	⋮		
DMA Request		Minor Loop	Major Loop
	⋮		
			3
			2
			1

Figure 9-22. Example of Multiple Loop Iterations

Figure 9-23 lists the memory array terms and how the TCD settings interrelate.

xADDR: (Starting Address)	xSIZE: (Size of one data transfer)	Minor Loop (NBYTES in Minor Loop, often the same value as xSIZE)	Offset (xOFF): Number of bytes added to current address after each transfer (Often the same value as xSIZE)
⋮	⋮	Minor Loop	Each DMA Source (S) and Destination (D) has its own: <ul style="list-style-type: none"> • Address (xADDR) • Size (xSIZE) • Offset (xOFF) • Modulo (xMOD) • Last Address Adjustment (xLAST) where x = S or D Peripheral queues typically have size and offset equal to NBYTES
xLAST: Number of bytes added to current address after Major Loop (Typically used to loop back)	⋮	Last Minor Loop	

Figure 9-23. Memory Array Terms

9.4.2 DMA Programming Errors

The eDMA performs various tests on the transfer control descriptor to verify consistency in the descriptor data. Most programming errors are reported on a per channel basis with the exception of two errors: group priority error and channel priority error, or EDMA_ESR[GPE] and EDMA_ESR[CPE], respectively.

For all error types other than group or channel priority errors, the channel number causing the error is recorded in the EDMA_ESR. If the error source is not removed before the next activation of the problem channel, the error will be detected and recorded again.

Channel priority errors are identified within a group once that group has been selected as the active group. For the example below, all of the channel priorities in group 1 are unique, but some of the channel priorities in group 0 are the same:

1. The eDMA is configured for fixed group and fixed channel arbitration modes.
2. Group 1 is the highest priority and all channels are unique in that group.
3. Group 0 is the next highest priority and has two channels with the same priority level.
4. If group 1 has any service requests, those requests will be executed.
5. Once all of group 1 requests have completed, group 0 will be the next active group.
6. If Group 0 has a service request, then an undefined channel in group 0 will be selected and a channel priority error will occur.
7. This will repeat until the all of group 0 requests have been removed or a higher priority group 1 request comes in.

In this sequence, for item 2, the eDMA acknowledge lines will assert only if the selected channel is requesting service via the eDMA peripheral request signal. If interrupts are enabled for all channels, the user will receive an error interrupt, but the channel number for the EDMA_ER and the error interrupt request line are undetermined because they reflect the ‘undefined’ channel. A group priority error is global and any request in any group will cause a group priority error.

If priority levels are not unique, the highest (channel/group) priority that has an active request will be selected, but the lowest numbered (channel/group) with that priority will be selected by arbitration and executed by the eDMA engine. The hardware service request handshake signals, error interrupts and error reporting will be associated with the selected channel.

9.4.3 DMA Request Assignments

The assignments between the DMA requests from the modules to the channels of the eDMA are shown in [Table 9-23](#). The source column is written in C language syntax. The syntax is `module_instance.register[bit]`.

Table 9-23. DMA Request Summary for eDMA

DMA Request	Channel	Source	Description
eQADC_FISR0_CFFF0	0	EQADC.FISR0[CFFF0]	eQADC Command FIFO 0 Fill Flag
eQADC_FISR0_RFDF0	1	EQADC.FISR0[RFDF0]	eQADC Receive FIFO 0 Drain Flag
eQADC_FISR1_CFFF1	2	EQADC.FISR1[CFFF1]	eQADC Command FIFO 1 Fill Flag
eQADC_FISR1_RFDF1	3	EQADC.FISR1[RFDF1]	eQADC Receive FIFO 1 Drain Flag
eQADC_FISR2_CFFF2	4	EQADC.FISR2[CFFF2]	eQADC Command FIFO 2 Fill Flag
eQADC_FISR2_RFDF2	5	EQADC.FISR2[RFDF2]	eQADC Receive FIFO 2 Drain Flag
eQADC_FISR3_CFFF3	6	EQADC.FISR3[CFFF3]	eQADC Command FIFO 3 Fill Flag
eQADC_FISR3_RFDF3	7	EQADC.FISR3[RFDF3]	eQADC Receive FIFO 3 Drain Flag
eQADC_FISR4_CFFF4	8	EQADC.FISR4[CFFF4]	eQADC Command FIFO 4 Fill Flag

Table 9-23. DMA Request Summary for eDMA (continued)

DMA Request	Channel	Source	Description
eQADC_FISR4_RFDF4	9	EQADC.FISR4[RFDF4]	eQADC Receive FIFO 4 Drain Flag
eQADC_FISR5_CFFF5	10	EQADC.FISR5[CFFF5]	eQADC Command FIFO 5 Fill Flag
eQADC_FISR5_RFDF5	11	EQADC.FISR5[RFDF5]	eQADC Receive FIFO 5 Drain Flag
DSPIB_SR_TFFF	12	DSPIB.SR[TFFF]	DSPIB Transmit FIFO Fill Flag
DSPIB_SR_RFDF	13	DSPIB.SR[RFDF]	DSPIB Receive FIFO Drain Flag
DSPIC_SR_TFFF	14	DSPIC.SR[TFFF]	DSPIC Transmit FIFO Fill Flag
DSPIC_SR_RFDF	15	DSPIC.SR[RFDF]	DSPIC Receive FIFO Drain Flag
DSPID_SR_TFFF	16	DSPID.SR[TFFF]	DSPID Transmit FIFO Fill Flag
DSPID_SR_RFDF	17	DSPID.SR[RFDF]	DSPID Receive FIFO Drain Flag
eSCIA_COMBTX	18	ESCIA.SR[TDRE] ESCIA.SR[TC] ESCIA.SR[TXRDY]	eSCIA combined DMA request of the Transmit Data Register Empty, Transmit Complete, and LIN Transmit Data Ready DMA requests
eSCIA_COMBRX	19	ESCIA.SR[RDRF] ESCIA.SR[RXRDY]	eSCIA combined DMA request of the Receive Data Register Full and LIN Receive Data Ready DMA requests
eMIOS_GFR_F0	20	EMIOS.GFR[F0]	eMIOS channel 0 Flag
eMIOS_GFR_F1	21	EMIOS.GFR[F1]	eMIOS channel 1 Flag
eMIOS_GFR_F2	22	EMIOS.GFR[F2]	eMIOS channel 2 Flag
eMIOS_GFR_F3	23	EMIOS.GFR[F3]	eMIOS channel 3 Flag
eMIOS_GFR_F4	24	EMIOS.GFR[F4]	eMIOS channel 4 Flag
eMIOS_GFR_F8	25	EMIOS.GFR[F8]	eMIOS channel 8 Flag
eMIOS_GFR_F9	26	EMIOS.GFR[F9]	eMIOS channel 9 Flag
eTPU_CDTRSR_A_DTRS0	27	ETPU.CDTRSR_A[DTRS0]	eTPUA Channel 0 Data Transfer Request Status
eTPU_CDTRSR_A_DTRS1	28	ETPU.CDTRSR_A[DTRS1]	eTPUA Channel 1 Data Transfer Request Status
eTPU_CDTRSR_A_DTRS2	29	ETPU.CDTRSR_A[DTRS2]	eTPUA Channel 2 Data Transfer Request Status
eTPU_CDTRSR_A_DTRS14	30	ETPU.CDTRSR_A[DTRS14]	eTPUA Channel 14 Data Transfer Request Status
eTPU_CDTRSR_A_DTRS15	31	ETPU.CDTRSR_A[DTRS15]	eTPUA Channel 15 Data Transfer Request Status

9.4.4 DMA Arbitration Mode Considerations

9.4.4.1 Fixed Group Arbitration, Fixed Channel Arbitration

In this mode, the channel service request from the highest priority channel in the highest priority group will be selected to execute. If the eDMA is programmed so the channels within one group use ‘fixed’ priorities, and that group is assigned the highest ‘fixed’ priority of all groups, it is possible for that group to take all the bandwidth of the eDMA controller; that is, no other groups will be serviced if there is always at least one DMA request pending on a channel in the highest priority group when the controller arbitrates the next DMA request. The advantage of this scenario is that latency can be small for channels that need to be serviced quickly. Preemption is available in this scenario only.

9.4.4.2 Round Robin Group Arbitration, Fixed Channel Arbitration

The occurrence of one or more DMA requests from one or more groups, the channel with the highest priority from a specific group will be serviced first. Groups are serviced starting with the highest group number with a service request and rotating through to the lowest group number containing a service request.

Once the channel request is serviced, the group round robin algorithm will select the highest pending request from the next group in the round robin sequence. Servicing continues round robin, always servicing the highest priority channel in the next group in the sequence, or just skipping a group if it has no pending requests.

If a channel requests service at a rate that equals or exceeds the round robin service rate, then that channel will always be serviced before lower priority channels in the same group, and thus the lower priority channels will never be serviced. The advantage of this scenario is that no one group will consume all the eDMA bandwidth. The highest priority channel selection latency is potentially greater than fixed/fixed arbitration. Excessive request rates on high priority channels could prevent the servicing of lower priority channels in the same group.

9.4.4.3 Round Robin Group Arbitration, Round Robin Channel Arbitration

Groups will be serviced as described in [Section 9.4.4.2](#), “[Round Robin Group Arbitration, Fixed Channel Arbitration](#)”, but this time channels will be serviced in channel number order. Only one channel is serviced from each requesting group for each round robin pass through the groups.

Within each group, channels are serviced starting with the highest channel number and rotating through to the lowest channel number without regard to channel priority levels.

Because channels are serviced in round robin manner, any channel that generates DMA requests faster than a combination of the group round robin service rate and the channel service rate for its group will not prevent the servicing of other channels in its group. Any DMA requests that are not serviced are simply lost, but at least one channel will be serviced.

This scenario ensures that all channels will be guaranteed service at some point, regardless of the request rates. However, the potential latency could be quite high. All channels are treated equally. Priority levels are not used in round robin/round robin mode.

9.4.4.4 Fixed Group Arbitration, Round Robin Channel Arbitration

The highest priority group with a request will be serviced. Lower priority groups will be serviced if no pending requests exist in the higher priority groups.

Within each group, channels are serviced starting with the highest channel number and rotating through to the lowest channel number without regard to the channel priority levels assigned within the group.

This scenario could cause the same bandwidth consumption problem as indicated in Section 9.4.4.1, but all the channels in the highest priority group will get serviced. Service latency will be short on the highest priority group, but could potentially get very much longer and longer as the group priority decreases.

9.4.5 DMA Transfer

9.4.5.1 Single Request

To perform a simple transfer of ‘*n*’ bytes of data with one activation, set the major loop to 1 (TCD.CITER = TCD.BITER = 1). The data transfer will begin after the channel service request is acknowledged and the channel is selected to execute. Once the transfer is complete, the TCD.DONE bit will be set and an interrupt will be generated if properly enabled.

For example, the following TCD entry is configured to transfer 16 bytes of data. The eDMA is programmed for one iteration of the major loop transferring 16 bytes per iteration. The source memory has a byte wide memory port located at 0x1000. The destination memory has a word wide port located at 0x2000. The address offsets are programmed in increments to match the size of the transfer; one byte for the source and four bytes for the destination. The final source and destination addresses are adjusted to return to their beginning values.

```
TCD.CITER = TCD.BITER = 1
TCD.NBYTES = 16
TCD.SADDR = 0x1000
TCD.SOFF = 1
TCD.SSIZE = 0
TCD.SLAST = -16
TCD.DADDR = 0x2000
TCD.DOFF = 4
TCD.DSIZE = 2
TCD.DLAST_SGA = -16
TCD.INT_MAJ = 1
TCD.START = 1 (Should be written last after all other fields have been initialized)
All other TCD fields = 0
```

This would generate the following sequence of events:

1. Slave write to the TCD.START bit requests channel service.
2. The channel is selected by arbitration for servicing.

3. eDMA engine writes: TCD.DONE = 0, TCD.START = 0, TCD.ACTIVE = 1.
4. eDMA engine reads: channel TCD data from local memory to internal register file.
5. The source to destination transfers are executed as follows:
 - a) read_byte(0x1000), read_byte(0x1001), read_byte(0x1002), read_byte(0x1003)
 - b) write_word(0x2000) -> first iteration of the minor loop
 - c) read_byte(0x1004), read_byte(0x1005), read_byte(0x1006), read_byte(0x1007)
 - d) write_word(0x2004) -> second iteration of the minor loop
 - e) read_byte(0x1008), read_byte(0x1009), read_byte(0x100a), read_byte(0x100b)
 - f) write_word(0x2008) -> third iteration of the minor loop
 - g) read_byte(0x100c), read_byte(0x100d), read_byte(0x100e), read_byte(0x100f)
 - h) write_word(0x200c) -> last iteration of the minor loop -> major loop complete
6. eDMA engine writes: TCD.SADDR = 0x1000, TCD.DADDR = 0x2000, TCD.CITER = 1 (TCD.BITER).
7. eDMA engine writes: TCD.ACTIVE = 0, TCD.DONE = 1, EDMA_IRQR_n = 1.
8. The channel retires.

The eDMA goes idle or services the next channel.

9.4.5.2 Multiple Requests

The next example is the same as previous with the exception of transferring 32 bytes via two hardware requests. The only fields that change are the major loop iteration count and the final address offsets. The eDMA is programmed for two iterations of the major loop transferring 16 bytes per iteration. After the channel's hardware requests are enabled in the EDMA_ERQR, channel service requests are initiated by the slave device (ERQR should be set after TCD). Note that TCD.START = 0.

```

TCD.CITER = TCD.BITER = 2
TCD.NBYTES = 16
TCD.SADDR = 0x1000
TCD.SOFF = 1
TCD.SSIZE = 0
TCD.SLAST = -32
TCD.DADDR = 0x2000
TCD.DOFF = 4
TCD.DSIZE = 2
TCD.DLAST_SGA = -32
TCD.INT_MAJ = 1
TCD.START = 0 (Should be written last after all other fields have been initialized)
All other TCD fields = 0

```

This would generate the following sequence of events:

1. First hardware (eDMA peripheral request) request for channel service.
2. The channel is selected by arbitration for servicing.
3. eDMA engine writes: TCD.DONE = 0, TCD.START = 0, TCD.ACTIVE = 1.
4. eDMA engine reads: channel TCD data from local memory to internal register file.
5. The source to destination transfers are executed as follows:
 - a) read_byte(0x1000), read_byte(0x1001), read_byte(0x1002), read_byte(0x1003)
 - b) write_word(0x2000) -> first iteration of the minor loop
 - c) read_byte(0x1004), read_byte(0x1005), read_byte(0x1006), read_byte(0x1007)
 - d) write_word(0x2004) -> second iteration of the minor loop
 - e) read_byte(0x1008), read_byte(0x1009), read_byte(0x100a), read_byte(0x100b)
 - f) write_word(0x2008) -> third iteration of the minor loop
 - g) read_byte(0x100c), read_byte(0x100d), read_byte(0x100e), read_byte(0x100f)
 - h) write_word(0x200c) -> last iteration of the minor loop
6. eDMA engine writes: TCD.SADDR = 0x1010, TCD.DADDR = 0x2010, TCD.CITER = 1.
7. eDMA engine writes: TCD.ACTIVE = 0.
8. The channel retires -> one iteration of the major loop.

The eDMA goes idle or services the next channel.

9. Second hardware (eDMA peripheral request) requests channel service.
10. The channel is selected by arbitration for servicing.
11. eDMA engine writes: TCD.DONE = 0, TCD.START = 0, TCD.ACTIVE = 1.
12. eDMA engine reads: channel TCD data from local memory to internal register file.
13. The source to destination transfers are executed as follows:
 - a) read_byte(0x1010), read_byte(0x1011), read_byte(0x1012), read_byte(0x1013)
 - b) write_word(0x2010) -> first iteration of the minor loop
 - c) read_byte(0x1014), read_byte(0x1015), read_byte(0x1016), read_byte(0x1017)
 - d) write_word(0x2014) -> second iteration of the minor loop
 - e) read_byte(0x1018), read_byte(0x1019), read_byte(0x101a), read_byte(0x101b)
 - f) write_word(0x2018) -> third iteration of the minor loop
 - g) read_byte(0x101c), read_byte(0x101d), read_byte(0x101e), read_byte(0x101f)
 - h) write_word(0x201c) -> last iteration of the minor loop -> major loop complete
14. eDMA engine writes: TCD.SADDR = 0x1000, TCD.DADDR = 0x2000, TCD.CITER = 2 (TCD.BITER).
15. eDMA engine writes: TCD.ACTIVE = 0, TCD.DONE = 1, EDMA_IRQR_n = 1.
16. The channel retires -> major loop complete.

The eDMA goes idle or services the next channel.

9.4.5.3 Modulo Feature

The modulo feature of the eDMA provides the ability to easily implement a circular data queue in which the size of the queue is a power of 2. MOD is a 5-bit bitfield for both the source and destination in the TCD, and it specifies which lower address bits are allowed to increment from their original value after the address + offset calculation. All upper address bits remain the same as in the original value. A setting of 0 for this field disables the modulo feature.

Table 9-24 shows how the transfer addresses are specified based on the setting of the MOD field. Here a circular buffer is created where the address wraps to the original value while the 28 upper address bits (0x1234567x) retain their original value. In this example the source address is set to 0x12345670, the offset is set to 4 bytes and the mod field is set to 4, allowing for a 2⁴ byte (16-byte) size queue.

Table 9-24. Modulo Feature Example

Transfer Number	Address
1	0x12345670
2	0x12345674
3	0x12345678
4	0x1234567C
5	0x12345670
6	0x12345674

9.4.6 TCD Status

9.4.6.1 Minor Loop Complete

There are two methods to test for minor loop completion when using software initiated service requests. The first method is to read the TCD.CITER field and test for a change. Another method may be extracted from the sequence shown below. The second method is to test the TCD.START bit AND the TCD.ACTIVE bit. The minor loop complete condition is indicated by both bits reading zero after the TCD.START was written to a one. Polling the TCD.ACTIVE bit may be inconclusive because the active status may be missed if the channel execution is short in duration.

The TCD status bits execute the following sequence for a software activated channel:

1. TCD.START = 1, TCD.ACTIVE = 0, TCD.DONE = 0 (channel service request via software)
2. TCD.START = 0, TCD.ACTIVE = 1, TCD.DONE = 0 (channel is executing)
3. TCD.START = 0, TCD.ACTIVE = 0, TCD.DONE = 0 (channel has completed the minor loop and is idle) or
4. TCD.START = 0, TCD.ACTIVE = 0, TCD.DONE = 1 (channel has completed the major loop and is idle)

The best method to test for minor loop completion when using hardware initiated service requests is to read the TCD.CITER field and test for a change. The hardware request and acknowledge handshakes signals are not visible in the programmer's model.

The TCD status bits execute the following sequence for a hardware activated channel:

1. eDMA peripheral request asserts (channel service request via hardware)
2. TCD.START = 0, TCD.ACTIVE = 1, TCD.DONE = 0 (channel is executing)
3. TCD.START = 0, TCD.ACTIVE = 0, TCD.DONE = 0 (channel has completed the minor loop and is idle) or
4. TCD.START = 0, TCD.ACTIVE = 0, TCD.DONE = 1 (channel has completed the major loop and is idle)

For both activation types, the major loop complete status is explicitly indicated via the TCD.DONE bit.

The TCD.START bit is cleared automatically when the channel begins execution regardless of how the channel was activated.

9.4.6.2 Active Channel TCD Reads

The eDMA will read back the true TCD.SADDR, TCD.DADDR, and TCD.NBYTES values if read while a channel is executing. The true values of the SADDR, DADDR, and NBYTES are the values the eDMA engine is currently using in its internal register file and not the values in the TCD local memory for that channel. The addresses (SADDR and DADDR) and NBYTES (decrements to zero as the transfer progresses) can give an indication of the progress of the transfer. All other values are read back from the TCD local memory.

9.4.6.3 Preemption Status

Preemption is only available when fixed arbitration is selected for both group and channel arbitration modes. A preempt-able situation is one in which a preempt-enabled channel is running and a higher priority request becomes active. When the eDMA engine is not operating in fixed group, fixed channel arbitration mode, the determination of the relative priority of the actively running and the outstanding requests become undefined. Channel and/or group priorities are treated as equal (or more exactly, constantly rotating) when round-robin arbitration mode is selected.

The TCD.ACTIVE bit for the preempted channel remains asserted throughout the preemption. The preempted channel is temporarily suspended while the preempting channel executes one iteration of the major loop. Two TCD.ACTIVE bits set at the same time in the overall TCD map indicates a higher priority channel is actively preempting a lower priority channel.

9.4.7 Channel Linking

Channel linking (or chaining) is a mechanism where one channel sets the TCD.START bit of another channel (or itself) thus initiating a service request for that channel. This operation is automatically performed by the eDMA engine at the conclusion of the major or minor loop when properly enabled.

The minor loop channel linking occurs at the completion of the minor loop (or one iteration of the major loop). The TCD.CITER.E_LINK field are used to determine whether a minor loop link is requested. When enabled, the channel link is made after each iteration of the minor loop except for the last. When the major loop is exhausted, only the major loop channel link fields are used to determine if a channel link should be made. For example, with the initial fields of:

```
TCD.CITER.E_LINK = 1
TCD.CITER.LINKCH = 0xC
TCD.CITER value = 0x4
TCD.MAJOR.E_LINK = 1
TCD.MAJOR.LINKCH = 0x7
```

will execute as:

1. Minor loop done -> set channel 12 TCD.START bit
2. Minor loop done -> set channel 12 TCD.START bit
3. Minor loop done -> set channel 12 TCD.START bit
4. Minor loop done, major loop done -> set channel 7 TCD.START bit

When minor loop linking is enabled (TCD.CITER.E_LINK = 1), the TCD.CITER field uses a nine bit vector to form the current iteration count.

When minor loop linking is disabled (TCD.CITER.E_LINK = 0), the TCD.CITER field uses a 15-bit vector to form the current iteration count. The bits associated with the TCD.CITER.LINKCH field are concatenated onto the CITER value to increase the range of the CITER.

NOTE

After configuration, the TCD.CITER.E_LINK bit and the TCD.BITER.E_LINK bit must be equal or a configuration error will be reported. The CITER and BITER vector widths must be equal in order to calculate the major loop, half-way done interrupt point.

Table 9-25 summarizes how a DMA channel can “link” to another DMA channel, i.e, use another channel’s TCD, at the end of a loop.

Table 9-25. Channel Linking Parameters

Desired Link Behavior	TCD Control Field Name	Description
Link at end of Minor Loop	citer.e_link	Enable channel-to-channel linking on minor loop completion (current iteration)
	citer.linkch	Link channel number when linking at end of minor loop (current iteration)
Link at end of Major Loop	major.e_link	Enable channel-to-channel linking on major loop completion
	major.linkch	Link channel number when linking at end of major loop

9.4.8 Dynamic Programming

This section provides recommended methods to change the programming model during channel execution.

9.4.8.1 Dynamic Channel Linking and Dynamic Scatter/Gather

Dynamic channel linking and dynamic scatter/gather is the process of changing the TCD.MAJOR.E_LINK or TCD.E_SG bits during channel execution. These bits are read from the TCD local memory at the *end* of channel execution thus allowing the user to enable either feature during channel execution.

Because the user is allowed to change the configuration during execution, a coherency model is needed. Consider the scenario where the user attempts to execute a dynamic channel link by enabling the TCD.MAJOR.E_LINK bit at the same time the eDMA engine is retiring the channel. The TCD.MAJOR.E_LINK would be set in the programmer's model, but it would be unclear whether the actual link was made before the channel retired.

The following coherency model is recommended when executing a dynamic channel link or dynamic scatter/gather request:

1. Set the TCD.MAJOR.E_LINK bit
2. Read back the TCD.MAJOR.E_LINK bit
3. Test the TCD.MAJOR.E_LINK request status:
 - a) If the bit is set, the dynamic link attempt was successful.
 - b) If the bit is cleared, the attempted dynamic link did not succeed, the channel was already retiring.

This same coherency model is true for dynamic scatter/gather operations. For both dynamic requests, the TCD local memory controller forces the TCD.MAJOR.E_LINK and TCD.E_SG bits to zero on any writes to a channel's TCD once that channel's TCD.DONE bit is set indicating the major loop is complete.

NOTE

The user must clear the TCD.DONE bit before writing the TCD.MAJOR.E_LINK or TCD.E_SG bits. The TCD.DONE bit is cleared automatically by the eDMA engine once a channel begins execution.

9.5 Document Revision History

Table 9-26. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	This is the first public version of this document.

Chapter 10

Interrupt Controller (INTC)


10.1 Introduction

This chapter describes the interrupt controller (INTC), which schedules interrupt requests (IRQs) from software and internal peripherals to the e200z6 core. The INTC provides interrupt prioritization and preemption, interrupt masking, interrupt priority elevation, and protocol support.

Interrupts implemented by the MCU are defined in the *e200z6 PowerPC™ Core Reference Manual*.

10.1.1 Block Diagram

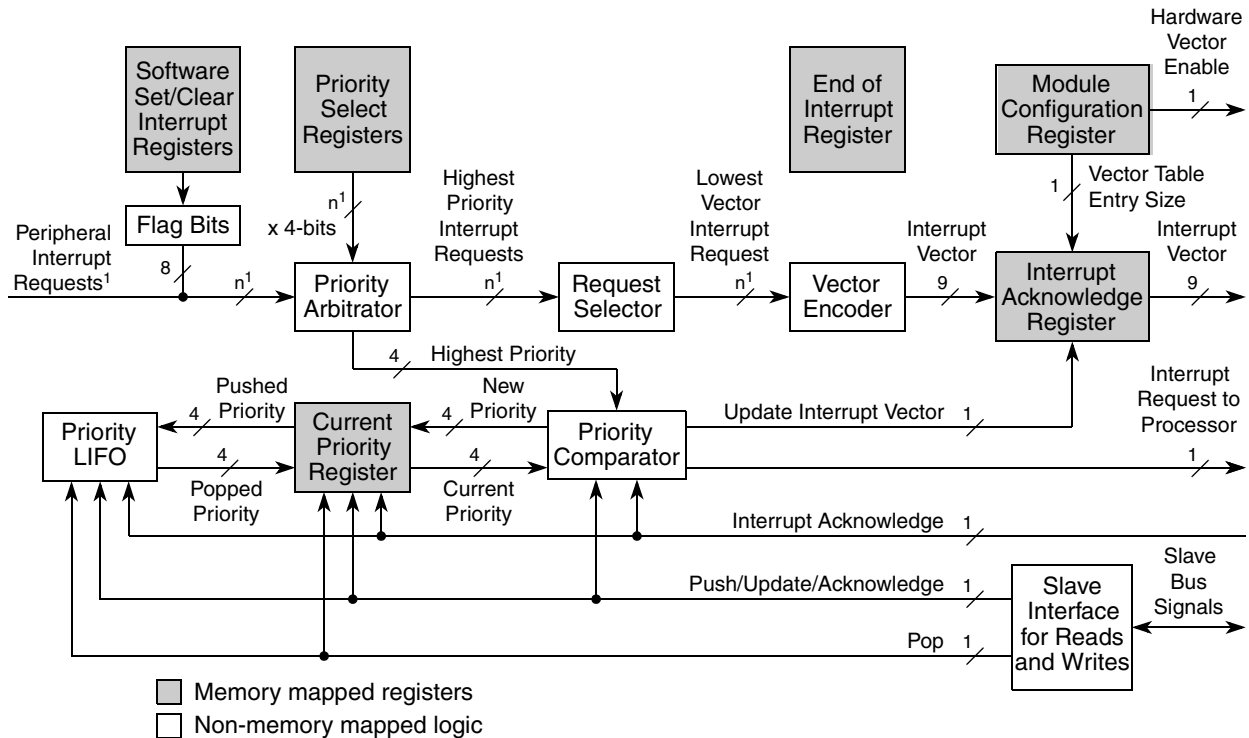Figure 4-1 shows details of the interrupt controller.



¹ The total number of interrupt sources is 284, which includes 17 reserved sources, and 8 software sources.

Figure 10-1. INTC Block Diagram

10.1.2 Overview

Interrupt functionality for the device is handled between the e200z6 core and the interrupt controller. The CPU core has 19 exception sources, each of which can interrupt the core. One exception source is from the interrupt controller (INTC). The INTC provides priority-based preemptive scheduling of interrupt requests. This scheduling scheme is suitable for statically scheduled hard real-time systems. The INTC is optimized for a large number of interrupt requests. It is targeted to work with a PowerPC book E processor and automotive powertrain applications where the ISRs nest to multiple levels.

Table 10-1 displays the interrupt sources and the number available for each module; Figure 10-2 shows a general diagram of INTC software vector mode. Refer to Table 10-1 for interrupt source vector details.

Table 10-1. Interrupt Sources Available

Interrupt Source (IRQs)	Number Available
Software	8
Watchdog	1
Memory	1
eDMA	33
FMPLL	2
External IRQ Input Pins	6
eMIOS	24
eTPU Engine A	33
eQADC	31
DSPI	15
eSCI	2
FlexCAN	100
FEC	3
FlexRay	8

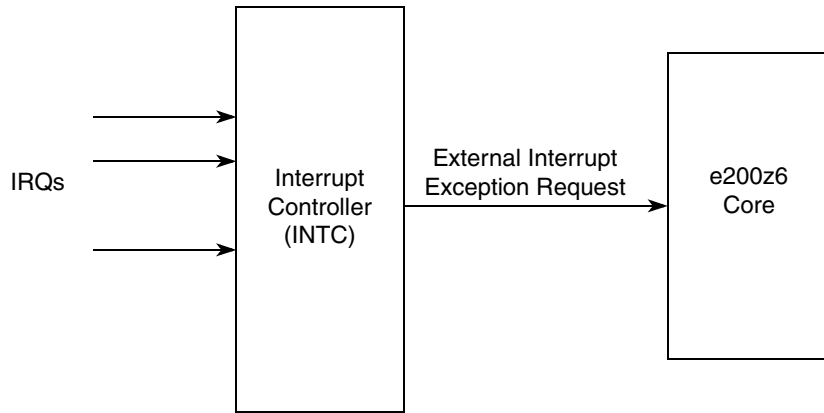


Figure 10-2. INTC Software Vector Mode

Two modes are available to determine the vector for the interrupt request source: software vector mode and hardware vector mode. In software vector mode, as shown in Figure 10-2, the e200z6 branches to a common interrupt exception handler whose location is determined by an address derived from special purpose registers IVPR and IVOR4. The interrupt exception handler reads the INTC_IACKR to determine the vector of the interrupt request source. Typical program flow for software vector mode is shown in Figure 10-3.


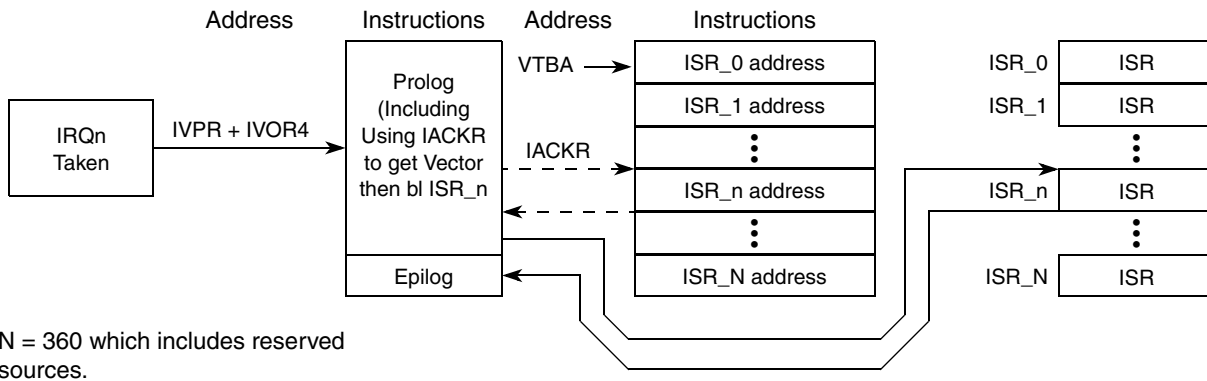


Figure 10-3. Program Flow - Software Vector Mode

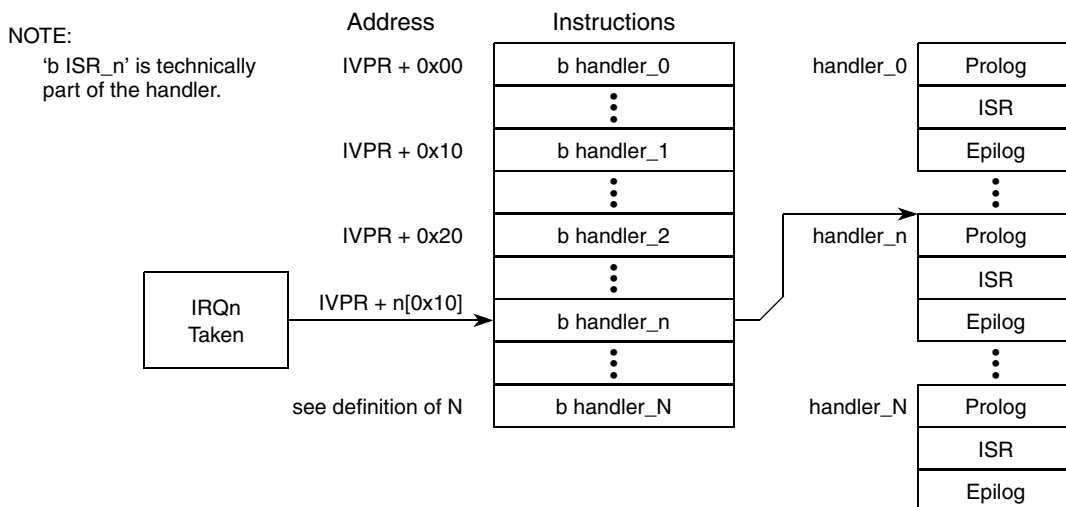In hardware vector mode, the core branches to a unique interrupt exception handler whose location is unique for each interrupt request source. Typical program flow for hardware vector mode is shown in Figure 10-4.



N = 360 which includes reserved sources. The address is IVPR + 0x1680

Figure 10-4. Program Flow - Hardware Vector Mode

For high priority interrupt requests in these target applications, the time from the assertion of the interrupt request from the peripheral to when the processor is performing useful work to service the interrupt request needs to be minimized. The INTC may be optimized to support this goal through the hardware vector mode, where a unique vector is provided for each interrupt request source. It also provides 16 priorities so that lower priority ISRs do not delay the execution of higher priority ISRs. Since each individual application will have different priorities for each source of interrupt request, the priority of each interrupt request is configurable.

When multiple tasks share a resource, coherent accesses to that resource need to be supported. The INTC supports the priority ceiling protocol for coherent accesses. By providing a modifiable priority mask, the priority level can be raised temporarily so that no task can preempt another task that shares the same resource.

Multiple processors can assert interrupt requests to each other through software settable interrupt requests, i.e., by using application software to assert an interrupt request. These same software settable interrupt requests also can be used to break the work involved in servicing an interrupt request into a high priority portion and a low priority portion. The high priority portion is initiated by a peripheral interrupt request, but then the ISR can assert a software settable interrupt request to finish the servicing in a lower priority ISR.

10.1.3 Features

Features include the following:

- Total number of interrupt vectors is 284, of which
 - 8 are software settable sources, and
 - 17 are reserved sources.
- 9-bit unique vector for each interrupt request source in hardware vector mode.

- Each interrupt source can be programmed to one of 16 priorities.
- Preemption.
 - Preemptive prioritized interrupt requests to processor.
 - ISR at a higher priority preempts ISRs or tasks at lower priorities.
 - Automatic pushing or popping of preempted priority to or from a LIFO.
 - Ability to modify the ISR or task priority. Modifying the priority can be used to implement the priority ceiling protocol for accessing shared resources.
- Low latency - three clocks from receipt of interrupt request from peripheral to interrupt request to processor.

10.1.4 Modes of Operation

The interrupt controller has two handshaking modes with the processor: software vector mode and hardware vector mode. The state of the hardware vector enable bit, INTC_MCR[HVEN], determines which mode is used.

In debug mode the interrupt controller operation is identical to its normal operation of software vector mode or hardware vector mode.

10.1.4.1 Software Vector Mode

In software vector mode, there is a common interrupt exception handler address which is calculated by hardware as shown in Figure 10-5. The upper half of the interrupt vector prefix register (IVPR) is added to the offset contained in the external input interrupt vector offset register (IVOR4). Note that since bits IVOR4[28:31] are not part of the offset value, the vector offset must be located on a quad-word (16-byte) aligned location in memory.

In software vector mode, the interrupt exception handler software must read the INTC interrupt acknowledge register (INTC_IACKR) to obtain the vector associated with the corresponding peripheral or software interrupt request. The INTC_IACKR register contains a 32-bit address for a vector table base address (VTBA) plus an offset to access the interrupt vector (INTVEC). The address is then used to branch to the corresponding routine for that peripheral or software interrupt source.

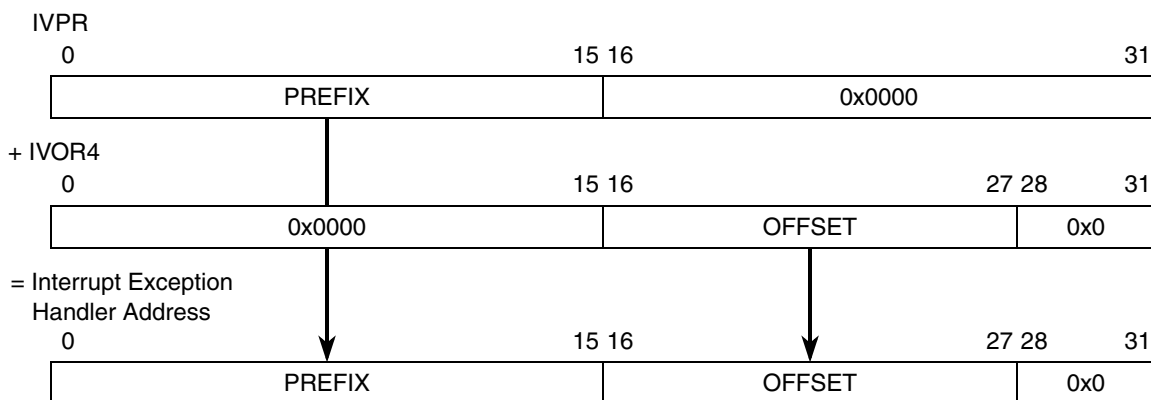


Figure 10-5. Software Vector Mode: Interrupt Exception Handler Address Calculation

Reading the INTC_IACKR acknowledges the INTC’s interrupt request and negates the interrupt request to the processor. The interrupt request to the processor does not clear if a higher priority interrupt request arrives. Even in this case, INTVEC does not update to the higher priority request until the lower priority interrupt request is acknowledged by reading the INTC_IACKR. The reading also pushes the PRI value in the INTC current priority register (INTC_CPR) onto the LIFO and updates PRI in the INTC_CPR with the priority of the interrupt request. The INTC_CPR masks any peripheral or software settable interrupt request at the same or lower priority of the current value of the PRI field in INTC_CPR from generating an interrupt request to the processor.

The interrupt exception handler must write to the end-of-interrupt register (INTC_EOIR) to complete the operation. Writing to the INTC_EOIR ends the servicing of the interrupt request. The INTC’s LIFO is popped into the INTC_CPR’s PRI field by writing to the INTC_EOIR, and the size of a write does not affect the operation of the write. Those values and sizes written to this register neither update the INTC_EOIR contents nor affect whether the LIFO pops. For possible future compatibility, write four bytes of all 0s to the INTC_EOIR. The timing relationship between popping the LIFO and disabling recognition of external input has no restriction. The writes can happen in either order.

However, disabling recognition of the external input before popping the LIFO eases the calculation of the maximum stack depth at the cost of postponing the servicing of the next interrupt request.

10.1.4.2 Hardware Vector Mode

In hardware vector mode, the interrupt exception handler address is specific to the peripheral or software settable interrupt source rather than being common to all of them. No IVOR is used. The interrupt exception handler address is calculated by hardware as shown in Figure 10-6. The upper half of the interrupt vector prefix register (IVPR) is added to an offset which corresponds to the peripheral or software interrupt source which caused the interrupt request. The offset matches the value in the Interrupt Vector field, INTC_IACKR[INTVEC]. Each interrupt exception handler address is aligned on a quad word (16-byte) boundary. IVOR4 is unused in this mode, and software does not need to read INTC_IACKR to get the interrupt vector number.

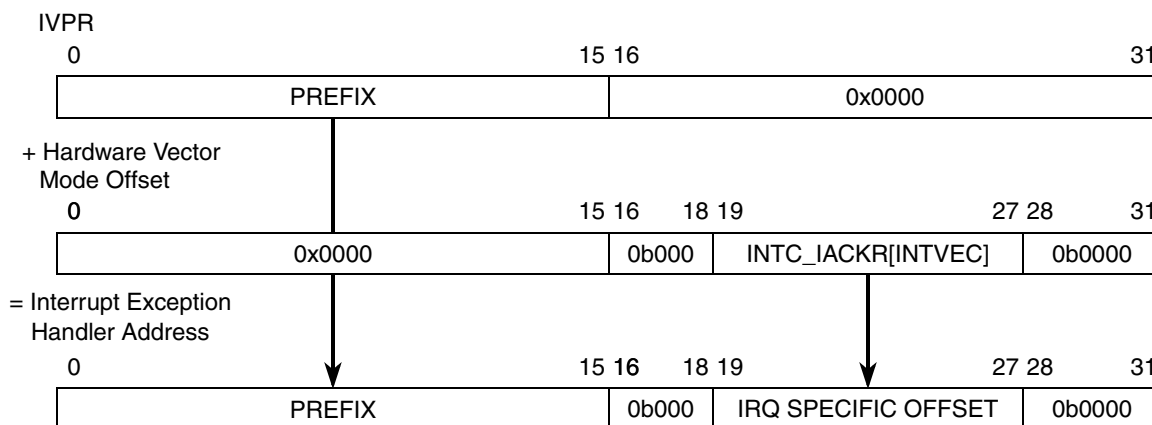


Figure 10-6. Hardware Vector Mode: Interrupt Exception Handler Address Calculation

The processor negates INTC’s interrupt request when automatically acknowledging the interrupt request. However, the interrupt request to the processor will not negate if a higher priority interrupt request arrives.

Even in this case, the interrupt vector number will not update to the higher priority request until the lower priority request is acknowledged by the processor.

The assertion of the interrupt acknowledge signal pushes the PRI value in the INTC_CPR onto the LIFO and updates PRI in the INTC_CPR with the new priority.

10.2 External Signal Description

The INTC does not have any direct external MCU signals. However, there are fifteen external pins which can be configured in the SIU as external interrupt request input pins. When configured in this function, an interrupt on the pin sets a corresponding SIU external interrupt flag. These flags can cause one of five peripheral interrupt requests to the interrupt controller. See [Table 10-2](#) for a list of the external interrupt pins. See the SIU chapter for more information on these pins.

Table 10-2. External Interrupt Signals

Signal/Range Abbreviation ¹	P/A/G ²	Function ³	Description	I/O Type	Reset Function/ State ⁴	Post Reset Function/ State ⁵
EMIOS[14]	P	EMIOS[14]	eMIOS channel	O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[0]$	External interrupt request	I		
	A	CNTXD	CAN D Transmit	O		
	G	GPIO[193]	GPIO	I/O		
EMIOS[15]	P	EMIOS[15]	eMIOS channel	O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[1]$	External interrupt request	I		
	A	CNRXD	CAN D Receive	I		
	G	GPIO[194]	GPIO	I/O		
BOOTCFG[0:1]	P	BOOTCFG[0:1]	Boot configuration input	I	BOOTCFG / Down	— / Down
	A	$\overline{\text{IRQ}}[2:3]$	External interrupt request	I		
	G	GPIO[211:212]	GPIO	I/O		
PLLCFG[0]	P	PLLCFG[0]	FMPLL mode selection	I	PLLCFG / Up	— / Up
	A	$\overline{\text{IRQ}}[4]$	External Interrupt Request	I		
	G	GPIO[208]	GPIO	I/O		
PLLCFG[1]	P	PLLCFG[1]	FMPLL reference selection	I	PLLCFG / Up	— / Up
	A	$\overline{\text{IRQ}}[5]$	External Interrupt Request	I		
	G	GPIO[209]	GPIO	I/O		
TCRCLKA	P	TCRCLKA	eTPU A TCR clock	I	— / Up	— / Up
	A	$\overline{\text{IRQ}}[7]$	External interrupt request	I		
	G	GPIO[113]	GPIO	I/O		
ETPUA[20]	P	ETPUA[20]	eTPU A channel	I/O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[8]$	External interrupt request	I		
	A2	FR_A_TX	FlexRay A Transmit	O		
	G	GPIO[134]	GPIO	I/O		
ETPUA[21]	P	ETPUA[21]	eTPU A channel	I/O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[9]$	External interrupt request	I		
	A2	FR_A_RX	FlexRay A Receive	I		
	G	GPIO[135]	GPIO	I/O		
ETPUA[22]	P	ETPUA[22]	eTPU A channel	I/O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[10]$	External interrupt request	I		
	G	GPIO[136]	GPIO	I/O		

Table 10-2. External Interrupt Signals (continued)

Signal/Range Abbreviation ¹	P/A/G ²	Function ³	Description	I/O Type	Reset Function/ State ⁴	Post Reset Function/ State ⁵
ETPUA[23]	P	ETPUA[23]	eTPU A channel	I/O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[11]$	External interrupt request	I		
	A2	FR_A_TXEN	FlexRay A Transmit Enable	O		
	G	GPIO[137]	GPIO	I/O		
ETPUA[24:27]	P	ETPUA[24:27]	eTPU A channel (output only)	O	—/ WKPCFG	—/ WKPCFG
	A	$\overline{\text{IRQ}}[12:15]$	External interrupt request	I		
	G	GPIO[138:141]	GPIO	I/O		

¹ This is the name that appears on the PBGA pinout.

² Primary, alternate, or GPIO function.

³ For each pin in the table, each line in the function column is a separate function of the pin. For all device I/O pins the selection of primary, secondary or tertiary function is done in the SIU module except where explicitly noted.

⁴ Terminology is O - output, I - input, Up - weak pull up enabled, Down - weak pull down enabled, Low - output driven low, High - output driven high.

⁵ Function after reset of GPI is general-purpose input.

10.3 Memory Map/Register Definition

Table 10-3 is the INTC memory map.

Table 10-3. INTC Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xFFF4_8000)	INTC_MCR	INTC module configuration register	32
Base + 0x4	—	Reserved	—
Base + 0x8	INTC_CPR	INTC current priority register	32
Base + 0xC	—	Reserved	—
Base + 0x010	INTC_IACKR	INTC interrupt acknowledge register ¹	32
Base + 0x014	—	Reserved	—
Base + 0x018	INTC_EOIR	INTC end-of-interrupt register	32
Base + 0x01C	—	Reserved	—
Base + 0x020	INTC_SSCIR0	INTC software set/clear interrupt register 0	8
Base + 0x021	INTC_SSCIR1	INTC software set/clear interrupt register 1	8
Base + 0x022	INTC_SSCIR2	INTC software set/clear interrupt register 2	8
Base + 0x023	INTC_SSCIR3	INTC software set/clear interrupt register 3	8
Base + 0x024	INTC_SSCIR4	INTC software set/clear interrupt register 4	8

Table 10-3. INTC Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x025	INTC_SSCIR5	INTC software set/clear interrupt register 5	8
Base + 0x026	INTC_SSCIR6	INTC software set/clear interrupt register 6	8
Base + 0x027	INTC_SSCIR7	INTC software set/clear interrupt register 7	8
Base + 0x028– Base + 0x03C	—	Reserved	—
Base + 0x040– Base + 0x1A7	INTC_PSR n	INTC priority select register ² 0–360	8

¹ When the HVEN bit in the INTC_MCR is asserted, a read of the INTC_IACKR has no side effects.

² The PRI fields are “Reserved” for peripheral interrupt requests whose vectors are labeled as Reserved in Table 10-9.

10.3.1 Register Descriptions

With the exception of the INTC_SSCIR n and INTC_PSR n registers, all of the registers are 32 bits in width. Any combination of accessing the 4 bytes of a register with a single access is supported, provided that the access does not cross a register boundary. These supported accesses include types and sizes of 8 bits, aligned 16 bits, and aligned 32 bits.

Although INTC_SSCIR n and INTC_PSR n are 8 bits wide, they can be accessed with a single 16-bit or 32-bit access, provided that the access does not cross a 32-bit boundary.

In software vector mode, the side effects of a read of the INTC interrupt acknowledge register (INTC_IACKR) are the same regardless of the size of the read. In either software or hardware vector mode, the size of a write to the INTC end-of-interrupt register (INTC_EOIR) does not affect the operation of the write.

10.3.1.1 INTC Module Configuration Register (INTC_MCR)

The INTC_MCR is used to configure options of the INTC.

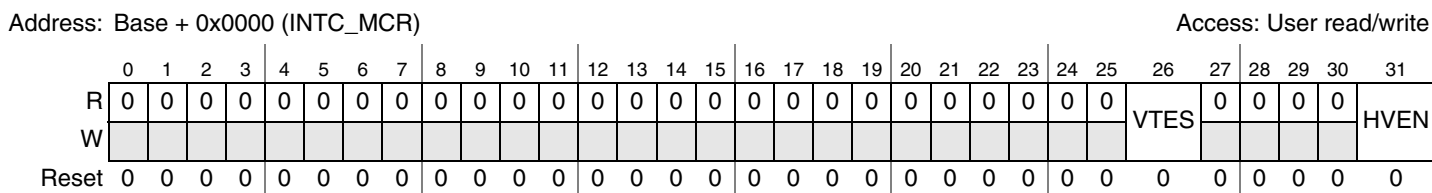


Figure 10-7. INTC Module Configuration Register (INTC_MCR)

Table 10-4. INTC_MCR Field Descriptions

Field	Description
0–25	Reserved, should be cleared.
26 VTES	Vector table entry size. Controls the number of '0's to the right of INTVEC in Section 10.3.1.3, "INTC Interrupt Acknowledge Register (INTC_IACKR) . If the contents of INTC_IACKR are used as an address of an entry in a vector table as in software vector mode, then the number of rightmost '0's determines the size of each vector table entry. VTES impacts software vector mode operation but also affects INTC_IACKR[INTVEC] position in both hardware vector mode and software vector mode. 0 4 bytes (Normal expected use) 1 8 bytes
27–30	Reserved, should be cleared.
31 HVEN	Hardware vector enable. Controls whether the INTC is in hardware vector mode or software vector mode. Refer to Section 10.1.4, "Modes of Operation" , for the details of the handshaking with the processor in each mode. 0 Software vector mode 1 Hardware vector mode

10.3.1.2 INTC Current Priority Register (INTC_CPR)

The INTC_CPR masks any peripheral or software settable interrupt request set at the same or lower priority as the current value of the INTC_CPR[PRI] field from generating an interrupt request to the processor. When the INTC interrupt acknowledge register (INTC_IACKR) is read in software vector mode or the interrupt acknowledge signal from the processor is asserted in hardware vector mode, the value of PRI is pushed onto the LIFO, and PRI is updated with the priority of the preempting interrupt request. When the INTC end-of-interrupt register (INTC_EOIR) is written, the LIFO is popped into the INTC_CPR's PRI field.

The masking priority can be raised or lowered by writing to the PRI field, supporting the PCP. Refer to [Section 10.5.5, "Priority Ceiling Protocol."](#)

NOTE

On some Power Architecture MCUs, a store to raise the PRI field which closely precedes an access to a shared resource can result in a non-coherent access to that resource unless an MBAR or MSYNC followed by an ISYNC sequence of instructions is executed between the accesses. An MBAR or MSYNC instruction is also necessary after accessing the resource but before lowering the PRI field. Refer to [Section 10.5.5.2, "Ensuring Coherency."](#)

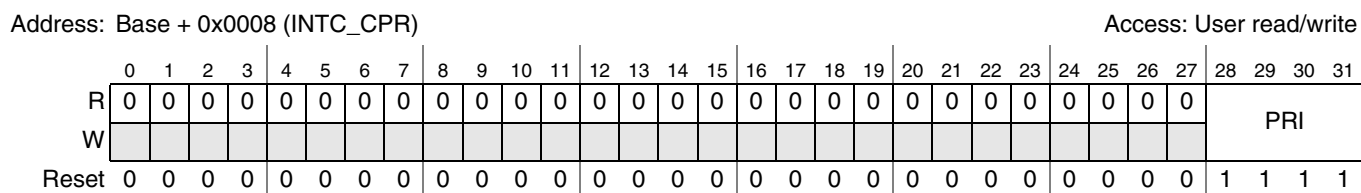


Figure 10-8. INTC Current Priority Register (INTC_CPR)

Table 10-5. INTC_CPR Field Descriptions

Field	Description
0–27	Reserved, should be cleared.
28–31 PRI	Priority. PRI is the priority of the currently executing ISR according to the field values defined below. 1111 Priority 15 (highest) 1110 Priority 14 ... 0001 Priority 1 0000 Priority 0 (lowest)

10.3.1.3 INTC Interrupt Acknowledge Register (INTC_IACKR)

The INTC_IACKR provides a value that can be used to load the address of an ISR from a vector table. The vector table can be composed of addresses of the ISRs specific to their respective interrupt vectors.

In software vector mode, reading the INTC_IACKR acknowledges the INTC's interrupt request. Refer to [Section 10.1.4.1, “Software Vector Mode”](#) for a detailed description of the effect on the interrupt request to the processor. The reading also pushes the PRI value in the INTC current priority register (INTC_CPR) onto the LIFO and updates PRI in the INTC_CPR with the priority of the interrupt request. The side effect from the reads in software vector mode, that is, the effect on the interrupt request to the processor, the current priority, and the LIFO, are the same regardless of the size of the read

Reading the INTC_IACKR does not have side effects in hardware vector mode.

NOTE

The INTC_IACKR must not be read speculatively while in software vector mode. Therefore, for future compatibility, the TLB entry covering the INTC_IACKR must be configured to be guarded.

In software vector mode, the INTC_IACKR must be read before setting MSR[EE]. No synchronization instruction is needed after reading the INTC_IACKR and before setting MSR[EE].

However, the time for the processor to recognize the assertion or negation of the external input to it is not defined by the book E architecture and can be greater than 0. Therefore, insert instructions between the reading of the INTC_IACKR and the setting of MSR[EE] that will consume at least two processor clock cycles. This length of time will allow the negation of the interrupt request to propagate through the processor before MSR[EE] is set.

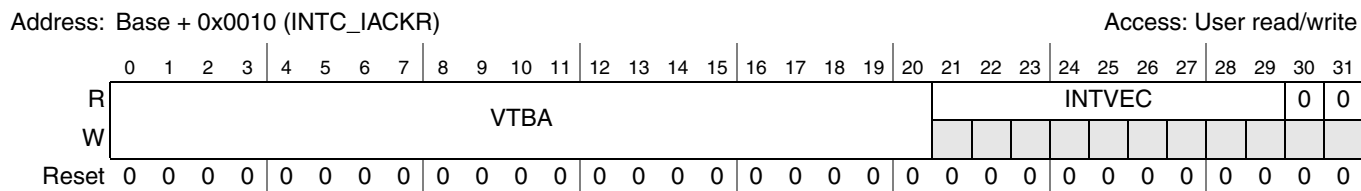


Figure 10-9. INTC Interrupt Acknowledge Register (INTC_IACKR)—INTC_MCR[VTES] = 0

Address: Base + 0x0010 (INTC_IACKR)

Access: User read/write

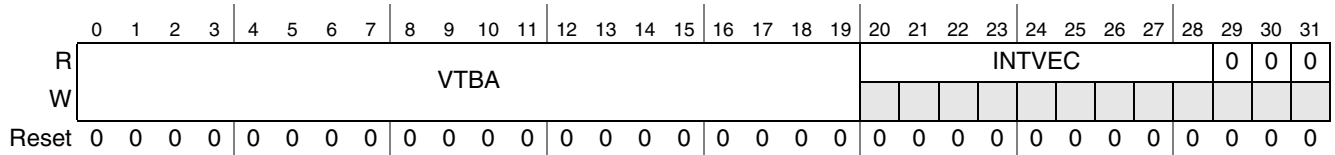


Figure 10-10. INTC Interrupt Acknowledge Register (INTC_IACKR)—INTC_MCR[VTES] = 1

Table 10-6. INTC_IACKR Field Descriptions

Field	Description
0–20 or 0–19 VTBA	Vector table base address. Can be the base address of a vector table of addresses of ISRs. The VTBA only uses the leftmost 20 bits when the VTES bit in INTC_MCR is asserted.
21–29 or 20–28 INTVEC	Interrupt vector. Vector of the peripheral or software-settable interrupt request that caused the interrupt request to the processor. When the interrupt request to the processor asserts, the INTVEC is updated, whether the INTC is in software or hardware vector mode. Note: If INTC_MCR[VTES] = 1, then the INTVEC field is shifted left one position to bits 20–28. VTBA is then shortened by one bit to bits 0–19.
30–31	Reserved, should be cleared.

10.3.1.4 INTC End-of-Interrupt Register (INTC_EOIR)

Writing to the INTC_EOIR signals the end of the servicing of the interrupt request. When the INTC_EOIR is written, the priority last pushed on the LIFO is popped into INTC_CPR. The values and size of data written to the INTC_EOIR are ignored. Those values and sizes written to this register neither update the INTC_EOIR contents or affect whether the LIFO pops. For possible future compatibility, write four bytes of all 0's to the INTC_EOIR.

Reading the INTC_EOIR has no effect on the LIFO.

Address: Base + 0x0018 (INTC_EOIR)

Access: User write-only

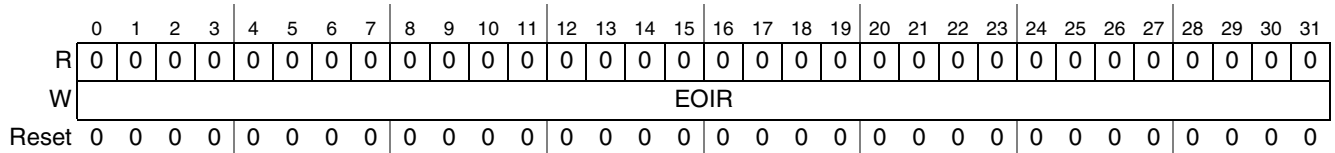


Figure 10-11. INTC End-of-Interrupt Register (INTC_EOIR)

10.3.1.5 INTC Software Set/Clear Interrupt Registers (INTC_SSCIR0–7)

The INTC_SSCIR_n support the setting or clearing of software settable interrupt requests. These registers contain eight independent sets of bits to set and clear a corresponding flag bit by software. With the exception of being set by software, this flag bit behaves the same as a flag bit set within a peripheral. This flag bit generates an interrupt request within the INTC just like a peripheral interrupt request. Writing a 1 to SET_n will leave SET_n unchanged at 0 but will set CLR_n. Writing a 0 to SET_n will have no effect. CLR_n is the flag bit. Writing a 1 to CLR_n will clear it. Writing a 0 to CLR_n will have no effect. If a 1 is written to a pair SET_n and CLR_n bits at the same time, CLR_n will be asserted, regardless of whether CLR_n was asserted before the write.

Interrupt Controller (INTC)

Although INTC_SSCIR n is 8 bits wide, it can be accessed with a single 16-bit or 32-bit access, provided that the access does not cross a 32-bit boundary.

Address: Base + 0x0020 + n (INTC_SSCIR n); $n = 0-7$

Access: User read/write

	0	1	2	3	4	5	6	7
R	0	0	0	0	0	0	0	CLR n
W							SET n	
Reset	0	0	0	0	0	0	0	0

Figure 10-12. INTC Software Set/Clear Interrupt Register (INTC_SSCIR n)

Table 10-7. INTC_SSCIR n Field Descriptions

Field	Description
0-5	Reserved, should be cleared.
6 SET n	Set flag bits. Writing a 1 will set the corresponding CLR n bit. Writing a 0 will have no effect. Each SET n always will be read as a 0.
7 CLR n	Clear flag bits. CLR n is the flag bit. Writing a 1 to CLR n will clear it provided that a 1 is not written simultaneously to its corresponding SET n bit. Writing a 0 to CLR n will have no effect. 0 Interrupt request not pending within INTC. 1 Interrupt request pending within INTC.

10.3.1.6 INTC Priority Select Registers (INTC_PSR0-360)

The INTC_PSR n support the selection of an individual priority for each source of interrupt request. The unique vector of each peripheral or software settable interrupt request determines which INTC_PSR n is assigned to that interrupt request. The software settable interrupt requests 0-7 are assigned vectors 0-7, and their priorities are configured in INTC_PSR0-INTC_PSR7, respectively. The peripheral interrupt requests are assigned vectors 8-360 and their priorities are configured in INTC_PSR8 through INTC_PSR360, respectively.

Although INTC_PSR n is 8 bits wide, it can be accessed with a single 16-bit or 32-bit access, provided that the access does not cross a 32-bit boundary.

NOTE

The PRI n field of an INTC_PSR n must not be modified while its corresponding peripheral or software settable interrupt request is asserted.

Address: Base + 0x0040 + n (INTC_PSR n); $n = 0-360$

Access: User read/write

	0	1	2	3	4	5	6	7
R	0	0	0	0	PRI n			
W								
Reset	0	0	0	0	0	0	0	0

Figure 10-13. INTC Priority Select Registers (INTC_PSR n)

Table 10-8. INTC_SSCIR n Field Descriptions

Field	Description
0–3	Reserved, should be cleared.
4–7 PRI n	Priority select. Selects the priority for corresponding interrupt request. 1111 Priority 15 (highest) 1110 Priority 14 ... 0001 Priority 1 0000 Priority 0 (lowest)

10.4 Functional Description

10.4.1 Interrupt Request Sources

The INTC has two types of interrupt requests, peripheral and software settable. The assignments between the interrupt requests from the modules to the vectors for input to the e200z6 are shown in [Table 10-9](#). The Offset column lists the IRQ specific offsets when using hardware vector mode. The Source column is written in C language syntax. The syntax is ‘module_register[bit].’ Interrupt requests from the same module location or ORed together. The individual interrupt priorities are selected in INTC_PSR n , where the specific select register is assigned according to the vector.

Table 10-9. MPC5567 Interrupt Request Sources

Offset	Vector	Source ¹	Description
Software			
0x0000	0	INTC_SSCIR0[CLR0]	INTC software settable Clear flag 0
0x0010	1	INTC_SSCIR1[CLR1]	INTC software settable Clear flag 1
0x0020	2	INTC_SSCIR2[CLR2]	INTC software settable Clear flag 2
0x0030	3	INTC_SSCIR3[CLR3]	INTC software settable Clear flag 3
0x0040	4	INTC_SSCIR4[CLR4]	INTC software settable Clear flag 4
0x0050	5	INTC_SSCIR5[CLR5]	INTC software settable Clear flag 5
0x0060	6	INTC_SSCIR6[CLR6]	INTC software settable Clear flag 6
0x0070	7	INTC_SSCIR7[CLR7]	INTC software settable Clear flag 7
Watchdog / ECC			
0x0080	8	ECSM_SWTIR[SWTIC]	ECSM Software Watchdog Interrupt flag
0x0090	9	ECSM_ESR[RNCE] ECSM_ESR[FNCE]	ECSM combined interrupt requests: Internal SRAM Non-Correctable Error and Flash Non-Correctable Error
eDMAC			
0x00A0	10	EDMA_ERL[ERR31:ERR0]	eDMA channel Error flags 31–0
0x00B0	11	EDMA_IRQRL[INT00]	eDMA channel Interrupt 0
0x00C0	12	EDMA_IRQRL[INT01]	eDMA channel Interrupt 1
0x00D0	13	EDMA_IRQRL[INT02]	eDMA channel Interrupt 2
0x00E0	14	EDMA_IRQRL[INT03]	eDMA channel Interrupt 3
0x00F0	15	EDMA_IRQRL[INT04]	eDMA channel Interrupt 4
0x0100	16	EDMA_IRQRL[INT05]	eDMA channel Interrupt 5
0x0110	17	EDMA_IRQRL[INT06]	eDMA channel Interrupt 6
0x0120	18	EDMA_IRQRL[INT07]	eDMA channel Interrupt 7
0x0130	19	EDMA_IRQRL[INT08]	eDMA channel Interrupt 8
0x0140	20	EDMA_IRQRL[INT09]	eDMA channel Interrupt 9
0x0150	21	EDMA_IRQRL[INT10]	eDMA channel Interrupt 10
0x0160	22	EDMA_IRQRL[INT11]	eDMA channel Interrupt 11
0x0170	23	EDMA_IRQRL[INT12]	eDMA channel Interrupt 12
0x0180	24	EDMA_IRQRL[INT13]	eDMA channel Interrupt 13
0x0190	25	EDMA_IRQRL[INT14]	eDMA channel Interrupt 14
0x01A0	26	EDMA_IRQRL[INT15]	eDMA channel Interrupt 15
0x01B0	27	EDMA_IRQRL[INT16]	eDMA channel Interrupt 16

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x01C0	28	EDMA_IRQRL[INT17]	eDMA channel Interrupt 17
0x01D0	29	EDMA_IRQRL[INT18]	eDMA channel Interrupt 18
0x01E0	30	EDMA_IRQRL[INT19]	eDMA channel Interrupt 19
0x01F0	31	EDMA_IRQRL[INT20]	eDMA channel Interrupt 20
0x0200	32	EDMA_IRQRL[INT21]	eDMA channel Interrupt 21
0x0210	33	EDMA_IRQRL[INT22]	eDMA channel Interrupt 22
0x0220	34	EDMA_IRQRL[INT23]	eDMA channel Interrupt 23
0x0230	35	EDMA_IRQRL[INT24]	eDMA channel Interrupt 24
0x0240	36	EDMA_IRQRL[INT25]	eDMA channel Interrupt 25
0x0250	37	EDMA_IRQRL[INT26]	eDMA channel Interrupt 26
0x0260	38	EDMA_IRQRL[INT27]	eDMA channel Interrupt 27
0x0270	39	EDMA_IRQRL[INT28]	eDMA channel Interrupt 28
0x0280	40	EDMA_IRQRL[INT29]	eDMA channel Interrupt 29
0x0290	41	EDMA_IRQRL[INT30]	eDMA channel Interrupt 30
0x02A0	42	EDMA_IRQRL[INT31]	eDMA channel Interrupt 31
PLL			
0x02B0	43	FMPLL_SYNSR[LOCF]	FMPLL Loss of Clock Flag
0x02C0	44	FMPLL_SYNSR[LOLF]	FMPLL Loss of Lock Flag
SIU			
0x02D0	45	SIU_OSR[OVF15:OVF0]	SIU combined overrun interrupt requests of the external interrupt Overrun Flags
0x02E0	46	SIU_EIISR[EIF0]	SIU External Interrupt Flag 0
0x02F0	47	SIU_EIISR[EIF1]	SIU External Interrupt Flag 1
0x0300	48	SIU_EIISR[EIF2]	SIU External Interrupt Flag 2
0x0310	49	SIU_EIISR[EIF3]	SIU External Interrupt Flag 3
0x0320	50	SIU_EIISR[EIF15:EIF4]	SIU External Interrupt Flags 15–4
eMIOS			
0x0330	51	EMIOS_GFR[F0]	eMIOS channel 0 Flag
0x0340	52	EMIOS_GFR[F1]	eMIOS channel 1 Flag
0x0350	53	EMIOS_GFR[F2]	eMIOS channel 2 Flag
0x0360	54	EMIOS_GFR[F3]	eMIOS channel 3 Flag
0x0370	55	EMIOS_GFR[F4]	eMIOS channel 4 Flag
0x0380	56	EMIOS_GFR[F5]	eMIOS channel 5 Flag

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x0390	57	EMIOS_GFR[F6]	eMIOS channel 6 Flag
0x03A0	58	EMIOS_GFR[F7]	eMIOS channel 7 Flag
0x03B0	59	EMIOS_GFR[F8]	eMIOS channel 8 Flag
0x03C0	60	EMIOS_GFR[F9]	eMIOS channel 9 Flag
0x03D0	61	EMIOS_GFR[F10]	eMIOS channel 10 Flag
0x03E0	62	EMIOS_GFR[F11]	eMIOS channel 11 Flag
0x03F0	63	EMIOS_GFR[F12]	eMIOS channel 12 Flag
0x0400	64	EMIOS_GFR[F13]	eMIOS channel 13 Flag
0x0410	65	EMIOS_GFR[F14]	eMIOS channel 14 Flag
0x0420	66	EMIOS_GFR[F15]	eMIOS channel 15 Flag
eTPU_A			
0x0430	67	ETPU_MCR[MGEA] ETPU_MCR[MGEB] ETPU_MCR[ILFA] ETPU_MCR[ILFB] ETPU_MCR[SCMMISF]	eTPU Global Exception
0x0440	68	ETPU_CISR_A[CIS0]	eTPU Engine A Channel 0 Interrupt Status
0x0450	69	ETPU_CISR_A[CIS1]	eTPU Engine A Channel 1 Interrupt Status
0x0460	70	ETPU_CISR_A[CIS2]	eTPU Engine A Channel 2 Interrupt Status
0x0470	71	ETPU_CISR_A[CIS3]	eTPU Engine A Channel 3 Interrupt Status
0x0480	72	ETPU_CISR_A[CIS4]	eTPU Engine A Channel 4 Interrupt Status
0x0490	73	ETPU_CISR_A[CIS5]	eTPU Engine A Channel 5 Interrupt Status
0x04A0	74	ETPU_CISR_A[CIS6]	eTPU Engine A Channel 6 Interrupt Status
0x04B0	75	ETPU_CISR_A[CIS7]	eTPU Engine A Channel 7 Interrupt Status
0x04C0	76	ETPU_CISR_A[CIS8]	eTPU Engine A Channel 8 Interrupt Status
0x04D0	77	ETPU_CISR_A[CIS9]	eTPU Engine A Channel 9 Interrupt Status
0x04E0	78	ETPU_CISR_A[CIS10]	eTPU Engine A Channel 10 Interrupt Status
0x04F0	79	ETPU_CISR_A[CIS11]	eTPU Engine A Channel 11 Interrupt Status
0x0500	80	ETPU_CISR_A[CIS12]	eTPU Engine A Channel 12 Interrupt Status
0x0510	81	ETPU_CISR_A[CIS13]	eTPU Engine A Channel 13 Interrupt Status
0x0520	82	ETPU_CISR_A[CIS14]	eTPU Engine A Channel 14 Interrupt Status
0x0530	83	ETPU_CISR_A[CIS15]	eTPU Engine A Channel 15 Interrupt Status
0x0540	84	ETPU_CISR_A[CIS16]	eTPU Engine A Channel 16 Interrupt Status
0x0550	85	ETPU_CISR_A[CIS17]	eTPU Engine A Channel 17 Interrupt Status

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x0560	86	ETPU_CISR_A[CIS18]	eTPU Engine A Channel 18 Interrupt Status
0x0570	87	ETPU_CISR_A[CIS19]	eTPU Engine A Channel 19 Interrupt Status
0x0580	88	ETPU_CISR_A[CIS20]	eTPU Engine A Channel 20 Interrupt Status
0x0590	89	ETPU_CISR_A[CIS21]	eTPU Engine A Channel 21 Interrupt Status
0x05A0	90	ETPU_CISR_A[CIS22]	eTPU Engine A Channel 22 Interrupt Status
0x05B0	91	ETPU_CISR_A[CIS23]	eTPU Engine A Channel 23 Interrupt Status
0x05C0	92	ETPU_CISR_A[CIS24]	eTPU Engine A Channel 24 Interrupt Status
0x05D0	93	ETPU_CISR_A[CIS25]	eTPU Engine A Channel 25 Interrupt Status
0x05E0	94	ETPU_CISR_A[CIS26]	eTPU Engine A Channel 26 Interrupt Status
0x05F0	95	ETPU_CISR_A[CIS27]	eTPU Engine A Channel 27 Interrupt Status
0x0600	96	ETPU_CISR_A[CIS28]	eTPU Engine A Channel 28 Interrupt Status
0x0610	97	ETPU_CISR_A[CIS29]	eTPU Engine A Channel 29 Interrupt Status
0x0620	98	ETPU_CISR_A[CIS30]	eTPU Engine A Channel 30 Interrupt Status
0x0630	99	ETPU_CISR_A[CIS31]	eTPU Engine A Channel 31 Interrupt Status
eQADC			
0x0640	100	EQADC_FISR _x [TORF] EQADC_FISR _x [RFOF] EQADC_FISR _x [CFUF]	eQADC combined overrun interrupt requests from all of the FIFOs: Trigger Overrun, Receive FIFO Overflow, and command FIFO Underflow
0x0650	101	EQADC_FISR0[NCF]	eQADC command FIFO 0 Non-Coherency Flag
0x0660	102	EQADC_FISR0[PF]	eQADC command FIFO 0 Pause Flag
0x0670	103	EQADC_FISR0[EOQF]	eQADC command FIFO 0 command queue End of Queue Flag
0x0680	104	EQADC_FISR0[CFFF]	eQADC Command FIFO 0 Fill Flag
0x0690	105	EQADC_FISR0[RFDF]	eQADC Receive FIFO 0 Drain Flag
0x06A0	106	EQADC_FISR1[NCF]	eQADC command FIFO 1 Non-Coherency Flag
0x06B0	107	EQADC_FISR1[PF]	eQADC command FIFO 1 Pause Flag
0x06C0	108	EQADC_FISR1[EOQF]	eQADC command FIFO 1 command queue End of Queue Flag
0x06D0	109	EQADC_FISR1[CFFF]	eQADC Command FIFO 1 Fill Flag
0x06E0	110	EQADC_FISR1[RFDF]	eQADC Receive FIFO 1 Drain Flag
0x06F0	111	EQADC_FISR2[NCF]	eQADC command FIFO 2 Non-Coherency Flag
0x0700	112	EQADC_FISR2[PF]	eQADC command FIFO 2 Pause Flag
0x0710	113	EQADC_FISR2[EOQF]	eQADC command FIFO 2 command queue End of Queue Flag

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x0720	114	EQADC_FISR2[CFFF]	eQADC Command FIFO 2 Fill Flag
0x0730	115	EQADC_FISR2[RFDF]	eQADC Receive FIFO 2 Drain Flag
0x0740	116	EQADC_FISR3[NCF]	eQADC command FIFO 3 Non-Coherency Flag
0x0750	117	EQADC_FISR3[PF]	eQADC command FIFO 3 Pause Flag
0x0760	118	EQADC_FISR3[EOQF]	eQADC command FIFO 3 command queue End of Queue Flag
0x0770	119	EQADC_FISR3[CFFF]	eQADC Command FIFO 3 Fill Flag
0x0780	120	EQADC_FISR3[RFDF]	eQADC Receive FIFO 3 Drain Flag
0x0790	121	EQADC_FISR4[NCF]	eQADC command FIFO 4 Non-Coherency Flag
0x07A0	122	EQADC_FISR4[PF]	eQADC command FIFO 4 Pause Flag
0x07B0	123	EQADC_FISR4[EOQF]	eQADC command FIFO 4 command queue End of Queue Flag
0x07C0	124	EQADC_FISR4[CFFF]	eQADC Command FIFO 4 Fill Flag
0x07D0	125	EQADC_FISR4[RFDF]	eQADC Receive FIFO 4 Drain Flag
0x07E0	126	EQADC_FISR5[NCF]	eQADC command FIFO 5 Non-Coherency Flag
0x07F0	127	EQADC_FISR5[PF]	eQADC command FIFO 5 Pause Flag
0x0800	128	EQADC_FISR5[EOQF]	eQADC command FIFO 5 command queue End of Queue Flag
0x0810	129	EQADC_FISR5[CFFF]	eQADC Command FIFO 5 Fill Flag
0x0820	130	EQADC_FISR5[RFDF]	eQADC Receive FIFO 5 Drain Flag
DSPI_B, DSPI_C, DSPI_D			
0x0830	131	DSPI_BSR[TFUF] DSPI_BSR[RFOF]	DSPI_B combined overrun interrupt requests: Transmit FIFO Underflow and Receive FIFO Overflow
0x0840	132	DSPI_BSR[EOQF]	DSPI_B transmit FIFO End of Queue Flag
0x0850	133	DSPI_BSR[TFFF]	DSPI_B Transfer complete
0x0860	134	DSPI_BSR[TCF]	DSPI_B Rx FIFO Drain Request
0x0870	135	DSPI_BSR[RFDF]	DSPI_B Tx FIFO Fill Request
0x0880	136	DSPI_CSR[TFUF] DSPI_CSR[RFOF]	DSPI_C combined overrun interrupt requests: Transmit FIFO Underflow and Receive FIFO Overflow
0x0890	137	DSPI_CSR[EOQF]	DSPI_C transmit FIFO End of Queue Flag
0x08A0	138	DSPI_CSR[TFFF]	DSPI_C Transfer complete
0x08B0	139	DSPI_CSR[TCF]	DSPI_C Rx FIFO Drain Request
0x08C0	140	DSPI_CSR[RFDF]	DSPI_C Tx FIFO Fill Request

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x08D0	141	DSPI_DSR[TFUF] DSPI_DSR[RFOF]	DSPI_D combined overrun interrupt requests: Transmit FIFO Underflow and Receive FIFO Overflow
0x08E0	142	DSPI_DSR[EOQF]	DSPI_D transmit FIFO End of Queue Flag
0x08F0	143	DSPI_DSR[TFFF]	DSPI_D Transfer complete
0x0900	144	DSPI_DSR[TCF]	DSPI_D Rx FIFO Drain Request
0x0910	145	DSPI_DSR[RFDF]	DSPI_D Tx FIFO Fill Request
eSCI			
0x0920	146	ESCIA_SR[TDRE] ESCIA_SR[TC] ESCIA_SR[RDRF] ESCIA_SR[IDLE] ESCIA_SR[OR] ESCIA_SR[NF] ESCIA_SR[FE] ESCIA_SR[PF] ESCIA_SR[BERR] ESCIA_SR[RXRDY] ESCIA_SR[TXRDY] ESCIA_SR[LWAKE] ESCIA_SR[STO] ESCIA_SR[PBERR] ESCIA_SR[CERR] ESCIA_SR[CKERR] ESCIA_SR[FRC] ESCIA_SR[OVFL]	Combined Interrupt Requests of ESCI Module A: Transmit Data Register Empty, Transmit Complete, Receive Data Register Full, Idle line, Overrun, Noise Flag, Framing Error Flag, and Parity Error Flag interrupt requests, SCI Status Register 2 Bit Error interrupt request, LIN Status Register 1 Receive Data Ready, Transmit Data Ready, Received LIN Wakeup Signal, Slave TimeOut, Physical Bus Error, CRC Error, Checksum Error, Frame Complete interrupts requests, and LIN Status Register 2 Receive Register Overflow
0x0930	147	Reserved	Reserved
0x0940	148	Reserved	Reserved
0x0950	149	ESCIB_SR[TDRE] ESCIB_SR[TC] ESCIB_SR[RDRF] ESCIB_SR[IDLE] ESCIB_SR[OR] ESCIB_SR[NF] ESCIB_SR[FE] ESCIB_SR[PF] ESCIB_SR[BERR] ESCIB_SR[RXRDY] ESCIB_SR[TXRDY] ESCIB_SR[LWAKE] ESCIB_SR[STO] ESCIB_SR[PBERR] ESCIB_SR[CERR] ESCIB_SR[CKERR] ESCIB_SR[FRC] ESCIB_SR[OVFL]	Combined Interrupt Requests of ESCI Module B: Transmit Data Register Empty, Transmit Complete, Receive Data Register Full, Idle line, Overrun, Noise Flag, Framing Error Flag, and Parity Error Flag interrupt requests, SCI Status Register 2 Bit Error interrupt request, LIN Status Register 1 Receive Data Ready, Transmit Data Ready, Received LIN Wakeup Signal, Slave TimeOut, Physical Bus Error, CRC Error, Checksum Error, Frame Complete interrupts requests, and LIN Status Register 2 Receive Register Overflow
0x0960	150	Reserved	Reserved

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x0970	151	Reserved	Reserved
FlexCAN_A and FlexCAN_C			
0x0980	152	CANA_ESR[BOFF_INT] CANA_ESR[TWRN_INT] CANA_ESR[RWRN_INT]	FLEXCAN_A Bus off Interrupt FLEXCAN_A Transmit Warning Interrupt FLEXCAN_A Receive Warning Interrupt
0x0990	153	CANA_ESR[ERR_INT]	FLEXCAN_A Error Interrupt
0x09A0	154	Reserved	Reserved
0x09B0	155	CANA_IFRL[BUF0]	FLEXCAN_A Buffer 0 Interrupt
0x09C0	156	CANA_IFRL[BUF1]	FLEXCAN_A Buffer 1 Interrupt
0x09D0	157	CANA_IFRL[BUF2]	FLEXCAN_A Buffer 2 Interrupt
0x09E0	158	CANA_IFRL[BUF3]	FLEXCAN_A Buffer 3 Interrupt
0x09F0	159	CANA_IFRL[BUF4]	FLEXCAN_A Buffer 4 Interrupt
0x0A00	160	CANA_IFRL[BUF5]	FLEXCAN_A Buffer 5 Interrupt
0x0A10	161	CANA_IFRL[BUF6]	FLEXCAN_A Buffer 6 Interrupt
0x0A20	162	CANA_IFRL[BUF7]	FLEXCAN_A Buffer 7 Interrupt
0x0A30	163	CANA_IFRL[BUF8]	FLEXCAN_A Buffer 8 Interrupt
0x0A40	164	CANA_IFRL[BUF9]	FLEXCAN_A Buffer 9 Interrupt
0x0A50	165	CANA_IFRL[BUF10]	FLEXCAN_A Buffer 10 Interrupt
0x0A60	166	CANA_IFRL[BUF11]	FLEXCAN_A Buffer 11 Interrupt
0x0A70	167	CANA_IFRL[BUF12]	FLEXCAN_A Buffer 12 Interrupt
0x0A80	168	CANA_IFRL[BUF13]	FLEXCAN_A Buffer 13 Interrupt
0x0A90	169	CANA_IFRL[BUF14]	FLEXCAN_A Buffer 14 Interrupt
0x0AA0	170	CANA_IFRL[BUF15]	FLEXCAN_A Buffer 15 Interrupt
0x0AB0	171	CANA_IFRL[BUF31:BUF16]	FLEXCAN_A Buffers 31 - 16 Interrupts
0x0AC0	172	CANA_IFRH[BUF63:BUF32]	FLEXCAN_A Buffers 63 - 32 Interrupts
0x0AD0	173	CANC_ESR[BOFF_INT] CANC_ESR[TWRN_INT] CANC_ESR[RWRN_INT]	FLEXCAN_C Bus off Interrupt FLEXCAN_C Transmit Warning Interrupt FLEXCAN_C Receive Warning Interrupt
0x0AE0	174	CANC_ESR[ERR_INT]	FLEXCAN_C Error Interrupt
0x0AF0	175	Reserved	Reserved
0x0B00	176	CANC_IFRL[BUF0]	FLEXCAN_C Buffer 0 Interrupt
0x0B10	177	CANC_IFRL[BUF1]	FLEXCAN_C Buffer 1 Interrupt
0x0B20	178	CANC_IFRL[BUF2]	FLEXCAN_C Buffer 2 Interrupt
0x0B30	179	CANC_IFRL[BUF3]	FLEXCAN_C Buffer 3 Interrupt

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x0B40	180	CANC_IFRL[BUF4]	FLEXCAN_C Buffer 4 Interrupt
0x0B50	181	CANC_IFRL[BUF5]	FLEXCAN_C Buffer 5 Interrupt
0x0B60	182	CANC_IFRL[BUF6]	FLEXCAN_C Buffer 6 Interrupt
0x0B70	183	CANC_IFRL[BUF7]	FLEXCAN_C Buffer 7 Interrupt
0x0B80	184	CANC_IFRL[BUF8]	FLEXCAN_C Buffer 8 Interrupt
0x0B90	185	CANC_IFRL[BUF9]	FLEXCAN_C Buffer 9 Interrupt
0x0BA0	186	CANC_IFRL[BUF10]	FLEXCAN_C Buffer 10 Interrupt
0x0BB0	187	CANC_IFRL[BUF11]	FLEXCAN_C Buffer 11 Interrupt
0x0BC0	188	CANC_IFRL[BUF12]	FLEXCAN_C Buffer 12 Interrupt
0x0BD0	189	CANC_IFRL[BUF13]	FLEXCAN_C Buffer 13 Interrupt
0x0BE0	190	CANC_IFRL[BUF14]	FLEXCAN_C Buffer 14 Interrupt
0x0BF0	191	CANC_IFRL[BUF15]	FLEXCAN_C Buffer 15 Interrupt
0x0C00	192	CANC_IFRL[BUF31:BUF16]	FLEXCAN_C Buffers 31 - 16 Interrupts
0x0C10	193	CANC_IFRH[BUF63:BUF32]	FLEXCAN_C Buffers 63 - 32 Interrupts
FEC			
0x0C20	194	EIR[TXF]	FEC Transmit Frame flag
0x0C30	195	EIR[RXF]	FEC Receive Frame flag
0x0C40	196	EIR[HBERR] EIR[BABR] EIR[BABT] EIR[GRA] EIR[TXB] EIR[RXB] EIR[MII] EIR[EBERR] EIR[LC] EIR[RL] EIR[UN]	Combined Interrupt Requests of the FEC Ethernet Interrupt Event Register: Heartbeat Error, Babbling Receive Error, Babbling Transmit Error, Graceful Stop Complete, Transmit Buffer, Receive Buffer, Media Independent Interface, Ethernet Bus Error, Late Collision, Collision Retry Limit, and Transmit FIFO Underrun
0x0C50	197	Reserved	Reserved
0x0C60	198	Reserved	Reserved
0x0C70	199	Reserved	Reserved
0x0C80	200	Reserved	Reserved
0x0C90	201	Reserved	Reserved
eMIOS			
0x0CA0	202	EMIOS_GFR[F16]	eMIOS channel 16 Flag
0x0CB0	203	EMIOS_GFR[F17]	eMIOS channel 17 Flag
0x0CC0	204	EMIOS_GFR[F18]	eMIOS channel 18 Flag

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x0CD0	205	EMIOS_GFR[F19]	eMIOS channel 19 Flag
0x0CE0	206	EMIOS_GFR[F20]	eMIOS channel 20 Flag
0x0CF0	207	EMIOS_GFR[F21]	eMIOS channel 21 Flag
0x0D00	208	EMIOS_GFR[F22]	eMIOS channel 22 Flag
0x0D10	209	EMIOS_GFR[F23]	eMIOS channel 23 Flag
0x0D20 - 0x1170	210-279	–	–
FlexCAN_B			
0x1180	280	CANB_ESR[BOFF_INT] CANB_ESR[TWRN_INT] CANB_ESR[RWRN_INT]	FLEXCAN_B Bus off Interrupt FLEXCAN_B Transmit Warning Interrupt FLEXCAN_B Receive Warning Interrupt
0x1190	281	CANB_ESR[ERR_INT]	FLEXCAN_B Error Interrupt
0x11A0	282	Reserved	Reserved
0x11B0	283	CANB_IFRL[BUF0]	FLEXCAN_B Buffer 0 Interrupt
0x11C0	284	CANB_IFRL[BUF1]	FLEXCAN_B Buffer 1 Interrupt
0x11D0	285	CANB_IFRL[BUF2]	FLEXCAN_B Buffer 2 Interrupt
0x11E0	286	CANB_IFRL[BUF3]	FLEXCAN_B Buffer 3 Interrupt
0x11F0	287	CANB_IFRL[BUF4]	FLEXCAN_B Buffer 4 Interrupt
0x1200	288	CANB_IFRL[BUF5]	FLEXCAN_B Buffer 5 Interrupt
0x1210	289	CANB_IFRL[BUF6]	FLEXCAN_B Buffer 6 Interrupt
0x1220	290	CANB_IFRL[BUF7]	FLEXCAN_B Buffer 7 Interrupt
0x1230	291	CANB_IFRL[BUF8]	FLEXCAN_B Buffer 8 Interrupt
0x1240	292	CANB_IFRL[BUF9]	FLEXCAN_B Buffer 9 Interrupt
0x1250	293	CANB_IFRL[BUF10]	FLEXCAN_B Buffer 10 Interrupt
0x1260	294	CANB_IFRL[BUF11]	FLEXCAN_B Buffer 11 Interrupt
0x1270	295	CANB_IFRL[BUF12]	FLEXCAN_B Buffer 12 Interrupt
0x1280	296	CANB_IFRL[BUF13]	FLEXCAN_B Buffer 13 Interrupt
0x1290	297	CANB_IFRL[BUF14]	FLEXCAN_B Buffer 14 Interrupt
0x12A0	298	CANB_IFRL[BUF15]	FLEXCAN_B Buffer 15 Interrupt
0x12B0	299	CANB_IFRL[BUF31:BUF16]	FLEXCAN_B Buffers 31 - 16 Interrupts
0x12C0	300	CANB_IFRH[BUF63:BUF32]	FLEXCAN_B Buffers 63 - 32 Interrupts
0x12D0 - 0x1330	301-307	–	–

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
FlexCAN_D			
0x1340	308	CAND_ESR[BOFF_INT] CAND_ESR[TWRN_INT] CAND_ESR[RWRN_INT]	FLEXCAN_D Bus off Interrupt FLEXCAN_D Transmit Warning Interrupt FLEXCAN_D Receive Warning Interrupt
0x1350	309	CAND_ESR[ERR_INT]	FLEXCAN_D Error Interrupt
0x1360	310	Reserved	Reserved
0x1370	311	CAND_IFRL[BUF0]	FLEXCAN_D Buffer 0 Interrupt
0x1380	312	CAND_IFRL[BUF1]	FLEXCAN_D Buffer 1 Interrupt
0x1390	313	CAND_IFRL[BUF2]	FLEXCAN_D Buffer 2 Interrupt
0x13A0	314	CAND_IFRL[BUF3]	FLEXCAN_D Buffer 3 Interrupt
0x13B0	315	CAND_IFRL[BUF4]	FLEXCAN_D Buffer 4 Interrupt
0x13C0	316	CAND_IFRL[BUF5]	FLEXCAN_D Buffer 5 Interrupt
0x13D0	317	CAND_IFRL[BUF6]	FLEXCAN_D Buffer 6 Interrupt
0x13E0	318	CAND_IFRL[BUF7]	FLEXCAN_D Buffer 7 Interrupt
0x13F0	319	CAND_IFRL[BUF8]	FLEXCAN_D Buffer 8 Interrupt
0x1400	320	CAND_IFRL[BUF9]	FLEXCAN_D Buffer 9 Interrupt
0x1410	321	CAND_IFRL[BUF10]	FLEXCAN_D Buffer 10 Interrupt
0x1420	322	CAND_IFRL[BUF11]	FLEXCAN_D Buffer 11 Interrupt
0x1430	323	CAND_IFRL[BUF12]	FLEXCAN_D Buffer 12 Interrupt
0x1440	324	CAND_IFRL[BUF13]	FLEXCAN_D Buffer 13 Interrupt
0x1450	325	CAND_IFRL[BUF14]	FLEXCAN_D Buffer 14 Interrupt
0x1460	326	CAND_IFRL[BUF15]	FLEXCAN_D Buffer 15 Interrupt
0x1470	327	CAND_IFRL[BUF31:BUF16]	FLEXCAN_D Buffers 31 - 16 Interrupts
0x1480	328	CAND_IFRH[BUF63:BUF32]	FLEXCAN_D Buffers 63 - 32 Interrupts
FlexCAN_E			
0x1490	329	CANE_ESR[BOFF_INT] CANE_ESR[TWRN_INT] CANE_ESR[RWRN_INT]	FLEXCAN_E Bus off Interrupt FLEXCAN_E Transmit Warning Interrupt FLEXCAN_E Receive Warning Interrupt
0x14A0	330	CANE_ESR[ERR_INT]	FLEXCAN_E Error Interrupt
0x14B0	331	Reserved	Reserved
0x14C0	332	CANE_IFRL[BUF0]	FLEXCAN_E Buffer 0 Interrupt
0x14D0	333	CANE_IFRL[BUF1]	FLEXCAN_E Buffer 1 Interrupt
0x14E0	334	CANE_IFRL[BUF2]	FLEXCAN_E Buffer 2 Interrupt
0x14F0	335	CANE_IFRL[BUF3]	FLEXCAN_E Buffer 3 Interrupt

Table 10-9. MPC5567 Interrupt Request Sources (continued)

Offset	Vector	Source ¹	Description
0x1500	336	CANE_IFRL[BUF4]	FLEXCAN_E Buffer 4 Interrupt
0x1510	337	CANE_IFRL[BUF5]	FLEXCAN_E Buffer 5 Interrupt
0x1520	338	CANE_IFRL[BUF6]	FLEXCAN_E Buffer 6 Interrupt
0x1530	339	CANE_IFRL[BUF7]	FLEXCAN_E Buffer 7 Interrupt
0x1540	340	CANE_IFRL[BUF8]	FLEXCAN_E Buffer 8 Interrupt
0x1550	341	CANE_IFRL[BUF9]	FLEXCAN_E Buffer 9 Interrupt
0x1560	342	CANE_IFRL[BUF10]	FLEXCAN_E Buffer 10 Interrupt
0x1570	343	CANE_IFRL[BUF11]	FLEXCAN_E Buffer 11 Interrupt
0x1580	344	CANE_IFRL[BUF12]	FLEXCAN_E Buffer 12 Interrupt
0x1590	345	CANE_IFRL[BUF13]	FLEXCAN_E Buffer 13 Interrupt
0x15A0	346	CANE_IFRL[BUF14]	FLEXCAN_E Buffer 14 Interrupt
0x15B0	347	CANE_IFRL[BUF15]	FLEXCAN_E Buffer 15 Interrupt
0x15CO	348	CANE_IFRL[BUF31:BUF16]	FLEXCAN_E Buffers 31 - 16 Interrupts
0x15D0	349	CANE_IFRH[BUF63:BUF32]	FLEXCAN_E Buffers 63 - 32 Interrupts
FlexRay			
0x15E0	350	GIFER[MIF]	FlexRay MIF
0x15F0	351	GIFER[PRIF]	FlexRay PRIF
0x1600	352	GIFER[CHIF]	FlexRay CHIF
0x1610	353	GIFER[WUP_IF]	FlexRay WUP_IF
0x1620	354	GIFER[FBNE_F]	FlexRay FBNE_F
0x1630	355	GIFER[FANE_F]	FlexRay FANE_F
0x1640	356	GIFER[RBIF]	FlexRay RBIF
0x1650	357	GIFER[TBIF]	FlexRay TBIF
0x1660	358	Reserved	Reserved
0x1670	359	Reserved	Reserved
0x1680	360	Reserved	Reserved

¹ Interrupt requests from the same module location are ORed together.

NOTE

The INTC has no spurious vector support. Therefore, if an asserted peripheral or software settable interrupt request (whose PRI_n value in $INTC_PSR0$ – $INTC_PSR360$ is higher than the PRI value in $INTC_CPR$) negates before the interrupt request to the processor for that peripheral or software settable interrupt request is acknowledged, the interrupt request to the processor still can assert or remain asserted for that peripheral or software settable interrupt request. If the interrupt request to the processor does assert or does remain asserted, the interrupt vector will correspond to that peripheral or software settable interrupt request. Also, the PRI value in the $INTC_CPR$ will be updated with the corresponding PRI_n value in $INTC_PSR_n$.

Furthermore, clearing the peripheral interrupt request's enable bit in the peripheral or, alternatively, setting its mask bit has the same consequences as clearing its flag bit. Setting its enable bit or clearing its mask bit while its flag bit is asserted has the same effect on the INTC as an interrupt event setting the flag bit.

10.4.1.1 Peripheral Interrupt Requests

An interrupt event in a peripheral's hardware sets a flag bit which resides in that peripheral. The interrupt request from the peripheral is driven by that flag bit.

The time from when the peripheral starts to drive its peripheral interrupt request to the INTC to the time that the INTC starts to drive the interrupt request to the processor is three clocks.

10.4.1.2 Software Settable Interrupt Requests

The software set/clear interrupt registers ($INTC_SSCIR_x_x$) support the setting or clearing of software-settable interrupt requests. These registers contain eight independent sets of bits to set and clear a corresponding flag bit by software. With the exception of being set by software, this flag bit behaves the same as a flag bit set within a peripheral. This flag bit generates an interrupt request within the INTC just like a peripheral interrupt request.

An interrupt request is triggered by software writing a 1 to the SET_n bit in INTC software set/clear interrupt registers ($INTC_SSCIR0$ – $INTC_SSCIR7$). This write sets the corresponding CLR_n bit, which is a flag bit, resulting in the interrupt request. The interrupt request is cleared by writing a 1 to the CLR_n bit. Specific behavior includes the following:

- Writing a 1 to SET_n leaves SET_n unchanged at 0 but sets the flag bit (which is the CLR_n bit).
- Writing a 0 to SET_n has no effect.
- Writing a 1 to CLR_n clears the flag (CLR_x) bit.
- Writing a 0 to CLR_n has no effect.
- If a 1 is written to a pair of SET_n and CLR_n bits at the same time, the flag (CLR_x) is set, regardless of whether CLR_n was asserted before the write.

The time from the write to the SET n bit to the time that the INTC starts to drive the interrupt request to the processor is four clocks.

10.4.1.3 Unique Vector for Each Interrupt Request Source

Each peripheral and software settable interrupt request is assigned a hardwired unique 9-bit vector. Software settable interrupts 0–7 are assigned vectors 0–7, respectively. The peripheral interrupt requests are assigned vectors 8 to as high as needed to cover all of the peripheral interrupt requests.

10.4.2 Priority Management

The asserted interrupt requests are compared to each other based on their PRIn values in INTC priority select registers (INTC_PSR0–INTC_PSR360). The result of that comparison also is compared to PRI in INTC current priority register (INTC_CPR). The results of those comparisons are used to manage the priority of the ISR being executed by the processor. The LIFO also assists in managing that priority.

10.4.2.1 Current Priority and Preemption

The priority arbitrator, selector, encoder, and comparator submodules shown in [Figure 10-1](#) are used to compare the priority of the asserted interrupt requests to the current priority. If the priority of any asserted peripheral or software settable interrupt request is higher than the current priority, then the interrupt request to the processor is asserted. Also, a unique vector for the preempting peripheral or software settable interrupt request is generated for INTC interrupt acknowledge register (INTC_IACKR), and if in hardware vector mode, for the interrupt vector provided to the processor.

10.4.2.1.1 Priority Arbitrator Submodule

The priority arbitrator submodule compares all the priorities of all of the asserted interrupt requests, both peripheral and software settable. The output of the priority arbitrator submodule is the highest of those priorities. Also, any interrupt requests which have this highest priority are output as asserted interrupt requests to the request selector submodule.

10.4.2.1.2 Request Selector Submodule

If only one interrupt request from the priority arbitrator submodule is asserted, then it is passed as asserted to the vector encoder submodule. If multiple interrupt requests from the priority arbitrator submodule are asserted, then only the one with the lowest vector is passed as asserted to the vector encoder submodule. The lower vector is chosen regardless of the time order of the assertions of the peripheral or software settable interrupt requests.

10.4.2.1.3 Vector Encoder Submodule

The vector encoder submodule generates the unique 9-bit vector for the asserted interrupt request from the request selector submodule.

10.4.2.1.4 Priority Comparator Submodule

The priority comparator submodule compares the highest priority output from the priority arbitrator submodule with PRI in INTC_CPR. If the priority comparator submodule detects that this highest priority is higher than the current priority, then it asserts the interrupt request to the processor. This interrupt request to the processor asserts whether this highest priority is raised above the value of PRI in INTC_CPR or the PRI value in INTC_CPR is lowered below this highest priority. This highest priority then becomes the new priority which will be written to PRI in INTC_CPR when the interrupt request to the processor is acknowledged. Interrupt requests whose PRI_n in INTC_PSR $_n$ are zero will not cause a preemption because their PRI_n will not be higher than PRI in INTC_CPR.

10.4.2.2 LIFO

The LIFO stores the preempted PRI values from the INTC_CPR. Therefore, because these priorities are stacked within the INTC, if interrupts need to be enabled during the ISR, at the beginning of the interrupt exception handler the PRI value in the INTC_CPR does not need to be loaded from the INTC_CPR and stored onto the context stack. Likewise at the end of the interrupt exception handler, the priority does not need to be loaded from the context stack and stored into the INTC_CPR.

The PRI value in the INTC_CPR is pushed onto the LIFO when the INTC_IACKR is read in software vector mode or the interrupt acknowledge signal from the processor is asserted in hardware vector mode. The priority is popped into PRI in the INTC_CPR whenever the INTC_EOIR is written.

Although the INTC supports 16 priorities, an ISR executing with PRI in the INTC_CPR equal to 15 will not be preempted. Therefore, the LIFO supports the stacking of 15 priorities. However, the LIFO is only 14 entries deep. An entry for a priority of 0 is not needed because of how pushing onto a full LIFO and popping an empty LIFO are treated. If the LIFO is pushed 15 or more times than it is popped, the priorities first pushed are overwritten. A priority of 0 would be an overwritten priority. However, the LIFO will pop 0s if it is popped more times than it is pushed. Therefore, although a priority of 0 was overwritten, it is regenerated with the popping of an empty LIFO.

The LIFO is not memory mapped.

10.4.3 Details on Handshaking with Processor

10.4.3.1 Software Vector Mode Handshaking

10.4.3.1.1 Acknowledging Interrupt Request to Processor

A timing diagram of the interrupt request and acknowledge handshaking in software vector mode, along with the handshaking near the end of the interrupt exception handler, is shown in [Figure 10-14](#). The INTC examines the peripheral and software settable interrupt requests. When it finds an asserted peripheral or software settable interrupt request with a higher priority than PRI in INTC current priority register (INTC_CPR), it asserts the interrupt request to the processor. The INTVEC field in INTC interrupt acknowledge register (INTC_IACKR) is updated with the preempting interrupt request's vector when the interrupt request to the processor is asserted. The INTVEC field retains that value until the next time the

interrupt request to the processor is asserted. The rest of the handshaking is described in [Section 10.1.4.1](#), “Software Vector Mode.”

10.4.3.1.2 End-of-Interrupt Exception Handler

Before the interrupt exception handling completes, INTC end-of-interrupt register (INTC_EOIR) must be written. When it is written, the LIFO is popped so that the preempted priority is restored into PRI of the INTC_CPR. Before it is written, the peripheral or software settable flag bit must be cleared so that the peripheral or software settable interrupt request is negated.

NOTE

To ensure proper operation across all Power Architecture MCUs, execute an MBAR or MSYNC instruction between the access to clear the flag bit and the write to the INTC_EOIR.

When returning from the preemption, the INTC does not search for the peripheral or software settable interrupt request whose ISR was preempted. Depending on how much the ISR progressed, that interrupt request may no longer even be asserted. When PRI in INTC_CPR is lowered to the priority of the preempted ISR, the interrupt request for the preempted ISR or any other asserted peripheral or software settable interrupt request at or below that priority will not cause a preemption. Instead, after the restoration of the preempted context, the processor will return to the instruction address that it was to next execute before it was preempted. This next instruction is part of the preempted ISR or the interrupt exception handler’s prolog or epilog.

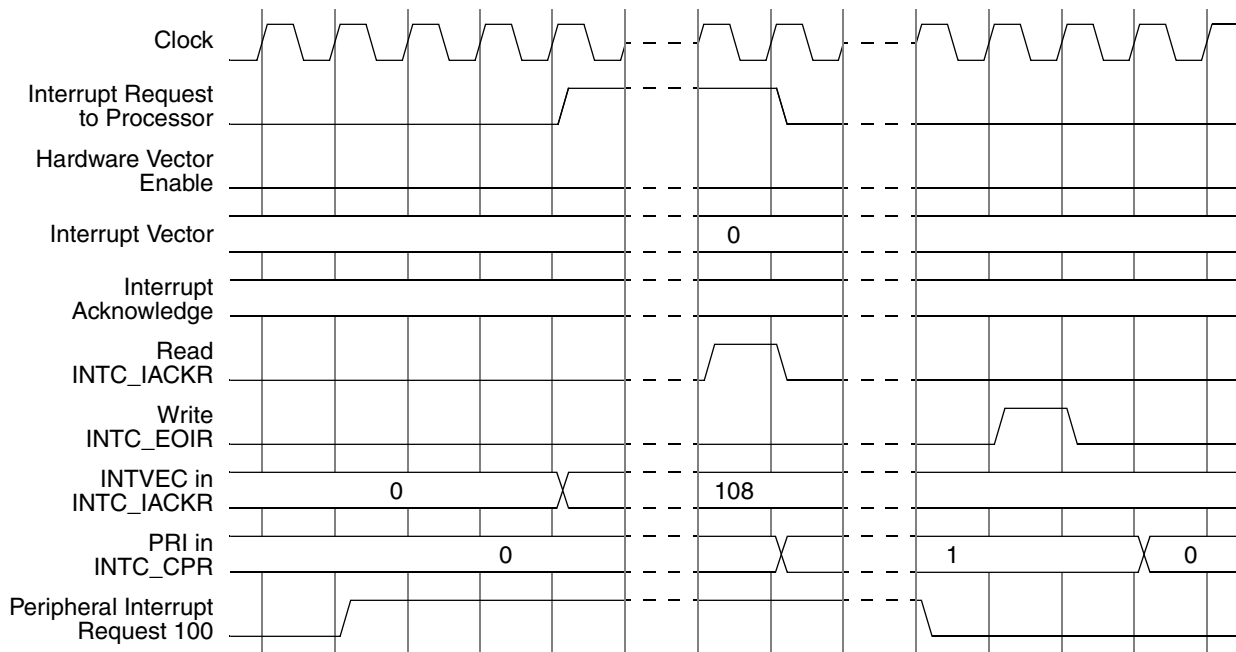


Figure 10-14. Software Vector Mode Handshaking Timing Diagram

10.4.3.2 Hardware Vector Mode Handshaking

A timing diagram of the interrupt request and acknowledge handshaking in hardware vector mode, along with the handshaking near the end of the interrupt exception handler, is shown in Figure 10-15. As in software vector mode, the INTC examines the peripheral and software settable interrupt requests, and when it finds an asserted one with a higher priority than PRI in INTC_CPR, it asserts the interrupt request to the processor. The INTVEC field in the INTC_IACKR is updated with the preempting peripheral or software settable interrupt request's vector when the interrupt request to the processor is asserted. The INTVEC field retains that value until the next time the interrupt request to the processor is asserted. In addition, the value of the interrupt vector to the processor matches the value of the INTVEC field in the INTC_IACKR. The rest of the handshaking is described in Section 10.1.4.2, "Hardware Vector Mode."

The handshaking near the end of the interrupt exception handler, that is the writing to the INTC_EOIR, is the same as in software vector mode. Refer to Section 10.4.3.1.2, "End-of-Interrupt Exception Handler."

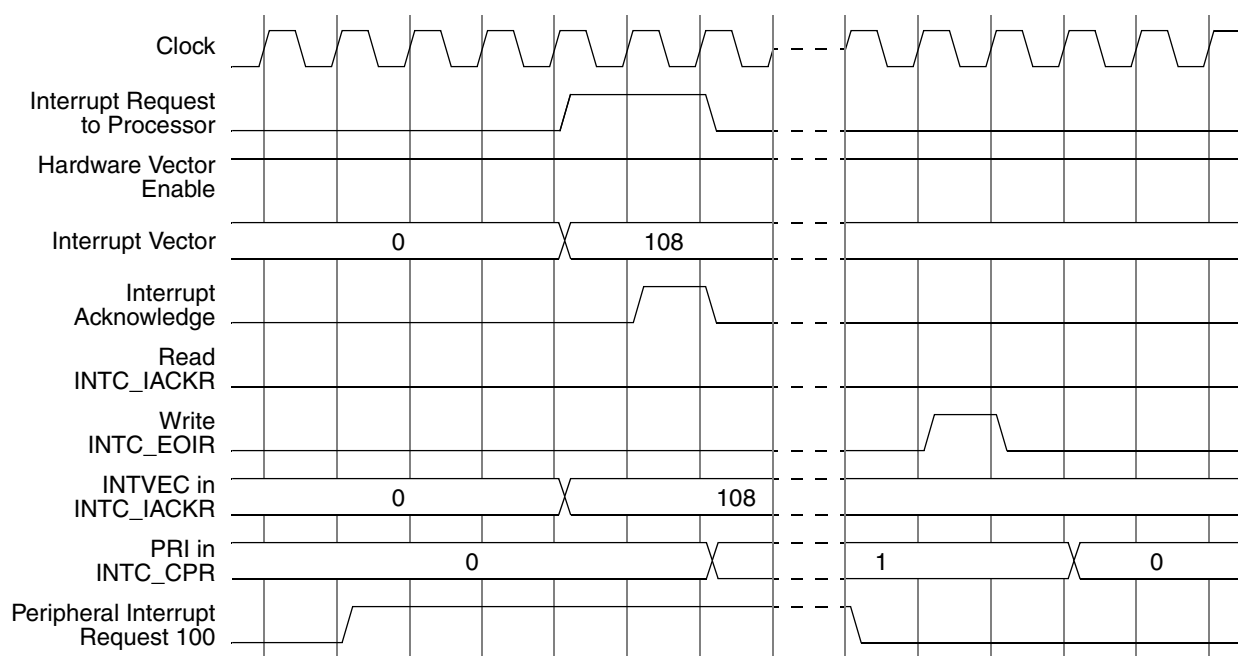


Figure 10-15. Hardware Vector Mode Handshaking Timing Diagram

10.5 Initialization/Application Information

10.5.1 Initialization Flow

After exiting reset, all of the PRI_n fields in INTC priority select registers (INTC_PSR0–INTC_PSR360) will be zero, and PRI in INTC current priority register (INTC_CPR) will be 15. These reset values will prevent the INTC from asserting the interrupt request to the processor. The enable or mask bits in the peripherals are reset such that the peripheral interrupt requests are negated. An initialization sequence for allowing the peripheral and software settable interrupt requests to cause an interrupt request to the processor is:

Interrupt Controller (INTC)

```

interrupt_request_initialization:
configure VTES and HVEN in INTC_MCR
configure VTBA in INTC_IACKR
raise the PRIn fields in INTC_PSRn
set the enable bits or clear the mask bits for the peripheral interrupt requests
lower PRI in INTC_CPR to zero
enable processor recognition of interrupts

```

10.5.2 Interrupt Exception Handler

These example interrupt exception handlers use PowerPC Book E assembly code.

10.5.2.1 Software Vector Mode

```

interrupt_exception_handler:
code to create stack frame, save working register, and save SRR0 and SRR1

lis      r3,INTC_IACKR@ha          # form adjusted upper half of INTC_IACKR address
lwz      r3,INTC_IACKR@l(r3)      # load INTC_IACKR, which clears request to processor
lwz      r3,0x0(r3)              # load address of ISR from vector table
wrteei   1                       # enable processor recognition of interrupts

code to save rest of context required by e500 EABI

mtlr     r3                       # move INTC_IACKR contents into link register
blrl                                          # branch to ISR; link register updated with epilog
# address

epilog:
code to restore most of context required by e500 EABI

# Popping the LIFO after the restoration of most of the context and the disabling of processor
# recognition of interrupts eases the calculation of the maximum stack depth at the cost of
# postponing the servicing of the next interrupt request.
mbar                                          # ensure store to clear flag bit has completed
lis      r3,INTC_EOIR@ha          # form adjusted upper half of INTC_EOIR address
li       r4,0x0                  # form 0 to write to INTC_EOIR
wrteei   0                       # disable processor recognition of interrupts
stw      r4,INTC_EOIR@l(r3)      # store to INTC_EOIR, informing INTC to lower priority

code to restore SRR0 and SRR1, restore working registers, and delete stack frame

rfi

vector_table_base_address:
address of ISR for interrupt with vector 0
address of ISR for interrupt with vector 1
.
.
.
address of ISR for interrupt with vector 510
address of ISR for interrupt with vector 511

ISRx:

```

```
code to service the interrupt event
code to clear flag bit which drives interrupt request to INTC

blr                                # return to epilog
```

10.5.2.2 Hardware Vector Mode

This interrupt exception handler is useful with processor and system bus implementations that support a hardware vector. This example assumes that each `interrupt_exception_handlerx` only has space for four instructions, and therefore a branch to `interrupt_exception_handler_continuedx` is needed.

```
interrupt_exception_handlerx:
b      interrupt_exception_handler_continuedx# 4 instructions available, branch to continue

interrupt_exception_handler_continuedx:
code to create stack frame, save working register, and save SRR0 and SRR1

wrteei 1                            # enable processor recognition of interrupts

code to save rest of context required by e500 EABI

bl     ISRx                          # branch to ISR for interrupt with vector x

epilog:
code to restore most of context required by e500 EABI

# Popping the LIFO after the restoration of most of the context and the disabling of processor
# recognition of interrupts eases the calculation of the maximum stack depth at the cost of
# postponing the servicing of the next interrupt request.
mbar                                # ensure store to clear flag bit has completed
lis    r3,INTC_EOIR@ha              # form adjusted upper half of INTC_EOIR address
li     r4,0x0                       # form 0 to write to INTC_EOIR
wrteei 0                            # disable processor recognition of interrupts
stw    r4,INTC_EOIR@l(r3)          # store to INTC_EOIR, informing INTC to lower priority

code to restore SRR0 and SRR1, restore working registers, and delete stack frame

rfi

ISRx:
code to service the interrupt event
code to clear flag bit which drives interrupt request to INTC

blr                                # branch to epilog
```

10.5.3 ISR, RTOS, and Task Hierarchy

The RTOS and all of the tasks under its control typically execute with PRI in INTC current priority register (INTC_CPR) having a value of 0. The RTOS will execute the tasks according to whatever priority scheme that it may have, but that priority scheme is independent and has a lower priority of execution than the priority scheme of the INTC. In other words, the ISRs execute above INTC_CPR priority 0 and outside

the control of the RTOS, the RTOS executes at INTC_CPR priority 0, and while the tasks execute at different priorities under the control of the RTOS, they also execute at INTC_CPR priority 0.

If a task shares a resource with an ISR and the PCP is being used to manage that shared resource, then the task's priority can be elevated in the INTC_CPR while the shared resource is being accessed.

An ISR whose *PRI_n* in INTC priority select registers (INTC_PSR0–INTC_PSR360) has a value of 0 will not cause an interrupt request to the processor, even if its peripheral or software settable interrupt request is asserted. For a peripheral interrupt request, not setting its enable bit or disabling the mask bit will cause it to remain negated, which consequently also will not cause an interrupt request to the processor. Since the ISRs are outside the control of the RTOS, this ISR will not run unless called by another ISR or the interrupt exception handler, perhaps after executing another ISR.

10.5.4 Order of Execution

An ISR with a higher priority can preempt an ISR with a lower priority, regardless of the unique vectors associated with each of their peripheral or software settable interrupt requests. However, if multiple peripheral or software settable interrupt requests are asserted, more than one has the highest priority, and that priority is high enough to cause preemption, the INTC selects the one with the lowest unique vector regardless of the order in time that they asserted. However, the ability to meet deadlines with this scheduling scheme is no less than if the ISRs execute in the time order that their peripheral or software settable interrupt requests asserted.

The example in [Table 10-10](#) shows the order of execution of both ISRs with different priorities and the same priority.

Table 10-10. Order of ISR Execution Example

Step	Step Description	Code Executing At End of Step					Interrupt Exception Handler	PRI in INTC_CPR at End of Step
		RTOS	ISR108 ¹	ISR208	ISR308	ISR408		
1	RTOS at priority 0 is executing.	X						0
2	Peripheral interrupt request 100 at priority 1 asserts. Interrupt taken.		X					1
3	Peripheral interrupt request 400 at priority 4 is asserts. Interrupt taken.					X		4
4	Peripheral interrupt request 300 at priority 3 is asserts.					X		4
5	Peripheral interrupt request 200 at priority 3 is asserts.					X		4
6	ISR408 completes. Interrupt exception handler writes to INTC_EOIR.						X	1

Table 10-10. Order of ISR Execution Example (continued)

Step	Step Description	Code Executing At End of Step						PRI in INTC_CPR at End of Step
		RTOS	ISR108 ¹	ISR208	ISR308	ISR408	Interrupt Exception Handler	
7	Interrupt taken. ISR208 starts to execute, even though peripheral interrupt request 300 asserted first.			X				3
8	ISR208 completes. Interrupt exception handler writes to INTC_EOIR.						X	1
9	Interrupt taken. ISR308 starts to execute.				X			3
10	ISR308 completes. Interrupt exception handler writes to INTC_EOIR.						X	1
11	ISR108 completes. Interrupt exception handler writes to INTC_EOIR.						X	0
12	RTOS continues execution.	X						0

¹ ISR108 executes for peripheral interrupt request 100 because the first eight ISRs are for software settable interrupt requests.

10.5.5 Priority Ceiling Protocol

10.5.5.1 Elevating Priority

The PRI field in INTC current priority register (INTC_CPR) is elevated in the OSEK PCP to the ceiling of all of the priorities of the ISRs that share a resource. This protocol therefore allows coherent accesses of the ISRs to that shared resource.

For example, ISR1 has a priority of 1, ISR2 has a priority of 2, and ISR3 has a priority of 3. They all share the same resource. Before ISR1 or ISR2 can access that resource, they must raise the PRI value in INTC_CPR to 3, the ceiling of all of the ISR priorities. After they release the resource, the PRI value in INTC_CPR can be lowered. If they do not raise their priority, then ISR2 can preempt ISR1, and ISR3 can preempt ISR1 or ISR2, possibly corrupting the shared resource. Another possible failure mechanism is deadlock if the higher priority ISR needs the lower priority ISR to release the resource before it can continue, but the lower priority ISR can not release the resource until the higher priority ISR completes and execution returns to the lower priority ISR.

Using the PCP instead of disabling processor recognition of all interrupts eliminates the time when accessing a shared resource that all higher priority interrupts are blocked. For example, while ISR3 can not preempt ISR1 while it is accessing the shared resource, all of the ISRs with a priority higher than 3 can preempt ISR1.

10.5.5.2 Ensuring Coherency

A scenario can exist that can cause non-coherent accesses to the shared resource. As an example, ISR1 and ISR2 both share a resource. ISR1 has a lower priority than ISR2. ISR1 is executing, and it writes to the INTC_CPR. The instruction following this store is a store to a value in a shared coherent data block. Either just before or at the same time as the first store, the INTC asserts the interrupt request to the processor because the peripheral interrupt request for ISR2 has asserted. As the processor is responding to the interrupt request from the INTC, and as it is aborting transactions and flushing its pipeline, it is possible that both of these stores will be executed. ISR2 thereby thinks that it can access the data block coherently, but the data block has been corrupted.

OSEK uses the GetResource and ReleaseResource system services to manage access to a shared resource. To prevent this corruption of a coherent data block, modifications to PRI in INTC_CPR can be made by those system services with the following code sequences.

```
GetResource:  
raise PRI  
mbar  
isync  
ReleaseResource:  
mbar  
lower PRI
```

10.5.6 Selecting Priorities According to Request Rates and Deadlines

The selection of the priorities for the ISRs can be made using rate monotonic scheduling or a superset of it, deadline monotonic scheduling. In RMS, the ISRs which have higher request rates have higher priorities. In DMS, if the deadline is before the next time the ISR is requested, then the ISR is assigned a priority according to the time from the request for the ISR to the deadline, not from the time of the request for the ISR to the next request for it.

For example, ISR1 executes every 100 μ s, ISR2 executes every 200 μ s, and ISR3 executes every 300 μ s. ISR1 has a higher priority than ISR2 which has a higher priority than ISR3. However, if ISR3 has a deadline of 150 μ s, then it has a higher priority than ISR2.

The INTC has 16 priorities, which could be much less than the number of ISRs. In this case, the ISRs should be grouped with other ISRs that have similar deadlines. For example, a priority could be allocated for every time the request rate doubles. ISRs with request rates around 1 ms would share a priority, ISRs with request rates around 500 μ s would share a priority, ISRs with request rates around 250 μ s would share a priority, etc. With this approach, a range of ISR request rates of 2^{16} could be covered, regardless of the number of ISRs.

Reducing the number of priorities does reduce the processor's ability to meet its deadlines. However, it also allows easier management of ISRs with similar deadlines that share a resource. They do not need to use the PCP to access the shared resource.

10.5.7 Software Settable Interrupt Requests

The software settable interrupt requests can be used in two ways. They can be used to schedule a lower priority portion of an ISR and for processors to interrupt other processors in a multiple processor system.

10.5.7.1 Scheduling a Lower Priority Portion of an ISR

A portion of an ISR needs to be executed at the PRI_n value in INTC priority select registers (INTC_PSR0–INTC_PSR360), which becomes the PRI value in INTC current priority register (INTC_CPR) with the interrupt acknowledgement. The ISR, however, can have a portion of it which does not need to be executed at this higher priority. Therefore, executing this later portion which does not need to be executed at this higher priority can prevent the execution of ISRs which do not have a higher priority than the earlier portion of the ISR but do have a higher priority than what the later portion of the ISR needs. This preemptive scheduling inefficiency reduces the processor's ability to meet its deadlines.

One option is for the ISR to complete the earlier higher priority portion, but then schedule through the RTOS a task to execute the later lower priority portion. However, some RTOSs can require a large amount of time for an ISR to schedule a task. Therefore, a second option is for the ISR, after completing the higher priority portion, to set a SET_n bit in INTC software set/clear interrupt registers (INTC_SSCIR0–INTC_SSCIR7). Writing a 1 to SET_n causes a software settable interrupt request. This software settable interrupt request, which usually will have a lower PRI_n value in the INTC_PSR n , therefore will not cause preemptive scheduling inefficiencies.

10.5.7.2 Scheduling an ISR on Another Processor

Since the SET_n bits in the INTC_SSCIR n are memory mapped, processors in multiple processor systems can schedule ISRs on the other processors. One application is that one processor simply wants to command another processor to perform a piece of work, and the initiating processor does not need to use the results of that work. If the initiating processor is concerned that processor executing the software settable ISR has not completed the work before asking it to again execute that ISR, it can check if the corresponding CLR n bit in INTC_SSCIR n is asserted before again writing a 1 to the SET_n bit.

Another application is the sharing of a block of data. For example, a first processor has completed accessing a block of data and wants a second processor to then access it. Furthermore, after the second processor has completed accessing the block of data, the first processor again wants to access it. The accesses to the block of data must be done coherently. The procedure is that the first processor writes a 1 to a SET_n bit on the second processor. The second processor, after accessing the block of data, clears the corresponding CLR n bit and then writes 1 to a SET_n bit on the first processor, informing it that it now can access the block of data.

10.5.8 Lowering Priority Within an ISR

In implementations without the software-settable interrupt requests in the INTC software set/clear interrupt registers (INTC_SSCIR0–INTC_SSCIR7), a way — besides scheduling a task through an RTOS — to prevent preemptive scheduling inefficiencies with an ISR whose work spans multiple priorities (as described in [Section 10.5.7.1, “Scheduling a Lower Priority Portion of an ISR,”](#)) is to lower the current priority. However, the INTC has a LIFO whose depth is determined by the number of priorities.

NOTE

Lowering the PRI value in INTC current priority register (INTC_CPR) within an ISR to below the ISR's corresponding PRI value in INTC priority select registers (INTC_PSR0–INTC_PSR360) allows more preemptions than the depth of the LIFO can support.

Therefore, through its use of the LIFO the INTC does not support lowering the current priority within an ISR as a way to avoid preemptive scheduling inefficiencies.

10.5.9 Negating an Interrupt Request Outside of its ISR

10.5.9.1 Negating an Interrupt Request as a Side Effect of an ISR

Some peripherals have flag bits which can be cleared as a side effect of servicing a peripheral interrupt request. For example, reading a specific register can clear the flag bits, and consequently their corresponding interrupt requests too. This clearing as a side effect of servicing a peripheral interrupt request can cause the negation of other peripheral interrupt requests besides the peripheral interrupt request whose ISR presently is executing. This negating of a peripheral interrupt request outside of its ISR can be a desired effect.

10.5.9.2 Negating Multiple Interrupt Requests in One ISR

An ISR can clear other flag bits besides its own flag bit. One reason that an ISR clears multiple flag bits is because it serviced those other flag bits, and therefore the ISRs for these other flag bits do not need to be executed.

10.5.9.3 Proper Setting of Interrupt Request Priority

Whether an interrupt request negates outside of its own ISR due to the side effect of an ISR execution or the intentional clearing a flag bit, the priorities of the peripheral or software settable interrupt requests for these other flag bits must be selected properly. Their PRI_n values in INTC priority select registers (INTC_PSR0–INTC_PSR360) must be selected to be at or lower than the priority of the ISR that cleared their flag bits. Otherwise, those flag bits still can cause the interrupt request to the processor to assert. Furthermore, the clearing of these other flag bits also has the same timing relationship to the writing to INTC end-of-interrupt register (INTC_EOIR) as the clearing of the flag bit that caused the present ISR to be executed. Refer to [Section 10.4.3.1.2, “End-of-Interrupt Exception Handler,”](#) for more information.

A flag bit whose enable bit or mask bit is negating its peripheral interrupt request can be cleared at any time, regardless of the peripheral interrupt request's PRI_n value in INTC_PSR n .

10.5.10 Examining LIFO contents

Normally you do not need to know the contents of the LIFO, or even how deep the LIFO is nested. Although the LIFO contents are not memory mapped, you can read the contents by popping the LIFO and reading the PRI field in the INTC current priority register (INTC_CPR). Disabling processor recognition

of interrupts while examining the LIFO contents provides a coherent view of the preempted priorities. The code sequence is:

```
pop_lifo:
store to INTC_EOIR
load INTC_CPR, examine PRI, and store onto stack
if PRI is not zero or value when interrupts were enabled, branch to pop_lifo
```

When you are finished examining the LIFO contents, you can restore it in software vector mode using the following code sequence. In hardware vector mode, reading the INTC_IACKR does not push the INTC_CPR[PRI] onto the LIFO, therefore the LIFO contents cannot be restored in hardware vector mode.

```
push_lifo:
load stacked PRI value and store to INTC_CPR
load INTC_IACKR
if stacked PRI values are not depleted, branch to push_lifo
```

NOTE

Reading the INTC_IACKR acknowledges the interrupt request to the processor and updates the INTC_CPR[PRI] with the priority of the preempting interrupt request. If the processor recognition of interrupts is disabled during the LIFO restoration, interrupt requests to the processor can go undetected. However, since the peripheral or software settable interrupt requests are not cleared, the peripheral interrupt request to the processor re-asserts when INTC_CPR[PRI] is lower than the priorities of those peripheral or software settable interrupt requests.

10.6 Document Revision History

Table 10-11. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	This is the first public version of this document.

Chapter 11

Frequency Modulated Phase Locked Loop and System Clocks (FMPLL)

11.1 Introduction

This section describes the features and function of the FMPLL module.

11.1.1 Block Diagrams

This section contains block diagrams that illustrate the FMPLL, the clock architecture, and the various FMPLL and clock configurations that are available. The following diagrams are provided:

- [Figure 11-1](#), “FMPLL and Clock Architecture”
- [Figure 11-2](#), “FMPLL Bypass Mode”
- [Figure 11-3](#), “FMPLL External Reference Mode”
- [Figure 11-4](#), “FMPLL Crystal Reference Mode Without FM”
- [Figure 11-5](#), “FMPLL Crystal Reference Mode With FM”
- [Figure 11-6](#), “FMPLL Dual-Controller (1:1) Mode”

11.1.1.1 FMPLL and Clock Architecture

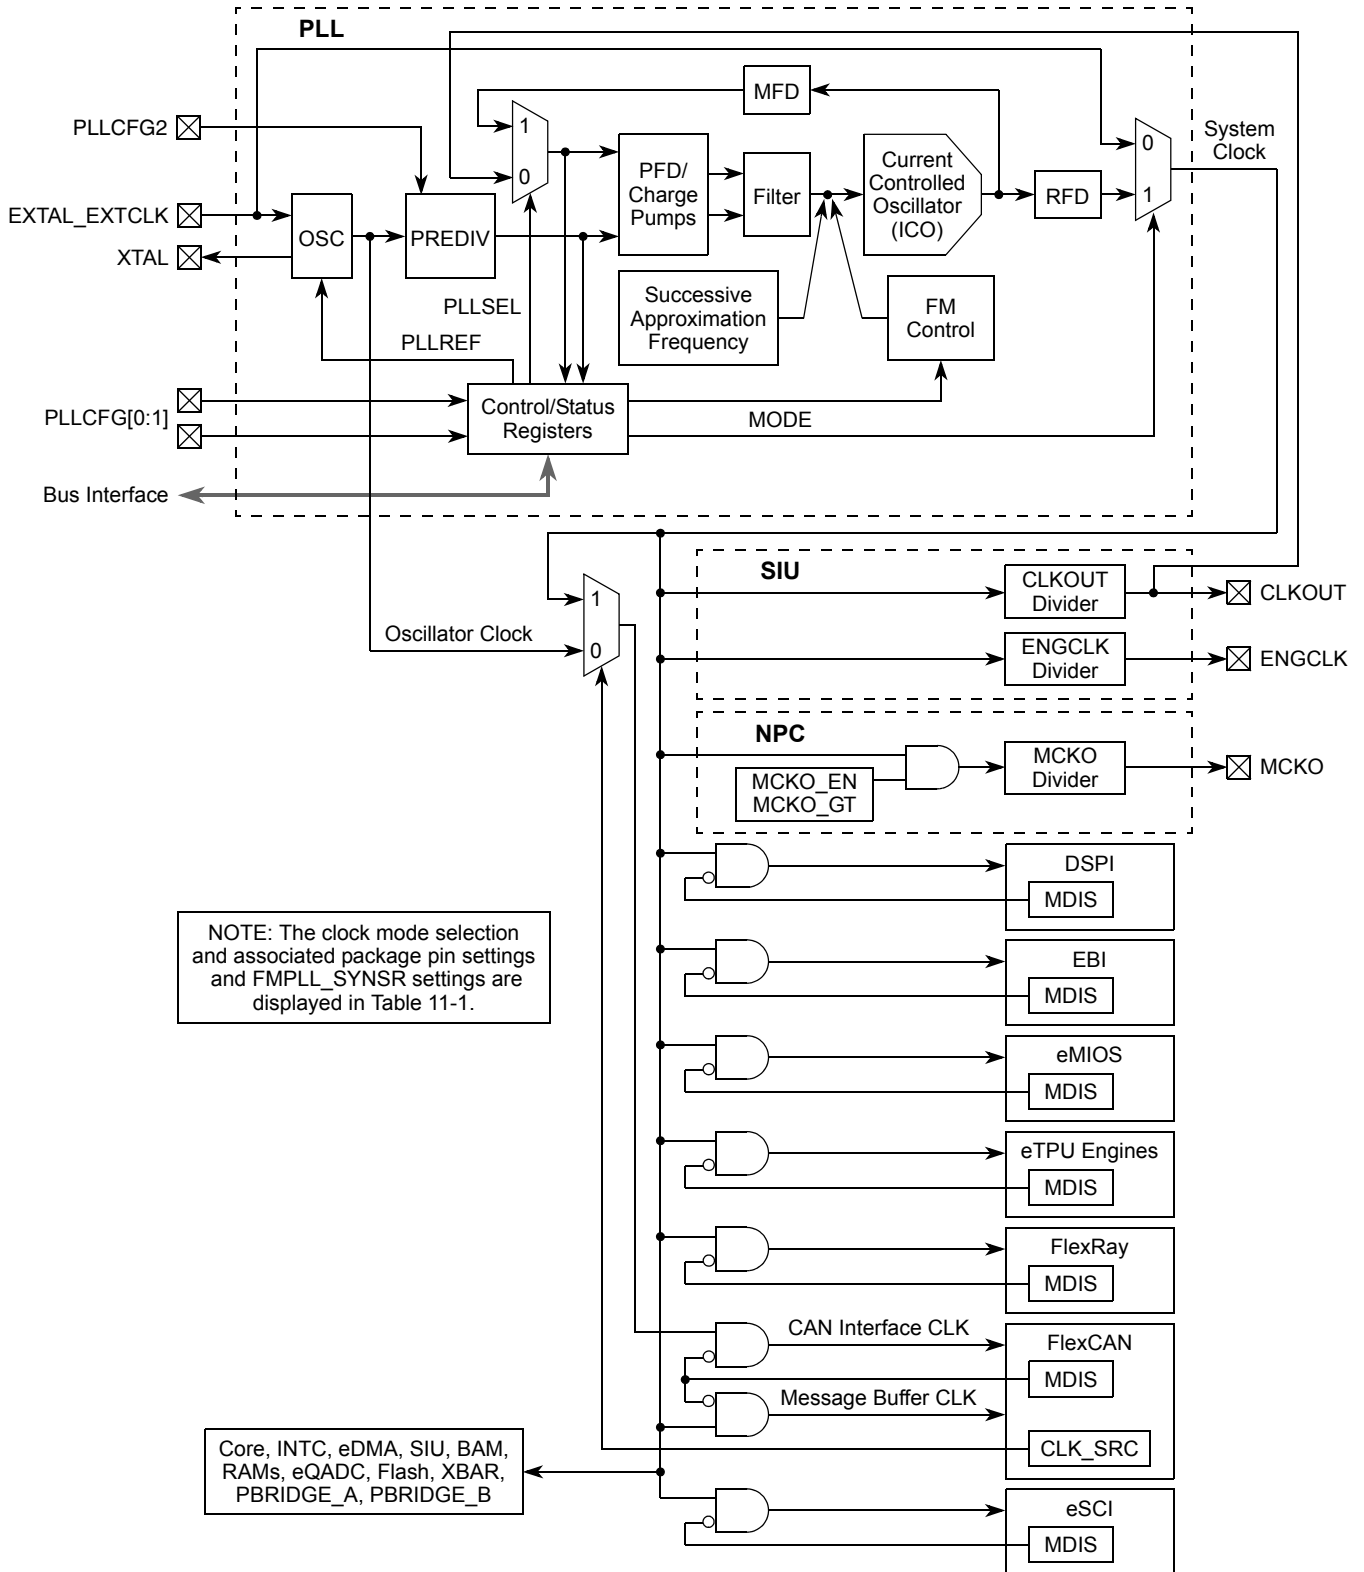


Figure 11-1. FMPLL Block and Clock Architecture

11.1.1.2 FMPLL Bypass Mode

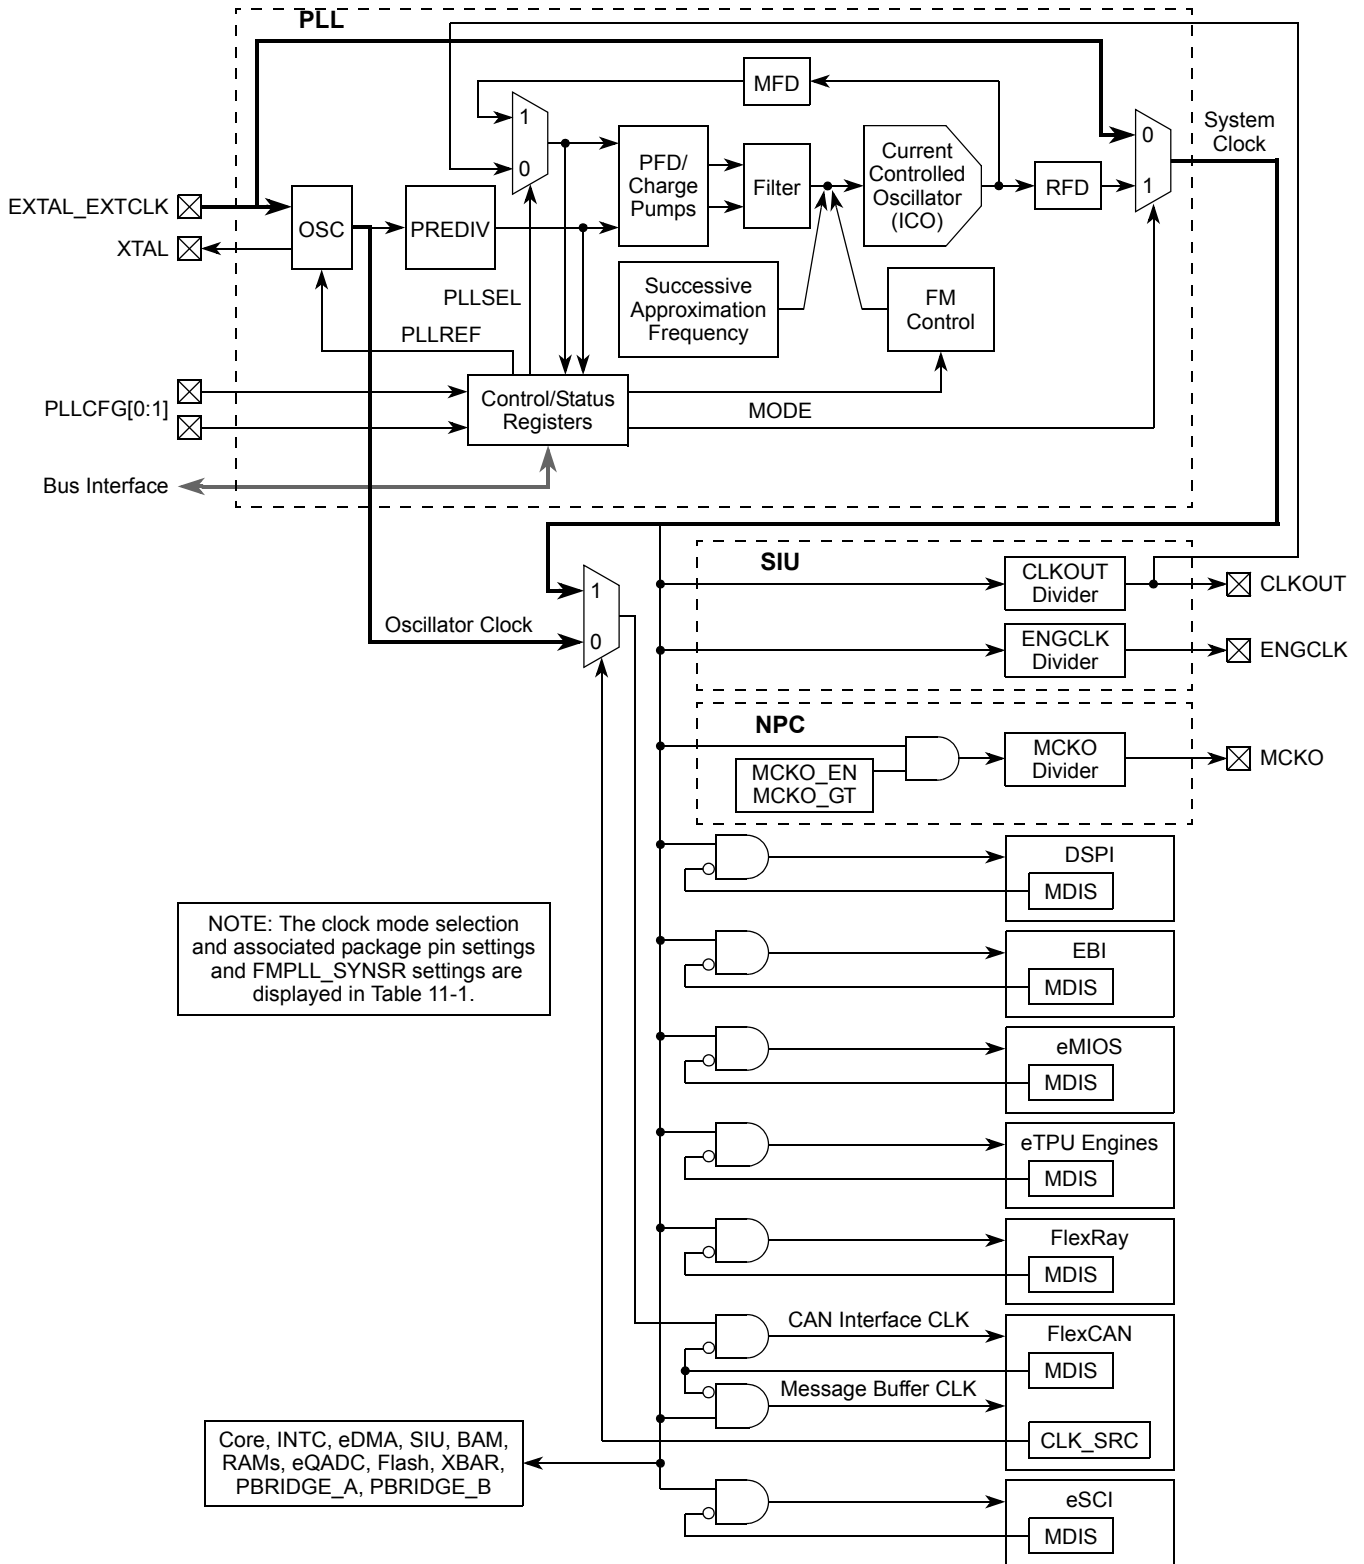


Figure 11-2. FMPLL Bypass Mode

11.1.1.3 FMPLL External Reference Mode

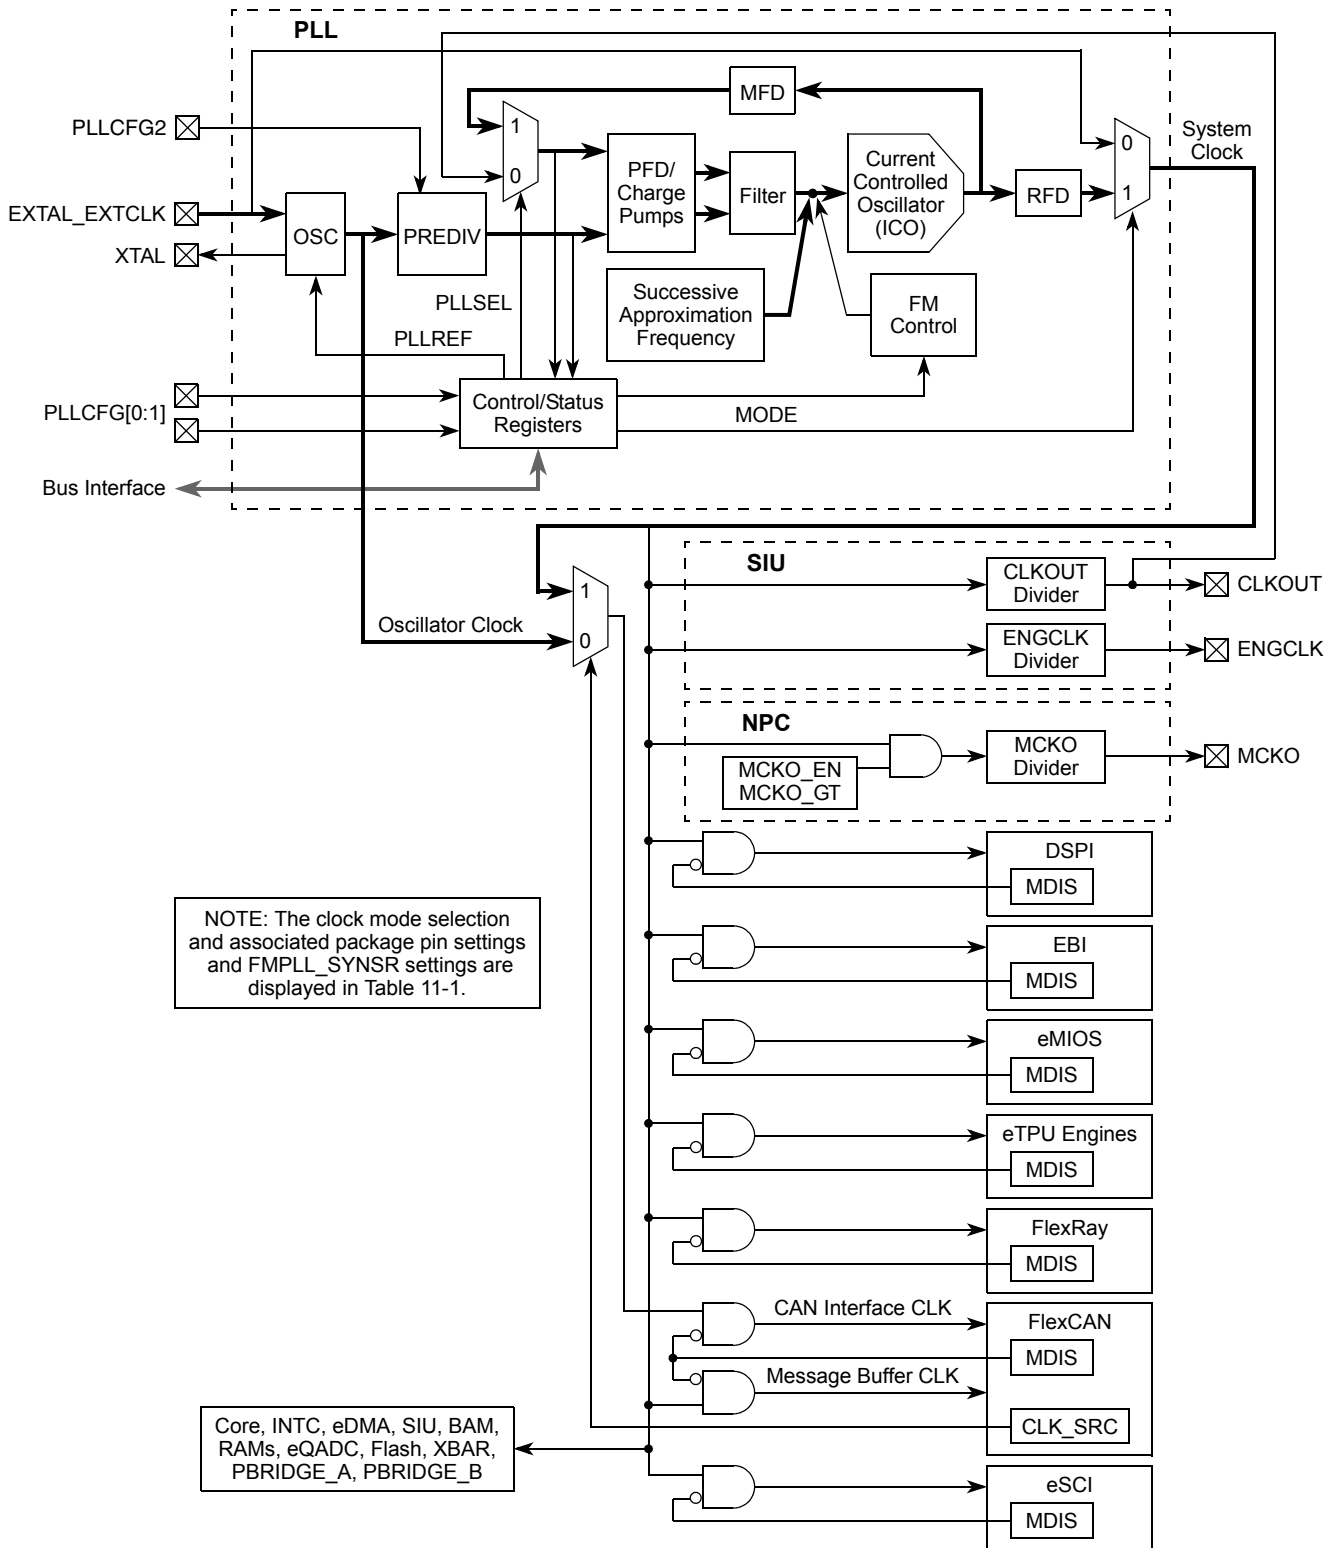


Figure 11-3. FMPLL External Reference Mode

11.1.1.4 FMPLL Crystal Reference Mode Without FM

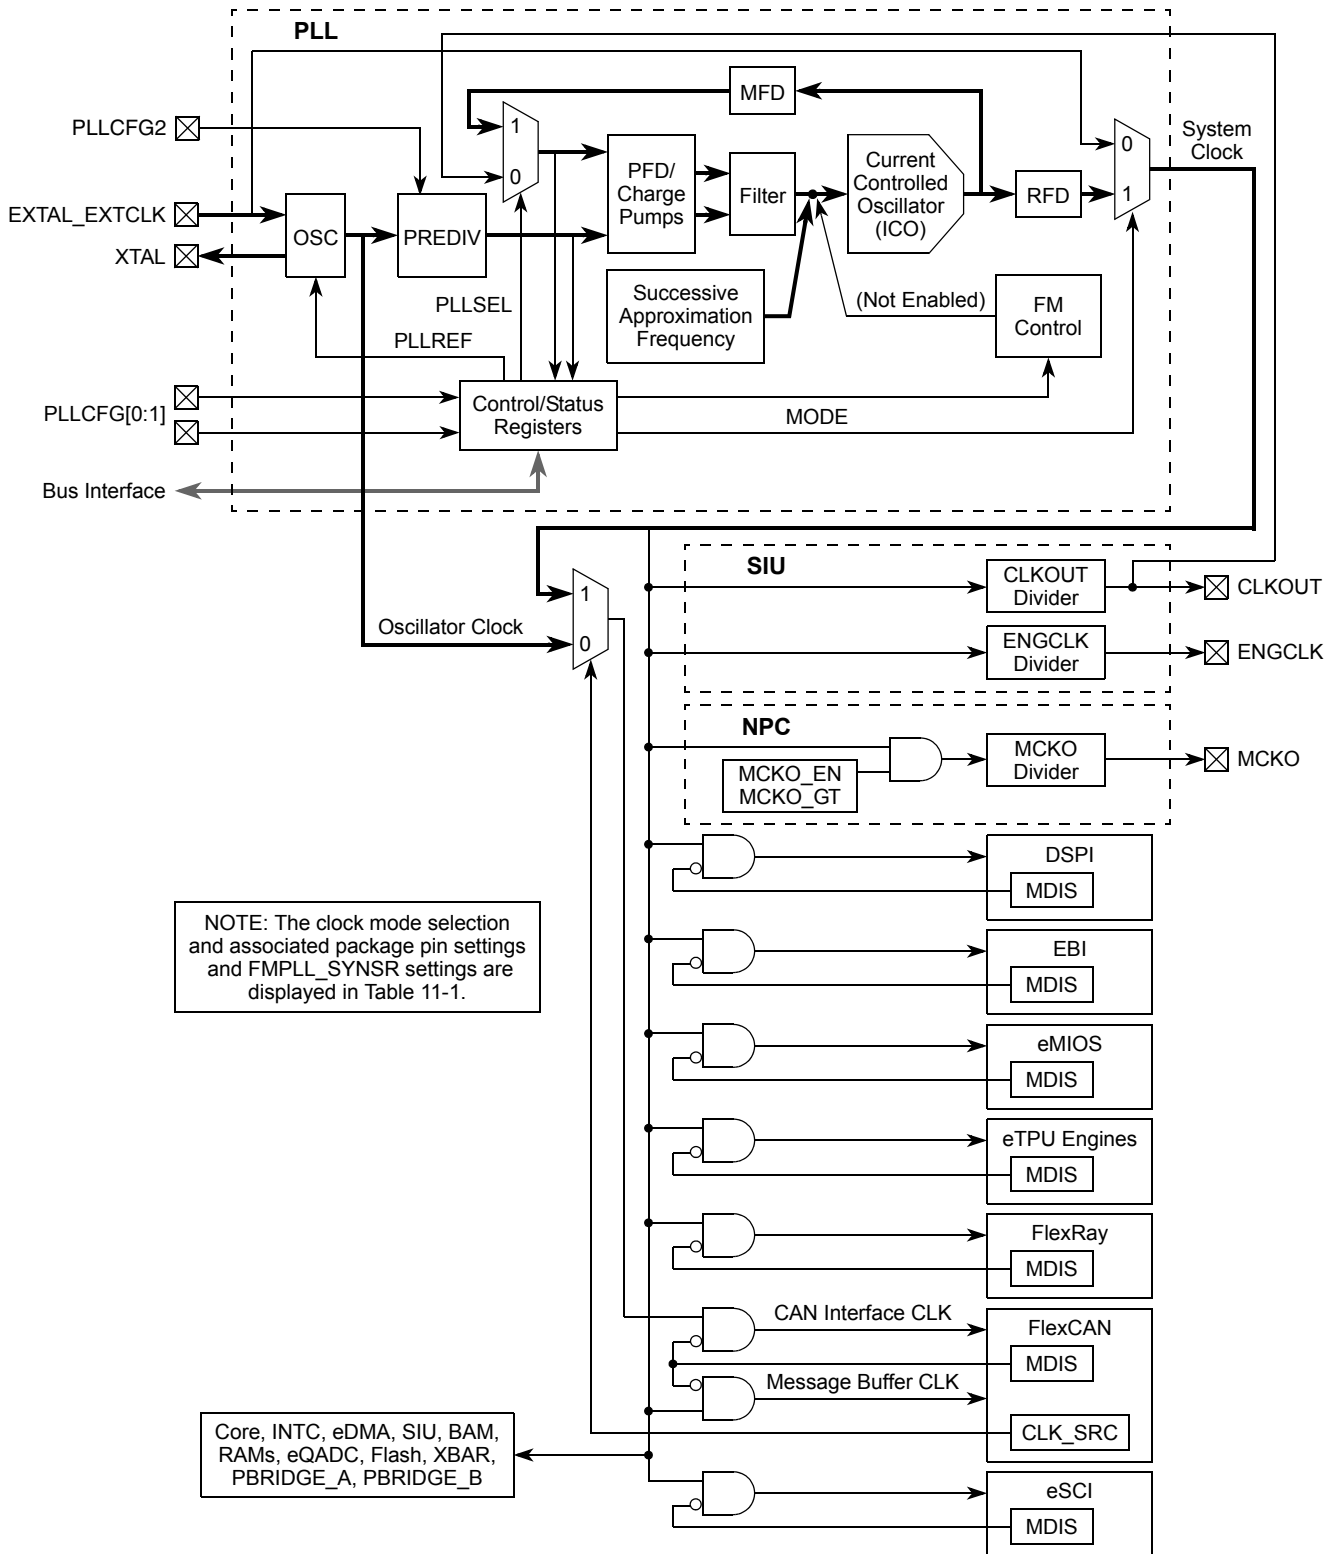


Figure 11-4. FMPLL Crystal Reference Mode without FM

11.1.1.5 FMPLL Crystal Reference Mode With FM

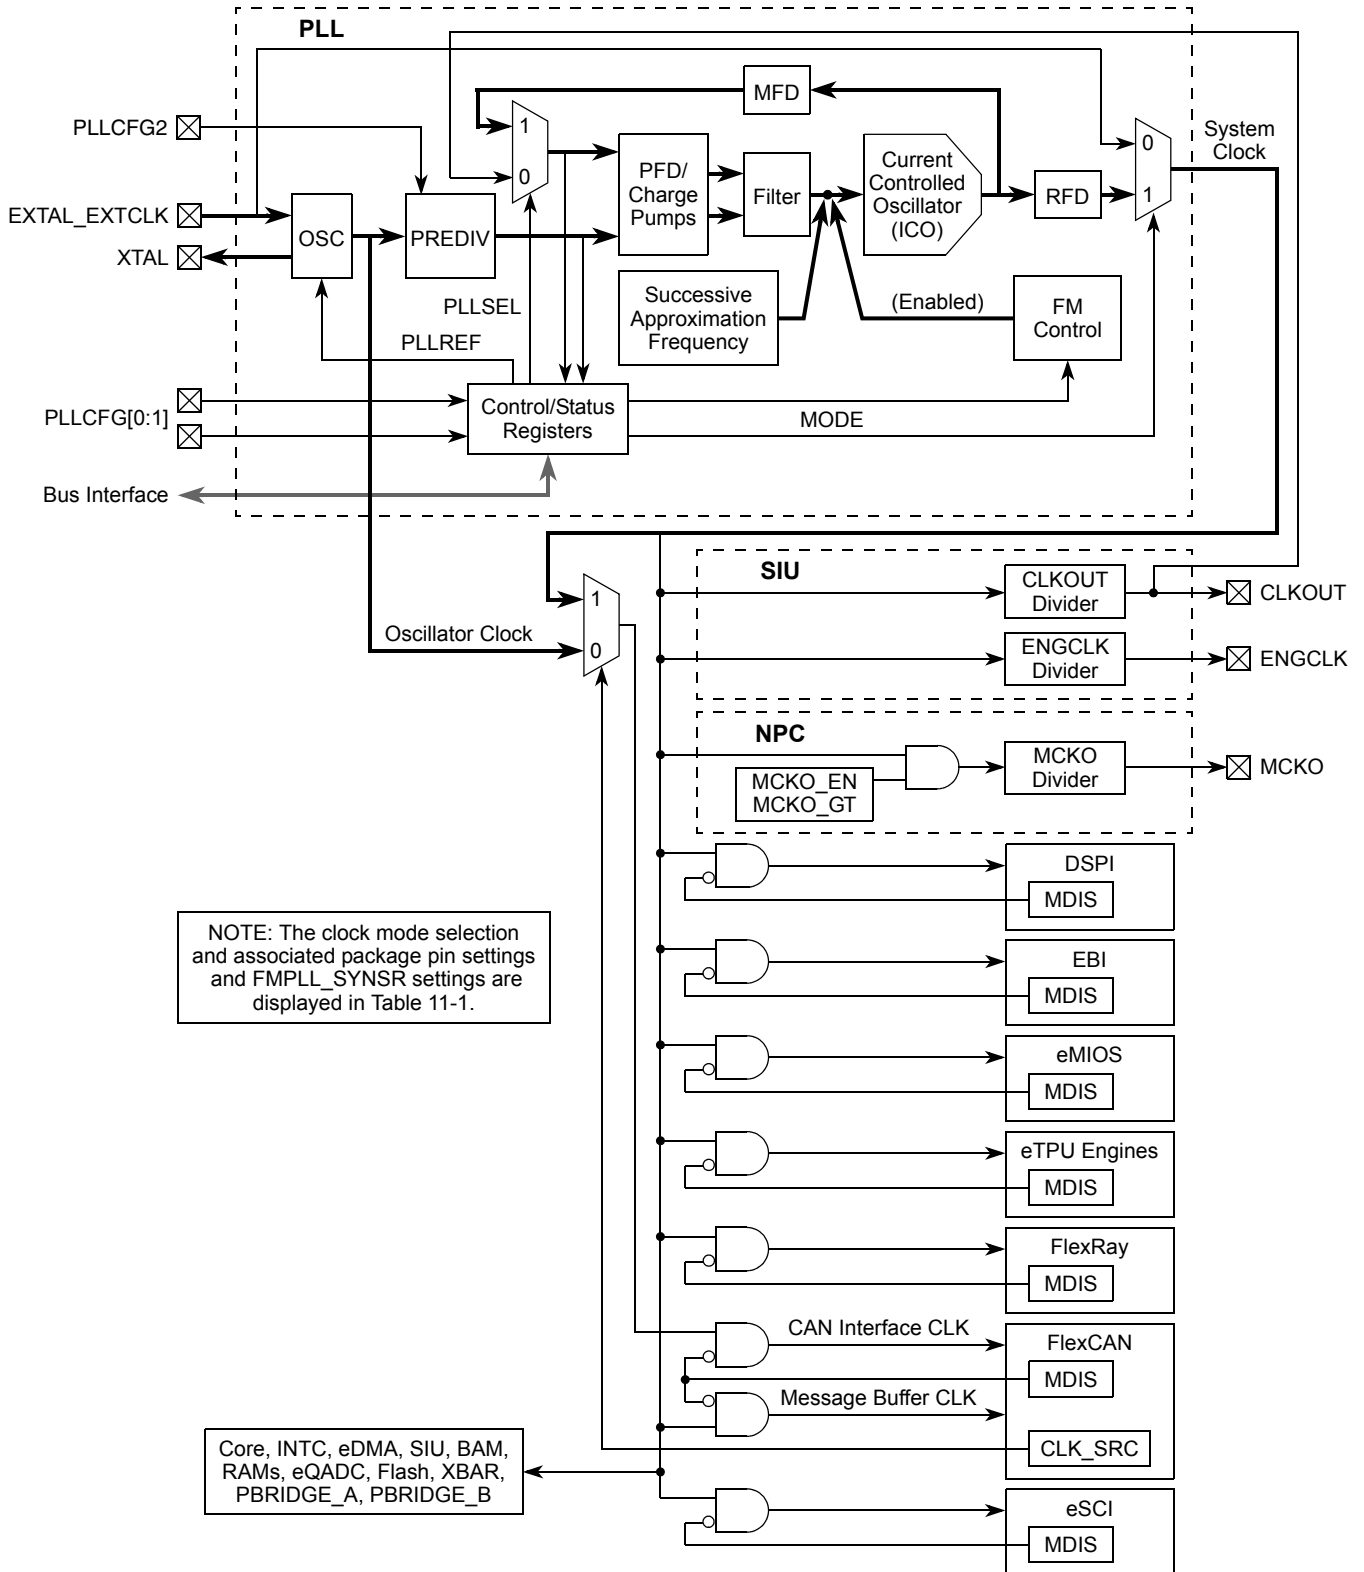


Figure 11-5. FMPLL Crystal Reference Mode with FM

11.1.1.6 FMPLL Dual-Controller Mode (1:1)

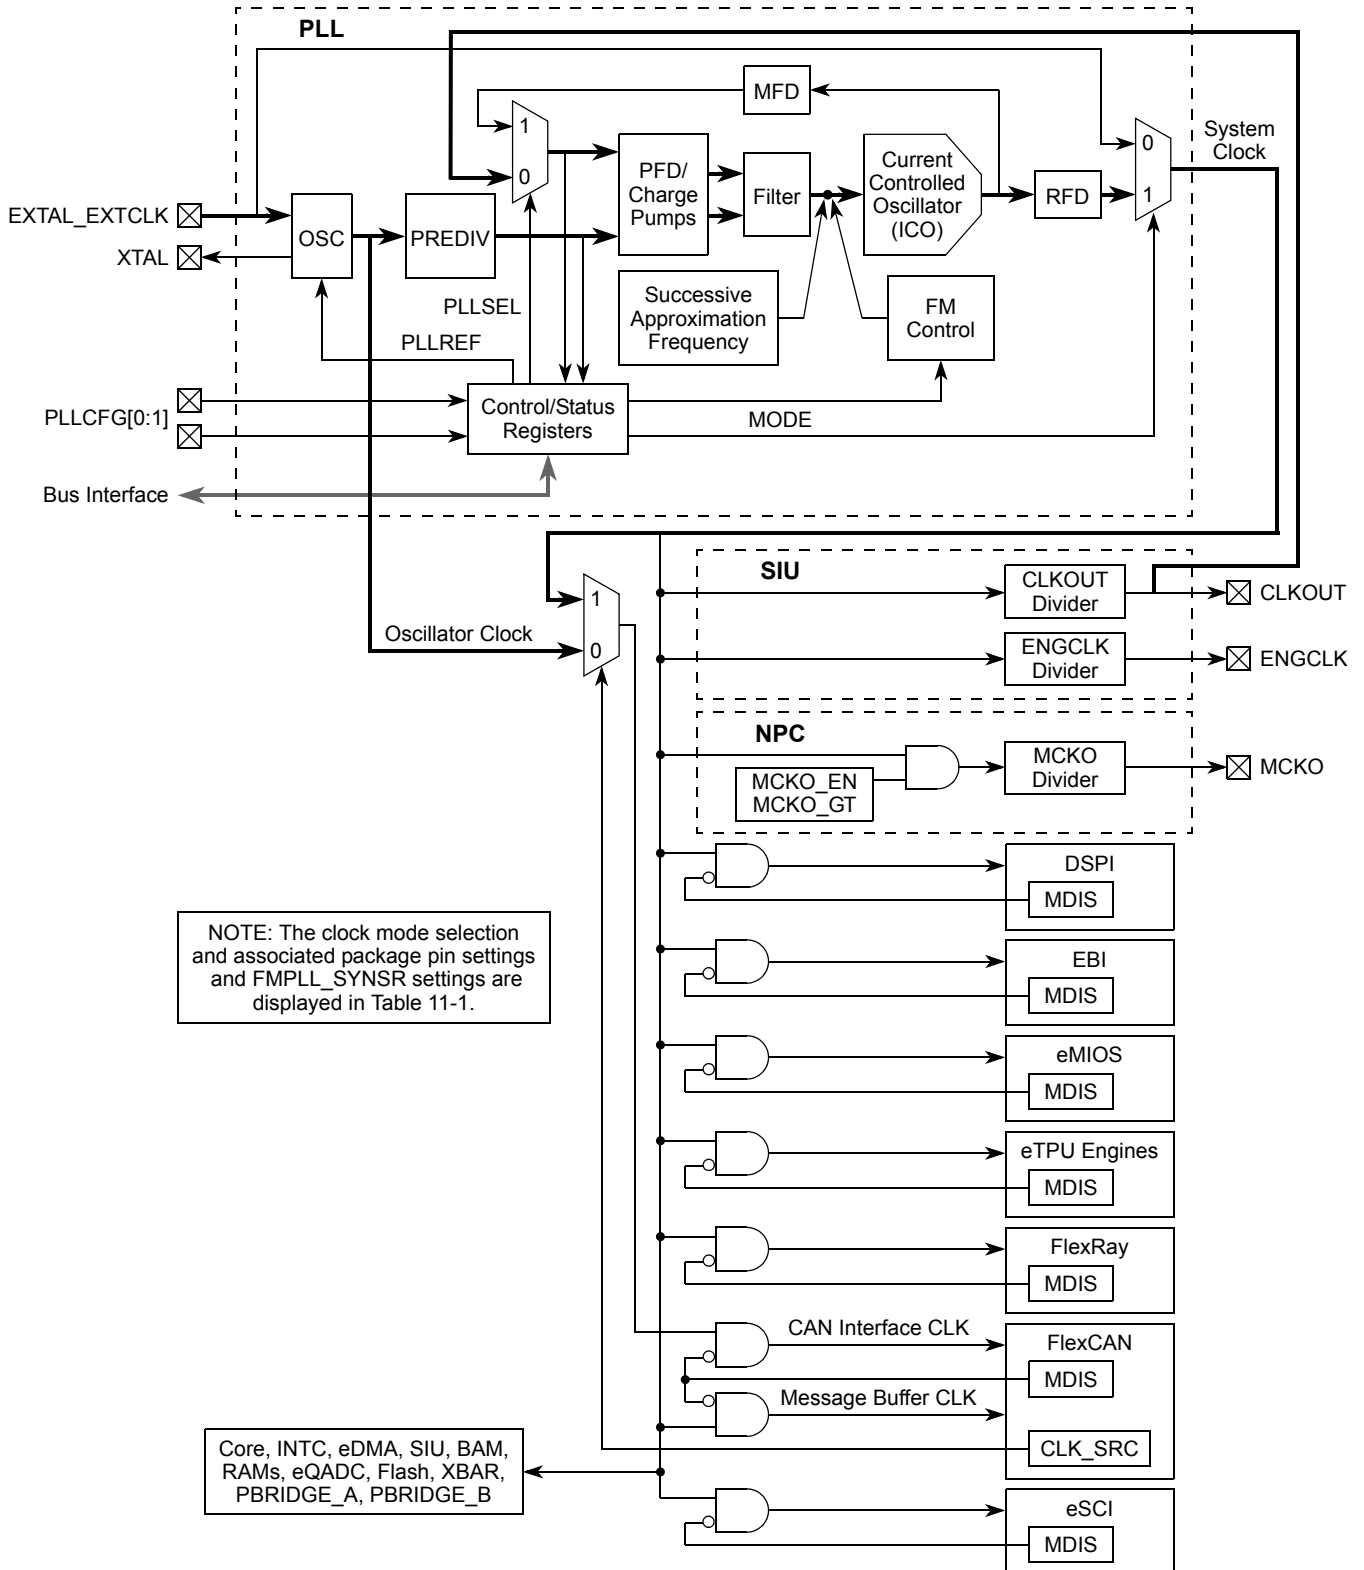


Figure 11-6. FMPLL Dual Controller (1:1) Mode

11.1.2 Overview

The frequency modulated phase locked loop (FMPLL) allows the user to generate high speed system clocks from two ranges of crystal oscillator: 8 MHz to 20 MHz or 16 MHz to 40 MHz or from an external clock generator. Further, the FMPLL supports programmable frequency modulation of the system clock. The FMPLL multiplication factor, reference clock pre-divider factor, output clock divider ratio, modulation depth, and modulation rate are all controllable through a bus interface.

11.1.3 Features

The FMPLL has the following major features:

- Input clock frequencies from 8 MHz to 20 MHz and 16 MHz to 40 MHz
- Current controlled oscillator (ICO) range from 48 MHz to maximum device frequency
- Reference frequency pre-divider (PREDIV) for finer frequency synthesis resolution
- Reduced frequency divider (RFD) for reduced frequency operation without forcing the FMPLL to re-lock
- Four modes of operation:
 - Bypass mode.
 - Crystal reference mode (default mode for the 496, 416 and 324 packages). Refer to [Section 11.1.4.1, “Crystal Reference.”](#)
 - External reference mode. Refer to [Section 11.1.4.2, “External Reference Mode.”](#)
 - PLL dual-controller (1:1) mode for EXTAL_EXTCLK to CLKOUT skew minimization.
- Programmable frequency modulation
 - Modulation enabled/disabled via bus interface
 - Triangle wave modulation
 - Register programmable modulation depth (+/-2% deviation from center frequency)
 - Register programmable modulation frequency dependent on reference frequency
- Lock detect circuitry reports when the FMPLL has achieved frequency lock and continuously monitors lock status to report loss of lock conditions
 - User-selectable ability to generate an interrupt request upon loss of lock. (See [Chapter 10, “Interrupt Controller \(INTC\),”](#) for details.)
 - User-selectable ability to generate a system reset upon loss of lock. (See [Chapter 3, “Reset,”](#) for details.)
- Loss of clock (LOC) detection for reference and feedback clocks
 - User-selectable ability to generate an interrupt request upon loss of clock. (See [Chapter 10, “Interrupt Controller \(INTC\),”](#) for details.)
 - User-selectable ability to generate a system reset upon loss of clock (See [Chapter 3, “Reset,”](#) for details.)
- Self-locked mode (SCM) operation in event of input clock failure

11.1.4 FMPLL Modes of Operation

The FMPLL operational mode is configured during reset. For the 416 and 496 and 324 pin packages, the FMPLL mode defaults to crystal reference mode. For these devices, if the user should desire to change from this mode, the $\overline{\text{RSTCFG}}$ and $\text{PLLCFG}[0:1]$ package pins must be driven to the appropriate state for the desired mode from the time $\overline{\text{RSTOUT}}$ asserts until it negates. As shown in [Table 11-4](#), if $\overline{\text{RSTCFG}}$ is not asserted during reset, the state of the PLLCFG package pins is ignored, and the FMPLL will operate in the default crystal reference mode. The table also shows that to enter any other mode $\overline{\text{RSTCFG}}$ must be asserted during reset.

Note that for the 208 package size, the device has no $\overline{\text{RSTCFG}}$ pin. After reset the device resets to the values of PLLCFG before reset. The device does not reset to the crystal reference mode as do the other packages. Bypass mode is not enabled in the 208 package.

Table 11-1 shows clock mode selection during reset configuration for the 416 and 496 and 324 pin packages. Additional information on reset configuration options for the FMPLL can be found in Chapter 3, “Reset.”

Table 11-1. Clock Mode Selection in 496 and 416 Pin and 324 Pin Packages

Clock Mode		Package Pins				Effect on PLL Reference Clock	Synthesizer Status Register (FMPLL_SYNSR) ¹ Bits		
		RSTCFG	PLLCFG0	PLLCFG1	PLLCFG2		MODE	PLLSEL	PLLREF
8 through 20 MHz	Crystal Reference	1	PLLCFG pins ignored.		0	Crystal Reference Frequency / 2	1	1	1
		0	1	0					
	External Reference	0	0	1	0	External Reference Frequency	1	1	0
	Bypass	0	0	0	0	No Effect	0	0	0
Dual-Controller (1:1)	0	1	1	0	External Reference Frequency	1	0	0	
16 through 40 MHz	Crystal Reference	1	PLLCFG pins ignored.		1	Crystal Reference Frequency / 2	1	1	1
		0	1	0					
	External Reference	0	0	1	1	External Reference Frequency / 2	1	1	0
	Bypass	0	0	0	1	No Effect	0	0	0
	Dual-Controller (1:1)	0	1	1	1	<i>Not Allowed</i>	1	0	0

¹ See Section 11.3.1.2, “Synthesizer Status Register (FMPLL_SYNSR)” for more information on these bits.

Table 11-2 shows clock mode selection for the 208 pin package.

Table 11-2. Clock Mode Selection in 208 Pin Package

Clock Mode	Package Pins		Synthesizer Status Register (FMPLL_SYNSR) ¹ Bits		
	PLLCFG[0]	PLLCFG[1]	MODE	PLLSEL	PLLREF
Crystal Reference	1	0	1	1	1
External Reference	0	1	1	1	0
Bypass	0	0	0	0	0
Dual-Controller	1	1	1	0	0

¹ See Section 11.3.1.2, “Synthesizer Status Register (FMPLL_SYNSR)” for more information on these bits.

11.1.4.1 Crystal Reference

In crystal reference mode, the FMPLL receives an input clock frequency (EXTAL) from the crystal oscillator circuit and the pre-divider, and multiplies the frequency to create the FMPLL output clock. The user must supply a crystal oscillator that is within the appropriate input frequency range, the crystal manufacturer's recommended external support circuitry, and short signal route from the MCU to the crystal.

The external support circuitry for the crystal oscillator is shown in Figure 11-7. Example component values are shown as well. Note that the actual circuit should be reviewed with the crystal manufacturer. A block diagram illustrating crystal reference mode is shown in Figure 11-4.

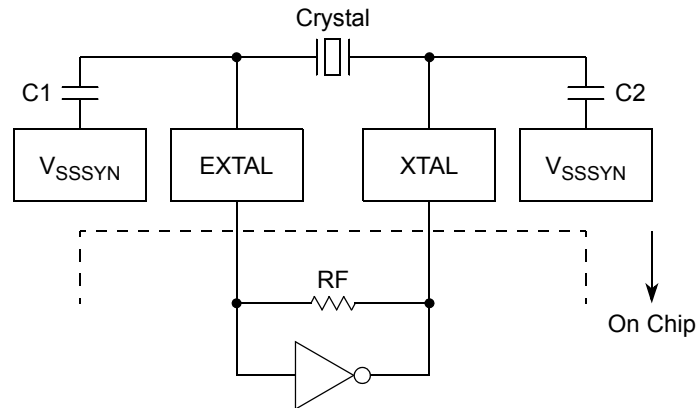


Figure 11-7. Crystal Oscillator Network

In crystal reference mode, the FMPLL can generate a frequency modulated clock or a non-modulated clock (locked on a single frequency). The modulation rate, modulation depth, output clock divide ratio (RFD), and whether the FMPLL is modulating or not can be programmed by writing to the FMPLL registers. Crystal reference is the default clock mode for the 416 and 496 and 324 pin packages. It is not necessary to force PLLCFG[0:1] to enter this mode. In the 208 package size, because it has no $\overline{\text{RSTCFG}}$ pin, the crystal reference mode can only be selected through the PLLCFG pins.

Tying the PLLCFG2 signal low is a requirement for operation in the 8 MHz to 20 MHz range. If a 16 MHz to 40 MHz oscillator is used, PLLCFG2 must be tied high. Refer to FMPLL_SYNCNR[PREDIV].

11.1.4.2 External Reference Mode

This external reference mode functions the same as crystal reference mode except that EXTAL_EXTCLK is driven by an external clock generator rather than a crystal oscillator. Also, the input frequency range in external reference mode is the same as in the crystal reference mode; frequency modulation is available. To enter external clock mode, the default FMPLL configuration must be overridden by following the procedure outlined in Section 11.1.4, "FMPLL Modes of Operation." A block diagram illustrating external reference mode is shown in Figure 11-3.

NOTE

In addition to supplying power for the CLKOUT signal, when the FMPLL is configured for external clock mode of operation, the V_{DDE5} supply voltage also controls the voltage level at which the signal presented to the EXTAL_EXTCLK pin causes a switch in the clock logic levels. The EXTAL_EXTCLK will accept a clock source with a voltage range of 1.6V to 3.6V, however the transition voltage is determined by V_{DDE5} supply voltage divided by 2. As an example, if V_{DDE5} is 3.3V, then the clock will transition at approximately 1.6V. The V_{DDE5} supply voltage and the voltage level of the external clock reference must be compatible, or the device will not clock properly.

11.1.4.3 Bypass Mode

In FMPLL bypass mode, the FMPLL is completely bypassed and the user must supply an external clock on the EXTAL_EXTCLK pin. The external clock is used directly to produce the internal system clocks. In bypass mode, the analog portion of the FMPLL is disabled and no clocks are generated at the FMPLL output. Consequently, frequency modulation is not available. In bypass mode the pre-divider is bypassed and has no effect on the system clock.

To enter bypass mode, the default FMPLL configuration must be overridden by following the procedure outlined in [Section 11.1.4, “FMPLL Modes of Operation.”](#) A block diagram illustrating bypass mode is shown in [Figure 11-2](#).

11.1.4.4 Dual-Controller Mode (1:1)

FMPLL dual-controller mode is used by the slave MCU device of a dual-controller system. The slave FMPLL will facilitate skew reduction between the input and output clock signals. To enter dual-controller mode, the default FMPLL configuration must be overridden by the procedure outlined in [Section 11.1.4, “FMPLL Modes of Operation.”](#)

In this mode, the system clock runs at twice the frequency of the EXTAL_EXTCLK input pin and is phase aligned. Note that crystal operation is not supported in dual-controller mode and an external clock must be provided. In this mode, the frequency and phase of the signal at the EXTAL_EXTCLK pin and the CLKOUT pin of the slave MCU are matched. A block diagram illustrating dual-controller mode (1:1) is shown in [Figure 11-6](#).

Frequency modulation is not available when configured for dual-controller mode for both the master and slave devices. Enabling frequency modulation on the device supplying the reference clock to the slave in dual-controller mode will produce unreliable clocks on the slave.

NOTE

When configured for dual-controller mode, the CLKOUT clock divider on the slave device must not be changed from its reset state of divide-by-2. Increasing or decreasing this divide ratio will produce unpredictable results from the FMPLL.

11.2 External Signal Description

Table 11-3 lists external signals used by the FMPLL during normal operation.

Table 11-3. PLL External Pin Interface

Name	I/O Type	Function	Pull
PLLCFG0_GPIO208	I/O	Configures the mode during reset. GPIO used otherwise.	Up
PLLCFG1_GPIO209	I/O	Configures the mode during reset. GPIO used otherwise.	Up
PLLCFG2	I	Configures the crystal oscillator range	—
XTAL	Output	Output drive for external crystal	—
EXTAL_EXTCLK	Input	Crystal/external clock input	—
V _{DDSYN}	Power	Analog power supply (3.3V +/-10%)	—
V _{SSSYN}	Ground	Analog ground	—

11.3 Memory Map/Register Definition

Table 11-4 shows the FMPLL memory map locations.

Table 11-4. FMPLL Module Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xC3F8_0000)	FMPLL_SYNCR	Synthesizer control register	32
Base + 0x04	FMPLL_SYNSR	Synthesizer status register	32
Base + 0x08 – 0xC3F8_3FFF	—	Reserved	—

11.3.1 Register Descriptions

The clock operation is controlled by the synthesizer control register (FMPLL_SYNCR) and status is reported in the synthesizer status register (FMPLL_SYNSR). The following sections describe these registers in detail.

11.3.1.1 Synthesizer Control Register (FMPLL_SYNCR)

The synthesizer control register (FMPLL_SYNCR) contains bits for defining the clock operation for the system.

NOTE

To ensure proper operation across all MPC5500 MCUs, execute an **mbar** or **msync** instruction between the write to change the FMPLL_SYNCR[MFD] and the read to check the lock status shown by FMPLL_SYNSR[LOCK].

Furthermore, buffering writes to the FMPLL, as controlled by PBRIDGE_A_OPACR[BW0], must be disabled.

Frequency Modulated Phase Locked Loop and System Clocks (FMPLL)

Address: Base + 0x0000

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	PREDIV			MFD				0	RFD			LOC EN	LOL RE	LOC RE	
W																
Reset	0	0	0	0 ¹	0	0	0	1	0	0	0	1	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	DIS CLK	LOL IRQ	LOC IRQ	RATE	DEPTH		EXP									
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 11-8. Synthesizer Control Register (FMPLL_SYNCR)

¹ When using a 40MHz oscillator PLLCFG2 is set high (divide-by-2 operation for the predivider) and the reset value of PREDIV must be 0x001.

Table 11-5. FMPLL_SYNCR Field Descriptions

Field	Description
0	Reserved.
1–3 PREDIV[0:2]	<p>The PREDIV bits control the value of the divider on the input clock. The output of the pre-divider circuit generates the reference clock to the FMPLL analog loop. When the PREDIV bits are changed, the FMPLL will immediately lose lock. To prevent an immediate reset, the LOLRE bit must be cleared before writing the PREDIV bits. In 1:1 (dual-controller) mode, the PREDIV bits are ignored and the input clock is fed directly to the analog loop.</p> <p>000 Divide by 1 001 Divide by 2 010 Divide by 3 011 Divide by 4 100 Divide by 5 101–111 Reserved</p> <p>Note: Programming a PREDIV value such that the ICO operates outside its specified range will cause unpredictable results and the FMPLL will not lock. Refer to the <i>Data Sheet</i> for details on the ICO range.</p> <p>Note: To avoid unintentional interrupt requests, disable LOLIRQ before changing PREDIV and then reenble it after acquiring lock.</p> <p>Note: When using crystal reference mode or external reference mode, The PREDIV value must not be set to any value that causes the phase/frequency detector to go below 4MHz. That is, the crystal or external clock frequency divided by the PREDIV value must be greater than or equal to 4MHz.</p> <p>Note: To use the 8– 20 MHz OSC, the PLL predivider must be configured for divide-by-2 operation by tying PLLCFG2 low. To use the 16– 40 MHz OSC, the PLL predivider must be configured for divide-by-2 operation by setting PLLCFG2 high. After reset, PREDIV must not be configured to less than divide-by-2 so long as a 16 MHz – 40 MHz crystal is used.</p>

Table 11-5. FMPLL_SYNCR Field Descriptions (continued)

Field	Description																		
4–8 MFD[0:4]	<p>Multiplication factor divider. The MFD bits control the value of the divider in the FMPLL feedback loop. The value specified by the MFD bits establish the multiplication factor applied to the reference frequency. The decimal equivalent of the MFD binary number is substituted into the equation from Table 11-10 for F_{sys} to determine the equivalent multiplication factor.</p> <p>When the MFD bits are changed, the FMPLL loses lock. At this point, if modulation is enabled, the calibration sequence is reinitialized. To prevent an immediate reset, the LOLRE bit must be cleared before writing the MFD bits. In dual-controller mode, the MFD bits are ignored and the multiplication factor is equivalent to 2X. In bypass mode the MFD bits have no effect.</p> <p>Note: Programming an MFD value such that the ICO operates outside its specified range will cause unpredictable results and the FMPLL will not lock. Refer to the <i>Data Sheet</i> for details on the ICO range.</p> <p>Note: To avoid unintentional interrupt requests, disable LOLIRQ before changing MFD and then reenabling it after acquiring lock.</p>																		
9	Reserved.																		
10–12 RFD[0:2]	<p>Reduced frequency divider. The RFD bits control a divider at the output of the FMPLL. The value specified by the RFD bits establish the divisor applied to the FMPLL frequency.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>RFD[0:2]</th> <th>Output Clock Divide Ratio</th> </tr> </thead> <tbody> <tr> <td>000</td> <td>Divide by 1</td> </tr> <tr> <td>001</td> <td>Divide by 2</td> </tr> <tr> <td>010</td> <td>Divide by 4</td> </tr> <tr> <td>011</td> <td>Divide by 8</td> </tr> <tr> <td>100</td> <td>Divide by 16</td> </tr> <tr> <td>101</td> <td>Divide by 32</td> </tr> <tr> <td>110</td> <td>Divide by 64</td> </tr> <tr> <td>111</td> <td>Divide by 128</td> </tr> </tbody> </table> <p>Changing the RFD bits does not affect the FMPLL; hence, no re-lock delay is incurred. Resulting changes in clock frequency are synchronized to the next falling edge of the current system clock. However these bits must only be written when the lock bit (LOCK) is set, to avoid exceeding the allowable system operating frequency. In bypass mode, the RFD bits have no effect.</p>	RFD[0:2]	Output Clock Divide Ratio	000	Divide by 1	001	Divide by 2	010	Divide by 4	011	Divide by 8	100	Divide by 16	101	Divide by 32	110	Divide by 64	111	Divide by 128
RFD[0:2]	Output Clock Divide Ratio																		
000	Divide by 1																		
001	Divide by 2																		
010	Divide by 4																		
011	Divide by 8																		
100	Divide by 16																		
101	Divide by 32																		
110	Divide by 64																		
111	Divide by 128																		
13 LOCEN	<p>Loss-of-clock enable. The LOCEN bit determines whether the loss of clock function is operational. See Section 11.4.2.6, “Loss-of-Clock Detection” and Section 11.4.2.6.1, “Alternate/Backup Clock Selection” for more information.</p> <p>In bypass mode, this bit has no effect.</p> <p>LOCEN does not affect the loss of lock circuitry.</p> <p>0 Loss of clock disabled. 1 Loss of clock enabled.</p>																		
14 LOLRE	<p>Loss-of-lock reset enable. The LOLRE bit determines how the integration module (the SIU) handles a loss of lock indication. When operating in crystal reference, external reference, or dual-controller mode, the FMPLL must be locked before setting the LOLRE bit. Otherwise reset is immediately asserted. The LOLRE bit has no effect in bypass mode.</p> <p>0 Ignore loss of lock - reset not asserted. 1 Assert reset on loss of lock. Reset will remain asserted, regardless of the source of reset, until after the FMPLL has locked.</p>																		

Table 11-5. FMPLL_SYNCR Field Descriptions (continued)

Field	Description						
15 LOCRE	<p>Loss-of-clock reset enable. The LOCRE bit determines how the integration module (the SIU) handles a loss of clock condition when LOCEN=1. LOCRE has no effect when LOCEN=0. If the LOCF bit in the SYNISR indicates a loss of clock condition, setting the LOCRE bit causes an immediate reset. In bypass mode LOCRE has no effect.</p> <p>0 Ignore loss of clock - reset not asserted. 1 Assert reset on loss of clock.</p>						
16 DISCLK	<p>Disable CLKOUT. The DISCLK bit determines whether CLKOUT is active. When CLKOUT is disabled it is driven low.</p> <p>0 CLKOUT driven normally 1 CLKOUT driven low</p>						
17 LOLIRQ	<p>Loss-of-lock interrupt request. The LOLIRQ bit enables an interrupt request for LOLF when it (LOLIRQ) is asserted and when LOLF is asserted. If either LOLF or LOLIRQ is negated, the interrupt request is negated. When operating in crystal reference, external reference, or dual-controller mode, the FMPLL must be locked before setting the LOLIRQ bit. Otherwise an interrupt is immediately requested. The LOLIRQ bit has no effect in bypass mode</p> <p>0 Ignore loss of lock - interrupt not requested 1 Request interrupt</p>						
18 LOCIRQ	<p>Loss-of-clock interrupt request. The LOCIRQ bit determines how the integration module (the SIU) handles a loss of clock condition when LOCEN=1. LOCIRQ has no effect when LOCEN=0. If the LOCF bit in the SYNISR indicates a loss of clock condition, setting (or having previously set) the LOCIRQ bit causes an interrupt request. In bypass mode LOCIRQ has no effect.</p> <p>0 Ignore loss of clock - interrupt not requested 1 Request interrupt on loss of clock.</p>						
19 RATE	<p>Modulation rate. Controls the rate of frequency modulation applied to the system frequency. The allowable modulation rates are shown below. Changing the rate by writing to the RATE bit will initiate the FM calibration sequence.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>RATE</th> <th>Modulation Rate (Hz)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>$FM = F_{ref} / 80$</td> </tr> <tr> <td>1</td> <td>$FM = F_{ref} / 40$</td> </tr> </tbody> </table> <p>Note: To avoid unintentional interrupt requests, clear LOLIRQ before changing RATE.</p>	RATE	Modulation Rate (Hz)	0	$FM = F_{ref} / 80$	1	$FM = F_{ref} / 40$
RATE	Modulation Rate (Hz)						
0	$FM = F_{ref} / 80$						
1	$FM = F_{ref} / 40$						

Table 11-5. FMPLL_SYNCR Field Descriptions (continued)

Field	Description															
20–21 DEPTH[0:1]	<p>Controls the frequency modulation depth and enables the frequency modulation. When programmed to a value other than 0x0, the frequency modulation is automatically enabled. The programmable frequency deviations from the system frequency are shown below. Upon a change in the depth value to other than 0x0, the calibration sequence will be reinitialized.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>DEPTH[1]</th> <th>DEPTH[0]</th> <th>Modulation Depth (% of Fsys)</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>0</td> <td>1</td> <td>1.0 ± 0.2</td> </tr> <tr> <td>1</td> <td>0</td> <td>2.0 ± 0.2</td> </tr> <tr> <td>1</td> <td>1</td> <td>Reserved</td> </tr> </tbody> </table> <p>Note: To avoid unintentional interrupt requests, clear LOLIRQ before changing DEPTH.</p>	DEPTH[1]	DEPTH[0]	Modulation Depth (% of Fsys)	0	0	0	0	1	1.0 ± 0.2	1	0	2.0 ± 0.2	1	1	Reserved
DEPTH[1]	DEPTH[0]	Modulation Depth (% of Fsys)														
0	0	0														
0	1	1.0 ± 0.2														
1	0	2.0 ± 0.2														
1	1	Reserved														
22–31 EXP[0:9]	Expected difference value. Holds the expected value of the difference of the reference and the feedback counters. See Section 11.4.3.3, “FM Calibration Routine” to determine the value of these bits. This field is written by the application before entering calibration mode.															

11.3.1.2 Synthesizer Status Register (FMPLL_SYNSR)

The synthesizer status register (FMPLL_SYNSR) is a 32-bit register. Only the LOLF and LOCF flag bits are writable in this register. Writes to bits other than the LOLF and LOCF have no effect.

Address: Base + 0x0004

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	LOLF	LOC	MODE	PLL SEL	PLL REF	LOCKS	LOCK	LOCF	CALD ONE	CAL PASS
W							w1c							w1c		
Reset	0	0	0	0	0	0	0	0	— ¹	— ¹	— ¹	— ¹	— ²	0	0	0

¹ Reset state determined during reset configuration. (See [Section 11.1.4, “FMPLL Modes of Operation,”](#) for more information.)

² Reset state determined during reset.

Note: “w1c” signifies that this bit is cleared by writing a 1 to it.

Figure 11-9. Synthesizer Status Register (FMPLL_SYNSR)

Table 11-6. FMPLL_SYNSR Field Descriptions

Field	Description
0–21	Reserved.
22 LOLF	<p>Loss-of-lock flag. Provides the interrupt request flag. This is a write 1 to clear (w1c) bit; to clear the flag, the user must write a 1 to the bit. Writing 0 has no effect. This flag will not be set, and an interrupt will not be requested, if the loss of lock condition was caused by a system reset, a write to the FMPLL_SYNSR which modifies the MFD bits, or enabling frequency modulation. If the flag is set due to a system failure, writing the MFD bits or enabling FM will not clear the flag. Asserting reset will clear the flag. This flag bit is sticky in the sense that if lock is reacquired, the bit will remain set until either a write 1 or reset is asserted.</p> <p>0 Interrupt service not requested 1 Interrupt service requested</p> <p>Note: Upon a loss of lock that is not generated by a system reset, a write to the FMPLL_SYNSR that modifies the MFD or PREDIV bits, or an enabling of frequency modulation, the LOLF will be set <i>if</i> LOLIRQ is set. If the FMPLL reacquires lock and at that point either of the three above steps are executed, the LOLF will again be set. To avoid an unintentional interrupt from being generated, LOLIRQ must be cleared prior to changing MFD or PREDIV, or prior to enabling FM after a previous interrupt and relock occurred.</p>
23 LOC	<p>Loss-of-clock status. Indicates whether a loss-of-clock condition is present when operating in crystal reference, external reference, or dual-controller mode. If LOC = 0, the system clocks are operating normally. If LOC = 1, the system clocks have failed due to a reference failure or a FMPLL failure. If the read of the LOC bit and the loss-of-clock condition occur simultaneously, the bit does not reflect the current loss of clock condition. If a loss-of-clock condition occurs which sets this bit and the clocks later return to normal, this bit will be cleared.</p> <p>A loss of clock condition can only be detected if LOCEN = 1. LOC is always 0 in bypass mode.</p> <p>0 Clocks are operating normally 1 Clocks are not operating normally.</p>
24 MODE	<p>Clock mode. Determined at reset, this bit indicates which clock mode the system is utilizing. See Chapter 3, “Reset,” for details on how to configure the system clock mode during reset.</p> <p>0 PLL bypass mode. 1 PLL clock mode.</p>
25 PLLSEL	<p>PLL mode select. Determined at reset, this bit indicates in which mode the FMPLL operates. This bit is cleared in dual-controller and bypass mode. See Chapter 3, “Reset,” for details on how to configure the system clock mode during reset. See Table 11-1 for more information.</p> <p>0 Dual-controller mode. 1 Crystal reference or external reference mode.</p>
26 PLLREF	<p>PLL clock reference source. Determined at reset, this bit indicates whether the PLL reference source is an external clock or a crystal reference. This bit is cleared in dual controller mode and bypass mode. See Chapter 3, “Reset,” for details on how to configure the system clock mode during reset.</p> <p>0 External clock reference chosen. 1 Crystal clock reference chosen.</p>

Table 11-6. FMPLL_SYNCR Field Descriptions (continued)

Field	Description
27 LOCKS	<p>Sticky FMPLL lock status bit. A sticky indication of FMPLL lock status. LOCKS is set by the lock detect circuitry when the FMPLL acquires lock after one of the following:</p> <ul style="list-style-type: none"> • a system reset • a write to the FMPLL_SYNCR which modifies the MFD bits • the enabling of frequency modulation <p>Whenever the FMPLL loses lock, LOCKS is cleared. LOCKS remains cleared even after the FMPLL relocks, until one of the three previously-stated conditions occurs. Furthermore, if the LOCKS bit is read when the FMPLL simultaneously loses lock, the bit does not reflect the current loss of lock condition.</p> <p>If operating in bypass mode, LOCKS remains cleared after reset. In crystal reference, external reference, and dual-controller mode, LOCKS is set after reset.</p> <p>0 PLL has lost lock since last system reset, a write to FMPLL_SYNCR to modify the MFD bit field, or frequency modulation enabled.</p> <p>1 PLL has not lost lock since last system reset, a write to FMPLL_SYNCR to modify the MFD bit field, or frequency modulation enabled.</p>
28 LOCK	<p>PLL lock status bit. Indicates whether the FMPLL has acquired lock. FMPLL lock occurs when the synthesized frequency matches to within approximately 0.75% of the programmed frequency. The FMPLL loses lock when a frequency deviation of greater than approximately 1.5% occurs. If the LOCK bit is read when the FMPLL simultaneously loses lock or acquires lock, the bit does not reflect the current condition of the FMPLL.</p> <p>If operating in bypass mode, LOCK remains cleared after reset.</p> <p>0 PLL is unlocked.</p> <p>1 PLL is locked.</p>
29 LOCF	<p>Loss-of-clock flag. This bit provides the interrupt request flag. This is a write 1 to clear (w1c) bit; to clear the flag, the user must write a 1 to the bit. Writing 0 has no effect. Asserting reset will clear the flag. This flag is sticky in the sense that if clocks return to normal after the flag has been set, the bit will remain set until cleared by either writing 1 or asserting reset.</p> <p>0 Interrupt service not requested</p> <p>1 Interrupt service requested</p>
30 CALDONE	<p>Calibration complete. Indicates whether the calibration sequence has been completed since the last time modulation was enabled. If CALDONE = 0 then the calibration sequence is either in progress or modulation is disabled. If CALDONE = 1 then the calibration sequence has been completed, and frequency modulation is operating.</p> <p>0 Calibration not complete.</p> <p>1 Calibration complete.</p> <p>Note: FM relocking does not start until calibration is complete.</p>
31 CALPASS	<p>Calibration passed. Indicates whether the calibration routine was successful. If CALPASS = 1 and CALDONE = 1 then the routine was successful. If CALPASS = 0 and CALDONE = 1, then the routine was unsuccessful. When the calibration routine is initiated the CALPASS is asserted. CALPASS remains asserted until either modulation is disabled by clearing the DEPTH bits in the FMPLL_SYNCR or a failure occurs within the FMPLL calibration sequence.</p> <p>0 Calibration unsuccessful.</p> <p>1 Calibration successful.</p> <p>If calibration is unsuccessful, then actual depth is not guaranteed to match the desired depth.</p>

11.4 Functional Description

This section explains clock architecture, clock operation, and clock configuration.

11.4.1 Clock Architecture

This section describes the clocks and clock architecture in the MCU.

11.4.1.1 Overview

The system clocks are generated from one of four FMPLL modes: crystal reference mode, external reference mode, dual-controller (1:1) mode, and bypass mode. See [Section 11.1, “Introduction”](#) for information on the different clocking modes available in the FMPLL.

The peripheral IP modules have been designed to allow software to gate the clocks to the non-memory-mapped logic of the modules.

The MCU has three clock output pins that are driven by programmable clock dividers. The clock dividers divide the system clock down by even integer values. The three clock output pins are the following:

- CLKOUT – External address/data bus clock
- MCKO – Nexus auxiliary port clock
- ENGCLK – Engineering clock

The MCU has been designed so that the oscillator clock can be selected as the clock source for the CAN interface in the FlexCAN blocks resulting in very low jitter performance.

[Figure 11-1](#) shows a block diagram of the FMPLL and the system clock architecture.

11.4.1.2 Software Controlled Power Management/Clock Gating

Some of the IP modules on this device support software controlled power management/clock gating whereby the application software can disable the non-memory-mapped portions of the modules by writing to module disable (MDIS) bits in registers within the modules. The memory-mapped portions of the modules are clocked by the system clock when they are being accessed. The NPC can be configured to disable the MCKO signal when there are no Nexus messages pending. The H7FA flash array can be disabled by writing to a bit in the flash register map.

The modules that implemented software controlled power management/clock gating are listed in [Table 11-7](#) along with the registers and bits that disable each module. The software controlled clocks are enabled when the MCU comes out of reset.

Table 11-7. Software Controlled Power Management/Clock Gating Support

Module Name	Register Name	Bit Names
DSPI B	DSPI_B_MCR	MDIS
DSPI C	DSPI_C_MCR	MDIS
DSPI D	DSPI_D_MCR	MDIS

Table 11-7. Software Controlled Power Management/Clock Gating Support (continued)

Module Name	Register Name	Bit Names
EBI	EBI_MCR	MDIS
eTPU Engine A	ETPUECR_1	MDIS
FlexCAN A	FLEXCAN_A_MCR	MDIS
FlexCAN B	FLEXCAN_B_MCR	MDIS
FlexCAN C	FLEXCAN_C_MCR	MDIS
FlexCAN D	FLEXCAN_D_MCR	MDIS
FlexCAN E	FLEXCAN_E_MCR	MDIS
EMIOS	EMIOS_MCR	MDIS
ESCI_A	ESCIA_CR2	MDIS
ESCI_B	ESCIB_CR2	MDIS
NPC	NPC_PCR	MCKO_EN, MCKO_GT ¹
Flash Array	FLASH_MCR	STOP ²

¹ See Chapter 26, “Nexus Development Interface.”

² See Chapter 13, “Flash Memory.”

11.4.1.3 Clock Dividers

Each of the CLKOUT, MCKO, and ENGCLK dividers provides a nominal 50% duty cycle clock to an output pin. There is no guaranteed phase relationship between CLKOUT, MCKO, and ENGCLK. ENGCLK is not synchronized to any I/O pins.

11.4.1.3.1 External Bus Clock (CLKOUT)

The external bus clock (CLKOUT) divider can be programmed to divide the system clock by two or four based on the settings of the EBDF bit field in the SIU external clock control register (SIU_ECCR). The reset value of the EBDF selects a CLKOUT frequency of one half of the system clock frequency. The EBI supports gating of the CLKOUT signal when there are no external bus accesses in progress. See Chapter 6, “System Integration Unit (SIU),” for more information on CLKOUT.

The hold-time for the external bus pins can be changed by writing to the external bus tap select (EBTS) bit in the SIU_ECCR. See Chapter 6, “System Integration Unit (SIU)” for more information.

11.4.1.3.2 Nexus Message Clock (MCKO)

The Nexus message clock (MCKO) divider can be programmed to divide the system clock by two, four or eight based on the MCKO_DIV bit field in the port configuration register (PCR) in the Nexus port controller (NPC). The reset value of the MCKO_DIV selects an MCKO clock frequency one half of the system clock frequency. The MCKO divider is configured by writing to the NPC through the JTAG port. See Chapter 26, “Nexus Development Interface” for more information.

11.4.1.3.3 Engineering Clock (ENGCLK)

The engineering clock (ENGCLK) divider can be programmed to divide the system clock by factors from 2 to 126 in increments of two. The ENGDIV bit field in the SIU_ECCR determines the divide factor. The reset value of ENGDIV selects an ENGCLK frequency of system clock divided by 32.

11.4.1.3.4 FlexCAN_x Clock Domains

The FlexCAN modules have two distinct software controlled clock domains. One of the clock domains is always derived from the system clock. This clock domain includes the message buffer logic. The source for the second clock domain can be either the system clock or a direct feed from the oscillator pin EXTAL_EXTCLK. The logic in the second clock domain controls the CAN interface pins. The CLK_SRC bit in the FlexCAN CTRL register selects between the system clock and the oscillator clock as the clock source for the second domain. Selecting the oscillator as the clock source ensures very low jitter on the CAN bus. System software can gate both clocks by writing to the MDIS bit in the FlexCAN MCR register. Figure 11-1 shows the two clock domains in the FlexCAN modules.

See Chapter 23, “FlexCAN2 Controller Area Network” for more information on the FlexCAN modules.

11.4.1.3.5 FEC Clocks

The FEC TX_CLK and RX_CLK are inputs. An external source provides the clocks to these pins.

11.4.2 Clock Operation

11.4.2.1 Input Clock Frequency

The FMPLL is designed to operate over an input clock frequency range as determined by the operating mode. The operating ranges for each mode are given in Table 11-8.

Table 11-8. Input Clock Frequency

Mode	Input Frequency Range
Crystal Reference External Reference	8 MHz – 20 MHz or 16 MHz – 40 MHz
Bypass	0 Hz–132MHz
Dual-Controller (1:1)	25 MHz–66 MHz

11.4.2.2 Reduced Frequency Divider (RFD)

The RFD may be used for reducing the FMPLL system clock frequency. The RFD must be programmed to be ≥ 1 when changing MFD or PREDIV or when enabling frequency modulation.

11.4.2.3 Programmable Frequency Modulation

The FMPLL provides for frequency modulation of the system clock. The modulation is applied as a triangular waveform with modulation depth and rate controlled by fields in the FMPLL_SYNCR. The

modulation depth can be set to +/-1% or +/-2% of the system frequency. The modulation rate is dependent on the reference clock frequency.

Complete details for configuring the programmable frequency modulation is given in [Section 11.4.3.2, “Programming System Clock Frequency with Frequency Modulation.”](#)

11.4.2.4 FMPLL Lock Detection

A pair of counters monitor the reference and feedback clocks to determine when the system has acquired frequency lock. Once the FMPLL has locked, the counters continue to monitor the reference and feedback clocks and will report if/when the FMPLL has lost lock. The FMPLL_SYNCR provides the flexibility to select whether to generate an interrupt, assert system reset, or do nothing in the event that the FMPLL loses lock. See [Section 11.3.1.1, “Synthesizer Control Register \(FMPLL_SYNCR\)](#) for details.

When the frequency modulation is enabled, the loss of lock continues to function as described but with the lock and loss of lock criteria reduced to ensure that false loss of lock conditions are not detected.

In bypass mode, the FMPLL cannot lock since the FMPLL is disabled.

11.4.2.5 FMPLL Loss-of-Lock Conditions

Once the FMPLL acquires lock after reset, the FMPLL_SYNSR[LOCK] and FMPLL_SYNSR[LOCKS] status bits are set. If the MFD is changed or if an unexpected loss of lock condition occurs, the LOCK and LOCKS status bits are negated. While the FMPLL is in an unlocked condition, the system clocks continue to be sourced from the FMPLL as the FMPLL attempts to re-lock. Consequently, during the re-locking process, the system clock frequency is not well defined and may exceed the maximum system frequency thereby violating the system clock timing specifications (when changing MFD, this is avoided by following the procedure detailed in [Section 11.4.3, “Clock Configuration”](#)). Because this condition can arise during unexpected loss of lock events, it is recommended to use the loss of lock reset functionality, see [Section 11.4.2.5.1, “FMPLL Loss-of-Lock Reset,”](#) below. However, LOLRE must be cleared while changing the MFD otherwise a reset will occur.

Once the FMPLL has relocked, the LOCK bit is set. The LOCKS bit remains cleared if the loss of lock was unexpected. The LOCKS bit is set to 1 when the loss of lock was caused by changing the MFD.

11.4.2.5.1 FMPLL Loss-of-Lock Reset

The FMPLL provides the ability to assert reset when a loss of lock condition occurs by programming the FMPLL_SYNCR[LOLRE] bit. Reset is asserted if LOLRE is set and loss of lock occurs. Because the FMPLL_SYNSR[LOCK] and FMPLL_SYNSR[LOCKS] bits are reinitialized after reset, the system reset status register (SIU_RSR) must be read to determine that a loss of lock condition occurred.

To exit reset, the reference must be present and the FMPLL must acquire lock. In bypass mode, the FMPLL cannot lock. Therefore a loss of lock condition cannot occur, and LOLRE has no effect.

11.4.2.5.2 FMPLL Loss-of-Lock Interrupt Request

The FMPLL provides the ability to request an interrupt when a loss of lock condition occurs by programming the FMPLL_SYNCR[LOLIRQ] bit. An interrupt is requested by the FMPLL if LOLIRQ is set and loss of lock occurs.

In bypass mode, the FMPLL cannot lock. Therefore a loss of lock condition cannot occur, and the LOLIRQ bit has no effect.

11.4.2.6 Loss-of-Clock Detection

The FMPLL continuously monitors the reference and feedback clocks. In the event either of the clocks fall below a threshold frequency, the system will report a loss of clock condition. The user may enable a feature to have the FMPLL switch the system clocks to a backup clock in the event of such a failure. Additionally, the user may select to have the system enter reset, assert an interrupt request, or do nothing if/when the FMPLL reports this condition.

11.4.2.6.1 Alternate/Backup Clock Selection

If the user enables loss of clock by setting FMPLL_SYNCR[LOCEN] = 1, then the FMPLL will transition system clocks to a backup clock source in the event of a clock failure as per [Table 11-9](#).

If loss of clock is enabled and the reference clock is the source of the failure, the FMPLL will enter self-clock mode (SCM). The exact frequency during self-clock mode operation is indeterminate due to process, voltage, and temperature variation but is guaranteed to be below the maximum system frequency. If the FMPLL clocks have failed, the FMPLL will transition the system clock source to the reference clock.

The FMPLL remains in SCM until the next reset. Note that when the FMPLL is operated in SCM the system frequency is dependent upon the value in RFD[0:2]. The SCM system frequency stated in the *Data Sheet* assumes that the RFD has been programmed to 0x0. If the loss-of-clock condition is due to a FMPLL failure (for example, loss of feedback clock), the FMPLL reference becomes the system clock's source until the next reset, even if the FMPLL regains itself and re-locks.

Table 11-9. Loss of Clock Summary

Clock Mode	System Clock Source before Failure	REFERENCE FAILURE Alternate Clock Selected by LOC Circuitry until Reset	PLL FAILURE Alternate Clock Selected by LOC Circuitry until Reset
PLL	PLL	PLL Self-Clocked Mode	PLL reference
PLL bypass	Ext. Clock(s)	None	NA

A special loss of clock condition occurs when both the reference and the FMPLL fail. The failures may be simultaneous or the FMPLL may fail first. In either case, the reference clock failure takes priority and the FMPLL attempts to operate in SCM. If successful, the FMPLL remains in SCM until the next reset. During SCM, modulation is always disabled. If the FMPLL cannot operate in SCM, the system remains static until the next reset. Both the reference and the FMPLL must be functioning properly to exit reset.

11.4.2.6.2 Loss-of-Clock Reset

When a loss of clock condition is recognized, reset is asserted if the FMPLL_SYNCNR[LOCRE] bit is set. The LOCF and LOC bits in FMPLL_SYNSR are cleared after reset, therefore, the SIU_RSR must be read to determine that a loss of clock condition occurred. LOCRE has no effect in bypass mode.

To exit reset in FMPLLmode, the reference must be present and the FMPLL must acquire lock.

11.4.2.6.3 Loss-of-Clock Interrupt Request

When a loss of clock condition is recognized, the FMPLL will request an interrupt if the FMPLL_SYNCNR[LOCIRQ] bit is set. The LOCIRQ bit has no effect in bypass mode or if FMPLL_SYNCNR[LOCEN] = 0.

11.4.3 Clock Configuration

In crystal reference and external reference clock mode, the default system frequency is determined by the MFD, RFD, and PREDIV reset values. See [Section 11.3.1.1, “Synthesizer Control Register \(FMPLL_SYNCNR\).”](#) The frequency multiplier is determined by the RFD, PREDIV, and multiplication frequency divisor (MFD) bits in FMPLL_SYNCNR.

Table 11-10 shows the clock-out to clock-in frequency relationships for the possible clock modes.

Table 11-10. Clock-out vs. Clock-in Relationships

Clock Mode	PLL Option
Crystal Reference Mode and External Reference Mode (Frequency modulation disabled)	$F_{\text{sys}} = F_{\text{ref}} \cdot \frac{(MFD + 4)}{((PREDIV + 1) \times 2^{RFD})}$
Dual Controller (1:1) Mode	$F_{\text{sys}} = 2F_{\text{ref}}$
Bypass Mode	$F_{\text{sys}} = F_{\text{ref}}$

NOTES:

F_{sys} = System frequency

F_{ref} = Clock frequency at the EXTAL signal. (See [Figure 11-1](#))

MFD ranges from 0 to 31

RFD ranges from 0 to 7

PREDIV normal reset value is 0. Caution: Programming a PREDIV value such that the ICO operates outside its specified range will cause unpredictable results and the FMPLL will not lock. Refer to the *Data Sheet* for details on the ICO range.

When programming the FMPLL, be sure not to violate the maximum system clocks frequency or max/min ICO frequency specifications. For determining the MFD value, RFD should be assumed zero (that is, divide by 1). This will insure that the FMPLL does not have to synthesize a frequency out of its range. See the *Data Sheet* for more information.

11.4.3.1 Programming System Clock Frequency Without Frequency Modulation

The following steps are required to accommodate the frequency overshoot that may occur when the PREDIV or MFD bits are changed. If frequency modulation is going to be enabled the maximum allowable frequency must be reduced by the programmed ΔF_m .

NOTE

Following these steps will produce immediate changes in supply current, thus the user should ensure that the power supply is sufficiently decoupled with low ESR capacitors.

Here are the steps to program the clock frequency without frequency modulation:

1. Determine the appropriate value for the PREDIV, MFD, and RFD fields in the synthesizer control register (FMPLL_SYNCR). Remember to include the ΔF_m if frequency modulation is to be enabled. Note that the amount of jitter in the system clocks can be minimized by selecting the maximum MFD factor that can be paired with an RFD factor to provide the desired frequency. The maximum MFD value that can be used is determined by the ICO range. See the *Data Sheet* for the maximum frequency of the ICO.
2. Change the following in FMPLL_SYNCR:
 - a) Make sure frequency modulation is disabled (FMPLL_SYNCR[DEPTH] = 00). A change to PREDIV, MFD, or RATE while modulation is enabled will invalidate the previous calibration results.
 - b) Clear FMPLL_SYNCR[LOLRE]. If this bit is set, the MCU will go into reset when MFD is written.
 - c) Initialize the FMPLL for less than the desired final system frequency (done in one single write to FMPLL_SYNCR):
 - Disable LOLIRQ.
 - Write FMPLL_SYNCR[PREDIV] for the desired final value.
 - Write FMPLL_SYNCR[MFD] for the desired final value.
 - Write the RFD control field for 1 + the desired final RFD value.
3. Wait for the FMPLL to lock by monitoring the FMPLL_SYNSR[LOCK] bit. Refer to [Section 11.3.1.1, “Synthesizer Control Register \(FMPLL_SYNCR\),”](#) for memory synchronization between changing FMPLL_SYNCR[MFD] and monitoring the lock status.
4. Initialize the FMPLL for the desired final system frequency by changing FMPLL_SYNCR[RFD] to its desired final value. Note that the FMPLL will not need to re-lock when only changing the RFD, and that RFD must be programmed to be >1 to protect from overshoot.
5. Re-enable LOLIRQ.

NOTE

When using crystal reference mode or external reference mode, The PREDIV value must not be set to any value that causes the phase/frequency detector to go below 4MHz. That is, the crystal or external clock frequency divided by the PREDIV value must be greater than or equal to 4 MHz.

NOTE

This first register write will cause the FMPLL to switch to an initial system frequency which is less than the final one. Keeping the change of frequency to a lower initial value helps minimize the current surge to the external power supply caused by change of frequency. The last step will be to only change the RFD to get to the desired final frequency.

NOTE

Changing the MFD or PREDIV values causes the FMPLL to perform a search for the lock frequency that results in the system clock frequency changing rapidly across the complete frequency range. All MCU peripherals, including the external bus will be subjected to this frequency sweep. Operation of timers and serial communications during this search sequence will produce unpredictable results.

11.4.3.2 Programming System Clock Frequency with Frequency Modulation

In crystal reference and external reference clock modes, the default mode is without frequency modulation enabled. When frequency modulation is enabled, however, three parameters must be set to generate the desired level of modulation: the RATE, DEPTH, and EXP bit fields of the FMPLL_SYNCR. RATE and DEPTH determine the modulation rate and the modulation depth. The EXP field controls the FM calibration routine. [Section 11.4.3.3, “FM Calibration Routine,”](#) shows how to obtain the values to be programmed for EXP. [Figure 11-10](#) illustrates the effects of the parameters and the modulation waveform built into the modulation hardware. The modulation waveform is always a triangle wave and its shape is not programmable.

Note, the modulation rates given are specific to a reference frequency of 8 MHz.

$F_{\text{mod}} = F_{\text{ref}} / Q$ (PREDIV + 1) where $Q = \{40,80\}$ giving modulation rates of 200 kHz and 100 kHz.

NOTE

The following relationship between F_{mod} and modulation rates must be maintained:

$$100 \text{ KHz} \leq F_{\text{mod}} \leq 250 \text{ KHz}$$

Therefore, the utilization of a non 8 MHz reference will result in scaled modulation rates.

Here are the steps to program the clock frequency with frequency modulation. These steps ensure proper operation of the calibration routine and prevent frequency overshoot from the sequence:

1. Change the following in FMPLL_SYNCR:
 - a) Make sure frequency modulation is disabled (FMPLL_SYNCR[DEPTH] = 00). A change to PREDIV, MFD, or RATE while modulation is enabled will invalidate the previous calibration results.
 - b) Clear FMPLL_SYNCR[LOLRE]. If this bit is set, the MCU will go into reset when MFD is written.

- c) Initialize the FMPLL for less than the desired final frequency:
 - Disable LOLIRQ.
 - Write FMPLL_SYNCR[PREDIV] for the desired final value.
 - Write FMPLL_SYNCR[MFD] for the desired final value.
 - Write FMPLL_SYNCR[EXP] for the desired final value.
 - Write FMPLL_SYNCR[RATE] for the desired final value.
 - Write the RFD control field for 1 + the desired final RFD value (RFD must be programmed to be >1 to protect from overshoot).
2. Wait for the FMPLL to lock by monitoring the FMPLL_SYNSR[LOCK] bit. Refer to [Section 11.3.1.1, “Synthesizer Control Register \(FMPLL_SYNCR\),”](#) for memory synchronization between changing FMPLL_SYNCR[MFD] and monitoring the lock status.
3. If using the frequency modulation feature, then:
 - a) Enable FM by setting FMPLL_SYNCR[DEPTH] =1 or 2.
 - b) Also set FMPLL_SYNCR[RATE] if not done previously in step 2.
4. Calibration starts. After calibration is done, then the FMPLL will re-lock. Wait for the FMPLL to re-lock by monitoring the FMPLL_SYNSR[LOCK] bit.
5. Verify FM calibration completed and was successful by testing the FMPLL_SYNSR[CALDONE] and FMPLL_SYNSR[CALPASS] bitfields.
6. If FM calibration did not complete or was not successful, attempt again by going back to step 1.
7. Initialize the FMPLL for the desired final frequency by changing FMPLL_SYNCR[RFD] to its desired final value. Note that the FMPLL will not need to re-lock when only changing the RFD.
8. Re-enable LOLIRQ.

NOTE

This first register write will cause the FMPLL to switch to an initial frequency which is less than the final one. Keeping the change of frequency to a lower initial value helps minimize the current surge to the external power supply caused by change of frequency. The last step will be to only change the RFD to get to the desired final frequency.

NOTE

Changing the MFD or PREDIV values causes the FMPLL to perform a search for the lock frequency that results in the system clock frequency changing rapidly across the complete frequency range. All MCU peripherals, including the external bus will be subjected to this frequency sweep. Operation of timers and serial communications during this search sequence will produce unpredictable results.

Note that the frequency modulation system is dependent upon several factors: the accuracies of the V_{DDSYN}/V_{SSSYN} voltage, of the crystal oscillator frequency, and of the manufacturing variation.

For example, if a 5% accurate supply voltage is utilized, then a 5% modulation depth error will result. If the crystal oscillator frequency is skewed from 8 MHz, the resulting modulation frequency will be

proportionally skewed. Finally, the error due to the manufacturing and environment variation alone can cause the frequency modulation depth error to be greater than 20%.

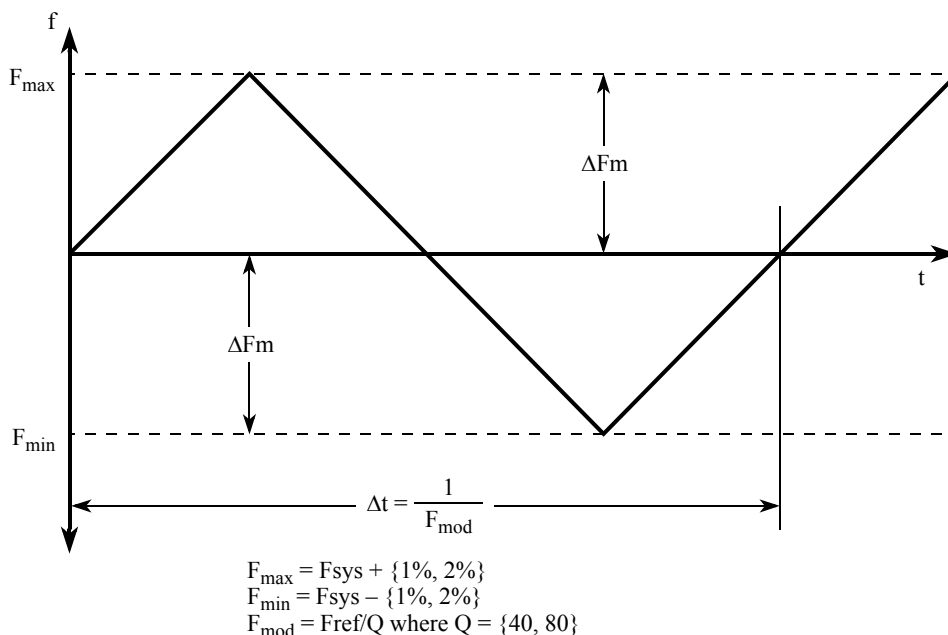


Figure 11-10. Frequency Modulation Waveform

11.4.3.3 FM Calibration Routine

Upon enabling frequency modulation, a new calibration routine is performed. This routine tunes a reference current into the modulation D/A so that the modulation depth (F_{\max} and F_{\min}) remains within specification.

Entering the FM calibration mode requires the user to program SYNCR[EXP]. The EXP is the expected value of the difference between the reference and feedback counters used in the calibration of the FM equation:

$$EXP = \frac{((MFD + 4) \cdot M \cdot P)}{100}$$

For example, if 80 MHz is the desired final frequency and an 8 MHz crystal is used, the final values of MFD=6 and RFD=0 will produce the desired 80 MHz. For a desired frequency modulation with a 1% depth, then EXP is calculated using $P = 1$, $MFD = 6$ and $M = 480$. Refer to [Table 11-11](#) for a complete list of values to be used for the variable (M) based on MFD setting. To obtain a percent modulation (P) of 1%, the EXP field would have to be set at: $EXP = ((6 + 4) \cdot 640 \cdot 1)/100 = 48$

Rounding this value to the closest integer yields the value of 48 that should be entered into the EXP field for this example.

Table 11-11. Multiplied Factor Dividers with M Values

MFD	M
0-2	960
3-5	640
6-8	480
9-14	320
15-20	240
21-31	160

This routine will correct for process variations, but because temperature can change after the calibration has been performed, variation due to temperature drift is not eliminated. This frequency modulation calibration system is also voltage dependent, so if supply changes after the sequence takes place, error incurred will not be corrected. The calibration system reuses the two counters in the lock detect circuit, the reference and feedback counters. The reference counter is still clocked by the reference clock, but the feedback counter is clocked by the ICO clock.

When the calibration routine is initiated by writing to the DEPTH bits, the CALPASS status bit is immediately set and the CALDONE status bit is immediately cleared.

When calibration is induced, the ICO is given time to settle. Then both the feedback and reference counters start counting. Full ICO clock cycles are counted by the feedback counter during this time to give the initial center frequency count. When the reference counter has counted to the programmed number of reference count cycles, the input to the feedback counter is disabled and the result is placed in the COUNT0 register. The calibration system then enables modulation at programmed ΔF_m . The ICO is given time to settle. Both counters are reset and restarted. The feedback counter begins to count full ICO clock cycles again to obtain the delta-frequency count. When the reference counter has counted to the new programmed number of reference count cycles, the feedback counter is stopped again.

The delta-frequency count minus the center frequency count (COUNT0) results in a delta count proportional to the reference current into the modulation D/A. That delta count is subtracted from the expected value given in the EXP field of the FMPLL_SYNCR resulting in an error count. The sign of this error count determines the direction taken by the calibration D/A to update the calibration current. After obtaining the error count for the present iteration, both counters are cleared. The stored count of COUNT0 is preserved while a new feedback count is obtained, and the process to determine the error count is repeated. The calibration system repeats this process eight times, once for each bit of the calibration D/A.

After the last decision is made, the CALDONE bit of the SYNSR is written to a 1. If an error occurs during the calibration routine, then CALPASS is immediately written to a 0. If the routine completed successfully then CALPASS remains a 1.

Figure 11-11 shows a block diagram of the calibration circuitry and its associated registers. Figure 11-12 shows a flow chart showing the steps taken by the calibration circuit.

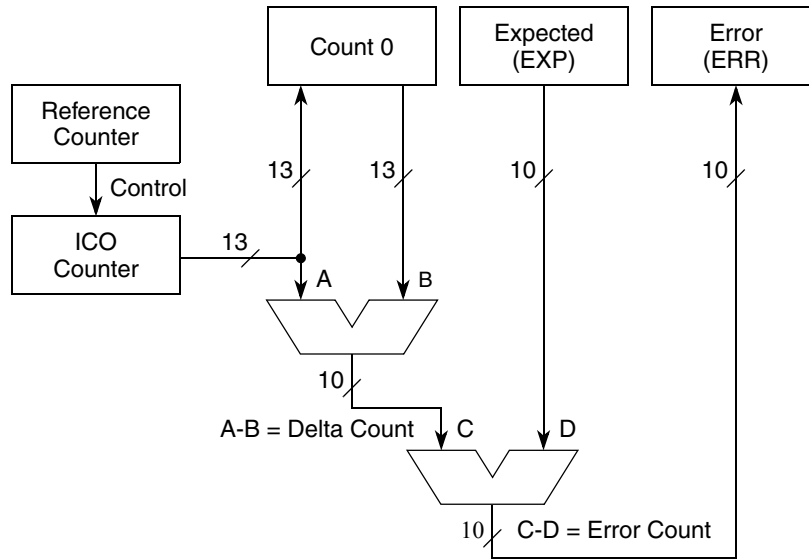


Figure 11-11. FM Auto-Calibration Data Flow

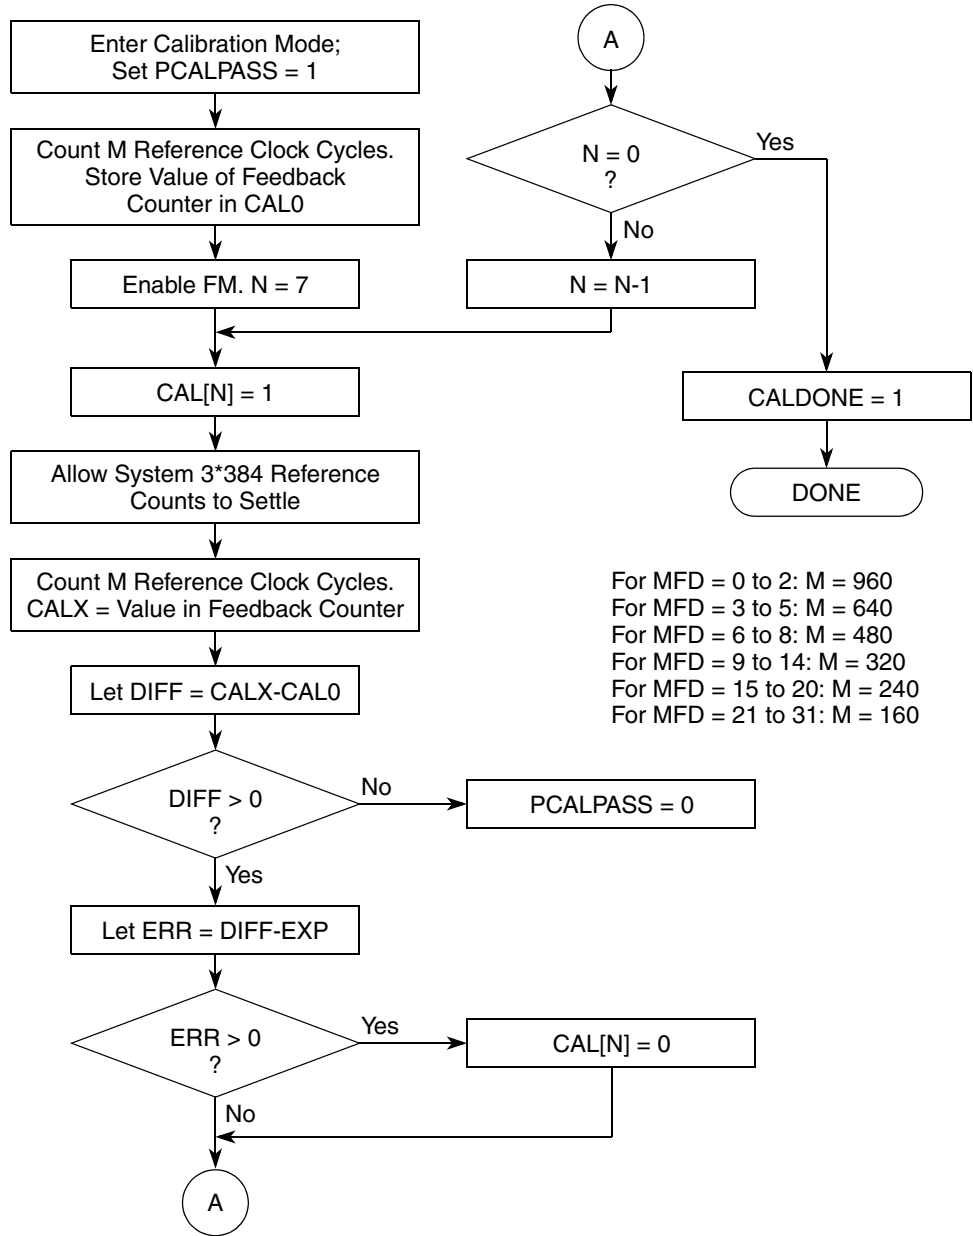


Figure 11-12. FM Auto-Calibration Flow Chart

11.5 Document Revision History

Table 11-12. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 12

External Bus Interface (EBI)

12.1 Introduction

This chapter describes the external bus interface (EBI), which handles the transfer of information between the internal buses and the memories or peripherals in the external address space and enables an external master to access internal address space. For an overview of how the EBI used in the MPC5xxx differs from the EBI used in MPC5xx devices, refer to [Section 12.5.6, “Summary of Differences from MPC5xx.”](#)

12.1.1 Block Diagram

Figure 12-1 is a block diagram of the EBI. The signals shown are external pins to the MCU.

NOTE

Refer to the Signals chapter, as not all signals are implemented in all device packages.

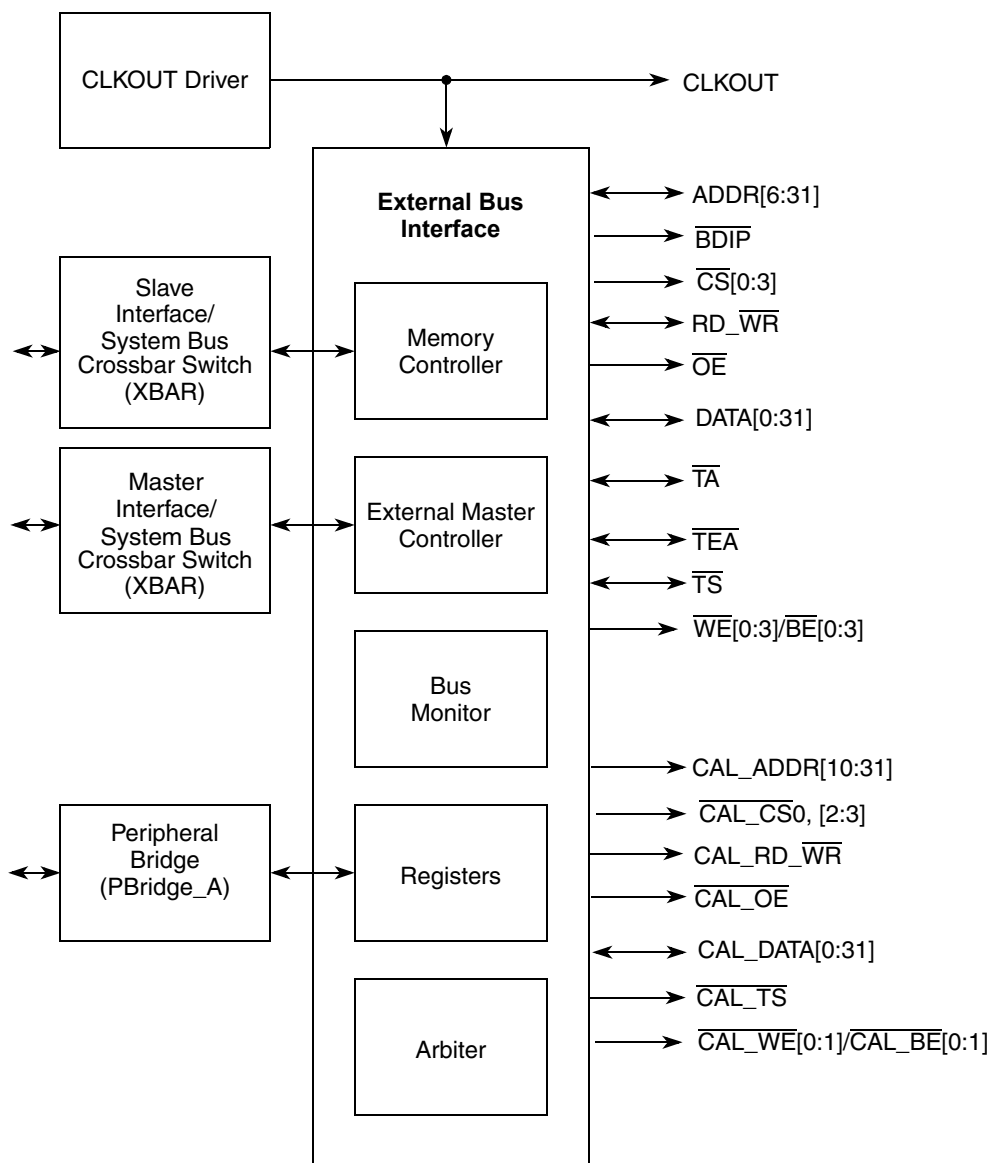


Figure 12-1. EBI Block Diagram

12.1.2 Overview

The EBI includes a memory controller that generates interface signals to support a variety of external memories. This includes single data rate (SDR) burst mode flash, external SRAM, and asynchronous memories. It supports up to four regions (via chip selects), each with its own programmed attributes.

12.1.3 Features

Features include the following:

- 1.8-3.3 V I/O
- Address bus is 32-bit with transfer size indication, but
 - in 416 and 496 BGA packages:
 - 24 bits default (ADDR[8:31])
 - 26 bits available if configured in Pad Configuration Register ADDR[6:7]
 - in 324 BGA package:
 - 20 bits is default (ADDR[12:31])
 - 24 bits available if $\overline{CS}[0:3]$ are configured to be ADDR[8:11]
See [Section 6.3.1.14, “Pad Configuration Registers 1-3 \(SIU_PCR1-3\).”](#)
 - 26 bits available if configured in Pad Configuration Register ADDR[6:7]
- Data bus available for both external memory accesses and transactions involving an external master:
 - 32-bit available in 416 and 496 pin package
(a 16-bit mode is available. See [Section 12.1.4.5, “16-Bit Data Bus Mode.”](#))
 - 16 bits available in 324 BGA packaged devices
- Support for external master accesses to internal addresses
- Memory controller with support for various memory types:
 - Synchronous burst SDR flash and SRAM
 - Asynchronous/legacy flash and SRAM
- Burst support (wrapped only)
- Bus monitor
- Port size configuration per chip select (16 or 32 bits)
- Configurable wait states
- Four chip select ($\overline{CS}[0:3]$) signals
- Support for dynamic calibration with up to three calibration chip selects ($\overline{CAL_CS}[0]$ and $\overline{CAL_CS}[2:3]$)
- Write/byte enable ($\overline{WE}[0:3]/\overline{BE}[0:3]$) signals:
 - Up to four $\overline{WE}/\overline{BE}$ signals depending on the package:
 - 416 and 496 BGA: four signals ($\overline{WE}[0:3]/\overline{BE}[0:3]$)
 - 324 BGA: two signals ($\overline{WE}[0:1]/\overline{BE}[0:1]$)
- Configurable bus speed modes (1/2 or 1/4 of system clock frequency)

- Module disable modes for power savings
- Optional automatic CLKOUT gating to save power and reduce EMI
- Compatible with MPC5xx external bus
See [Section 12.4.1.18, “Compatible with MPC5xx External Bus \(with Some Limitations\).”](#)

12.1.4 Modes of Operation

The mode of the EBI is determined by the MDIS and EXTM bits in the EBI_MCR. See [Section 12.3.1.3, “EBI Module Configuration Register \(EBI_MCR\)”](#) for details. Configurable bus speed modes and debug mode are modes that the MCU can enter, in parallel to the EBI being configured in one of its module-specific modes.

12.1.4.1 Single Master Mode

In single master mode, the EBI responds to internal requests matching one of its regions, but ignores all externally-initiated bus requests. The MCU is the only master allowed to initiate transactions on the external bus in this mode; therefore, it acts as a parked master and does not have to arbitrate for the bus before starting each cycle. The \overline{BR} , \overline{BG} , and \overline{BB} signals are not used by the EBI in this mode, and are available for use in an alternate function by another module of the MCU. Single master mode is entered when $EXTM = 0$ and $MDIS = 0$ in the EBI_MCR.

NOTE

The MPC5567 does not have arbitration pins \overline{BR} , \overline{BG} , and \overline{BB} .

12.1.4.2 External Master Mode

When the MCU is in external master mode, the EBI responds to internal requests matching one of its regions, and also to external master accesses to internal address space. In this mode, the \overline{BR} , \overline{BG} , and \overline{BB} signals are all used by the EBI to handle arbitration between the MCU and an external master. External master mode is entered when $EXTM = 1$ and $MDIS = 0$ in the EBI_MCR register.

However, because the MPC5567 does not have arbitration pins (\overline{BB} , \overline{BR} , \overline{BG}), dual-master operation (multiple masters initiating external bus cycles) is not supported. However, a multi-MCU system with one master and one slave is supported. In such a dual-controller system, if the EBI is configured to internal arbitration ($EARB=0$ in EBI_MCR), it must be used as the system master. If configured to external arbitration ($EARB=1$ in EBI_MCR), it must be the system slave.

NOTE

The internal bus grant input of the EBI is tied to a negated state. In a dual controller system in which the EBI is programmed to External Master Mode with external arbitration, if the CPU tries to access a memory region within the EBI space, it will never get a bus grant, and the operation will time out.

Because the MPC5567 does not have transfer size pins (TSIZ[0:1]), the SIZEN and SIZE fields of the EBI_MCR must be used for MCU-to-MCU transfers to indicate transfer size.

See [Section 12.5.5, “Dual-MCU Operation with Reduced Pinout MCUs \(MPC5567\).”](#)

External master mode operation is described in [Section 12.4.2.10](#), “Bus Operation in External Master Mode.”

12.1.4.3 Module Disable Mode

The module disable mode is used for MCU power management. The clock to the non-memory mapped logic in the EBI is stopped while in module disable mode. Requests (other than to memory-mapped logic) must not be made to the EBI while it is in module disable mode, even if the clocks have not yet been shut off. In this case, the behavior is undefined. Module disable mode is entered when $MDIS = 1$ in the `EBI_MCR`.

12.1.4.4 Configurable Bus Speed Modes

In configurable bus speed modes, the external CLKOUT frequency is divided down from the internal system clock. The EBI behavior remains dictated by the mode of the EBI, except that the EBI drives and samples signals at the scaled CLKOUT rather than the internal system clock. This mode is selected by writing the external clock control register in the system integration module (`SIU_ECCR`). The configurable bus speed modes supports both 1/2 or 1/4 speed modes, meaning that the external CLKOUT frequency is scaled down (by 2 or 4) compared with that of the internal system clock, which is unchanged.

NOTE

In a multi-master system (where the PLL is in dual-controller mode) only 1/2 speed mode is supported.

12.1.4.5 16-Bit Data Bus Mode

The EBI has an internal 32-bit data bus, but, for MCUs that have only 16 data bus signals pinned out, or for systems where the use of a different multiplexed function (e.g. GPIO) is desired on 16 of the 32 data pins, the EBI supports a 16-bit data bus mode. In this mode, `DATA[0:15]` are the only data signals used by the EBI.

For EBI-mastered accesses, the operation in 16-bit data bus mode ($EBI_MCR[DBM] = 1$, $EBI_BRn[PS] = x$) is similar to a chip select access to a 16-bit port in 32-bit data bus mode ($EBI_MCR[DBM] = 0$, $EBI_BRn[PS] = 1$), except for the case of an EBI-mastered non-chip select access of exactly 32-bit size.

External master accesses and EBI-mastered non-chip select accesses of exactly 32-bit size are supported via a two (16-bit) beat burst for both reads and writes. See [Section 12.4.2.11](#), “Non-Chip-Select Burst in 16-bit Data Bus Mode.” Non-chip select transfers of non-32-bit size are supported in standard non-burst fashion.

16-bit data bus mode is entered when $EBI_MCR[DBM] = 1$. Note that $DBM = 0$ out of reset.

12.1.4.6 Debug Mode

When the MCU is in debug mode, the EBI mode is unaffected and retains control of the EBI.

12.2 External Signal Description

Table 12-1 alphabetically lists the external signals used by the EBI. Refer to Chapter 4, “Signal Description,” as not all signals are implemented in all device packages.

Table 12-1. Signal Properties

Signal Name ¹	I/O Type	Function	Pull ²	BGA Packages		
				496	416	—
ADDR[6:7] ³	I/O	Address Bus	Up	496	416	—
ADDR[8:11]	I/O	Address Bus	Up	496	416	—
ADDR[12:31]	I/O	Address Bus	Up	496	416	324
$\overline{\text{BDIP}}$	Output	Burst Data in Progress	Up	496	416	324
$\overline{\text{CAL_CS}}[0, 2:3]$	Output	Calibration Chip Selects	Up	496	—	—
CAL_ADDR[10:11] ⁴	Output	Calibration Address Bus (Output)	Up	496	—	—
CAL_ADDR[12:30]	Output	Calibration Address Bus (Output)	Up	496	—	—
CAL_DATA[0:15]	I/O	Calibration Data Bus	Up	496	—	—
$\overline{\text{CAL_RD_WR}}$	I/O	Calibration Read_Write	Up	496	—	—
$\overline{\text{CAL_OE}}$	Output	Calibration Output Enable	Up	496	—	—
$\overline{\text{CAL_TS}}$	Output	Calibration Transfer Start	Up	496	—	—
CAL $\overline{\text{WE}}$ [0:1]/ CAL $\overline{\text{BE}}$ [0:1]	I/O	Calibration Write/Byte Enables	Up	496	—	—
CLKOUT ⁵	Output	Clockout	Enabled	496	416	324
$\overline{\text{CS}}[0:3]$	Output	Chip Selects	Up	496	416	324
DATA[0:15]	I/O	Data Bus	Up	496	416	324
DATA[16:31]	I/O	Data Bus	Up	496	416	—
$\overline{\text{OE}}$	Output	Output Enable	Up	496	416	324
$\overline{\text{RD_WR}}$	I/O	Read_Write	Up	496	416	324
$\overline{\text{TA}}$	I/O	Transfer Acknowledge	Up	496	416	324
$\overline{\text{TEA}}$	I/O	Transfer Error Acknowledge	Up	496	416	—
$\overline{\text{TS}}$	I/O	Transfer Start	Up	496	416	324
$\overline{\text{WE}}$ [0:1]/ $\overline{\text{BE}}$ [0:1]	Output	Write/Byte Enables	Up	496	416	324
$\overline{\text{WE}}$ [2:3]/ $\overline{\text{BE}}$ [2:3]	Output	Write/Byte Enables	Up	496	416	—

¹ Note that TSIZ, $\overline{\text{BB}}$, $\overline{\text{BG}}$, $\overline{\text{BR}}$ are not available in the MPC5567.

² This column shows which signals require a weak pull-up or pull-down. The EBI module does not contain these pull-up/pull-down devices within the module, but instead are controlled by the pad configuration registers in the System Integration Module (SIU_PCRs).

³ ADDR[6:7] are separate signals from EBI block, but are muxed onto ADDR[30:31] pins on MCU.

⁴ CAL_ADDR[10:11] are separate signals from EBI block, but are muxed onto CAL_ $\overline{\text{CS}}$ [2:3] pins on MCU.

⁵ The CLKOUT signal is driven by the FMPLL Module.

12.2.1 Detailed Signal Descriptions

Refer to [Chapter 4, “Signal Description,”](#) as not all signals are implemented in all device packages.

During a calibration bus access, the non-calibration bus signals (other than DATA) are held in a negated state, with the exception of $\overline{RD_WR}$ and ADDR, which reflect the same values shown on the calibration version of those signals. This is harmless because \overline{TS} and \overline{CS} are held negated on the non-calibration bus during calibration accesses, so no transfer takes place on the non-calibration bus. DATA is not driven by the EBI during calibration accesses.

During a non-calibration bus access, the calibration bus signals (other than CAL_DATA) are held in a negated state. CAL_DATA is not driven during non-calibration accesses.

12.2.1.1 Address Lines 6 through 31 (ADDR[6:31])

The ADDR[6:31] signals specify the physical address of the bus transaction. The 26 address lines correspond to bits 6 through 31 of the EBI’s 32-bit internal address bus. Bits 0 through 5 are internally driven by the EBI for externally initiated accesses depending on which internal slave is to be accessed. See [Section 12.4.2.10.1, “Address Decoding for External Master Accesses,”](#) for more details. ADDR[6:31] is driven by the EBI or an external master depending on who owns the external bus.

During a calibration bus access, ADDR_n reflects the same value as the CAL_ADDR_n signal.

Note that the 324 BGA packaged devices use only ADDR[12:31] (24 bits available if $\overline{CS}[0:3]$ are configured to ADDR[8:11]. See Pad Configuration Register).

Table 12-2. Bit Configurations of External Bus Sizes in Device Packages

Package	Size of Address Bus		
	20-bit	24-bit	26-bit
496 BGA	N.A.	ADDR[8:31] Default	Use ADDR[6:7]
416 BGA	N.A.	ADDR[8:31] Default	Use ADDR[6:7]
324 BGA	ADDR[12:31] Default	$\overline{CS}[0:3]$ configured to ADDR[8:11]	Use ADDR[6:7]

12.2.1.2 Data Lines 0 through 31 (DATA[0:31])

In the 416 and 496 BGA package, the DATA[0:31] signals contain the data to be transferred for the current transaction. In the 324 BGA package, DATA[0:15] carry the data to be transferred for the current transaction.

DATA[0:31] is driven by the EBI when it owns the external bus and it initiates a write transaction to an external device. The EBI also drives DATA[0:31] when an external master owns the external bus and initiates a read transaction to an internal module.

DATA[0:31] is driven by an external device during a read transaction from the EBI. An external master drives DATA[0:31] when it owns the bus and initiates a write transaction to an internal module or shared external memory.

For 8-bit and 16-bit transactions, the byte lanes not selected for the transfer do not supply valid data.

During a calibration bus access, the DATA bus is not driven by the EBI.

12.2.1.3 Burst Data in Progress ($\overline{\text{BDIP}}$)

$\overline{\text{BDIP}}$ is asserted to indicate that the master is requesting another data beat following the current one.

$\overline{\text{BDIP}}$ is driven by the EBI or an external master depending on who owns the external bus. This signal is driven by the EBI on all EBI-mastered external burst cycles, but is only sampled by burst mode memories that have a corresponding pin. See [Section 12.4.2.5, “Burst Transfer.”](#)

12.2.1.4 Clockout (CLKOUT)

CLKOUT is a general-purpose clock output signal to connect to the clock input of SDR external memories and in some cases to the input clock of another MCU in multi-master configurations.

12.2.1.5 Chip Selects 0 through 3 ($\overline{\text{CS}}[0:3]$)

$\overline{\text{CS}}_n$ is asserted by the master to indicate that this transaction is targeted for a particular memory bank.

The chip selects are driven by the EBI or an external master depending on who owns the external bus. $\overline{\text{CS}}$ is driven in the same clock as the assertion of $\overline{\text{TS}}$ and valid address, and is kept valid until the cycle is terminated. See [Section 12.4.1.5, “Memory Controller with Support for Various Memory Types”](#) for details on chip select operation.

During a calibration bus access, $\overline{\text{CS}}$ is held negated.

$\overline{\text{CS}}[0]$ is implemented in the 496, 416, 324 packages. $\overline{\text{CS}}[1:3]$ are available in the 496, 416, and 324 packages.

12.2.1.6 Output Enable ($\overline{\text{OE}}$)

$\overline{\text{OE}}$ is used to indicate when an external memory is permitted to drive back read data. External memories must have their data output buffers off when $\overline{\text{OE}}$ is negated. $\overline{\text{OE}}$ is only asserted for chip select accesses.

$\overline{\text{OE}}$ is driven by the EBI or an external master depending on who owns the external bus. For read cycles, $\overline{\text{OE}}$ is asserted one clock after $\overline{\text{TS}}$ assertion and held until the termination of the transfer. For write cycles, $\overline{\text{OE}}$ is negated throughout the cycle.

During a calibration bus access, $\overline{\text{OE}}$ is held negated.

12.2.1.7 Read / Write ($\text{RD_}\overline{\text{WR}}$)

$\text{RD_}\overline{\text{WR}}$ indicates whether the current transaction is a read access or a write access.

$\overline{RD_WR}$ is driven by the EBI or an external master depending on who owns the external bus. $\overline{RD_WR}$ is driven in the same clock as the assertion of \overline{TS} and valid address, and is kept valid until the cycle is terminated.

During a calibration bus access, $\overline{RD_WR}$ reflects the same value as the CAL_RD / CAL_WR signal.

12.2.1.8 Transfer Acknowledge (\overline{TA})

\overline{TA} is asserted to indicate that the slave device has received the data (and completed the access) for a write cycle, or returned data for a read cycle. If the transaction is a burst read, \overline{TA} is asserted for each one of the transaction beats. For write transactions, \overline{TA} is only asserted once at access completion, even if more than one write data beat is transferred.

\overline{TA} is driven by the EBI when the access is controlled by the chip selects or when an external master initiates the transaction to an internal module. Otherwise, \overline{TA} is driven by the slave device to which the current transaction was addressed.

During a calibration bus access, \overline{TA} is held negated.

See [Section 12.4.2.9, “Termination Signals Protocol”](#) for more details.

12.2.1.9 Transfer Error Acknowledge (\overline{TEA})

In the 416 and 496 BGA package, \overline{TEA} is asserted by either the EBI or an external device to indicate that an error condition has occurred during the bus cycle. \overline{TEA} assertion terminates the cycle immediately, overriding the value of the \overline{TA} signal.

\overline{TEA} is asserted by the EBI when the internal bus monitor detected a timeout error, or when an external master initiated a transaction to an internal module and an internal error was detected.

The 324 BGA package has no \overline{TEA} signal.

During a calibration bus access, \overline{TEA} is held negated.

See [Section 12.4.2.9, “Termination Signals Protocol”](#) for more details.

12.2.1.10 Transfer Start (\overline{TS})

\overline{TS} is asserted by the current bus owner to indicate the start of a transaction on the external bus.

\overline{TS} is driven by the EBI or an external master depending on who owns the external bus. \overline{TS} is only asserted for the first clock cycle of the transaction, and is negated in the successive clock cycles until the end of the transaction.

During a calibration bus access, \overline{TS} is held negated.

12.2.1.11 Write/Byte Enables ($\overline{WE} / \overline{BE}$)

Write enables are used to enable program operations to a particular memory. These signals can also be used as byte enables for read and write operation by setting the WEBS bit in the appropriate base register.

$\overline{WE} / \overline{BE}$ are only asserted for chip select accesses.

\overline{WE} / \overline{BE} are driven by the EBI or an external master depending on who owns the external bus. See [Section 12.4.1.14, “Two Write/Byte Enable \(WE/BE\) Signals — 324 BGA devices”](#) and [Section 12.4.1.13, “Four Write/Byte Enable \(WE/BE\) Signals — 416 and 496 BGA devices”](#) for more details on \overline{WE} / \overline{BE} functionality.

During a calibration bus access, \overline{WE} / \overline{BE} is held negated.

The 496 and 416 BGA packages use $\overline{WE}[0:3]$ / $\overline{BE}[0:3]$. The 324 BGA packages use only $\overline{WE}[0:1]$ / $\overline{BE}[0:1]$.

12.2.1.12 Bus Busy (\overline{BB}), Bus Grant (\overline{BG}) and Bus Request (\overline{BR})

The MPC5567 does not implement the \overline{BB} , \overline{BG} , or \overline{BR} signals.

12.2.1.13 Transfer Size 0 through 1 (TSIZ[0:1])

TSIZ is not available in the MPC5567.

In the MPC5567, the SIZEN bit must be set to 1.

12.2.1.14 Calibration Chip Selects ($\overline{CAL_CS}[0]$ and $\overline{CAL_CS}[2:3]$)

$\overline{CAL_CS}[n]$ is asserted by the master to indicate that this transaction is targeted for a particular memory bank on the calibration external bus.

The calibration chip selects are driven only by the EBI. External master accesses on the calibration bus are not supported. In all other aspects, the calibration chip selects behave exactly as the primary chip selects. See [Section 12.4.1.5, “Memory Controller with Support for Various Memory Types”](#) for details on chip select operation.

12.2.1.15 Calibration Signals

The function of the calibration signals is explained in [Chapter 4, “Signal Description.”](#)

12.2.2 Signal Function and Direction by Mode

The EBI operating mode is configured using two fields in the EBI Master Control register (EBI_MCR): EXT_M and MDIS. Their settings determine which EBI signals are valid and the I/O direction. When the a signal is configured for non-EBI function in the EBI_MCR, the EBI always negates the signal if the EBI controls the corresponding pad (determined by SIU configuration). [Table 12-3](#) lists the function and direction of the external signals in each of the EBI modes of operation. The clock signals are not included because they are output only (from the FMPLL module) and are not affected by EBI modes. See [Section 12.3.1.3, “EBI Module Configuration Register \(EBI_MCR\)”](#) for details on the EXT_M and MDIS bits.

Table 12-3. Signal Function (f) According to EBI Mode Settings

Signal Name	Modes		
	Module Disable f EXTM = n , MDIS = 1	Single Master f I/O Direction EXTM = 0, MDIS = 0	External Master f I/O Direction EXTM = 1, MDIS = 0
ADDR[6:11]	non-EBI function	Address bus (Output)	Address bus (I/O)
ADDR[12:30]	non-EBI function	Address bus (Output)	Address bus (I/O)
$\overline{\text{BDIP}}$	non-EBI function	Burst Data in Progress (Output) ¹	
$\overline{\text{CS}}[0:3]$	non-EBI function	Chip Selects (Output) ¹	
DATA[0:15]	non-EBI function	Data bus (I/O)	
DATA[16:31]	non-EBI function	Data bus (I/O)	
$\overline{\text{OE}}$	non-EBI function	Output Enable (Output)	
RD_ $\overline{\text{WR}}$	non-EBI function	Read_Write (Output)	Read_Write (I/O)
$\overline{\text{TA}}$	non-EBI function	Transfer Acknowledge (I/O)	
$\overline{\text{TEA}}$	non-EBI function	Transfer Error Acknowledge (I/O)	
$\overline{\text{TS}}$	non-EBI function	Transfer Start (Output)	Transfer Start (I/O)
$\overline{\text{WE}}[0:1]/\overline{\text{BE}}[0:1]$	non-EBI function	Write/Byte Enables (Output) ¹	
$\overline{\text{WE}}[2:3]/\overline{\text{BE}}[2:3]$	non-EBI function	Write/Byte Enables (Output) ¹	
$\overline{\text{CAL_CS}}[0]$ $\overline{\text{CAL_CS}}[2:3]$	non-EBI function	Chip Selects (Output)	
CAL_ADDR[12:31]	non-EBI function	Calibrate the Address Bus (Output)	
CAL_DATA[0:15]	non-EBI function	Calibrate the Data bus (I/O)	
$\overline{\text{CAL_OE}}$	non-EBI function	Calibrate the Bus to Enable Output	
$\overline{\text{CAL_TS}}$	non-EBI function	Calibrate the Transfer Start (Output)	
CAL_ $\overline{\text{WE}}[0:1]$ / CAL_ $\overline{\text{BE}}[0:1]$	non-EBI function	Write/Byte Enables (Output) ¹	

¹ Although external master accesses can drive these pins, the EBI tri-states the pins and does not sample them for input.

12.2.3 Signal Pad Configuration by Mode

Depending on the mode of operation, many external signals must have their pads configured to operate as push/pull signals for correct system operation. This configuration is done in the SIU module.

The open drain mode of the pads configuration module is not used for any EBI signals. For a description of how signals are driven by multiple devices in external master mode, see [Section 12.4.2.10, “Bus Operation in External Master Mode.”](#)

Table 12-4 shows how each EBI signal must have its pad configured prior to operating in each of the EBI modes. See Section 12.3.1.3, “EBI Module Configuration Register (EBI_MCR)” for details on the EXTM and MDIS bits.

Table 12-4. Required EBI Pad Configuration by Mode

Signal Name	Module Disable Mode (EXTM = X, MDIS = 1)	Single Master Mode (EXTM = 0, MDIS = 0)	External Master Mode (EXTM = 1, MDIS = 0)
ADDR[6:11]	X ¹	Push/Pull	Push/Pull Three-stateable
ADDR[12:31]	X	Push/Pull	Push/Pull Three-stateable
$\overline{\text{BDIP}}$	X	Push/Pull	Push/Pull Three-stateable
$\overline{\text{CS}}[0:3]$	X	Push/Pull	Push/Pull, Three-stateable
$\overline{\text{CAL_CS}}[0, 2:3]$	X	Push/Pull	
CAL_ADDR[10:11] ²	X	Push/Pull	
CAL_ADDR[12:30]	X	Push/Pull	
CAL_DATA[0:15]	X	Push/Pull, Three-stateable	
CAL_RD_ $\overline{\text{WR}}$	X	Push/Pull	
$\overline{\text{CAL_OE}}$	X	Push/Pull	
$\overline{\text{CAL_TS}}$	X	Push/Pull	
CAL_ $\overline{\text{WE}}$ [0:1]/ CAL_ $\overline{\text{BE}}$ [0:1]	X	Push/Pull	
DATA[0:15]	X	Push/Pull, Three-stateable	
DATA[16:31]	X	Push/Pull, Three-stateable	
$\overline{\text{OE}}$	X	Push/Pull	Push/Pull, Three-stateable
RD_ $\overline{\text{WR}}$	X	Push/Pull	Push/Pull, Three-stateable
$\overline{\text{TA}}$	X	Push/Pull, Three-stateable	
$\overline{\text{TEA}}$	X	Push/Pull, Three-stateable	
$\overline{\text{TS}}$	X	Push/Pull	Push/Pull, Three-stateable
$\overline{\text{WE}}[0:1]/\overline{\text{BE}}[0:1]$	X	Push/Pull	Push/Pull, Three-stateable
$\overline{\text{WE}}[2:3]/\overline{\text{BE}}[2:3]$	X	Push/Pull	Push/Pull, Three-stateable

¹ 'X' indicates the pad configuration is a don't care, because the signal is not used by the EBI in this mode.

² CAL_ADDR[10:11] are separate signals from EBI block, but are muxed onto CAL_CS[2:3] pins on MCU.

12.3 Memory Map and Register Definition

Table 12-5 is a memory map of the EBI registers.

Table 12-5. EBI Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xC3F8_4000)	EBI_MCR	EBI module configuration register	32
Base + 0x0004	—	Reserved	—
Base + 0x0008	EBI_TESR	EBI transfer error status register	32
Base + 0x000C	EBI_BMCR	EBI bus monitor control register	32
Base + 0x0010	EBI_BR0	EBI base register bank 0	32
Base + 0x0014	EBI_OR0	EBI option register bank 0	32
Base + 0x0018	EBI_BR1	EBI base register bank 1	32
Base + 0x001C	EBI_OR1	EBI option register bank 1	32
Base + 0x0020	EBI_BR2	EBI base register bank 2	32
Base + 0x0024	EBI_OR2	EBI option register bank 2	32
Base + 0x0028	EBI_BR3	EBI base register bank 3	32
Base + 0x002C	EBI_OR3	EBI option register bank 3	32
Calibration Registers:			
Base + 0x30 - Base + 0x3C	—	Reserved	—
Base + 0x0040	EBI_CAL_BR0	EBI Calibration Base Register Bank 0	32
Base + 0x0044	EBI_CAL_OR0	EBI Calibration Option Register Bank 0	32
Base + 0x0048	EBI_CAL_BR1	EBI Calibration Base Register Bank 1	32
Base + 0x004C	EBI_CAL_OR1	EBI Calibration Option Register Bank 1	32
Base + 0x0050	EBI_CAL_BR2	EBI Calibration Base Register Bank 2	32
Base + 0x0054	EBI_CAL_OR2	EBI Calibration Option Register Bank 2	32
Base + 0x0058	EBI_CAL_BR3	EBI Calibration Base Register Bank 3	32
Base + 0x005C	EBI_CAL_OR3	EBI Calibration Option Register Bank 3	32

12.3.1 Register Descriptions

12.3.1.1 Writing EBI Registers While a Transaction is in Progress

Other than the exceptions noted below, EBI registers must *not* be written while a transaction to the EBI (from internal or external master) is in progress (or within 2 CLKOUT cycles after a transaction has just completed, to allow internal state machines to go IDLE). In such cases, the behavior is undefined.

Exceptions that can be written while an EBI transaction is in progress are the following:

External Bus Interface (EBI)

- All bits in EBI_TESR
- SIZE, SIZEN fields in EBI_MCR

See [Section 12.5.1, “Booting from External Memory,”](#) for additional information.

12.3.1.2 Separate Input Clock for Registers

The EBI registers are accessed with a clock signal separate from the clock used by the rest of the EBI. In module disable mode, the clock used by the non-register portion of the EBI is disabled to reduce power consumption. The clock signal dedicated to the registers, however, allows access to the registers even while the EBI is in the module disable mode. Flag bits in the EBI transfer error status register (EBI_TESR), however, are set and cleared with the clock used by the non-register portion of the EBI. Consequently, in module disable mode, the EBI_TESR does not have a clock signal and is therefore not writable.

12.3.1.3 EBI Module Configuration Register (EBI_MCR)

The EBI_MCR contains bits that configure various attributes associated with EBI operation.

Base (0xC3F8_4000) Access: Read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	SIZEN	SIZE		0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ACGE	EXTM	EARB	0	0	0	0	0	MDIS	0	0	0	0	0	0	
W																DBM
Reset	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0

Figure 12-2. EBI Module Configuration Register (EBI_MCR)

Table 12-6. EBI_MCR Field Descriptions

Field	Description
0–4	Reserved.
5 SIZEN	<p>SIZE enable. The SIZEN bit enables the control of transfer size by the SIZE field for external master transactions to internal addresses.</p> <p>0 Reserved</p> <p>1 Transfer size controlled by SIZE field</p> <p>Note: You must change this value from its reset value since the device does not have TSIZ pins.</p> <p>See Section 12.2.1.13, “Transfer Size 0 through 1 (TSIZ[0:1])” and Section 12.5.5.3, “Transfer Size with No TSIZ Pins (Master/Master or Master/Slave).”</p>

Table 12-6. EBI_MCR Field Descriptions (continued)

Field	Description
6–7 SIZE	Transfer size. The SIZE field determines the transfer size of external master transactions to internal address space when SIZEN = 1. This field is ignored when SIZEN = 0. SIZE encoding: 00 32-bit 01 Byte 10 16-bit 11 Reserved
8–15	Reserved.
16 ACGE	Automatic CLKOUT gating enable. Enables the EBI feature of turning off CLKOUT (holding it high) during idle periods in-between external bus accesses. 0 Automatic CLKOUT gating is disabled 1 Automatic CLKOUT gating is enabled
17 EXTM	External master mode. The EBI module must be enabled (MDIS = 0) to configure the external master mode. When the EBI module is disabled (MDIS = 1), the value of the EXTM bit is ignored and read as 0. External master mode (EXTM = 1) allows the external master device to access any internal memory area that is mapped, as long as the internal e200z6 core is fully operational. Single master mode (EXTM = 0) only allows internal masters can access internal memory. 0 Single master mode (external master mode disabled) 1 External master mode Note: In the MPC5567, only master/slave systems support the EXTM functionality. Refer to Section 12.5.5, “Dual-MCU Operation with Reduced Pinout MCUs (MPC5567).”
18 EARB	External arbitration. See Section 12.4.2.8, “Arbitration” . When EXTM = 0, the EARB bit is a don't care, and is treated as 0. 0 Internal arbitration 1 External arbitration
19–24	Reserved.
25 MDIS	Module disable mode. Allows the clock to be stopped to the non-memory mapped logic in the EBI, effectively putting the EBI in a software controlled power-saving state. See Section 12.1.4.3, “Module Disable Mode,” for more information. No external bus accesses can be performed when the EBI is in module disable mode (MDIS = 1). 0 Module disable mode inactive 1 Module disable mode active
26–30	Reserved.
31 DBM	Data bus mode. Controls whether the EBI is in 32-bit or 16-bit data bus mode. 0 32-bit data bus mode 1 16-bit data bus mode

12.3.1.4 EBI Transfer Error Status Register (EBI_TESR)

The EBI_TESR contains a bit for each type of transfer error on the external bus. A bit set to logic 1 indicates what type of transfer error occurred since the last time the bits were cleared. Each bit can be cleared by reset or by writing a 1 to it. Writing a 0 has no effect.

This register is not writable in module disable mode due to the use of power saving clock modes.

External Bus Interface (EBI)

Base + 0x0008

Access: Read/write to clear

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	TEAF	BMTF
W															w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 12-3. EBI Transfer Error Status Register (EBI_TESR)

Table 12-7. EBI_TESR Field Descriptions

Field	Description
0–29	Reserved.
30 TEAF	Transfer error acknowledge flag. Set if the cycle was terminated by an externally generated \overline{TEA} signal. 0 No error 1 External \overline{TEA} occurred This bit can be cleared by writing a 1 to it.
31 BMTF	Bus monitor timeout flag. Set if the cycle was terminated by a bus monitor timeout. 0 No error 1 Bus monitor timeout occurred This bit can be cleared by writing a 1 to it.

12.3.1.5 EBI Bus Monitor Control Register (EBI_BMCR)

The EBI_BMCR controls the timeout period of the bus monitor and whether it is enabled or disabled.

Base + 0x000C

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BMT								BME	0	0	0	0	0	0	0
W																
Reset	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0

Figure 12-4. EBI Bus Monitor Control Register (EBI_BMCR)

Table 12-8. EBI_BMCR Field Descriptions

Field	Description
0–15	Reserved.
16–23 BMT[0:7]	Bus monitor timing. Defines the timeout period, in 8 external bus clock resolution, for the Bus Monitor. See Section 12.4.1.7, “Bus Monitor,” for more details on bus monitor operation. $\text{Timeout Period} = \frac{2 + (8 \times \text{BMT})}{\text{External Bus Clock Frequency}}$
24 BME	Bus monitor enable. Controls whether the bus monitor is enabled for internal to external bus cycles. Regardless of the BME value, the bus monitor is always disabled for chip select accesses, since these always use internal $\overline{\text{TA}}$ and thus have no danger of hanging the system. 0 Disable bus monitor 1 Enable bus monitor (for non-chip select accesses only)
25–31	Reserved.

12.3.1.6 EBI Base Registers 0–3 (EBI_BR n) and EBI Calibration Base Registers 0–3 (EBI_CAL_BR n)

The EBI_BR n are used to define the base address and other attributes for the corresponding chip select. The EBI_CAL_BR n are used to define the base address and other attributes for the corresponding calibration chip select.

Base + 0x0010 (EBI_BR0) Access: Read/Write
 Base + 0x0018 (EBI_BR1)
 Base + 0x0020 (EBI_BR2)
 Base + 0x0028 (EBI_BR3)
 Base + 0x0040 (EBI_CAL_BR0)
 Base + 0x0048 (EBI_CAL_BR1)
 Base + 0x0050 (EBI_CAL_BR2)
 Base + 0x0058 (EBI_CAL_BR3)

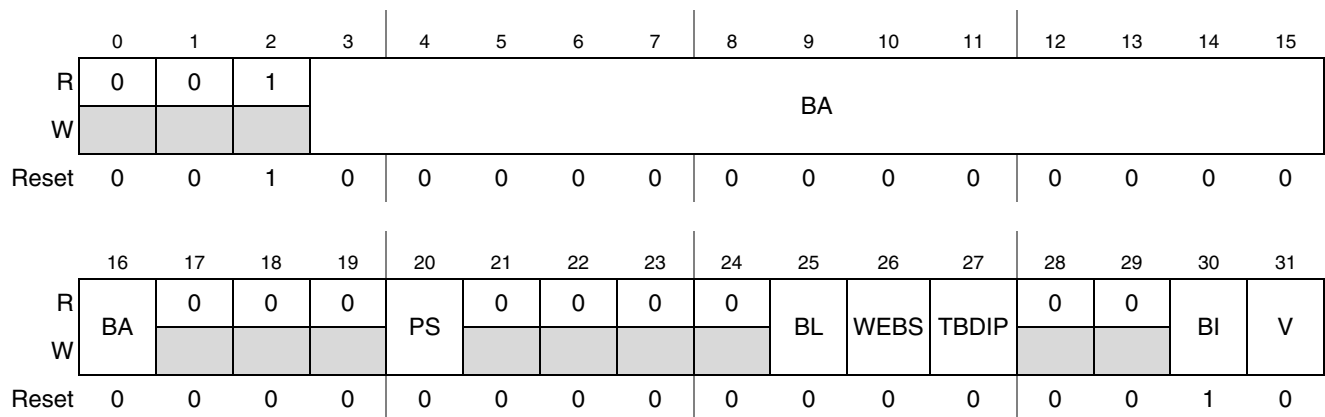

Figure 12-5. EBI Base Registers 0–3 (EBI_BR n) and EBI Calibration Base Registers 0–3 (EBI_CAL_BR n)

Table 12-9. EBI_BRn and EBI_CAL_BRn Field Descriptions

Field	Description
0–16 BA [0:16]	Base address. Compared to the corresponding unmasked address signals among ADDR[0:16] of the internal address bus to determine if a memory bank controlled by the memory controller is being accessed by an internal bus master. Note: The upper 3 bits of the base address (BA) field, EBI_BRn[0:2], and EBI_CAL_BRn[0:2], are tied to a fixed value of 001. These bits reset to their fixed value.
17–19	Reserved.
20 PS	Port size. Determines the data bus width of transactions to this chip select bank. ¹ 0 32-bit port 1 16-bit port Note: The calibration port size must be 16-bits wide.
21–24	Reserved.
25 BL	Burst length. Determines the amount of data transferred in a burst for this chip select, measured in 32-bit words. The number of beats in a burst is automatically determined by the EBI to be 4, 8, or 16 according to the port size so that the burst fetches the number of words chosen by BL. 0 8-word burst length 1 4-word burst length
26 WEBS	Write enable/byte select. Controls the functionality of the $\overline{WE}[0:3]/\overline{BE}[0:3]$ signals. 0 The $\overline{WE}[0:3]/\overline{BE}[0:3]$ signals function as $\overline{WE}[0:3]$. 1 The $\overline{WE}[0:3]/\overline{BE}[0:3]$ signals function as $\overline{BE}[0:3]$. Note: 324-pin packages only implement $\overline{WE}[0:1]/\overline{BE}[0:1]$
27 TBDIP	Toggle burst data in progress. Determines how long the \overline{BDIP} signal is asserted for each data beat in a burst cycle. See Section 12.4.2.5.1, “TBDIP Effect on Burst Transfer,” for details. 0 Assert \overline{BDIP} throughout the burst cycle, regardless of wait state configuration. 1 Only assert \overline{BDIP} (BSCY + 1) external bus cycles before expecting subsequent burst data beats.
28–29	Reserved.
30 BI	Burst inhibit. Determines whether or not burst read accesses are allowed for this chip select bank. 0 Enable burst accesses for this bank. 1 Disable burst accesses for this bank. This is the default value out of reset.
31 V	Valid bit. Indicates that the contents of this base register and option register pair are valid. The appropriate \overline{CS} signal does not assert unless the corresponding V-bit is set. 0 This bank is not valid. 1 This bank is valid.

¹ In the case where EBI_MCR[DBM] is set for 16-bit data bus mode, the PS bit value is ignored and is always treated as a 1 (16-bit port).

12.3.1.7 EBI Option Registers 0–3 (EBI_ORn) and EBI Calibration Option Registers 0-3 (EBI_CAL_ORn)

The EBI_ORn registers are used to define the address mask and other attributes for the corresponding chip select. The EBI_CAL_ORn registers are used to define the address mask and other attributes for the corresponding calibration chip select.

Base + 0x0014 (EBI_OR0) Access: Read/Write
 Base + 0x001C (EBI_OR1)
 Base + 0x0024 (EBI_OR2)
 Base + 0x002C (EBI_OR3)
 Base + 0x0044 (EBI_CAL_OR0)
 Base + 0x004C (EBI_CAL_OR1)
 Base + 0x0054 (EBI_CAL_OR2)
 Base + 0x005C (EBI_CAL_OR3)

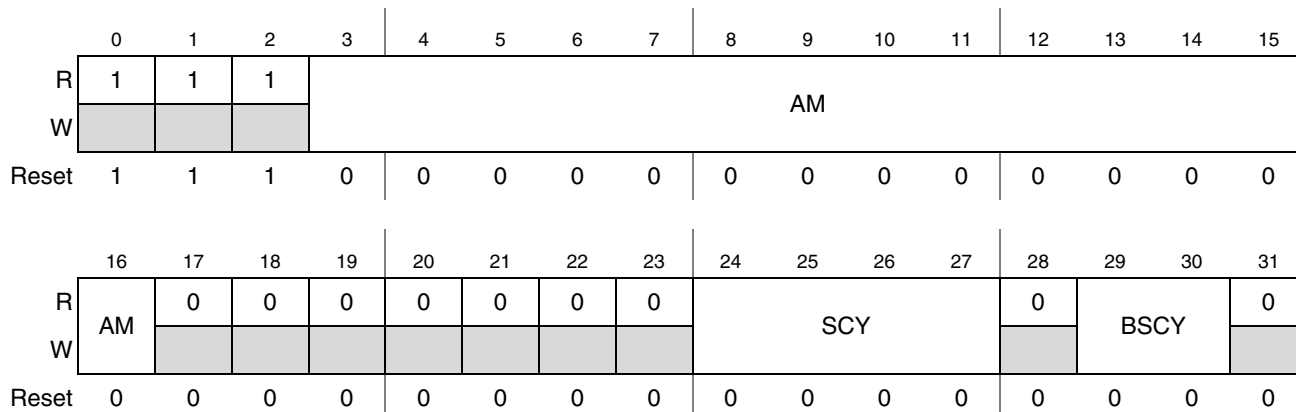


Figure 12-6. EBI Option Registers 0–3 (EBI_ORn) and EBI Calibration Option Registers

Table 12-10. EBI_ORn and EBI_CAL_ORn Field Descriptions

Field	Description
0–16 AM [0:16]	Address mask. Allows masking of any corresponding bits in the associated base register. Masking the address independently allows external devices of different size address ranges to be used. Any clear bit masks the corresponding address bit. Any set bit causes the corresponding address bit to be used in comparison with the address pins. Address mask bits can be set or cleared in any order in the field, allowing a resource to reside in more than one area of the address map. This field can be read or written at any time. Note: The upper 3 bits of the address mask (AM) field, EBI_ORx[0:2], and EBI_CAL_ORn[0:2], are tied to a fixed value of 111. These bits reset to their fixed value.
17–23	Reserved.
24–27 SCY [0:3]	Cycle length in clocks. Represents the number of wait states (external bus cycles) inserted after the address phase in the single cycle case, or in the first beat of a burst, when the memory controller handles the external memory access. Values range from 0 to 15. This is the main parameter for determining the length of the cycle. <ul style="list-style-type: none"> • The total cycle length for the first beat (including the \overline{TS} cycle): (2 + SCY) external clock cycles See Section 12.5.3.1, “Example Wait State Calculation” .

Table 12-10. EBI_ORn and EBI_CAL_ORn Field Descriptions (continued)

Field	Description
28	Reserved.
29–30 BSCY [0:1]	<p>Burst beats length in clocks. This field determines the number of wait states (external bus cycles) inserted in all burst beats except the first, when the memory controller starts handling the external memory access and thus is using SCY[0:3] to determine the length of the first beat.</p> <ul style="list-style-type: none"> Total memory access length for each beat: $(1 + \text{BSCY}) \text{ External Clock Cycles}$ Total cycle length (including the $\overline{\text{TS}}$ cycle): $(2 + \text{SCY}) + [(\text{Number of Beats} - 1) \times (\text{BSCY} + 1)]$ <p>Note: The number of beats (4, 8, 16) is determined by BL and PS bits in the base register.</p> <p>00 0-clock cycle wait states (1 clock per data beat) 01 1-clock cycle wait states (2 clocks per data beat) 10 2-clock cycle wait states (3 clocks per data beat) 11 3-clock cycle wait states (4 clocks per data beat)</p>

12.4 Functional Description

12.4.1 External Bus Interface Features

12.4.1.1 32-Bit Address Bus

In the 416 and 496 BGA packaged devices, only 24 or 26 address lines are pinned out externally, but a full 32-bit decode is done internally to determine the target of the transaction and whether a chip select should be asserted. The 324 BGA packaged devices have 20 address lines pinned out externally (24 bits available if CS[0:3] are configured to be ADDR[8:11], see Pad Configuration Register), but a full 32-bit decode is done internally to determine the target of the transaction and whether a chip select should be asserted.

12.4.1.2 32-Bit Data Bus

The entire 32-bit data bus is available for both external memory accesses and transactions involving an external master in 416 and 496 BGA packaged devices. In the 324 BGA packaged devices, the data bus is 16 bits.

12.4.1.3 16-Bit Data Bus

A 16-bit data bus mode is available via the DBM bit in EBI_MCR. See [Section 12.1.4.5, “16-Bit Data Bus Mode.”](#)

12.4.1.4 Support for External Master Accesses to Internal Addresses

The EBI allows an external master to access internal address space when the EBI is configured for external master mode in the EBI_MCR. External master operations are described in detail in [Section 12.4.2.10, “Bus Operation in External Master Mode.”](#)

12.4.1.5 Memory Controller with Support for Various Memory Types

The EBI contains a memory controller that supports a variety of memory types, including synchronous burst mode flash and external SRAM, and asynchronous/legacy flash and external SRAM with a compatible interface.

Each \overline{CS} bank is configured via its own pair of base and option registers. Each time an internal to external bus cycle access is requested, the internal address is compared with the base address of each valid base register (with 17 bits having mask). See Figure 12-7. If a match is found, the attributes defined for this bank in its BR and OR are used to control the memory access. If a match is found in more than one bank, the lowest bank matched handles the memory access. For example, bank 0 is selected over bank 1.

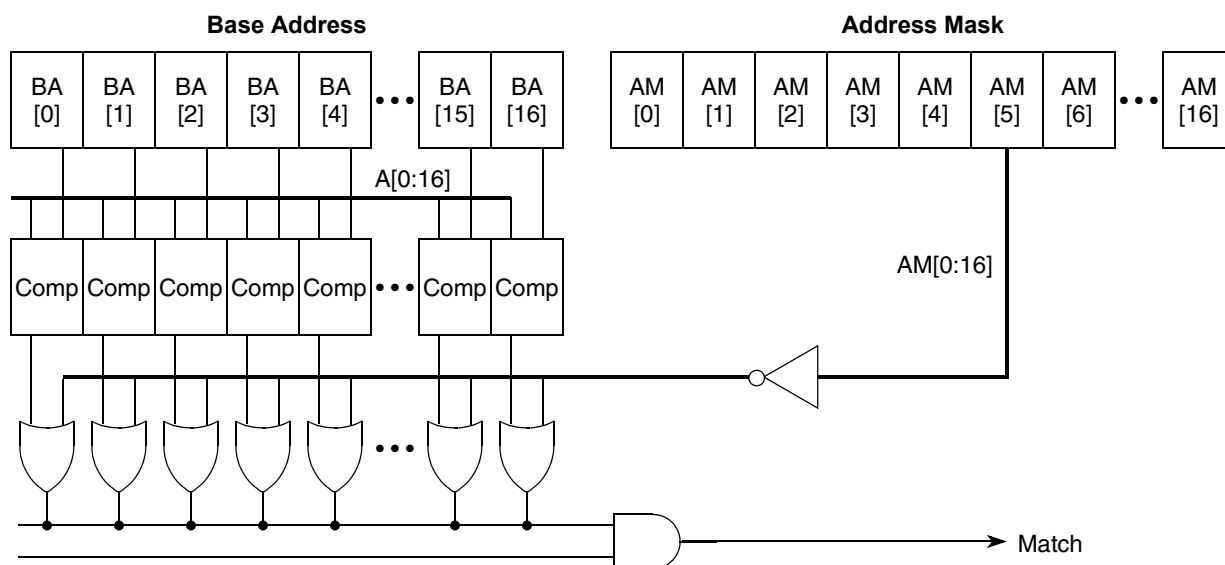


Figure 12-7. Bank Base Address and Match Structure

A match on a valid calibration chip select register overrides a match on any non-calibration chip select register, with $\overline{CAL_CS0}$ having the highest priority. Thus the full priority of the chip selects is: $\overline{CAL_CS0} \dots \overline{CAL_CS3}$ and then $\overline{CS0} \dots \overline{CS3}$.

When a match is found on one of the chip select banks, all its attributes (from the appropriate base and option registers) are selected for the functional operation of the external memory access, such as:

- Number of wait states for a single memory access, and for any beat in a burst access
- Burst enable
- Port size for the external accessed device

See Section 12.3.1.6, “EBI Base Registers 0–3 (EBI_BRn) and EBI Calibration Base Registers 0–3 (EBI_CAL_BRn),” and Section 12.3.1.7, “EBI Option Registers 0–3 (EBI_ORn) and EBI Calibration Option Registers 0-3 (EBI_CAL_ORn),” for a full description of all chip select attributes.

When no match is found on any of the chip select banks, the default transfer attributes shown in Table 12-11 are used.

Table 12-11. Default Attributes for Non-Chip Select Transfers

CS Attribute	Default Value	Comment
PS	0	32-bit port size
BL	0	Burst length is don't care since burst is disabled
WEBS	0	Write enables
TBDIP	0	Don't care since burst is disabled
BI	1	Burst inhibited
SCY	0	Don't care since external \overline{TA} is used
BSCY	0	Don't care since external \overline{TA} is used

12.4.1.6 Burst Support (Wrapped Only)

The EBI supports burst read accesses of external burstable memory. To enable bursts to a particular memory region, clear the BI (Burst Inhibit) bit in the appropriate base register. External burst lengths of 4 and 8 words are supported. Burst length is configured for each chip select by using the BL bit in the appropriate base register. See [Section 12.4.2.5, “Burst Transfer”](#) for more details.

In 16-bit data bus mode (EBI_MCR[DBM]=1), a special 2-beat burst case is supported for reads and writes for 32-bit non-chip select accesses only. This is to allow 32-bit coherent accesses to another MCU. See [Section 12.4.2.11, “Non-Chip-Select Burst in 16-bit Data Bus Mode”](#).

Bursting of accesses that are not controlled by the chip selects is not supported for any other case besides the special case of 32-bit accesses in 16-bit data bus mode.

Burst writes are not supported for any other case besides the special case of 32-bit non-chip select writes in 16-bit data bus mode. Internal requests to write more than 32 bits (such as a cache line) externally are broken up into separate 32-bit or 16-bit external transactions according to the port size. See [Section 12.4.2.6, “Small Accesses \(Small Port Size and Short Burst Length\)”](#) for more detail on these cases.

12.4.1.7 Bus Monitor

When enabled (via the BME bit in the EBI_BMCR), the bus monitor detects when no \overline{TA} assertion is received within a maximum timeout period for non-chip select accesses (that is, accesses that use external \overline{TA}). The timeout for the bus monitor is specified by the BMT field in the EBI_BMCR. Each time a timeout error occurs, the BMTF bit is set in the EBI_TESR. The timeout period is measured in external bus (CLKOUT) cycles. Thus the effective real-time period is multiplied (by 2 or 4) when a configurable bus speed mode is used, even though the BMT field itself is unchanged.

12.4.1.8 Port Size Configuration per Chip Select (16 or 32 Bits)

The EBI supports memories with data widths of 16 or 32 bits. The port size for a particular chip select is configured by writing the PS bit in the corresponding base register.

12.4.1.9 Port Size Configuration per Calibration Chip Select (16 Bits)

The port size for calibration must be 16 bits wide.

12.4.1.10 Configurable Wait States

From 0 to 15 wait states can be programmed for any cycle that the memory controller generates, via the SCY bits in the appropriate option register. From zero to three wait states between burst beats can be programmed using the BSCY bits in the appropriate option register.

12.4.1.11 Four Chip Select ($\overline{\text{CS}}[0:3]$) Signals

The EBI contains four chip select signals, controlling four independent memory banks. See [Section 12.4.1.5, “Memory Controller with Support for Various Memory Types,”](#) for more details on chip select bank configuration.

12.4.1.12 Support for Dynamic Calibration with Up to 4 Chip Selects

The EBI contains four calibration chip select signals, controlling four independent memory banks on an optional second external bus for calibration. See [Section 12.4.2.12, “Calibration Bus Operation”](#) for more details on using the calibration bus.

12.4.1.13 Four Write/Byte Enable ($\overline{\text{WE}}/\overline{\text{BE}}$) Signals — 416 and 496 BGA devices

The functionality of the $\overline{\text{WE}}[0:3]/\overline{\text{BE}}[0:3]$ signals depends on the value of the WEBS bit in the corresponding base register. Setting WEBS to 1 configures these pins as $\overline{\text{BE}}[0:3]$, while resetting it to 0 configures them as $\overline{\text{WE}}[0:3]$. $\overline{\text{WE}}[0:3]$ are asserted only during write accesses, while $\overline{\text{BE}}[0:3]$ is asserted for both read and write accesses. The timing of the $\overline{\text{WE}}[0:3]/\overline{\text{BE}}[0:3]$ signals remains the same in either case.

The upper write/byte enable ($\overline{\text{WE}}0/\overline{\text{BE}}0$) indicates that the upper eight bits of the data bus (DATA[0:7]) contain valid data during a write/read cycle. The upper middle write/byte enable ($\overline{\text{WE}}1/\overline{\text{BE}}1$) indicates that the upper middle eight bits of the data bus (DATA[8:15]) contain valid data during a write/read cycle. The lower middle write/byte enable ($\overline{\text{WE}}2/\overline{\text{BE}}2$) indicates that the lower middle eight bits of the data bus (DATA[16:23]) contain valid data during a write/read cycle. The lower write/byte enable ($\overline{\text{WE}}3/\overline{\text{BE}}3$) indicates that the lower eight bits of the data bus (DATA[24:31]) contain valid data during a write/read cycle.

The write/byte enable lines affected in a transaction for a 32-bit port (PS = 0) and a 16-bit port (PS = 1) are shown in [Table 12-12](#). Only big endian byte ordering is supported by the EBI.

Table 12-12. Write/Byte Enable Signals Function

Transfer Size	TSIZ[0:1] ¹	Address		32-Bit Port Size				16-Bit Port Size ²			
		A30	A31	$\overline{WE0}/\overline{BE0}$	$\overline{WE1}/\overline{BE1}$	$\overline{WE2}/\overline{BE2}$	$\overline{WE3}/\overline{BE3}$	$\overline{WE0}/\overline{BE0}$	$\overline{WE1}/\overline{BE1}$	$\overline{WE2}/\overline{BE2}$	$\overline{WE3}/\overline{BE3}$
Byte	01	0	0	X	—	—	—	X	—	—	—
	01	0	1	—	X	—	—	—	X	—	—
	01	1	0	—	—	X	—	X	—	—	—
	01	1	1	—	—	—	X	—	X	—	—
16-bit	10	0	0	X	X	—	—	X	X	—	—
	10	1	0	—	—	X	X	X	X	—	—
32-bit	00	0	0	X	X	X	X	X ³	X ³	—	—
Burst	00	0	0	X	X	X	X	X	X	—	—

¹ TSIZ is not enabled on the MPC5567.

² Also applies when DBM=1 for 16-bit data bus mode.

³ This case consists of two 16-bit external transactions, but for both transactions the $\overline{WE}[0:1]/\overline{BE}[0:1]$ signals are the only $\overline{WE}/\overline{BE}$ signals affected.

NOTE: “X” indicates that valid data is transferred on these bits.

12.4.1.14 Two Write/Byte Enable ($\overline{WE}/\overline{BE}$) Signals — 324 BGA devices

The functionality of the $\overline{WE}[0:1]/\overline{BE}[0:1]$ signals depends on the value of the WEBS bit in the corresponding base register. Setting WEBS to 1 configures these pins as $\overline{BE}[0:1]$, while resetting it to 0 configures them as $\overline{WE}[0:1]$. $\overline{WE}[0:1]$ are asserted only during write accesses, while $\overline{BE}[0:1]$ is asserted for both read and write accesses. The timing of the $\overline{WE}[0:1]/\overline{BE}[0:1]$ signals remains the same in either case.

The upper write/byte enable ($\overline{WE0}/\overline{BE0}$) indicates that the upper eight bits of the data bus (DATA[0:7]) contain valid data during a write/read cycle. The lower write/byte enable ($\overline{WE1}/\overline{BE1}$) indicates that the lower eight bits of the data bus (DATA[8:15]) contain valid data during a write/read cycle.

The write/byte enable lines affected in a transaction are shown below in [Table 12-13](#). Only big endian byte ordering is supported by the EBI.

Table 12-13. Write/Byte Enable Signals Function -- 324 BGA

Transfer Size	TSIZ[0:1] ¹	Address		16-Bit Port Size ²	
		A30	A31	$\overline{WE0}/\overline{BE0}$	$\overline{WE1}/\overline{BE1}$
Byte	01	0	0	X	—
	01	0	1	—	X
	01	1	0	X	—
	01	1	1	—	X
16-bit	10	0	0	X	X
	10	1	0	X	X
32-bit	00	0	0	X ³	X ³
Burst	00	0	0	X	X

¹ TSIZ is not enabled on the MPC5567.

² Also applies when DBM=1 for 16-bit data bus mode.

³ This case consists of two 16-bit external transactions, but for both transactions the $\overline{WE}[0:1]/\overline{BE}[0:1]$ signals are the only $\overline{WE}/\overline{BE}$ signals affected.

NOTE: "X" indicates that valid data is transferred on these bits.

12.4.1.15 Configurable Bus Speed Clock Modes

The EBI supports configurable bus speed clock modes. Refer to [Section 12.1.4.4, "Configurable Bus Speed Modes,"](#) for more details on this feature.

12.4.1.16 Stop and Module Disable Modes for Power Savings

See [Section 12.1.4, "Modes of Operation,"](#) for a description of the power saving modes.

12.4.1.17 Optional Automatic CLKOUT Gating

The EBI has the ability to hold the external CLKOUT pin high when the EBI's internal master state machine is idle and no requests are pending. The EBI outputs a signal to the pads logic in the MCU to disable CLKOUT. This feature is disabled out of reset, and can be enabled or disabled by the ACGE bit in the EBI_MCR.

NOTE

This feature must be disabled for multi-master systems. In those cases, one master is getting its clock source from the other master and needs the other master to stay valid continuously.

12.4.1.18 Compatible with MPC5xx External Bus (with Some Limitations)

The EBI is compatible with the external bus of the MPC5xx parts, meaning that it supports most devices supported by the MPC5xx family of parts. However, there are some differences between this EBI and that of the MPC5xx parts that the user needs to be aware of before assuming that an MPC5xx-compatible device works with this EBI. See [Section 12.5.6, “Summary of Differences from MPC5xx,”](#) for details.

NOTE

Due to testing and complexity concerns, multi-master (or master/slave) operation between an eSys MCU and MPC5xx is not guaranteed.

12.4.2 External Bus Operations

The following sections provide a functional description of the external bus, the bus cycles provided for data transfer operations, bus arbitration, and error conditions.

12.4.2.1 External Clocking

The CLKOUT signal sets the frequency of operation for the bus interface directly. Internally, the MCU uses a phase-locked loop (PLL) circuit to generate a master clock for all of the MCU circuitry (including the EBI) which is phase-locked to the CLKOUT signal. In general, all signals for the EBI are specified with respect to the rising-edge of the CLKOUT signal, and they are guaranteed to be sampled as inputs or changed as outputs with respect to that edge.

12.4.2.2 Reset

Upon detection of internal reset, the EBI immediately terminates all transactions.

12.4.2.3 Basic Transfer Protocol

The basic transfer protocol defines the sequence of actions that must occur on the external bus to perform a complete bus transaction. A simplified scheme of the basic transfer protocol is shown in [Figure 12-8](#).




Figure 12-8. Basic Transfer Protocol

The arbitration phase is where bus ownership is requested and granted. This phase is not needed in single master mode because the EBI is the permanent bus owner in this mode.

The address transfer phase specifies the address for the transaction and the transfer attributes that describe the transaction. The signals related to the address transfer phase are \overline{TS} , ADDR, $\overline{CS}[0:3]$, RD_W \overline{R} , and \overline{BDIP} . The address and its related signals (with the exception of \overline{TS} , \overline{BDIP}) are driven on the bus with the assertion of the \overline{TS} signal, and kept valid until the bus master receives \overline{TA} asserted (the EBI holds them

one cycle beyond \overline{TA} for writes and external \overline{TA} accesses). Note that for writes with internal \overline{TA} , RD_WR is not held one cycle past \overline{TA} .

The data transfer phase performs the transfer of data, from master to slave (in write cycles) or from slave to master (on read cycles), if any is to be transferred. The data phase may transfer a single beat of data (1-4 bytes) for non-burst operations or a 2-beat (special $EBI_MCR[DBM]=1$ case only), 4-beat, 8-beat, or 16-beat burst of data (2 or 4 bytes per beat depending on port size) when burst is enabled. On a write cycle, the master must not drive write data until after the address transfer phase is complete. This is to avoid electrical contentions when switching between drivers. The master must start driving write data one cycle after the address transfer cycle. The master can stop driving the data bus as soon as it samples the \overline{TA} line asserted on the rising edge of CLKOUT. To facilitate asynchronous write support, the EBI keeps driving valid write data on the data bus until 1 clock after the rising edge where RD_WR and \overline{WE} are negated (for chip select accesses only). See [Figure 12-14](#) for an example of write timing. On a read cycle, the master accepts the data bus contents as valid on the rising edge of the CLKOUT in which the \overline{TA} signal is sampled asserted. See [Figure 12-10](#) for an example of read timing.

The termination phase is where the cycle is terminated by the assertion of either \overline{TA} (normal termination) or \overline{TEA} (termination with error). Termination is discussed in detail in [Section 12.4.2.9, “Termination Signals Protocol.”](#)

12.4.2.4 Single Beat Transfer

The flow and timing diagrams in this section assume that the EBI is configured in single master mode. Therefore, arbitration is not needed and is not shown in these diagrams. Refer to [Section 12.4.2.10, “Bus Operation in External Master Mode,”](#) to see how the flow and timing diagrams change for external master mode.

12.4.2.4.1 Single Beat Read Flow

The handshakes for a single beat read cycle are illustrated in the following flow and timing diagrams.

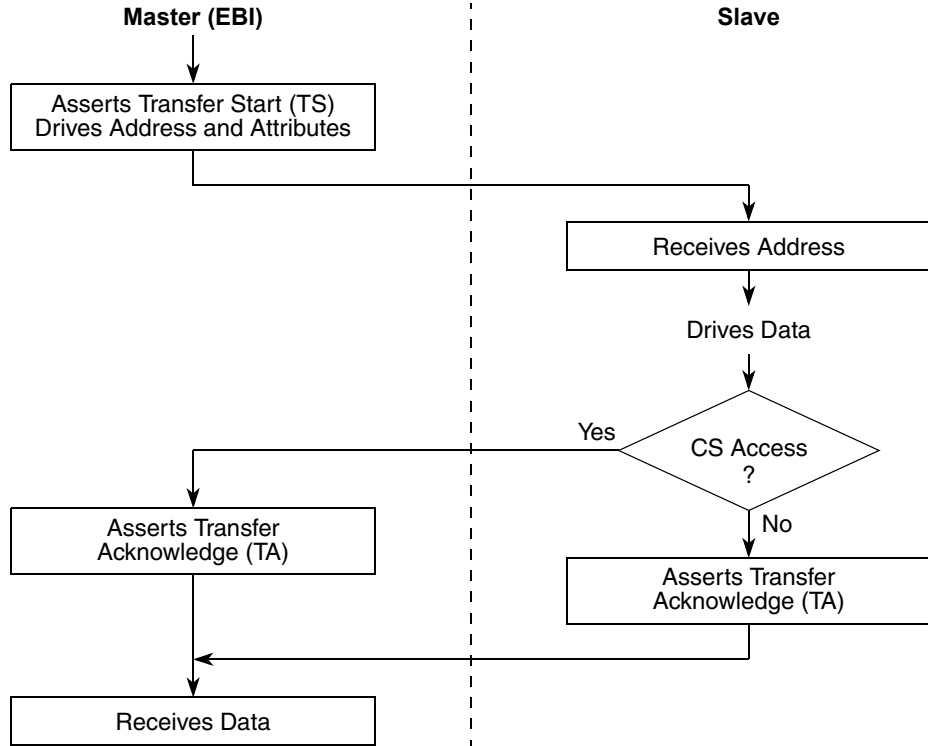


Figure 12-9. Basic Flow Diagram of a Single Beat Read Cycle

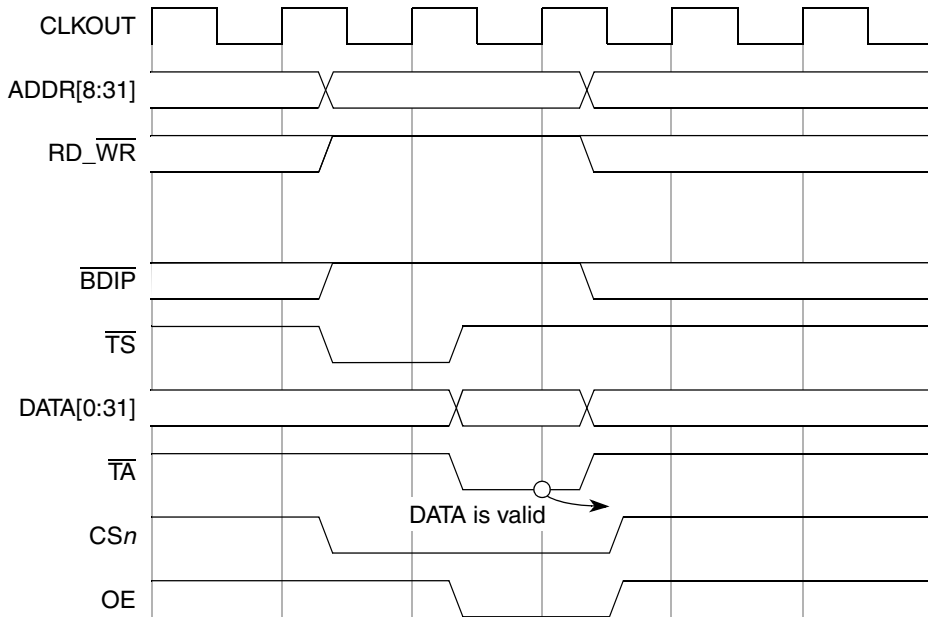


Figure 12-10. Single Beat 32-bit Read Cycle, $\bar{C}\bar{S}$ Access, Zero Wait States


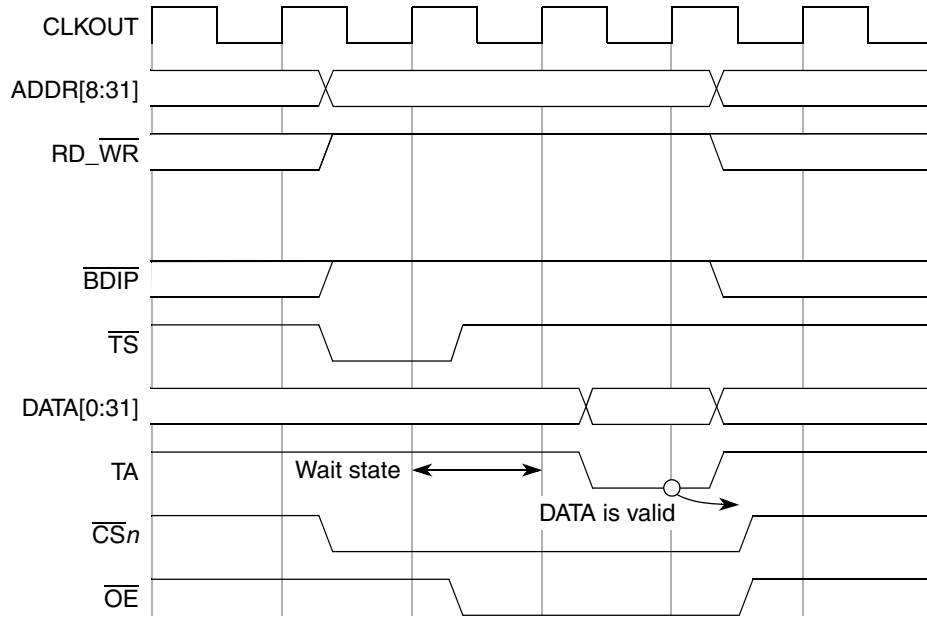


Figure 12-11. Single Beat 32-bit Read Cycle, \overline{CS} Access, One Wait State

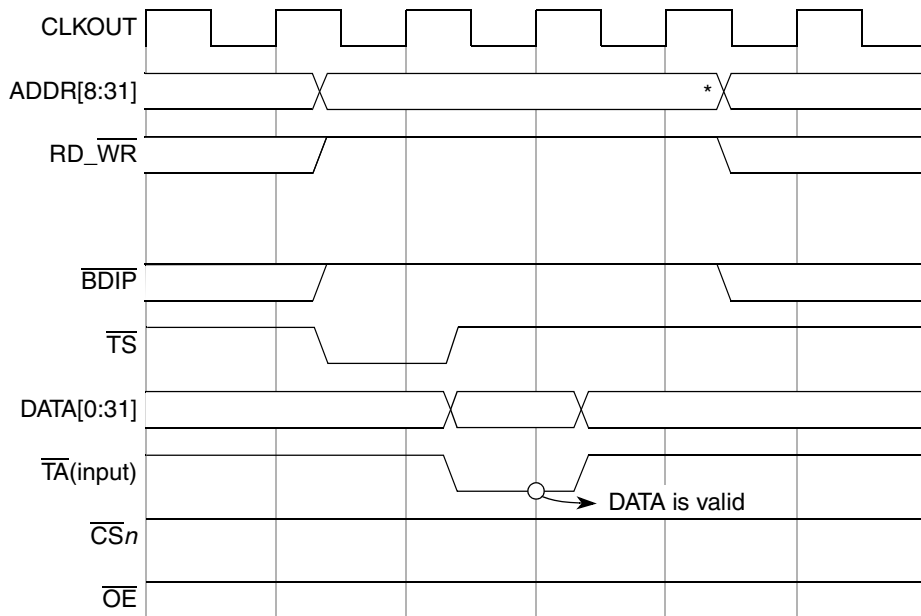

* The EBI drives address and control signals an extra cycle because it uses a latched version of the external \overline{TA} (1 cycle delayed) to terminate the cycle.

Figure 12-12. Single Beat 32-bit Read Cycle, Non- \overline{CS} Access, Zero Wait States

12.4.2.4.2 Single Beat Write Flow

The handshakes for a single beat write cycle are illustrated in the following flow and timing diagrams.

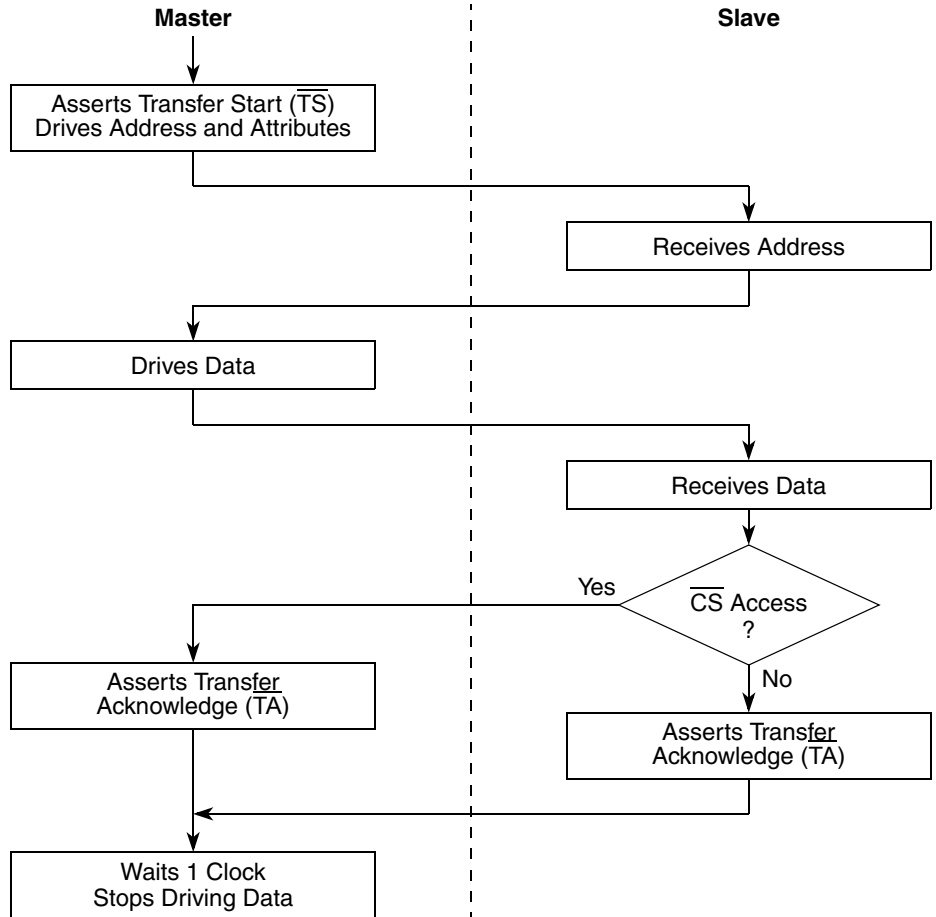


Figure 12-13. Basic Flow Diagram of a Single Beat Write Cycle

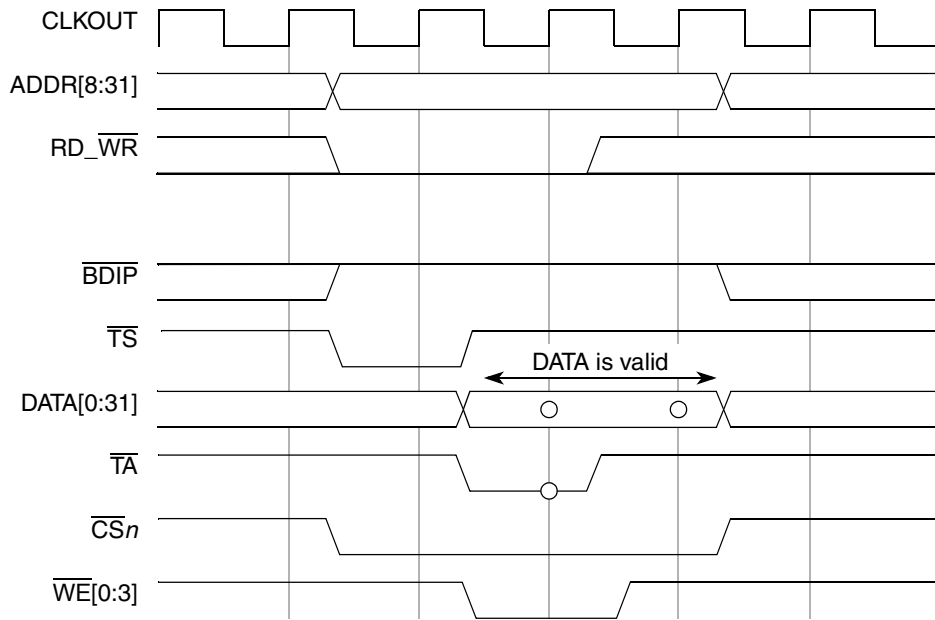


Figure 12-14. Single Beat 32-bit Write Cycle, \overline{CS} Access, Zero Wait States


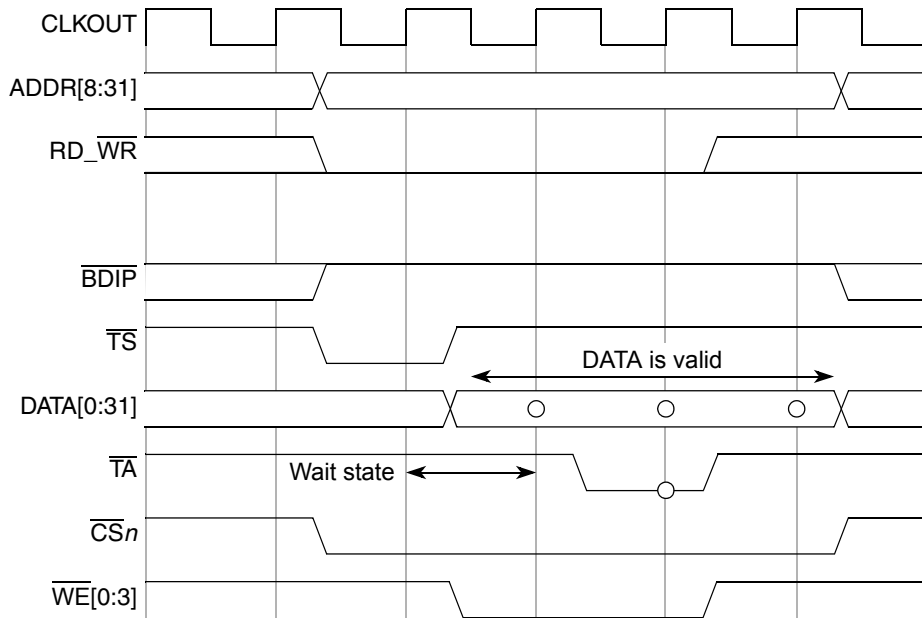


Figure 12-15. Single Beat 32-bit Write Cycle, \overline{CS} Access, One Wait State

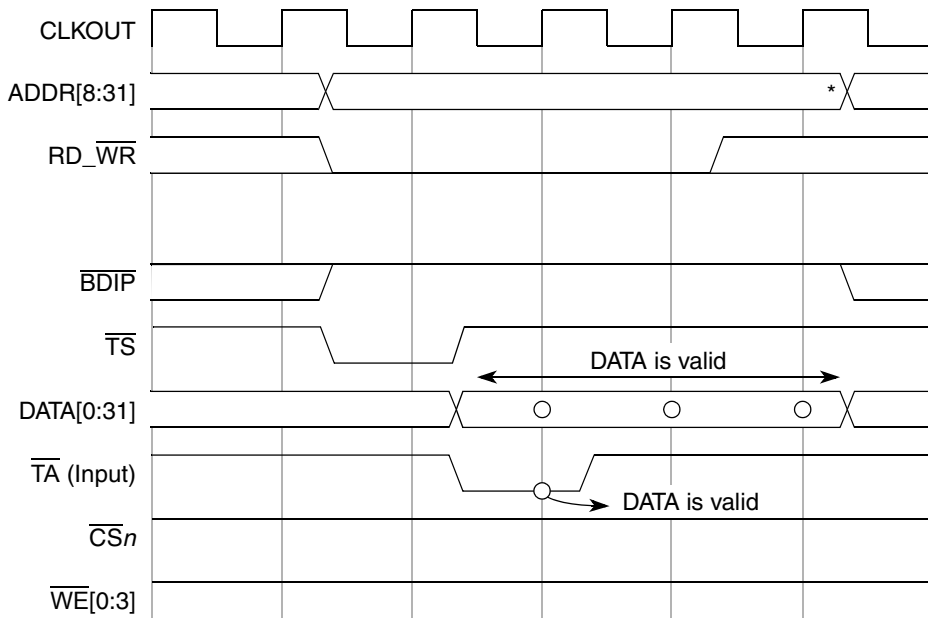

* The EBI drives address and control signals an extra cycle because it uses a latched version of the external \overline{TA} (1 cycle delayed) to terminate the cycle.

Figure 12-16. Single Beat 32-bit Write Cycle, Non- \overline{CS} Access, Zero Wait States

12.4.2.4.3 Back-to-Back Accesses

Due to internal bus protocol, one dead cycle is necessary between back-to-back external bus accesses that are not part of a set of small accesses (see [Section 12.4.2.6, “Small Accesses \(Small Port Size and Short Burst Length\)”](#) for small access timing). Besides this dead cycle, in most cases, back-to-back accesses on the external bus do not cause any change in the timing from that shown in the previous diagrams, and the two transactions are independent of each other. The only exceptions to this are as follows:

- Back-to-back accesses where the first access ends with an externally-driven \overline{TA} or \overline{TEA} . In these cases, an extra cycle is required between the end of the first access and the \overline{TS} assertion of the second access. See [Section 12.4.2.9, “Termination Signals Protocol,”](#) for more details.

NOTE

In some cases, \overline{CS} remains asserted during this dead cycle, such as the cases of back-to-back writes or read-after-write to the same chip-select. See [Figure 12-17](#) and [Figure 12-18](#). The following diagrams show a few examples of back-to-back accesses on the external bus.

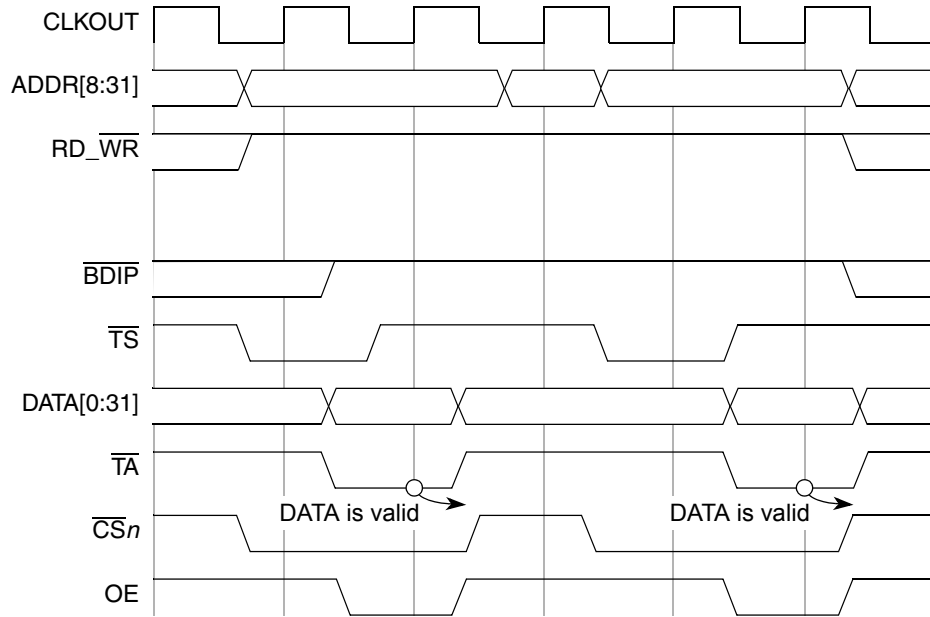


Figure 12-17. Back-to-Back 32-bit Reads to the Same CSn Bank

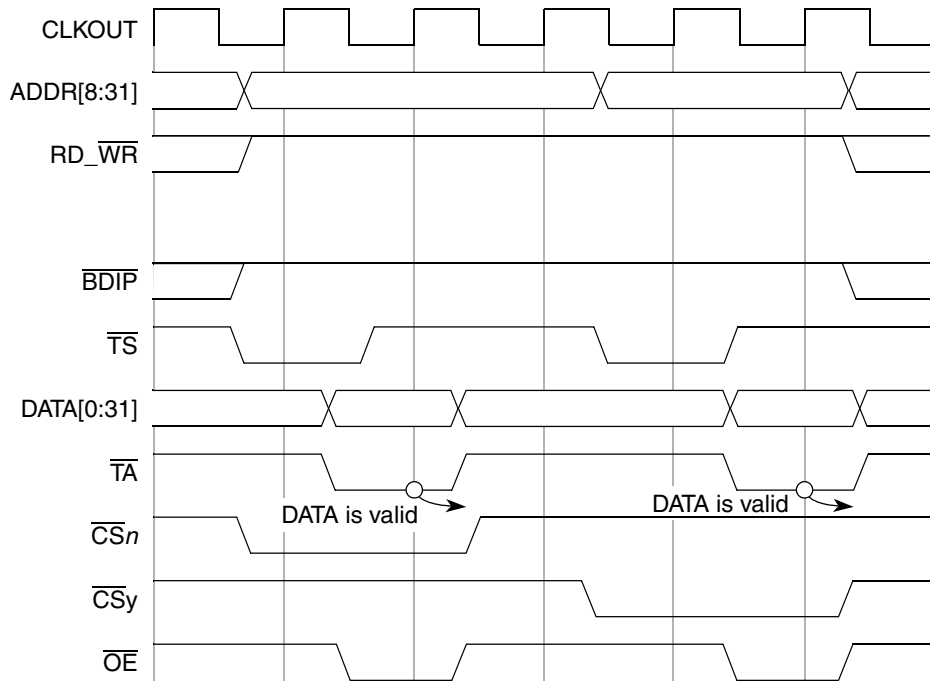


Figure 12-18. Back-to-Back 32-bit Reads to Different CSn Banks

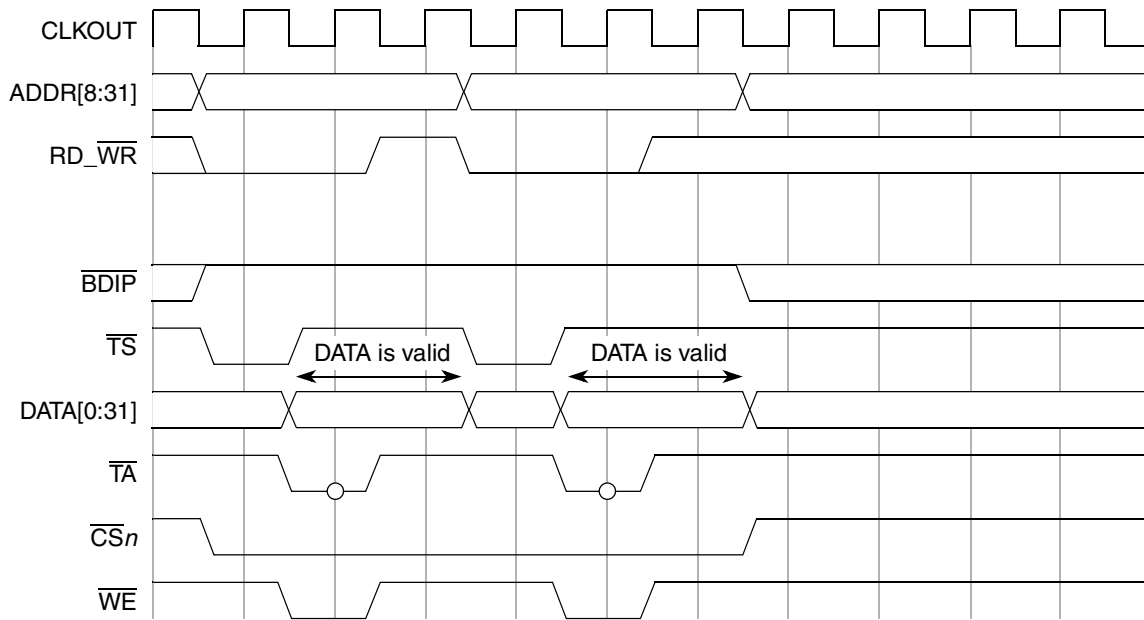


Figure 12-20. Back-to-Back 32-bit Writes to the Same \overline{CS} Bank

12.4.2.5 Burst Transfer

The EBI supports wrapping 32-byte critical-doubleword-first burst transfers. Bursting is supported only for internally-requested cache-line size (32-byte) read accesses to external devices that use the chip selects¹. Accesses from an external master or to devices operating without a chip select are always single beat. If an internal request to the EBI indicates a size of less than 32 bytes, the request is fulfilled by running one or more single-beat external transfers, not by an external burst transfer.

An 8-word wrapping burst reads eight 32-bit words by supplying a starting address that points to one of the words (doubleword aligned) and requiring the memory device to sequentially drive each word on the data bus. The selected slave device must internally increment ADDR[27:29] (also ADDR30 in the case of a 16-bit port size device) of the supplied address for each transfer, until the address reaches an 8-word boundary, and then wrap the address to the beginning of the 8-word boundary. The address and transfer attributes supplied by the EBI remain stable during the transfers, and the EBI terminates each beat transfer by asserting \overline{TA} . The EBI requires that addresses be aligned to a doubleword boundary on all burst cycles.

Table 12-14 shows the burst order of beats returned for an 8-word burst to a 32-bit port.

Table 12-14. Wrap Bursts Order

Burst Starting Address ADDR[27:28]	Burst Order (Assuming 32-bit Port Size)
00	word0 → word1 → word2 → word3 → word4 → word5 → word6 → word7
01	word2 → word3 → word4 → word5 → word6 → word7 → word0 → word1

1. Except for the special case of a 32-bit non-chip select access in 16-bit data bus mode. See Section 12.4.2.11.

Table 12-14. Wrap Bursts Order (continued)

Burst Starting Address ADDR[27:28]	Burst Order (Assuming 32-bit Port Size)
10	word4 → word5 → word6 → word7 → word0 → word1 → word2 → word3
11	word6 → word7 → word0 → word1 → word2 → word3 → word4 → word5

The general case of burst transfers assumes that the external memory has 32-bit port size and 8-word burst length. The EBI can also burst from 16-bit port size memories, taking twice as many external beats to fetch the data as compared to a 32-bit port with the same burst length. The EBI can also burst from 16-bit or 32-bit memories that have a 4-word burst length ($BL = 1$ in the appropriate base register). In this case, two external 4-word burst transfers (wrapping on 4-word boundary) are performed to fulfill the internal 8-word request. This operation is considered atomic by the EBI, so the EBI does not allow other unrelated master accesses or bus arbitration to intervene between the transfers. For more details and a timing diagram, see [Section 12.4.2.6.3, “Small Access Example #3: 32-byte Read to 32-bit Port with \$BL = 1\$.”](#)

During burst cycles, the \overline{BDIP} (burst data in progress) signal is used to indicate the duration of the burst data. During the data phase of a burst read cycle, the EBI receives data from the addressed slave. If the EBI needs more than one data, it asserts the \overline{BDIP} signal. Upon receiving the data prior to the last data, the EBI negates \overline{BDIP} . Thus, the slave stops driving new data after it receives the negation of \overline{BDIP} on the rising edge of the clock. Some slave devices have their burst length and timing configurable internally and thus may not support connecting to a \overline{BDIP} pin. In this case, \overline{BDIP} is driven by the EBI normally, but the output is ignored by the memory and the burst data behavior is determined by the internal configuration of the EBI and slave device. When the TBDIP bit is set in the appropriate base register, the timing for \overline{BDIP} is altered. See [Section 12.4.2.5.1, “TBDIP Effect on Burst Transfer,”](#) for this timing.

Since burst writes are not supported by the EBI¹, the EBI negates \overline{BDIP} during write cycles.

1. Except for the special case of a 32-bit non-chip select access in 16-bit data bus mode. See [Section 12.4.2.11](#).

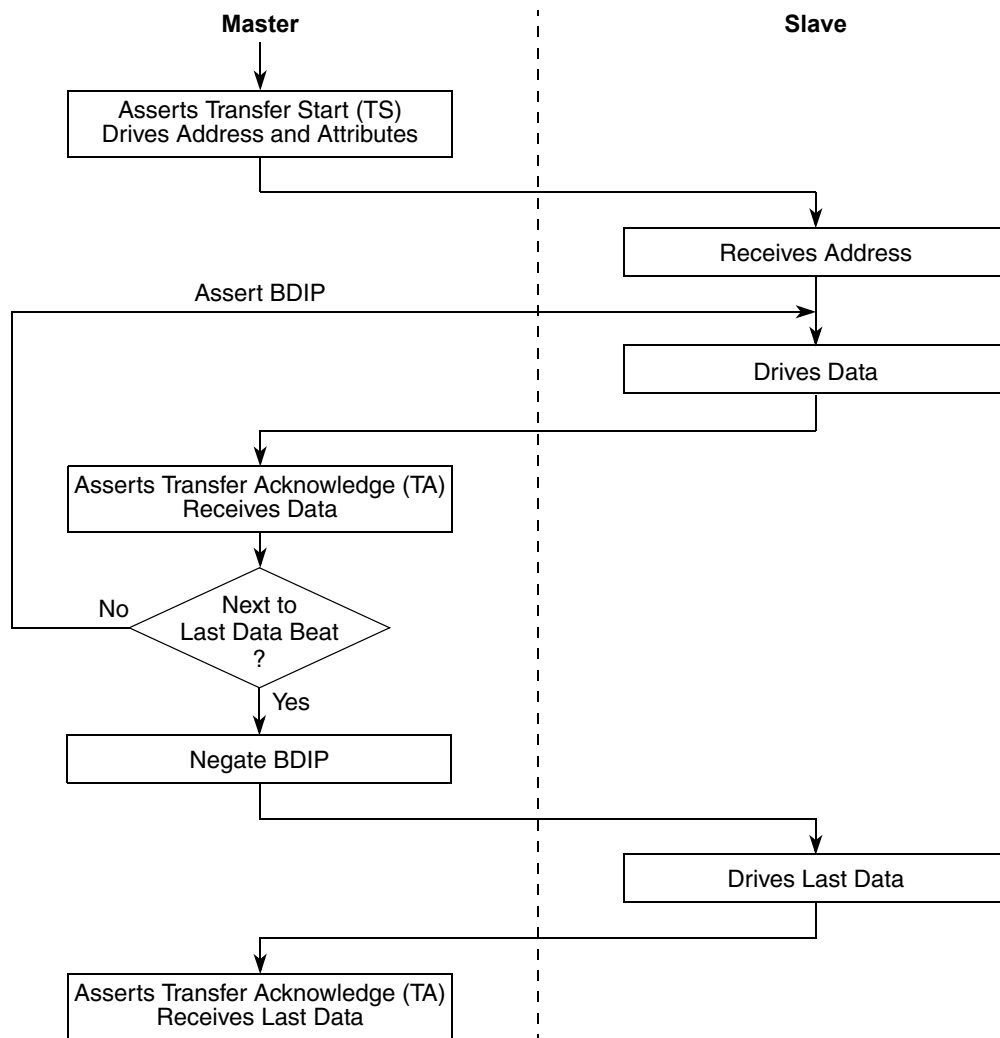


Figure 12-21. Basic Flow Diagram of a Burst Read Cycle

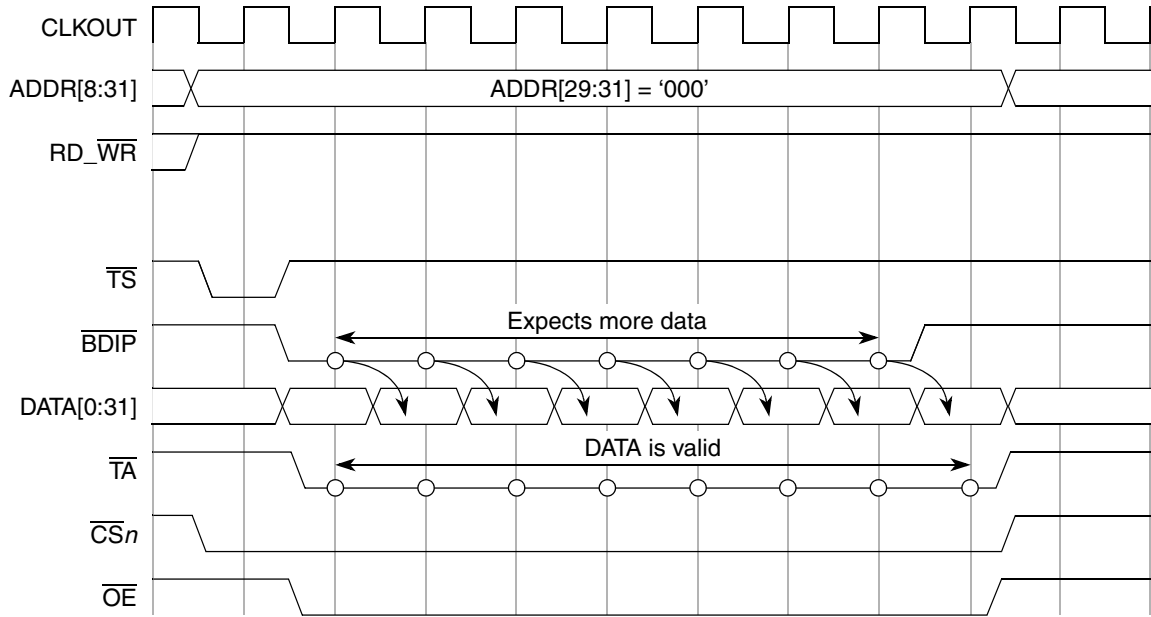


Figure 12-22. Burst 32-bit Read Cycle, Zero Wait States

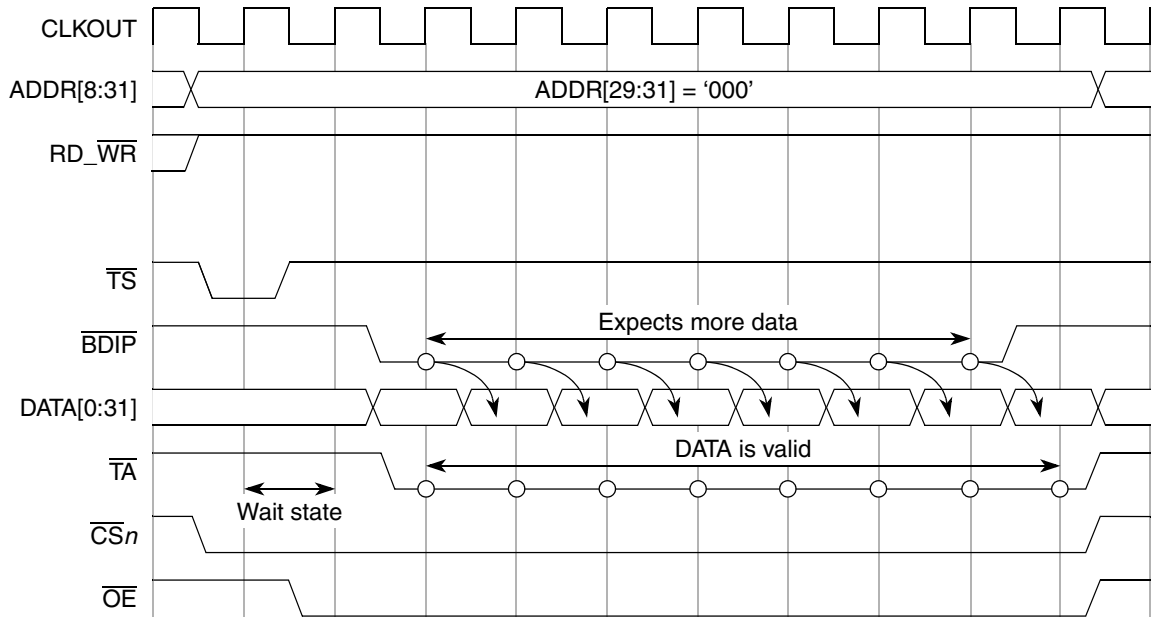


Figure 12-23. Burst 32-bit Read Cycle, One Initial Wait State

12.4.2.5.1 TBDIP Effect on Burst Transfer

Some memories require different timing on the $\overline{\text{BDIP}}$ signal than the default to run burst cycles. Using the default value of $\text{TBDIP} = 0$ in the appropriate EBI base register results in $\overline{\text{BDIP}}$ being asserted (SCY+1) cycles after the address transfer phase, and being held asserted throughout the cycle regardless of the wait

states between beats (BSCY). Figure 12-24 shows an example of the TBDIP = 0 timing for a 4-beat burst with BSCY = 1.

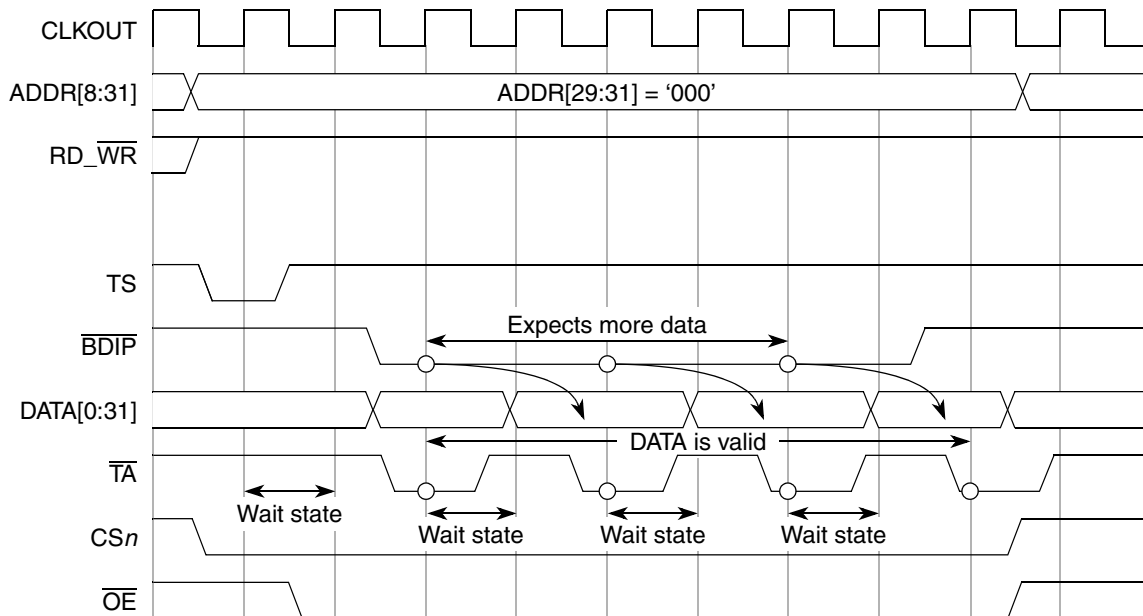


Figure 12-24. Burst 32-bit Read Cycle, One Wait State between Beats, TBDIP = 0

When using TBDIP = 1, the $\overline{\text{BDIP}}$ behavior changes to toggle between every beat when BSCY is a non-zero value. Figure 12-25 shows an example of the TBDIP = 1 timing for the same four-beat burst shown in Figure 12-24.

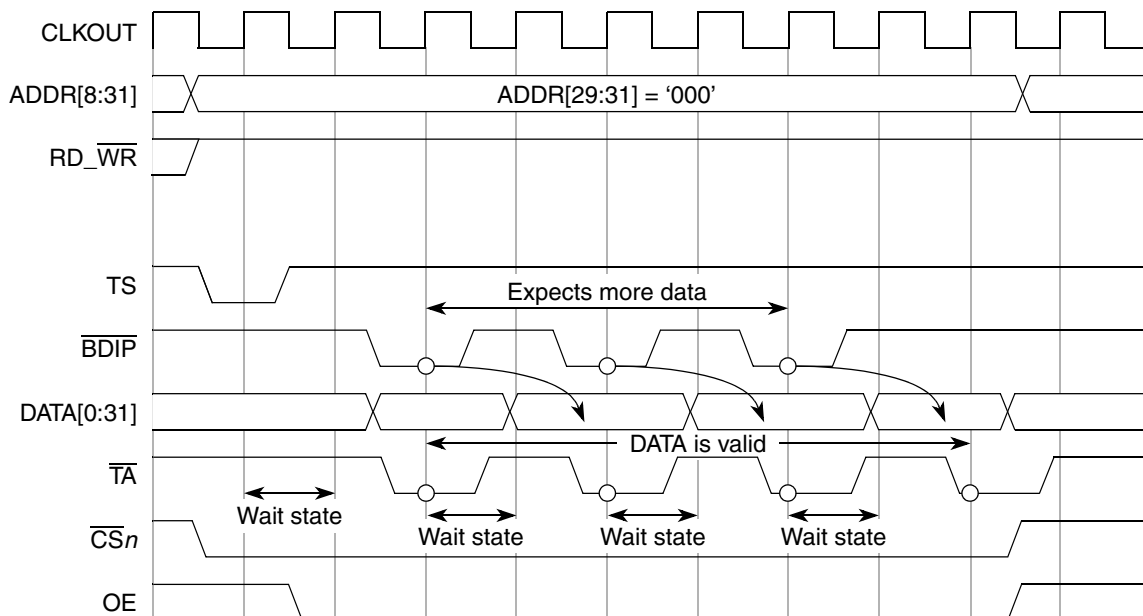


Figure 12-25. Burst 32-bit Read Cycle, One Wait State between Beats, TBDIP = 1

12.4.2.6 Small Accesses (Small Port Size and Short Burst Length)

In this context, a small access refers to an access whose burst length and port size are such that the number of bytes requested by the internal master cannot all be fetched (or written) in one external transaction. This is the case when the base register’s burst length bit (EBI_BR n [BL]) and port size bit (EBI_BR n [PS]) are set such that one of two situations occur:

- Burst accesses are inhibited and the number of bytes requested by the master is greater than the port size (16 or 32 bit) can accommodate in a single access.
- Burst accesses are enabled and the number of bytes requested by the master is greater than the selected burst length (4 words or 8 words).

If this is the case, the EBI initiates multiple transactions until all the requested data is transferred. It should be noted that all the transactions initiated to complete the data transfer are considered as an atomic transaction, so the EBI does not allow other unrelated master accesses to intervene between the transfers. In external master mode, this means that the EBI keeps \overline{BB} asserted and does not grant the bus to another master until the atomic transaction is complete.

Table 12-15 shows all the combinations of burst length, port size, and requested byte count that cause the EBI to run multiple external transactions to fulfill the request.

Table 12-15. Small Access Cases

Byte Count Requested by Internal Master	Burst Length	Port Size	# External Accesses to Fulfill Request
Non-Burstable Chip-Select Banks (BI=1) or Non-Chip-Select Access			
4	1 beat	16-bit	2/1 ¹
8	1 beat	32-bit	2
8	1 beat	16-bit	4
32	1 beat	32-bit	8
32	1 beat	16-bit	16
Burstable Chip-Select Banks (BI=0)			
32	4 words	16-bit (8 beats), 32-bit (4 beats)	2

¹ In 32-bit data bus mode (DBM=0 in EBI_MCR), two accesses are performed. In 16-bit data bus mode (DBM=1), one 2-beat burst access is performed and this is not considered a small access case. See Section 12.4.2.11, “Non-Chip-Select Burst in 16-bit Data Bus Mode” for this special DBM=1 case.

In most cases, the timing for small accesses is the same as for normal single-beat and burst accesses, except that multiple back-to-back external transfers are executed for each internal request. These transfers have no additional dead cycles in-between that are not present for back-to-back stand-alone transfers except for the case of writes with an internal request size greater than 64 bits, discussed in Section 12.4.2.6.2, “Small Access Example #2: 32-byte Write with External TA.”

The following sections show a few examples of small accesses. The timing for the remaining cases in Table 12-15 can be extrapolated from these and the other timing diagrams in this document.

12.4.2.6.1 Small Access Example #1: 32-bit Write to 16-bit Port

Figure 12-26 shows an example of a 32-bit write to a 16-bit port, requiring two 16-bit external transactions.


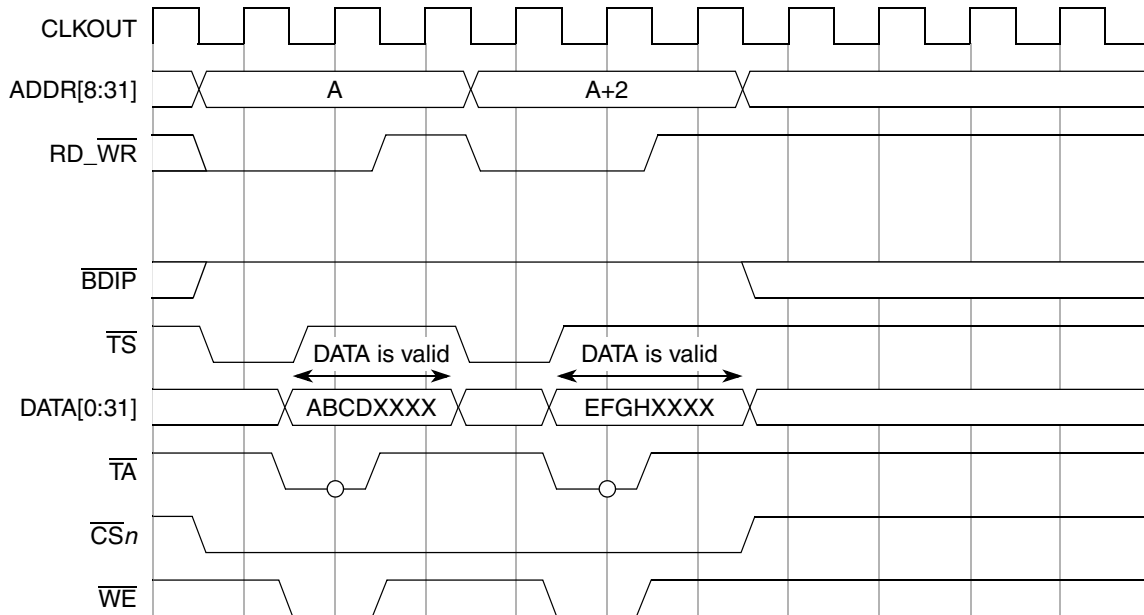


Figure 12-26. Single Beat 32-bit Write Cycle, 16-bit Port Size, Basic Timing

12.4.2.6.2 Small Access Example #2: 32-byte Write with External TA

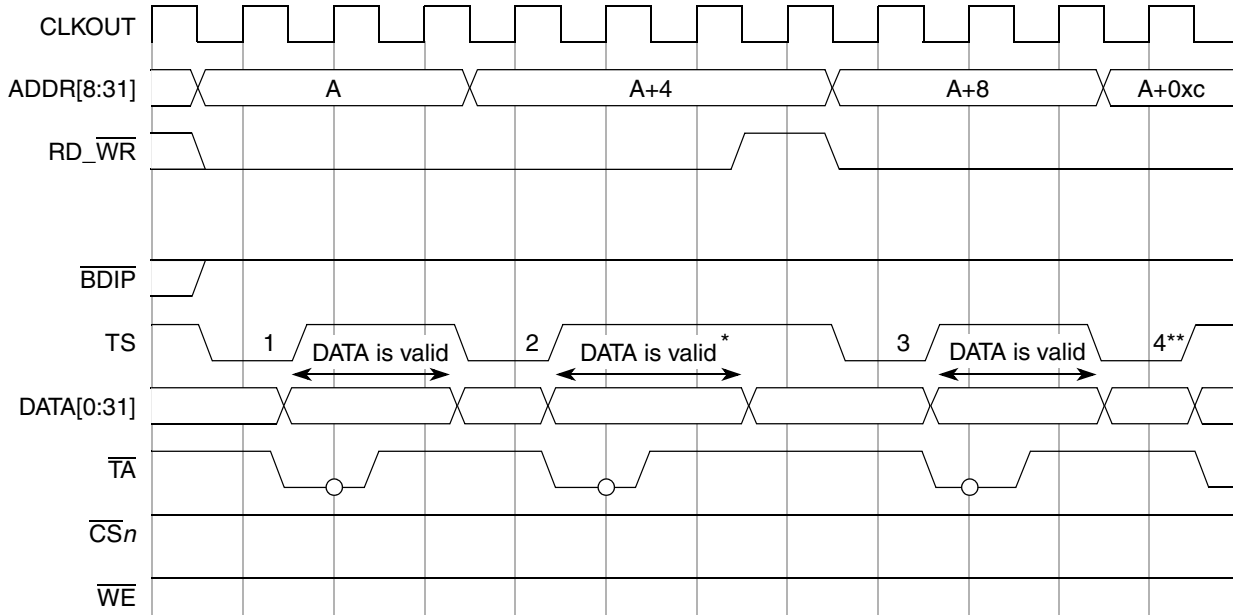Figure 12-27 shows an example of a 32-byte write to a non-chip select device, such as an external master, using external TA, requiring eight 32-bit external transactions. Note that due to the use of external TA, RD_WR does not toggle between the accesses unless that access is the end of a 64-bit boundary. In this case, an extra cycle is required between TA and the next TS in order to get the next 64-bits of write data internally and RD_WR negates during this extra cycle.



* This extra cycle is required after accesses 2, 4, and 6 in order to get the next 64-bits of internal write data.

** Four more external accesses (not shown) are required to complete the internal 32-byte request. The timing of these is the same as accesses 1-4 shown in this diagram.

Figure 12-27. 32-Byte Write Cycle with External \overline{TA} , Basic Timing

12.4.2.6.3 Small Access Example #3: 32-byte Read to 32-bit Port with BL = 1

Figure 12-28 shows an example of a 32-byte read to a 32-bit burst enabled port with burst length of 4 words, requiring two 16-byte external transactions. For this case, the address for the second 4-word burst access is calculated by adding 0x10 to the lower 5 bits of the first address (no carry), and then masking out the lower 4 bits to fix them at zero.

Table 12-16. Examples of 4-word Burst Addresses

1st Address	Lower 5 bits of 1st Address + 0x10 (no carry)	Final 2nd Address (After Masking Lower 4 Bits)
0x000	0x10	0x10
0x008	0x18	0x10
0x010	0x00	0x00
0x018	0x08	0x00
0x020	0x30	0x30
0x028	0x38	0x30
0x030	0x20	0x20
0x038	0x28	0x20

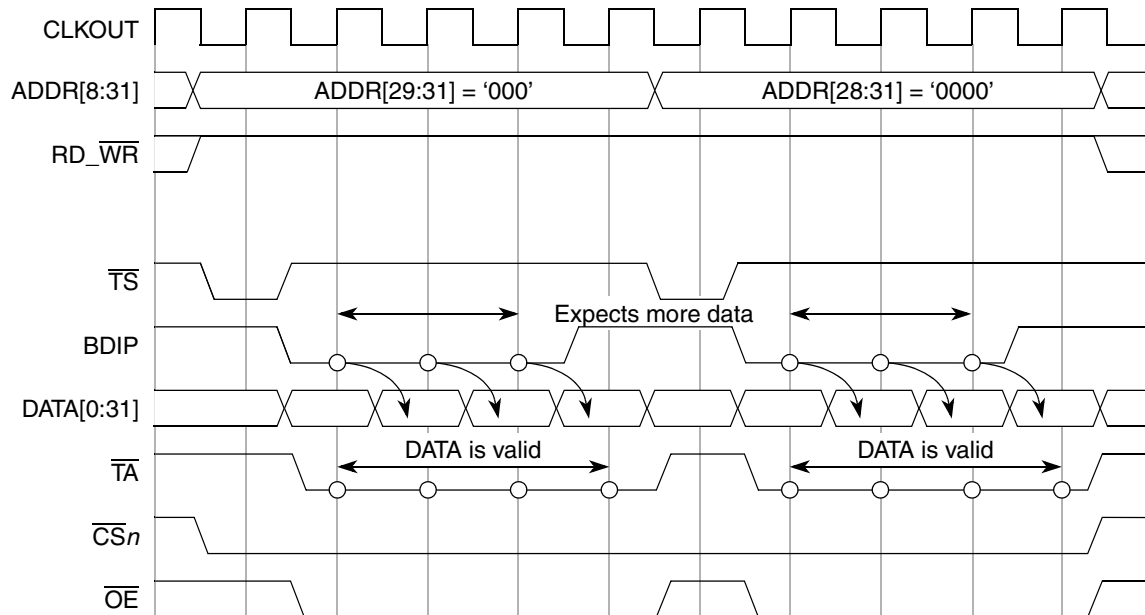


Figure 12-28. 32-Byte Read with Back-to-Back 16-Byte Bursts to 32-bit Port, Zero Wait States

12.4.2.7 Size, Alignment, and Packaging on Transfers

Table 12-17 shows the allowed sizes that an internal or external master can request from the EBI. The behavior of the EBI for request sizes not shown below is undefined. No error signal is asserted for these erroneous cases.

Table 12-17. Transaction Sizes Supported by EBI

No. Bytes (Internal Master)	No. Bytes (External Master)
1	1
2	2
4	4
3 ¹	
8	
16 ²	
32 ³	

¹ Some misaligned access cases may result in 3-byte writes. These cases are treated as power-of-2 sized requests by the EBI, using WE/BE[0:3] to make sure only the appropriate 3 bytes get written.

² Only supported for the case of a 32-bit internal data bus

³ Only supported for the case of a 64-bit internal data bus

Even though misaligned non-burst transfers from internal masters are supported, the EBI naturally aligns the accesses when it sends them out to the external bus, splitting them into multiple aligned accesses if necessary.

Natural alignment for the EBI means:

- Byte access can have any address.
- 16-bit access, address bit 31 must be 0.
- 32-bit access, address bits 30-31 must be 0.
- For burst accesses of any size, address bits 29-31 must be 0.

The EBI never generates a misaligned external access, so a multi-master system with two eSys MCUs can never have a misaligned external access. In the erroneous case that an externally-initiated misaligned access does occur, the EBI errors the access (by asserting \overline{TEA} externally) and does not initiate the access on the internal bus.

The EBI requires that the portion of the data bus used for a transfer to/from a particular port size be fixed. A 32-bit port must reside on data bus bits 0-31, and a 16-bit port must reside on bits 0-15.

In the following figures and tables the following convention is adopted:

- The most significant byte of a 32-bit operand is OP0, and OP3 is the least significant byte.
- The two bytes of a 16-bit operand are OP0 (most significant) and OP1, or OP2 (most significant) and OP3, depending on the address of the access.
- The single byte of a byte-length operand is OP0, OP1, OP2, or OP3, depending on the address of the access.

The convention can be seen in [Figure 12-29](#).

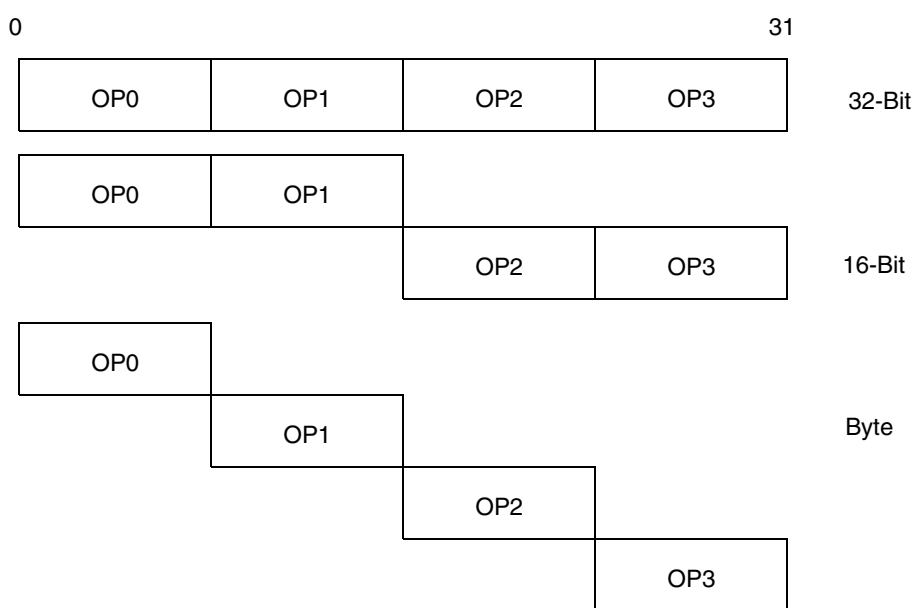


Figure 12-29. Internal Operand Representation

[Figure 12-30](#) shows the device connections on the DATA[0:31] bus.

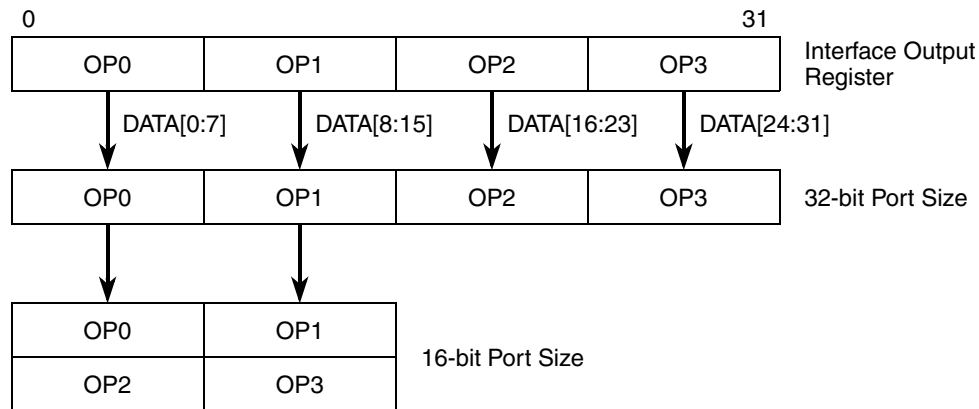

Figure 12-30. Interface to Different Port Size Devices

Table 12-18 lists the bytes required on the data bus for read cycles. The bytes indicated as ‘—’ are not required during that read cycle.

Table 12-18. Data Bus Requirements for Read Cycles

Transfer Size	TSIZ[0:1] ¹	Address		32-Bit Port Size				16-Bit Port Size ²	
		A30	A31	D0:D7	D8:D15	D16:D23	D24:D31	D0:D7	D8:D15
Byte	01	0	0	OP0	—	—	—	OP0	—
	01	0	1	—	OP1	—	—	—	OP1
	01	1	0	—	—	OP2	—	OP2	—
	01	1	1	—	—	—	OP3	—	OP3
16-bit	10	0	0	OP0	OP1	—	—	OP0	OP1
	10	1	0	—	—	OP2	OP3	OP2	OP3
32-bit	00	0	0	OP0	OP1	OP2	OP3	OP0/OP2 ³	OP1/OP3

¹ TSIZ is not enabled on the MPC5567.

² Also applies when DBM=1 for 16-bit data bus mode.

³ This case consists of two 16-bit external transactions, the first fetching OP0 and OP1, the second fetching OP2 and OP3.

Table 12-19 lists the patterns of the data transfer for write cycles when accesses are initiated by the MCU. The bytes indicated as ‘—’ are not driven during that write cycle.

Table 12-19. Data Bus Contents for Write Cycles

Transfer Size	TSIZ[0:1] ¹	Address		32-Bit Port Size				16-Bit Port Size ²	
		A30	A31	D0:D7	D8:D15	D16:D23	D24:D31	D0:D7	D8:D15
Byte	01	0	0	OP0	—	—	—	OP0	—
	01	0	1	OP1	OP1	—	—	—	OP1
	01	1	0	OP2	—	OP2	—	OP2	—
	01	1	1	OP3	OP3	—	OP3	—	OP3
16-bit	10	0	0	OP0	OP1	—	—	OP0	OP1
	10	1	0	OP2	OP3	OP2	OP3	OP2	OP3
32-bit	00	0	0	OP0	OP1	OP2	OP3	OP0/OP2 ³	OP1/OP3

¹ TSIZ is not enabled on the MPC5567.

² Also applies when DBM=1 for 16-bit data bus mode.

³ This case consists of two 16-bit external transactions, the first writing OP0 and OP1, the second writing OP2 and OP3.

12.4.2.8 Arbitration

The MPC5567 does not have arbitration pins, so multi-master operation with arbitration is not supported. However, limited dual-MCU functionality is supported for the case of a Master/Slave system.

See [Section 12.5.5, “Dual-MCU Operation with Reduced Pinout MCUs \(MPC5567\).”](#)

12.4.2.9 Termination Signals Protocol

The termination signals protocol was defined in order to avoid electrical contention on lines that can be driven by various sources. In order to do that, a slave must not drive signals associated with the data transfer until the address phase is completed and it recognizes the address as its own. The slave must disconnect from signals immediately after it acknowledges the cycle and not later than the termination of the next address phase cycle.

For EBI-mastered non-chip select accesses, the EBI requires assertion of \overline{TA} from an external device to signal that the bus cycle is complete. The EBI uses a latched version of \overline{TA} (1 cycle delayed) for these accesses to help make timing at high frequencies. This results in the EBI driving the address and control signals 1 cycle longer than required, as seen in [Figure 12-31](#). However, the DATA does not need to be held 1 cycle longer by the slave, because the EBI latches DATA every cycle during non-chip select accesses. During these accesses, the EBI does not drive the \overline{TA} signal, leaving it up to an external device (or weak internal pull-up) to drive \overline{TA} .

For EBI-mastered chip select accesses, the EBI drives \overline{TA} the entire cycle, asserting according to internal wait state counters to terminate the cycle. During idle periods on the external bus, the EBI drives \overline{TA} negated as long as it is granted the bus; when it no longer owns the bus it lets go of \overline{TA} . When an external master does a transaction to internal address space, the EBI only drives \overline{TA} for the cycle it asserts \overline{TA} to return data and for 1 cycle afterwards to ensure fast negation.

If no device responds by asserting \overline{TA} within the programmed timeout period (BMT in EBI_BMCR) after the EBI initiates the bus cycle, the internal bus monitor (if enabled) asserts \overline{TEA} to terminate the cycle. An external device may also drive \overline{TEA} when it detects an error on an external transaction. \overline{TEA} assertion causes the cycle to terminate and the processor to enter exception processing for the error condition. To properly control termination of a bus cycle for a bus error with external circuitry, \overline{TEA} must be asserted at the same time or before (external) \overline{TA} is asserted. \overline{TEA} must be negated before the second rising edge after it was sampled asserted in order to avoid the detection of an error for the following bus cycle initiated. \overline{TEA} is only driven by the EBI during the cycle where the EBI is asserting \overline{TEA} and the cycle immediately following this assertion (for fast negation). During all other cycles, the EBI relies on a weak internal pull-up to hold \overline{TEA} negated. This allows an external device to assert \overline{TEA} when it needs to indicate an error. External devices must follow the same protocol as the EBI, only driving \overline{TEA} during the assertion cycle and 1 cycle afterwards for negation.

NOTE

In the case where an external master asserts \overline{TEA} to timeout a transaction to an internal address on this MCU, the EBI has no way to terminate the transfer internally. Therefore, any subsequent \overline{TS} assertions by the external master are ignored by the EBI until the original transfer has completed internally and the EBI has returned to an idle state. The expectation is that the internal slaves will always respond with either valid data or an error indication within a reasonable period of time to avoid hanging the system.

When \overline{TEA} is asserted from an external source, the EBI uses a latched version of \overline{TEA} (1 cycle delayed) to help make timing at high frequencies. This means that for any accesses where the EBI drives \overline{TA} (chip select accesses and external master accesses to EBI), a \overline{TEA} assertion that occurs 1 cycle before or during the last \overline{TA} of the access could be ignored by the EBI, since it will have completed the access internally before it detects the latched \overline{TEA} assertion. This means that non-burst chip select accesses with no wait states ($SCY = 0$) cannot be reliably terminated by external \overline{TEA} . If external error termination is required for such a device, the EBI must be configured for $SCY \geq 1$.

NOTE

For the cases discussed above where \overline{TEA} could be ignored, this is not guaranteed. For some small access cases (which always use chip select and internally-driven \overline{TA}), a \overline{TEA} that occurs 1 cycle before or during the \overline{TA} cycle or for $SCY = 0$ may in fact lead to terminating the cycle with error. However, proper error termination is not guaranteed for these cases, so \overline{TEA} must always be asserted at least 2 cycles before an internally-driven \overline{TA} cycle for proper error termination.

External \overline{TEA} assertion that occurs during the same cycle that \overline{TS} is asserted by the EBI is always treated as an error (terminating the access) regardless of SCY .


Table 12-20 summarizes how the EBI recognizes the termination signals provided from an external device.

Table 12-20. Termination Signals Protocol

TEA ¹	TA ¹	Action
Negated	Negated	No Termination
Asserted	X	Transfer Error Termination
Negated	Asserted	Normal Transfer Termination

¹ Latched version (1 cycle delayed) used for externally driven \overline{TEA} and \overline{TA} .

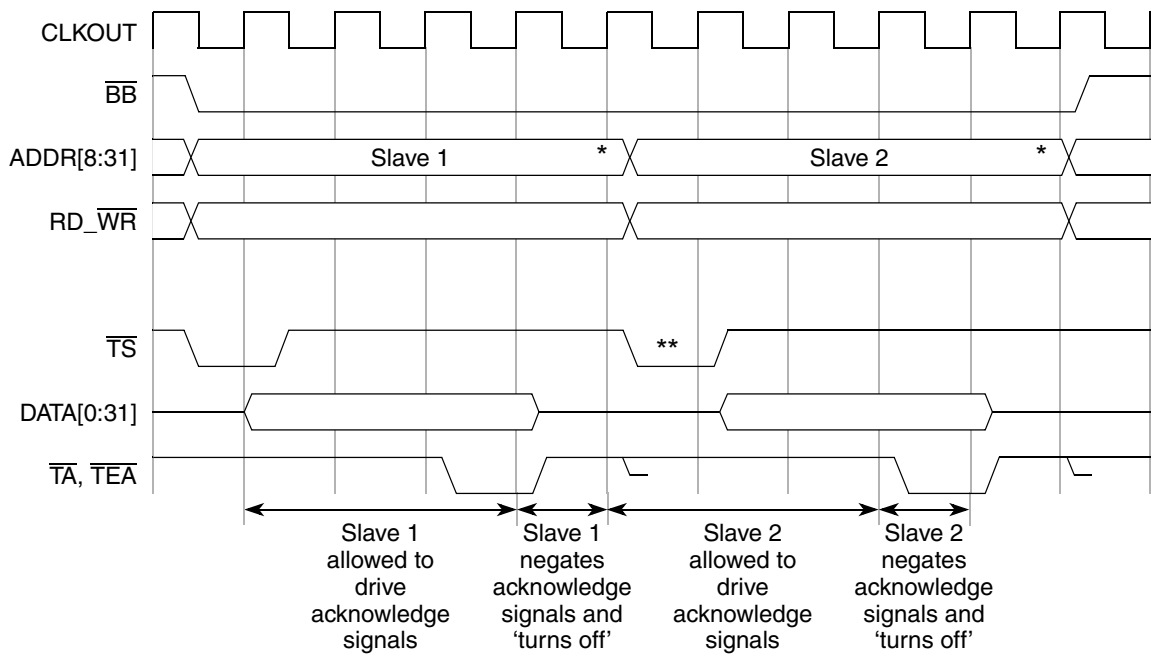Figure 12-31 shows an example of the termination signals protocol for back-to-back reads to two different slave devices who properly take turns driving the termination signals. This assumes a system using slave devices that drive termination signals.




*The EBI drives address and control signals an extra cycle because it uses a latched version of \overline{TA} (1 cycle delayed) to terminate the cycle. An external master is not required to do this.
 **This is the earliest that the EBI can start another transfer, in the case of continuing a set of small accesses. For all other cases, an extra cycle is needed before the EBI can start another \overline{TS} .

Figure 12-31. Termination Signals Protocol Timing Diagram

12.4.2.10 Bus Operation in External Master Mode

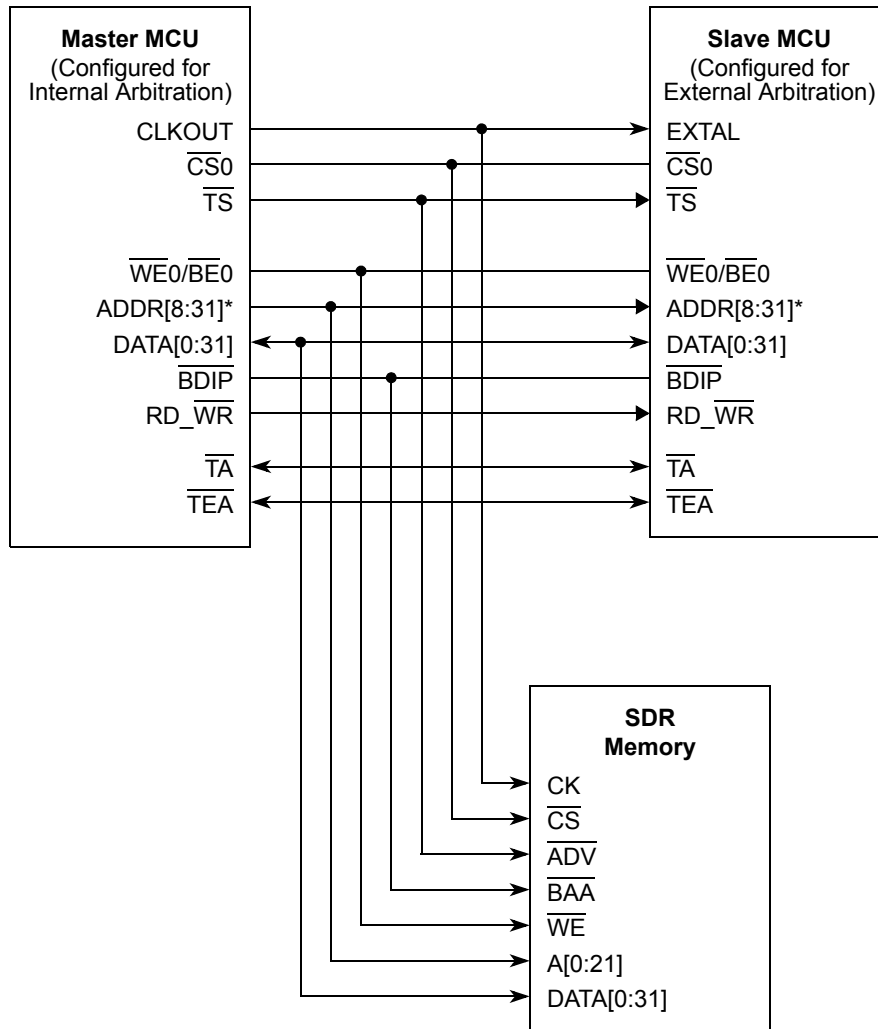External master mode enables an external master to access the internal address space of the MCU. Figure 12-32 shows how to connect an MCU to an external master (a second MCU) and a shared SDR memory to operate in external master mode.



* Only ADDR[8:29] are connected to the 32-bit SDR memory.

Figure 12-32. MCU Connected to External Master and SDR Memory

When the external master requires external bus accesses, it takes ownership on the external bus, and the direction of most of the bus signals is inverted, relative to its direction when the MCU owns the bus.

Most of the bidirectional signals shown in [Figure 12-32](#) are only driven by the EBI when the EBI owns the external bus. The only exceptions are the \overline{TA} and \overline{TEA} signals (described in [Section 12.4.2.9](#), “Termination Signals Protocol”) and the DATA bus, which are driven by the EBI for external master reads to internal address space. As long as the external master device follows the same protocol for driving signals as this EBI, there is no need to use the open drain mode of the pads configuration module for any EBI pins.

The PowerPC storage reservation protocol is not supported by the EBI. Coherency between multiple masters must be maintained via software techniques, such as event passing.

The EBI does not provide memory controller services to an external master that accesses shared external memories. Each master must properly configure its own memory controller and drive its own chip selects when sharing a memory between two masters.

The EBI does not support burst accesses from an external master; only single accesses of 8, 16, or 32 bits can be performed.¹

12.4.2.10.1 Address Decoding for External Master Accesses

The EBI allows external masters to access internal address space when the EBI is configured for external master mode. The external address is compared for any external master access, in order to determine if EBI operation is required. Because only 24 address bits are available on the external bus, special decoding logic is required to allow an external master to access on-chip locations whose upper 8 address bits are non-zero. This is done by using the upper 4 external address bits (ADDR[8:11]) as a code to determine whether the access is on-chip and if so, for which internal slave it is targeted.

NOTE

Even though the address bus has 26 bits available, only 24 bits are used for external master accesses. (But note that external master accesses are not supported to the Calibration bus.)

Below is the address compare sequence:

- External master access to another device — If ADDR[8] = 0, then the access is assumed to be to another device and is ignored by the EBI.
- External master access to valid internal slave — If ADDR[8] = 1, then ADDR[9:11] are checked versus a list of 3-bit codes to determine which internal slave to forward the access to. The upper 8 internal address bits are set appropriately by the EBI according to this 3-bit code, and internal address bits [8:11] are set appropriately to match the internal slave selected.
- External master access to invalid internal slave — If the 3-bit code does not match a valid internal slave, then the EBI responds with a bus error.

Table 12-21 shows the possible 3-bit codes that are associated with various slaves in the MCU, as well as the resulting upper 12 address bits required to appropriately match up with the memory map of each internal slave.

Table 12-21. EBI Internal Slave Address Decoding

Internal Slave	External ADDR[8:11] ¹	Internal Addr [0:7] ²	Internal Addr [8:11] ³
- (off-chip)	0b0xxx	—	—
Internal flash	0b10xx	0b0000_0000	0b00, ADDR[10:11]
	0b1100	0b0100_0000	0b0000
Reserved	0b1101	0b0110_0000	0b0000

1. Except for the special case of a 32-bit non-chip select access in 16-bit data bus mode. See Section 12.4.2.11, “Non-Chip-Select Burst in 16-bit Data Bus Mode”.

Table 12-21. EBI Internal Slave Address Decoding (continued)

Internal Slave	External ADDR[8:11] ¹	Internal Addr [0:7] ²	Internal Addr [8:11] ³
Bridge A Peripherals	0b1110	0b1100_0011	0b1111
Bridge B Peripherals	0b1111	0b1111_1111	0b1111

¹ Value on upper 4 bits of 24-bit external address bus ADDR[8:31]. ADDR[8] determines whether the access is on or off chip.

² Value on upper 8 bits of 32-bit internal address bus.

³ Value on bits 8:11 of 32-bit internal address bus.

12.4.2.10.2 Bus Transfers Initiated by an External Master

The external master gets ownership of the bus (see [Section 12.4.2.8, “Arbitration”](#)) and asserts \overline{TS} in order to initiate an external master access. The access is directed to the internal bus only if the input address matches to the internal address space. The access is terminated with either \overline{TA} or \overline{TEA} . If the access was successfully completed, the MCU asserts \overline{TA} , and the external master can proceed with another external master access, or relinquish the bus. If an address or data error was detected internally, the MCU asserts \overline{TEA} for one clock.

[Figure 12-33](#) and [Figure 12-34](#) illustrate the basic flow of read and write external master accesses.

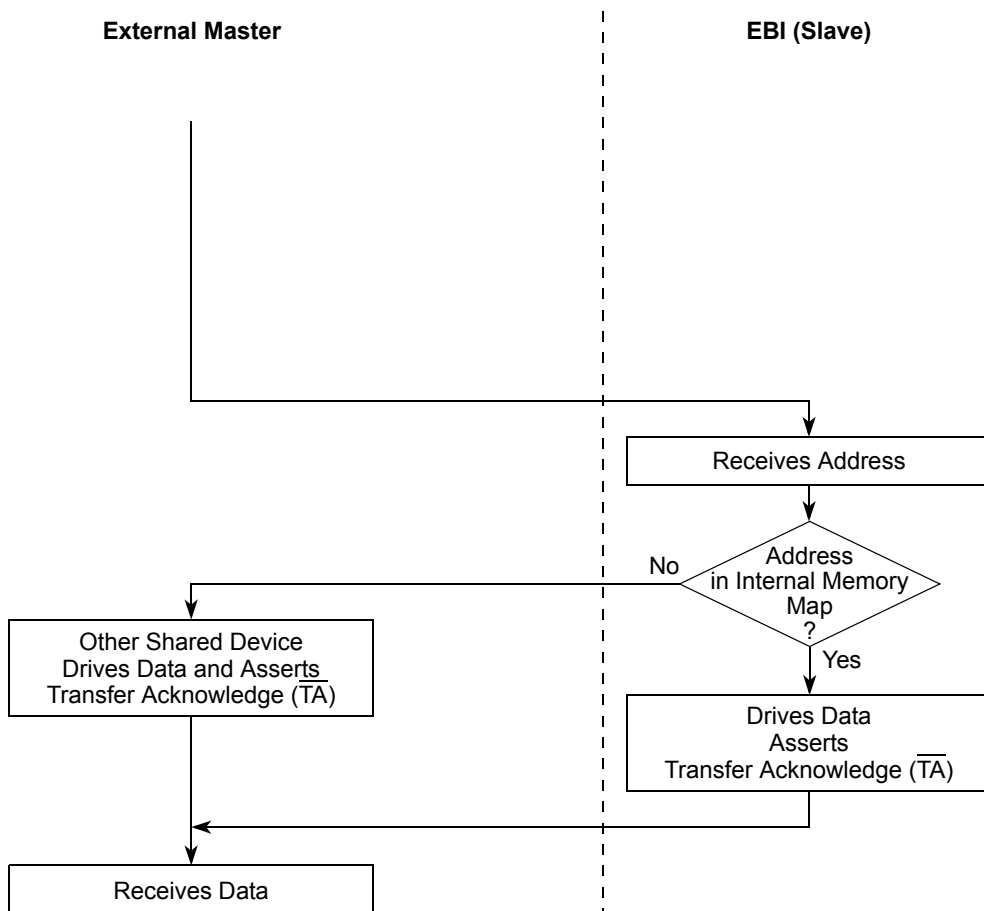


Figure 12-33. Basic Flow Diagram of an External Master Read Access (EARB=1)

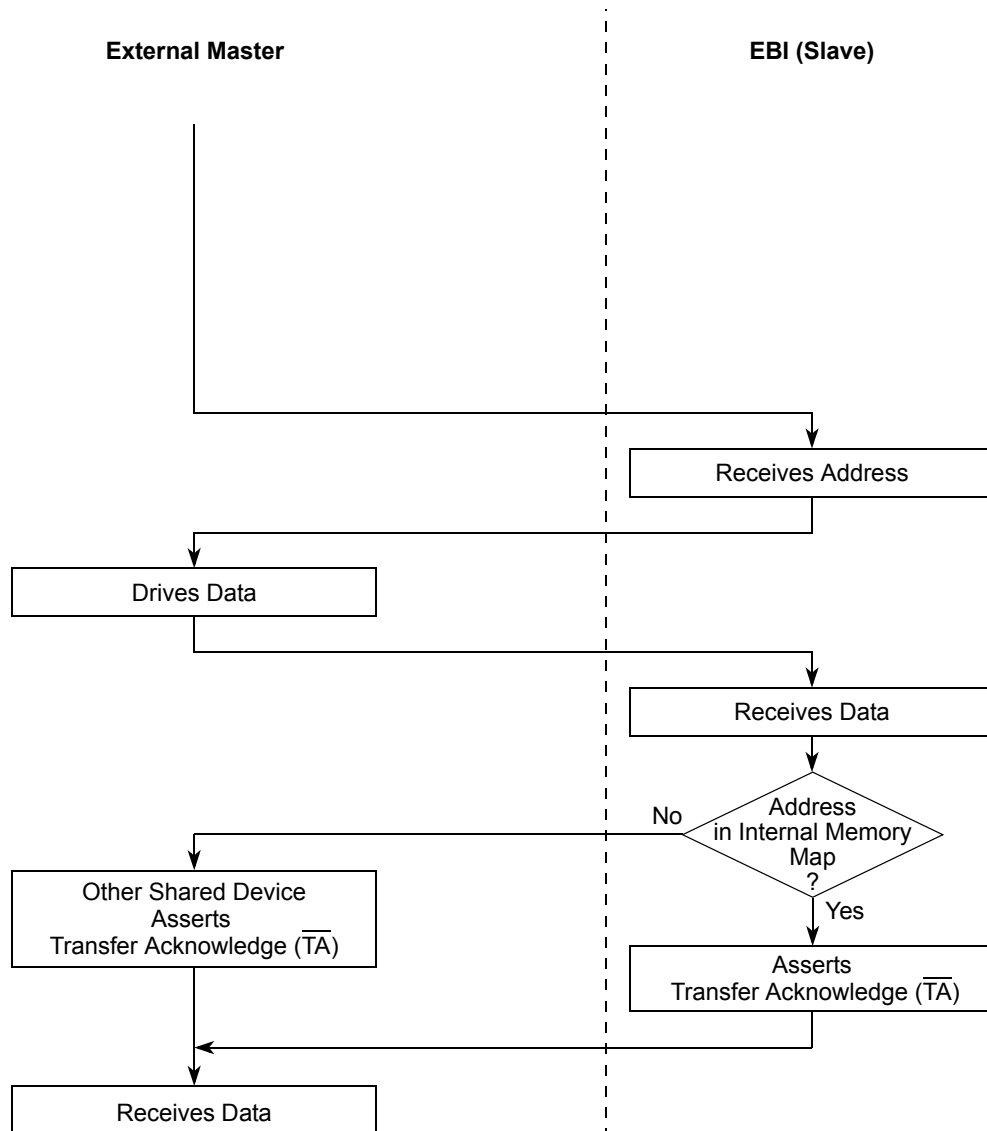


Figure 12-34. Basic Flow Diagram of an External Master Write Cycle (EARB=1)

Figure 12-35 and Figure 12-36 describe read and write cycles from an external master accessing internal space in the MCU. Note that the minimal latency for an external master access is 3 clock cycles. The actual latency of an external to internal cycle varies depending on which internal module is being accessed and how much internal bus traffic is going on at the time of the access.


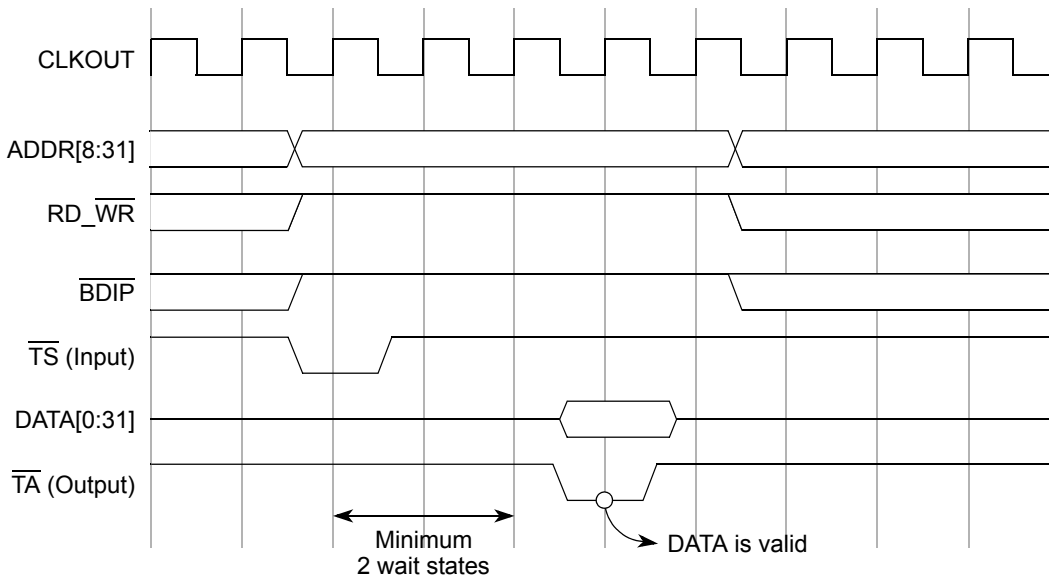


Figure 12-35. External Master Read from MCU

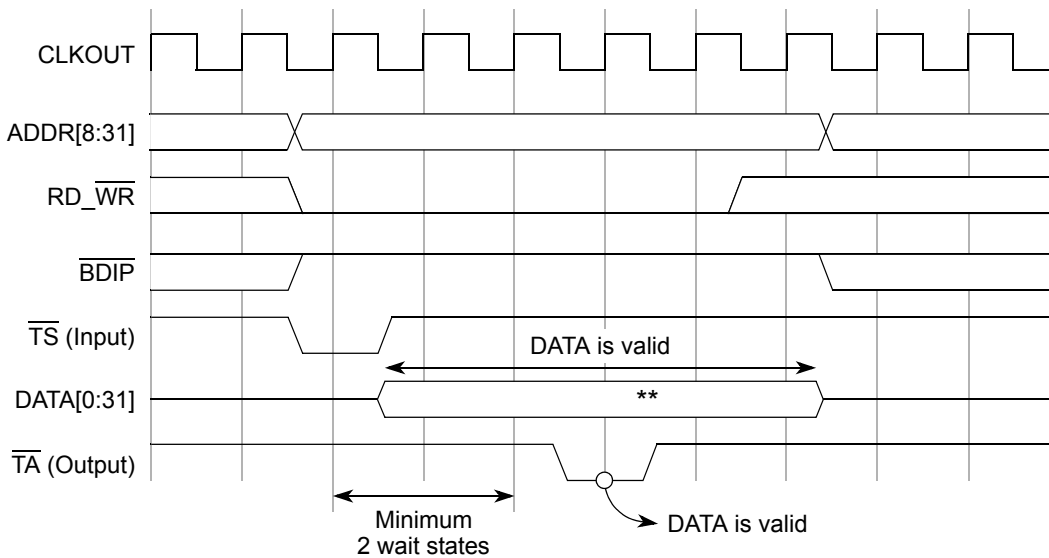

** If the external master is another MCU with this EBI, then **DATA** remains valid as shown due to use of latched **TA** internally. These extra data valid cycles (past **TA**) are not required by the slave EBI.

Figure 12-36. External Master Write to MCU

12.4.2.10.3 Bus Transfers Initiated by the EBI in External Master Mode

The flow and timing for EBI-mastered transactions in external master mode is identical to that described in earlier sections for single master mode. The flow and timing diagrams below show the basic single beat read case. The remaining cases (writes, bursts, etc.) can be observed in [Section 12.4.2.4, “Single Beat Transfer,”](#) and [Section 12.4.2.5, “Burst Transfer.”](#)

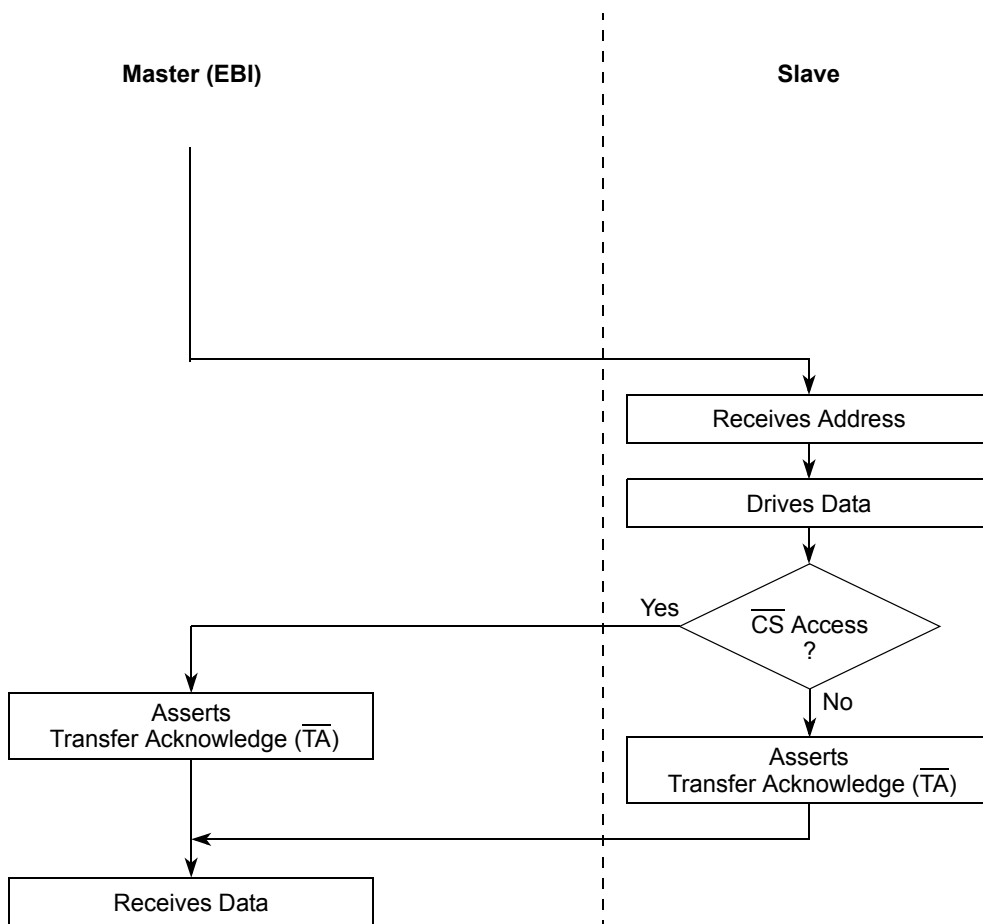


Figure 12-37. Basic Flow Diagram of an EBI Read Access in External Master Mode (EARB=0)

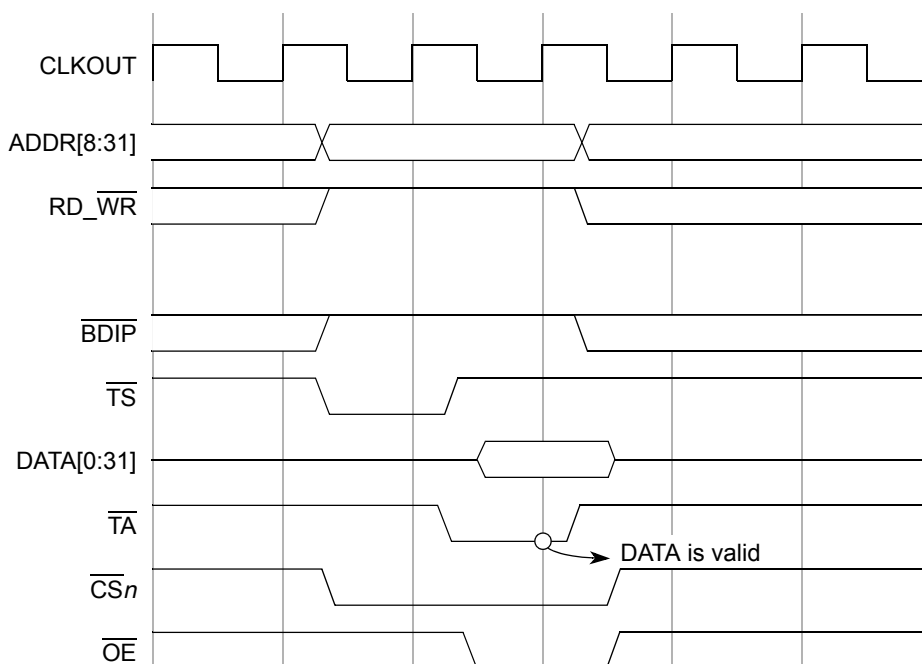


Figure 12-38. Single Beat \overline{CS} Read Cycle in External Master Mode, Zero Wait States

12.4.2.11 Non-Chip-Select Burst in 16-bit Data Bus Mode

The timing diagrams in this section apply only to the special case of a non-chip select 32-bit access in 16-bit data bus mode. They specify the behavior for both the EBI-master and EBI-slave, as the external master is expected to be another MCU with this EBI.

For this case, a special 2-beat burst protocol is used for reads and writes, so that the EBI-slave can internally generate one 32-bit read or write access (thus 32-bit coherent), as opposed to two separate 16-bit accesses.

Figure 12-39 shows a 32-bit read from an external master in 16-bit data bus mode.

Figure 12-40 shows a 32-bit write from an external master in 16-bit data bus mode.

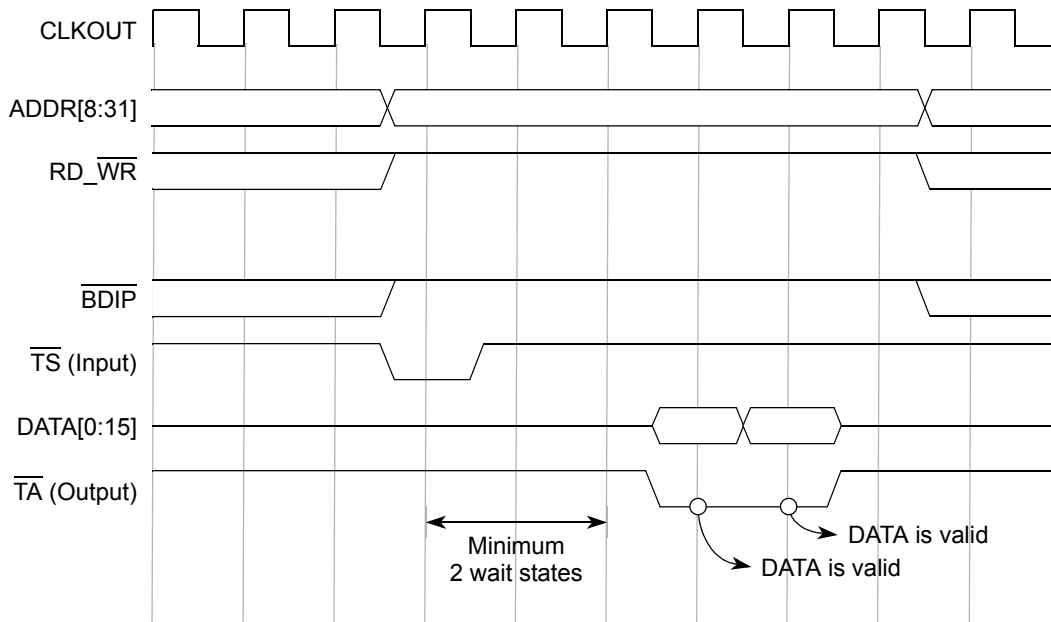


Figure 12-39. External Master 32-bit Read from MCU with DBM=1

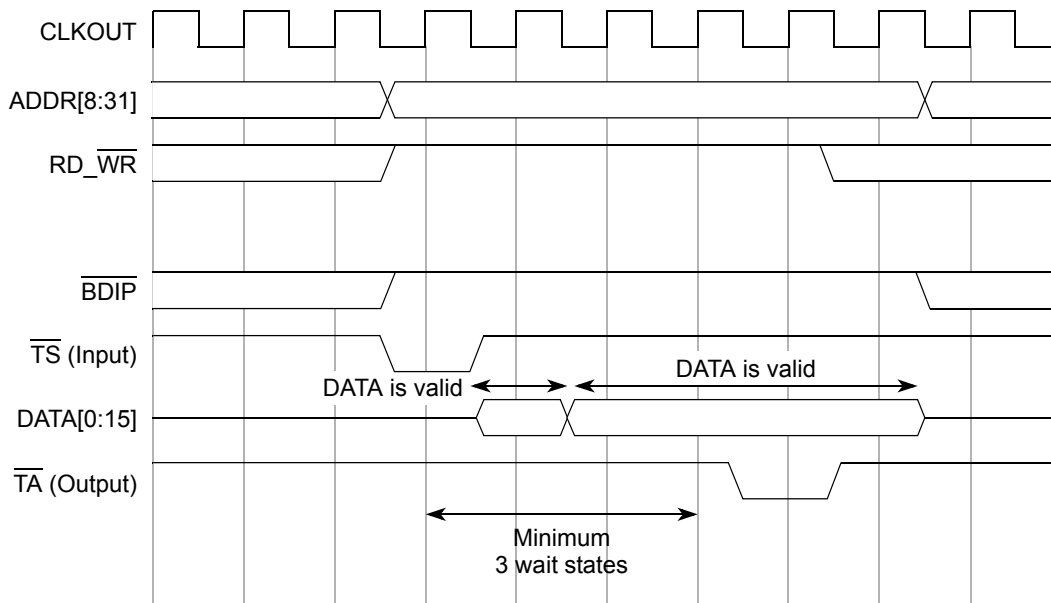


Figure 12-40. External Master 32-bit Write to MCU with DBM=1

12.4.2.12 Calibration Bus Operation

The EBI has a second external bus, intended for calibration use. This bus consists of a second set of the same signals present on the primary external bus, except that arbitration, (and optionally other signals also) are excluded. Both busses are supported by the EBI by using the calibration chip selects to steer accesses to the calibration bus instead of to the primary external bus.

Because the calibration bus has no arbitration signals, the arbitration on the primary bus controls accesses on the calibration bus as well, and no external master accesses can be performed on the calibration bus.

Accesses cannot be performed in parallel on both external busses. However, back-to-back accesses can switch from one bus to the other, as determined by the type of chip select each address matches.

The timing diagrams and protocol for the calibration bus is identical to the primary bus, except that some signals are not available on the calibration bus.

There is an inherent dead cycle between a calibration chip select access and a non-calibration access (chip select or non-chip select), just like the one between accesses to two different non-calibration chip selects (described in [Section 12.4.2.4.3, “Back-to-Back Accesses”](#)).

[Figure 12-41](#) shows an example of a non-calibration chip select read access followed by a calibration chip select read access. Note that this figure is identical to [Figure 12-18](#), except the \overline{CS}_y is replaced by $\overline{CAL_CS}_y$. Timing for other cases on the calibration bus can similarly be derived from other figures in this document (by replacing \overline{CS} with $\overline{CAL_CS}$).

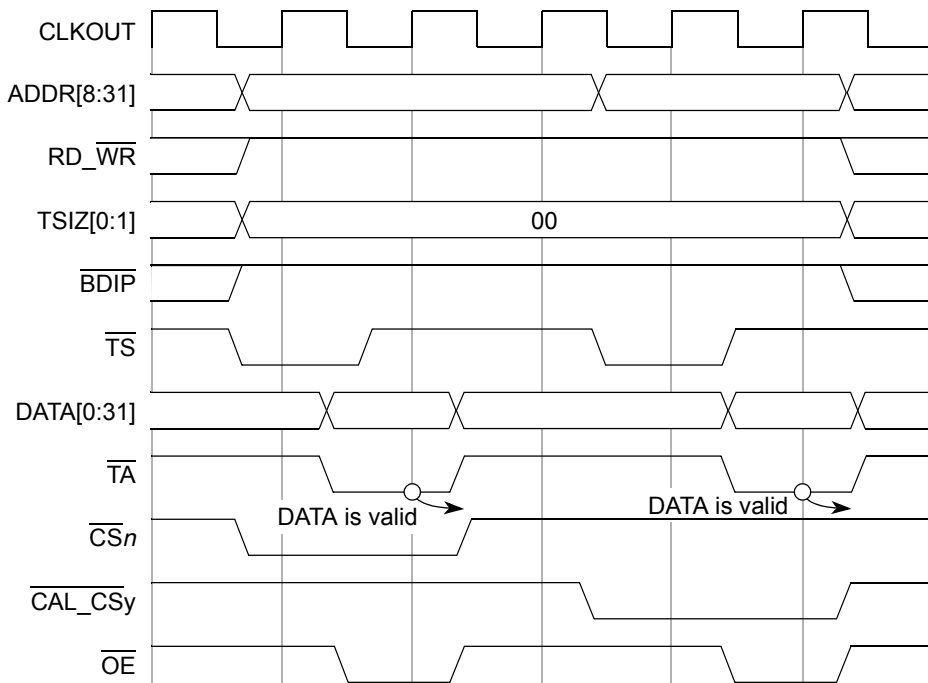


Figure 12-41. Back-to-Back 32-bit Reads to \overline{CS} , $\overline{CAL_CS}$ Banks

12.5 Initialization/Application Information

12.5.1 Booting from External Memory

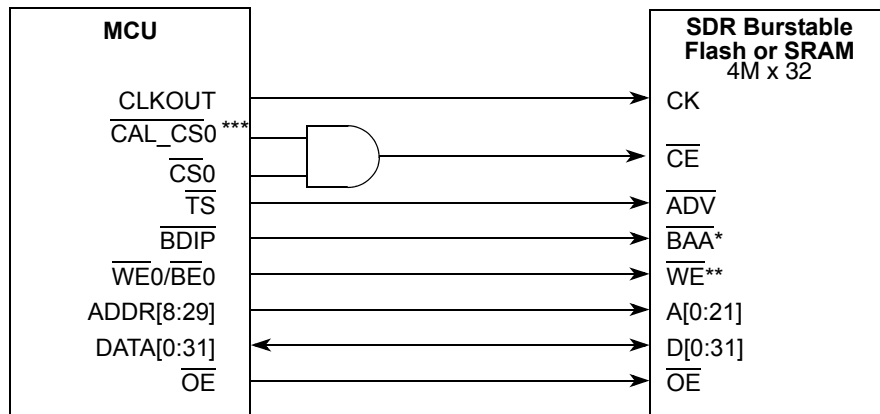
The EBI block does not support booting directly to external memory (i.e. fetching the first instruction after reset externally). The MCU uses an internal boot assist module, which executes after each reset. The BAM code performs basic configuration of the EBI block, allowing for external boot if desired. Refer to [Chapter 15, “Boot Assist Module \(BAM\),”](#) for detail information about the boot modes supported by the MCU; note that booting is not possible from external memory on the calibration bus.

If code in external memory needs to write EBI registers, this must be done in a way that avoids modifying EBI registers while external accesses are being performed, such as the following method:

- Copy the code that is doing the register writes (plus a return branch) to internal SRAM
- Branch to internal SRAM to run this code, ending with a branch back to external flash

12.5.2 Running with SDR (Single Data Rate) Burst Memories

This includes FLASH and external SRAM memories with a compatible burst interface. $\overline{\text{BDIP}}$ is required only for some SDR memories. Figure 12-39 shows a block diagram of an MCU connected to a 32-bit SDR burst memory.



* May or may not be connected, depending on the memory used.
 ** Flash memories typically use one WE signal as shown, RAMs use 2 or 4 (16-bit or 32-bit).
 *** Not available on all devices, refer to the Signals chapter

Figure 12-42. MCU Connected to SDR Burst Memory

Refer to Figure 12-22 for an example of the timing of a typical burst read operation to an SDR burst memory. Refer to Figure 12-14 for an example of the timing of a typical single write operation to SDR memory.

12.5.3 Running with Asynchronous Memories

The EBI also supports asynchronous memories. In this case, the CLKOUT, $\overline{\text{TS}}$, and $\overline{\text{BDIP}}$ pins are not used by the memory and bursting is not supported. However, the EBI still drives these outputs, and always drives and latches all signals at positive edge CLKOUT (i.e., there is no asynchronous mode for the EBI). The data timing is controlled by setting the SCY bits in the appropriate option register to the proper number of wait states to work with the access time of the asynchronous memory, just as done for a synchronous memory.

12.5.3.1 Example Wait State Calculation

This example applies to any chip select memory, synchronous or asynchronous.

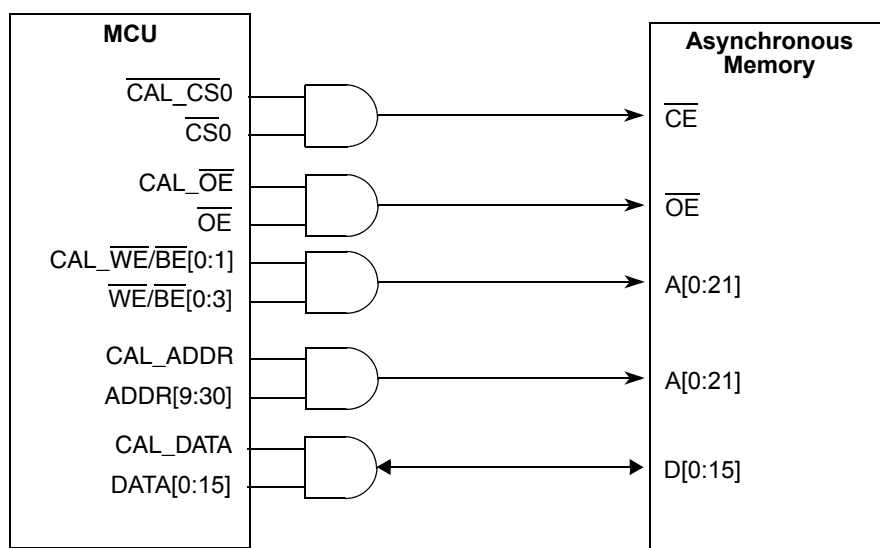
As an example, say we have a memory with 50ns access time, and we are running the external bus @66MHz (CLKOUT period: 15.2ns). Assume the input data spec for the MCU is 4ns.

Number of wait states = (access time) / (CLKOUT period) + (0 or 1) (depending on setup time)
 $50/15.2 = 3$ with 4.4ns remaining (so we need at least three wait states, now check setup time)
 $15.2 - 4.4 = 10.8\text{ns}$ (this is the achieved input data setup time)

Because actual input setup (10.8ns) is greater than the input setup spec (4.0ns), three wait states is sufficient. If the actual input setup was less than 4.0ns, we would have to use four wait states instead.

12.5.3.2 Timing and Connections for Asynchronous Memories

The connections to an asynchronous memory are the same as for a synchronous memory, except that the CLKOUT, $\overline{\text{TS}}$, and $\overline{\text{BDIP}}$ signals are not used. Figure 12-43 shows a block diagram of an MCU connected to an asynchronous memory.



* Flash memories typically use one $\overline{\text{WE}}$ signal as shown.

Note: On a 32-bit bus, RAM memories use all four $\overline{\text{WE}}/\text{BE}[0:3]$. On a 16-bit bus, one RAM memory uses $\overline{\text{WE}}/\text{BE}[0:1]$ and the other uses $\overline{\text{WE}}/\text{BE}[2:3]$.

Figure 12-43. MCU Connected to Asynchronous Memory

Figure 12-44 shows a timing diagram of a read operation to a 16-bit asynchronous memory using three wait states. Figure 12-45 shows a timing diagram of a write operation to a 16-bit asynchronous memory using three wait states.

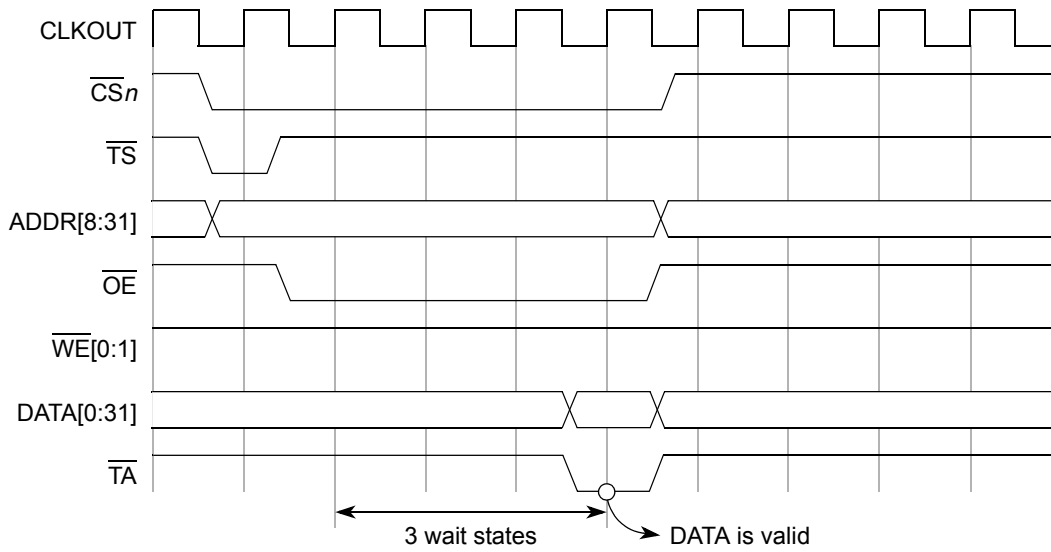


Figure 12-44. Read Operation to Asynchronous Memory, Three Initial Wait States


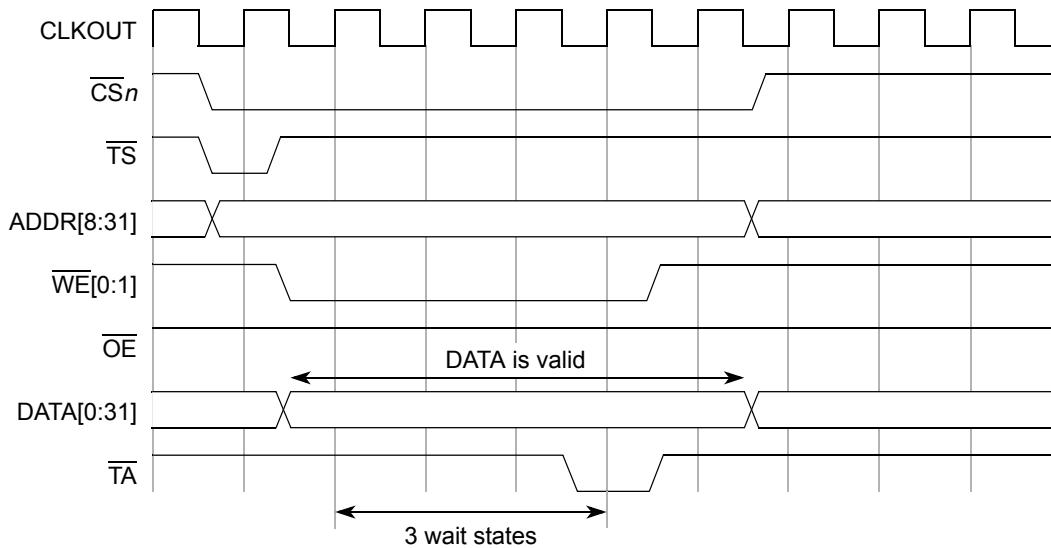


Figure 12-45. Write Operation to Asynchronous Memory, Three Initial Wait States

12.5.4 Connecting an MCU to Multiple Memories

The MCU can be connected to more than one memory at a time.

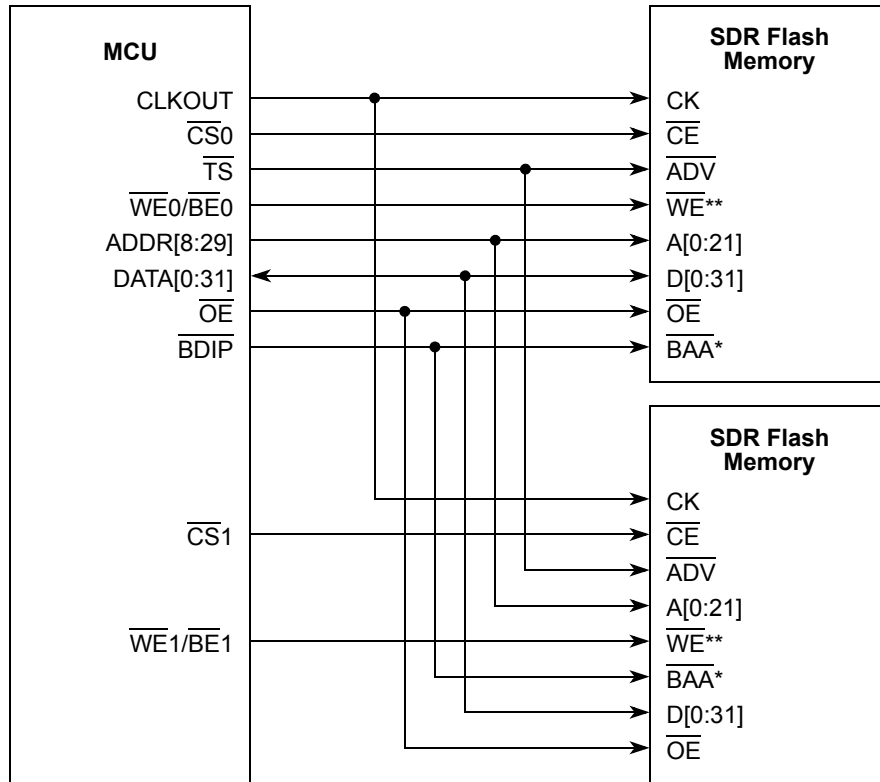Figure 12-46 shows an example of how two memories could be connected to one MCU.



* May or may not be connected, depending on the memory used.
 ** Flash memories typically use one \overline{WE} signal as shown.

Note: On a 32-bit bus, RAM memories use all four $\overline{WE}/BE[0:3]$. On a 16-bit bus, one RAM memory uses $\overline{WE}/BE[0:1]$ and the other uses $\overline{WE}/BE[2:3]$.

Figure 12-46. MCU Connected to Multiple Flash Memories

12.5.5 Dual-MCU Operation with Reduced Pinout MCUs (MPC5567)

Some MCUs (such as the MPC5567) with this EBI may not have all the pins described in this document pinned out for a particular package. Some of the most common pins to be removed are DATA[16:31], arbitration pins (\overline{BB} , \overline{BG} , \overline{BR}), \overline{TEA} , and TSIZ[0:1]. This section describes how to configure dual-MCU systems for each of these scenarios. More than one section may apply if the applicable pins are not present on one or both MCUs.

12.5.5.1 Connecting 16-bit MCU to 32-bit MCU (Master/Master or Master/Slave)

This scenario is straightforward. Simply connect DATA[0:15] between both MCUs, and configure both for 16-bit data bus mode operation (DBM=1 in EBI_MCR). Note that 32-bit external memories are not supported in this scenario.

12.5.5.2 Arbitration with No Arb Pins (Master/Slave only)

Without arbitration pins, a dual-master system is impossible, because there is no way for the two masters to take turns driving the external bus without conflicts. However, a master/slave system is possible, as described below.

To implement a master/slave system with an MCU that has no arbitration pins (for example, in the MPC5567 that has no \overline{BB} , \overline{BG} , \overline{BR}), the user must configure the master MCU for internal arbitration (EARB=0 in EBI_MCR) and the slave MCU for external arbitration (EARB=1). Internally on an MCU with no arbitration pins, the external signals to the EBI will be tied negated. This means that the slave MCU will never receive bus grant asserted, so it will never attempt to start an access on the external bus. The master MCU will never receive bus request or bus busy asserted, so it will maintain ownership of the bus without any arbitration delays. In the erroneous case that the slave MCU executes internal code that attempts to access external address space, that access will never get external and will eventually time-out in the slave MCU.

12.5.5.3 Transfer Size with No TSIZ Pins (Master/Master or Master/Slave)

Because reduced pinout MCUs have no TSIZ pins to communicate transfer size from master MCU to slave MCU, the internal SIZE field of the EBI_MCR must be used on the slave MCU (by setting SIZEN=1 in slave's EBI_MCR). Anytime the master MCU needs to read or write the slave MCU with a different transfer size than the current value of the slave's SIZE field, the master MCU must first write the slave's SIZE field with the correct size for the subsequent transaction.

12.5.5.4 No Transfer Acknowledge (\overline{TA}) Pin

If an MCU has no \overline{TA} pin available, this restricts the MCU to chip select accesses only. Non-chip select accesses have no way for the EBI to know which cycle to latch the data. The EBI has no built-in protection to prevent non-chip select accesses in this scenario; it is up to the user to make certain they set up chip selects and external memories correctly to ensure all external accesses fall in a valid chip select region.

12.5.5.5 No Transfer Error (\overline{TEA}) Pin

If an MCU has no \overline{TEA} pin available, this eliminates the feature of terminating an access with \overline{TEA} . This means if an access times out in the EBI bus monitor, the EBI (master) will still terminate the access early, but there will be no external visibility of this termination, so the slave device might end up driving data much later, when a subsequent access is already underway. Therefore, the EBI bus monitor should be disabled when no \overline{TEA} pin exists.

12.5.5.6 No Burst Data in Progress ($\overline{\text{BDIP}}$) Pin

If an MCU has no $\overline{\text{BDIP}}$ pin available, this eliminates burst support only if the burstable memory being used requires $\overline{\text{BDIP}}$ to burst. Many external memories use a self-timed configurable burst mechanism that does not require a dynamic burst indicator. Check the applicable external memory specification to see if $\overline{\text{BDIP}}$ is required in your system.

12.5.6 Summary of Differences from MPC5xx

Below is a summary list of the significant differences between this EBI used in the MPC5xxx and that of the MPC5xx parts:

- SETA feature is no longer available
 - Chip select devices cannot use external $\overline{\text{TA}}$, instead must use wait state configuration.
- No memory controller support for external masters
 - Must configure each master in multi-master system to drive its own chip selects
- Changes in bit fields:
 - Removed these variable timing attributes from option register: CSNT, ACS, TRLX, EHTR
 - Removed LBDIP base register bit, now late $\overline{\text{BDIP}}$ assertion is default behavior
 - Modified TSIZ[0:1] functionality to only indicate size of current transfer, not give information on ensuing transfers that may be part of the same atomic sequence
 - The BL field of the base register has inverted logic from the MPC56x devices (0 = 8-beat burst on the MPC5xxx, 1 = 8-beat burst on the MPC56x)
- Removed reservation support on external bus
- Removed address type (AT), write-protect (WP), and dual-mapping features because these functions can be replicated by memory management unit (MMU) in e200z6 core
- Removed support for 8-bit ports
- Removed boot chip select operation
 - On-chip boot assist module (BAM) handles boot (and configuration of EBI registers)
- Open drain mode and pull-up resistors no longer required for multi-master systems, extra cycle needed to switch between masters
- Modified arbitration protocol to require extra cycles when switching between masters
- Added support for 32-bit coherent read and write non-chip select accesses in 16-bit data bus mode
- Misaligned accesses are not supported
- Calibration features implemented by three calibration chip selects
- Removed support for 3-master systems
- Address decoding for external master accesses uses 4-bit code to determine internal slave instead of straight address decode

12.6 Document Revision History

Table 12-22. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release



Chapter 13

Flash Memory

13.1 Introduction

This section provides information about the Flash bus interface unit (FBIU) and the Flash memory block.

13.1.1 Block Diagram

Figure 13-1 shows a block diagram of the Flash memory module. The FBIU is addressed through the system bus while the Flash control and status registers are addressed through the slave (peripheral) bus.

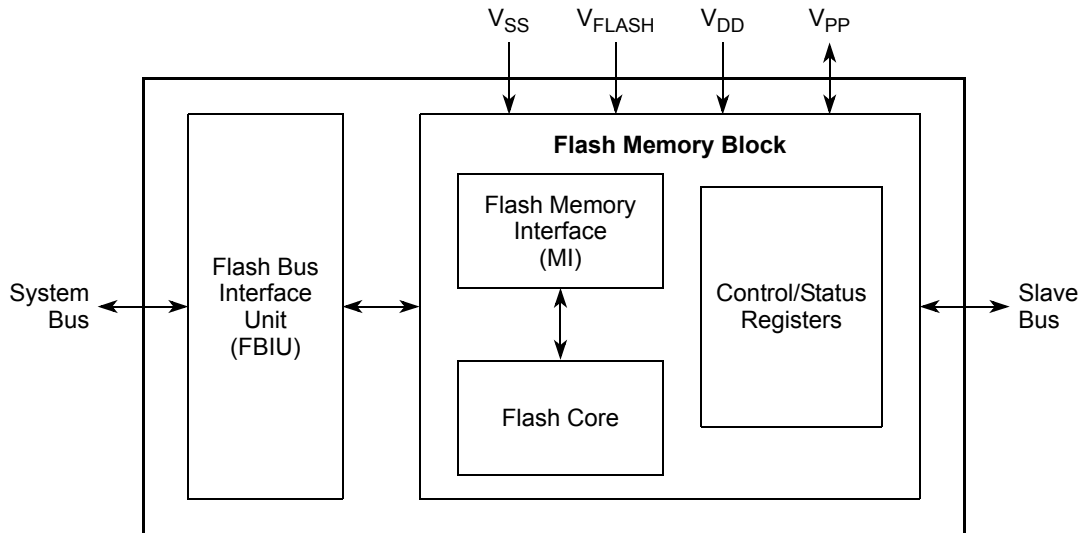


Figure 13-1. Flash System Block Diagram

13.1.2 Overview

The Flash module serves as electrically programmable and erasable non-volatile memory (NVM) that is ideal for program and data storage for single-chip applications allowing for field reprogramming without requiring external programming voltage sources. The module is a solid-state silicon memory device consisting of blocks of single-transistor storage elements.

The device Flash contains a Flash bus interface unit (FBIU) and a Flash memory array. The Flash BIU interfaces the system bus to a dedicated Flash memory array controller. The FBIU supports a 64-bit data bus width at the system bus port, and a 256-bit read data interface from the Flash memory array. If enabled, the Flash BIU contains a two-entry prefetch buffer, each entry containing 256 bits of data, and an associated controller that prefetches sequential lines of data from the Flash array into the buffer. Prefetch

buffer hits support zero-wait responses. Normal Flash array accesses (i.e. those accesses that do not hit in the prefetch buffers) are registered in the FBIU and are forwarded to the system bus on the following cycle, incurring at least three wait states (depending on the frequency), with additional wait states being determined by FLASH_BUICR[RWSC] (see Table 13-14).

Prefetch operations can be automatically controlled, and can be restricted to servicing a single bus master. Prefetches can also be restricted to being triggered for instruction or data accesses.

The Flash memory block is arranged as two functional units, the first being the Flash core. The Flash core is composed of arrayed non-volatile storage elements, sense amplifiers, row selects, column selects, charge pumps, ECC logic and redundancy logic. The arrayed storage elements in the Flash core are subdivided into physically separate units referred to as blocks.

The second functional unit of Flash memory is the memory interface (MI). The MI contains the registers and logic that control the operation of the Flash core. The MI is also the interface between the Flash module and the FBIU. The FBIU connects the MCU system bus to the Flash module, and provides all system level customization and configuration functionality.

The Flash array has three address spaces. Low address space (LAS) is 256-Kbytes in size. Mid address space (MAS) is also 256-Kbytes in size. High address space (HAS) is 1.5 Mbytes in size. Total address space is 2.0 MBytes.

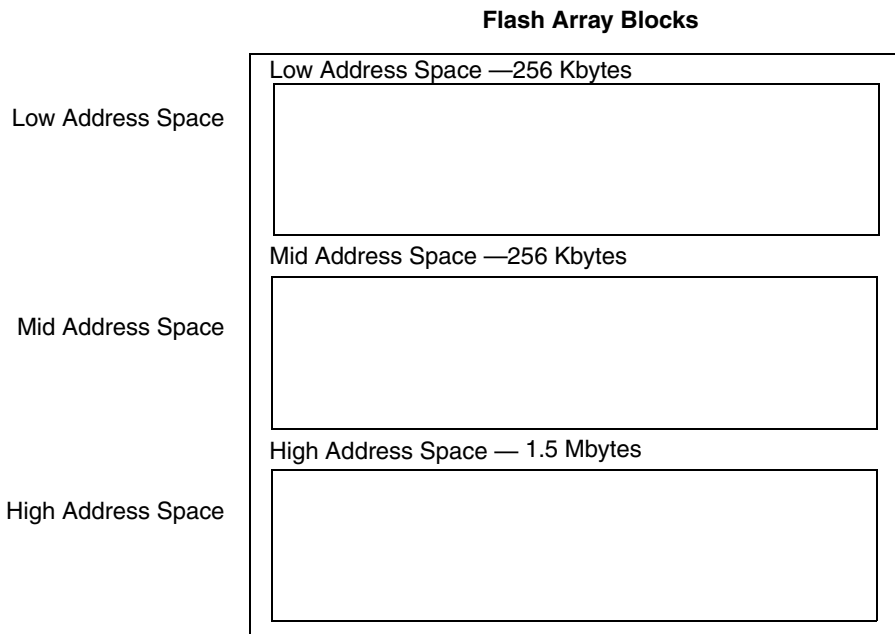


Figure 13-2. Flash Array Diagram

13.1.3 Features

The following list summarizes the key features of the FBIU:

- The FBIU system bus interface supports a 64-bit data bus. Byte, halfword, word, and doubleword reads are supported. Only aligned word and double-word writes are supported.
- The FBIU provides configurable read buffering and line prefetch support. Two line read buffers (each 256 bits wide) and a prefetch controller are used to support single-cycle read responses for hits in the buffers.
- The FBIU provides hardware and software configurable read and write access protections on a per-master basis.
- The FBIU interface to the Flash array controller is pipelined with a depth of 1.
- The FBIU allows configurable access timing.
- The FBIU provides multiple-mapping support and mapping-based block access timing (0–31 additional cycles) allowing use for emulation of other memory types.

The Flash memory array has the following features:

- Software programmable block program/erase restriction control for low, mid, and high address spaces.
- Erase of selected blocks.
- ECC with single-bit correction, double-bit detection.
- Page program of 1 to consecutive 32-bit words within a page (recommended minimum is 2 words due to ECC).
- Embedded hardware program and erase algorithm.
- Read while write with multiple partitions.
- Stop mode for low power stand-by.
- Erase suspend, program suspend, and erase-suspended program.
- Automotive Flash that meets automotive endurance and reliability requirements. Shadow information is stored in a non-volatile shadow block.
- Independent program/erase of the shadow block.

13.1.4 Modes of Operation

13.1.4.1 User Mode

User mode is the default operating mode of the Flash memory block. In this mode, it is possible to read, write, program, and erase the Flash. Refer to [Section 13.4.2, “Flash Memory Array: User Mode.”](#)

13.1.4.2 Stop Mode

In stop mode ($\text{FLASH_MCR}[\text{STOP}] = 1$), all DC current sources in the Flash are disabled. Refer to [Section 13.4.3, “Flash Memory Array: Stop Mode.”](#)

13.2 External Signal Description

Table 13-1 shows a list of signals required for Flash.

Table 13-1. Signal Properties

Name	Function	Reset State
V _{FLASH}	Flash read power supply	NA
V _{PP}	Flash program/erase power supply	NA

13.2.1 Voltage for Flash Only (V_{FLASH})

V_{FLASH} is a supply required for reads of the Flash core. This voltage is specified as 3.3V with a tolerance of ± 0.3V.

13.2.2 Program and Erase Voltage for Flash Only (V_{PP})

V_{PP} is a supply required for program and erase of the Flash core. This voltage is specified as 5V with a tolerance of -0.5V/+0.25V during program and erase operations. V_{PP} is required at all times, even during normal reads of Flash memory. During read operations, V_{PP} can be as high as 5.3V and as low as 3.0V.

13.3 Memory Map/Register Description

The Flash BIU occupies a 512-Mbyte portion of the address space. The actual Flash array is multiply-mapped within this space.

The MCU's internal Flash has a feature that allows the internal flash timing to be modified to emulate an external memory, hence the name, external emulation mode. The upper 5 address lines are used to provide additional timing control that allows the FBIU response timing on the system bus (which must be controlled in order to provide for timing emulation of alternate memory types). Refer to [Figure 13-3](#).

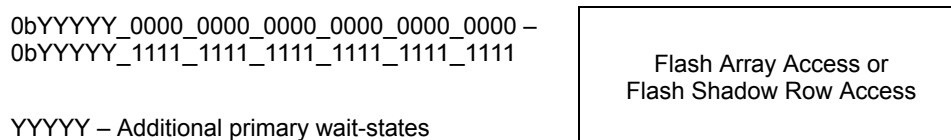


Figure 13-3. Flash BIU Address Scheme

This feature allows calibration parameters to be tested using an external memory; and then in production, the internal flash access timing is modified to match timing of the external memory. The access time of the internal flash is lengthened based on the address range being accessed. To access an area with a slower access time, the address is modified per [Table 13-2](#).

Table 13-2. Internal Flash External Emulation Mode

Address Range		YYYYY	Wait States
0x0000_0000	0x001F_FFFF	00000	0
0x0100_0000	0x011F_FFFF	01000	8

Table 13-2. Internal Flash External Emulation Mode (continued)

Address Range		YYYYY	Wait States
0x0200_0000	0x021F_FFFF	10000	16
0x0300_0000	0x031F_FFFF	11000	24
0x0400_0000	0x041F_FFFF	00001	1
0x0500_0000	0x051F_FFFF	01001	9
0x0600_0000	0x061F_FFFF	10001	17
0x0700_0000	0x071F_FFFF	11001	25
0x0800_0000	0x081F_FFFF	00010	2
0x0900_0000	0x091F_FFFF	01010	10
0x0A00_0000	0x0A1F_FFFF	10010	18
0x0B00_0000	0x0B1F_FFFF	11010	26
0x0C00_0000	0x0C1F_FFFF	00011	3
0x0D00_0000	0x0D1F_FFFF	01011	11
0x0E00_0000	0x0E1F_FFFF	10011	19
0x0F00_0000	0x0F1F_FFFF	11011	27
0x1000_0000	0x101F_FFFF	00100	4
0x1100_0000	0x111F_FFFF	01100	12
0x1200_0000	0x121F_FFFF	10100	20
0x1300_0000	0x131F_FFFF	11100	28
0x1400_0000	0x141F_FFFF	00101	5
0x1500_0000	0x151F_FFFF	01101	13
0x1600_0000	0x161F_FFFF	10101	21
0x1700_0000	0x171F_FFFF	11101	29
0x1800_0000	0x181F_FFFF	00110	6
0x1900_0000	0x191F_FFFF	01110	14
0x1A00_0000	0x1A1F_FFFF	10110	22
0x1B00_0000	0x1B1F_FFFF	11110	30
0x1C00_0000	0x1C1F_FFFF	00111	7
0x1D00_0000	0x1D1F_FFFF	01111	15
0x1E00_0000	0x1E1F_FFFF	10111	23
0x1F00_0000	0x1F1F_FFFF	11111	31

13.3.1 Flash Memory Map

Table 13-3 shows the Flash array memory map and how it is mapped assuming byte addressing.

Base addresses for the device are the following:

- Shadow base address = 0x00FF_FC00
- Array base address = 0x0000_0000
- Control registers base address = 0xC3F8_8000

Table 13-3. Module Flash Array Memory Map

Byte Address	Type and Amount of Space Used	Access
Shadow base + 0x00_0000 to Shadow base + 0x00_03FF	Shadow block space (1024 Bytes)	User
Array Base + 0x00_0000 to Array Base + 0x03_FFFF	Low address space (256 Kbytes)	User
Array Base + 0x04_0000 to Array Base + 0x07_FFFF	Mid address space (256 Kbytes)	User
Array Base + 0x08_0000 to Array Base + 0x1F_FFFF	High address space (1.5 Mbytes)	User

Table 13-4 shows how the array is partitioned into three address spaces — low, mid, and high — and into partitions and blocks.

Table 13-4. Flash Partitions

Address	Use	Block	Size	Partition
Array Base + 0x00_0000	Low Address Space	L0	16K	1
Array Base + 0x00_4000		L1	48K	
Array Base + 0x01_0000		L2	48K	
Array Base + 0x01_C000		L3	16K	
Array Base + 0x02_0000		L4	64K	
Array Base + 0x03_0000	L5	64K		
Array Base + 0x04_0000	Mid Address Space	M0	128K	3
Array Base + 0x06_0000		M1	128K	

Table 13-4. Flash Partitions (continued)

Address	Use	Block	Size	Partition
Array Base + 0x08_0000	High Address Space	H0	128K	4
Array Base + 0x0A_0000		H1	128K	
Array Base + 0x0C_0000		H2	128K	5
Array Base + 0x0E_0000		H3	128K	
Array Base + 0x10_0000		H4	128K	6
Array Base + 0x12_0000		H5	128K	
Array Base + 0x14_0000		H6	128K	7
Array Base + 0x16_0000		H7	128K	
Array Base + 0x18_0000		H8	128K	8
Array Base + 0x1A_0000		H9	128K	
Array Base + 0x1C_0000		H10	128K	9
Array Base + 0x1E_0000		H11	128K	
Array Base + 0xFF_FC00	Shadow block space	S	472	All ¹
Array Base + 0xFF_FDD8	Flash shadow row, serial passcode		8	
Array Base + 0xFF_FDE0	Flash shadow row, control word		4	
Array Base + 0xFF_FDE4	For general use		4	
Array Base + 0xFF_FDE8	Flash shadow row, FLASH_LMLR reset configuration		4	
Array Base + 0xFF_FDEC	For general use		4	
Array Base + 0xFF_FDF0	Flash shadow row, FLASH_HLR reset configuration		4	
Array Base + 0xFF_FDF4	For general use		4	
Array Base + 0xFF_FDF8	Flash Shadow Row, FLASH_SLMLR reset configuration		4	
Array Base + 0xFF_FDFC – 0xFF_FFFF	For general use		516	

¹ The shadow row does not support RWW. See [Section 13.4.2.5, “Flash Shadow Block.”](#)

Table 13-5 shows the register set for the Flash module.

Table 13-5. Module Register Memory Map

Byte Address	Register Name	Register Description	Size (bits)
Register Base + 0x00	FLASH_MCR	Module configuration register	32
Register Base + 0x04	FLASH_LMLR	Low/mid address space block locking register	32

Table 13-5. Module Register Memory Map (continued)

Byte Address	Register Name	Register Description	Size (bits)
Register Base + 0x08	FLASH_HLR	High address space block locking register	32
Register Base + 0x0C	FLASH_SLMLR	Secondary low/mid address space block locking register	32
Register Base + 0x10	FLASH_LMSR	Low/mid address space block select register	32
Register Base + 0x14	FLASH_HSR	High address space block select register	32
Register Base + 0x18	FLASH_AR	Address register	32
Register Base + 0x1C	FLASH_BIUCR	Flash bus interface unit control register	32
Register Base + 0x20	FLASH_BIUAPR	Flash bus interface unit access protection register	32
Register Base + 0x30 to Register Base + 0x7FFF	—	Reserved	—

13.3.2 Register Descriptions

The Flash registers are detailed in the following sections.

13.3.2.1 Module Configuration Register (FLASH_MCR)

A number of module configuration register (FLASH_MCR) bits are protected from a write while another bit or set of bits are in a specific state. These locks are discussed in relationship to each bit in this section. Simultaneously writing bits which lock each other out is discussed in [Section 13.3.2.1.1, “MCR Simultaneous Register Writes.”](#) The MCR is always available to be read except when the Flash module is disabled.

Address: Base (0xC3F8_8000) + 0x0000

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
R	0	0	0	0	SIZE				0	LAS			0	0	0	MAS	
W																	
Reset	0	0	0	0	0	1	1	1	1	1	0	0	0	0	0	0	
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
R	EER	RWE	1	1	PEAS	DONE	PEG	0	0	STOP		0	PGM	PSUS	ERS	ESUS	EHV
W	w1c	w1c															
Reset	0	0	1	1	0	1	1	0	0	0	0	0	0	0	0	0	0

Figure 13-4. Module Configuration Register (FLASH_MCR)

Table 13-6. FLASH_MCR Field Descriptions

Field	Description
0–3	Reserved.

Table 13-6. FLASH_MCR Field Descriptions (continued)

Field	Description
4–7 SIZE[0:3]	Array space size. Dependent upon the size of the Flash module. SIZE is read only. 0111 Total array size is 2 Mbytes
8	Reserved.
9–11 LAS[0:2]	Low address space. Corresponds to the configuration of the low address space. All possible values of LAS and the configuration to which each value corresponds are shown below. LAS is read only. 110 The LAS value of 110 provides two 16-Kbyte blocks, two 48-Kbyte blocks, and two 64-Kbyte blocks.
12–14	Reserved.
15 MAS	Mid address space size. Corresponds to the configuration of the mid address space. MAS is read only. 0 Two 128-Kbyte blocks are available
16 EER	ECC event error. Provides information on previous reads; if a double bit detection occurred, the EER bit will be set to a 1. This bit must then be cleared, or a reset must occur before this bit will return to a 0 state. This bit may not be set by the user. In the event of a single bit detection and correction, this bit will not be set. If EER is not set, or remains 0, this indicates that all previous reads (from the last reset, or clearing of EER) were correct. Since this bit is an error flag, it must be cleared to a 0 by writing a 1 to the register location. A write of 0 will have no effect. 0 Reads are occurring normally. 1 An ECC Error occurred during a previous read. Note: This bit can be set on speculative prefetches that cause double bit error detection. Therefore one should use the ECSM[FNCE] flag for detecting non-correctable ECC errors in the Flash instead of using FLASH_MCR[EER].
17 RWE	Read while write event error. Provides information on previous RWW reads. If a read while write error occurs, this bit will be set to 1. This bit must then be cleared, or a reset must occur before this bit will return to a 0 state. This bit may not be written to a 1 by the user. If RWE is not set, or remains 0, this indicates that all previous RWW reads (from the last reset, or clearing of RWE) were correct. Since this bit is an error flag, it must be cleared to a 0 by writing a 1 to the register location. A write of 0 will have no effect. 0 Reads are occurring normally. 1 A read while write error occurred during a previous read.
18–19	Reserved.
20 PEAS	Program/erase access space. Indicates which space is valid for program and erase operations, either main array space or shadow space. PEAS is read only. 0 Shadow address space is disabled for program/erase and main address space enabled 1 Shadow address space is enabled for program/erase and main address space disabled.
21 DONE	State machine status. Indicates if the Flash module is performing a high voltage operation. DONE is set to a 1 on termination of the Flash module reset and at the end of program and erase high voltage sequences. 0 Flash is executing a high voltage operation. 1 Flash is not executing a high voltage operation.

Table 13-6. FLASH_MCR Field Descriptions (continued)

Field	Description
22 PEG	<p>Program/erase good. Indicates the completion status of the last Flash program or erase sequence for which high voltage operations were initiated. The value of PEG is updated automatically during the program and erase high voltage operations. Aborting a program/erase high voltage operation will cause PEG to be cleared, indicating the sequence failed. PEG is set to a 1 when the module is reset. PEG is read only.</p> <p>The value of PEG is valid only when PGM = 1 and/or ERS = 1 and after DONE has transitioned from 0 to 1 due to an abort or the completion of a program/erase operation. PEG is valid until PGM/ERS makes a 1 to 0 transition or EHV makes a 0 to 1 transition. The value in PEG is not valid after a 0 to 1 transition of DONE caused by PSUS or ESUS being set to logic 1. A diagram presenting PEG valid times is presented in Figure 13-5. If PGM and ERS are both 1 when DONE makes a qualifying 0 to 1 transition the value of PEG indicates the completion status of the PGM sequence. This happens in an erase-suspended program operation.</p> <p>0 Program or erase operation failed. 1 Program or erase operation successful.</p>
23–24	Reserved.
25 STOP	<p>Stop mode enabled. Puts the Flash into stop mode. Changing the value in STOP from a 0 to a 1 places the Flash module in stop mode. A 1 to 0 transition of STOP returns the Flash module to normal operation. STOP may be written only when PGM and ERS are low. When STOP = 1, only the STOP bit in the MCR can be written. In STOP mode all address spaces, registers, and register bits are deactivated except for the FLASH_MCR[STOP] bit.</p> <p>0 Flash is not in stop mode; the read state is active. 1 Flash is in stop mode.</p>
26	Reserved.
27 PGM	<p>Program. Used to set up Flash for a program operation. A 0 to 1 transition of PGM initiates an Flash program sequence. A 1 to 0 transition of PGM ends the program sequence. PGM can be set only under one of the following conditions:</p> <ul style="list-style-type: none"> • User mode read (STOP and ERS are low). • Erase suspend¹ (ERS and ESUS are 1) with EHV low. <p>PGM can be cleared by the user only when EHV are low and DONE is high. PGM is cleared on reset.</p> <p>0 Flash is not executing a program sequence. 1 Flash is executing a program sequence.</p>
28 PSUS	<p>Program suspend. Indicates the Flash module is in program suspend or in the process of entering a suspend state. The Flash module is in program suspend when PSUS = 1 and DONE = 1. PSUS can be set high only when PGM and EHV are high. A 0 to 1 transition of PSUS starts the sequence which sets DONE and places the Flash in program suspend. PSUS can be cleared only when DONE and EHV are high. A 1 to 0 transition of PSUS with EHV = 1 starts the sequence which clears DONE and returns the Flash module to program. The Flash module cannot exit program suspend and clear DONE while EHV is low. PSUS is cleared on reset.</p> <p>0 Program sequence is not suspended. 1 Program sequence is suspended.</p>
29 ERS	<p>Erase. Used to set up Flash for an erase operation. A 0 to 1 transition of ERS initiates an Flash erase sequence. A 1 to 0 transition of ERS ends the erase sequence. ERS can be set only in a normal operating mode read (STOP and PGM are low). ERS can be cleared by the user only when ESUS and EHV are low and DONE is high. ERS is cleared on reset.</p> <p>0 Flash is not executing an erase sequence. 1 Flash is executing an erase sequence.</p>

Table 13-6. FLASH_MCR Field Descriptions (continued)

Field	Description
30 ESUS	<p>Erase suspend. Indicates that the Flash module is in erase suspend or in the process of entering a suspend state. The Flash module is in erase suspend when ESUS = 1 and DONE = 1. ESUS can be set high only when ERS and EHV are high and PGM is low. A 0 to 1 transition of ESUS starts the sequence which sets DONE and places the Flash in erase suspend. ESUS can be cleared only when DONE and EHV are high and PGM is low. A 1 to 0 transition of ESUS with EHV = 1 starts the sequence which clears DONE and returns the Flash module to erase mode. The Flash module cannot exit erase suspend and clear DONE while EHV is low. ESUS is cleared on reset.</p> <p>0 Erase sequence is not suspended. 1 Erase sequence is suspended.</p>
31 EHV	<p>Enable high voltage. Enables the Flash module for a high voltage program/erase operation. EHV is cleared on reset. EHV must be set after an interlock write to start a program/erase sequence. EHV may be set, initiating a program/erase, after an interlock write under one of the following conditions:</p> <ul style="list-style-type: none"> • Erase (ERS = 1, ESUS = 0). • Program (ERS = 0, ESUS = 0, PGM = 1, PSUS = 0). • Erase-suspended program (ERS = 1, ESUS = 1, PGM = 1, PSUS = 0). <p>If a program operation is to be initiated while an erase is suspended the user must clear EHV while in erase suspend before setting PGM.</p> <p>In normal operation, a 1 to 0 transition of EHV with DONE high, PSUS and ESUS low terminates the current program/erase high voltage operation.</p> <p>When an operation is aborted², there is a 1 to 0 transition of EHV with DONE low and the suspend bit for the current program/erase sequence low. An abort causes the value of PEG to be cleared, indicating a failed program/erase; address locations being operated on by the aborted operation contain indeterminate data after an abort.</p> <p>A suspended operation cannot be aborted. EHV may be written during suspend. EHV must be high for the Flash to exit suspend. EHV may not be written after a suspend bit is set high and before DONE has transitioned high. EHV may not be set low after the current suspend bit is set low and before DONE has transitioned low.</p> <p>0 Flash is not enabled to perform a high voltage operation. 1 Flash is enabled to perform a high voltage operation.</p>

¹ In an erase-suspended program, programming Flash locations in blocks which were being operated on in the erase may corrupt Flash core data. This should be avoided due to reliability implications.

² Aborting a high voltage operation will leave Flash core addresses in an indeterminate data state. This may be recovered by executing an erase on the affected blocks.

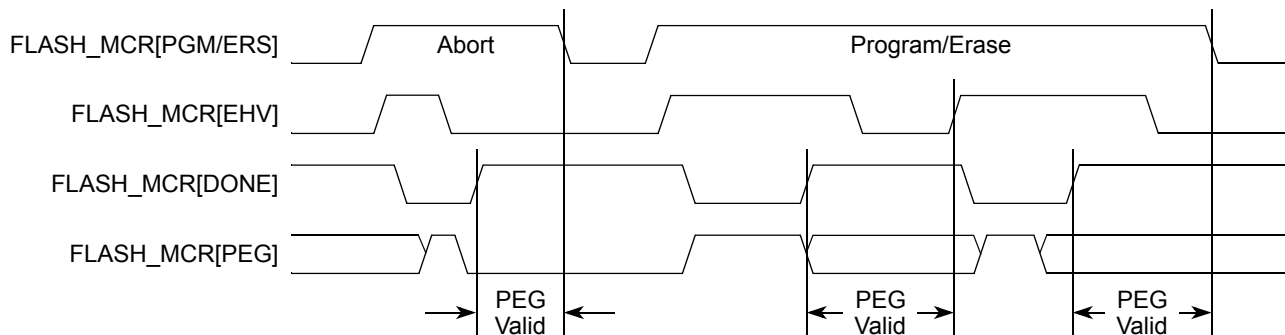


Figure 13-5. PEG Valid Times

13.3.2.1.1 MCR Simultaneous Register Writes

A number of MCR bits are protected against write when another bit or set of bits is in a specific state. These write locks are covered on a bit by bit basis in [Section 13.3.2.1, “Module Configuration Register \(FLASH_MCR\).”](#) The write locks detailed in that section do not consider the effects of trying to write two or more bits simultaneously. The effects of writing bits simultaneously which would put the Flash module in an illegal state are detailed here.

The Flash does not allow the user to write bits simultaneously which would put the device into an illegal state. This is implemented through a priority mechanism among the bits. The bit changing priorities are detailed in [Table 13-7](#).

Table 13-7. MCR Bit Set/Clear Priority Levels

Priority Level	MCR Bits
1	STOP
2	ERS
3	PGM
4	EHV
5	ESUS, PSUS

If the user attempts to write two or more MCR bits simultaneously then only the bit with the highest priority level will be written. Setting two bits with the same priority level is prevented by existing write locks and will not put the Flash in an illegal state.

For example, setting FLASH_MCR[STOP] and FLASH_MCR[PGM] simultaneously results in only FLASH_MCR[STOP] being set. Attempting to clear FLASH_MCR[EHV] while setting FLASH_MCR[PSUS] will result in FLASH_MCR[EHV] being cleared, while FLASH_MCR[PSUS] will remain unaffected.

13.3.2.2 Low/Mid Address Space Block Locking Register (FLASH_LMLR)

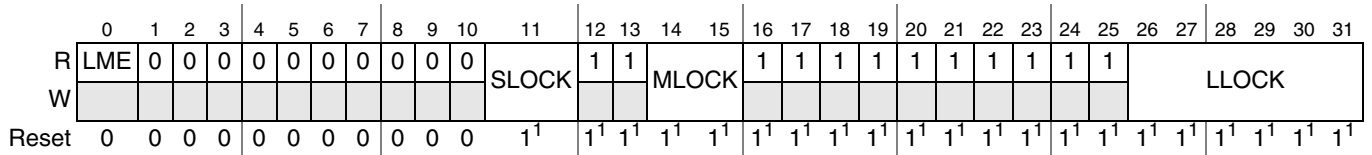
The low and mid address block locking register provides a means to protect blocks from being modified. These bits along with bits in the secondary LMLOCK field (FLASH_SLMLR), determine if the block is locked from program or erase. An “OR” of FLASH_LMLR and FLASH_SLMLR determine the final lock status. See [Section 13.3.2.4, “Secondary Low/Mid Address Space Block Locking Register \(FLASH_SLMLR\)”](#) for more information on FLASH_SLMLR.

NOTE

In the event that blocks are not present (due to configuration or total memory size), the LOCK bits will default to locked, and will not be writable. The reset value will always be 1 (independent of the shadow block), and register writes will have no effect.

Address: Base (0xC3F8_8000) + 0x0004

Access: User read/write



¹ The reset value of these bits is determined by Flash values in the shadow row. An erased array will cause the reset value to be 1.

Figure 13-6. Low/Mid Address Space Block Locking Register (FLASH_LMLR)

Table 13-8. FLASH_LMLR Field Descriptions


Field	Description
0 LME	Low and mid address lock enable. Enables the locking register fields (SLOCK, MLOCK and LLOCK) to be set or cleared by register writes. This bit is a status bit only, and may not be written or cleared, and the reset value is 0. The method to set this bit is to write a password, and if the password matches, the LME bit will be set to reflect the status of enabled, and is enabled until a reset operation occurs. For LME, the password 0xA1A1_1111 must be written to the FLASH_LMLR. 0 Low and mid address locks are disabled, and cannot be modified. 1 Low and mid address locks are enabled and can be written.
1–10	Reserved.
11 SLOCK	Shadow lock. Locks the shadow row from programs and erases. The SLOCK bit is not writable if a high voltage operation is suspended. Upon reset, information from the shadow row is loaded into the SLOCK bit. The SLOCK bit may be written as a register. Reset will cause the bits to go back to their shadow row value. The default value of the SLOCK bit (assuming the corresponding shadow row bit is erased) would be locked. SLOCK is not writable unless LME is high. 0 Shadow row is available to receive program and erase pulses. 1 Shadow row is locked for program and erase.
12–13	Reserved.
14–15 MLOCK[1:0]	Mid address block lock. A value of 1 in a bit of the lock register signifies that the corresponding block is locked for program and erase. A value of 0 in the lock register signifies that the corresponding block is available to receive program and erase pulses. Likewise the lock register is not writable if a high voltage operation is suspended. Upon reset, information from the shadow row is loaded into the block registers. The LOCK bits may be written as a register. Reset will cause the bits to go back to their shadow row value. The default value of the LOCK bits (assuming erased fuses) would be locked. In the event that blocks are not present (due to configuration or total memory size), the LOCK bits will default to locked, and will not be writable. The reset value will always be 1 (independent of the shadow row), and register writes will have no effect. MLOCK is not writable unless LME is high.
16–25	Reserved
26–31 LLOCK[5:0]	Low address block lock. These bits have the same description and attributes as MLOCK. As an example of how the LLOCK bits are used, if a configuration has sixteen 16-Kbyte blocks in the low address space (MCR-LAS = 3'b011), the block residing at address Array Base + 0, will correspond to LLOCK0. The next 16-Kbyte block will correspond to LLOCK1, and so on up to LLOCK15.

13.3.2.3 High Address Space Block Locking Register (FLASH_HLR)

The high address space block locking register provides a means to protect blocks from being modified.

Address: Base (0xC3F8_8000) + 0x0008

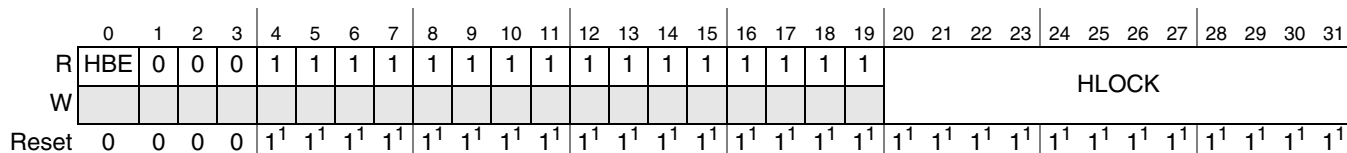Access: User read/write



¹ The reset value of these bits is determined by Flash values in the shadow row. An erased array will cause the reset value to be 1.

Figure 13-7. High Address Space Block Locking Register (FLASH_HLR)

Table 13-9. FLASH_HLR Field Descriptions

Field	Description
0 HBE	High address lock enable. Enables the locking field (HLOCK) to be set or cleared by register writes. This bit is a status bit only, and may not be written or cleared, and the reset value is 0. The method to set this bit is to provide a password, and if the password matches, the HBE bit will be set to reflect the status of enabled, and is enabled until a reset operation occurs. For HBE, the password 0xB2B2_2222 must be written to FLASH_HLR. 0 High address locks are disabled, and cannot be modified. 1 High address locks are enabled to be written.
1–19	Reserved.
20–31 HLOCK[11:0]	High address space block lock. Has the same characteristics as MLOCK. See Section 13.3.2.2, “Low/Mid Address Space Block Locking Register (FLASH_LMLR)” for more information. The block numbering for High Address space starts with HLOCK[0] and continues until all blocks are accounted. HLOCK is not writable unless HBE is set. In the event that blocks are not present (due to configuration or total memory size), the HLOCK bits will default to locked, and will not be writable.

13.3.2.4 Secondary Low/Mid Address Space Block Locking Register (FLASH_SLMLR)

The FLASH_SLMLR provides an alternative means to protect blocks from being modified. These bits along with bits in the LMLOCK field (FLASH_LMLR), determine if the block is locked from program or erase. An “OR” of FLASH_LMLR and FLASH_SLMLR determine the final lock status. See [Section 13.3.2.2, “Low/Mid Address Space Block Locking Register \(FLASH_LMLR\)”](#) for more information on FLASH_LMLR.

Address: Base (0xC3F8_8000) + 0x000C

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	SLE	0	0	0	0	0	0	0	0	0	0	SS LOCK	1	1	SM LOCK	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
W																																
Reset	0	0	0	0	0	0	0	0	0	0	0	1 ¹	1	1	1 ¹	1 ¹	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1

¹ The reset value of these bits is determined by Flash values in the shadow row. An erased array will cause the reset value to be 1.

Figure 13-8. Secondary Low/Mid Address Space Block Locking Register (FLASH_SLMLR)

Table 13-10. FLASH_SLMLR Field Descriptions

Field	Description
0 SLE	Secondary low and mid address lock enable. Enables the secondary lock fields (SSLOCK, SMLOCK, and SLLOCK) to be set or cleared by register writes. This bit is a status bit only, and may not be written or cleared, and the reset value is 0. The method to set this bit is to provide a password, and if the password matches, the SLE bit will be set to reflect the status of enabled, and is enabled until a reset operation occurs. For SLE, the password 0xC3C3_3333 must be written to the FLASH_SLMLR. 0 Secondary low and mid address locks are disabled, and cannot be modified. 1 Secondary low and mid address locks are enabled to be written.
1–10	Reserved.
11 SSLOCK	Secondary shadow lock. An alternative method that may be used to lock the shadow row from programs and erases. SSLOCK has the same description as SLOCK in Section 13.3.2.2, “Low/Mid Address Space Block Locking Register (FLASH_LMLR).” SSLOCK is not writable unless SLE is high.
12–13	Reserved.
14–15 SMLOCK[1:0]	Secondary mid address block lock. Alternative method that may be used to lock the mid address space blocks from programs and erases. SMLOCK has the same description as MLOCK in Section 13.3.2.2, “Low/Mid Address Space Block Locking Register (FLASH_LMLR).” SMLOCK is not writable unless SLE is set. In the event that blocks are not present (due to configuration or total memory size), the SMLOCK bits will default to locked, and will not be writable.
16–25	Reserved.
26–31 SLLOCK[5:0]	Secondary low address block lock. These bits are an alternative method that may be used to lock the low address space blocks from programs and erases. SLLOCK has the same description as LLOCK in Section 13.3.2.2, “Low/Mid Address Space Block Locking Register (FLASH_LMLR).” SLLOCK is not writable unless SLE is high. In the event that blocks are not present (due to configuration or total memory size), the SLLOCK bits will default to locked, and will not be writable.

13.3.2.5 Low/Mid Address Space Block Select Register (FLASH_LMSR)

The FLASH_LMSR provides a means to select blocks to be operated on during erase.

Address: Base (0xC3F8_8000) + 0x0010

Access: User read/write

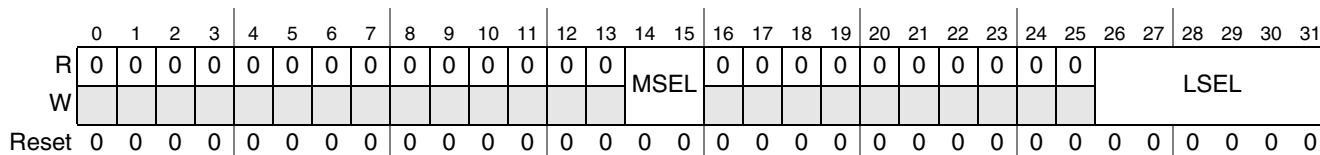


Figure 13-9. Low/Mid Address Space Block Select Register (FLASH_LMSR)

Table 13-11. FLASH_LMSR Field Descriptions

Field	Description
0–13	Reserved.
14–15 MSEL[1:0]	Mid address space block select. Values in the selected register signify that a block(s) is or is not selected for erase. The reset value for the select registers is 0. The blocks must be selected (or unselected) before doing an erase interlock write as part of the erase sequence. The select register is not writable once an interlock write is completed or if a high voltage operation is suspended. In the event that blocks are not present (due to configuration or total memory size), the corresponding SELECT bits will default to unselected, and will not be writable. The reset value will always be 0, and register writes will have no effect. A description of how blocks are numbered is detailed in Section 13.3.2.2, “Low/Mid Address Space Block Locking Register (FLASH_LMLR).” 0b0000 Mid address space blocks are <i>not</i> selected for erase 0b0001 One mid address space block is selected for erase 0b0011 Two mid address space blocks are selected for erase
16–25	Reserved.
26–31 LSEL[5:0]	Low address space block select. Used to select blocks in the low address space; these have the same description and attributes as the MSEL bits 0b0000 Low address space blocks are <i>not</i> selected for erase 0b0001 One low address space block is selected for erase 0b0011 Two low address space blocks are selected for erase 0b0111 Three low address space blocks are selected for erase 0b1111 Four low address space blocks are selected for erase 0b1_1111 Five low address space blocks are selected for erase 0b11_1111 Six low address space blocks are selected for erase

13.3.2.6 High Address Space Block Select Register (FLASH_HSR)

The FLASH_HSR provides a means to select blocks to be operated on.

Address: Base (0xC3F8_8000) + 0x0014

Access: User read/write

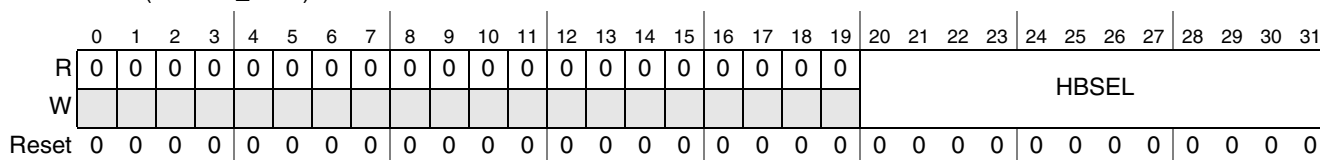


Figure 13-10. High Address Space Block Select Register (FLASH_HSR)

Table 13-12. FLASH_HSR Field Descriptions

Field	Description
0–19	Reserved.
20–31 HBSEL[11:0]	High address space block select. Has the same characteristics as MSEL. For more information see Section 13.3.2.5, “Low/Mid Address Space Block Select Register (FLASH_LMSR)” 0b0000 High address space blocks are <i>not</i> selected for erase 0b0001 One high address space block is selected for erase 0b0011 Two high address space blocks are selected for erase 0b0111 Three high address space blocks are selected for erase 0b1111 Four high address space blocks are selected for erase 0b1_1111 Five high address space blocks are selected for erase 0b11_1111 Six high address space blocks are selected for erase 0b111_1111 Seven high address space blocks are selected for erase 0b1111_1111 Eight high address space blocks are selected for erase 0b1_1111_1111 Nine high address space blocks are selected for erase 0b11_1111_1111 Ten high address space blocks are selected for erase 0b111_1111_1111 Eleven high address space blocks are selected for erase 0b1111_1111_1111 Twelve high address space blocks are selected for erase

13.3.2.7 Address Register (FLASH_AR)

The FLASH_AR provides the first failing address in the event of ECC event error (FLASH_MCR[EER] set), as well as providing the address of a failure that may have occurred in a state machine operation (FLASH_MCR[PEG] cleared). ECC event errors take priority over state machine errors. This is especially valuable in the event of a RWW operation, where the read senses an ECC error and the state machine fails simultaneously. This address is always a double-word address that selects 64 bits.

In normal operating mode, the FLASH_AR is not writable.

Address: Base (0xC3F8_8000) + 0x0018

Access: User read only

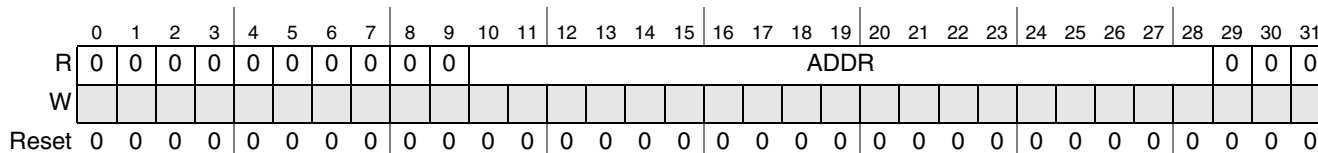


Figure 13-11. Address Register (FLASH_AR)

Table 13-13. FLASH_AR Field Descriptions

Field	Description
0–9	Reserved.
10–28 ADDR[3:21]	Double-word address of first failing address in the event of an ECC error, or the address of a failure occurring during state machine operation.
29–31 ADDR[0:2]	Always read as 0.

13.3.2.8 Flash Bus Interface Unit Control Register (FLASH_BIUCR)

The FLASH_BIUCR is the control register for the set up and control of the Flash interface. This register must not be written while executing from Flash. This register should only be written in a 32-bit write operation.

Address: Base (0xC3F8_8000) + 0x001C

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15			
R	0	0	0	0	0	0	0	0	0	M6	0	M4	M3	M2	M1	M0			
W										PFE		PFE	PFE	PFE	PFE	PFE			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0			
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31			
R	APC				WWSC				RWSC				DPFEN		IPFEN		PFLIM		BFEN
W																			
Reset	1	1	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0		

Figure 13-12. Flash Bus Interface Unit Control Register (FLASH_BIUCR)

Table 13-14. FLASH_BIUCR Field Descriptions

Bits	Description
0-8	Reserved
9	Master 6 prefetch enable for FlexRay. Used to control whether prefetching may be triggered based on the master ID of a requesting master. These bits are cleared by hardware reset. Refer to 1. 0 No prefetching may be triggered by this master 1 Prefetching may be triggered by this master M6PFE=FlexRay
10	Reserved
11-15	Master <i>n</i> prefetch enable. Used to control whether prefetching may be triggered based on the master ID of a requesting master. These bits are cleared by hardware reset. Refer to 1. 0 No prefetching may be triggered by this master 1 Prefetching may be triggered by this master These fields are identified as follows: M4PFE = FEC M3PFE= EBI M2PFE= eDMA M1PFE= Nexus M0PFE= MCU core
16-18 APC ¹	Address pipelining control. Used to control the number of cycles between pipelined access requests. This field must be set to a value corresponding to the operating frequency of the system clock. The required settings are documented in Table 13-15. 000 Reserved 001 Access requests require one hold cycle 010 Access requests require two hold cycles ... 110 Access requests require 6 hold cycles 111 No address pipelining

Table 13-14. FLASH_BIUCR Field Descriptions (continued)

Bits	Description
19–20 WWSC ¹	Write wait state control. Used to control the timing for array writes. This field must be set to a value corresponding to the operating frequency of the system clock. The required settings are documented in Table 13-15 . 00 Reserved 01 One wait state 10 Two wait states 11 Three wait states
21–23 RWSC ¹	Read wait state control. Used to control the Flash array access time for array reads. This field must be set to a value corresponding to the operating frequency of the system clock. The required settings are documented in Table 13-15 . 000 Zero wait states 001 One wait state ... 111 Seven wait states
24–25 DPFEN	Data prefetch enable. Enables or disables prefetching initiated by a data read access. This field is cleared by hardware reset. 00 No prefetching is triggered by a data read access 01 Prefetching may be triggered only by a data burst read access 10 Reserved 11 Prefetching may be triggered by any data read access
26–27 IPFEN	Instruction prefetch enable. Enables or disables prefetching initiated by an instruction read access. This field is cleared by hardware reset. 00 No prefetching is triggered by an instruction read access 01 Prefetching may be triggered only by an instruction burst read access 10 Reserved 11 Prefetching may be triggered by any instruction read access
28–30 PFLIM	Prefetch limit. Controls the prefetch algorithm used by the FBIU prefetch controller. This field defines a limit on the maximum number of sequential prefetches which will be attempted between buffer misses. This field is cleared by hardware reset. 000 No prefetching is performed 001 A single additional line (next sequential) is prefetched on a buffer miss 010 Up to two additional lines may be prefetched following each buffer miss before prefetching is halted. A single additional line (next sequential) is prefetched on a buffer miss, and the next sequential line is prefetched on a buffer hit (if not already present). 011 Up to three additional lines may be prefetched following each buffer miss before prefetching is halted. Only a single additional prefetch is initiated after each buffer hit or miss. 100 Up to four additional lines may be prefetched following each buffer miss before prefetching is halted. Only a single additional prefetch is initiated after each buffer hit or miss. 101 Up to five additional lines may be prefetched following each buffer miss before prefetching is halted. Only a single additional prefetch is initiated after each buffer hit or miss. 110 An unlimited number of additional lines may be prefetched following each buffer miss. Only a single additional prefetch is initiated on each buffer hit or miss. 111 Reserved
31 BFEM	FBIU line read buffers enable. Enables or disables line read buffer hits. It is also used to invalidate the buffers. These bits are cleared by hardware reset. 0 The line read buffers are disabled from satisfying read requests, and all buffer valid bits are cleared. 1 The line read buffers are enabled to satisfy read requests on hits. Buffer valid bits may be set when the buffers are successfully filled. Note: Disable prefetching before invalidating the buffers. This includes starting a program or erase operation, or turning on and off the buffers.

¹ APC, WWSC, and RWSC values are determined by the maximum frequency of operation. See [Table 13-15](#).

Table 13-15. FLASH_BIU Settings vs. Frequency of Operation

Maximum Frequency (MHz)	APC	RWSC	WWSC	DPFEN	IPFEN	PFLIM	BFEN
up to and including 82 MHz ¹	0b001	0b001	0b01	0b00, 0b01, or 0b11 ²	0b00, 0b01, or 0b11 ²	0b000-0b110 ³	0b0, 0b1 ⁴
up to and including 102 MHz ⁵	0b001	0b010	0b01	0b00, 0b01, or 0b11 ²	0b00, 0b01, or 0b11 ²	0b000-0b110 ³	0b0, 0b1 ⁴
up to and including 132 MHz ⁶	0b010	0b011	0b01	0b00, 0b01, or 0b11 ²	0b00, 0b01, or 0b11 ²	0b000-0b110 ³	0b0, 0b1 ⁴
Default Setting after Reset	0b111	0b111	0b11	0b00	0b00	0b000	0b0

¹ This setting allows for 80 MHz system clock with 2% frequency modulation.

² For maximum flash performance, this should be set to 0b11.

³ For maximum flash performance, this should be set to 0b110.

⁴ For maximum flash performance, this should be set to 0b1.

⁵ This setting allows for 100 MHz system clock with 2% frequency modulation.

⁶ This setting allows for 128 MHz system clock with 2% frequency modulation.

13.3.2.9 Flash Bus Interface Unit Access Protection Register (FLASH_BIUAPR)

The FLASH_BIUAPR controls access protection for the Flash from masters on the crossbar switch. This register should only be written in a 32-bit write operation.

Address: Base (0xC3F8_8000) + 0x0020

Access: User read/write

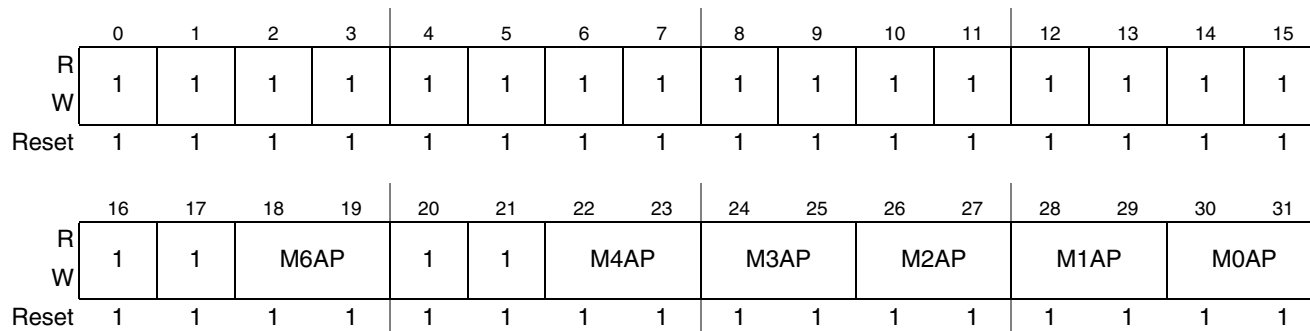


Figure 13-13. Flash Bus Interface Unit Access Protection Register (FLASH_BIUAPR)

Table 13-16. FLASH_BIUAPR Field Descriptions

Field	Description
0–17	Reserved. Reads/Writes have no effect.
18-19 M6AP [0:1]	<p>Master 6 access protection: FlexRay. Controls whether read and write accesses to the Flash are allowed based on the master ID of this requesting FlexRay master. These fields are initialized by hardware reset. Refer to Table 7-2.</p> <p>00 No accesses may be performed by this master 01 Only read accesses may be performed by this master 10 Only write accesses may be performed by this master 11 Both read and write accesses may be performed by this master</p> <p>M6AP=FlexRay</p>
20-21	Reserved. Reads/Writes have no effect.
22–31 MnAP [0:1]	<p>Master <i>n</i> access protection. Controls whether read and write accesses to the Flash are allowed based on the master ID of a requesting master. These fields are initialized by hardware reset. Refer to Table 7-2.</p> <p>00 No accesses may be performed by this master 01 Only read accesses may be performed by this master 10 Only write accesses may be performed by this master 11 Both read and write accesses may be performed by this master</p> <p>These fields are identified as follows: M0AP= MCU core M1AP= Nexus M2AP= eDMA M3AP= EBI M4AP= FEC</p>

13.4 Functional Description

13.4.1 Flash Bus Interface Unit (FBIU)

The Flash BIU interfaces between the system bus and the Flash memory interface unit and generates read and write enables, the Flash array address, write size, and write data as inputs to the Flash memory interface unit (MI). The Flash BIU captures read data from the MI and drives it on the system bus. Up to two lines (1 line is a 256-bit width) of data or instructions are buffered by the Flash BIU. Lines can be prefetched in advance of being requested by the system bus interface, allowing single-cycle read data responses on buffer hits.

Several prefetch control algorithms are available for controlling line read buffer fills. Prefetch triggering can be restricted to instruction accesses only, data accesses only, or can be unrestricted. Prefetch triggering can also be controlled on a per-master basis.

Access protections can be applied on a per-master basis for both reads and writes to support security and privilege mechanisms.

13.4.1.1 FBIU Basic Interface Protocol

The Flash BIU interfaces to the Flash array by driving addresses and read or write enable signals to the Flash memory interface unit. The access time of the Flash is determined by the settings of the wait state control bits in the FLASH_BIUCR, as well as the pipelining of addresses.

The Flash BIU also has the capability of extending the normal system bus access timing by inserting additional primary (initial access) wait states for reads and burst reads. This capability is provided to allow emulation of other memories which have different access time characteristics.

13.4.1.2 FBIU Access Protections

The Flash BIU provides hardware configurable access protections for both read and write cycles from masters. It allows restriction of read and write requests on a per-master basis. The FBIU also supports software configurable access protections. Detection of a protection violation results in an error response from the Flash BIU to the system bus.

13.4.1.3 Flash Read Cycles—Buffer Miss

Read data is normally stored in the least-recently updated line read buffer in parallel with the requested data being forwarded to the system bus.

13.4.1.4 Flash Read Cycles—Buffer Hit

Single clock read responses to the system bus are possible with the Flash BIU when the requested read access is buffered.

13.4.1.5 Flash Access Pipelining

Accesses to the Flash array can be pipelined by driving a subsequent access address and control signals while waiting for the current access to complete. Pipelined access requests are always run to completion and are not aborted by the Flash BIU. Request pipelining allows for improved performance by reducing the access latency seen by the system bus master. Access pipelining can be applied to both read and write cycles by the Flash array.

13.4.1.6 Flash Error Response Operation

The Flash array can terminate a requested access with an error. This can occur due to an uncorrectable ECC error, an access control violation, or because of improper access sequencing during program/erase operations. When an error response is received, the Flash BIU will mark a line read buffer as invalid. An error response can be signaled on read or write operations.

13.4.1.7 FBIU Line Read Buffers and Prefetch Operation

The Flash BIU contains a pair of 256-bit line read buffers which are used to hold data read from the Flash array. Each buffer operates independently and is filled using a single array access. The buffers are used for both prefetch and normal demand fetches.

Prefetch triggering is controllable on a per-master and access-type basis. Bus masters can be enabled or disabled from triggering prefetches, and triggering can be further restricted based on whether a read access is for instruction or data and whether or not it is a burst access. A read access to the Flash BIU can trigger a prefetch to the next sequential line of array data on the cycle following the request. The access address is incremented to the next-higher 32-byte boundary, and a Flash array prefetch is initiated if the data is not already resident in a line read buffer. Prefetched data is loaded into the buffer which is not being used to satisfy the original request.

Buffers can be in one of six states, listed here in prioritized order:

- Invalid—the buffer contains no valid data.
- Used—the buffer contains valid data which has been provided to satisfy a burst type read.
- Valid—the buffer contains valid data which has been provided to satisfy a single type read.
- Prefetched—the buffer contains valid data which has been prefetched to satisfy a potential future access.
- Busy—the buffer is currently being used to satisfy a burst read.
- Busy fill—the buffer has been allocated to receive data from the Flash array, and the array access is still in progress.

Selection of a buffer to fill on a buffer miss is based on this prioritized order beginning with the first item (invalid). Selection of a buffer to fill on a triggered prefetch is based on the buffer which is not being used to satisfy the triggering access.

The consequences of this replacement policy are that buffers are selected for filling on a ‘least recently updated’ basis when prefetching, and on a ‘most recently emptied’ basis for demand fetches (that is, a fetch which is actually satisfying a current system bus access). This policy allows for prefetched data to remain valid when non-prefetch enabled bus masters are granted Flash access.

Several algorithms are available for prefetch control which trade off performance for power. They are described in [Section 13.3.2.8, “Flash Bus Interface Unit Control Register \(FLASH_BIUCR\).”](#) More aggressive prefetching increases power due to the number of wasted (discarded) prefetches, but can increase performance by lowering average read latency.

13.4.1.8 FBIU Instruction/Data Prefetch Triggering

Prefetch triggering can be enabled for instruction reads. Triggering can be enabled for all instruction reads or only for instruction burst reads. Prefetch triggering can be enabled for data reads. Triggering can be enabled for all data reads or only for data burst reads. Prefetches are not triggered by write cycles.

13.4.1.9 FBIU Per-Master Prefetch Triggering

Prefetch triggering can be controlled for individual bus masters. System bus accesses indicate the requesting master.

13.4.1.10 FBIU Buffer Invalidation

The line read buffers can be invalidated under hardware and software control. Buffers are automatically invalidated whenever the buffers are turned on or off, or at the beginning of a program or erase operation.

NOTE

Disable prefetching before invalidating the buffers. This includes starting a program or erase operation, or turning on and off the buffers.

13.4.1.11 Flash Wait-state Emulation

Emulation of other memory array timings are supported by the Flash BIU. This functionality can be useful to maintain the access timing for blocks of memory which were used to overlay Flash blocks for the purpose of system calibration or tuning during code development.

The Flash BIU will insert additional primary wait states according to user-programmable values for primary wait states. When these inputs are non-zero, additional cycles are added to system bus transfers. Normal system bus termination will be extended. In addition, no line read buffer prefetches will be initiated, and buffer hits will be ignored.

13.4.2 Flash Memory Array: User Mode

In user (normal) operating mode the Flash module can be read, written (register writes and interlock writes), programmed, or erased. The following subsections define all actions that can be performed in normal operating mode. The registers mentioned in these sections are detailed in [Section 13.3.2, “Register Descriptions.”](#)

13.4.2.1 Flash Read and Write

The default state of the Flash module is read. The main and shadow address space can be read only in the read state. The module configuration register (FLASH_MCR) is always available for read. The Flash module enters the read state on reset. The Flash module is in the read state under four sets of conditions:

- The read state is active when FLASH_MCR[STOP] = 0 (User mode read).
- The read state is active when FLASH_MCR[PGM] = 1 and/or FLASH_MCR[ERS] = 1 and high voltage operation is ongoing (Read while write).

NOTE

Reads done to the partitions being operated on (either erased or programmed) will result in an error and the FLASH_MCR[RWE] bit will be set.

- The read state is active when FLASH_MCR[PGM] = 1 and FLASH_MCR[PSUS] = 1 in the MCR. (Program suspend).
- The read state is active when FLASH_MCR[ERS] = 1 and FLASH_MCR[ESUS] = 1 and FLASH_MCR[PGM] = 0 in the MCR. (Erase suspend).

NOTE

Flash core reads are done through the BIU. In many cases the BIU will do page buffering to allow sequential reads to be done with higher performance. This can create a data coherency issue that must be handled with software. Data coherency can be an issue after a program or erase operation, as well as shadow row operations.

In Flash normal operating mode, registers can be written and the Flash array can be written to do interlock writes.

Reads attempted to invalid locations will result in indeterminate data. Invalid locations occur when addressing is done to blocks that do not exist in non 2^n array sizes.

Interlock writes attempted to invalid locations (due to blocks that do not exist in non 2^n array sizes), will result in an interlock occurring, but attempts to program or erase these blocks will not occur since they are forced to be locked.

See [Section 13.3.2.2, “Low/Mid Address Space Block Locking Register \(FLASH_LMLR\)”](#), [Section 13.3.2.3, “High Address Space Block Locking Register \(FLASH_HLR\)”](#) and [Section 13.3.2.4, “Secondary Low/Mid Address Space Block Locking Register \(FLASH_SLMLR\)”](#) for more information.

13.4.2.2 Read While Write (RWW)

The Flash core is divided into partitions. Partitions are always comprised of two or more blocks. Partitions are used to determine read while write (RWW) groupings. While a write (program or erase) is being done within a given partition, a read can be simultaneously executed to any other partition. Partitions are listed in [Table 13-4](#). Each partition in high address space comprises of two 128-Kbyte blocks. Note that the shadow block has unique RWW restrictions described in [Section 13.4.2.5, “Flash Shadow Block.”](#)

The Flash core is also divided into blocks to implement independent erase or program protection. The shadow block exists outside the normal address space and is programmed, erased and read independently of the other blocks. The shadow block is included to support systems that require NVM for security or system initialization information.

A software mechanism is provided to independently lock or unlock each block in high-, mid-, and low-address space against program and erase.

13.4.2.3 Flash Programming

Programming changes the value stored in an array bit from logic 1 to logic 0 only. Programming cannot change a stored logic 0 to a logic 1. Addresses in locked/disabled blocks cannot be programmed. The user can program the values in any or all of eight words within a page in a single program sequence. Word addresses are selected using bits 4:2 of the page-bound word.

Whenever a program operation occurs, ECC bits are programmed. ECC is handled on a 64-bit boundary. Thus, if only 1 word in any given 64-bit ECC segment is programmed, the adjoining word (in that segment) should not be programmed because ECC calculation has already completed for that 64-bit segment. Attempts to program the adjoining word will probably result in an operation failure. It is

recommended that all programming operations be from 64 bits to 256 bits, and be 64-bit aligned. The programming operation should completely fill selected ECC segments within the page.

The program operation consists of the following sequence of events:

1. Change the value in the FLASH_MCR[PGM] bit from a 0 to a 1.

NOTE

Ensure the block that contains the address to be programmed is unlocked. See [Section 13.3.2.2, “Low/Mid Address Space Block Locking Register \(FLASH_LMLR\)”](#), [Section 13.3.2.3, “High Address Space Block Locking Register \(FLASH_HLR\)”](#) and [Section 13.3.2.4, “Secondary Low/Mid Address Space Block Locking Register \(FLASH_SLMLR\)”](#) for more information.

2. Write the first address to be programmed in the Flash module with the program data. This write is referred to as a program data interlock write. An interlock write may be either be an aligned word or double-word.
3. If more than 1 word or double-word is to be programmed, write each additional address in the page with data to be programmed. This is referred to as a program data write. All unwritten data words default to 0xFFFF FFFF.
4. Write a logic 1 to the FLASH_MCR[EHV] bit to start the internal program sequence or skip to step 9 to terminate.
5. Wait until the FLASH_MCR[DONE] bit goes high.
6. Confirm FLASH_MCR[PEG] = 1.
7. Write a logic 0 to the FLASH_MCR[EHV] bit.
8. If more addresses are to be programmed, return to step 2.
9. Write a logic 0 to the FLASH_MCR[PGM] bit to terminate the program sequence.

The program sequence is presented graphically in [Figure 13-14](#). The program suspend operation detailed in [Figure 13-14](#) is discussed in [Section 13.4.2.3.2, “Flash Program Suspend/Resume.”](#)

The first write after a program is initiated determines the page address to be programmed. Program may be initiated with the 0 to 1 transition of the FLASH_MCR[PGM] bit or by clearing the FLASH_MCR[EHV] bit at the end of a previous program. This first write is referred to as an interlock write. If the program is not an erase-suspended program, the interlock write determines if the shadow or normal array space will be programmed and causes FLASH_MCR[PEAS] to be set/cleared.

In the case of an erase-suspended program, the value in FLASH_MCR[PEAS], is retained from the erase.

An interlock write must be performed before setting FLASH_MCR[EHV]. The user may terminate a program sequence by clearing FLASH_MCR[PGM] prior to setting FLASH_MCR[EHV].

If multiple writes are done to the same location the data for the last write is used in programming.

While FLASH_MCR[DONE] is low, FLASH_MCR[EHV] is high and FLASH_MCR[PSUS] is low the user may clear FLASH_MCR[EHV], resulting in a program abort. A program abort forces the module to step 8 of the program sequence. An aborted program will result in FLASH_MCR[PEG] being set low,

indicating a failed operation. The data space being operated on before the abort will contain indeterminate data. The user may not abort a program sequence while in program suspend.

WARNING

Aborting a program operation will leave the Flash core addresses being programmed in an indeterminate data state. This may be recovered by executing an erase on the affected blocks.

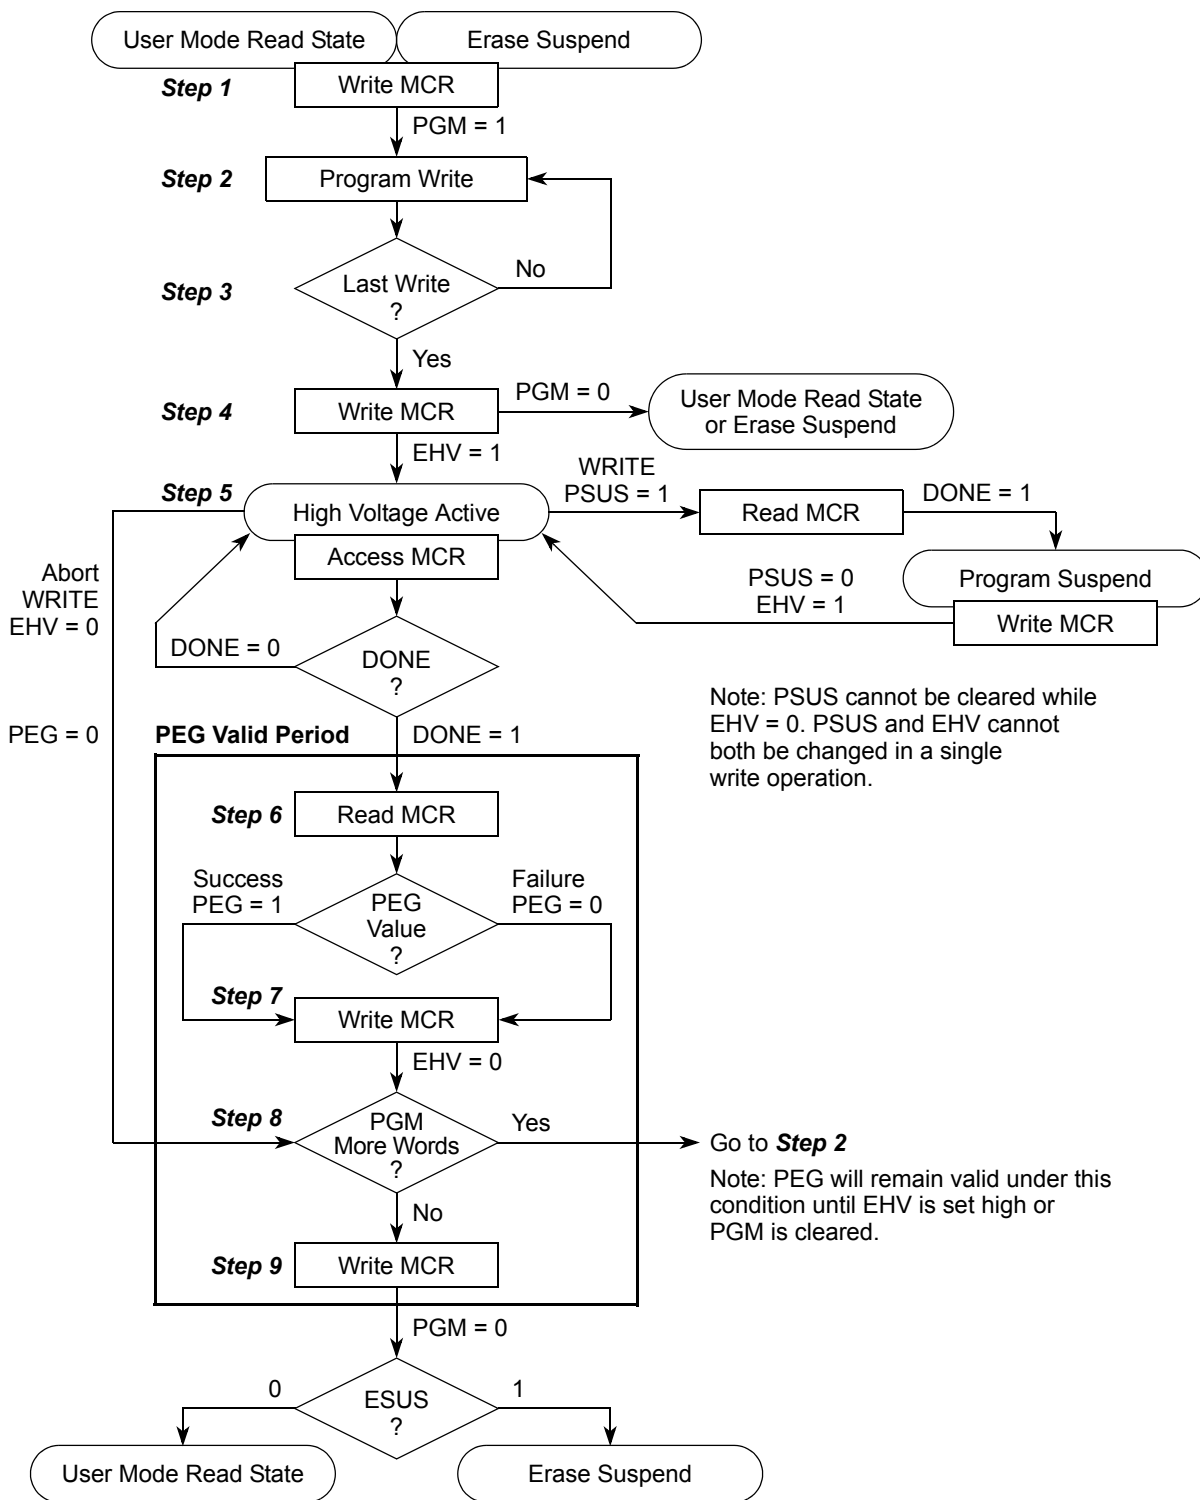


Figure 13-14. Program Sequence

13.4.2.3.1 Software Locking

A software mechanism is provided to independently lock/unlock each high, mid, and low address space against program and erase.

Software Locking is done through the FLASH_LMLR (low/mid address space block locking register), FLASH_SLMLR (secondary low/mid address space block locking register), or FLASH_HLR (high address space block locking register). These can be written through register writes, and can be read through register reads.

When the program/erase operations are enabled through hardware, software locks are enforced through doing register writes.

13.4.2.3.2 Flash Program Suspend/Resume

The program sequence may be suspended to allow read access to the Flash core. It is not possible to erase or program during a program suspend. Interlock writes should not be attempted during program suspend.

A program suspend can be initiated by changing the value of the FLASH_MCR[PSUS] bit from a 0 to a 1. FLASH_MCR[PSUS] can be set high at any time when FLASH_MCR[PGM] and FLASH_MCR[EHV] are high. A 0 to 1 transition of FLASH_MCR[PSUS] causes the Flash module to start the sequence to enter program suspend, which is a read state. The module is not suspended until FLASH_MCR[DONE] = 1. At this time Flash core reads may be attempted. Once suspended, the Flash core may only be read. Reads to the blocks being programmed/erased return indeterminate data.

The program sequence is resumed by writing a logic 0 to FLASH_MCR[PSUS]. FLASH_MCR[EHV] must be set to a 1 before clearing FLASH_MCR[PSUS] to resume operation. When the operation resumes, the Flash module continues the program sequence from one of a set of predefined points. This may extend the time required for the program operation.

13.4.2.4 Flash Erase

Erase changes the value stored in all bits of the selected blocks to logic 1. Locked or disabled blocks cannot be erased. If multiple blocks are selected for erase during an erase sequence, the blocks are erased sequentially starting with the lowest numbered block and terminating with the highest. Aborting an erase operation will leave the Flash core blocks being erased in an indeterminate data state. This can be recovered by executing an erase on the affected blocks.

The erase sequence consists of the following sequence of events:

1. Change the value in the FLASH_MCR[ERS] bit from 0 to a 1.
2. Select the block, or blocks to be erased by writing ones to the appropriate registers in FLASH_LMSR or FLASH_HSR. If the shadow row is to be erased, this step may be skipped, and FLASH_LMSR and FLASH_HSR are ignored. For shadow row erase, see section [Section 13.4.2.5, “Flash Shadow Block”](#) for more information.

NOTE

Lock and Select are independent. If a block is selected and locked, no erase will occur. See Section 13.3.2.2, “Low/Mid Address Space Block Locking Register (FLASH_LMLR), Section 13.3.2.3, “High Address Space Block Locking Register (FLASH_HLR)” and Section 13.3.2.4, “Secondary Low/Mid Address Space Block Locking Register (FLASH_SLMLR)” for more information.

3. Write to any address in Flash. This is referred to as an erase interlock write.
4. Write a logic 1 to the FLASH_MCR[EHV] bit to start an internal erase sequence or skip to step 9 to terminate.
5. Wait until the FLASH_MCR[DONE] bit goes high.
6. Confirm FLASH_MCR[PEG] = 1.
7. Write a logic 0 to the FLASH_MCR[EHV] bit.
8. If more blocks are to be erased, return to step 2.
9. Write a logic 0 to the FLASH_MCR[ERS] bit to terminate the erase.

The erase sequence is presented graphically in Figure 13-15. The erase suspend operation detailed in Figure 13-15 is discussed in section Section 13.4.2.4.1, “Flash Erase Suspend/Resume.”

After setting FLASH_MCR[ERS], one write, referred to as an interlock write, must be performed before FLASH_MCR[EHV] can be set to a 1. Data words written during erase sequence interlock writes are ignored. The user may terminate the erase sequence by clearing FLASH_MCR[ERS] before setting FLASH_MCR[EHV].

An erase operation may be aborted by clearing FLASH_MCR[EHV] assuming FLASH_MCR[DONE] is low, FLASH_MCR[EHV] is high and FLASH_MCR[ESUS] is low. An erase abort forces the module to step 8 of the erase sequence. An aborted erase will result in FLASH_MCR[PEG] being set low, indicating a failed operation. The blocks being operated on before the abort contain indeterminate data. The user may not abort an erase sequence while in erase suspend.

WARNING

Aborting an erase operation will leave the Flash core blocks being erased in an indeterminate data state. This may be recovered by executing an erase on the affected blocks.

13.4.2.4.1 Flash Erase Suspend/Resume

The erase sequence may be suspended to allow read access to the Flash core. The erase sequence may also be suspended to program (erase-suspended program) the Flash core. A program started during erase suspend can in turn be suspended. Only one erase suspend and one program suspend are allowed at a time during an operation. It is not possible to erase during an erase suspend, or program during a program suspend. During suspend, all reads to Flash core locations targeted for program and blocks targeted for erase return indeterminate data. Programming locations in blocks targeted for erase during erase-suspended program may result in corrupted data.

An erase suspend operation is initiated by setting the FLASH_MCR[ESUS] bit. FLASH_MCR[ESUS] can be set to a 1 at any time when FLASH_MCR[ERS] and FLASH_MCR[EHV] are high and FLASH_MCR[PGM] is low. A 0 to 1 transition of FLASH_MCR[ESUS] causes the Flash module to start the sequence which places it in erase suspend. The user must wait until FLASH_MCR[DONE] = 1 before the module is suspended and further actions are attempted. Once suspended, the array may be read or a program sequence may be initiated (erase-suspended program). Before initiating a program sequence the user must first clear FLASH_MCR[EHV]. If a program sequence is initiated the value of the FLASH_MCR[PEAS] is not reset. These values are fixed at the time of the first interlock of the erase. Flash core reads while FLASH_MCR[ESUS] = 1 from the blocks being erased return indeterminate data. The erase operation is resumed by clearing the FLASH_MCR[ESUS] bit. The Flash continues the erase sequence from one of a set of predefined points. This can extend the time required for the erase operation.

WARNING

In an erase-suspended program, programming Flash locations in blocks which were being operated on in the erase may corrupt Flash core data.

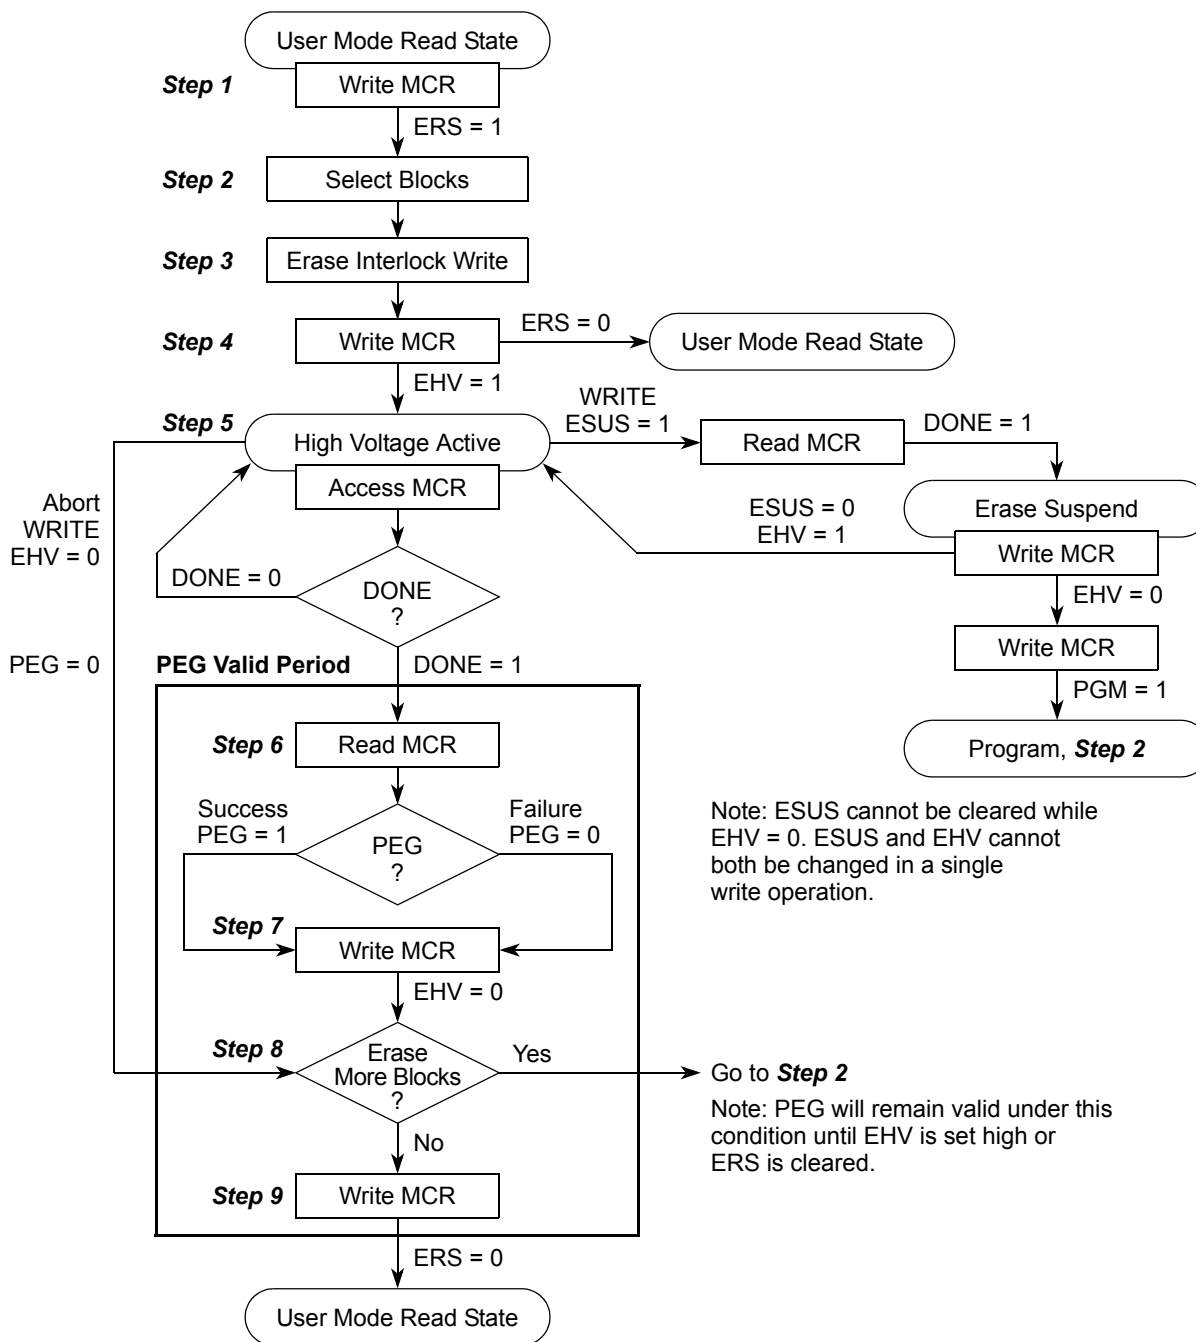


Figure 13-15. Erase Sequence

13.4.2.5 Flash Shadow Block

The Flash shadow block is a memory-mapped block in the Flash memory map. Program and erase of the shadow block are enabled only when `FLASH_MCR[PEAS] = 1`. Once the user has begun an erase operation on the shadow block, the operation cannot be suspended to program the main address space and vice-versa. The user must terminate the shadow erase operation to program or erase the main address space.

NOTE

If an erase of user space is requested, and a suspend is done with attempts to erase suspend program shadow space, this attempted program will be directed to user space as dictated by the state of `FLASH_MCR[PEAS]`. Likewise an attempted erase suspended program of user space, while the shadow space is being erased, will be directed to shadow space as dictated by the state of `FLASH_MCR[PEAS]`.

The shadow block cannot utilize the RWW feature. Once an operation is started in the shadow block, a read cannot be done to the shadow block, or any other block. Likewise, once an operation is started in a block in low/mid/high address space, a read cannot be done in the shadow block.

The shadow block contains information on how the lock registers are reset. The first and second words can be used for reset configuration words. All other words can be used for user defined functions or other configuration words.

The shadow block may be locked/unlocked against program or erase by using the `FLASH_LMLR` or `FLASH_SLMLR` discussed in [Section 13.3.2, “Register Descriptions.”](#)

Programming of the shadow row has similar restrictions to programming the array in terms of how ECC is calculated. See [Section 13.4.2.3, “Flash Programming”](#) for more information. Only one program is allowed per 64 bit ECC segment between erases. Erase of the shadow row is done similarly as an array erase. See [Section 13.4.2.4, “Flash Erase”](#) for more information.

13.4.2.6 Censorship

Censorship logic disables access to internal Flash based on the censorship control word value and the `BOOTCFG[0:1]` bits in the `SIU_RSR`. This prevents modification of the `FLASH_BIUAPR` bitfields associated with all masters except the core based on the censorship control word value, the `BOOTCFG[0:1]` bits in the `SIU_RSR`, and the `EXTM` bit in the `EBI_MCR`. Also, censorship logic sets the boot default value to external-with-external-master access disabled based on the value of the censorship control word and a TCU input signal.

13.4.2.6.1 Censorship Control Word

The censorship control word is a 32-bit value located at the base address of the shadow row plus `0x1E0`. The Flash module latches the value of the control word prior to the negation of system reset. Censorship logic uses the value latched in the Flash module to disable access to internal Flash, disable the NDI, prevent modification of the `FLASH_BIUAPR` bitfields, and/or set the boot default value.

13.4.2.6.2 Flash Disable

Censorship logic disables read and write access to internal Flash according to the logic presented in [Table 13-17](#).

[Table 13-17](#) shows the encoding of the BOOTCFG signals in conjunction with the value stored in the Censorship word in the shadow row of internal flash memory. The table also shows: the name of the boot mode; whether the internal flash memory is enabled or disabled; whether the Nexus port is enabled or disabled; whether the password downloaded in serial boot mode is compared with a fixed ‘public’ password or compared to a user programmable Flash password.

Table 13-17. Flash Access Disable Logic

BOOTCFG ¹ [0:1]	Censorship Control 0x00FF_FDE0 (Upper Half)	Serial Boot Control 0x00FF_FDE2 (Lower Half)	Boot Mode Name	Internal Flash State	Nexus State ²	Serial Password
00	!0x55AA	Don't care	Internal - Censored	Enabled	Disabled	Flash
	0x55AA		Internal - Public	Enabled	Enabled	Public
01	Don't care	0x55AA	Serial - Flash Password	Enabled	Disabled	Flash
		!0x55AA	Serial - Public Password	Disabled	Enabled	Public
10	!0x55AA	Don't care	External – No Arbitration - Censored	Disabled	Enabled	Public
	0x55AA		External – No Arbitration - Public	Enabled	Enabled	Public
11	!0x55AA	Don't care	External – External Arbitration - Censored	Disabled	Enabled	Public
	0x55AA		External – External Arbitration - Public	Enabled	Enabled	Public

¹ '!' = 'NOT' Meaning any value other than the value specified

¹ BOOTCFG[0:1] bits are located in the SIU_RSR.

² The Nexus port controller is held in reset when in censored mode.

The FBIU returns a bus error if an access is attempted while Flash access is disabled. Flash access is any read, write or execute access.

13.4.2.6.3 FLASH_BIUAPR Modification

Censorship logic prevents modification of the access protection register (FLASH_BIUAPR) bit fields associated with all masters except the core according to the logic presented in [Table 13-18](#).

Table 13-18. PFBAPR Modification Logic

BOOTCFG ¹		Censorship Control Word		EXTM ²	PFBAPR Bitfields Writable
[0]	[1]	Upper Half	Lower Half		
0	0	0x55AA	0xXXXX	0	Yes
0	0	!0x55AA	0xXXXX	0	Yes

Table 13-18. PFBAPR Modification Logic (continued)

BOOTCFG ¹		Censorship Control Word		EXTM ²	PFBAPR Bitfields Writable
[0]	[1]	Upper Half	Lower Half		
1	0	0x55AA	0xXXXX	0	Yes
1	0	!0x55AA	0xXXXX	0	Yes
1	1	0x55AA	0xXXXX	0	Yes
1	1	!0x55AA	0xXXXX	0	Yes
0	1	0xXXXX	0x55AA	0	Yes
0	1	0xXXXX	!0x55AA	0	Yes
0	0	0x55AA	0xXXXX	1	Yes
0	0	!0x55AA	0xXXXX	1	No
1	0	0x55AA	0xXXXX	1	Yes
1	0	!0x55AA	0xXXXX	1	No
1	1	0x55AA	0xXXXX	1	Yes
1	1	!0x55AA	0xXXXX	1	No
0	1	0xXXXX	0x55AA	1	No
0	1	0xXXXX	!0x55AA	1	No

¹ BOOTCFG[0:1] bits are located in the SIU_RSR.

² EXTM bit is located in the EBI_MCR.

13.4.2.6.4 External Boot Default

The SIU latches the boot default value in the SIU_RSR BOOTCFG[0:1] bits if and only if $\overline{\text{RSTCFG}}$ is negated. Censorship logic sets the boot default value before the SIU latches the value to external-with-external-master access disabled (EXTM=0) if the lower half of the censorship control word equals 0xFFFF or 0x0000. Otherwise, censorship logic sets the boot default value to internal Flash.

13.4.3 Flash Memory Array: Stop Mode

Stop mode is entered by setting the FLASH_MCR[STOP] bit. The FLASH_MCR[STOP] bit cannot be written when FLASH_MCR[PGM] = 1 or FLASH_MCR[ERS] = 1. In stop mode all DC current sources in the Flash module are disabled. Stop mode is exited by clearing the FLASH_MCR[STOP] bit.

Accessing the Flash memory array when STOP is asserted results in an error response from the Flash BIU to the system bus. Memory array accesses must not be attempted until the Flash transitions out of stop mode.

13.4.4 Flash Memory Array: Reset

A reset is the highest priority operation for the Flash and terminates all other operations.

The Flash uses reset to initialize register and status bits to their default reset values. If the Flash is executing a program or erase operation and a reset is issued, the operation will be aborted and the Flash will disable the high voltage logic without damage to the high voltage circuits. Reset aborts all operations and forces the Flash into normal operating mode ready to receive accesses. FLASH_MCR[DONE] will be set to 1 at the exit of reset.

After reset is negated, register accesses can be performed, although it should be noted that registers that require updating from shadow information, or other inputs, cannot read updated values until Flash exits reset. FLASH_MCR[DONE] may be polled to determine if reset has been exited.

13.5 Document Revision History

Table 13-19. Revision History

Revision	Location(s)	Substantive Change(s)
Rev.1	Throughout	01/07: First public release.

Chapter 14

Internal Static RAM (SRAM)

14.1 Introduction

14.1.1 Block Diagram

The internal SRAM block diagram is shown in [Figure 14-1](#)

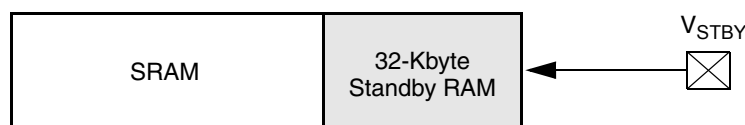


Figure 14-1. Internal SRAM Block Diagram

14.1.2 Overview

The SRAM provides 80 Kbytes of general-purpose system SRAM. The first 32-Kbyte block of the SRAM is powered by its own power supply pin for standby operation.

14.1.3 Features

The SRAM controller includes the following features:

- Supports read/write accesses mapped to the SRAM memory from any master
- 32-Kbyte block powered by separate supply for standby operation
- Byte, halfword, word, and doubleword addressable
- Single-bit correction, double- and mult-bit error detection

14.2 Modes of Operation

14.2.1 Normal (Functional) Mode

Allows for reads and writes of the SRAM memory arrays.

14.2.2 Standby Mode

Preserves the 32 Kbytes of standby memory when the 1.5V power drops below the level of V_{STBY} .

14.2.2.1 Data Retention

Updates to the standby portion of the SRAM are inhibited during system reset or during standby mode or during system reset in normal mode.

14.3 External Signal Description

The only external signal used by the SRAM is the V_{STBY} RAM power supply. If the SRAM is not used, tie the V_{STBY} pin to V_{SS} .

14.4 Memory Map/Register Definition

The SRAM occupies 80 Kbytes of address space as shown in the following table.

Table 14-1. SRAM Memory Map

Address	Register Name	Register Description	Size
Base (0x4000_0000)	—	32-Kbyte RAM, Powered by V_{STBY}	32 Kbytes
Base + 0x8000	—	48-Kbyte RAM	48 Kbytes

The internal SRAM has no registers. Registers for the SRAM ECC are located in the ECSM (refer to [Chapter 8, “Error Correction Status Module \(ECSM\),”](#) for more information).

14.5 Functional Description

The ECC checks are performed during the read portion of an SRAM ECC read/write (R/W) operation, and ECC calculations are performed during the write portion of a read/write (R/W) operation.

Because the ECC bits can contain random data after the device is powered on, you must initialize the SRAM by executing 64-bit write instructions to the entire SRAM. For more information, refer to [Section 14.7, “Initialization/Application Information.”](#)

14.6 SRAM ECC Mechanism

Internal SRAM write operations are performed on the following byte boundaries:

- 1 byte (0:7 bits)
- 2 bytes (0:15 bits)
- 4 bytes or 1 word (0:31 bits)
- 8 bytes or 2 words (0:63 bits)

If the entire 64 data bits are written to SRAM, no read operation is performed and the ECC is calculated across the entire 64-bits. The ECC bits are then merged with the data segment and written to SRAM.

If the write operation is less than the entire 64-bit data width (1-, 2-, or 4-byte segment), the following occurs:

1. The ECC checks the entire 64-bits for errors. Hardware corrects single-bit errors and flags double-bit errors.
2. The write data-bytes (1-, 2-, or 4-byte segment) and the ECC bits are merged with the original 64-bit data.
3. The ECC bits are then calculated on the new 64-bit data field.
4. The entire 8-bytes and the new ECC bits are written to SRAM.

14.6.1 Access Timing

The system bus is a two-stage pipelined bus, which makes the timing of any access dependent on the access during the previous clock. [Table 14-2](#) shows the wait states for accesses:

- “Current” column is the type of access measured during the current clock
- “Previous” column is the SRAM access during the previous clock

Table 14-2. Wait States During SRAM Access

Current	Previous	Waits
Read	Idle	1
	Pipelined Read	
	Burst Read	
	64-bit Write	2
	8/16/32-bit Write	0 (if reading from the same address) 1 (if reading from a different address)
Pipelined Read	Read	0
Burst Read	idle	1,0,0,0
8/16/32-bit Write	idle	1
	Read	
	Pipelined 8/16/32-bit write	2
	64-bit write	
	8/16/32-bit write	0 (if writing to the same address)
Pipelined 8/16/32-bit Write	8/16/32-bit Write	0
64-bit Write	idle	0
	64-bit Write	
	Read	

Table 14-2. Wait States During SRAM Access (continued)

Current	Previous	Waits
64-bit Burst Write	idle	0,0,0,0
	64-bit Write	
	Read	

14.6.2 Reset Operation

When a reset event asserts while an access to system memory is in progress, the access either completes successfully or does not occur, depending on the cycle at which the reset occurs. Any data stored during the access before the reset is retained, and no other address locations are accessed or changed. If the system SRAM is cached, dirty cache lines may not be completely written to memory unless the region is set for write through mode.

14.7 Initialization/Application Information

You must initialize the ECC check bits after the device is powered on before you can use the SRAM. Use a 64-bit cache-inhibited write to each location in SRAM to initialize the SRAM array as part of the application initialization code. The write transfer must be 64 bits. If not, a read/modify/write operation is generated that checks the ECC value upon the read.

NOTE

You must initialize the SRAM, even if the application does not use ECC reporting.

14.7.1 Example Code

For proper initialization, you must use a 64-bit write to all SRAM locations. The Book E instruction set provides the store multiple word (STMW) instruction to implement 64-bit writes. The STMW instruction concatenates two 32-bit registers for use as a single 64-bit write. To ensure the writes are 64-bits, specify an even number of registers and write on 64-bit word aligned boundaries.

The following example code illustrates the use of the STMW instruction to initialize the SRAM ECC bits.

```

init_RAM:
lis     r11,0x4000          # base address of the SRAM, 64-bit word aligned
ori     r11,r11,0          # not needed for this address but could be for others
li      r12,640            # loop counter to get all of SRAM;
                          # 80k/4 bytes/32 GPRs = 640

mtctr   r12
init_ram_loop:
stmw    r0,0(r11)         # write all 32 GPRs to SRAM
addi    r11,r11,128       # inc the ram ptr; 32 GPRs * 4 bytes = 128
bdnz    init_ram_loop     # loop for 80k of SRAM
blr     # done

```

14.8 Document Revision History

Table 14-3. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release



Chapter 15

Boot Assist Module (BAM)

15.1 Introduction

This chapter describes the boot assist module (BAM).

15.1.1 Overview

The BAM contains the MCU boot program code, identical for all MCUs with an e200z6 core. The BAM control block is connected to peripheral bridge B and occupies the last 16 Kbytes of the MCU memory space. The BAM program supports four different booting modes: from internal flash, from external memory without bus arbitration, serial boot via SCI or CAN interfaces. The BAM program is executed by the e200z6 core immediately after the MCU reset. Depending on the boot mode, the program initializes appropriate minimum MCU resources to start user code execution.

Figure 15-1 is a block diagram of the BAM.

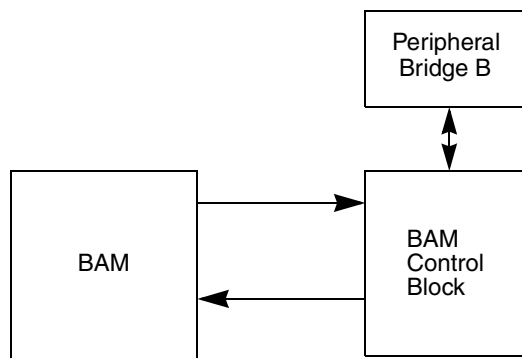


Figure 15-1. BAM Block Diagram

15.1.2 Features

The BAM program provides:

- Initial e200z6 core MMU setup with minimum address translation for all internal MCU resources and external memory address space
- Location and detection of user boot code
- Automatic switch to serial boot mode if internal or external flash is blank or invalid
- User programmable 64-bit password protection for serial boot mode
- Booting user code from internal flash module and from external memory without arbitration

- Serial boot by loading user program via CAN bus or eSCI to the internal SRAM
- Censorship protection for internal flash module
- An option to enable the e200z6 core watchdog timer
- Configuration of MMU boot block to boot as either classic PowerPC Book E code or as Freescale VLE code
- An option to configure the external data bus to 16- or 32-bits wide (416 and 496 PBGA packages only)

15.1.3 Modes of Operation

15.1.3.1 Normal Mode

In normal operation the BAM responds to all read requests within its address space. The BAM program is executed following the negation of reset.

15.1.3.2 Debug Mode

The BAM program is not executed when the MCU comes out of reset in OnCE debug mode. The user should provide the required MCU initialization using the development tool before accessing the MCU resources.

15.1.3.3 Internal Boot Mode

This mode of operation is intended for systems that boot from internal flash memory. The internal flash is used for all code and all boot configuration data. Once the BAM program has completed the boot process, user code may enable the external bus interface if required.

15.1.3.4 External Boot Modes

This mode of operation is intended for systems that have user code and configuration information in an external memory device connected to the external bus.

Note that external boot mode should not be chosen for devices that do not have an external bus.

15.1.3.5 Serial Boot Mode

This mode of operation is intended to load a user program into internal SRAM using either the eSCI or CAN serial interface, then to execute that program. The program can then be used to control the download of data and erasing/programming of the internal or external flash memory.

15.2 Memory Map and Register Definition

The BAM occupies 16 Kbytes of memory space, 0xFFFF_C000 to 0xFFFF_FFFF. The actual code size of the BAM program is less than 4 Kbytes and starts at 0xFFFF_F000, repeating itself down every 4 Kbytes in the BAM address space. The CPU starts the BAM program execution at its reset vector from address 0xFFFF_FFFC.

15.2.1 Memory Map

Table 15-1 shows the BAM address map.

Table 15-1. BAM Memory Map

Address	Description
0xFFFF_C000– 0xFFFF_CFFF	BAM Program Mirrored
0xFFFF_D000– 0xFFFF_DFFF	BAM Program Mirrored
0xFFFF_E000– 0xFFFF_EFFF	BAM Program Mirrored
0xFFFF_F000– 0xFFFF_FFFF	BAM Program

15.3 Functional Description

15.3.1 BAM Program Resources

The BAM program uses/initializes following MCU resources:

- The BOOTCFG field in the reset status register (SIU_RSR) to determine the boot option.
- The location and value of the reset configuration half word (RCHW) to determine the location of boot code and the boot configuration options. Refer to [Chapter 3, “Reset,”](#) for information about the RCHW.
- The DISNEX bit in the SIU_CCR to determine if the Nexus port is enabled.
- The MMU to allow core access to the MCU internal resources and external bus.
- The EBI registers and external bus pads, when performing external boot modes.
- The CAN_A, eSCI_A and their pads, when performing serial boot mode.
- The eDMA during serial boot mode.

15.3.2 BAM Program Operation

BAM is accessed by the MCU core after the negation of $\overline{\text{RSTOUT}}$, before user code starts.

First, the BAM program configures e200z6 core MMU to allow access to all MCU internal resources and external memory space, according the [Table 15-2](#). This MMU setup remains the same for internal flash Boot mode.

Table 15-2. MMU Configuration for Internal Flash Boot

TLB Entry	Region	Logical Base Address	Physical Base Address	Size	Attributes
0	Peripheral Bridge B and BAM	0xFFFF0_0000	0xFFFF0_0000	1 Mbyte	Cache inhibited Guarded Big Endian Global PID
1	Internal Flash	0x0000_0000	0x0000_0000	16 Mbytes	Cache enabled Not guarded Big Endian Global PID
2	EBI	0x2000_0000	0x0000_0000	16 Mbytes	Cache enabled Not guarded Big Endian Global PID
3	Internal SRAM	0x4000_0000	0x4000_0000	256 Kbytes	Cache inhibited Not guarded Big Endian Global PID
4	Peripheral Bridge A	0xC3F0_0000	0xC3F0_0000	1 Mbyte	Cache inhibited Guarded Big Endian Global PID

The MMU regions are mapped with logical address the same as physical address except for the external bus interface (EBI). The logical EBI address space is mapped to physical addresses of the internal flash memory. This allows a code, written to run from external memory, to be executed from internal flash

Then the BAM program reads the status of the two BOOTCFG pins from the reset status register (SIU_RSR) and the appropriate boot sequence is started as shown in the [Table 15-3](#).

Depending on the values stored in the censorship word and serial boot control word in the shadow row of internal flash memory, the internal flash memory can be enabled or disabled, the Nexus port can be enabled or disabled, the password received in serial boot mode is compared with a fixed public password or compared to a user programmable password in the internal flash memory. The [Table 15-3](#) summarizes all these possibilities.

Table 15-3. Boot Modes

BOOTCFG [0:1]	Censorship Control 0x00FF_FDE0	Serial Boot Control 0x00FF_FDE2	Boot Mode Name	Internal Flash State	Nexus State	Serial Password
00	!0x55AA	Don't care	Internal—Censored	Enabled	Disabled	Flash
	0x55AA		Internal—Public	Enabled	Enabled	Public
01	Don't care	0x55AA	Serial— Password	Enabled	Disabled	Flash
		!0x55AA	Serial—Public Password	Disabled	Enabled	Public

Note: '!' = 'NOT', meaning any value other than the value specified. Values 0x0000 and 0xFFFF should not be used.

Table 15-3. Boot Modes (continued)

BOOTCFG [0:1]	Censorship Control 0x00FF_FDE0	Serial Boot Control 0x00FF_FDE2	Boot Mode Name	Internal Flash State	Nexus State	Serial Password
10	!0x55AA	Don't care	External—No Arbitration—Censored	Disabled	Enabled	Public
	0x55AA		External—No Arbitration—Public	Enabled	Enabled	Public
11	Not Available					

Note: '!' = 'NOT', meaning any value other than the value specified. Values 0x0000 and 0xFFFF should not be used.

The censorship word is a 32-bit word of data stored in the shadow row of internal flash memory. This memory location is read and interpreted by hardware as part of the boot process and is used in conjunction with the BOOTCFG pins to enable/disable the internal flash memory and the Nexus interface. The memory address of the censorship word is 0x00FF_FDE0. The censorship word consists of two fields: censorship control and serial boot control. The censorship word is programmed during manufacturing to be 0x55AA_55AA. This results in a device that is not censored and uses a flash-based password for serial boot mode.

Censorship Word at 0x00FF_FDE0:

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
0	1	0	1	0	1	0	1	1	0	1	0	1	0	1	0
Censorship Control - showing an uncensored part (factory default)															
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
0	1	0	1	0	1	0	1	1	0	1	0	1	0	1	0
Serial Boot Control - showing the use of the flash based password (factory default)															

Figure 15-2. Censorship Word

The BAM program uses the state of the DISNEX bit to determine whether the serial password received in serial boot mode should be compared to a public password (fixed value of the 0xFEED_FACE_CAFE_BEEF) or needs to be compared to a flash password - 64 bits data, stored in the shadow row of internal flash at address 0x00FF_FDD8.

Flash Password at 0x00FF_FDD8:

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	1	1	1	1	1	1	0	1	1	1	0	1	1	0	1
Serial Boot Password (0x00FF_FDD8) - 0xFEED (Factory Default)															
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
1	1	1	1	1	0	1	0	1	1	0	0	1	1	1	0
Serial Boot Password (0x00FF_FDDA) - 0xFACE (Factory Default)															
32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
1	1	0	0	1	0	1	0	1	1	1	1	1	1	1	0
Serial Boot Password (0x00FF_FDDC) - 0xCAFE (Factory Default)															
48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
1	0	1	1	1	1	1	0	1	1	1	0	1	1	1	1
Serial Boot Password (0x00FF_FDDE) - 0xBEEF (Factory Default)															

Figure 15-3. Serial Boot Flash Password

The BAM program continues to make specific initialization in one of the four boot modes.

15.3.2.1 Internal Boot Mode Flow

When the BAM software detects internal flash boot mode, it sets up a bus error exception handler because it will be accessing flash memory locations that may be corrupted and cause a bus error. Then the BAM program tries to find a valid RCHW in six predefined locations. If a valid RCHW is found, the BAM program enables the e200z6 watchdog timer with the RCHW[WTE] bit. If a valid RCHW is not found, the BAM program proceeds to the serial boot mode.

15.3.2.1.1 Finding Reset Configuration Half Word

The BAM searches the internal flash memory for a valid reset configuration half word (RCHW). A valid RCHW is a 16-bit value that contains a fixed 8-bit boot identifier and some configuration bits (see [Section 3.4.3.5.1, “Reset Configuration Half Word Definition,”](#)). The RCHW is expected to be the first half word in one of the low address space flash blocks as shown in [Table 15-4](#).

Table 15-4. Low Address Space (LAS) Block Memory Addresses

Block	Address
0	0x0000_0000
1	0x0000_4000
2	0x0001_0000

Table 15-4. Low Address Space (LAS) Block Memory Addresses (continued)

Block	Address
3	0x0001_C000
4	0x0002_0000
5	0x0003_0000

BOOT_BLOCK_ADDRESS is the first address from Table 15-4, where the BAM program finds a valid RCHW.

If the BAM program does find a valid RCHW, the watchdog is enabled with the RCHW[WTE] bit, the BAM program fetches the reset vector from the address of the BOOT_BLOCK_ADDRESS + 0x4, and branches to the reset boot vector. A user application should have a valid instruction at the reset boot vector address.

BOOT_BLOCK_ADDRESS + 0x0000_0004

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15
16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
A16	A17	A18	A19	A20	A21	A22	A23	A24	A25	A26	A27	A28	A29	A30	A31

Figure 15-4. Reset Boot Vector

The watchdog timeout is set to 2.5×2^{17} system clock periods if the watchdog is enabled.

15.3.2.2 External Boot Modes Flow

The external boot mode is used to boot a user application from an external asynchronous memory that is connected to the MCU external bus; it is controlled by CS0.

15.3.2.2.1 External Boot MMU Configuration

As shown in Table 15-5, the BAM program sets up the two MMU regions differently than in internal flash boot mode (refer to Table 15-2). The internal flash logical address space is mapped to the physical addresses of the EBI.

Table 15-5. MMU Configuration for an External Boot

TLB Entry	Region	Logical Base Address	Physical Base Address	Size	Attributes
1	Internal Flash Memory	0x0000_0000	0x2000_0000	16 Mbytes	<ul style="list-style-type: none"> • Cache enabled • Not guarded • Big Endian • Global PID
2	EBI	0x2000_0000	0x2000_0000	16 Mbytes	<ul style="list-style-type: none"> • Cache enabled • Not guarded • Big Endian • Global PID

This allows a code, written to run from internal flash memory, to be executed from the external memory.

15.3.2.2.2 Single Bus Master or Multiple Bus Masters

External boot mode has two options for booting:

- External boot with no arbitration — This option is a single master system where the MCU is the only bus master in the system and therefore does not need to consider arbitration of the external bus. See [Section 15.3.2.2.3, “External Boot—Single Master with no Arbitration EBI Configuration.”](#)
- External boot with external arbitration — This option is where there is another bus master on the external bus and arbitration of the bus is handled external to the MCU. See [Section 15.3.2.2.4, “External Boot with External Arbitration EBI Configuration.”](#)

NOTE

This device does not support multi-master operation, therefore the External Boot with External Arbitration Configuration ([Section 15.3.2.2.4, “External Boot with External Arbitration EBI Configuration”](#)) must not be used.

These two modes are selected based on the state of the two BOOTCFG pins.

In a multiple master system where both are booting from the same external bus memory, one boots in external boot with no arbitration mode while the other boots in external boot with external arbitration mode.

The configuration of the EBI is different for the two modes.

Refer to [Section 12.5.5.2, “Arbitration with No Arb Pins \(Master/Slave only\),”](#) and [Section 12.4.2.10, “Bus Operation in External Master Mode,”](#) and [Section 12.5.5, “Dual-MCU Operation with Reduced Pinout MCUs \(MPC5567\),”](#) for a discussion on implementing a master/slave system on an MCU that has no arbitration pins.

15.3.2.2.3 External Boot—Single Master with no Arbitration EBI Configuration

The BAM program configures:

1. Chip select $\overline{CS0}$ region as a 16-bit port with a base address of 0x2000_0000, no burst, 15 wait states, 8 Mbyte size.

2. EBI for no external master (clear EXTM bit).
3. Enables the EBI for normal operation.
4. Configures the following I/O pins as bus signals: address signals[8:31]; data[0:15]; $\overline{WE0}$; \overline{OE} ; \overline{TS} ; $\overline{CS0}$. Data[16:31] is also configured if RCHW[PS0] = 0.

15.3.2.2.4 External Boot with External Arbitration EBI Configuration

In the external boot mode with external arbitration the BAM program also does the following:

1. Sets the EXTM bit, enabling the EBI for external master operation.
2. Configures EBI for external arbitration (sets the EARB bit). (Note: This device does not support multi-master operation, therefore do not use External Boot with External Arbitration)

Table 15-6. External Bus Interface Configuration

Pins ¹	Function After Device Reset	Function and Value After BAM Execution				
		Serial Boot Mode ² or Internal Boot Mode	External Boot with no Arbitration ³ (Single Master Mode)		External Boot with External Arbitration ³ (Multi Master Mode)	
	Function	Function	Function	PCR Value	Function	PCR Value
ADDR[8:31]	GPIO	GPIO	ADDR[8:31]	0x0440	ADDR[8:31]	0x0440
DATA[16:31]	GPIO	GPIO	GPIO or DATA[16:31] ⁴	Default or 0x1440 ⁴	GPIO or DATA[16:31] ⁴	Default or 0x1440 ⁴
DATA[0:15]	GPIO	GPIO	DATA[0:15]	0x0440	DATA[0:15]	0x0440
\overline{TEA}	GPIO	GPIO	GPIO	Default ⁵	GPIO	Default ⁵
$\overline{CS0}$	GPIO	GPIO	CS0	0x0443	CS0	0x0443
CS[1:3]	GPIO	GPIO	GPIO	Default ⁵	GPIO	Default ⁵
$\overline{WE0_BE0}$	GPIO	GPIO	WE0	0x0443	WE0_BE0	0x0443
$\overline{WE}[1:3]_BE[1:3]$	GPIO	GPIO	GPIO	Default ⁵	GPIO	Default ⁵
\overline{OE}	GPIO	GPIO	OE	0x0443	OE	0x0443
\overline{TS}	GPIO	GPIO	TS	0x0443	TS	0x0443
\overline{TA}	GPIO	GPIO	GPIO	Default ⁵	GPIO	Default ⁵
RD_ \overline{WR}	GPIO	GPIO	GPIO	Default ⁵	GPIO	Default ⁵
BDIP	GPIO	GPIO	GPIO	Default ⁵	GPIO	Default ⁵

¹ Refer to [Chapter 12, “External Bus Interface \(EBI\),”](#) as not all signals are implemented on all MPC5xxx devices.

² This column is for serial boot mode only when entered directly using the BOOTCFG signals (See note 2).

³ If serial boot is entered indirectly from either external boot mode because a valid RCHW was not found, the EBI remains configured according to these columns. This device does not support multi-master operation, therefore do not use External Boot with External Arbitration.

⁴ If the BAM reads a valid RCHW with the PS0 bit clear, data[16:31] are reconfigured from GPIO to data bus signals by writing 0x0440 to the PCRs.

⁵ The BAM does not write to this signal's PCR; the value is the default PCR value. Refer to [Chapter 6, “System Integration Unit \(SIU\),”](#)

15.3.2.2.5 Reset Configuration Half Word Read

The BAM program checks for a valid reset configuration half word (RCHW, see [Figure 15-4](#)) at the first location in external memory, i.e address 0x2000_0000.

If the BAM program fails to find a valid RCHW, it assumes the external memory does not contain a user application and switches to serial boot mode.

If the BAM program does find a valid RCHW, it configures data pins and $\overline{CS0}$ port size according to the RCHW[PS0] bit and the e200z6 core watchdog according to the RCHW[WTE] bit. According to RCHW[VLE], the MMU boot block is configured to boot as either classic PowerPC Book E code or as Freescale VLE code. The watchdog timeout is set to 2.5×2^{17} system clock periods. Then the BAM program reads the reset vector ([Figure 15-4](#)) from the address 0x2000_0004 and branches to that reset vector address, starting user program execution.

15.3.2.3 Serial Boot Mode Operation

In this mode of operation, the CAN_A and the eSCI_A GPIO signals are reconfigured, unused message buffers in CAN_A are used as scratch pad RAM, the MMU is setup; the watchdog is enabled. No exceptions are used.

15.3.2.3.1 Serial Boot Mode MMU and EBI Configuration

The BAM program sets up the MMU for all peripheral and memory regions in one of two different modes and sets up the EBI in one of three different modes; depending on how serial boot mode was entered.

If serial boot mode is entered directly by choosing the mode with the BOOTCFG signals, or was entered indirectly from internal boot mode because no valid RCHW was found, then the MMU is configured the same way as for internal boot mode. See [Table 15-3](#) for more information. The EBI is disabled and all bus pins function as GPIO.

If serial boot mode is entered indirectly from external boot/single master because no valid RCHW was found, then the MMU and EBI are configured the same way as for one of the external boot modes with a 16-bit data bus. See [Table 15-5](#) for more information.

15.3.2.3.2 Serial Boot Mode CAN and eSCI Configuration

In serial boot mode, the BAM program configures CAN_A and eSCI_A to receive messages. The CNRX_A signal and the RXD_A signals are configured as inputs to the CAN and eSCI modules. The CNTX_A signal is configured as an output from the CAN module. The TXD_A signal of the eSCI_A remains configured as GPIO input. The BAM program writes the e200z6 core timebase registers (TB) to 0x0000_0000_0000_0000 and enables the e200z6 core watchdog timer to use the system clock and to cause a reset after a time-out period of 3×2^{28} system clock cycles. (See [Table 15-8](#) for examples of time out periods.)

In serial boot mode the CAN controller is configured to operate at a baud (bit) rate equal to the system clock frequency divided by 60 with one message buffer (MB) using the standard 11-bit identifier format detailed in the CAN 2.0A specification. Refer to [Section 23.4.5.4, “Protocol Timing”](#) for information on CAN bit rate generation.

Coming out of reset, with PLLCFG2 = 0, the default system clock is x 1.5 the crystal frequency. If PLLCFG2 = 1, however, the system clock is x 0.75 the crystal frequency. (See [Chapter 11, “Frequency Modulated Phase Locked Loop and System Clocks \(FMPLL\)”](#), for more information.) Also, the baud rates with PLL enabled will be the crystal frequency / 40 if PLLCFG2 = 0, and the crystal frequency / 80 if PLLCFG2 = 1. [Table 15-7](#) shows CAN operation at reset.

Table 15-7. BAM CAN Frequency at Reset (FMPLL Enabled out of Reset)

FMPLL Clock Mode		System Clock Frequency after Reset	Serial Boot Mode Frequency ¹ (CAN Baud Rate)
Crystal Reference Mode or External Reference Mode	PLLCFG2 = 0	1.5 x Crystal Reference Frequency ²	Crystal Reference Frequency / 40
	PLLCFG2 = 1	0.75 x Crystal Reference Frequency ²	Crystal Reference Frequency / 80
Dual Controller Mode		2 x EXTCLK	EXTCLK / 30

¹ Serial boot mode frequency is set in software as the system clock frequency divided by 60.

² Crystal reference frequency can be 8 – 20MHz or 16 – 40MHz.

The BAM ignores the following errors:

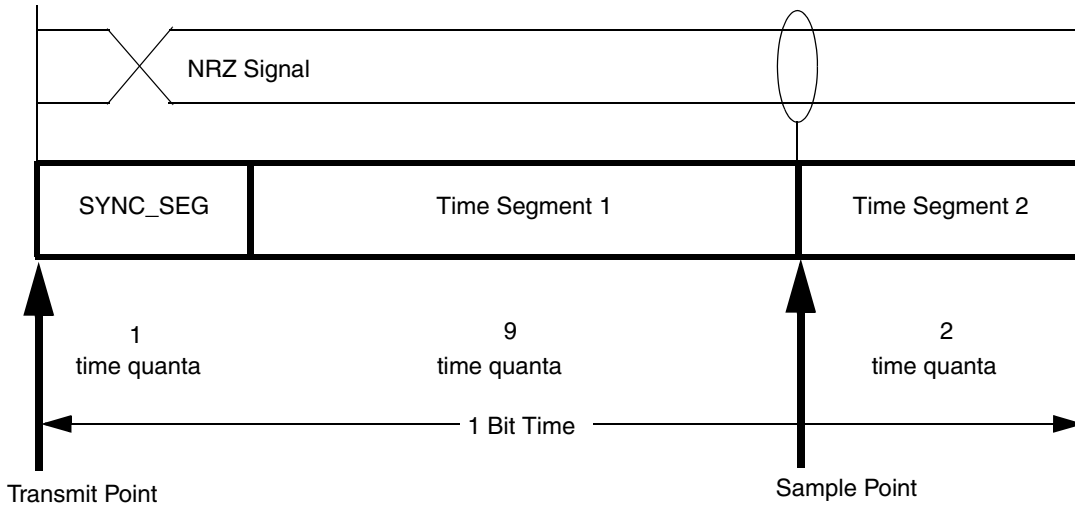
- Bit1 errors
- Bit0 errors
- Acknowledge errors
- Cyclic redundancy code errors
- Form errors
- Stuffing errors
- TX error counter errors
- Rx error counter errors

All data received is assumed to be good and is echoed out on the CNTX_A signal.

NOTE

It is the responsibility of the host computer to compare the ‘echoes’ with the sent data and restart the process if an error is detected.

See [Figure 15-5](#) for details of CAN bit timing.



1 time Quanta = 5 system clock periods = 3 1/3 crystal clock periods (with PLL enabled)

Figure 15-5. CAN Bit Timing

The eSCI is configured for 1 start bit, 8 data bits, no parity and 1 stop bit and to operate at a baud rate equal to the system clock divided by 1250. See [Table 15-8](#) for examples of baud rates.

The BAM ignores the following eSCI errors:

- Overrun errors
- Noise errors
- Framing errors
- Parity errors

All data received is assumed to be good and is echoed out on the TXD signal. It is the responsibility of the host computer to compare the echoes with the sent data and restart the process if an error is detected.

Table 15-8. Serial Boot Mode - Baud Rate and Watchdog Summary

Crystal Frequency (MHz)	System Clock Frequency (MHz)	PLLCFG2 Values	SCI Baud Rate (baud)	CAN Baud Rate (baud)	Watchdog Timeout period (seconds)
f_{xtal}	$f_{sys}=1.5 * f_{xtal}$	–	$f_{sys} / 1250$	$f_{sys} / 60$	$3 * 2^{28} / f_{sys}$
8	12	0	9600	200K	67.1
12	18	0	14400	300K	44.7
16	24	0	19200	400K	33.6
20	30	0	24000	500K	26.8
f_{xtal}	$f_{sys}=.75 * f_{xtal}$	–	$f_{sys} / 1250$	$f_{sys} / 60$	$3 * 2^{28} / f_{sys}$
16	12	1	9600	200K	67.1
24	18	1	14400	300K	44.7

Table 15-8. Serial Boot Mode - Baud Rate and Watchdog Summary (continued)

Crystal Frequency (MHz)	System Clock Frequency (MHz)	PLLCFG2 Values	SCI Baud Rate (baud)	CAN Baud Rate (baud)	Watchdog Timeout period (seconds)
32	24	1	19200	400K	33.6
40	30	1	24000	500K	26.8

Upon reception of either a valid CAN message with an ID equal to 0x011 and containing 8 bytes of data or a valid eSCI message, the BAM moves to one of two serial boot submodes: either CAN serial boot mode or eSCI serial boot mode.

In CAN serial boot mode, the eSCI_A signal RXD_A reverts to GPIO input. The ensuing download protocol is assumed to be all on the CAN bus; eSCI messages are ignored.

In eSCI serial boot mode, the CAN_A signals CNRX_A and CNTX_A revert to GPIO inputs and the TXD_A signal is configured as an output. The ensuing download protocol is assumed to be on the eSCI bus and CAN messages are ignored.

Table 15-9. CAN/eSCI Reset Configuration for CAN/eSCI Boot

Pins	Reset Function	Initial Serial Boot Mode	Serial Boot Mode after a valid CAN message received	Serial Boot Mode after a valid eSCI message received
CNTX_A	GPIO	CNTX_A	CNTX_A	GPIO
CNRX_A	GPIO	CNRX_A	CNRX_A	GPIO
TXD_A	GPIO	GPIO	GPIO	TXD_A
RXD_A	GPIO	RXD_A	GPIO	RXD_A

Table 15-10. CAN/eSCI Reset Pin Configuration

Pins	I/O	Weak Pull-Up State	Hysteresis	Driver Configuration	Slew Rate	Input Buffer Enable
CNTX_A / TXD_A	Output	Enabled/Up	—	Push/Pull	Medium	N
CNRX_A / RXD_A	Input	Enabled/Up	Y	—	—	—
GPIO	Input	Enabled/Up	Y	—	—	—

15.3.2.3.3 CAN Serial Boot Mode Download Protocol

The download protocol follows 4 steps:

1. Download 64-bit password
2. Download start address and size of download
3. Download data
4. Execute code from start address

Each step must complete before the next step starts.

1. Download 64-bit password

The host computer must send a CAN message with ID = 0x011 and containing the 64-bit serial download password. CAN messages with other IDs or fewer bytes of data are ignored. When a valid message has been received, the BAM transmits a CAN message using ID = 0x001 and containing the data received. The host should not send a second CAN message until the echo of the first message has been received. A CAN message sent before the echo is received is ignored.

The received 64-bit password is checked for validity. It is checked to ensure that none of the 4 x 16-bit half words are 0x0000 or 0xFFFF. These are considered illegal passwords. A password must have at least one 0 and one 1 in each half word lane to be considered legal.

The BAM program then checks the censorship status of the MCU by checking the DISNEX bit in the SIU_CCR. If Nexus is disabled, the MCU is considered to be censored and the password is compared with a password stored in the shadow row in internal flash memory.

If Nexus is enabled, the MCU is considered to be not censored or booting from external flash and the password is compared to the fixed value = 0xFEED_FACE_CAFE_BEEF.

If the password fails any of these validity tests, the MCU stops responding to all stimulus. To repeat boot operation the MCU needs to be reset by external reset or by watchdog. If the password is valid, the BAM program refreshes the e200z6 watchdog timer and the next step in the protocol can be performed.

2. Download start address and size of download

The host computer must send a CAN message with ID = 0x012 and containing a 32 bit address in internal SRAM, indicating where the following data should be stored in the memory map of the MCU; and a 32 bit number indicating how many bytes of data are to be received and stored in memory before switching to execute the code just loaded. The start address is assumed to be on a word boundary (4 bytes), therefore the least significant 2 bits of the address are ignored. CAN messages with other IDs or fewer bytes of data are ignored. When a valid message has been received, the BAM transmits a CAN message using ID = 0x002 and containing the data received. The host should not send a another CAN message until the echo of the previous message has been received by the host. A CAN message sent before the echo is received is ignored.

3. Download data

The host computer must send a succession of CAN messages with ID = 0x013 (The data length is variable) and containing raw binary data. Each byte of data received is stored in the MCU's memory, starting at the address specified in the previous protocol step and incrementing through memory until the number of bytes of data received and stored in memory matches the number specified in the previous protocol step. CAN messages with other IDs are ignored. When a valid message has been received, the BAM transmits a CAN message using ID = 0x003 and containing the data received. The host should not send another CAN message until the echo of the previous message has been received by the host. A CAN message sent before the echo is received is ignored.

NOTE

Internal SRAM is protected by 64 bit wide error correction coding hardware (ECC). This means that any write to uninitialized internal SRAM must be 64 bits wide, otherwise an ECC error occurs. Therefore the BAM buffers downloaded data until 8 bytes have been received then does a single 64 bit wide write. Only internal SRAM supports 64 bit writes therefore attempting to download data to other RAM apart from internal SRAM causes errors. If the start address of the downloaded data is not on an 8 byte boundary, the BAM writes 0x00 to the memory locations from the preceding 8 byte boundary to the start address (maximum 4 bytes). The BAM also writes 0x00 to all memory locations from the last byte of data downloaded to the following 8 byte boundary (maximum 7 bytes)

4. Execute code

The BAM waits for the last CAN message transmission to complete. Then the CAN controller is disabled. CNTX_A and CNRX_A revert to GPIO inputs. Then the BAM switches execution to the downloaded code by branching to the first address in which code is stored, as specified in step 2 of the protocol.

NOTE

The code that is downloaded and executed must periodically refresh the e200z6 watchdog timer or change the timeout period to a value that does not cause resets during normal operation.

Table 15-11. CAN Serial Boot Mode Download Protocol

Protocol Step	Host Sent Message	MCU Response Message	Action
1	CAN ID 0x011 + 64-bit password	CAN ID 0x001 + 64-bit password	Password checked for validity and compared against stored password. e200z6 Watchdog timer is refreshed if the password check is successful
2	CAN ID 0x012 + 32-bit store address + 32-bit number of bytes	CAN ID 0x002 + 32-bit store address + 32-bit number of bytes	Load address and size of download are stored for future use
3	CAN ID 0x013 + 8 to 64 bits of raw binary data	CAN ID 0x003 + 8 to 64 bits of raw binary data	Each byte of data received is store in MCU memory, starting at the address specified in the previous step and incrementing until the amount of data received and stored, matched the size as specified in the previous step.
4	None	None	The BAM program returns I/O pins and CAN module to their reset state, then branches to the first address the data was stored to (As specified in step 2)

15.3.2.3.4 eSCI Serial Boot Mode Protocol

The download protocol follows four steps:

1. Download 64-bit password
2. Download start address and size of download
3. Download data

4. Execute code from start address

Each step must complete before the next step starts. The eSCI operates in half duplex mode where the host sends a byte of data, then waits for the echo back from the MCU before proceeding with the next byte. Bytes sent from the host before the previous echo from the MCU is received, are ignored.

1. Download 64-bit password

The first 8 bytes of eSCI data the host computer sends must contain the 64-bit serial download password. For each valid eSCI message received, the BAM transmits the same data on the eSCI_A TXD_A signal.

The received 64-bit password is checked for validity. It is checked to ensure that none of the 4 x 16-bit half words are 0x0000 or 0xFFFF, which are considered illegal passwords. A password must have at least one 0 and one 1 in each half word lane to be considered legal.

The BAM program then checks the censorship status of the MCU by checking the DISNEX bit in the SIU_CCR. If Nexus is disabled, the MCU is considered to be censored and the password is compared with a password stored in the shadow row in internal flash memory.

If Nexus is enabled, the MCU is considered to be not censored or is booting from external flash and the password is compared to the fixed value of 0xFEED_FACE_CAFE_BEEF.

If the password fails any of these validity tests, the MCU stops responding to all stimulus. To repeat the boot operation the only options are to assert the RESET signal or wait for watchdog reset the MCU. If the password is valid, the BAM refreshes the e200z6 watchdog timer and the next step in the protocol can be performed.

2. Download start address and size of download

The next 8 bytes of eSCI data the host computer sends must contain a 32-bit address in internal SRAM, indicating where the following data should be stored in the memory map of the MCU; and a 32-bit number indicating how many bytes of data are to be received and stored in memory before switching to execute the code just loaded. The start address is assumed to be on a word boundary (4 bytes), therefore the least significant 2 bits of the address are ignored. For each valid eSCI message received, the BAM transmits the same data on the eSCI_A TXD_A signal.

3. Download data

The host computer must then send a succession of eSCI messages, each containing raw binary data. Each byte of data received is stored in the MCU's memory, starting at the address specified in the previous protocol step and incrementing through memory until the number of bytes of data received and stored in memory matches the number specified in the previous protocol step. For each valid eSCI message received, the BAM transmits the same data on the eSCI_A TXD_A signal.

NOTE

Internal SRAM is protected by 64 bit wide error correction coding hardware (ECC). This means that any write to uninitialized internal SRAM must be 64 bits wide, otherwise an ECC error occurs. Therefore the BAM buffers downloaded data until 8 bytes have been received then does a single 64 bit wide write. Only internal SRAM supports 64 bit writes therefore attempting to download data to other RAM apart from internal SRAM causes errors. If the start address of the downloaded data is not on an 8 byte boundary, the BAM writes 0x00 to the memory locations from the preceeding 8 byte boundary to the start address (maximum 4 bytes). The BAM also writes 0x00 to all memory locations from the last byte of data downloaded to the following 8 byte boundary (maximum 7 bytes).

4. Execute code

The BAM waits for the last eSCI message transmission to complete and then the eSCI is disabled. TXD_A and RXD_A revert to general-purpose inputs. The BAM switches execution to the downloaded code by branching to the first address in which code was stored, as specified in step 2 of the protocol.

NOTE

The code that is downloaded and executed must periodically refresh the e200z6 watchdog timer or change the timeout period to a value that does not cause resets during normal operation.

Table 15-12. eSCI Serial Boot Mode Download Protocol

Protocol Step	Host Sent Message	BAM Response Message	Action
1	64-bit password MSB first	64-bit password	Password checked for validity and compared against stored password. e200z6 watchdog timer is refreshed if the password check is successful
2	32-bit store address + 32-bit number of bytes MSB first	32-bit store address + 32-bit number of bytes	Load address and size of download are stored for future use
3	8 bits of raw binary data	8 bits of raw binary data	Each byte of data received is store in MCU memory, starting at the address specified in the previous step and incrementing until the amount of data received and stored, matched the size as specified in the previous step.
4	None	None	The BAM returns I/O pins and the eSCI module to their reset state, with the exception that ESCI_A_CR2[MDIS] is asserted rather than negated. Then it branches to the first address the data was stored to (as specified in step 2)

15.3.3 Interrupts

No interrupts are generated by or are enabled by the BAM.

15.4 Revision History

Table 15-13. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 16

Fast Ethernet Controller (FEC)

16.1 Introduction

This fast ethernet control chapter of the device reference manual provides a feature-set overview, a functional block diagram, and transceiver connection information for both the 10 and 100 Mbps MII (media independent interface), as well as the 7-wire serial interface. Additionally, detailed descriptions of operation and the programming model are included.

16.1.1 Block Diagram

The block diagram of the FEC is shown below. The FEC is implemented with a combination of hardware and microcode. The off-chip (Ethernet) interfaces are compliant with industry and IEEE® 802.3 standards.

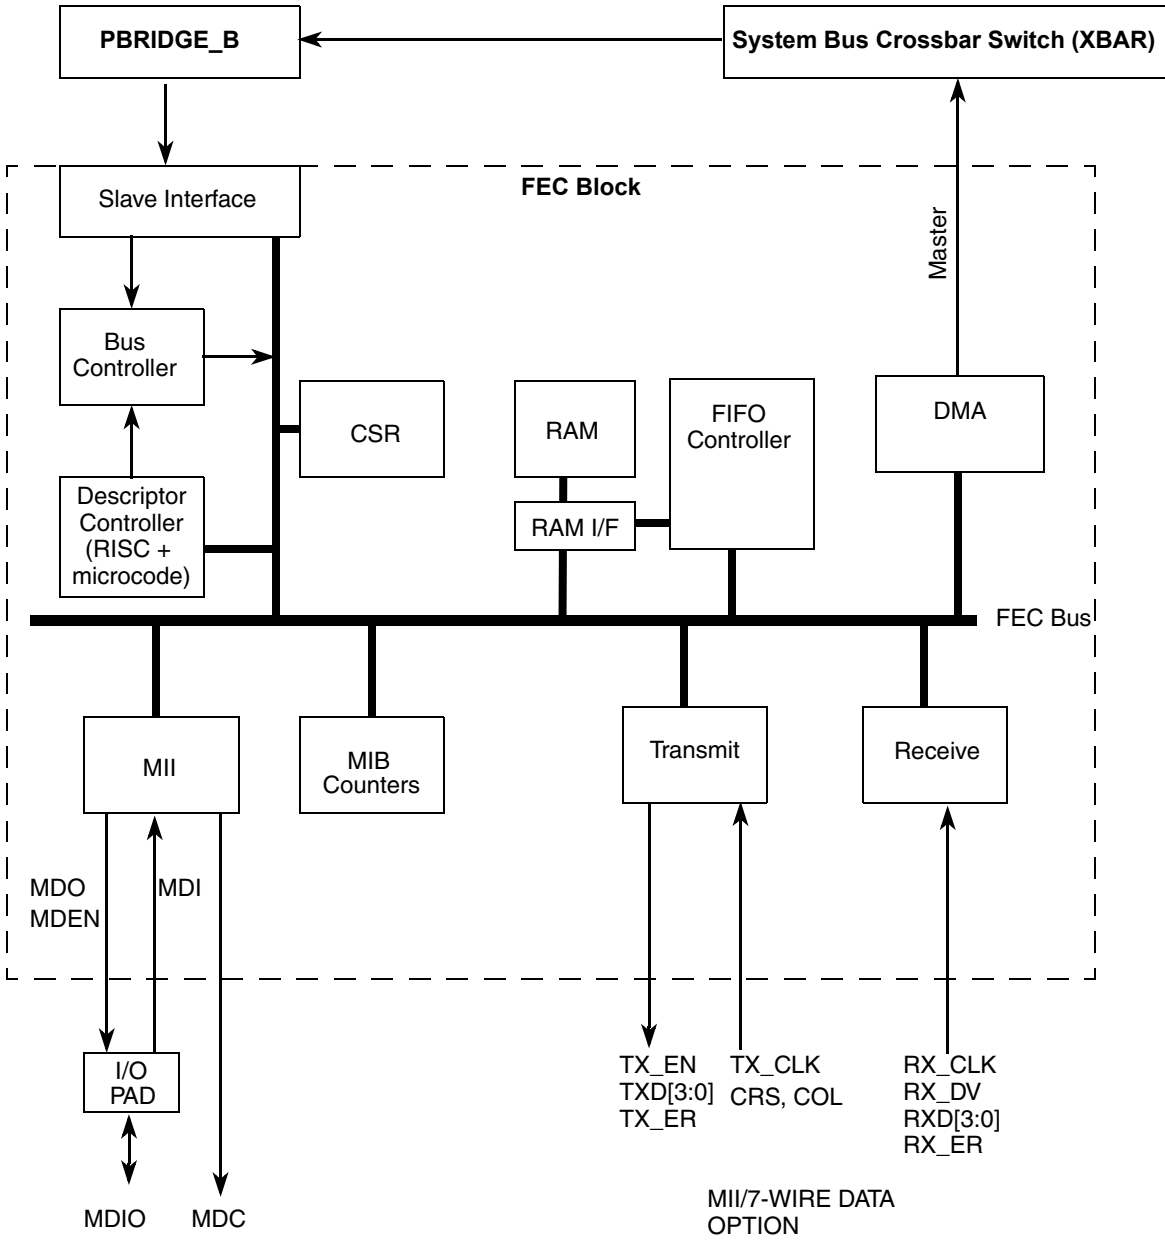


Figure 16-1. FEC Block Diagram

16.1.2 Overview

The Ethernet media access controller (MAC) is designed to support both 10 and 100 Mbps Ethernet/IEEE® 802.3 networks. An external transceiver interface and transceiver function are required to complete the interface to the media. The FEC supports three different standard MAC-PHY (physical) interfaces for connection to an external Ethernet transceiver. The FEC supports the 10/100 Mbps MII and the 10 Mbps-only 7-wire interface, which uses a subset of the MII signals.

The descriptor controller is a RISC-based controller that provides the following functions in the FEC:

- Initialization (those internal registers not initialized by the user or hardware)
- High level control of the DMA channels (initiating DMA transfers)
- Interpreting buffer descriptors
- Address recognition for receive frames
- Random number generation for transmit collision backoff timer

NOTE

DMA references in this section refer to the FEC's DMA engine. This DMA engine is for the transfer of FEC data only, and is not related to the DMA controller described in [Chapter 9, "Enhanced Direct Memory Access \(eDMA\)."](#)

The RAM is the focal point of all data flow in the fast Ethernet controller and is divided into transmit and receive FIFOs. The FIFO boundaries are programmable using the FRSR register. User data flows to/from the DMA block from/to the receive/transmit FIFOs. Transmit data flows from the transmit FIFO into the transmit block and receive data flows from the receive block into the receive FIFO.

The user controls the FEC by writing, through the slave interface module, into control registers located in each block. The CSR (control and status register) block provides global control (e.g. Ethernet reset and enable) and interrupt handling registers.

The MII block provides a serial channel for control/status communication with the external physical layer device (transceiver). This serial channel consists of the MDC (management data clock) and MDIO (management data input/output) lines of the MII interface.

The DMA block provides multiple channels allowing transmit data, transmit descriptor, receive data, and receive descriptor accesses to run independently.

The transmit and receive blocks provide the Ethernet MAC functionality (with some assist from microcode).

The message information block (MIB) maintains counters for a variety of network events and statistics. It is not necessary for operation of the FEC but provides valuable counters for network management. The counters supported are the RMON (RFC 1757) Ethernet Statistics group and some of the IEEE® 802.3 counters.

16.1.3 Features

The FEC incorporates the following features:

- Support for three different Ethernet physical interfaces:
 - 100-Mbps IEEE® 802.3 MII
 - 10-Mbps IEEE® 802.3 MII
 - 10-Mbps 7-wire interface (industry standard)
- Built-in FIFO and DMA controller
- IEEE® 802.3 MAC (compliant with IEEE® 802.3 1998 edition)
- Programmable max frame length supports IEEE® 802.1 VLAN tags and priority
- IEEE® 802.3 full duplex flow control
- Support for full-duplex operation (200 Mbps throughput) with a system clock rate of 100 MHz using the external TX_CLK or RX_CLK
- Support for half-duplex operation (100 Mbps throughput) with a system clock rate of 50 MHz using the external TX_CLK or RX_CLK
- Retransmission from transmit FIFO following a collision (no system bus utilization)
- Automatic internal flushing of the receive FIFO for runts (collision fragments) and address recognition rejects (no system bus utilization)
- Address recognition
 - Frames with broadcast address may be always accepted or always rejected
 - Exact match for single 48-bit individual (unicast) address
 - Hash (64-bit hash) check of individual (unicast) addresses
 - Hash (64-bit hash) check of group (multicast) addresses
 - Promiscuous mode
- RMON and IEEE® statistics
- Interrupts for network activity and error conditions

16.2 Modes of Operation

The primary operational modes are described in this section.

16.2.1 Full and Half Duplex Operation

Full duplex mode is intended for use on point-to-point links between switches or end node to switch. Half duplex mode is used in connections between an end node and a repeater or between repeaters. Selection of the duplex mode is controlled by TCR[FDEN].

When configured for full duplex mode, flow control may be enabled. Refer to the TCR[RFC_PAUSE] and TCR[TFC_PAUSE] bits, the RCR[FCE] bit, and [Section 16.4.10, “Full Duplex Flow Control,”](#) for more details.

Throughputs of 200 Mbps in full duplex operations and 100 Mbps in half-duplex operations can be attained.

16.2.2 Interface Options

The following interface options are supported. A detailed discussion of the interface configurations is provided in [Section 16.4.5, “Network Interface Options”](#).

16.2.2.1 10 Mbps and 100 Mbps MII Interface

MII is the media independent interface defined by the IEEE® 802.3 standard for 10/100 Mbps operation. The MAC-PHY interface may be configured to operate in MII mode by asserting RCR[MII_MODE].

The speed of operation is determined by the TX_CLK and RX_CLK signals which are driven by the external transceiver. The transceiver will either auto-negotiate the speed or it may be controlled by software via the serial management interface (MDC/MDIO signals) to the transceiver. Refer to the MMFR and MSCR register descriptions as well as the section on the MII for a description of how to read and write registers in the transceiver via this interface.

16.2.2.2 10 Mbps 7-Wire Interface Operation

The FEC supports a 7-wire interface as used by many 10 Mbps ethernet transceivers. The RCR[MII_MODE] bit controls this functionality. If this bit is deasserted, the MII mode is disabled and the 10 Mbps, 7-wire mode is enabled.

16.2.3 Address Recognition Options

The address options supported are promiscuous, broadcast reject, individual address (hash or exact match), and multicast hash match. Address recognition options are discussed in detail in [Section 16.4.8, “Ethernet Address Recognition.”](#)

16.2.4 Internal Loopback

Internal loopback mode is selected via RCR[LOOP]. Loopback mode is discussed in detail in [Section 16.4.13, “Internal and External Loopback.”](#)

16.3 Programming Model

This section gives an overview of the registers, followed by a description of the buffers.

The FEC is programmed by a combination of control/status registers (CSRs) and buffer descriptors. The CSRs are used for mode control and to extract global status information. The descriptors are used to pass data buffers and related buffer information between the hardware and software.

16.3.1 Top Level Module Memory Map

The FEC implementation requires a 1-Kbyte memory map space. This is divided into two sections of 512 bytes each. The first is used for control/status registers. The second contains event/statistic counters held in the MIB block. [Table 16-1](#) defines the top level memory map. All accesses to and from the FEC memory map must be via 32-bit accesses. There is no support for accesses other than 32-bit.

Table 16-1. Module Memory Map

Address	Function
FFF4_C000 (Base Address) – FFF4_C1FF	Control/Status Registers
FFF4_C200 – FFF4_C3FF	MIB Block Counters

16.3.2 Detailed Memory Map (Control/Status Registers)

[Table 16-2](#) shows the FEC register memory map with each register address, name, and a brief description. The base address of the FEC registers is 0xFFF4_C000.

NOTE

Some memory locations are not documented. The actual FEC memory map is from 0xFFF4_C000 - 0xFFF4_C5FF. Also, some bits in otherwise documented registers are not documented. These memory locations and bits are not needed for the FEC software driver. They are used mainly by the FEC subblocks for the FEC operation and happen to be visible through the slave interface.

Errant writes to these locations can corrupt FEC operation. Because the FEC is a system bus master, errant writes also can result in the corruption of any memory mapped location in the system. However, even errant writes to documented FEC memory locations can cause the same corruption.

Table 16-2. FEC Register Memory Map

Address Offset (Base +)	Name	Width ¹	Description
0x0004	EIR	32	Interrupt Event Register
0x0008	EIMR	32	Interrupt Mask Register
0x0010	RDAR	32	Receive Descriptor Active Register
0x0014	TDAR	32	Transmit Descriptor Active Register
0x0024	ECR	32	Ethernet Control Register
0x0040	MMFR	32	MII Management Frame Register
0x0044	MSCR	32	MII Speed Control Register
0x0064	MIBC	32	MIB Control/Status Register

Table 16-2. FEC Register Memory Map (continued)

Address Offset (Base +)	Name	Width ¹	Description
0x0084	RCR	32	Receive Control Register
0x00C4	TCR	32	Transmit Control Register
0x00E4	PALR	32	MAC Address Low Register
0x00E8	PAUR	32	MAC Address Upper Register + Type Field
0x00EC	OPD	32	Opcode + Pause Duration Fields
0x0118	IAUR	32	Upper 32 bits of Individual Hash Table
0x011C	IALR	32	Lower 32 Bits of Individual Hash Table
0x0120	GAUR	32	Upper 32 bits of Group Hash Table
0x0124	GALR	32	Lower 32 bits of Group Hash Table
0x0144	TFWR	32	Transmit FIFO Watermark
0x014C	FRBR	32	FIFO Receive Bound Register
0x0150	FRSR	32	FIFO Receive FIFO Start Registers
0x0180	ERDSR	32	Pointer to Receive Descriptor Ring
0x0184	ETDSR	32	Pointer to Transmit Descriptor Ring
0x0188	EMRBR	32	Maximum Receive Buffer Size

¹ All accesses to and from the FEC memory map must be via 32-bit accesses. There is no support for accesses other than 32-bit.

16.3.3 MIB Block Counters Memory Map

Table 16-3 defines the MIB Counters memory map which defines the locations in the MIB RAM space where hardware-maintained counters reside. These fall in the 0xFFF4_C200 – 0xFFF4_C3FF address offset range. The counters are divided into two groups.

- RMON counters are included which cover the Ethernet Statistics counters defined in RFC 1757. In addition to the counters defined in the Ethernet Statistics group, a counter is included to count truncated frames as the FEC only supports frame lengths up to 2047 bytes. The RMON counters are implemented independently for transmit and receive to insure accurate network statistics when operating in full duplex mode.
- IEEE® counters are included which support the Mandatory and Recommended counter packages defined in section 5 of ANSI/IEEE® Std. 802.3 (1998 edition). The IEEE® Basic Package objects are supported by the FEC but do not require counters in the MIB block. In addition, some of the recommended package objects which are supported do not require MIB counters. Counters for transmit and receive full duplex flow control frames are included as well.

Table 16-3. MIB Counters Memory Map

Address Offset ¹ (Base +)	Mnemonic	Description
0x0200	RMON_T_DROP	Count of frames not counted correctly
0x0204	RMON_T_PACKETS	RMON Tx packet count
0x0208	RMON_T_BC_PKT	RMON Tx Broadcast Packets
0x020C	RMON_T_MC_PKT	RMON Tx Multicast Packets
0x0210	RMON_T_CRC_ALIGN	RMON Tx Packets w CRC/Align error
0x0214	RMON_T_UNDERSIZE	RMON Tx Packets < 64 bytes, good crc
0x0218	RMON_T_OVERSIZE	RMON Tx Packets > MAX_FL bytes, good crc
0x021C	RMON_T_FRAG	RMON Tx Packets < 64 bytes, bad crc
0x0220	RMON_T_JAB	RMON Tx Packets > MAX_FL bytes, bad crc
0x0224	RMON_T_COL	RMON Tx collision count
0x0228	RMON_T_P64	RMON Tx 64 byte packets
0x022C	RMON_T_P65TO127	RMON Tx 65 to 127 byte packets
0x0230	RMON_T_P128TO255	RMON Tx 128 to 255 byte packets
0x0234	RMON_T_P256TO511	RMON Tx 256 to 511 byte packets
0x0238	RMON_T_P512TO1023	RMON Tx 512 to 1023 byte packets
0x023C	RMON_T_P1024TO2047	RMON Tx 1024 to 2047 byte packets
0x0240	RMON_T_P_GTE2048	RMON Tx packets w > 2048 bytes
0x0244	RMON_T_OCTETS	RMON Tx Octets
0x0248	IEEE_T_DROP	Count of frames not counted correctly
0x024C	IEEE_T_FRAME_OK	Frames Transmitted OK
0x0250	IEEE_T_1COL	Frames Transmitted with Single Collision
0x0254	IEEE_T_MCOL	Frames Transmitted with Multiple Collisions
0x0258	IEEE_T_DEF	Frames Transmitted after Deferral Delay
0x025C	IEEE_T_LCOL	Frames Transmitted with Late Collision
0x0260	IEEE_T_EXCOL	Frames Transmitted with Excessive Collisions
0x0264	IEEE_T_MACERR	Frames Transmitted with Tx FIFO Underrun
0x0268	IEEE_T_CSERR	Frames Transmitted with Carrier Sense Error
0x026C	IEEE_T_SQE	Frames Transmitted with SQE Error
0x0270	IEEE_T_FDXFC	Flow Control Pause frames transmitted
0x0274	IEEE_T_OCTETS_OK	Octet count for Frames Transmitted w/o Error
0x0280	RMON_R_DROP	Count of frames not counted correctly

Table 16-3. MIB Counters Memory Map (continued)

Address Offset ¹ (Base +)	Mnemonic	Description
0x0284	RMON_R_PACKETS	RMON Rx packet count
0x0288	RMON_R_BC_PKT	RMON Rx Broadcast Packets
0x028C	RMON_R_MC_PKT	RMON Rx Multicast Packets
0x0290	RMON_R_CRC_ALIGN	RMON Rx Packets w CRC/Align error
0x0294	RMON_R_UNDERSIZE	RMON Rx Packets < 64 bytes, good crc
0x0298	RMON_R_OVERSIZE	RMON Rx Packets > MAX_FL bytes, good crc
0x029C	RMON_R_FRAG	RMON Rx Packets < 64 bytes, bad crc
0x02A0	RMON_R_JAB	RMON Rx Packets > MAX_FL bytes, bad crc
0x02A4	—	Reserved
0x02A8	RMON_R_P64	RMON Rx 64 byte packets
0x02AC	RMON_R_P65TO127	RMON Rx 65 to 127 byte packets
0x02B0	RMON_R_P128TO255	RMON Rx 128 to 255 byte packets
0x02B4	RMON_R_P256TO511	RMON Rx 256 to 511 byte packets
0x02B8	RMON_R_P512TO1023	RMON Rx 512 to 1023 byte packets
0x02BC	RMON_R_P1024TO2047	RMON Rx 1024 to 2047 byte packets
0x02C0	RMON_R_P_GTE2048	RMON Rx packets w > 2048 bytes
0x02C4	RMON_R_OCTETS	RMON Rx Octets
0x02C8	IEEE_R_DROP	Count of frames not counted correctly
0x02CC	IEEE_R_FRAME_OK	Frames Received OK
0x02D0	IEEE_R_CRC	Frames Received with CRC Error
0x02D4	IEEE_R_ALIGN	Frames Received with Alignment Error
0x02D8	IEEE_R_MACERR	Receive Fifo Overflow count
0x02DC	IEEE_R_FDXFC	Flow Control Pause frames received
0x02E0	IEEE_R_OCTETS_OK	Octet count for Frames Rcvd w/o Error

¹ All accesses to and from the FEC memory map must be via 32-bit accesses. There is no support for accesses other than 32-bit.

16.3.4 Registers

16.3.4.1 FEC Burst Optimization Master Control Register (FBOMCR)

Although *not* an FEC register, the FEC burst optimization master control register (FBOMCR) controls FEC burst optimization behavior on the system bus, hence it is described below. FEC registers are

described in Section 16.3.4.2.1, “Ethernet Interrupt Event Register (EIR)” through Section 16.3.4.3.4, “Receive Buffer Size Register (EMRBR).”

In order to increase throughput, the FEC interface to the system bus can accumulate read requests or writes to burst those transfers on the system bus. The FBOMCR determines the XBAR ports for which this bursting is enabled, as well as whether the bursting is for reads, writes, or both. FBOMCR also controls how errors for writes are handled. The FBOMCR address is 0xFFFF4_0024, which is the ECSM base address 0xFFFF4_0000 plus the offset of 0x0024.

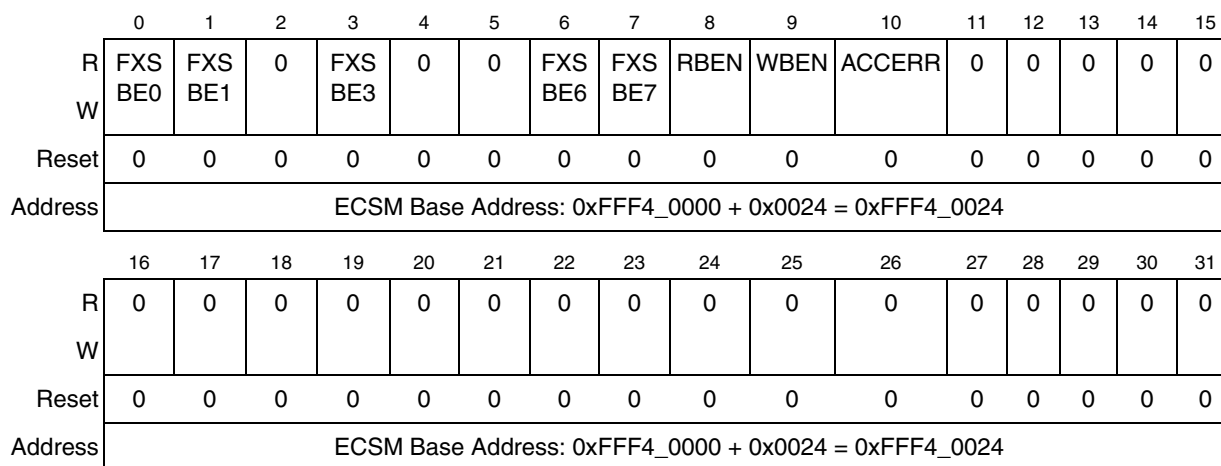


Figure 16-2. FEC Burst Optimization Master Control Register (FBOMCR)

Table 16-4. FBOMCR Field Descriptions

Bits	Name	Description
0-7	FXSBE _n [0:7]	<p>FXSBE – FEC XBAR slave burst enable. FXSBE_n enables bursting by the FEC interface to the XBAR slave port controlled by that respective FXSBE_n bit. If FXSBE_n is asserted, then that XBAR slave port enabled by the bit can accept the bursts allowed by RBEN and WBEN. Otherwise, the FEC interface will not burst to the XBAR slave port controlled by that respective FXSBE_n bit. Read bursts from that XBAR slave port are enabled by RBEN. Write bursts to that XBAR slave port are enabled by WBEN.</p> <p>FXSBE_n assignments to XBAR slave ports: FXSBE0 = Flash FXSBE1 = EBI FXSBE3 = Internal SRAM FXSBE6 = Peripheral bridge A FXSBE7 = Peripheral bridge B</p>
8	RBEN	<p>Global read burst enable from XBAR slave port designated by FXSBE_n</p> <p>0 = Read bursting from all XBAR slave ports is disabled. 1 = Read bursting is enabled from any XBAR slave port whose FXSBE_n bit is asserted.</p>

Table 16-4. FBOMCR Field Descriptions (continued)

Bits	Name	Description
9	WBEN	Global write burst enable to XBAR slave port designated by $FXSBE_n$ 0 = Write bursting to all XBAR slave ports is disabled. 1 = Write bursting is enabled to any XBAR slave port whose $FXSBE_n$ bit is asserted.
10	ACCERR	Accumulate error - This bit determines whether an error response for the first half of the write burst is accumulated to the second half of the write burst or discarded. In order to complete the burst, the FEC interface to the system bus responds by indicating that the first half of the burst completed without error before it actually writes the data so that it can fetch the second half of the write data from the FIFO. When actually written onto the system bus, the first half of the write burst can have an error. Because this half initially responded without an error to the FIFO, the error is discarded or accumulated with the error response for the second half of the burst. 0 Any error to the first half of the write burst is discarded. 1 Any actual error response to the first half of the write burst is accumulated in the second half's response. In other words, an error response to the first half will be seen in the response to the second half, even if the second half does not error.
11-31	—	Reserved, should be cleared.

16.3.4.2 FEC Registers

The following sections describe each FEC register in detail. The base address of these registers is 0xFFFF4_C000.

16.3.4.2.1 Ethernet Interrupt Event Register (EIR)

When an event occurs that sets a bit in the EIR, an interrupt will be generated if the corresponding bit in the interrupt mask register (EIMR) is also set. The bit in the EIR is cleared if a one is written to that bit position; writing zero has no effect. This register is cleared upon hardware reset.

These interrupts can be divided into operational interrupts, transceiver/network error interrupts, and internal error interrupts. Interrupts which may occur in normal operation are GRA, TXF, TXB, RXF, RXB, and MII. Interrupts resulting from errors/problems detected in the network or transceiver are HBERR, BABR, BABT, LC, and RL. Interrupts resulting from internal errors are HBERR and UN.

Some of the error interrupts are independently counted in the MIB block counters. Software may choose to mask off these interrupts since these errors will be visible to network management via the MIB counters:

- HBERR - IEEE_T_SQE
- BABR - RMON_R_OVERSIZE (good CRC), RMON_R_JAB (bad CRC)
- BABT - RMON_T_OVERSIZE (good CRC), RMON_T_JAB (bad CRC)
- LATE_COL - IEEE_T_LCOL

- COL_RETRY_LIM - IEEE_T_EXCOL
- XFIFO_UN - IEEE_T_MACERR

Address: (0xFFF4_C000) + 0x0004

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	HB ERR	BABR	BABT	GRA	TXF	TXB	RXF	RXB	MII	EB ERR	LC	RL	UN	0	0	0
W	w1c ¹	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 16-3. Ethernet Interrupt Event Register (EIR)

¹ “w1c” signifies the bit is cleared by writing 1 to it.

Table 16-5. EIR Field Descriptions

Field	Description
0 HBERR	Heartbeat error. This interrupt indicates that HBC is set in the TCR register and that the COL input was not asserted within the Heartbeat window following a transmission.
1 BABR	Babbling receive error. This bit indicates a frame was received with length in excess of RCR[MAX_FL] bytes.
2 BABT	Babbling transmit error. This bit indicates that the transmitted frame length has exceeded RCR[MAX_FL] bytes. This condition is usually caused by a frame that is too long being placed into the transmit data buffers. Truncation does not occur.
3 GRA	Graceful stop complete. This interrupt will be asserted for one of three reasons. Graceful stop means that the transmitter is put into a pause state after completion of the frame currently being transmitted. 1) A graceful stop, which was initiated by the setting of the TCR[GTS] bit is now complete. 2) A graceful stop, which was initiated by the setting of the TCR[TFC_PAUSE] bit is now complete. 3) A graceful stop, which was initiated by the reception of a valid full duplex flow control “pause” frame is now complete.”
4 TXF	Transmit frame interrupt. This bit indicates that a frame has been transmitted and that the last corresponding buffer descriptor has been updated.
5 TXB	Transmit buffer interrupt. This bit indicates that a transmit buffer descriptor has been updated.
6 RXF	Receive frame interrupt. This bit indicates that a frame has been received and that the last corresponding buffer descriptor has been updated.
7 RXB	Receive buffer interrupt. This bit indicates that a receive buffer descriptor has been updated that was not the last in the frame.
8 MII	MII interrupt. This bit indicates that the MII has completed the data transfer requested.

Table 16-5. EIR Field Descriptions (continued)

Field	Description
9 EBERR	Ethernet bus error. This bit indicates that a system bus error occurred when a DMA transaction was underway. When the EBERR bit is set, ECR[ETHER_EN] will be cleared, halting frame processing by the FEC. When this occurs software will need to insure that the FIFO controller and DMA are also soft reset.
10 LC	Late collision. This bit indicates that a collision occurred beyond the collision window (slot time) in half duplex mode. The frame is truncated with a bad CRC and the remainder of the frame is discarded.
11 RL	Collision retry limit. This bit indicates that a collision occurred on each of 16 successive attempts to transmit the frame. The frame is discarded without being transmitted and transmission of the next frame will commence. Can only occur in half duplex mode.
12 UN	Transmit FIFO underrun. This bit indicates that the transmit FIFO became empty before the complete frame was transmitted. A bad CRC is appended to the frame fragment and the remainder of the frame is discarded.
13-31	Reserved, should be cleared.

16.3.4.2.2 Ethernet Interrupt Mask Register (EIMR)

The EIMR register controls which interrupt events are allowed to generate actual interrupts. All implemented bits in this CSR are read/write. This register is cleared upon a hardware reset. If the corresponding bits in both the EIR and EIMR registers are set, the interrupt will be signalled to the CPU. The interrupt signal will remain asserted until a 1 is written to the EIR bit (write 1 to clear) or a 0 is written to the EIMR bit.

Address: Base + 0x0008

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	HB ERR	BABR	BABT	GRA	TXF	TXB	RXF	RXB	MII	EB ERR	LC	RL	UN	0	0	0
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 16-4. Interrupt Mask Register (EIMR)

Table 16-6. EIMR Field Descriptions

Field	Description
0-12 See Figure 16-3 and Table 16-5	Interrupt mask. Each bit corresponds to an interrupt source defined by the EIR register. The corresponding EIMR bit determines whether an interrupt condition can generate an interrupt. 0 The corresponding interrupt source is masked. 1 The corresponding interrupt source is not masked. Write 1 to clear.
13-31	Reserved, should be cleared.

16.3.4.2.3 Receive Descriptor Active Register (RDAR)

RDAR is a command register, written by the user, that indicates that the receive descriptor ring has been updated (empty receive buffers have been produced by the driver with the empty bit set).

Whenever the register is written, the R_DES_ACTIVE bit is set. This is independent of the data actually written by the user. When set, the FEC will poll the receive descriptor ring and process receive frames (provided ECR[ETHER_EN] is also set). Once the FEC polls a receive descriptor whose empty bit is not set, then the FEC will clear R_DES_ACTIVE and cease receive descriptor ring polling until the user sets the bit again, signifying that additional descriptors have been placed into the receive descriptor ring.

The RDAR register is cleared at reset and when ECR[ETHER_EN] is cleared.

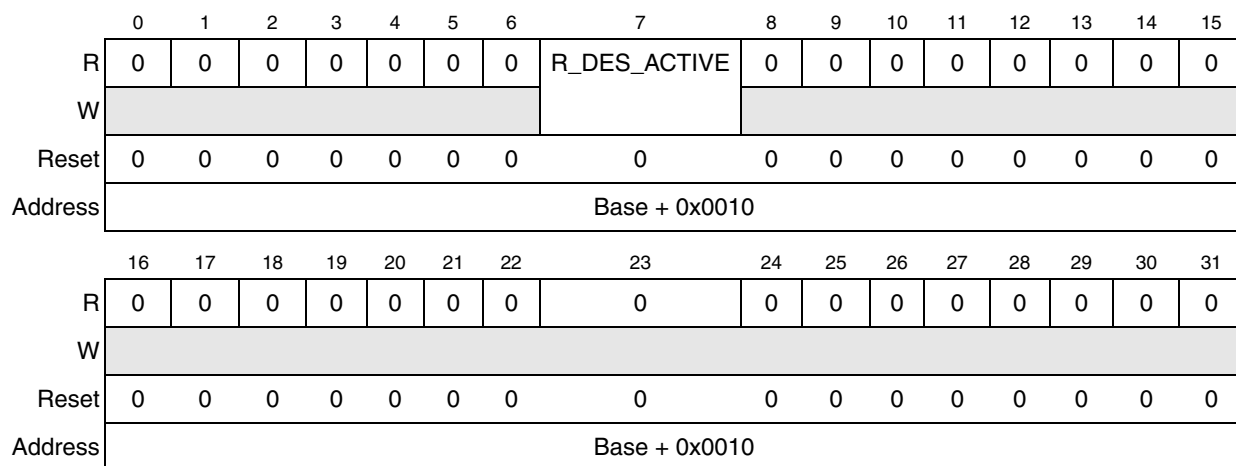


Figure 16-5. Receive Descriptor Active Register (RDAR)

Table 16-7. RDAR Field Descriptions

Field	Description
0–6	Reserved, should be cleared.
7 R_DES_ACTIVE	Set to one when this register is written, regardless of the value written. Cleared by the FEC device whenever no additional “empty” descriptors remain in the receive ring. Also cleared when ECR[ETHER_EN] is cleared.
8–31	Reserved, should be cleared.

16.3.4.2.4 Transmit Descriptor Active Register (TDAR)

The TDAR is a command register that should be written by the user to indicate that the transmit descriptor ring has been updated (transmit buffers have been produced by the driver with the ready bit set in the buffer descriptor).

Whenever the register is written, the X_DES_ACTIVE bit is set. This value is independent of the data actually written by the user. When set, the FEC will poll the transmit descriptor ring and process transmit frames (provided ECR[ETHER_EN] is also set). Once the FEC polls a transmit descriptor whose ready bit is not set, then the FEC will clear X_DES_ACTIVE and cease transmit descriptor ring polling until the user sets the bit again, signifying additional descriptors have been placed into the transmit descriptor ring.

The TDAR register is cleared at reset, when ECR[ETHER_EN] is cleared, or when ECR[RESET] is set.

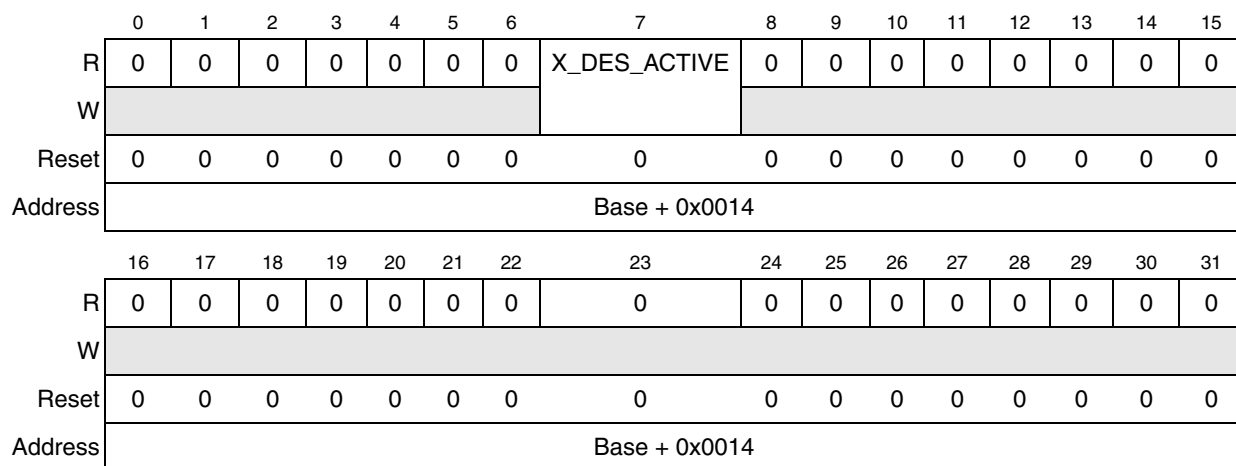


Figure 16-6. Transmit Descriptor Active Register (TDAR)

Table 16-8. TDAR Field Descriptions

Field	Description
0–6	Reserved, should be cleared.
7 X_DES_ACTIVE	Set to one when this register is written, regardless of the value written. Cleared by the FEC device whenever no additional “ready” descriptors remain in the transmit ring. Also cleared when ECR[ETHER_EN] is cleared.
8–31	Reserved, should be cleared.

16.3.4.2.5 Ethernet Control Register (ECR)

ECR is a read/write user register, though both fields in this register may be altered by hardware as well. The ECR is used to enable/disable the FEC.

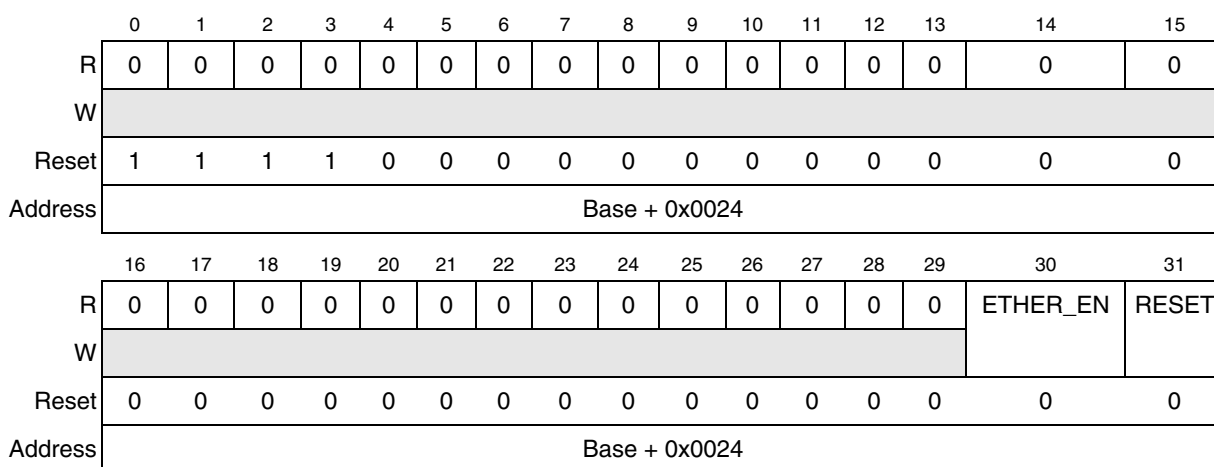



Figure 16-7. Ethernet Control Register (ECR)

Table 16-9. ECR Field Descriptions

Bits	Description
0–29	Reserved.
30 ETHER_EN	When this bit is set, the FEC is enabled, and reception and transmission are possible. When this bit is cleared, reception is immediately stopped and transmission is stopped after a bad CRC is appended to any currently transmitted frame. The buffer descriptors for an aborted transmit frame are not updated after clearing this bit. When ETHER_EN is deasserted, the DMA, buffer descriptor, and FIFO control logic are reset, including the buffer descriptor and FIFO pointers. The ETHER_EN bit is altered by hardware under the following conditions: <ul style="list-style-type: none"> • ECR[RESET] is set by software, in which case ETHER_EN will be cleared • An error condition causes the EIR[EBERR] bit to set, in which case ETHER_EN will be cleared
31 RESET	When this bit is set, the equivalent of a hardware reset is performed but it is local to the FEC. ETHER_EN is cleared and all other FEC registers take their reset values. Also, any transmission/reception currently in progress is abruptly aborted. This bit is automatically cleared by hardware during the reset sequence. The reset sequence takes approximately 8 system clock cycles after RESET is written with a 1.

16.3.4.2.6 MII Management Frame Register (MMFR)

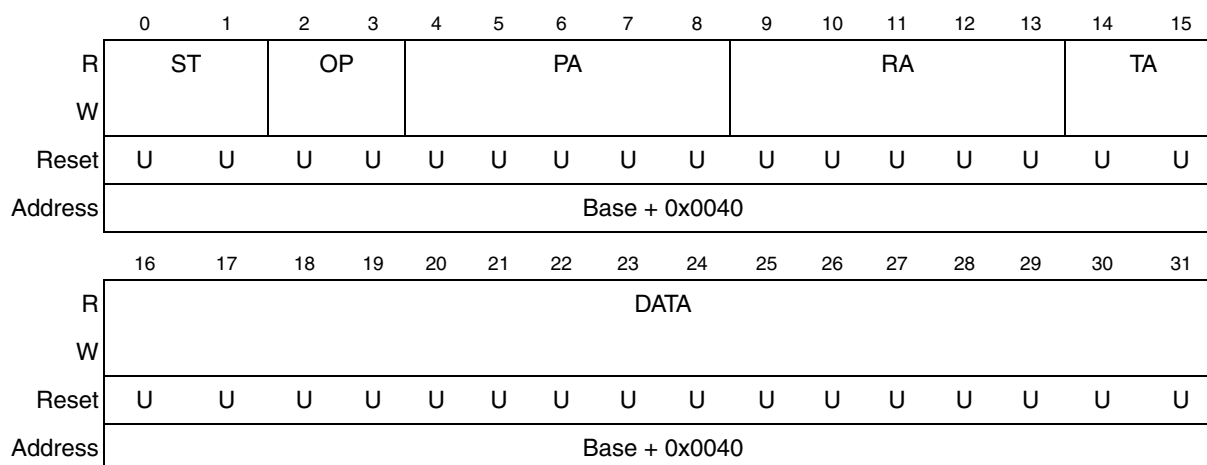The MMFR is accessed by the user and does not reset to a defined value. The MMFR register is used to communicate with the attached MII compatible PHY devices, providing read/write access to their MII registers. Performing a write to the MMFR will cause a management frame to be sourced unless the MSCR has been programmed to 0. In the case of writing to MMFR when MSCR = 0, if the MSCR register is then written to a non-zero value, an MII frame will be generated with the data previously written to the MMFR. This allows MMFR and MSCR to be programmed in either order if MSCR is currently zero.



¹ “U” signifies a bit that is uninitialized.

Figure 16-8. MII Management Frame Register (MMFR)

Table 16-10. MMFR Field Descriptions

Field	Description
0–1 ST	Start of frame delimiter. These bits must be programmed to 01 for a valid MII management frame.
2–3 OP	Operation code. This field must be programmed to 10 (read) or 01 (write) to generate a valid MII management frame. A value of 11 will produce “read” frame operation while a value of 00 will produce “write” frame operation, but these frames will not be MII compliant.
4–8 PA	PHY address. This field specifies one of up to 32 attached PHY devices.
9–13 RA	Register address. This field specifies one of up to 32 registers within the specified PHY device.
14–15 TA	Turn around. This field must be programmed to 10 to generate a valid MII management frame.
16–31 DATA	Management frame data. This is the field for data to be written to or read from the PHY register.

To perform a read or write operation on the MII management interface, the MMFR register must be written by the user. To generate a valid read or write management frame, the ST field must be written with a 01 pattern, and the TA field must be written with a 10. If other patterns are written to these fields, a frame will be generated but will not comply with the IEEE® 802.3 MII definition.

To generate an IEEE® 802.3-compliant MII management interface write frame (write to a PHY register), the user must write {01 01 PHYAD REGAD 10 DATA} to the MMFR register. Writing this pattern will cause the control logic to shift out the data in the MMFR register following a preamble generated by the control state machine. During this time the contents of the MMFR register will be altered as the contents are serially shifted and will be unpredictable if read by the user. Once the write management frame operation has completed, the MII interrupt will be generated. At this time the contents of the MMFR register will match the original value written.

To generate an MII management interface read frame (read a PHY register) the user must write {01 10 PHYAD REGAD 10 XXXX} to the MMFR register (the content of the DATA field is a don't care). Writing this pattern will cause the control logic to shift out the data in the MMFR register following a preamble generated by the control state machine. During this time the contents of the MMFR register will be altered as the contents are serially shifted, and will be unpredictable if read by the user. Once the read management frame operation has completed, the MII interrupt will be generated. At this time the contents of the MMFR register will match the original value written except for the DATA field whose contents have been replaced by the value read from the PHY register.

If the MMFR register is written while frame generation is in progress, the frame contents will be altered. Software should poll the EIR[MII] bit or use the EIR[MII] bit to generate an interrupt to avoid writing to the MMFR register while frame generation is in progress.

16.3.4.2.7 MII Speed Control Register (MSCR)

The MSCR provides control of the MII clock (MDC signal) frequency, allows a preamble drop on the MII management frame, and provides observability (intended for manufacturing test) of an internal counter used in generating the MDC clock signal.

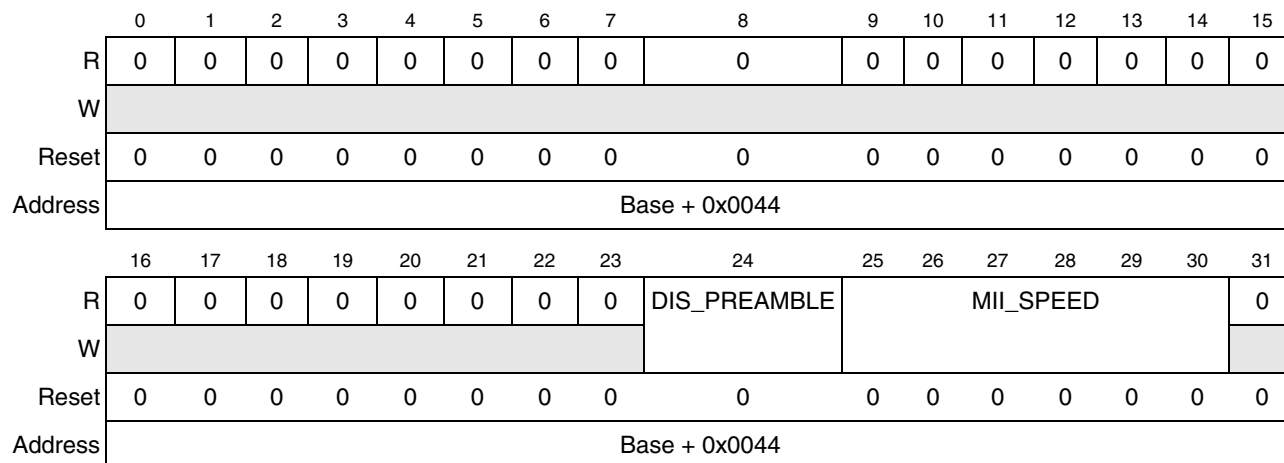


Figure 16-9. MII Speed Control Register (MSCR)

Table 16-11. MSCR Field Descriptions

Field	Description
0–23	Reserved, should be cleared.
24 DIS_PREAMBLE	Asserting this bit will cause preamble (32 1's) not to be prepended to the MII management frame. The MII standard allows the preamble to be dropped if the attached PHY devices does not require it.
25–30 MII_SPEED	MII_SPEED controls the frequency of the MII management interface clock (MDC) relative to the system clock. A value of 0 in this field will “turn off” the MDC and leave it in low voltage state. Any non-zero value will result in the MDC frequency of $1/(MII_SPEED * 4)$ of the system clock frequency.
31	Reserved, should be cleared.

The MII_SPEED field must be programmed with a value to provide an MDC frequency of less than or equal to 2.5 MHz to be compliant with the IEEE® 802.3 MII specification. The MII_SPEED must be set to a non-zero value in order to source a read or write management frame. After the management frame is complete the MSCR register may optionally be set to zero to turn off the MDC. The MDC generated will have a 50% duty cycle except when MII_SPEED is changed during operation (change will take effect following either a rising or falling edge of MDC).

If the system clock is 50 MHz, programming this register to 0x0000_0005 will result in an MDC frequency of $50\text{ MHz} * 1/20 = 2.5\text{ MHz}$. A table showing optimum values for MII_SPEED as a function of system clock frequency is provided below.

Table 16-12. Programming Examples for MSCR

System Clock Frequency	MII_SPEED (field in reg)	MDC frequency
50 MHz	0x5	2.5 MHz
66 MHz	0x7	2.36 MHz
80 MHz	0x8	2.5 MHz
100 MHz	0xA	2.5 MHz
132 MHz	0xD	2.5 MHz

16.3.4.2.8 MIB Control Register (MIBC)

The MIBC is a read/write register used to provide control of and to observe the state of the MIB block. This register is accessed by user software if there is a need to disable the MIB block operation. For example, in order to clear all MIB counters in RAM the user should disable the MIB block, then clear all the MIB RAM locations, then enable the MIB block. The MIB_DISABLE bit is reset to 1. See [Table 16-3](#) for the locations of the MIB counters.

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	MIB_DISABLE	MIB_IDLE	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Address	Base + 0x0064															
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Address	Base + 0x0064															

Figure 16-10. MIB Control Register (MIBC)
Table 16-13. MIBC Field Descriptions

Field	Description
0 MIB_DISABLE	A read/write control bit. If set, the MIB logic will halt and not update any MIB counters.
1 MIB_IDLE	A read-only status bit. If set the MIB block is not currently updating any MIB counters.
2–31	Reserved.

16.3.4.2.9 Receive Control Register (RCR)

The RCR is programmed by the user. The RCR controls the operational mode of the receive block and should be written only when ECR[ETHER_EN] = 0 (initialization time).

Address: Base + 0x0084

Access: User read/write

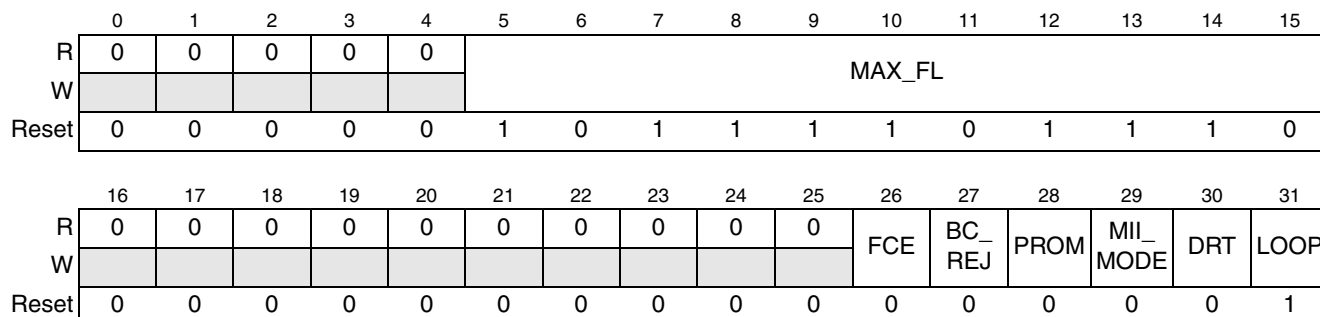


Figure 16-11. Receive Control Register (RCR)

Table 16-14. RCR Field Descriptions

Bits	Name	Description
0–4	—	Reserved, should be cleared.
5–15 MAX_FL	MAX_FL	Maximum frame length. Resets to decimal 1518. Length is measured starting at DA and includes the CRC at the end of the frame. Transmit frames longer than MAX_FL will cause the BAPT interrupt to occur. Receive frames longer than MAX_FL will cause the BAPR interrupt to occur and will set the LG bit in the end of frame receive buffer descriptor. The recommended default value to be programmed by the user is 1518 or 1522 (if VLAN Tags are supported).
16–25	—	Reserved, should be cleared.
26 FCE	FCE	Flow control enable. If asserted, the receiver will detect PAUSE frames. Upon PAUSE frame detection, the transmitter will stop transmitting data frames for a given duration.
27 BC_REJ	BC_REJ	Broadcast frame reject. If asserted, frames with DA (destination address) = FF_FF_FF_FF_FF_FF will be rejected unless the PROM bit is set. If both BC_REJ and PROM = 1, then frames with broadcast DA will be accepted and the M (MISS) bit will be set in the receive buffer descriptor.
28 PROM	PROM	Promiscuous mode. All frames are accepted regardless of address matching.
29 MII_MODE	MII_MODE	Media independent interface mode. Selects external interface mode. Setting this bit to one selects MII mode, setting this bit equal to zero selects 7-wire mode (used only for serial 10 Mbps). This bit controls the interface mode for both transmit and receive blocks.

Table 16-14. RCR Field Descriptions (continued)

Bits	Name	Description
30 DRT	DRT	Disable receive on transmit. 0 Receive path operates independently of transmit (use for full duplex or to monitor transmit activity in half duplex mode). 1 Disable reception of frames while transmitting (normally used for half duplex mode).
31 LOOP	LOOP	Internal loopback. If set, transmitted frames are looped back internal to the device and the transmit output signals are not asserted. The system clock is substituted for the TX_CLK when LOOP is asserted. DRT must be set to zero when asserting LOOP.

16.3.4.2.10 Transmit Control Register (TCR)

The TCR is read/write and is written by the user to configure the transmit block. This register is cleared at system reset. Bits 29 and 30 should be modified only when ECR[ETHER_EN] = 0.

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Address	Base + 0x00C4															
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	RFC_PAUSE	TFC_PAUSE	FDEN	HBC	GTS
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Address	Base + 0x00C4															

Figure 16-12. Transmit Control Register (TCR)
Table 16-15. TCR Field Descriptions


Field	Description
0–26	Reserved, should be cleared.
27 RFC_PAUSE	Receive frame control pause. This read-only status bit will be asserted when a full duplex flow control pause frame has been received and the transmitter is paused for the duration defined in this pause frame. This bit will automatically clear when the pause duration is complete.
28 TFC_PAUSE	Transmit frame control pause. Transmits a PAUSE frame when asserted. When this bit is set, the MAC will stop transmission of data frames after the current transmission is complete. At this time, the GRA interrupt in the EIR register will be asserted. With transmission of data frames stopped, the MAC will transmit a MAC Control PAUSE frame. Next, the MAC will clear the TFC_PAUSE bit and resume transmitting data frames. Note that if the transmitter is paused due to user assertion of GTS or reception of a PAUSE frame, the MAC may still transmit a MAC Control PAUSE frame.

Table 16-15. TCR Field Descriptions (continued)

Field	Description
29 FDEN	Full duplex enable. If set, frames are transmitted independent of carrier sense and collision inputs. This bit should only be modified when ETHER_EN is deasserted.
30 HBC	Heartbeat control. If set, the heartbeat check is performed following end of transmission and the HB bit in the status register will be set if the collision input does not assert within the heartbeat window. This bit should only be modified when ETHER_EN is deasserted.
31 GTS	Graceful transmit stop. When this bit is set, the MAC will stop transmission after any frame that is currently being transmitted is complete and the GRA interrupt in the EIR register will be asserted. If frame transmission is not currently underway, the GRA interrupt will be asserted immediately. Once transmission has completed, a “restart” can be accomplished by clearing the GTS bit. The next frame in the transmit FIFO will then be transmitted. If an early collision occurs during transmission when GTS = 1, transmission will stop after the collision. The frame will be transmitted again once GTS is cleared. Note that there may be old frames in the transmit FIFO that will be transmitted when GTS is reasserted. To avoid this deassert ECR[ETHER_EN] following the GRA interrupt.

16.3.4.2.11 Physical Address Low Register (PALR)

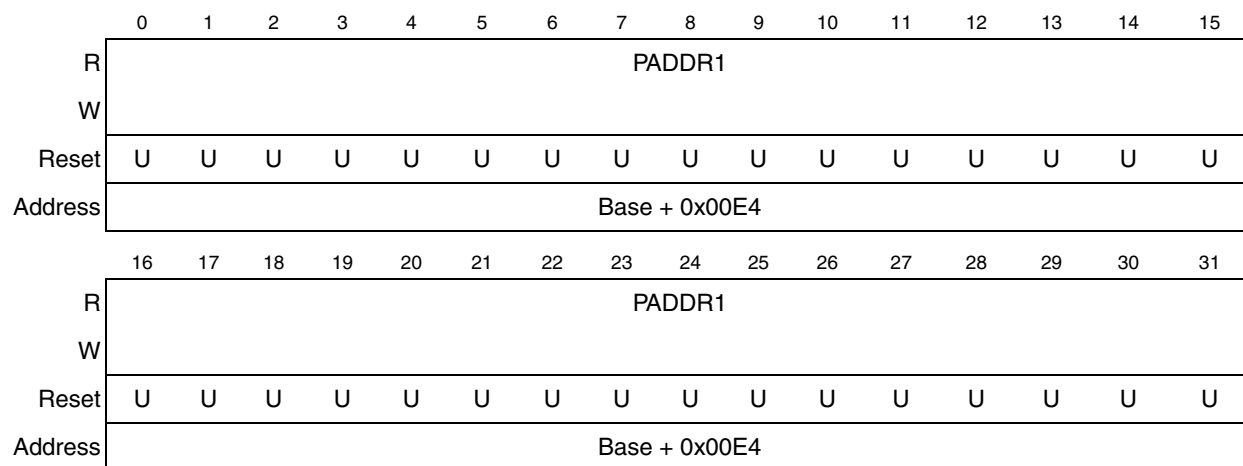The PALR is written by the user. This register contains the lower 32 bits (bytes 0,1,2,3) of the 48-bit MAC address used in the address recognition process to compare with the DA (destination address) field of receive frames with an individual DA. In addition, this register is used in bytes 0 through 3 of the 6-byte source address field when transmitting PAUSE frames. This register is not reset and must be initialized by the user.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.


Figure 16-13. Physical Address Low Register (PALR)

Table 16-16. PALR Field Descriptions

Field	Description
0–31 PADDR1	Bytes 0 (bits 0:7), 1 (bits 8:15), 2 (bits 16:23) and 3 (bits 24:31) of the 6-byte individual address to be used for exact match, and the Source Address field in PAUSE frames.

16.3.4.2.12 Physical Address Upper Register (PAUR)

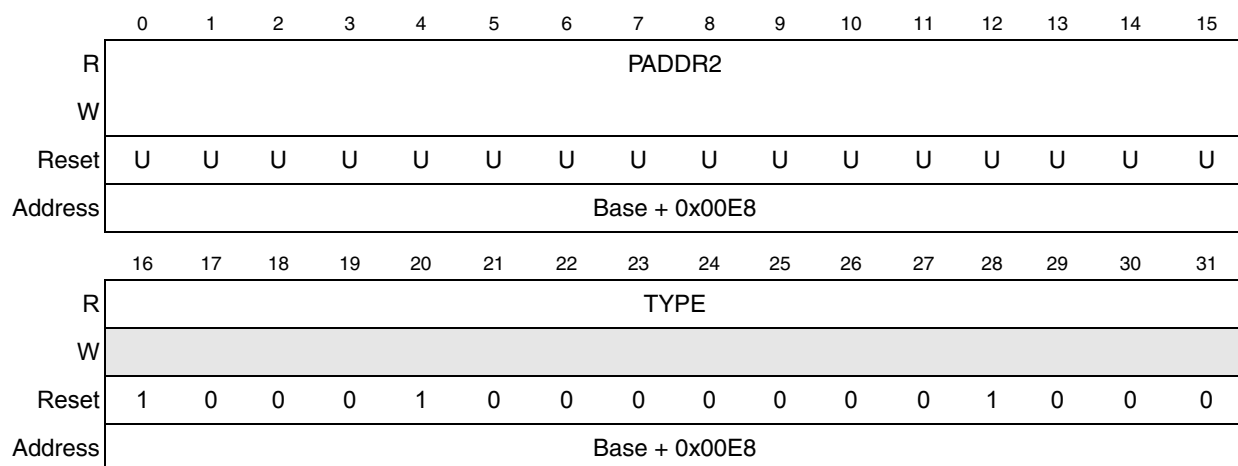The PAUR is written by the user. This register contains the upper 16 bits (bytes 4 and 5) of the 48-bit MAC address used in the address recognition process to compare with the DA (destination address) field of receive frames with an individual DA. In addition, this register is used in bytes 4 and 5 of the 6-byte Source Address field when transmitting PAUSE frames. Bits 16:31 of PAUR contain a constant TYPE field (0x8808) used for transmission of PAUSE frames. This register is not reset, and bits 0:15 must be initialized by the user. Refer to Section 16.4.10, “Full Duplex Flow Control” for information on using the TYPE field.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.

Figure 16-14. Physical Address Upper Register (PAUR)


Table 16-17. PAUR Field Descriptions

Field	Description
0–15 PADDR2	Bytes 4 (bits 0:7) and 5 (bits 8:15) of the 6-byte individual address to be used for exact match, and the Source Address field in PAUSE frames.
16–31 TYPE	The type field is used in PAUSE frames. These bits are a constant, 0x8808.

16.3.4.2.13 Opcode/Pause Duration Register (OPD)

The OPD is read/write accessible. This register contains the 16-bit OPCODE and 16-bit pause duration (PAUSE_DUR) fields used in transmission of a PAUSE frame. The OPCODE field is a constant value, 0x0001. When another node detects a PAUSE frame, that node will pause transmission for the duration

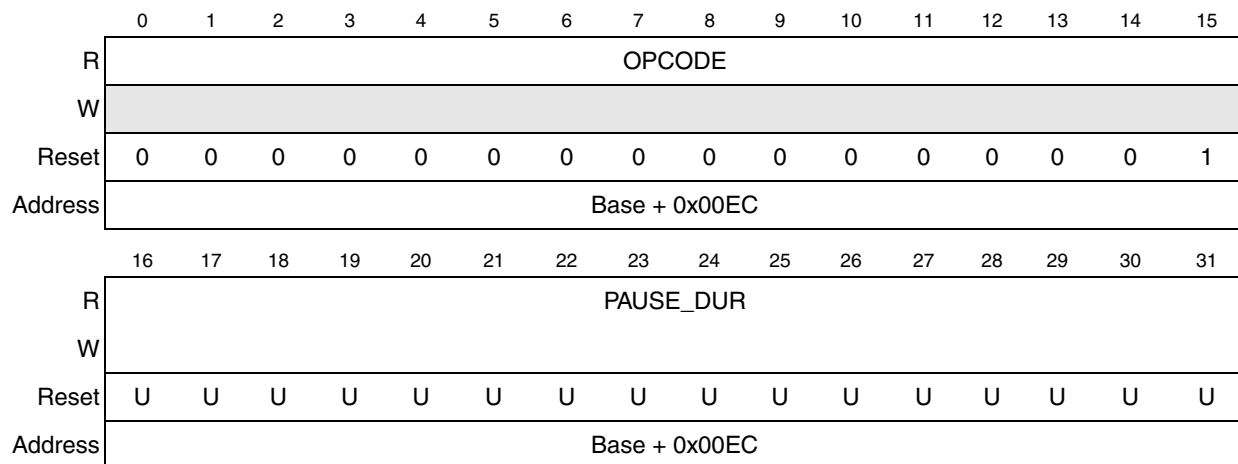specified in the pause duration field. This register is not reset and must be initialized by the user. Refer to Section 16.4.10, “Full Duplex Flow Control” for information on using the OPD register.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.


Figure 16-15. Opcode/Pause Duration Register (OPD)

Table 16-18. OPD Field Descriptions

Field	Description
0–15 OPCODE	Opcode field used in PAUSE frames. These bits are a constant, 0x0001.
16–31 PAUSE_DUR	Pause duration field used in PAUSE frames.

16.3.4.2.14 Descriptor Individual Upper Address Register (IAUR)

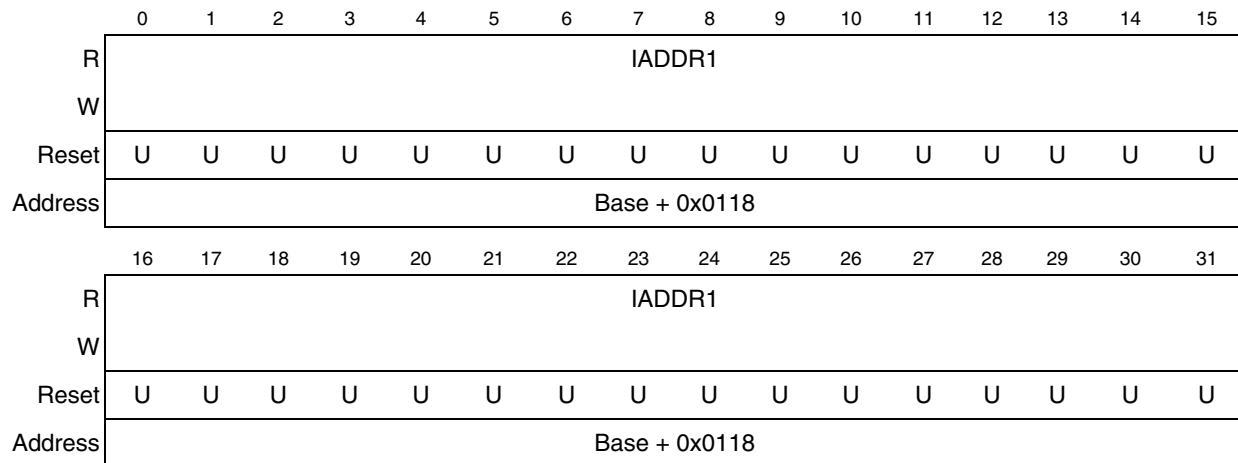The IAUR is written by the user. This register contains the upper 32 bits of the 64-bit individual address hash table used in the address recognition process to check for possible match with the DA field of receive frames with an individual DA. This register is not reset and must be initialized by the user.



¹ "U" signifies a bit that is uninitialized. Refer to the Preface of the book.


Figure 16-16. Descriptor Individual Upper Address Register (IAUR)

Table 16-19. IAUR Field Descriptions

Field	Descriptions
0–31 IADDR1	The upper 32 bits of the 64-bit hash table used in the address recognition process for receive frames with a unicast address. Bit 31 of IADDR1 contains hash index bit 63. Bit 0 of IADDR1 contains hash index bit 32.

16.3.4.2.15 Descriptor Individual Lower Address (IALR)

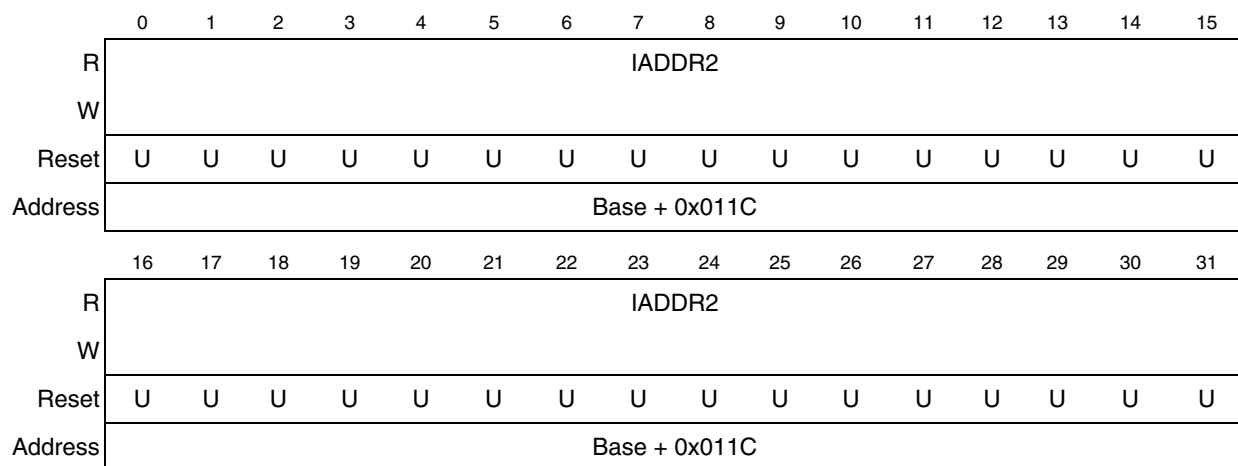The IALR register is written by the user. This register contains the lower 32 bits of the 64-bit individual address hash table used in the address recognition process to check for possible match with the DA field of receive frames with an individual DA. This register is not reset and must be initialized by the user.



¹ "U" signifies a bit that is uninitialized. Refer to the Preface of the book.


Figure 16-17. Descriptor Individual Lower Address Register (IALR)

Table 16-20. IALR Field Descriptions

Field	Description
0–31 IADDR2	The lower 32 bits of the 64-bit hash table used in the address recognition process for receive frames with a unicast address. Bit 31 of IADDR2 contains hash index bit 31. Bit 0 of IADDR2 contains hash index bit 0.

16.3.4.2.16 Descriptor Group Upper Address (GAUR)

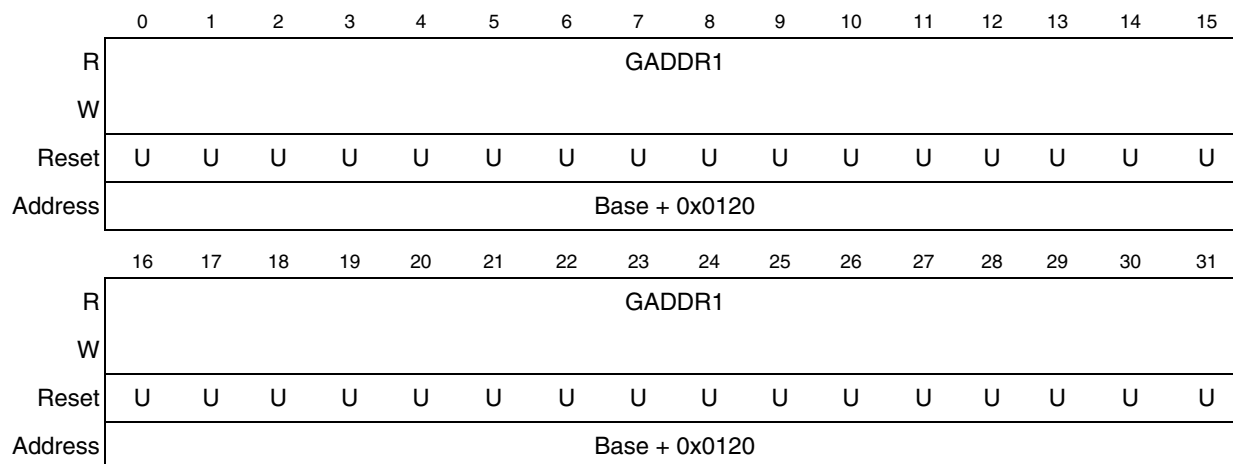The GAUR is written by the user. This register contains the upper 32 bits of the 64-bit hash table used in the address recognition process for receive frames with a multicast address. This register must be initialized by the user.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.


Figure 16-18. Descriptor Group Upper Address Register (GAUR)

Table 16-21. GAUR Field Descriptions

Field	Description
0–31 GADDR1	The GADDR1 register contains the upper 32 bits of the 64-bit hash table used in the address recognition process for receive frames with a multicast address. Bit 31 of GADDR1 contains hash index bit 63. Bit 0 of GADDR1 contains hash index bit 32.

16.3.4.2.17 Descriptor Group Lower Address (GALR)

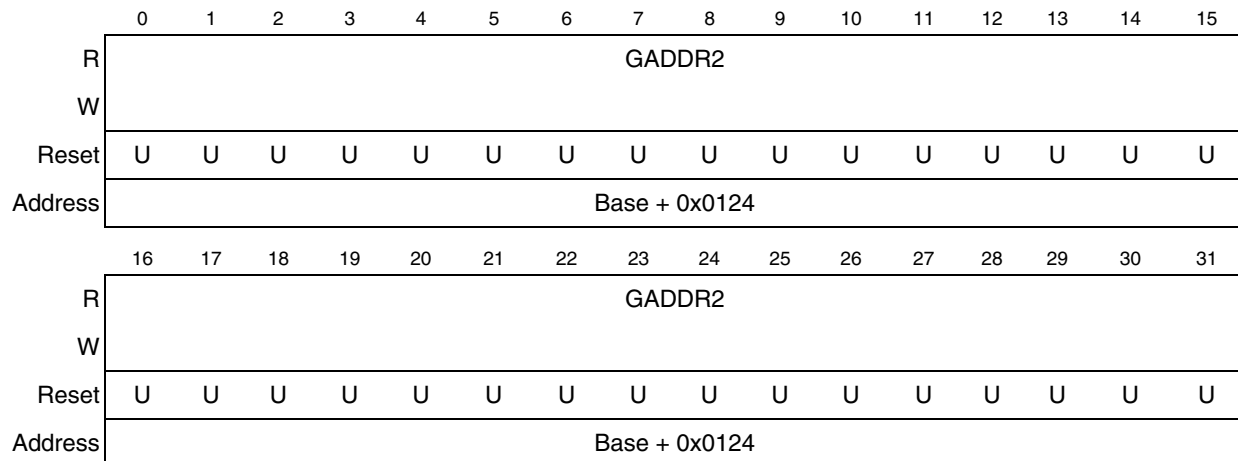The GALR register is written by the user. This register contains the lower 32 bits of the 64-bit hash table used in the address recognition process for receive frames with a multicast address. This register must be initialized by the user.



¹ "U" signifies a bit that is uninitialized. Refer to the Preface of the book.

Figure 16-19. Descriptor Group Lower Address Register (GALR)

Table 16-22. GALR Field Descriptions

Field	Description
0–31 GADDR2	The GADDR2 register contains the lower 32 bits of the 64-bit hash table used in the address recognition process for receive frames with a multicast address. Bit 31 of GADDR2 contains hash index bit 31. Bit 0 of GADDR2 contains hash index bit 0.

16.3.4.2.18 FIFO Transmit FIFO Watermark Register (TFWR)

The TFWR is a 32-bit read/write register with one 2-bit field programmed by the user to control the amount of data required in the transmit FIFO before transmission of a frame can begin. This allows the user to minimize transmit latency (TFWR = 0x) or allow for larger bus access latency (TFWR = 11) due to contention for the system bus. Setting the watermark to a high value will minimize the risk of transmit FIFO underrun due to contention for the system bus. The byte counts associated with the TFWR field may need to be modified to match a given system requirement (worst case bus access latency by the transmit data DMA channel).

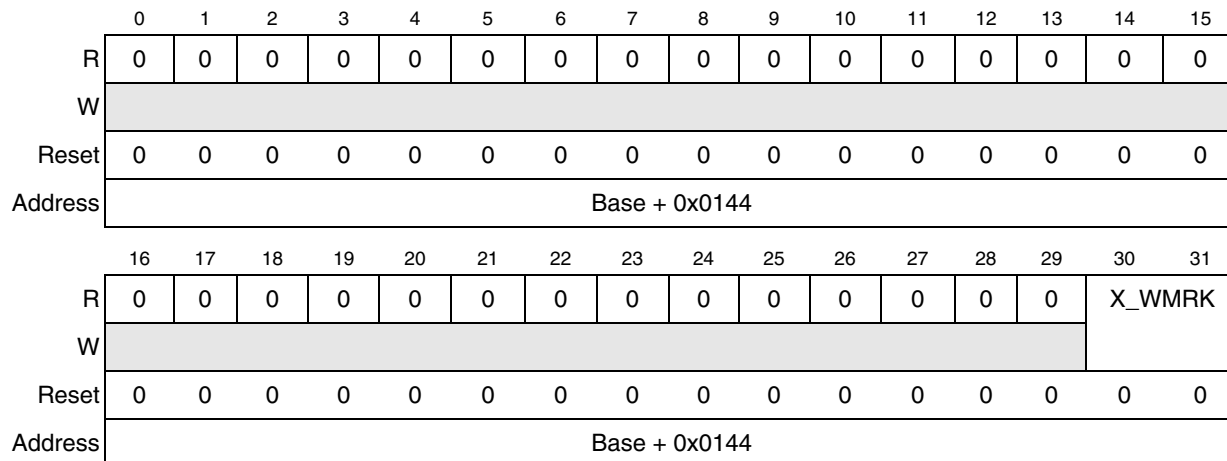


Figure 16-20. FIFO Transmit FIFO Watermark Register (TFWR)

Table 16-23. TFWR Field Descriptions

Field	Descriptions
0–29	Reserved, should be cleared.
30–31 X_WMRK	Number of bytes written to transmit FIFO before transmission of a frame begins 0x 64 bytes written 10 128 bytes written 11 192 bytes written

16.3.4.3 FIFO Receive Bound Register (FRBR)

The FRBR is a 32-bit register with one 8-bit field that the user can read to determine the upper address bound of the FIFO RAM. Drivers can use this value, along with the FRSR register, to appropriately divide the available FIFO RAM between the transmit and receive data paths.

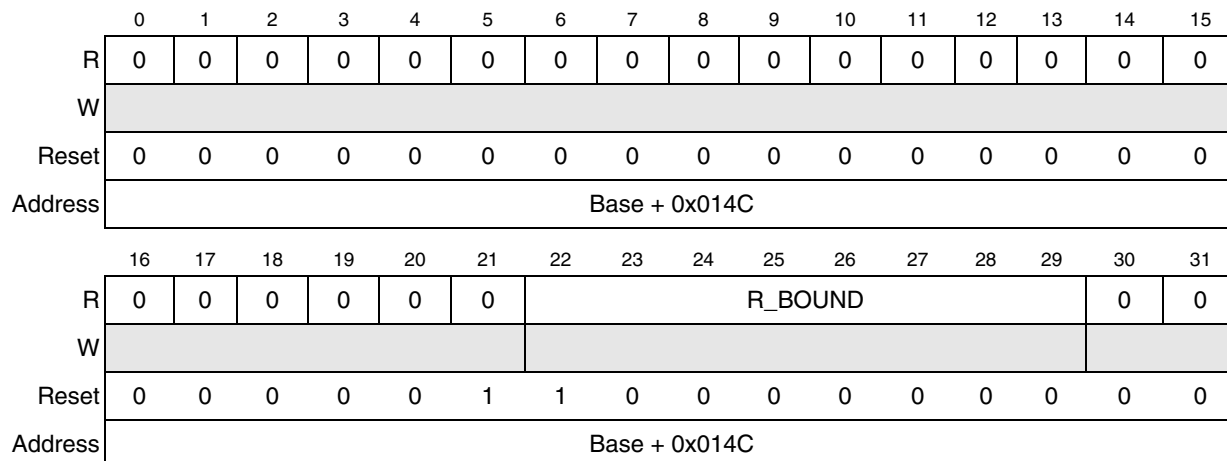


Figure 16-21. FIFO Receive Bound Register (FRBR)


Table 16-24. FRBR Field Descriptions

Field	Descriptions
0–21	Reserved, read as 0 (except bit 10, which is read as 1).
22–29 R_BOUND	Read-only. Highest valid FIFO RAM address.
30–31	Reserved, should be cleared.

16.3.4.3.1 FIFO Receive Start Register (FRSR)

The FRSR is a 32-bit register with one 8-bit field programmed by the user to indicate the starting address of the receive FIFO. FRSR marks the boundary between the transmit and receive FIFOs. The transmit FIFO uses addresses from the start of the FIFO to the location four bytes before the address programmed into the FRSR. The receive FIFO uses addresses from FRSR to FRBR inclusive.

The FRSR register is initialized by hardware at reset. FRSR only needs to be written to change the default value.

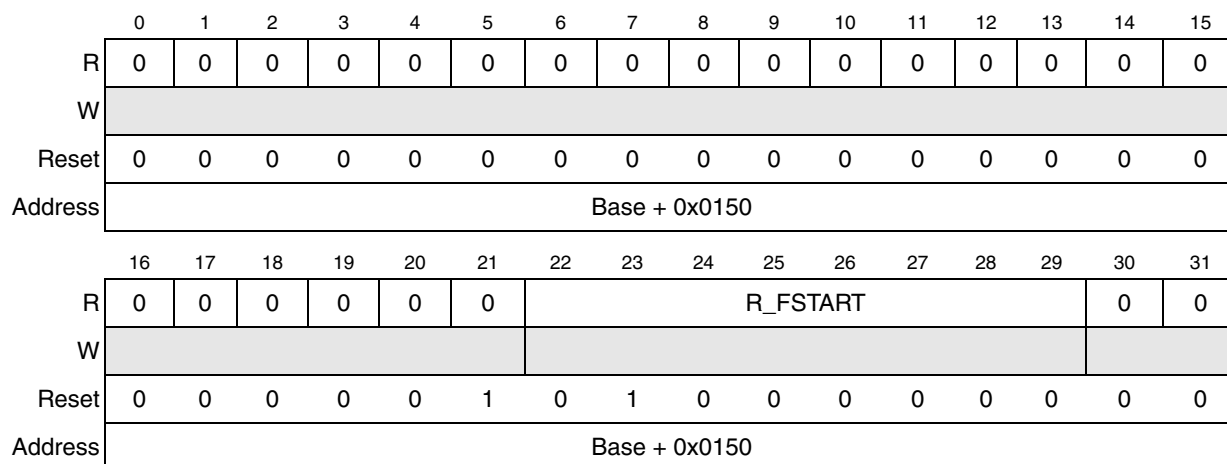

Figure 16-22. FIFO Receive Start Register (FRSR)
Table 16-25. FRSR Field Descriptions

Field	Descriptions
0–21	Reserved, read as 0 (except bit 21, which is read as 1).
22–29 R_FSTART	Address of first receive FIFO location. Acts as delimiter between receive and transmit FIFOs.
30–31	Reserved, read as 0.

16.3.4.3.2 Receive Descriptor Ring Start (ERDSR)

The ERDSR is written by the user. It provides a pointer to the start of the circular receive buffer descriptor queue in external memory. This pointer must be 32-bit aligned; however, it is recommended it be made 128-bit aligned (evenly divisible by 16).

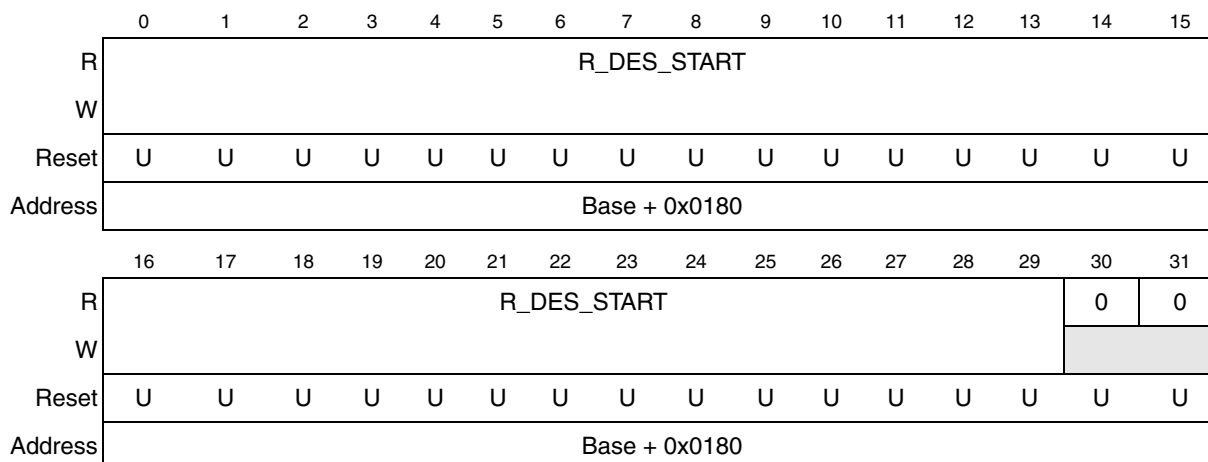This register is not reset and must be initialized by the user prior to operation.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.

Figure 16-23. Receive Descriptor Ring Start Register (ERDSR)


Table 16-26. ERDSR Field Descriptions

Field	Descriptions
0–29 R_DES_START	Pointer to start of receive buffer descriptor queue.
30–31	Reserved, should be cleared.

16.3.4.3.3 Transmit Buffer Descriptor Ring Start (ETDSR)

The ETDSR is written by the user. It provides a pointer to the start of the circular transmit buffer descriptor queue in external memory. This pointer must be 32-bit aligned; however, it is recommended it be made 128-bit aligned (evenly divisible by 16). Bits 30 and 31 should be written to 0 by the user. Non-zero values in these two bit positions are ignored by the hardware.

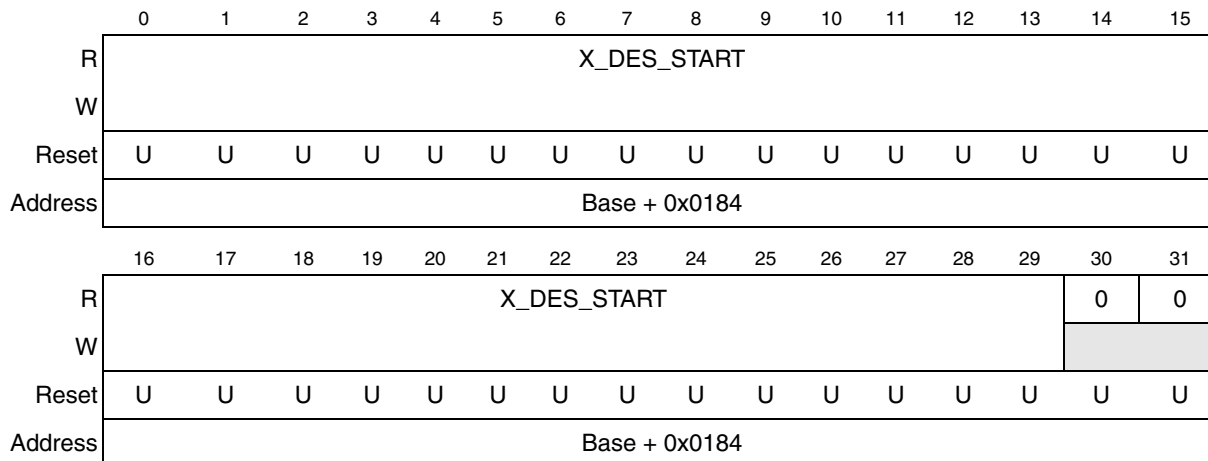This register is not reset and must be initialized by the user prior to operation.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.

Figure 16-24. Transmit Buffer Descriptor Ring Start Register (ETDSR)


Table 16-27. ETDSR Field Descriptions

Field	Descriptions
0–29 X_DES_START	Pointer to start of transmit buffer descriptor queue.
30–31	Reserved, should be cleared.

16.3.4.3.4 Receive Buffer Size Register (EMRBR)

The EMRBR is a 32-bit register with one 7-bit field programmed by the user. The EMRBR register dictates the maximum size of all receive buffers. Note that because receive frames will be truncated at 2K-1 bytes, only bits 21–27 are used. This value should take into consideration that the receive CRC is always written into the last receive buffer. To allow one maximum size frame per buffer, EMRBR must be set to RCR[MAX_FL] or larger. The EMRBR must be evenly divisible by 16. To insure this, bits 28-31 are forced low. To minimize bus utilization (descriptor fetches) it is recommended that EMRBR be greater than or equal to 256 bytes.

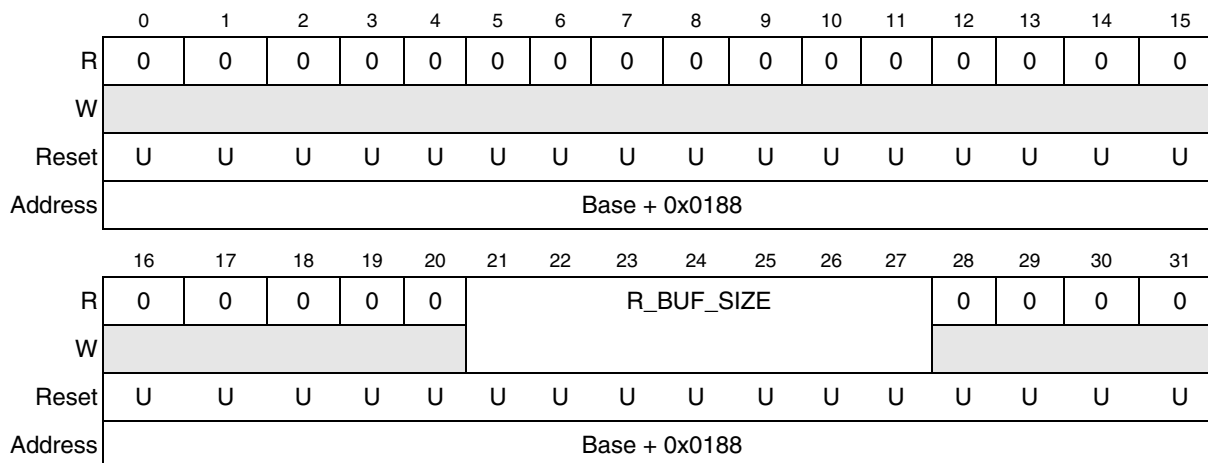The EMRBR register does not reset, and must be initialized by the user.



¹ “U” signifies a bit that is uninitialized. Refer to the Preface of the book.

Figure 16-25. Receive Buffer Size Register (EMRBR)

Table 16-28. EMRBR Field Descriptions

Field	Descriptions
0–20	Reserved, should be written to 0 by the host processor.
21–27 R_BUF_SIZE	Receive buffer size.
28–31	Reserved, should be written to 0 by the host processor.

16.4 Functional Description

This section describes the operation of the FEC, beginning with the hardware and software initialization sequence, then the software (Ethernet driver) interface for transmitting and receiving frames.

Following the software initialization and operation sections are sections providing a detailed description of the functions of the FEC.

16.4.1 Initialization Sequence

This section describes which registers are reset due to hardware reset, which are reset by the FEC RISC, and what locations the user must initialize prior to enabling the FEC.

16.4.1.1 Hardware Controlled Initialization

In the FEC, registers and control logic that generate interrupts are reset by hardware. A hardware reset deasserts output signals and resets general configuration bits.

Other registers reset when the ECR[ETHER_EN] bit is cleared. ECR[ETHER_EN] is deasserted by a hard reset or may be deasserted by software to halt operation. By deasserting ECR[ETHER_EN], the configuration control registers such as the TCR and RCR will not be reset, but the entire data path will be reset.

Table 16-29. ECR[ETHER_EN] De-Assertion Effect on FEC

Register/Machine	Reset Value
XMIT block	Transmission is aborted (bad CRC appended)
RECV block	Receive activity is aborted
DMA block	All DMA activity is terminated
RDAR	Cleared
TDAR	Cleared
Descriptor Controller block	Halt operation

16.4.2 User Initialization (Prior to Asserting ECR[ETHER_EN])

The user needs to initialize portions of the FEC prior to setting the ECR[ETHER_EN] bit. The exact values will depend on the particular application. The sequence is not important.

Ethernet MAC registers requiring initialization are defined in [Table 16-30](#).

Table 16-30. User Initialization (Before ECR[ETHER_EN])

Description
Initialize EIMR
Clear EIR (write 0xFFFF_FFFF)
TFWR (optional)
IALR / IAUR
GAUR / GALR
PALR / PAUR (only needed for full duplex flow control)
OPD (only needed for full duplex flow control)
RCR
TCR
MSCR (optional)
Clear MIB_RAM (locations Base + 0x0200 – 0x02FC)

FEC FIFO/DMA registers that require initialization are defined in [Table 16-31](#).

Table 16-31. FEC User Initialization (Before ECR[ETHER_EN])

Description
Initialize FRSR (optional)
Initialize EMRBR
Initialize ERDSR
Initialize ETDSR
Initialize (Empty) Transmit Descriptor ring
Initialize (Empty) Receive Descriptor ring

16.4.3 Microcontroller Initialization

In the FEC, the descriptor control RISC initializes some registers after ECR[ETHER_EN] is asserted. After the microcontroller initialization sequence is complete, the hardware is ready for operation.

Table 16-32 shows microcontroller initialization operations.

Table 16-32. Microcontroller Initialization

Description
Initialize BackOff Random Number Seed
Activate Receiver
Activate Transmitter
Clear Transmit FIFO
Clear Receive FIFO
Initialize Transmit Ring Pointer
Initialize Receive Ring Pointer
Initialize FIFO Count Registers

16.4.4 User Initialization (After Asserting ECR[ETHER_EN])

After asserting ECR[ETHER_EN], the user can set up the buffer/frame descriptors and write to the TDAR and RDAR. Refer to Section 16.5, “Buffer Descriptors” for more details.

16.4.5 Network Interface Options

The FEC supports both an MII interface for 10/100 Mbps Ethernet and a 7-wire serial interface for 10 Mbps Ethernet. The interface mode is selected by the RCR[MII_MODE] bit. In MII mode (RCR[MII_MODE] = 1), there are 18 signals defined by the IEEE® 802.3 standard and supported by the EMAC. These signals are shown in Table 16-33 below.

Table 16-33. MII Mode

Signal Description	EMAC Signal
Transmit Clock	TX_CLK
Transmit Enable	TX_EN
Transmit Data	TXD[3:0]
Transmit Error	TX_ER
Collision	COL
Carrier Sense	CRS
Receive Clock	RX_CLK
Receive Data Valid	RX_DV
Receive Data	RXD[3:0]

Table 16-33. MII Mode (continued)

Signal Description	EMAC Signal
Receive Error	RX_ER
Management Data Clock	MDC
Management Data Input/Output	MDIO

The 7-wire serial mode interface (RCR[MII_MODE] = 0) operates in what is generally referred to as the “AMD” mode. 7-wire mode connections to the external transceiver are shown in [Table 16-34](#).

Table 16-34. 7-Wire Mode Configuration

Signal Description	FEC Signal
Transmit Clock	TX_CLK
Transmit Enable	TX_EN
Transmit Data	TXD0
Collision	COL
Receive Clock	RX_CLK
Receive Data Valid	RX_DV
Receive Data	RXD0

16.4.6 FEC Frame Transmission

The Ethernet transmitter is designed to work with almost no intervention from software. Once ECR[ETHER_EN] is asserted and data appears in the transmit FIFO, the Ethernet MAC is able to transmit onto the network.

When the transmit FIFO fills to the watermark (defined by the TFWR), the MAC transmit logic will assert TX_EN and start transmitting the preamble (PA) sequence, the start frame delimiter (SFD), and then the frame information from the FIFO. However, the controller defers the transmission if the network is busy (CRS asserts). Before transmitting, the controller waits for carrier sense to become inactive, then determines if carrier sense stays inactive for 60 bit times. If so, the transmission begins after waiting an additional 36 bit times (96 bit times after carrier sense originally became inactive). See [Section 16.4.14.1, “Transmission Errors”](#) for more details.

If a collision occurs during transmission of the frame (half duplex mode), the Ethernet controller follows the specified backoff procedures and attempts to retransmit the frame until the retry limit is reached. The transmit FIFO stores at least the first 64 bytes of the transmit frame, so that they do not have to be retrieved from system memory in case of a collision. This improves bus utilization and latency in case immediate retransmission is necessary.

When all the frame data has been transmitted, the FCS (frame check sequence or 32-bit cyclic redundancy check, CRC) bytes are appended if the TC bit is set in the transmit frame control word. If the ABC bit is set in the transmit frame control word, a bad CRC will be appended to the frame data regardless of the TC bit value. Following the transmission of the CRC, the Ethernet controller writes the frame status information to the MIB block. Short frames are automatically padded by the transmit logic (if the TC bit in the transmit buffer descriptor for the end of frame buffer = 1).

Both buffer (TXB) and frame (TFINT) interrupts may be generated as determined by the settings in the EIMR.

The transmit error interrupts are HBERR, BABT, LATE_COL, COL_RETRY_LIM, and XFIFO_UN. If the transmit frame length exceeds MAX_FL bytes, the BABT interrupt will be asserted but the entire frame will be transmitted (no truncation).

To pause transmission, set the GTS (graceful transmit stop) bit in the TCR register. When the TCR[GTS] is set, the FEC transmitter stops immediately if transmission is not in progress; otherwise, it continues transmission until the current frame either finishes or terminates with a collision. After the transmitter has stopped, the GRA (graceful stop complete) interrupt is asserted. If TCR[GTS] is cleared, the FEC resumes transmission with the next frame.

The Ethernet controller transmits bytes least significant bit first.

16.4.7 FEC Frame Reception

The FEC receiver is designed to work with almost no intervention from the host and can perform address recognition, CRC checking, short frame checking, and maximum frame length checking.

When the driver enables the FEC receiver by asserting ECR[ETHER_EN], it will immediately start processing receive frames. When RXDV asserts, the receiver will first check for a valid PA/SFD header. If the PA/SFD is valid, it will be stripped and the frame will be processed by the receiver. If a valid PA/SFD is not found, the frame will be ignored.

In serial mode, the first 16 bit times of RXD0 following assertion of RXDV are ignored. Following the first 16 bit times the data sequence is checked for alternating 1/0s. If a 11 or 00 data sequence is detected during bit times 17 to 21, the remainder of the frame is ignored. After bit time 21, the data sequence is monitored for a valid SFD (11). If a 00 is detected, the frame is rejected. When a 11 is detected, the PA/SFD sequence is complete.

In MII mode, the receiver checks for at least one byte matching the SFD. Zero or more PA bytes may occur, but if a 00 bit sequence is detected prior to the SFD byte, the frame is ignored.

After the first 6 bytes of the frame have been received, the FEC performs address recognition on the frame.

Once a collision window (64 bytes) of data has been received and if address recognition has not rejected the frame, the receive FIFO is signalled that the frame is “accepted” and may be passed on to the DMA. If the frame is a runt (due to collision) or is rejected by address recognition, the receive FIFO is notified to “reject” the frame. Thus, no collision fragments are presented to the user except late collisions, which indicate serious LAN problems.

During reception, the Ethernet controller checks for various error conditions and once the entire frame is written into the FIFO, a 32-bit frame status word is written into the FIFO. This status word contains the M, BC, MC, LG, NO, CR, OV and TR status bits, and the frame length. See [Section 16.4.14.2, “Reception Errors”](#) for more details.

Receive buffer (RXB) and frame interrupts (RFINT) may be generated if enabled by the EIMR register. A receive error interrupt is babbling receiver error (BABR). Receive frames are not truncated if they exceed the max frame length (MAX_FL); however, the BABR interrupt will occur and the LG bit in the receive buffer descriptor (RxBD) will be set. See [Section 16.5.2, “Ethernet Receive Buffer Descriptor \(RxBD\)”](#) for more details.

When the receive frame is complete, the FEC sets the L-bit in the RxBD, writes the other frame status bits into the RxBD, and clears the E-bit. The Ethernet controller next generates a maskable interrupt (RFINT bit in EIR, maskable by RFIEN bit in EIMR), indicating that a frame has been received and is in memory. The Ethernet controller then waits for a new frame.

The Ethernet controller receives serial data LSB first.

16.4.8 Ethernet Address Recognition

The FEC filters the received frames based on the type of destination address (DA) — individual (unicast), group (multicast), or broadcast (all-ones group address). The difference between an individual address and a group address is determined by the I/G bit in the destination address field. A flowchart for address recognition on received frames is illustrated in the figures below.

Address recognition is accomplished through the use of the receive block and microcode running on the microcontroller. The flowchart shown in [Figure 16-26](#) illustrates the address recognition decisions made by the receive block, while [Figure 16-27](#) illustrates the decisions made by the microcontroller.

If the DA is a broadcast address and broadcast reject (RCR[BC_REJ]) is deasserted, then the frame will be accepted unconditionally, as shown in [Figure 16-26](#). Otherwise, if the DA is not a broadcast address, then the microcontroller runs the address recognition subroutine, as shown in [Figure 16-27](#).

If the DA is a group (multicast) address and flow control is disabled, then the microcontroller will perform a group hash table lookup using the 64-entry hash table programmed in GAUR and GALR. If a hash match occurs, the receiver accepts the frame.

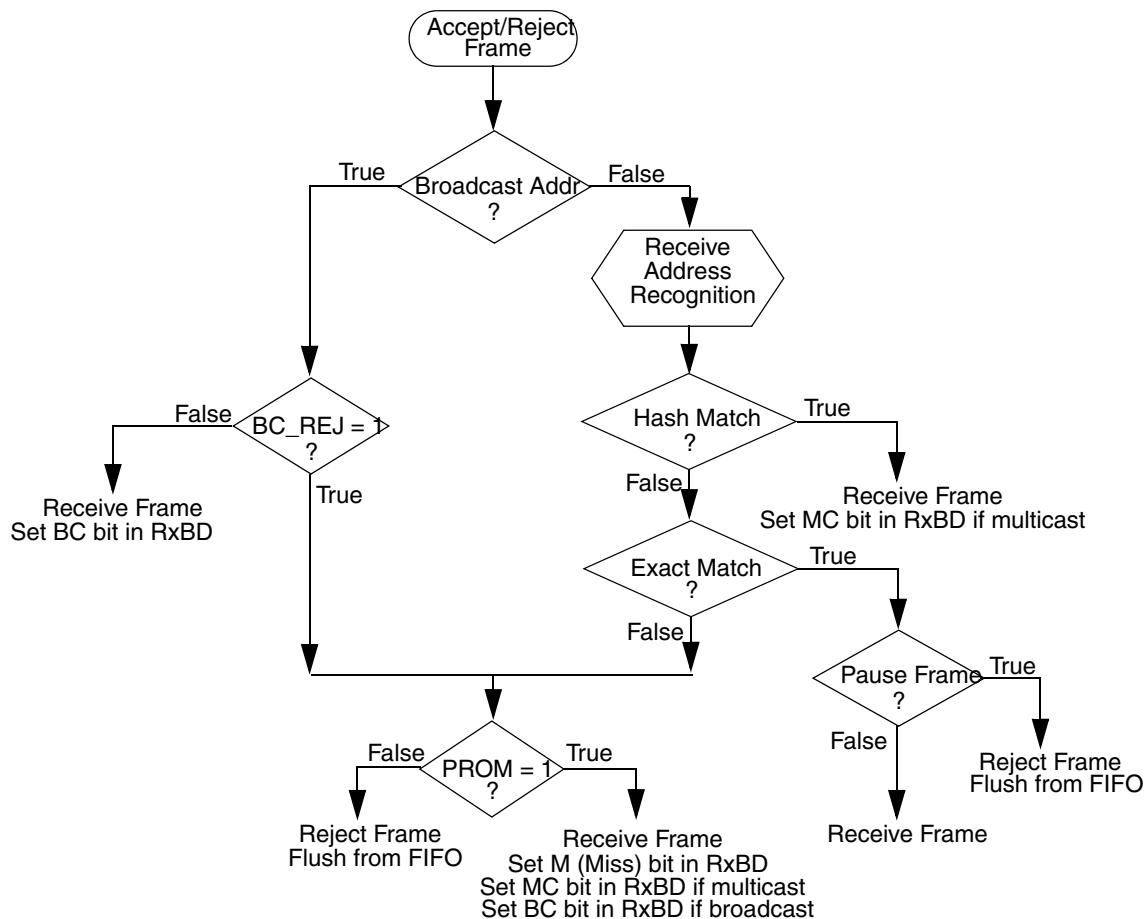
If flow control is enabled, the microcontroller will do an exact address match check between the DA and the designated PAUSE DA (01:80:C2:00:00:01). If the receive block determines that the received frame is a valid PAUSE frame, then the frame will be rejected. Note the receiver will detect a PAUSE frame with the DA field set to either the designated PAUSE DA or the unicast physical address.

If the DA is the individual (unicast) address, the microcontroller performs an individual exact match comparison between the DA and 48-bit physical address that the user programs in the PALR and PAUR registers. If an exact match occurs, the frame is accepted; otherwise, the microcontroller does an individual hash table lookup using the 64-entry hash table programmed in registers, IAUR and IALR. In the case of an individual hash match, the frame is accepted. Again, the receiver will accept or reject the frame based on PAUSE frame detection, shown in [Figure 16-26](#).

If neither a hash match (group or individual), nor an exact match (group or individual) occur, then if promiscuous mode is enabled (RCR[PROM] = 1), then the frame will be accepted and the MISS bit in the receive buffer descriptor is set; otherwise, the frame will be rejected.


Similarly, if the DA is a broadcast address, broadcast reject (RCR[BC_REJ]) is asserted, and promiscuous mode is enabled, then the frame will be accepted and the MISS bit in the receive buffer descriptor is set; otherwise, the frame will be rejected.

In general, when a frame is rejected, it is flushed from the FIFO.



NOTES:
 BC_REJ - field in RCR register (BroadCast REJect)
 PROM - field in RCR register (PROMiscuous mode)
 Pause Frame - valid Pause frame received

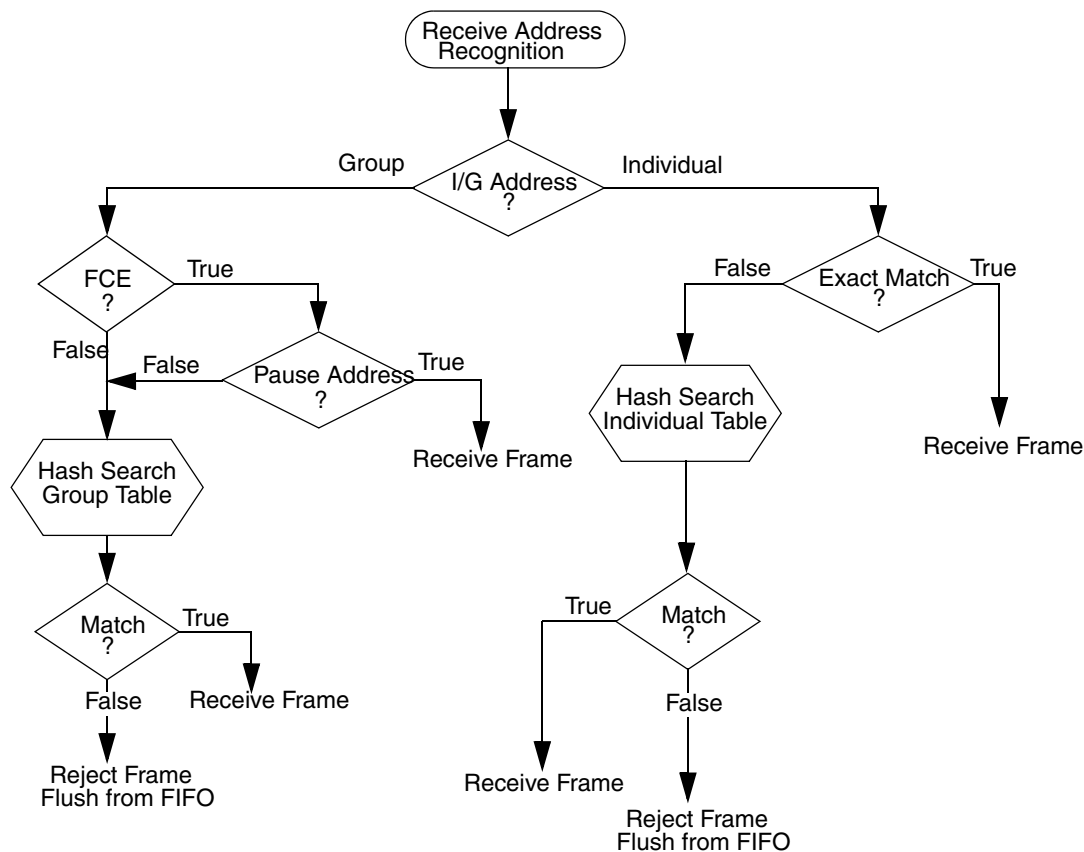Figure 16-26. Ethernet Address Recognition—Receive Block Decisions


NOTES:

FCE - field in RCR register (Flow Control Enable)

I/G - Individual/Group bit in Destination Address (least significant bit in first byte received in MAC frame)

Figure 16-27. Ethernet Address Recognition—Microcode Decisions

16.4.9 Hash Algorithm

The hash table algorithm used in the group and individual hash filtering operates as follows. The 48-bit destination address is mapped into one of 64 bits, which are represented by 64 bits stored in GAUR, GALR (group address hash match) or IAUR, IALR (individual address hash match). This mapping is performed by passing the 48-bit address through the on-chip 32-bit CRC generator and selecting the 6 most significant bits of the CRC-encoded result to generate a number between 0 and 63. The MSB of the CRC result selects GAUR (MSB = 1) or GALR (MSB = 0). The least significant 5 bits of the hash result select the bit within the selected register. If the CRC generator selects a bit that is set in the hash table, the frame is accepted; otherwise, it is rejected.

For example, if eight group addresses are stored in the hash table and random group addresses are received, the hash table prevents roughly 56/64 (or 87.5%) of the group address frames from reaching memory. Those that do reach memory must be further filtered by the processor to determine if they truly contain one of the eight desired addresses.

The effectiveness of the hash table declines as the number of addresses increases.

The hash table registers must be initialized by the user. The CRC32 polynomial to use in computing the hash is:

$$x^{32} + x^{26} + x^{23} + x^{22} + x^{16} + x^{12} + x^{11} + x^{10} + x^8 + x^7 + x^5 + x^4 + x^2 + x + 1$$

A table of example Destination Addresses and corresponding hash values is included below for reference.

Table 16-35. Destination Address to 6-Bit Hash

48-bit DA	6-bit Hash (in hex)	Hash Decimal Value
65:ff:ff:ff:ff	0x0	0
55:ff:ff:ff:ff	0x1	1
15:ff:ff:ff:ff	0x2	2
35:ff:ff:ff:ff	0x3	3
B5:ff:ff:ff:ff	0x4	4
95:ff:ff:ff:ff	0x5	5
D5:ff:ff:ff:ff	0x6	6
F5:ff:ff:ff:ff	0x7	7
DB:ff:ff:ff:ff	0x8	8
FB:ff:ff:ff:ff	0x9	9
BB:ff:ff:ff:ff	0xA	10
8B:ff:ff:ff:ff	0xB	11
0B:ff:ff:ff:ff	0xC	12
3B:ff:ff:ff:ff	0xD	13
7B:ff:ff:ff:ff	0xE	14
5B:ff:ff:ff:ff	0xF	15
27:ff:ff:ff:ff	0x10	16
07:ff:ff:ff:ff	0x11	17
57:ff:ff:ff:ff	0x12	18
77:ff:ff:ff:ff	0x13	19
F7:ff:ff:ff:ff	0x14	20
C7:ff:ff:ff:ff	0x15	21
97:ff:ff:ff:ff	0x16	22
A7:ff:ff:ff:ff	0x17	23
99:ff:ff:ff:ff	0x18	24
B9:ff:ff:ff:ff	0x19	25
F9:ff:ff:ff:ff	0x1A	26

Table 16-35. Destination Address to 6-Bit Hash (continued)

48-bit DA	6-bit Hash (in hex)	Hash Decimal Value
C9:ff:ff:ff:ff:ff	0x1B	27
59:ff:ff:ff:ff:ff	0x1C	28
79:ff:ff:ff:ff:ff	0x1D	29
29:ff:ff:ff:ff:ff	0x1E	30
19:ff:ff:ff:ff:ff	0x1F	31
D1:ff:ff:ff:ff:ff	0x20	32
F1:ff:ff:ff:ff:ff	0x21	33
B1:ff:ff:ff:ff:ff	0x22	34
91:ff:ff:ff:ff:ff	0x23	35
11:ff:ff:ff:ff:ff	0x24	36
31:ff:ff:ff:ff:ff	0x25	37
71:ff:ff:ff:ff:ff	0x26	38
51:ff:ff:ff:ff:ff	0x27	39
7F:ff:ff:ff:ff:ff	0x28	40
4F:ff:ff:ff:ff:ff	0x29	41
1F:ff:ff:ff:ff:ff	0x2A	42
3F:ff:ff:ff:ff:ff	0x2B	43
BF:ff:ff:ff:ff:ff	0x2C	44
9F:ff:ff:ff:ff:ff	0x2D	45
DF:ff:ff:ff:ff:ff	0x2E	46
EF:ff:ff:ff:ff:ff	0x2F	47
93:ff:ff:ff:ff:ff	0x30	48
B3:ff:ff:ff:ff:ff	0x31	49
F3:ff:ff:ff:ff:ff	0x32	50
D3:ff:ff:ff:ff:ff	0x33	51
53:ff:ff:ff:ff:ff	0x34	52
73:ff:ff:ff:ff:ff	0x35	53
23:ff:ff:ff:ff:ff	0x36	54
13:ff:ff:ff:ff:ff	0x37	55
3D:ff:ff:ff:ff:ff	0x38	56
0D:ff:ff:ff:ff:ff	0x39	57
5D:ff:ff:ff:ff:ff	0x3A	58

Table 16-35. Destination Address to 6-Bit Hash (continued)

48-bit DA	6-bit Hash (in hex)	Hash Decimal Value
7D:ff:ff:ff:ff:ff	0x3B	59
FD:ff:ff:ff:ff:ff	0x3C	60
DD:ff:ff:ff:ff:ff	0x3D	61
9D:ff:ff:ff:ff:ff	0x3E	62
BD:ff:ff:ff:ff:ff	0x3F	63

16.4.10 Full Duplex Flow Control

Full-duplex flow control allows the user to transmit pause frames and to detect received pause frames. Upon detection of a pause frame, MAC data frame transmission stops for a given pause duration.

To enable pause frame detection, the FEC must operate in full-duplex mode (TCR[FDEN] asserted) and flow control enable (RCR[FCE]) must be asserted. The FEC detects a pause frame when the fields of the incoming frame match the pause frame specifications, as shown in the table below. In addition, the receive status associated with the frame should indicate that the frame is valid.

Table 16-36. PAUSE Frame Field Specification

48-bit Destination Address	0x0180_C200_0001 or Physical Address
48-bit Source Address	Any
16-bit TYPE	0x8808
16-bit OPCODE	0x0001
16-bit PAUSE_DUR	0x0000 to 0xFFFF

Pause frame detection is performed by the receiver and microcontroller modules. The microcontroller runs an address recognition subroutine to detect the specified pause frame destination address, while the receiver detects the TYPE and OPCODE pause frame fields. On detection of a pause frame, TCR[GTS] is asserted by the FEC internally. When transmission has paused, the EIR[GRA] interrupt is asserted and the pause timer begins to increment. Note that the pause timer makes use of the transmit backoff timer hardware, which is used for tracking the appropriate collision backoff time in half-duplex mode. The pause timer increments once every slot time, until OPD[PAUSE_DUR] slot times have expired. On OPD[PAUSE_DUR] expiration, TCR[GTS] is deasserted allowing MAC data frame transmission to resume. Note that the receive flow control pause (TCR[RFC_PAUSE]) status bit is asserted while the transmitter is paused due to reception of a pause frame.

To transmit a pause frame, the FEC must operate in full-duplex mode and the user must assert flow control pause (TCR[TFC_PAUSE]). On assertion of transmit flow control pause (TCR[TFC_PAUSE]), the transmitter asserts TCR[GTS] internally. When the transmission of data frames stops, the EIR[GRA] (graceful stop complete) interrupt asserts. Following EIR[GRA] assertion, the pause frame is transmitted. On completion of pause frame transmission, flow control pause (TCR[TFC_PAUSE]) and TCR[GTS] are deasserted internally.

The user must specify the desired pause duration in the OPD register.

Note that when the transmitter is paused due to receiver/microcontroller pause frame detection, transmit flow control pause (TCR[TFC_PAUSE]) still may be asserted and will cause the transmission of a single pause frame. In this case, the EIR[GRA] interrupt will not be asserted.

16.4.11 Inter-Packet Gap (IPG) Time

The minimum inter-packet gap time for back-to-back transmission is 96 bit times. After completing a transmission or after the backoff algorithm completes, the transmitter waits for carrier sense to be negated before starting its 96 bit time IPG counter. Frame transmission may begin 96 bit times after carrier sense is negated if it stays negated for at least 60 bit times. If carrier sense asserts during the last 36 bit times, it will be ignored and a collision will occur.

The receiver receives back-to-back frames with a minimum spacing of at least 28 bit times. If an inter-packet gap between receive frames is less than 28 bit times, the following frame may be discarded by the receiver.

16.4.12 Collision Handling

If a collision occurs during frame transmission, the Ethernet controller will continue the transmission for at least 32 bit times, transmitting a JAM pattern consisting of 32 ones. If the collision occurs during the preamble sequence, the JAM pattern will be sent after the end of the preamble sequence.

If a collision occurs within 512 bit times, the retry process is initiated. The transmitter waits a random number of slot times. A slot time is 512 bit times. If a collision occurs after 512 bit times, then no retransmission is performed and the end of frame buffer is closed with a late collision (LC) error indication.

16.4.13 Internal and External Loopback

Both internal and external loopback are supported by the Ethernet controller. In loopback mode, both of the FIFOs are used and the FEC actually operates in a full-duplex fashion. Both internal and external loopback are configured using combinations of the LOOP and DRT bits in the RCR register and the FDEN bit in the TCR register.

For both internal and external loopback set $FDEN = 1$.

For internal loopback set $RCR[LOOP] = 1$ and $RCR[DRT] = 0$. TX_EN and TX_ER will not assert during internal loopback. During internal loopback, the transmit/receive data rate is higher than in normal operation because the internal system clock is used by the transmit and receive blocks instead of the clocks from the external transceiver. This will cause an increase in the required system bus bandwidth for transmit and receive data being DMA'd to/from external memory. It may be necessary to pace the frames on the transmit side and/or limit the size of the frames to prevent transmit FIFO underrun and receive FIFO overflow.

For external loopback set $RCR[LOOP] = 0$, $RCR[DRT] = 0$ and configure the external transceiver for loopback.

16.4.14 Ethernet Error-Handling Procedure

The Ethernet controller reports frame reception and transmission error conditions using the FEC RxBDs, the EIR register, and the MIB block counters.

16.4.14.1 Transmission Errors

16.4.14.1.1 Transmitter Underrun

If this error occurs, the FEC sends 32 bits that ensure a CRC error and stops transmitting. All remaining buffers for that frame are then flushed and closed. The UN bit is set in the EIR. The FEC will then continue to the next transmit buffer descriptor and begin transmitting the next frame.

The “UN” interrupt will be asserted if enabled in the EIMR register.

16.4.14.1.2 Retransmission Attempts Limit Expired

When this error occurs, the FEC terminates transmission. All remaining buffers for that frame are flushed and closed, and the RL bit is set in the EIR. The FEC will then continue to the next transmit buffer descriptor and begin transmitting the next frame.

The “RL” interrupt will be asserted if enabled in the EIMR register.

16.4.14.1.3 Late Collision

When a collision occurs after the slot time (512 bits starting at the preamble), the FEC terminates transmission. All remaining buffers for that frame are flushed and closed, and the LC bit is set in the EIR register. The FEC will then continue to the next transmit buffer descriptor and begin transmitting the next frame.

The “LC” interrupt will be asserted if enabled in the EIMR register.

16.4.14.1.4 Heartbeat

Some transceivers have a self-test feature called ‘heartbeat’ or ‘signal quality error.’ To signify a good self-test, the transceiver indicates a collision to the FEC within 4 microseconds after completion of a frame transmitted by the Ethernet controller. This indication of a collision does not imply a real collision error on the network, but is rather an indication that the transceiver still seems to be functioning properly. This is called the heartbeat condition.

If the HBC bit is set in the TCR register and the heartbeat condition is not detected by the FEC after a frame transmission, then a heartbeat error occurs. When this error occurs, the FEC closes the buffer, sets the HB bit in the EIR register, and generates the HBERR interrupt if it is enabled.

16.4.14.2 Reception Errors

16.4.14.2.1 Overrun Error

If the receive block has data to put into the receive FIFO and the receive FIFO is full, the FEC sets the OV bit in the RxBD. All subsequent data in the frame will be discarded and subsequent frames may also be discarded until the receive FIFO is serviced by the DMA and space is made available. At this point the receive frame/status word is written into the FIFO with the OV bit set. This frame must be discarded by the driver.

16.4.14.2.2 Non-Octet Error (Dribbling Bits)

The Ethernet controller handles up to seven dribbling bits when the receive frame terminates past a non-octet aligned boundary. Dribbling bits are not used in the CRC calculation. If there is a CRC error, then the frame non-octet aligned (NO) error is reported in the RxBD. If there is no CRC error, then no error is reported.

16.4.14.2.3 CRC Error

When a CRC error occurs with no dribble bits, the FEC closes the buffer and sets the CR bit in the RxBD. CRC checking cannot be disabled, but the CRC error can be ignored if checking is not required.

16.4.14.2.4 Frame Length Violation

When the receive frame length exceeds MAX_FL bytes the BABR interrupt will be generated, and the LG bit in the end of frame RxBD will be set. The frame is not truncated unless the frame length exceeds 2047 bytes).

16.4.14.2.5 Truncation

When the receive frame length exceeds 2047 bytes the frame is truncated, and the TR bit is set in the RxBD.

16.5 Buffer Descriptors

This section provides a description of the operation of the driver/DMA via the buffer descriptors. It is followed by a detailed description of the receive and transmit descriptor fields.

16.5.1 Driver/DMA Operation with Buffer Descriptors

The data for the FEC frames must reside in memory external to the FEC. The data for a frame is placed in one or more buffers. Associated with each buffer is a buffer descriptor (BD) which contains a starting address (pointer), data length, and status/control information (which contains the current state for the buffer). To permit maximum user flexibility, the BDs are also located in external memory and are read in by the FEC DMA engine.

Software “produces” buffers by allocating/initializing memory and initializing buffer descriptors. Setting the RxBD[E] or TxBD[R] bit “produces” the buffer. Software writing to either the TDAR or RDAR tells

the FEC that a buffer has been placed in external memory for the transmit or receive data traffic, respectively. The hardware reads the BDs and “consumes” the buffers after they have been produced. After the data DMA is complete and the buffer descriptor status bits have been written by the DMA engine, the RxBD[E] or TxBD[R] bit will be cleared by hardware to signal that the buffer has been “consumed.” Software may poll the BDs to detect when the buffers have been consumed or may rely on the buffer/frame interrupts. These buffers may then be processed by the driver and returned to the free list.

The ECR[ETHER_EN] signal operates as a reset to the BD/DMA logic. When ECR[ETHER_EN] is deasserted the DMA engine BD pointers are reset to point to the starting transmit and receive BDs. The buffer descriptors are not initialized by hardware during reset. At least one transmit and receive buffer descriptor must be initialized by software before the ECR[ETHER_EN] bit is set.

The buffer descriptors operate as two separate rings. ERDSR defines the starting address for receive BDs and ETDSR defines the starting address for transmit BDs. The last buffer descriptor in each ring is defined by the wrap (W) bit. When set, W indicates that the next descriptor in the ring is at the location pointed to by ERDSR and ETDSR for the receive and transmit rings, respectively. Buffer descriptor rings must start on a 32-bit boundary; however, it is recommended they are made 128-bit aligned.

16.5.1.1 Driver/DMA Operation with Transmit BDs

Typically a transmit frame will be divided between multiple buffers. An example is to have an application payload in one buffer, TCP header in a second buffer, IP header in a third buffer, Ethernet/IEEE® 802.3 header in a fourth buffer. The Ethernet MAC does not prepend the Ethernet header (destination address, source address, length/type fields), so this must be provided by the driver in one of the transmit buffers. The Ethernet MAC can append the Ethernet CRC to the frame. Whether the CRC is appended by the MAC or by the driver is determined by the TC bit in the transmit BD which must be set by the driver.

The driver (TxBD software producer) should set up Tx BDs in such a way that a complete transmit frame is given to the hardware at once. If a transmit frame consists of three buffers, the BDs should be initialized with pointer, length and control (W, L, TC, ABC) and then the TxBD[R] bits should be set = 1 in reverse order (3rd, 2nd, 1st BD) to insure that the complete frame is ready in memory before the DMA begins. If the TxBDs are set up in order, the DMA Controller could DMA the first BD before the 2nd was made available, potentially causing a transmit FIFO underrun.

In the FEC, the DMA is notified by the driver that new transmit frames are available by writing to the TDAR register. When this register is written to (data value is not significant) the FEC RISC will tell the DMA to read the next transmit BD in the ring. Once started, the RISC + DMA will continue to read and interpret transmit BDs in order and DMA the associated buffers, until a transmit BD is encountered with the R bit = 0. At this point the FEC will poll this BD one more time. If the R bit = 0 the second time, then the RISC will stop the transmit descriptor read process until software sets up another transmit frame and writes to TDAR.

When the DMA of each transmit buffer is complete, the DMA writes back to the BD to clear the R bit, indicating that the hardware consumer is finished with the buffer.

16.5.1.2 Driver/DMA Operation with Receive BDs

Unlike transmit, the length of the receive frame is unknown by the driver ahead of time. Therefore the driver must set a variable to define the length of all receive buffers. In the FEC, this variable is written to the EMRBR register.

The driver (RxB D software producer) should set up some number of “empty” buffers for the Ethernet by initializing the address field and the E and W bits of the associated receive BDs. The hardware (receive DMA) will consume these buffers by filling them with data as frames are received and clearing the E bit and writing to the L (1 indicates last buffer in frame) bit, the frame status bits (if L = 1) and the length field.

If a receive frame spans multiple receive buffers, the L bit is only set for the last buffer in the frame. For non-last buffers, the length field in the receive BD will be written by the DMA (at the same time the E bit is cleared) with the default receive buffer length value. For end of frame buffers the receive BD will be written with L = 1 and information written to the status bits (M, BC, MC, LG, NO, CR, OV, TR). Some of the status bits are error indicators which, if set, indicate the receive frame should be discarded and not given to higher layers. The frame status/length information is written into the receive FIFO following the end of the frame (as a single 32-bit word) by the receive logic. The length field for the end of frame buffer will be written with the length of the entire frame, not just the length of the last buffer.

For simplicity the driver may assign the default receive buffer length to be large enough to contain an entire frame, keeping in mind that a malfunction on the network or out of spec implementation could result in giant frames. Frames of 2K (2048) bytes or larger are truncated by the FEC at 2047 bytes so software is guaranteed never to see a receive frame larger than 2047 bytes.

Similar to transmit, the FEC will poll the receive descriptor ring after the driver sets up receive BDs and writes to the RDAR register. As frames are received the FEC will fill receive buffers and update the associated BDs, then read the next BD in the receive descriptor ring. If the FEC reads a receive BD and finds the E bit = 0, it will poll this BD once more. If the BD = 0 a second time the FEC will stop reading receive BDs until the driver writes to RDAR.

16.5.2 Ethernet Receive Buffer Descriptor (RxB D)

In the RxB D, the user initializes the E and W bits in the first word and the pointer in second word. When the buffer has been DMA'd, the Ethernet controller will modify the E, L, M, BC, MC, LG, NO, CR, OV, and TR bits and write the length of the used portion of the buffer in the first word. The M, BC, MC, LG, NO, CR, OV and TR bits in the first word of the buffer descriptor are only modified by the Ethernet controller when the L bit is set.

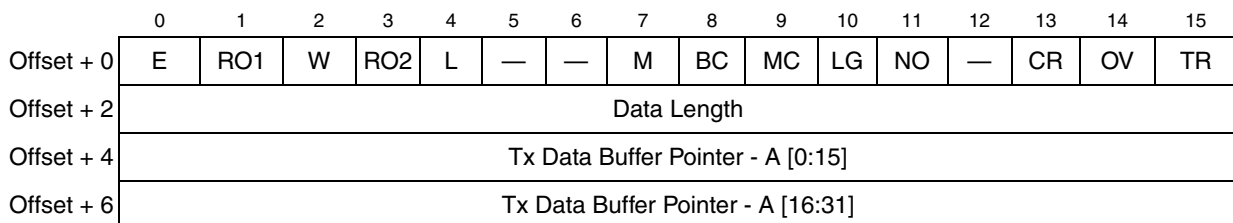


Figure 16-28. Receive Buffer Descriptor (RxB D)

Table 16-37. Receive Buffer Descriptor Field Definitions

Halfword	Location	Field Name	Description
Offset + 0	Bit 0	E	Empty. Written by the FEC (=0) and user (=1). 0 The data buffer associated with this BD has been filled with received data, or data reception has been aborted due to an error condition. The status and length fields have been updated as required. 1 The data buffer associated with this BD is empty, or reception is currently in progress.
Offset + 0	Bit 1	RO1	Receive software ownership. This field is reserved for use by software. This read/write bit will not be modified by hardware, nor will its value affect hardware.
Offset + 0	Bit 2	W	Wrap. Written by user. 0 The next buffer descriptor is found in the consecutive location 1 The next buffer descriptor is found at the location defined in ERDSR.
Offset + 0	Bit 3	RO2	Receive software ownership. This field is reserved for use by software. This read/write bit will not be modified by hardware, nor will its value affect hardware.
Offset + 0	Bit 4	L	Last in frame. Written by the FEC. 0 The buffer is not the last in a frame. 1 The buffer is the last in a frame.
Offset + 0	Bits 5-6	—	Reserved.
Offset + 0	Bit 7	M	Miss. Written by the FEC. This bit is set by the FEC for frames that were accepted in promiscuous mode, but were flagged as a “miss” by the internal address recognition. Thus, while in promiscuous mode, the user can use the M-bit to quickly determine whether the frame was destined to this station. This bit is valid only if the L-bit is set and the PROM bit is set. 0 The frame was received because of an address recognition hit. 1 The frame was received because of promiscuous mode.
Offset + 0	Bit 8	BC	Will be set if the DA is broadcast (FF-FF-FF-FF-FF-FF).
Offset + 0	Bit 9	MC	Will be set if the DA is multicast and not BC.
Offset + 0	Bit 10	LG	Rx frame length violation. Written by the FEC. A frame length greater than RCR[MAX_FL] was recognized. This bit is valid only if the L-bit is set. The receive data is not altered in any way unless the length exceeds 2047 bytes.
Offset + 0	Bit 11	NO	Receive non-octet aligned frame. Written by the FEC. A frame that contained a number of bits not divisible by 8 was received, and the CRC check that occurred at the preceding byte boundary generated an error. This bit is valid only if the L-bit is set. If this bit is set the CR bit will not be set.
Offset + 0	Bit 12	—	Reserved.

Table 16-37. Receive Buffer Descriptor Field Definitions (continued)

Halfword	Location	Field Name	Description
Offset + 0	Bit 13	CR	Receive CRC error. Written by the FEC. This frame contains a CRC error and is an integral number of octets in length. This bit is valid only if the L-bit is set.
Offset + 0	Bit 14	OV	Overflow. Written by the FEC. A receive FIFO overrun occurred during frame reception. If this bit is set, the other status bits, M, LG, NO, CR, and CL lose their normal meaning and will be zero. This bit is valid only if the L-bit is set.
Offset + 0	Bit 15	TR	Will be set if the receive frame is truncated (frame length > 2047 bytes). If the TR bit is set the frame should be discarded and the other error bits should be ignored as they may be incorrect.
Offset + 2	Bits [0:15]	Data Length	Data length. Written by the FEC. Data length is the number of 8-bit data groups (octets) written by the FEC into this BD's data buffer if L = 0 (the value will be equal to EMRBR), or the length of the frame including CRC if L = 1. It is written by the FEC once as the BD is closed.
Offset + 4	Bits [0:15]	A[0:15]	RX data buffer pointer, bits [0:15] ¹
Offset + 6	Bits [0:15]	A[16:31]	RX data buffer pointer, bits [16:31]

¹ The receive buffer pointer, which contains the address of the associated data buffer, must always be evenly divisible by 16. The buffer must reside in memory external to the FEC. This value is never modified by the Ethernet controller.

NOTE

Whenever the software driver sets an E bit in one or more receive descriptors, the driver should follow that with a write to RDAR.

16.5.3 Ethernet Transmit Buffer Descriptor (TxBD)

Data is presented to the FEC for transmission by arranging it in buffers referenced by the channel's TxBDs. The Ethernet controller confirms transmission by clearing the ready bit (R bit) when DMA of the buffer is complete. In the TxBD the user initializes the R, W, L, and TC bits and the length (in bytes) in the first word, and the buffer pointer in the second word.

The FEC will set the R bit = 0 in the first word of the BD when the buffer has been DMA'd. Status bits for the buffer/frame are not included in the transmit buffer descriptors. Transmit frame status is indicated via individual interrupt bits (error conditions) and in statistic counters in the MIB block. See [Section 16.3.3, "MIB Block Counters Memory Map"](#) for more details.

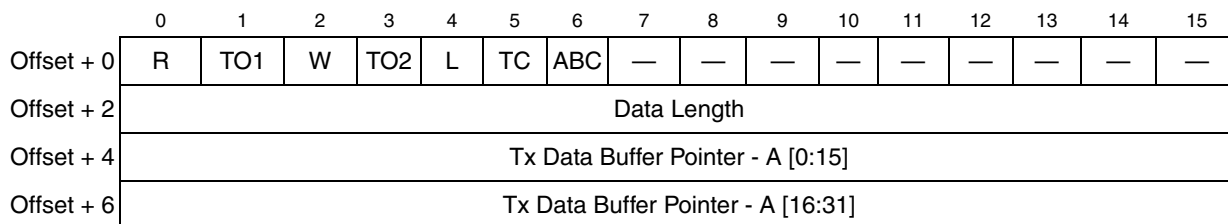


Figure 16-29. Transmit Buffer Descriptor (TxB D)

Table 16-38. Transmit Buffer Descriptor Field Definitions

Halfword	Location	Field Name	Description
Offset + 0	Bit 0	R	Ready. Written by the FEC and the user. 0 The data buffer associated with this BD is not ready for transmission. The user is free to manipulate this BD or its associated data buffer. The FEC clears this bit after the buffer has been transmitted or after an error condition is encountered. 1 The data buffer, which has been prepared for transmission by the user, has not been transmitted or is currently being transmitted. No fields of this BD may be written by the user once this bit is set.
Offset + 0	Bit 1	TO1	Transmit software ownership. This field is reserved for software use. This read/write bit will not be modified by hardware, nor will its value affect hardware.
Offset + 0	Bit 2	W	Wrap. Written by user. 0 The next buffer descriptor is found in the consecutive location 1 The next buffer descriptor is found at the location defined in ETDSR.
Offset + 0	Bit 3	TO2	Transmit software ownership. This field is reserved for use by software. This read/write bit will not be modified by hardware, nor will its value affect hardware.
Offset + 0	Bit 4	L	Last in frame. Written by user. 0 The buffer is not the last in the transmit frame. 1 The buffer is the last in the transmit frame.
Offset + 0	Bit 5	TC	Tx CRC. Written by user (only valid if L = 1). 0 End transmission immediately after the last data byte. 1 Transmit the CRC sequence after the last data byte.
Offset + 0	Bit 6	ABC	Append bad CRC. Written by user (only valid if L = 1). 0 No effect 1 Transmit the CRC sequence inverted after the last data byte (regardless of TC value).
Offset + 0	Bits [7:15]	—	Reserved.
Offset + 2	Bits [0:15]	Data Length	Data length, written by user. Data length is the number of octets the FEC should transmit from this BD's data buffer. It is never modified by the FEC. Bits [0:10] are used by the DMA engine, bits[11:15] are ignored.

Table 16-38. Transmit Buffer Descriptor Field Definitions (continued)

Halfword	Location	Field Name	Description
Offset + 4	Bits [0:15]	A[0:15]	Tx data buffer pointer, bits [0:15] ¹
Offset + 6	Bits [0:15]	A[16:31]	Tx data buffer pointer, bits [16:31].

¹ The transmit buffer pointer, which contains the address of the associated data buffer, must always be evenly divisible by 4. The buffer must reside in memory external to the FEC. This value is never modified by the Ethernet controller.

NOTE

Once the software driver has set up the buffers for a frame, it should set up the corresponding BDs. The last step in setting up the BDs for a transmit frame should be to set the R bit in the first BD for the frame. The driver should follow that with a write to TDAR which will trigger the FEC to poll the next BD in the ring.

16.6 Revision History

Table 16-39. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release



Chapter 17

FlexRay

17.1 Introduction

This chapter describes the FlexRay controller that supports high-speed communication networks for automotive applications.

17.1.1 FlexRay Protocol

The *FlexRay Communications System Protocol Specification Version 2.1* explains the protocol followed by the device. Consistent with that protocol are the following structures that are highlighted in this chapter:

- FlexRay protocol parameters, constants, and variables are shown as normal font in regular text: `gdActionPointOffset`, but are highlighted in italics in tables and figures. Refer to [Table 17-75](#) for the fields of the protocol registers.
- FlexRay protocol states are highlighted as in this example: *POC:normal active*, but are shown in italics in tables and figures.
- FlexRay message buffer states and transitions are expressed in normal font in text, as in CCma or HLck, but shown in italics in tables and figures. Refer to [Table 17-94](#), [Table 17-99](#), [Table 17-105](#), and [Table 17-106](#) for descriptions of message buffer states.

17.1.2 Overview

The device contains a FlexRay communication controller module that is compliant with the *FlexRay Communications System Protocol Specification Version 2.1* and *FlexRay Communications System Electrical Physical Layer Specification Version 2.1*. These can be obtained from the FlexRay consortium at www.flexray.com.

The FlexRay module has these main components:

- Protocol engine (PE)
- Controller host interface (CHI)
- Clock domain crossing unit (CDC)
- Bus master interface (BMIF)

The protocol engine has two transmitters, TxA and TxB, and two receivers, RxA and RxB, for sending and receiving frames through the two FlexRay network channels. The time control unit (TCU) is responsible for maintaining global clock synchronization to the FlexRay network. The overall activity of the PE is controlled by the sequencer engine (SEQ).

FlexRay

The controller host interface provides host access to the module's configuration, control, and status registers, as well as to the message buffer configuration, control, and status registers. The message buffers themselves, which consist of the payload data received or to be transmitted and header and status information, are stored in FlexRay memory (FRM). It is not part of the FlexRay module, but is a partition of the device's system memory.

The clock domain crossing unit (CDC) implements the signal crossing from the CHI clock domain to the PE clock domain, and vice versa if the PE and the CHI are running on different asynchronous clock domains.

The FlexRay module stores the frame header and payload data of frames received or to be transmitted in the FlexRay memory partition (FRM), which is a partition in system memory of the MCU. The FlexRay application software accesses the FRM to retrieve and provide the frames to be processed by the FlexRay module. Besides the frame header and payload data, the FlexRay module stores the clock synchronization (frame) related tables in the FRM for host processing.

The FlexRay module has access to the FRM memory partition of the device via its bus master interface (BMIF). The system memory base address high register (FR_SYMBADHR) and system memory base address low register (FR_SYMBADLR) define the start of the FRM window assigned to the FlexRay module. All FRM-related offsets stored in the offset registers and all offsets calculated using the message buffer header index values are added to this base address to get the actual physical address pointer into the FRM partition.

NOTE

The FlexRay module does not provide a memory protection scheme for its FRM partition.

17.1.3 Block Diagram

A block diagram of the FlexRay module is given in Figure 17-1.

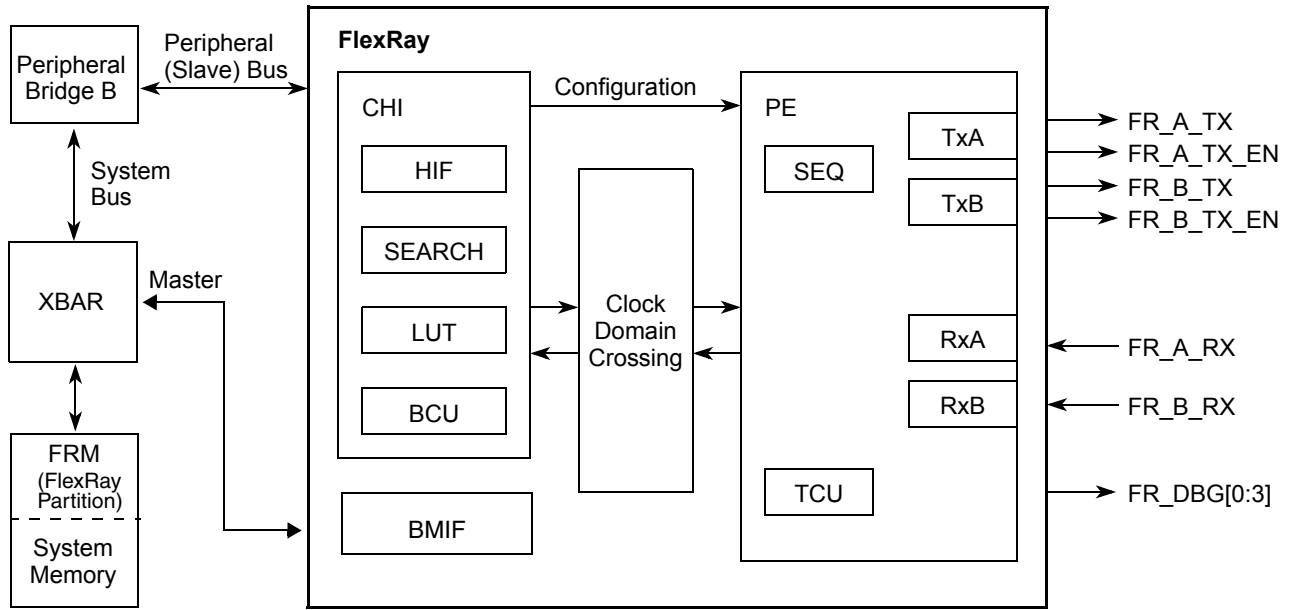


Figure 17-1. FlexRay Block Diagram

17.1.4 Features

The FlexRay module provides these distinctive features:

- *FlexRay Communications System Protocol Specification Version 2.1* compliant protocol implementation
- *FlexRay Communications System Electrical Physical Layer Specification Version 2.1* compliant bus driver interface
- Single channel support as well as the default dual channel support
 - Internal channel A and FlexRay Port A can be configured to be connected to either physical FlexRay channel A or physical FlexRay channel B.
- Support for FlexRay bus data rate of 0.71 to 10 Mbit/s
 - Module provides prescaler for protocol clock prescaling
- 128 configurable message buffers with these types of filtering:
 - Individual frame ID
 - Individual channel ID
 - Individual cycle counter
- Message buffer header, status and payload data stored in a FlexRay memory partition (FRM), located in system memory
 - Allows for flexible and efficient message buffer implementation
 - Consistent data access ensured by means of buffer locking
 - Host can lock multiple buffers at the same time
- Size of message buffer data section configurable from 0 up to 254 bytes
- Two independent message buffer segments with configurable size of payload data section
 - Each segment can contain message buffers assigned to the static segment and message buffers assigned to the dynamic segment at the same time.
- Zero padding for transmit message buffers in static and dynamic segment
 - Used when the frame payload length exceeds the size of the message buffer data section
- Transmit message buffers configurable with state or event semantics
- Each message buffer can be configured as a:
 - Receive message buffer
 - Single-buffered transmit message buffer
 - Double-buffered transmit message buffer (combines two single-buffered message buffers)
- Individual message buffer reconfiguration supported
 - Means provided to safely disable individual message buffers
 - Disabled message buffers can be reconfigured without any restrictions
- Two independent configurable receive FIFOs for both channel A and channel B with:
 - Up to 255 entries each
 - One receive FIFO per channel

- Global frame ID acceptance and rejection filtering, with rejection based on both (mask, value) and range filters
- Global channel ID filtering
- Global message ID acceptance filtering for the dynamic segment
- 4 configurable slot error counters
- 4 dedicated slot status indicators
 - Used to observe slots in the static and dynamic segment without using receive message buffers
- Measured value indicators for clock synchronization
 - PE internal synchronization frame ID. An internal synchronization frame ID and synchronization frame measurement tables are written into system memory if enabled.
- Fractional macroticks supported for clock correction
- Maskable interrupt sources via individual and combined interrupt lines
- 1 absolute timer
- 1 timer that can be configured to absolute or relative

17.1.5 Modes of Operation

Table 17-1 shows the operating modes of the FlexRay module.

Table 17-1. FlexRay Modes

Mode	Configuration Setting	POC State	Accessible Registers	CHI Clock	PE Clock
Disabled	FR_MCR[MEN]=0	<i>Default config</i>	FR_MCR, and any registers with the Any Time or Disabled Mode write access conditions can be accessed	stopped	stopped
Normal	FR_MCR[MEN]=1	<i>Any POC state</i>	Register access depends on the POC state.	running	controlled by PE

NOTE

The FlexRay module does not stop operation on the device wait/doze and debug requests. Instead, it keeps running and stays synchronized to the FlexRay bus as long as the protocol clock is applied. If the FlexRay module's operation stops, it loses the synchronization to the bus and must be reintegrated under application software control to resynchronize to the FlexRay bus.

NOTE

Without host command interaction, the FlexRay module does not have any way to gracefully stop communication on the FlexRay bus. If the protocol clock is going to be stopped, it is the software application's responsibility to shut down the FlexRay module properly before the clock is stopped.

17.1.5.1 Disabled Mode

This is the default mode the module enters after hard reset. The module indicates that it is in disabled mode by negating the module enable bit (MEN) in the [Module Configuration Register \(FR_MCR\)](#).

In this mode, the protocol engine is in its reset state. No communication on the FlexRay bus is performed.

All registers with write access conditions Any Time and Disabled Mode can be accessed for writing, as stated in [Section 17.3.2.2, “Register Write Access Conditions.”](#)

In disabled mode, the host can configure the module by setting the control bits in the [Module Configuration Register \(FR_MCR\)](#).

The module leaves disabled mode when the host sets the MEN bit in the [Module Configuration Register \(FR_MCR\)](#). The module then negates the protocol engine reset and puts the protocol engine into the default configuration state (POC:default config).

NOTE

After the host has enabled the module by setting the MEN bit, it cannot disable the module later.

17.1.5.2 Normal Mode

In normal mode, the module is fully functional.

Normal mode is entered when the host asserts the module enable bit (MEN) in the [Module Configuration Register \(FR_MCR\)](#). If this mode is entered, the protocol engine is in its default configuration state (POC:default config).

Depending on the values of the SCM, CHA, and CHB bits in the module configuration register (FR_MCR), the corresponding FlexRay bus driver ports are enabled and driven.

The host can transition the protocol engine into other protocol states using the [Protocol Operation Control Register \(FR_POCR\)](#). For details regarding protocol states, please see *FlexRay Communications System Protocol Specification Version 2.1*.

17.2 External Signal Description

The FlexRay module has 10 signals connected to external device pins. These signals are summarized in [Table 17-2](#) and described in more detail in [Section 17.2.1, “Detailed Signal Descriptions.”](#)

Table 17-2. External Signals

FlexRay Signal	Direction	Active	Reset State (RESET)
FR_A_RX	Input	—	—
FR_A_TX	Output	—	1
FR_A_TX_EN	Output	Low	1
FR_B_RX	Input	—	—
FR_B_TX	Output	—	1
FR_B_TX_EN	Output	Low	1

Table 17-2. External Signals (Continued)

FlexRay Signal	Direction	Active	Reset State (RESET)
FR_DBG0	Output	—	0
FR_DBG1	Output	—	0
FR_DBG2	Output	—	0
FR_DBG3	Output	—	0

17.2.1 Detailed Signal Descriptions

This section provides a detailed description of the FlexRay signals connected to external device pins. For information about how the FlexRay signals are muxed with other signals in the device, their reset status, voltage, etc., refer to [Chapter 4, “Signal Description.”](#)

17.2.1.1 FR_A_RX — Receive Data Channel A

The FR_A_RX signal carries the receive data for channel A from the corresponding FlexRay bus driver.

17.2.1.2 FR_A_TX — Transmit Data Channel A

The FR_A_TX signal carries the transmit data for channel A to the corresponding FlexRay bus driver.

17.2.1.3 $\overline{\text{FR_A_TX_EN}}$ — Transmit Enable Channel A

The $\overline{\text{FR_A_TX_EN}}$ signal indicates to the FlexRay bus driver that the FlexRay module is attempting to transmit data on channel A.

17.2.1.4 FR_B_RX — Receive Data Channel B

The FR_B_RX signal carries the receive data for channel B from the corresponding FlexRay bus driver.

17.2.1.5 FR_B_TX — Transmit Data Channel B

The FR_B_TX signal carries the transmit data for channel B to the FlexRay bus driver.

17.2.1.6 $\overline{\text{FR_B_TX_EN}}$ — Transmit Enable Channel B

The $\overline{\text{FR_B_TX_EN}}$ signal indicates to the FlexRay bus driver that the FlexRay module is attempting to transmit data on channel B.

17.2.1.7 FR_DBG[0:3] — Strobe Port Signals

These signals provide the internally selected debug strobe signals. For details, please refer to [Strobe Signal Control Register \(FR_STBSCR\)](#).

17.3 Memory Map and Register Description

The FlexRay module occupies 1280 bytes of the device’s address space starting at the module’s base address defined by the memory map of the device.

17.3.1 Module Memory Map

The complete memory map of the FlexRay module is shown in [Table 17-3](#). The addresses presented here are the offsets relative to the module’s base address, which is defined by the current device address map.

The base address of the module is 0xFFFE_0000.

Table 17-3. FlexRay Memory Map (Sheet 1 of 4)

Address	Use ¹	Access
Module Configuration and Control		
Base + 0x000	Module Version Register (MVR)	R
Base + 0x002	Module Configuration Register (FR_MCR)	R/W
Base + 0x004	System Memory Base Address High Register (FR_SYMBADHR)	R/W
Base + 0x006	System Memory Base Address Low Register (FR_SYMBADLR)	R/W
Base + 0x008	Strobe Signal Control Register (FR_STBSCR)	R/W
Base + 0x00A	Strobe Port Control Register (FR_STBPCR)	R/W
Base + 0x00C	Message Buffer Data Size Register (FR_MBDSR)	R/W
Base + 0x00E	Message Buffer Segment Size and Utilization Register (FR_MBSSUTR)	R/W
Base + 0x010 – 0x013	Reserved	
Interrupt and Error Handling		
Base + 0x014	Protocol Operation Control Register (FR_POCR)	R/W
Base + 0x016	Global Interrupt Flag and Enable Register (FR_GIFER)	R/W
Base + 0x018	Protocol Interrupt Flag Register 0 (FR_PIFR0)	R/W
Base + 0x01A	Protocol Interrupt Flag Register 1 (FR_PIFR1)	R/W
Base + 0x01C	Protocol Interrupt Enable Register 0 (FR_PIER0)	R/W
Base + 0x01E	Protocol Interrupt Enable Register 1 (FR_PIER1)	R/W
Base + 0x020	CHI Error Flag Register (FR_CHIERFR)	R/W
Base + 0x022	Message Buffer Interrupt Vector Register (FR_MBIVEC)	R
Base + 0x024	Channel A Status Error Counter Register (FR_CASERCR)	R
Base + 0x026	Channel B Status Error Counter Register (FR_CBSECR)	R
Protocol Status		
Base + 0x028	Protocol Status Register 0 (FR_PSR0)	R
Base + 0x02A	Protocol Status Register 1 (FR_PSR1)	R
Base + 0x02C	Protocol Status Register 2 (FR_PSR2)	R/W
Base + 0x02E	Protocol Status Register 3 (FR_PSR3)	R/W
Base + 0x030	Macrotick Counter Register (FR_MTCTR)	R
Base + 0x032	Cycle Counter Register (FR_CYCTR)	R
Base + 0x034	Slot Counter Channel A Register (FR_SLCTAR)	R
Base + 0x036	Slot Counter Channel B Register (FR_SLCTBR)	R
Base + 0x038	Rate Correction Value Register (FR_RTCORVR)	R

Table 17-3. FlexRay Memory Map (Sheet 2 of 4) (Continued)

Address	Use ¹	Access
Base + 0x03A	Offset Correction Value Register (FR_OFCORVR)	R
Base + 0x03C	Combined Interrupt Flag Register (FR_CIFRR)	R
Base + 0x03E	Reserved	R
Sync Frame Counter and Tables		
Base + 0x040	Sync Frame Counter Register (FR_SFCNTR)	R
Base + 0x042	Sync Frame Table Offset Register (FR_SFTOR)	R/W
Base + 0x044	Sync Frame Table Configuration, Control, Status Register (FR_SFTCCSR)	R/W
Sync Frame Filter		
Base + 0x046	Sync Frame ID Rejection Filter Register (FR_SFIDRFR)	R/W
Base + 0x048	Sync Frame ID Acceptance Filter Value Register (FR_SFIDAFVR)	R/W
Base + 0x04A	Sync Frame ID Acceptance Filter Mask Register (FR_SFIDAFMR)	R/W
Network Management Vector		
Base + 0x04C	Network Management Vector Register 0 (FR_NMVR0)	R
Base + 0x04E	Network Management Vector Register 1 (FR_NMVR1)	R
Base + 0x050	Network Management Vector Register 2 (FR_NMVR2)	R
Base + 0x052	Network Management Vector Register 3 (FR_NMVR3)	R
Base + 0x054	Network Management Vector Register 4 (FR_NMVR4)	R
Base + 0x056	Network Management Vector Register 5 (FR_NMVR5)	R
Base + 0x058	Network Management Vector Length Register (FR_NMVLR)	R/W
Timer Configuration		
Base + 0x05A	Timer Configuration and Control Register (FR_TICCR)	R/W
Base + 0x05C	Timer 1 Cycle Set Register (FR_TI1CYSR)	R/W
Base + 0x05E	Timer 1 Macrotick Offset Register (FR_TI1MTOR)	R/W
Base + 0x060	Timer 2 Configuration Register 0 (FR_TI2CR0)	R/W
Base + 0x062	Timer 2 Configuration Register 1 (FR_TI2CR1)	R/W
Slot Status Configuration		
Base + 0x064	Slot Status Selection Register (FR_SSSR)	R/W
Base + 0x066	Slot Status Counter Condition Register (FR_SSCCR)	R/W
Slot Status		
Base + 0x068	Slot Status Register 0 (FR_SSR0)	R
Base + 0x06A	Slot Status Register 1 (FR_SSR1)	R
Base + 0x06C	Slot Status Register 2 (FR_SSR2)	R
Base + 0x06E	Slot Status Register 3 (FR_SSR3)	R
Base + 0x070	Slot Status Register 4 (FR_SSR4)	R
Base + 0x072	Slot Status Register 5 (FR_SSR5)	R
Base + 0x074	Slot Status Register 6 (FR_SSR6)	R
Base + 0x076	Slot Status Register 7 (FR_SSR7)	R
Base + 0x078	Slot Status Counter Register 0 (FR_SSCR0)	R
Base + 0x07A	Slot Status Counter Register 1 (FR_SSCR1)	R
Base + 0x07C	Slot Status Counter Register 2 (FR_SSCR2)	R
Base + 0x07E	Slot Status Counter Register 3 (FR_SSCR3)	R

Table 17-3. FlexRay Memory Map (Sheet 3 of 4) (Continued)

Address	Use ¹	Access
MTS Generation		
Base + 0x080	MTS A Configuration Register (FR_MTSACFR)	R/W
Base + 0x082	MTS B Configuration Register (FR_MTSBCFR)	R/W
Shadow Buffer Configuration		
Base + 0x084	Receive Shadow Buffer Index Register (FR_RSBIR)	R/W
Receive FIFO — Configuration		
Base + 0x086	Receive FIFO Selection Register (FR_RFSR)	R/W
Base + 0x088	Receive FIFO Start Index Register (FR_RFSIR)	R/W
Base + 0x08A	Receive FIFO Depth and Size Register (FR_RFDSR)	R/W
Receive FIFO - Status		
Base + 0x08C	Receive FIFO A Read Index Register (FR_RFARIR)	R/W
Base + 0x08E	Receive FIFO B Read Index Register (FR_RFBIR)	R/W
Receive FIFO - Filter		
Base + 0x090	Receive FIFO Message ID Acceptance Filter Value Register (FR_RFMIDAFVR)	R/W
Base + 0x092	Receive FIFO Message ID Acceptance Filter Mask Register (FR_RFMIAFMR)	R/W
Base + 0x094	Receive FIFO Frame ID Rejection Filter Value Register (FR_RFFIDRFVR)	R/W
Base + 0x096	Receive FIFO Frame ID Rejection Filter Mask Register (FR_RFFIDRFMR)	R/W
Base + 0x098	Receive FIFO Range Filter Configuration Register (FR_RFRFCFR)	R/W
Base + 0x09A	Receive FIFO Range Filter Control Register (FR_RFRFCTR)	R/W
Dynamic Segment Status		
Base + 0x09C	Last Dynamic Transmit Slot Channel A Register (FR_LDTXSLAR)	R/W
Base + 0x09E	Last Dynamic Transmit Slot Channel B Register (FR_LDTXSLBR)	R/W
Protocol Configuration		
Base + 0x0A0	Protocol Configuration Register 0 (FR_PCR0)	R/W
▪	▪	R/W
▪	▪	R/W
▪	▪	R/W
<f-helvetica>Base + 0x0DC	Protocol Configuration Register 30 (FR_PCR30)	R/W
Base + 0x0DE – Base + 0x0FE	Reserved	R/W
Message Buffers Configuration, Control, Status: message buffer 0 - 127 (1024 bytes)		
Base + 0x0100	Message Buffer Configuration, Control, Status Register 0 (FR_MBCCSR0)	R/W
Base + 0x0102	Message Buffer Cycle Counter Filter Register 0 (FR_MBCCFR0)	R/W
Base + 0x0104	Message Buffer Frame ID Register 0 (FR_MBFIDR0)	R/W
Base + 0x0106	Message Buffer Index Register 0 (FR_MBIDXR0)	R/W
Base + 0x0108	Message Buffer Configuration, Control, Status Register 1 (FR_MBCCSR1)	R/W
Base + 0x010A	Message Buffer Cycle Counter Filter Register 1 (FR_MBCCFR1)	R/W
Base + 0x010C	Message Buffer Frame ID Register 1 (FR_MBFIDR1)	R/W
Base + 0x010E	Message Buffer Index Register 1 (FR_MBIDXR1)	R/W

Table 17-3. FlexRay Memory Map (Sheet 4 of 4) (Continued)

Address	Use ¹	Access
▪ ▪ ▪	▪ ▪ ▪	R/W
Base + 0x04F8	Message Buffer Configuration, Control, Status Register 127 (FR_MBCCSR127)	R/W
Base + 0x04FA	Message Buffer Cycle Counter Filter Register 127 (FR_MBCCFR127)	R/W
Base + 0x04FC	Message Buffer Frame ID Register 127 (FR_MBFIDR127)	R/W
Base + 0x04FE	Message Buffer Index Register 127 (FR_MBIDXR127)	R/W

¹ For some registers, 16-bit write access is required to ensure proper operation. This restriction is stated for each register that is affected.

17.3.2 Register Descriptions

This section provides a detailed description of all registers in ascending address order, presented as 16-bit wide unities. The FlexRay module supports 8-bit, 16-bit, and 32-bit wide host access.

Table 17-4 provides a key for register figures and tables.

Table 17-4. Register Conventions

Convention	Description
	The shaded field indicates that the bit or field is not writeable.
R*	The R* item indicates a reserved bit or field. The module will not change its value. The host must not write any value different from the reset value to this bit or field.
Reset Value	
0	Resets to zero.
1	Resets to one.
–	Undefined after reset and unaffected by reset.

17.3.2.1 Register Reset Conditions

All registers except the message buffer cycle counter filter registers (FR_MBCCFR n), message buffer frame ID registers (FR_MBFIDR n), and message buffer index registers (FR_MBIDXR n) are reset to their reset value on system reset. The above registers are located in physical memory blocks, so they are not affected by reset.

For some register fields, additional reset conditions exist. These additional conditions are mentioned in the detailed register description. The additional reset conditions are explained in Table 17-5.

Table 17-5. Additional Register Reset Conditions

Condition	Description
Protocol RUN Command	The register field is reset when the host writes 0101 (RUN) to the FR_POCR[POCCMD] field.
Message Buffer Disable	The register field is reset when the software application has disabled the message buffer. This happens when software writes 1 to the message buffer disable trigger bit FR_MBCCSR n [EDT] while the message buffer is enabled (FR_MBCCSR n [EDS] = 1) and the module grants the disable to the host by clearing the FR_MBCCSR n [EDS] bit.

17.3.2.2 Register Write Access Conditions

For each register, the write access conditions are specified in the detailed register description. A description of the conditions is given in Table 17-6. If none of the write access conditions are fulfilled for a specific bit or field, any write attempt is ignored without notification. The register values will not change.

Table 17-6. Register Write Access Conditions

Write Access Condition	Indication	Description
Any Time	–	No restrictions on write access
Disabled Mode	FR_MCR[MEN] = 0	Write access only when the module is in disabled mode.
Normal Mode	FR_MCR[MEN] = 1	Write access only when the module is in normal mode.
Protocol CONFIG State	FR_PSR0[PROTSTATE] = POC:config ¹	The protocol engine is in the CONFIG state. Write access only when the module is in the POC configuration state.
MB_DIS	FR_MBCCSRn[EDS] = 0	Write access to message buffer registers when related message buffer is disabled.
MB_LCK	FR_MBCCSRn[LCKS] = 1	Write access to message buffer registers when related message buffer is locked.

¹ see [Protocol Status Register 0 \(FR_PSR0\)](#).

NOTE

For some registers, 16-bit write access is required to ensure proper operation. This restriction is stated for each register that is affected.

17.3.2.1 Internal Register Access

These memory-mapped registers access multiple internal registers:

- [Strobe Signal Control Register \(FR_STBSCR\)](#)
- [Slot Status Selection Register \(FR_SSSR\)](#)
- [Slot Status Counter Condition Register \(FR_SSCCR\)](#)
- [Receive Shadow Buffer Index Register \(FR_RSBIR\)](#)

Each of these memory mapped registers provide a SEL field and a WMD bit. The SEL field selects the internal register. The WMD bit controls the write mode. If the WMD bit is set to 0 during the write access, all fields of the internal register are updated. If the WMD bit set to 1, only the SEL field is changed. All other fields of the internal register remain unchanged. This allows reading back of the values of the selected internal register in a subsequent read access.

17.3.2.3 Module Version Register (MVR)

This register provides the module version number. The module version number is built from the CHI version number and the PE version number.

Base + 0x000

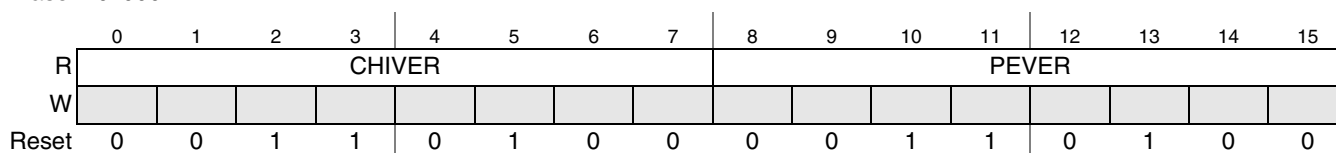

Figure 17-2. Module Version Register (MVR)

Table 17-7. MVR Field Descriptions

Field	Description
0–7 CHIVER	CHI Version Number — This field provides the version number of the controller host interface.
8–15 PEVER	PE Version Number — This field provides the version number of the protocol engine.

17.3.2.4 Module Configuration Register (FR_MCR)

This register defines the global module configuration.

Base + 0x002

Write Access: MEN, SCM, CHB, CHA, CLKSEL, PRESCALE: Disabled Mode
SFFE: Disabled Mode II *Protocol CONFIG State*

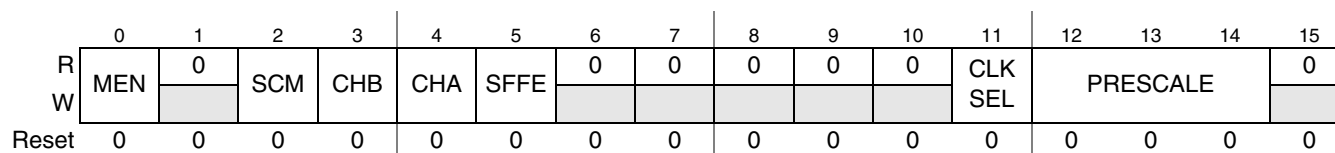


Figure 17-3. Module Configuration Register (FR_MCR)

Table 17-8. FR_MCR Field Descriptions

Field	Description
0 MEN	Module Enable — This bit indicates whether the module is in normal mode or in disabled mode. The host requests the module to leave disabled mode by writing 1 to this bit. Before leaving disabled mode, the host has to configure the SCM, CHB, CHA, TMODE, PRESCALE, and CLKSEL values in this register. For details see Section 17.1.5, “Modes of Operation.” 0 Write: ignored, no disable possible Read: module disabled 1 Write: enable module in normal mode Read: module enabled Note: If the module is enabled it cannot be disabled.
1	Reserved
2 SCM	Single Channel Mode — This bit controls the channel operation mode of the module. See Section 17.4.10.2, “Single Channel Device Mode” for detailed information. 0 Dual channel mode 1 Single channel mode
3–4 CHB, CHA	FlexRay Channel B Enable and FlexRay Channel A Enable — The meaning of these two control bits depends on the value of the single channel mode control bit SCM and is given in Table 17-9 . For a detailed description refer to Section 17.4.10.1, “Dual Channel Device Mode” and Section 17.4.10.2, “Single Channel Device Mode.” The relationship of internal channel and FlexRay ports is depicted in Figure 17-132 and Figure 17-128 .
5 SFFE	Synchronization Frame Filter Enable — This bit controls the filtering for received synchronization frames. For details see Section 17.4.13, “MTS Generation.” 0 Synchronization frame filtering disabled 1 Synchronization frame filtering enabled
6–10	Reserved

Table 17-8. FR_MCR Field Descriptions (Continued)

Field	Description
11 CLKSEL	Protocol Engine Clock Source Select — This bit is used to select the clock source for the protocol engine. The internal crystal oscillator clock is selected after reset. The alternate bus clock source is a PLL-generated clock source. 0 The clock source is an on-chip crystal oscillator. 1 The clock source is system clock / 3. This should only be used if the system frequency is 120 MHz. Note: When using a 40MHz crystal oscillator, the maximum operating frequency that can be attained is 130MHz.
12–14 PRESCALE	Protocol Engine Clock Prescaler — This bit field defines the factor by which the clock of the protocol engine will be scaled down. The meaning of the bits is given in Table 17-10 .
15	Reserved

Table 17-9. Single/Dual Channel Device Configurations

SCM	CHB	CHA	Description
0 1 1	0 0 1	0 0 1	Dual / Single Channel Device <ul style="list-style-type: none"> • Internal channel A: disabled • Internal channel B: disabled • FlexRay port A: disabled • FlexRay port B: disabled
0 1	0 0	1 1	Dual / Single Channel Device <ul style="list-style-type: none"> • Internal channel A: enabled, behaves as FlexRay channel A • Internal channel B: disabled • FlexRay port A: enabled • FlexRay port B: disabled
0	1	0	Dual Channel Device <ul style="list-style-type: none"> • Internal channel A: disabled • Internal channel B: enabled, behaves as FlexRay channel B • FlexRay port A: disabled • FlexRay port B: enabled
0	1	1	Dual Channel Device <ul style="list-style-type: none"> • Internal channel A: enabled, behaves as FlexRay channel A • Internal channel B: enabled, behaves as FlexRay channel B • FlexRay port A: enabled • FlexRay port B: enabled
1	1	0	Single Channel Device. <ul style="list-style-type: none"> • Internal channel A: enabled, behaves as FlexRay channel B • Internal channel B: disabled • FlexRay port A: enabled • FlexRay port B: disabled

Table 17-10. Protocol Clock Prescaler Mapping

FR_MCR[PRESCALE]	Clock Divider Value	FlexRay Data Rate ($f_{\text{clocksource}} = 40 \text{ MHz}$)
000	1	10 Mbit / sec
001	2	5.0 Mbit / sec
010	4	2.5 Mbit / sec
011	6	1.66 Mbit / sec
100	8	1.25 Mbit / sec
101	10	1.0 Mbit / sec

Table 17-10. Protocol Clock Prescaler Mapping (Continued)

FR_MCR[PRESCALE]	Clock Divider Value	FlexRay Data Rate ($f_{\text{clocksource}} = 40 \text{ MHz}$)
110	12	0.83 Mbit / sec
111	14	0.71 Mbit / sec

17.3.2.5 System Memory Base Address High Register (FR_SYMBADHR) and System Memory Base Address Low Register (FR_SYMBADLR)

The two system memory base address registers define the base address of the FlexRay memory partition within the system memory for bus master accesses. The base address is used by the bus master interface unit (BMIF) to calculate the physical memory address for system memory accesses.

NOTE

The FR_SYMBADHR and FR_SYMBADLR registers both require 16-bit wide access.

The system memory base address has to be set before the module is enabled. As soon as the module is enabled, access to the system memory can start.

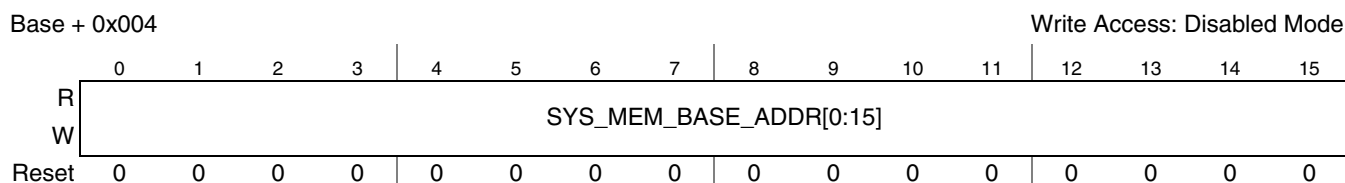


Figure 17-4. System Memory Base Address High Register (FR_SYMBADHR)

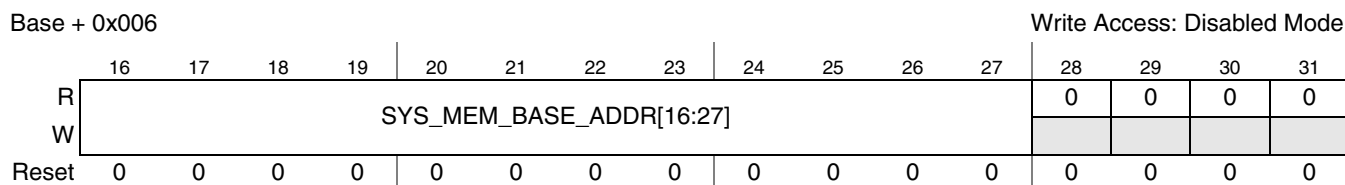


Figure 17-5. System Memory Base Address Low Register (FR_SYMBADLR)

Table 17-11. FR_SYMBADHR and FR_SYMBADLR Field Descriptions

Field	Description
0–27 FR_SYMBADHR FR_SYMBADLR	This base address will be added to all system memory offset values stored in registers or calculated in the module before the module accesses the system memory via its bus master interface. The system memory base address must be aligned to an 16-byte boundary.

17.3.2.6 Strobe Signal Control Register (FR_STBSCR)

This register is used to assign the individual protocol timing related strobe signals given in Table 17-13 to the external strobe ports. Each strobe signal can be assigned to at most one strobe port. Each write access to registers overwrites the previously written ENB and STBPSEL values for the signal indicated by SEL. If more than one strobe signal is assigned to one strobe port, the current values of the strobe signals are

combined with a binary OR and presented at the strobe port. If no strobe signal is assigned to a strobe port, the strobe port carries logic 0. For more detailed timing information, refer to [Section 17.4.16, “Strobe Signal Support.”](#)

This register can be written in any mode. FR_STBSCR requires 16-bit write access for correct operation.

NOTE

In single channel device mode (FR_MCR[SCM] = 1), channel B related strobe signals are undefined and should not be assigned to the strobe ports.

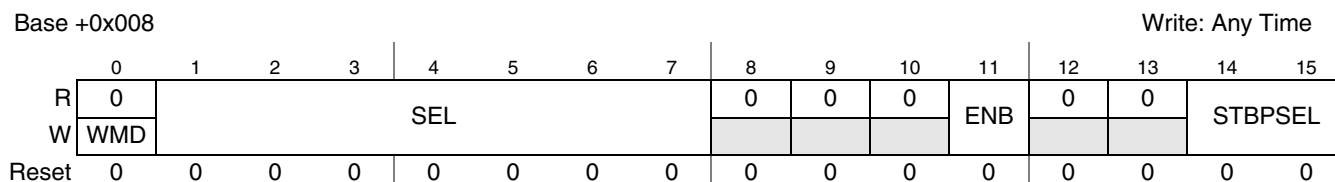


Figure 17-6. Strobe Signal Control Register (FR_STBSCR)

Table 17-12. FR_STBSCR Field Descriptions

Field	Description
0 WMD	Write Mode — This control bit defines the write mode of this register. 0 Write to all fields in this register on write access. 1 Write to SEL field only on write access.
1–7 SEL	Strobe Signal Select — This control field selects one of the strobe signals given in Table 17-13 to be enabled or disabled and assigned to one of the four strobe ports given in Table 17-13 .
11 ENB	Strobe Signal Enable — The control bit is used to enable and to disable the strobe signal selected by STBSSEL. 0 Strobe signal is disabled and not assigned to any strobe port. 1 Strobe signal is enabled and assigned to the strobe port selected by STBPSEL.
14–15 STBPSEL	Strobe Port Select — This field selects the strobe port that the strobe signal selected by the SEL field is assigned to. All strobe signals that are enabled and assigned to the same strobe port are combined with a binary OR operation. 00 select STB0. 01 select STB1. 10 select STB2. 11 select STB3.

Table 17-13. Strobe Signal Mapping (Sheet 1 of 3)

SEL		Description	Channel	Type	Offset ¹	Reference
dec	hex					
0	0x00	pocstate[0]	-	value	0	MT start
1	0x01	pocstate[1]				
2	0x02	pocstate[2]				
3	0x03	pocstate[3]				
4	0x04	pocstate[4]				
5	0x05	pocstate[5]				
6	0x06	pocstate[6]				

Table 17-13. Strobe Signal Mapping (Sheet 2 of 3)

SEL		Description	Channel	Type	Offset ¹	Reference
dec	hex					
7	0x07	channel idle indicator	A	level	+5	RXD_BG1
8	0x08		B			RXD_BG2
9	0x09	receive data after glitch filtering	A	value	+4	RXD_BG1
10	0x0A		B			RXD_BG2
11	0x0B	synchronization edge strobe	A	pulse	+4	RXD_BG1
12	0x0C		B			RXD_BG2
13	0x0D	header received	A	pulse	+4	RXD_BG1
14	0x0E		B			RXD_BG2
15	0x0F	wakeup symbol decoded	A	pulse	+5	RXD_BG1
16	0x10		B			RXD_BG2
17	0x11	MTS or CAS symbol decoded	A	pulse	+4	RXD_BG1
18	0x12		B			RXD_BG2
19	0x13	frame decoded	A	pulse	+4	RXD_BG1
20	0x14		B			RXD_BG2
21	0x15	channel idle detected	A	pulse	+4	RXD_BG1
22	0x16		B			RXD_BG2
23	0x17	start of communication element detected	A	pulse	+4	RXD_BG1
24	0x18		B			RXD_BG2
25	0x19	potential frame start channel	A	pulse	+4	RXD_BG1
26	0x1A		B			RXD_BG2
27	0x1B	wakeup collision detected	A	pulse	+5	RXD_BG1
28	0x1C		B			RXD_BG2
29	0x1D	content error detected	A	level	+4	RXD_BG1
30	0x1E		B			RXD_BG2
31	0x1F	syntax error detected	A	pulse	+4	RXD_BG1
32	0x20		B			RXD_BG2
33	0x21	start transmission of wakeup pattern	A	pulse	-1	TXD_BG1
34	0x22		B			TXD_BG2
35	0x23	start transmission of MTS or CAS symbol	A	pulse	-1	TXD_BG1
36	0x24		B			TXD_BG2
37	0x25	start of transmission	A	pulse	-1	TXD_BG1
38	0x26		B			TXD_BG2
39	0x27	end of transmission	A	pulse	-1	TXD_BG1
40	0x28		B			TXD_BG2
41	0x29	static segment indicator	-	level	0	MT start
42	0x2A	dynamic segment indicator	-	level	0	MT start
43	0x2B	symbol window indicator	-	level	0	MT start
44	0x2C	NIT indicator	-	level	0	MT start
45	0x2D	action point	-	pulse	-1	TXD_BG1
46	0x2E	sync calculation complete ²	-	pulse	-	-
47	0x2F	start of offset correction	-	pulse	-2	MT start

Table 17-13. Strobe Signal Mapping (Sheet 3 of 3)

SEL		Description	Channel	Type	Offset ¹	Reference
dec	hex					
48	0x30	cycle count[0]	-	value	-2	MT start
49	0x31	cycle count[1]				
50	0x32	cycle count[2]				
51	0x33	cycle count[3]				
52	0x34	cycle count[4]				
53	0x35	cycle count[5]				
54	0x36	slot count[0]	A	value	0	MT start
55	0x37	slot count[1]				
56	0x38	slot count[2]				
57	0x39	slot count[3]				
58	0x3A	slot count[4]				
59	0x3B	slot count[5]				
60	0x3C	slot count[6]				
61	0x3D	slot count[7]				
62	0x3E	slot count[8]				
63	0x3F	slot count[9]				
64	0x40	slot count[10]				
65	0x41	slot count[0]	B	value	0	MT start
66	0x42	slot count[1]				
67	0x43	slot count[2]				
68	0x44	slot count[3]				
69	0x45	slot count[4]				
70	0x46	slot count[5]				
71	0x47	slot count[6]				
72	0x48	slot count[7]				
73	0x49	slot count[8]				
74	0x4A	slot count[9]				
75	0x4B	slot count[10]				
76	0x4C	cycle start	-	pulse	0	MT start
77	0x4D	slot start	A	pulse	0	MT start
78	0x4E		B			
79	0x4F	minislot start	-	pulse	0	MT start
80	0x50	arm	-	value	+1	MT start
81	0x51	mt	-	value	+1	MT start

¹ Given in PE clock cycles

² Indicates internal PE event not directly related to FlexRay bus timing

17.3.2.7 Strobe Port Control Register (FR_STBPCR)

This register enables and disables strobe port signals. Each disabled port stays disabled, even when strobe signals are assigned to it.

Base + 0x00A

Write: Any Time

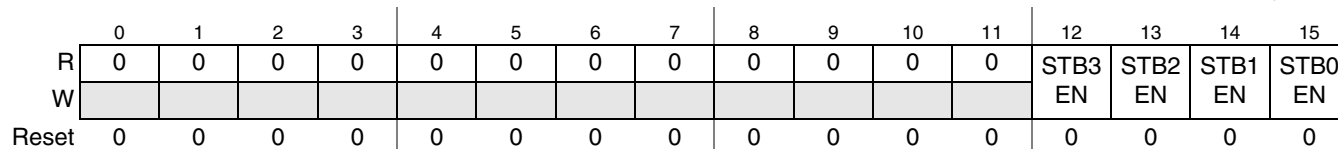


Figure 17-7. Strobe Port Control Register (FR_STBPCR)

Table 17-14. FR_STBPCR Field Descriptions

Field	Description
12 STB3EN	Strobe Port STB3 Enable — This control bit defines whether the STB3 port is enabled or disabled. 0 Strobe port STB3 disabled 1 Strobe port STB3 enabled
13 STB2EN	Strobe Port STB2 Enable — This control bit defines whether the STB2 port is enabled or disabled. 0 Strobe port STB2 disabled 1 Strobe port STB2 enabled
14 STB1EN	Strobe Port STB1 Enable — This control bit defines whether the STB1 port is enabled or disabled. 0 Strobe port STB1 disabled 1 Strobe port STB1 enabled
15 STB0EN	Strobe Port STB0 Enable — This control bit defines whether the STB0 port is enabled or disabled. 0 Strobe port STB0 disabled 1 Strobe port STB0 enabled

17.3.2.8 Message Buffer Data Size Register (FR_MBDSR)

This register defines the size of the message buffer data section for the two message buffer segments in a number of 2-byte entities.

The FlexRay module provides two independent segments for the individual message buffers. All individual message buffers within one segment have to have the same size for the message buffer data section. This size can be different for the two message buffer segments.

Base + 0x00C

Write: POC:config

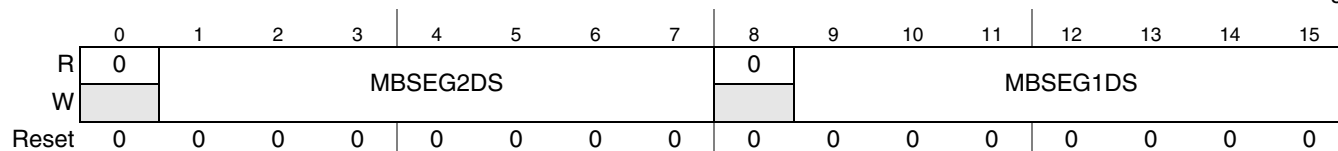


Figure 17-8. Message Buffer Data Size Register (FR_MBDSR)

Table 17-15. FR_MBDSR Field Descriptions

Field	Description
1–7 MBSEG2DS	Message Buffer Segment 2 Data Size — The field defines the size of the message buffer data section in 2-byte entities for message buffers within the <i>second</i> message buffer segment.
8–15 MBSEG1DS	Message Buffer Segment 1 Data Size — The field defines the size of the message buffer data section in 2-byte entities for message buffers within the <i>first</i> message buffer segment.

17.3.2.9 Message Buffer Segment Size and Utilization Register (FR_MBSSUTR)

This register defines the last individual message buffer that belongs to the first message buffer segment and the number of the last used individual message buffer.

Base + 0x00E

Write: *Protocol CONFIG State*

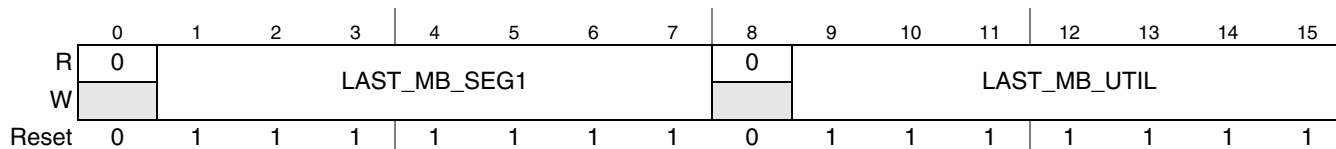


Figure 17-9. Message Buffer Segment Size and Utilization Register (FR_MBSSUTR)

Table 17-16. FR_MBSSUTR Field Descriptions

Field	Description
1-7 LAST_MB_SEG1	<p>Last Message Buffer In Segment 1 — This field defines the message buffer number of the last individual message buffer that is assigned to the <i>first</i> message buffer segment. The individual message buffers in the <i>first</i> segment correspond to the message buffer control registers FR_MBCCSRn, FR_MBCCFRn, FR_MBFIDRn, FR_MBIDXRn with n = [0 ... LAST_MB_SEG1]. The first message buffer segment contains LAST_MB_SEG1+1 individual message buffers.</p> <p>Note: The <i>first</i> message buffer segment contains at least one individual message buffer.</p> <p>The individual message buffers in the <i>second</i> message buffer segment correspond to the message buffer control registers FR_MBCCSRn, FR_MBCCFRn, FR_MBFIDRn, FR_MBIDXRn with n = [LAST_MB_SEG1+1 ... 127].</p> <p>Note: If LAST_MB_SEG1 = 127 all individual message buffers belong to the <i>first</i> message buffer segment and the <i>second</i> message buffer segment is empty.</p>
9-15 LAST_MB_UTIL	<p>Last Message Buffer Utilized — This field defines the message buffer number of last utilized individual message buffer. The message buffer search engine examines all individual message buffer with a message buffer number n <= LAST_MB_UTIL.</p> <p>Note: If LAST_MB_UTIL=LAST_MB_SEG1 all individual message buffers belong to the <i>first</i> message buffer segment and the <i>second</i> message buffer segment is empty.</p>

17.3.2.10 Protocol Operation Control Register (FR_POCR)

The software application uses this register to issue the following commands:

- Protocol control
- External clock correction

Protocol control commands are issued by writing to the POC_CMD field. For more information on protocol control commands, see [Section 17.5.4, “Protocol Control Command Execution.”](#) External clock correction commands are issued by writing to the EOC_AP and ERC_AP fields. For more on external clock correction, refer to [Section 17.4.11, “External Clock Synchronization.”](#)

Base + 0x014

Write: Normal Mode

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	BSY	0	0	0	POCCMD			
W	WME				EOC_AP	ERC_AP	WMC									
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-10. Protocol Operation Control Register (FR_POCR)

Table 17-17. FR_POCR Field Descriptions (Sheet 1 of 2)

Field	Description
0 WME	Write Mode External Correction — This bit controls the write mode of the EOC_AP and ERC_AP fields. 0 Write to EOC_AP and ERC_AP fields on register write. 1 No write to EOC_AP and ERC_AP fields on register write.
5–5 EOC_AP	External Offset Correction Application — This field is used to control the application of the external offset correction value defined in the Protocol Configuration Register 29 (FR_PCR29) . 00 do not apply external offset correction value 01 reserved 10 subtract external offset correction value 11 add external offset correction value
6–7 ERC_AP	External Rate Correction Application — This field is used to control application of the external rate correction value defined in the Protocol Configuration Register 21 (FR_PCR21) 00 do not apply external offset correction value 01 reserved 10 subtract external offset correction value 11 add external offset correction value
8 BSY	Protocol Command Write Busy — This status bit indicates the status of the protocol control command execution. The FlexRay module sets this status bit when the software application has issued a protocol control command through the POCCMD field. The FlexRay module clears this status bit when the PE has accepted the command. When the software application issues a protocol control command while the BSY status bit is asserted, the FlexRay module ignores the command and will not change the value of the POCCMD field. Additionally the FlexRay module sets the protocol command ignored error flag PCMI_EF in the CHI Error Flag Register (FR_CHIERFR) . 0 Command write idle, ready to receive new protocol command. 1 Command write busy, not ready to receive new protocol command.

Table 17-17. FR_POCR Field Descriptions (Sheet 2 of 2)

Field	Description
8 WMC	Write Mode Command — This bit controls the write mode of the POCCMD field. 0 Write to POCCMD field on register write. 1 Do not write to POCCMD field on register write.
12–15 POCCMD	Protocol Command — The software application writes to this field to issue a protocol control command. The FlexRay module sends the protocol command to the protocol engine immediately. While the transfer is running, the BSY status bit is asserted. If the current protocol state does not enable the execution of this protocol command (see POC state changes in <i>FlexRay Communications System Protocol Specification, Version 2.1</i>) the FlexRay module asserts the illegal protocol command interrupt flag IPC_IF in the Protocol Interrupt Flag Register 1 (FR_PIFR1) . The protocol command is not executed in this case. 0000 ALLOW_COLDSTART — Immediately activate capability of node to cold start cluster. 0001 ALL_SLOTS — Delayed ¹ transition to the all slots transmission mode. 0010 CONFIG — Immediately transition to the <i>POC:config</i> state. 0011 FREEZE — Immediately transition to the <i>POC:halt</i> state. 0100 READY, CONFIG_COMPLETE — Immediately transition to the <i>POC:ready</i> state. 0101 RUN — Immediately transition to the <i>POC:startup start</i> state. 0110 DEFAULT_CONFIG — Immediately transition to the <i>POC:default config</i> state. 0111 HALT — Delayed transition to the <i>POC:halt</i> state 1000 WAKEUP — Immediately initiate the wakeup procedure. 1001 reserved 1010 reserved 1011 reserved 1100 RESET ² — Immediately reset the Protocol Engine. 1101 reserved 1110 reserved 1111 reserved

¹ Delayed means on completion of current communication cycle.

² Additional to *FlexRay Communications System Protocol Specification, Version 2.1*

NOTE

After sending the RESET command, you must send DEFAULT_CONFIG as the next command before sending any other commands. For details, see [Section 17.5.5, “Protocol Reset Command.”](#)

17.3.2.11 Global Interrupt Flag and Enable Register (FR_GIFER)

This register controls some of the interrupt request lines and provides the corresponding interrupt flags. The interrupt flags MIF, PRIF, CHIF, RBIF, and TBIF are the outcome of a binary OR of the related individual interrupt flags and interrupt enables. The generation scheme for these flags is depicted in [Figure 17-143](#). For more details on interrupt generation, see [Section 17.4.19, “Interrupt Support.”](#) These flags are cleared automatically when all of the corresponding interrupt flags or interrupt enables in the related interrupt flag and enable registers are cleared by the software application. In this register, the application can only clear the interrupt flags WUPIF, FNEBIF, and FNEAIF by writing 1 to each. Writing 0 will not change the flag state. If the application clears a flag and the FlexRay module sets the flag on the same cycle, then that flag remains set.

Base + 0x016

Write: Normal Mode

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	MIF	PRIF	CHIF	WUP	FNEB	FNEA	RBIF	TBIF	MIE	PRIE	CHIE	WUP	FNEB	FNEA	RBIE	TBIE
W			IF		IF	IF						IE	IE	IE		
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-11. Global Interrupt Flag and Enable Register (FR_GIFER)

Table 17-18. FR_GIFER Field Descriptions (Sheet 1 of 2)

Field	Description
0 MIF	Module Interrupt Flag — This flag is set if at least one of the other interrupt flags in this register is asserted and the related interrupt enable is asserted, too. The FlexRay module generates the module interrupt request if MIE is asserted. 0 No interrupt flag is asserted or no interrupt enable is set 1 At least one of the other interrupt flags in this register is asserted and the related interrupt bit is asserted, too
1 PRIF	Protocol Interrupt Flag — This flag is set if at least one of the individual protocol interrupt flags in the Protocol Interrupt Flag Register 0 (FR_PIFR0) and Protocol Interrupt Flag Register 1 (FR_PIFR1) is asserted and the related interrupt enable flag is asserted, too. The FlexRay module generates the combined protocol interrupt request if the PRIE flag is asserted. 0 All individual protocol interrupt flags are equal to 0 or no interrupt enable bit is set. 1 At least one of the individual protocol interrupt flags and the related interrupt enable is equal to 1.
2 CHIF	CHI Interrupt Flag — This flag is set if at least one of the individual CHI error flags in the CHI Error Flag Register (FR_CHIERFR) is asserted and the chi error interrupt enable FR_GIFER[CHIE] is asserted. The FlexRay module generates the combined CHI error interrupt if the CHIE flag is asserted, too. 0 All CHI error flags are equal to 0 or the chi error interrupt is disabled 1 At least one CHI error flag is asserted and chi error interrupt is enabled
3 WUPIF	Wakeup Interrupt Flag — This flag is set when the FlexRay module has received a wakeup symbol on the FlexRay bus. The software application can determine on which channel the wakeup symbol was received by reading the related wakeup flags WUB and WUA in the Protocol Status Register 3 (FR_PSR3) . The FlexRay module generates the wakeup interrupt request if the WUPIE flag is asserted. 0 No wakeup condition or interrupt disabled 1 Wakeup symbol received on FlexRay bus and interrupt enabled
4 FNEBIF	Receive FIFO channel B Not Empty Interrupt Flag — This flag is set when the receive FIFO for channel B is not empty. If the software application writes 1 to this bit, the FlexRay module updates the FIFO status, increments or wraps the FIFO read index in the Receive FIFO B Read Index Register (FR_RFBRIIR) and clears the interrupt flag if the FIFO B is now empty. If the FIFO is still not empty, the FlexRay module sets this flag again. The FlexRay module generates the Receive FIFO B Not empty interrupt if the FNEBIE flag is asserted. 0 Receive FIFO B is empty or interrupt is disabled 1 Receive FIFO B is not empty and interrupt enabled
5 FNEAIF	Receive FIFO channel A Not Empty Interrupt Flag — This flag is set when the receive FIFO for channel A is not empty. If the software application writes 1 to this bit, the FlexRay module updates the FIFO status, increments or wraps the FIFO read index in the Receive FIFO A Read Index Register (FR_RFARIIR) and clears the interrupt flag if the FIFO A is now empty. If the FIFO is still not empty, the FlexRay module sets this flag again. The FlexRay module generates the Receive FIFO A Not empty interrupt if the FNEAIE flag is asserted. 0 Receive FIFO A is empty or interrupt is disabled 1 Receive FIFO A is not empty and interrupt enabled

Table 17-18. FR_GIFER Field Descriptions (Sheet 2 of 2)

Field	Description
6 RBIF	<p>Receive Message Buffer Interrupt Flag — This flag is set if for at least one of the individual receive message buffers (FR_MBCCSn[MTD] = 0) both the interrupt flag MBIF and the interrupt enable bit MBIE in the corresponding Message Buffer Configuration, Control, Status Registers (FR_MBCCSRn) are asserted. The software application can not clear this RBIF flag directly. This flag is cleared by the FlexRay module when all of the interrupt flags MBIF of the individual receive message buffers are cleared by software or if the software application has cleared the interrupt enables bit MBIE.</p> <p>0 None of the individual receive message buffers has the MBIF and MBIE flag asserted. 1 At least one individual receive message buffer has the MBIF and MBIE flag asserted.</p>
7 TBIF	<p>Transmit Buffer Interrupt Flag — This flag is set if for at least one of the individual single or double transmit message buffers (FR_MBCCSn[MTD] = 0) both the interrupt flag MBIF and the interrupt enable bit MBIE in the corresponding Message Buffer Configuration, Control, Status Registers (FR_MBCCSRn) are equal to 1. The software application can not clear this TBIF flag directly. This flag is cleared by the FlexRay module when either all of the individual interrupt flags MBIF of the individual transmit message buffers are cleared by the application or the host has cleared the interrupt enables bit MBIE.</p> <p>0 None of the individual transmit message buffers has the MBIF and MBIE flag asserted. 1 At least one individual transmit message buffer has the MBIF and MBIE flag asserted.</p>
8 MIE	<p>Module Interrupt Enable — This flag controls if the module interrupt line is asserted when the MIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
9 PRIE	<p>Protocol Interrupt Enable — This flag controls if the protocol interrupt line is asserted when the PRIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
10 CHIE	<p>CHI Interrupt Enable — This flag controls if the CHI interrupt line is asserted when the CHIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
11 WUPIE	<p>Wakeup Interrupt Enable — This flag controls if the wakeup interrupt line is asserted when the WUPIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
12 FNEBIE	<p>Receive FIFO channel B Not Empty Interrupt Enable — This flag controls if the receive FIFO B interrupt line is asserted when the FNEBIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
13 FNEAIE	<p>Receive FIFO channel A Not Empty Interrupt Enable — This flag controls if the receive FIFO A interrupt line is asserted when the FNEAIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
14 RBIE	<p>Receive Buffer Interrupt Enable — This flag controls if the receive buffer interrupt line is asserted when the RBIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>
15 TBIE	<p>Transmit Interrupt Enable — This flag controls if the transmit buffer interrupt line is asserted when the TBIF flag is set.</p> <p>0 Disable interrupt line 1 Enable interrupt line</p>

17.3.2.12 Protocol Interrupt Flag Register 0 (FR_PIFR0)

The register holds one set of the protocol-related individual interrupt flags. The software application clears an interrupt flag by writing a 1 to it. Writing a 0 will not change the state of the flag. If the application tries to clear a flag and the FlexRay module sets this flag at the same cycle, then that flag remains set.

Base + 0x018

Write: Normal Mode

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	FATL	INTL	ILCF	CSA	MRC	MOC	CCL	MXS	MTX	LTXB	LTXA	TBVB	TBVA	TI2	TI1	CYS
W	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF	_IF
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-12. Protocol Interrupt Flag Register 0 (FR_PIFR0)

Table 17-19. FR_PIFR0 Field Descriptions (Sheet 1 of 2)

Field	Description
0 FATL_IF	Fatal Protocol Error Interrupt Flag — This flag is set when the protocol engine has detected a fatal protocol error. In this case, the protocol engine goes into the POC:halt state immediately. The fatal protocol errors are: <ul style="list-style-type: none"> • <i>pLatestTx</i> violation, as described in the MAC process of the FlexRay protocol • transmission across slot boundary violation, as described in the FSP process of the FlexRay protocol 0 No such event. 1 Fatal protocol error detected.
1 INTL_IF	Internal Protocol Error Interrupt Flag — This flag is set when the protocol engine has detected an internal protocol error. In this case, the protocol engine goes into the POC:halt state immediately. An internal protocol error occurs when the protocol engine has not finished a calculation and a new calculation is requested. This can be caused by a hardware error. 0 No such event. 1 Internal protocol error detected.
2 ILCF_IF	Illegal Protocol Configuration Interrupt Flag — This flag is set when the protocol engine has detected an illegal protocol configuration parameter setting. In this case, the protocol engine goes into the POC:halt state immediately. The protocol engine checks the <i>listen_timeout</i> value programmed into the Protocol Configuration Register 14 (FR_PCR14) and Protocol Configuration Register 15 (FR_PCR15) when the CONFIG_COMPLETE command was sent by the software application via the Protocol Operation Control Register (FR_POCR) . If the value of <i>listen_timeout</i> is equal to zero, the protocol configuration setting is considered as illegal. 0 No such event. 1 Illegal protocol configuration detected.
3 CSA_IF	Cold Start Abort Interrupt Flag — This flag is set when the configured number of allowed cold start attempts is reached and none of these attempts was successful. The number of allowed cold start attempts is configured by the <i>coldstart_attempts</i> field in the Protocol Configuration Register 0 (FR_PCR0) . 0 No such event. 1 Cold start aborted and no more coldstart attempts allowed.
4 MRC_IF	Missing Rate Correction Interrupt Flag — This flag is set when an insufficient number of measurements is available for rate correction at the end of the communication cycle. 0 No such event 1 Insufficient number of measurements for rate correction detected
5 MOC_IF	Missing Offset Correction Interrupt Flag — This flag is set when an insufficient number of measurements is available for offset correction. This is related to the MISSING_TERM event in the CSP process for offset correction in the FlexRay protocol. 0 No such event. 1 Insufficient number of measurements for offset correction detected.

Table 17-19. FR_PIFR0 Field Descriptions (Sheet 2 of 2)

Field	Description
6 CCL_IF	Clock Correction Limit Reached Interrupt Flag — This flag is set when the internal calculated offset or rate calculation values have reached or exceeded its configured thresholds as given by the <i>offset_coorection_out</i> field in the Protocol Configuration Register 9 (FR_PCR9) and the <i>rate_correction_out</i> field in the Protocol Configuration Register 14 (FR_PCR14) . 0 No such event. 1 Offset or rate correction limit reached.
7 MXS_IF	Max Sync Frames Detected Interrupt Flag — This flag is set when the number of synchronization frames detected in the current communication cycle exceeds the value of the <i>node_sync_max</i> field in the Protocol Configuration Register 30 (FR_PCR30) . 0 No such event. 1 More than <i>node_sync_max</i> sync frames detected. Note: Only synchronization frames that have passed the synchronization frame acceptance and rejection filters are taken into account.
8 MTX_IF	Media Access Test Symbol Received Interrupt Flag — This flag is set when the MTS symbol was received on channel A or channel B. 0 No such event. 1 MTS symbol received.
9 LTXB_IF	pLatestTx Violation on Channel B Interrupt Flag — This flag is set when the frame transmission on channel B in the dynamic segment exceeds the dynamic segment boundary. This is related to the pLatestTx violation, as described in the MAC process of the FlexRay protocol. 0 No such event. 1 pLatestTx violation occurred on channel B.
10 LTXA_IF	pLatestTx Violation on Channel A Interrupt Flag — This flag is set when the frame transmission on channel A in the dynamic segment exceeds the dynamic segment boundary. This is related to the pLatestTx violation as described in the MAC process of the FlexRay protocol. 0 No such event. 1 pLatestTx violation occurred on channel A.
11 TBVB_IF	Transmission across boundary on channel B Interrupt Flag — This flag is set when the frame transmission on channel B crosses the slot boundary. This is related to the transmission across slot boundary violation as described in the FSP process of the FlexRay protocol. 0 No such event. 1 Transmission across boundary violation occurred on channel B.
12 TBVA_IF	Transmission across boundary on channel A Interrupt Flag — This flag is set when the frame transmission on channel A crosses the slot boundary. This is related to the transmission across slot boundary violation as described in the FSP process of the FlexRay protocol. 0 No such event. 1 Transmission across boundary violation occurred on channel A.
13 TI2_IF	Timer 2 Expired Interrupt Flag — This flag is set whenever timer 2 expires. 0 No such event. 1 Timer 2 has reached its time limit.
14 TI1_IF	Timer 1 Expired Interrupt Flag — This flag is set whenever timer 1 expires. 0 No such event 1 Timer 1 has reached its time limit
15 CYS_IF	Cycle Start Interrupt Flag — This flag is set when a communication cycle starts. 0 No such event 1 Communication cycle started.

17.3.2.13 Protocol Interrupt Flag Register 1 (FR_PIFR1)

The register holds one set of the protocol-related individual interrupt flags. The software application clears an interrupt flag by writing a 1 to it. Writing 0 will not change the state of the flag. If the application clears a flag while the FlexRay module sets this flag at the same time, then that flag remains set.

Base + 0x01A

Write: Normal Mode

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	EMC_	IPC_	PECF	PSC	SSI3_	SSI2_	SSI1_	SSI0_	0	0	EVT	ODT	0	0	0	0
W	IF	IF	_IF	_IF	IF	IF	IF	IF			_IF	_IF				
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-13. Protocol Interrupt Flag Register 1 (FR_PIFR1)

Table 17-20. FR_PIFR1 Field Descriptions

Field	Description
0 EMC_IF	Error Mode Changed Interrupt Flag — This flag is set when the value of the ERRMODE bit field in the Protocol Status Register 0 (FR_PSR0) is changed by the FlexRay module. 0 No such event. 1 ERRMODE field changed.
1 IPC_IF	Illegal Protocol Command Interrupt Flag — This flag is set when the software application has issued a protocol state change command via the POC CMD field of the Protocol Operation Control Register (FR_POCCR) that is not allowed in the current protocol state. 0 No such event. 1 Illegal protocol state change command detected.
2 PECF_IF	Protocol Engine Communication Failure Interrupt Flag — This flag is set if the FlexRay module has detected a communication failure between the protocol engine and the controller host interface 0 No such event. 1 Protocol Engine Communication Failure detected.
3 PSC_IF	Protocol State Changed Interrupt Flag — This flag is set when the protocol state in the PROTSTATE field in the Protocol Status Register 0 (FR_PSR0) has changed. 0 No such event. 1 Protocol state changed.
4–7 SSI[3:0]_IF	Slot Status Counter Incremented Interrupt Flag — Each of these flags is set when the SLOTSTATUSCNT field in the corresponding Slot Status Counter Registers (FR_SSCR0–FR_SSCR3) is incremented. 0 No such event. 1 The corresponding slot status counter has incremented.
10 EVT_IF	Even Cycle Table Written Interrupt Flag — This flag is set if the FlexRay module has written the sync frame measurement / ID tables into the FlexRay memory for the even cycle. 0 No such event. 1 Sync frame measurement table written
11 ODT_IF	Odd Cycle Table Written Interrupt Flag — This flag is set if the FlexRay module has written the sync frame measurement / ID tables into the FlexRay memory for the odd cycle. 0 No such event. 1 Sync frame measurement table written

17.3.2.14 Protocol Interrupt Enable Register 0 (FR_PIER0)

This register defines whether or not the individual interrupt flags defined in the [Protocol Interrupt Flag Register 0 \(FR_PIFR0\)](#) can generate a protocol interrupt request.

Base + 0x01C Write: Anytime

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	FATL	INTL	ILCF	CSA	MRC	MOC	CCL	MXS	MTX	LTXB	LTXA	TBVB	TBVA	TI2	TI1	CYS
W	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-14. Protocol Interrupt Enable Register 0 (FR_PIER0)
Table 17-21. FR_PIER0 Field Descriptions

Field	Description
0-15 XXX_IE	XXX Interrupt Enable — Each of the bits denoted with 'XXX' controls whether the corresponding individual interrupt flag can generate an interrupt request. 0 FlexRay module will not generate interrupt requests belonging to the 'XXX' interrupt source. 1 FlexRay module generates interrupt requests of type 'XXX' if the interrupt flag is asserted

17.3.2.15 Protocol Interrupt Enable Register 1 (FR_PIER1)

This register defines whether or not the individual interrupt flags defined in [Protocol Interrupt Flag Register 1 \(FR_PIFR1\)](#) can generate a protocol interrupt request.

Base + 0x01E Write: Anytime

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	EMC	IPC	PECF	PSC	SSI3	SSI2	SSI1	SSI0	0	0	EVT	ODT	0	0	0	0
W	_IE	_IE	_IE	_IE	_IE	_IE	_IE	_IE			_IE	_IE				
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-15. Protocol Interrupt Enable Register 1 (FR_PIER1)
Table 17-22. FR_PIER1 Field Descriptions

Field	Description
0-15 XXX_IE	XXX Interrupt Enable — Each of the bits denoted with 'XXX' controls whether the corresponding individual interrupt flag can generate an interrupt request. 0 FlexRay module will not generate interrupt requests belonging to the 'XXX' interrupt source. 1 FlexRay module generates interrupt requests of type 'XXX' if the interrupt flag is asserted

17.3.2.16 CHI Error Flag Register (FR_CHIERFR)

This register holds the CHI related error flags. The software application can clear any error flag by writing a 1 to it. Writing a 0 will not change the state of the flag. If the application clears a flag while the FlexRay module sets the flag at the same time, then that flag remains set. The interrupt generation for each of these error flags is controlled by the CHI interrupt enable bit CHIE in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#).

Base + 0x020

Write: Normal Mode

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	FRLB	FRLA	PCMI	FOVB	FOVA	MBS	MBU	LCK	DBL	SBCF	FID	DPL	SPL	NML	NMF	ILSA
W	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF	_EF
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-16. CHI Error Flag Register (FR_CHIERFR)

Table 17-23. FR_CHIERFR Field Descriptions (Sheet 1 of 2)

Field	Description
0 FRLB_EF	Frame Lost Channel B Error Flag — This flag is set if a complete frame was received on channel B but could not be stored in the selected individual message buffer because this message buffer is currently locked by the software application. In this case, the frame and the related slot status information are lost. 0 No such event 1 Frame lost on channel B detected
1 FRLA_EF	Frame Lost Channel A Error Flag — This flag is set if a complete frame was received on channel A but could not be stored in the selected individual message buffer because this message buffer is currently locked by the software application. In this case, the frame and the related slot status information are lost. 0 No such error 1 Frame lost on channel A detected
2 PCMI_EF	Protocol Command Ignored Error Flag — This flag is set if the software application has issued a POC command by writing to the POCMD field in the Protocol Operation Control Register (FR_POCCR) while the BSY flag is equal to 1. In this case the command is ignored by the FlexRay module and is lost. 0 No such error 1 POC command ignored
3 FOVB_EF	Receive FIFO Overrun Channel B Error Flag — This flag is set when an overrun of the Receive FIFO for channel B occurred. This error occurs if a semantically valid frame was received on channel B and matches the all criteria to be appended to the FIFO for channel B but the FIFO is full. In this case, the received frame and its related slot status information is lost. 0 No such error 1 Receive FIFO overrun on channel B has been detected
4 FOVA_EF	Receive FIFO Overrun Channel A Error Flag — This flag is set when an overrun of the Receive FIFO for channel A occurred. This error occurs if a semantically valid frame was received on channel A and matches the all criteria to be appended to the FIFO for channel A but the FIFO is full. In this case, the received frame and its related slot status information is lost. 0 No such error 1 Receive FIFO overrun on channel B has been detected
5 MSB_EF	Message Buffer Search Error Flag — This flag is set if the message buffer search engine is still running while the next search cycle must be started due to the FlexRay protocol timing. In this case, not all message buffers are considered while searching. 0 No such event 1 Search engine active while search start appears
6 MBU_EF	Message Buffer Utilization Error Flag — This flag is asserted if the software application writes to a message buffer control field that is beyond the number of utilized message buffers programmed in the Message Buffer Segment Size and Utilization Register (FR_MBSSUTR) . If the application writes to a FR_MBCCSRn register with n > LAST_MB_UTIL, the FlexRay module ignores the write attempt and asserts the message buffer utilization error flag MBU_EF in the CHI Error Flag Register (FR_CHIERFR) . 0 No such event 1 Non-utilized message buffer enabled

Table 17-23. FR_CHIERFR Field Descriptions (Sheet 2 of 2)

Field	Description
7 LCK_EF	Lock Error Flag — This flag is set if the software application tries to lock a message buffer that is already locked by the FlexRay module due to internal operations. In that case, the FlexRay module does not grant the lock to the application. The software must issue the lock request again. 0 No such error 1 Lock error detected
8 DBL_EF	Double Transmit Message Buffer Lock Error Flag — This flag is set if the software application tries to lock the transmit side of a double transmit message buffer. In this case, the FlexRay module does not grant the lock to the transmit side of a double transmit message buffer. 0 No such event 1 Double transmit buffer lock error occurred
9 SBCF_EF	System Bus Communication Failure Error Flag — This flag is set if the FlexRay module was not able to transmit or receive data via the system bus in time. In the case of writing, data is lost; in the case of reading, the transmission onto the FlexRay bus is stopped for the current slot and resumed in the next slot. 0 No such event 1 System bus communication failure occurred
10 FID_EF	Frame ID Error Flag — This flag is set if the frame ID stored in the message buffer header area differs from the frame ID stored in the message buffer control register. 0 No such error occurred 1 Frame ID error occurred
11 DPL_EF	Dynamic Payload Length Error Flag — This flag is set if the payload length written into the message buffer header field of a single or double transmit message buffer assigned to the dynamic segment is greater than the maximum payload length for the dynamic segment as it is configured in the corresponding protocol configuration register field <code>max_payload_length_dynamic</code> in the Protocol Configuration Register 24 (FR_PCR24) . 0 No such error occurred 1 Dynamic payload length error occurred
12 SPL_EF	Static Payload Length Error Flag — This flag is set if the payload length written into the message buffer header field of a single or double transmit message buffer assigned to the static segment is different from the payload length for the static segment as it is configured in the corresponding protocol configuration register field <code>payload_length_static</code> in the Protocol Configuration Register 19 (FR_PCR19) . 0 No such error occurred 1 Static payload length error occurred
13 NML_EF	Network Management Length Error Flag — This flag is set if the payload length written into the header structure of a receive message buffer assigned to the static segment is less than the configured length of the Network Management Vector as configured in the Network Management Vector Length Register (FR_NMVLRL) . In this case the received part of the Network Management Vector will be used to update the Network Management Vector. 0 No such error occurred 1 Network management length error occurred
14 NMF_EF	Network Management Frame Error Flag — This flag is set if a received message in the static segment with a Preamble Indicator flag PP asserted has its null frame indicator flag NF asserted as well. In this case, the Global Network Management Registers (see Network Management Vector Registers (FR_NMVR0–FR_NMVR5)) are not updated. 0 No such error occurred 1 Network management frame error occurred
15 ILSA_EF	Illegal System Memory Access Error Flag — This flag is set if the external system memory subsystem has detected and indicated an illegal system memory access from the FlexRay module. The exact meaning of an illegal system memory access is defined by the current implementation of the memory subsystem. 0 No such event. 1 Illegal system memory access occurred.

17.3.2.17 Message Buffer Interrupt Vector Register (FR_MBIVEC)

This register indicates the lowest numbered receive message buffer and the lowest numbered transmit message buffer that have their interrupt status flag MBIF and interrupt enable MBIE bits asserted. This means that message buffers with lower message buffer numbers have higher priority.

Base + 0x022

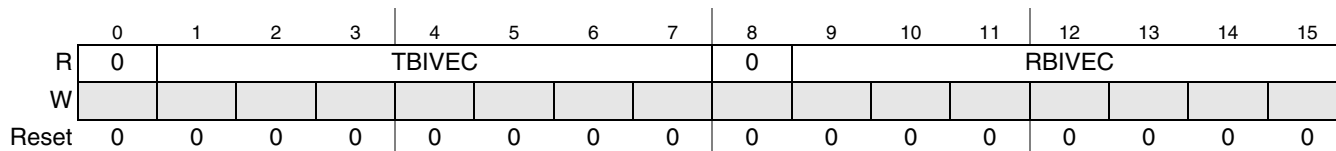


Figure 17-17. Message Buffer Interrupt Vector Register (FR_MBIVEC)

Table 17-24. FR_MBIVEC Field Descriptions

Field	Description
1-7 TBIVEC	Transmit Buffer Interrupt Vector — This field provides the number of the lowest numbered enabled transmit message buffer that has its interrupt status flag MBIF and its interrupt enable bit MBIE set. If there is no transmit message buffer with the interrupt status flag MBIF and the interrupt enable MBIE bits asserted, the value in this field is set to 0.
9-15 RBIVEC	Receive Buffer Interrupt Vector — This field provides the message buffer number of the lowest numbered receive message buffer which has its interrupt flag MBIF and its interrupt enable bit MBIE asserted. If there is no receive message buffer with the interrupt status flag MBIF and the interrupt enable MBIE bits asserted, the value in this field is set to 0.

17.3.2.18 Channel A Status Error Counter Register (FR_CASERCR)

This register provides the channel status error counter for channel A. The protocol engine generates a status vector for each static slot, each dynamic slot, the symbol window, and the NIT. The status vector contains the four protocol-related error indicator bits [vSS!SyntaxError](#), [vSS!ContentError](#), [vSS!BViolation](#), and [vSS!TxConflict](#). The FlexRay module increments the error status counter by 1 if at least one error bit is set to 1 for a slot or segment. The counter wraps around after it has reached the maximum value. For more information on status monitoring, see [Section 17.4.18, “Slot Status Monitoring.”](#)

Base + 0x024

Additional Reset: RUN Command

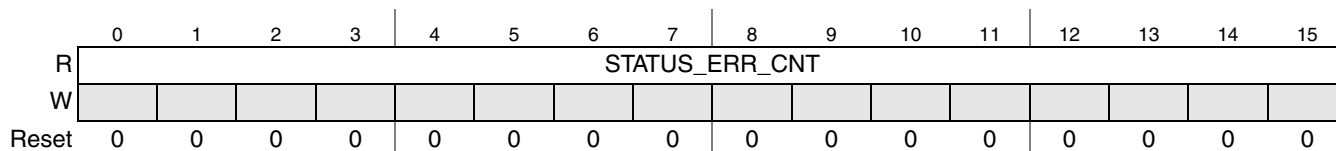


Figure 17-18. Channel A Status Error Counter Register (FR_CASERCR)

Table 17-25. FR_CASERCR Field Descriptions

Field	Description
0–15 STATUS_ERR_CNT	Channel Status Error Counter — This field provides the current value channel status error counter. The counter value is updated when the protocol engine has evaluated the status information.

17.3.2.19 Channel B Status Error Counter Register (FR_CBSECR)

This register provides the channel status error counter for channel B. The protocol engine generates a status vector for each static slot, each dynamic slot, the symbol window, and the NIT. The status vector contains the four protocol related error indicator bits `vSS!SyntaxError`, `vSS!ContentError`, `vSS!BViolation`, and `vSS!TxConflict`. The FlexRay module increments the error status counter by 1 if, for a slot or segment, at least one error bit is set to 1. The counter wraps around after it has reached the maximum value. For more information on status monitoring see [Section 17.4.18, “Slot Status Monitoring.”](#)

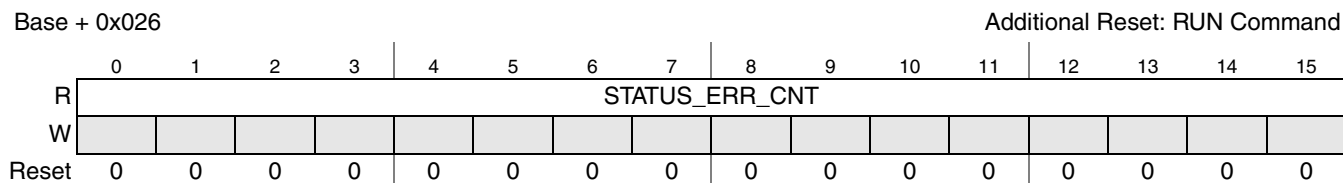


Figure 17-19. Channel B Status Error Counter Register (FR_CBSECR)

Table 17-26. FR_CBSECR Field Descriptions

Field	Description
0–15 STATUS_ERR_CNT	Channel Status Error Counter — This field provides the current channel status error count. The counter value is updated when the protocol engine has evaluated the status information.

17.3.2.20 Protocol Status Register 0 (FR_PSR0)

This register provides information about the current protocol status.

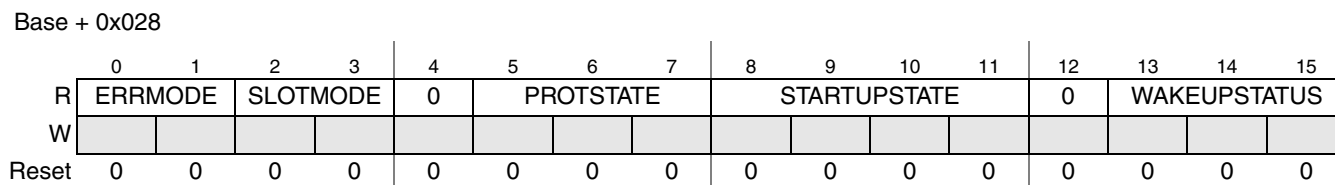


Figure 17-20. Protocol Status Register 0 (FR_PSR0)

Table 17-27. FR_PSR0 Field Descriptions (Sheet 1 of 2)

Field	Description
0–1 ERRMODE	Error Mode — protocol related variable: <code>vPOC!ErrorMode</code> . This field indicates the error mode of the protocol. 00 ACTIVE 01 PASSIVE 10 COMM_HALT 11 reserved
2–3 SLOTMODE	Slot Mode — protocol related variable: <code>vPOC!SlotMode</code> . This field indicates the slot mode of the protocol. 00 SINGLE 01 ALL_PENDING 10 ALL 11 reserved

Table 17-27. FR_PSR0 Field Descriptions (Sheet 2 of 2)

Field	Description
5–7 PROTSTATE	<p>Protocol State — protocol related variable: <i>vPOC!State</i>. This field indicates the state of the protocol.</p> <p>000 <i>POC:default config</i> 001 <i>POC:config</i> 010 <i>POC:wakeup</i> 011 <i>POC:ready</i> 100 <i>POC:normal passive</i> 101 <i>POC:normal active</i> 110 <i>POC:halt</i> 111 <i>POC:startup</i></p>
8–11 STARTUP STATE	<p>Startup State — protocol related variable: <i>vPOC!StartupState</i>. This field indicates the current sub-state of the startup procedure.</p> <p>0000 reserved 0001 reserved 0010 <i>POC:coldstart collision resolution</i> 0011 <i>POC:coldstart listen</i> 0100 <i>POC:integration consistency check</i> 0101 <i>POC:integrationi listen</i> 0110 reserved 0111 <i>POC:initialize schedule</i> 1000 reserved 1001 reserved 1010 <i>POC:coldstart consistency check</i> 1011 reserved 1100 reserved 1101 <i>POC:integration coldstart check</i> 1110 <i>POC:coldstart gap</i> 1111 <i>POC:coldstart join</i></p>
13–15 WAKEUP STATUS	<p>Wakeup Status — protocol related variable: <i>vPOC!WakeupStatus</i>. This field provides the outcome of the execution of the wakeup mechanism.</p> <p>000 reserved 001 RECEIVED_HEADER 010 RECEIVED_WUP 011 COLLISION_HEADER 100 COLLISION_WUP 101 COLLISION_UNKNOWN 110 TRANSMITTED 111 reserved</p>

17.3.2.21 Protocol Status Register 1 (FR_PSR1)

Base + 0x02A

Write: Normal Mode
 Additional Reset: CSAA, CSP, CPN: Run Command

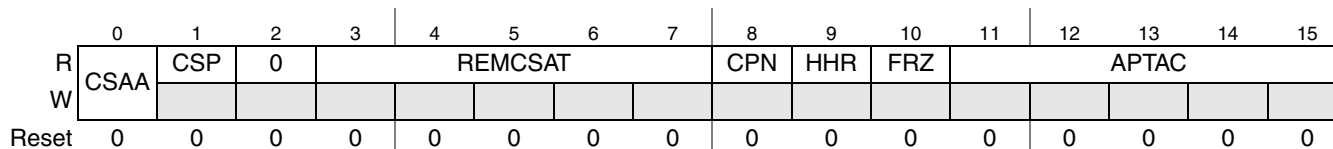


Figure 17-21. Protocol Status Register 1 (FR_PSR1)

Table 17-28. FR_PSR1 Field Descriptions

Field	Description
0 CSAA	Cold Start Attempt Aborted Flag — protocol related event: ‘set coldstart abort indicator in CHI’ This flag bit is set when the FlexRay module has aborted a cold start attempt. The software application clears this flag by writing 1 to it. Writing a 0 will not change the state of the flag. If the application clears the flag while the FlexRay module sets the flag at the same time, then the flag is not cleared. 0 No such event 1 Cold start attempt aborted
1 CSP	Leading Cold Start Path — This status bit is set when the FlexRay module has reached the <i>POC:normal active</i> state via the leading cold start path. This indicates that this node has started the network 0 No such event 1 <i>POC:normal active</i> reached from <i>POC:startup</i> state via leading cold start path
3–7 REMCSAT	Remaining Coldstart Attempts — protocol related variable: <i>vRemainingColdstartAttempts</i> This field provides the number of remaining cold start attempts that the FlexRay module will execute.
8 CPN	Leading Cold Start Path Noise — protocol related variable: <i>vPOC!ColdstartNoise</i> This status bit is set if the FlexRay module has reached the <i>POC:normal active</i> state via the leading cold start path under noise conditions. This indicates there was some activity on the FlexRay bus while the FlexRay module was starting up the cluster. 0 No such event 1 <i>POC:normal active</i> state was reached from <i>POC:startup</i> state via noisy leading cold start path
9 HHR	Host Halt Request Pending — protocol related variable: <i>vPOC!CHIHaltRequest</i> This status bit is set when FlexRay module receives the HALT command from the software application via the Protocol Operation Control Register (FR_POCR) . The FlexRay module clears this status bit after a hard reset condition or when the protocol is in the <i>POC:default config</i> state. 0 No such event 1 HALT command received
10 FRZ	Freeze Occurred — protocol related variable: <i>vPOC!Freeze</i> This status bit is set when the FlexRay module has reached the <i>POC:halt</i> state due to the host FREEZE command or due to an internal error condition requiring immediate halt. The FlexRay module clears this status bit after a hard reset condition or when the protocol is in the <i>POC:default config</i> state. 0 No such event 1 Immediate halt due to FREEZE or internal error condition
11–15 APTAC	Allow Passive to Active Counter — protocol related variable: <i>vPOC!AllowPassivetoActive</i> This field provides the number of consecutive even/odd communication cycle pairs that have passed with valid rate and offset correction terms, but the protocol is still in the <i>POC:normal passive</i> state due to an application configured delay to enter <i>POC:normal active</i> state. This delay is defined by the <code>allow_passive_to_active</code> field in the Protocol Configuration Register 12 (FR_PCR12) . If this APTAC counter has reached its maximum value, it is not incremented any more.

17.3.2.22 Protocol Status Register 2 (FR_PSR2)

This register provides a snapshot of status information about network idle time (NIT), the symbol window, and clock synchronization. The NIT-related status bits NBVB, NSEB, NBVA, and NSEA are updated by the FlexRay module after the end of the NIT and before the end of the first slot of the next communication cycle. The symbol window status bits STCB, SBVB, SSEB, MTB, STCA, SBVA, SSEB, and MTA are updated by the FlexRay module after the end of the symbol window and before the end of the current communication cycle. If no symbol window is configured, the symbol window related status bits remain in their reset state. The clock synchronization-related CLKCORRFAILCNT is updated by the FlexRay module after the end of the static segment and before the end of the current communication cycle.

Base + 0x02C

Additional Reset: RUN Command

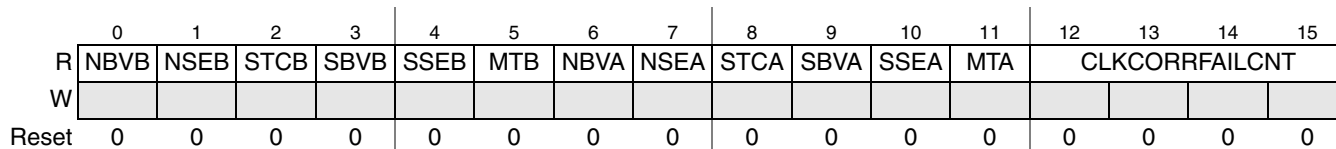


Figure 17-22. Protocol Status Register 2 (FR_PSR2)

Table 17-29. FR_PSR2 Field Descriptions (Sheet 1 of 2)

Field	Description
0 NBVB	NIT Boundary Violation on Channel B — protocol related variable: vSS!BViolation for NIT on channel B This status bit is set when there was some media activity on the FlexRay bus channel B at the end of the NIT. 0 No such event 1 Media activity at boundaries detected
1 NSEB	NIT Syntax Error on Channel B — protocol related variable: vSS!SyntaxError for NIT on channel B This status bit is set when a syntax error was detected during NIT on channel B. 0 No such event 1 Syntax error detected
2 STCB	Symbol Window Transmit Conflict on Channel B — protocol related variable: vSS!TxConflict for symbol window on channel B This status bit is set if there was a transmission conflict during the symbol window on channel B. 0 No such event 1 Transmission conflict detected
3 SBVB	Symbol Window Boundary Violation on Channel B — protocol related variable: vSS!BViolation for symbol window on channel B This status bit is set if there was some media activity on the FlexRay bus channel B at the start or at the end of the symbol window. 0 No such event 1 Media activity at boundaries detected
4 SSEB	Symbol Window Syntax Error on Channel B — protocol related variable: vSS!SyntaxError for symbol window on channel B This status bit is set when a syntax error was detected during the symbol window on channel B. 0 No such event 1 Syntax error detected
5 MTB	Media Access Test Symbol MTS Received on Channel B — protocol related variable: vSS!ValidMTS for Symbol Window on channel B This status bit is set if the Media Access Test Symbol MTS was received in the symbol window on channel B. 0 No such event 1 MTS symbol received
6 NBVA	NIT Boundary Violation on Channel A — protocol related variable: vSS!BViolation for NIT on channel A This status bit is set when there was some media activity on the FlexRay bus channel A at the end of the NIT. 0 No such event 1 Media activity at boundaries detected
7 NSEA	NIT Syntax Error on Channel A — protocol related variable: vSS!SyntaxError for NIT on channel A This status bit is set when a syntax error was detected during NIT on channel A. 0 No such event 1 Syntax error detected
8 STCA	Symbol Window Transmit Conflict on Channel A — protocol related variable: vSS!TxConflict for symbol window on channel A This status bit is set if there was a transmission conflicts during the symbol window on channel A. 0 No such event 1 Transmission conflict detected

Table 17-29. FR_PSR2 Field Descriptions (Sheet 2 of 2)

Field	Description
9 SBVA	Symbol Window Boundary Violation on Channel A — protocol related variable: <i>vSS!BViolation</i> for symbol window on channel A This status bit is set if there was some media activity on the FlexRay bus channel A at the start or at the end of the symbol window. 0 No such event 1 Media activity at boundaries detected
10 SSEA	Symbol Window Syntax Error on Channel A — protocol related variable: <i>vSS!SyntaxError</i> for symbol window on channel A This status bit is set when a syntax error was detected during the symbol window on channel A. 0 No such event 1 Syntax error detected
11 MTA	Media Access Test Symbol MTS Received on Channel A — protocol related variable: <i>vSS!ValidMTS</i> for symbol window on channel A This status bit is set if the Media Access Test Symbol MTS was received in the symbol window on channel A. 1 MTS symbol received 0 No such event
12–15 CLKCORR- FAILCNT	Clock Correction Failed Counter — protocol related variable: <i>vClockCorrectionFailed</i> This field provides the number of consecutive even/odd communication cycle pairs that have passed without clock synchronization having performed an offset or a rate correction due to lack of synchronization frames. It is not incremented when it has reached the configured value of either <i>max_without_clock_correction_fatal</i> or <i>max_without_clock_correction_passive</i> as defined in the Protocol Configuration Register 8 (FR_PCR8) . The FlexRay module resets this counter on a hard reset condition, when the protocol enters the POC:normal active state, or when both the rate and offset correction terms have been calculated successfully.

17.3.2.23 Protocol Status Register 3 (FR_PSR3)

This register provides aggregated channel status information as an accrued status of channel activity for all communication slots, regardless of whether they are assigned for transmission or subscribed for reception. It provides accrued information for the symbol window, the NIT, and the wakeup status. The software application can clear any flag at any time by writing a 1 to it. Writing a 0 will not change the flag state. If the application tries to clear a flag while the FlexRay module sets the flag at the same time, then that flag does not clear.

Base + 0x02E

 Write: Normal Mode
 Additional Reset: RUN Command

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	WUB	ABVB	AACB	ACEB	ASEB	AVFB	0	0	WUA	ABVA	AACA	ACEA	ASEA	AVFA
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-23. Protocol Status Register 3 (FR_PSR3)

Table 17-30. FR_PSR3 Field Descriptions

Field	Description
2 WUB	Wakeup Symbol Received on Channel B — This flag is set when a wakeup symbol was received on channel B. 0 No wakeup symbol received 1 Wakeup symbol received
3 ABVB	Aggregated Boundary Violation on Channel B — This flag is set when a boundary violation has been detected on channel B. Boundary violations are detected in the communication slots, the symbol window, and the NIT. 0 No boundary violation detected 1 Boundary violation detected
4 AACB	Aggregated Additional Communication on Channel B — This flag is set when at least one valid frame was received on channel B in a slot that also contained an additional communication with either syntax error, content error, or boundary violations. 0 No additional communication detected 1 Additional communication detected
5 ACEB	Aggregated Content Error on Channel B — This flag is set when a content error has been detected on channel B. Content errors are detected in the communication slots, the symbol window, and the NIT. 0 No content error detected 1 Content error detected
6 ASEB	Aggregated Syntax Error on Channel B — This flag is set when a syntax error has been detected on channel B. Syntax errors are detected in the communication slots, the symbol window and the NIT. 0 No syntax error detected 1 Syntax errors detected
7 AVFB	Aggregated Valid Frame on Channel B — This flag is set when a syntactically correct valid frame has been received in any static or dynamic slot through channel B. 1 At least one syntactically valid frame received 0 No syntactically valid frames received
10 WUA	Wakeup Symbol Received on Channel A — This flag is set when a wakeup symbol was received on channel A. 0 No wakeup symbol received 1 Wakeup symbol received
11 ABVA	Aggregated Boundary Violation on Channel A — This flag is set when a boundary violation has been detected on channel A. Boundary violations are detected in the communication slots, the symbol window, and the NIT. 0 No boundary violation detected 1 Boundary violation detected
12 AACA	Aggregated Additional Communication on Channel A — This flag is set when a valid frame was received in a slot on channel A that also contained an additional communication with either syntax error, content error, or boundary violations. 0 No additional communication detected 1 Additional communication detected
13 ACEA	Aggregated Content Error on Channel A — This flag is set when a content error has been detected on channel A. Content errors are detected in the communication slots, the symbol window, and the NIT. 0 No content error detected 1 Content error detected
14 ASEA	Aggregated Syntax Error on Channel A — This flag is set when a syntax error has been detected on channel A. Syntax errors are detected in the communication slots, the symbol window, and the NIT. 0 No syntax error detected 1 Syntax errors detected
15 AVFA	Aggregated Valid Frame on Channel A — This flag is set when a syntactically correct valid frame has been received in any static or dynamic slot through channel A. 0 No syntactically valid frames received 1 At least one syntactically valid frame received

17.3.2.24 Macrotick Counter Register (FR_MTCTR)

This register provides the macrotick count of the current communication cycle.

Base + 0x030

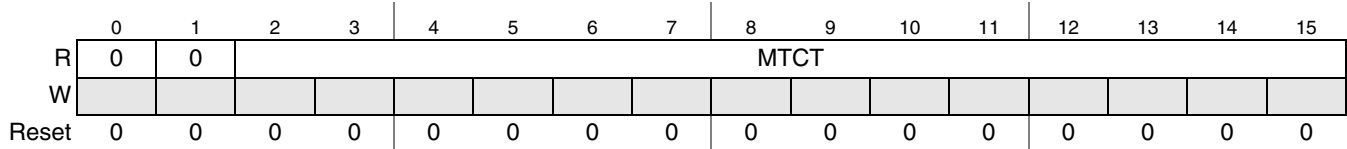


Figure 17-24. Macrotick Counter Register (FR_MTCTR)

Table 17-31. FR_MTCTR Field Descriptions

Field	Description
2–15 MTCT	Macrotick Counter — protocol related variable: <i>vMacrotick</i> This field provides the macrotick count of the current communication cycle.

17.3.2.25 Cycle Counter Register (FR_CYCTR)

This register provides the number of the current communication cycle.

Base + 0x032

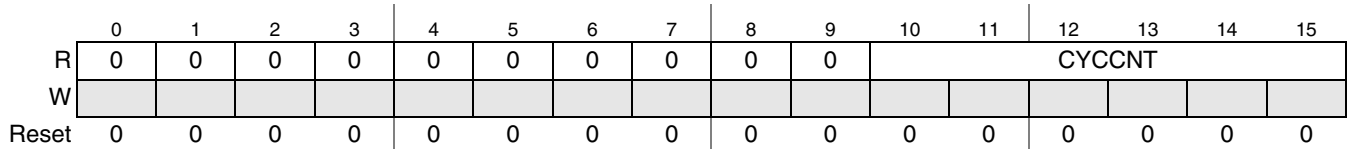


Figure 17-25. Cycle Counter Register (FR_CYCTR)

Table 17-32. FR_CYCTR Field Descriptions

Field	Description
10–15 CYCCNT	Cycle Counter — protocol related variable: <i>vCycleCounter</i> This field provides the number of the current communication cycle. If the counter reaches the maximum value of 63, the counter wraps and starts from zero again.

17.3.2.26 Slot Counter Channel A Register (FR_SLTCTAR)

This register provides the number of the current slot in the current communication cycle for channel A.

Base + 0x034

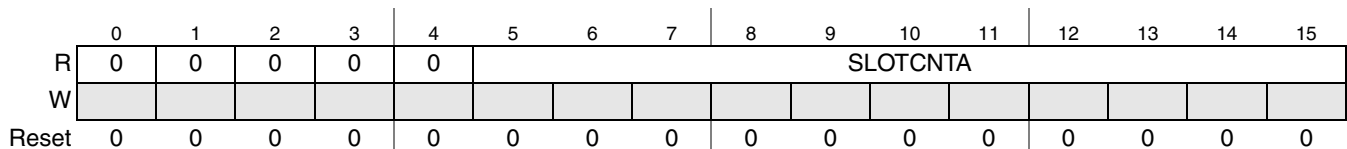


Figure 17-26. Slot Counter Channel A Register (FR_SLTCTAR)

Table 17-33. FR_SLTCTAR Field Descriptions

Field	Description
5–15 SLOTCNTA	Slot Counter Value for Channel A — protocol related variable: <i>vSlotCounter</i> for channel A This field provides the number of the current slot in the current communication cycle.

17.3.2.27 Slot Counter Channel B Register (FR_SLTCTBR)

This register provides the number of the current slot in the current communication cycle for channel B.

Base + 0x036

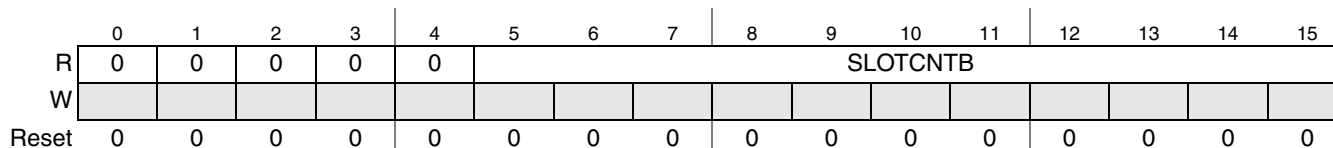


Figure 17-27. Slot Counter Channel B Register (FR_SLTCTBR)

Table 17-34. FR_SLTCTBR Field Descriptions

Field	Description
5–15 SLOTCNTB	Slot Counter Value for Channel B — protocol related variable: <i>vSlotCounter</i> for channel B This field provides the number of the current slot in the current communication cycle.

17.3.2.28 Rate Correction Value Register (FR_RTCORVR)

This register provides the sign extended rate correction value in microticks as it was calculated by the clock synchronization algorithm. The FlexRay module updates this register during the NIT of each odd numbered communication cycle.

Base + 0x038

Additional Reset: RUN Command

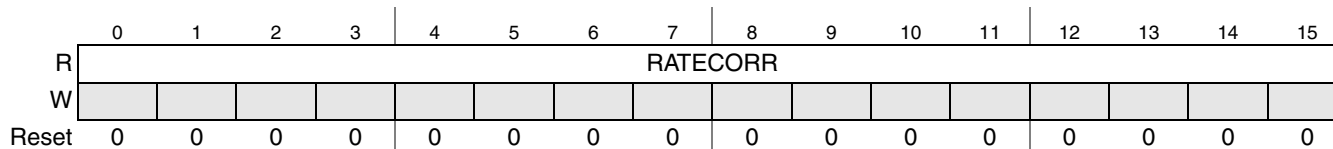


Figure 17-28. Rate Correction Value Register (FR_RTCORVR)

Table 17-35. FR_RTCORVR Field Descriptions

Field	Description
0–15 RATECORR	Rate Correction Value — protocol related variable: <i>vRateCorrection</i> (before value limitation and external rate correction) This field provides the sign extended rate correction value in microticks as it was calculated by the clock synchronization algorithm. The value is represented in 2's complement format. This value does not include the value limitation and the application of the external rate correction. If the magnitude of the internally calculated rate correction value exceeds the limit given by <code>rate_correction_out</code> in the Protocol Configuration Register 13 (FR_PCR13) , the clock correction reached limit interrupt flag <code>CCL_IF</code> is set in the Protocol Interrupt Flag Register 0 (FR_PIFR0) . Note: If the FlexRay module was not able to calculate a new rate correction term due to a lack of synchronization frames, the RATECORR value is not updated.

17.3.2.29 Offset Correction Value Register (FR_OFCORVR)

This register provides the sign extended offset correction value in microticks as it was calculated by the clock synchronization algorithm. The FlexRay module updates this register during the NIT.

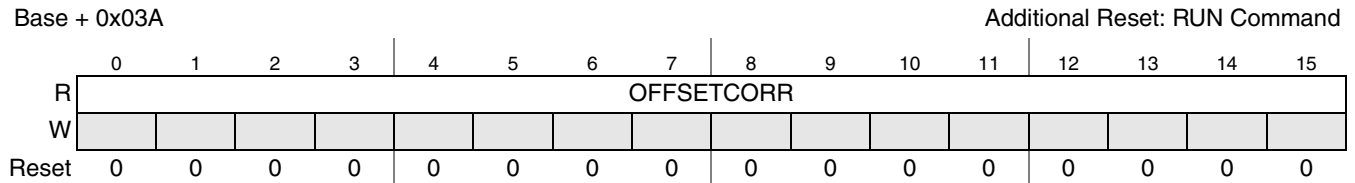


Figure 17-29. Offset Correction Value Register (FR_OFCORVR)

Table 17-36. FR_OFCORVR Field Descriptions

Field	Description
0–15 OFFSET-CORR	Offset Correction Value — protocol related variable: <i>vOffsetCorrection</i> (before value limitation and external offset correction) This field provides the sign extended offset correction value in microticks as it was calculated by the clock synchronization algorithm. The value is represented in 2's complement format. This value does not include the value limitation and the application of the external offset correction. If the magnitude of the internally calculated rate correction value exceeds the limit given by <code>offset_correction_out</code> field in the Protocol Configuration Register 29 (FR_PCR29) , the clock correction reached limit interrupt flag <code>CCL_IF</code> is set in the Protocol Interrupt Flag Register 0 (FR_PIFR0) . Note: If the FlexRay module was not able to calculate an new offset correction term due to a lack of synchronization frames, the OFFSETCORR value is not updated.

17.3.2.30 Combined Interrupt Flag Register (FR_CIFRR)

This register provides five combined interrupt flags and a copy of three individual interrupt flags. The combined interrupt flags are the result of a binary OR of the values of other interrupt flags regardless of the state of the interrupt enable bits. The generation scheme for the combined interrupt flags is depicted in [Figure 17-144](#). The individual interrupt flags `WUPIF`, `FNEBIF`, and `FNEAIF` are copies of corresponding flags in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#) and are provided here to simplify the application interrupt flag check. To clear the individual interrupt flags, the software application must use the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#).

NOTE

The meanings of the combined status bits `MIF`, `PRIF`, `CHIF`, `RBIF`, and `TBIF` are different from those mentioned in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#).

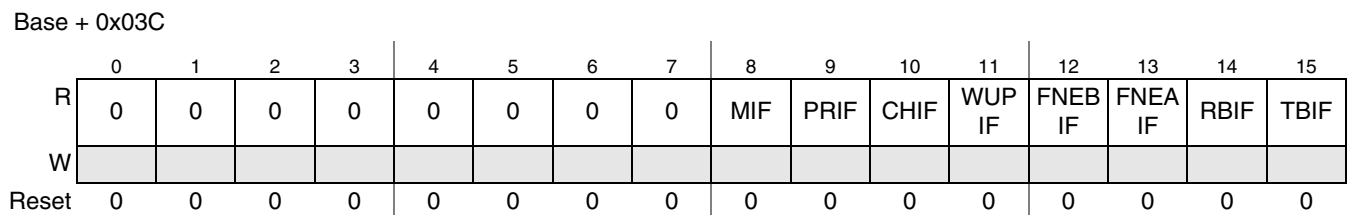


Figure 17-30. Combined Interrupt Flag Register (FR_CIFRR)

Table 17-37. FR_CIFRR Field Descriptions

Field	Description
8 MIF	Module Interrupt Flag — This flag is set if there is at least one interrupt source that has its interrupt flag asserted. 0 No interrupt source has its interrupt flag asserted 1 At least one interrupt source has its interrupt flag asserted
9 PRIF	Protocol Interrupt Flag — This flag is set if at least one of the individual protocol interrupt flags in the Protocol Interrupt Flag Register 0 (FR_PIFR0) or Protocol Interrupt Flag Register 1 (FR_PIFR1) is equal to 1. 0 All individual protocol interrupt flags are equal to 0 1 At least one of the individual protocol interrupt flags is equal to 1
10 CHIF	CHI Interrupt Flag — This flag is set if at least one of the individual CHI error flags in the CHI Error Flag Register (FR_CHIERFR) is equal to 1. 0 All CHI error flags are equal to 0 1 At least one CHI error flag is equal to 1
11 WUPIF	Wakeup Interrupt Flag — Copy of FR_GIFER[WUPIF]
12 FNEBIF	Receive FIFO channel B Not Empty Interrupt Flag — Copy of FR_GIFER[FNEBIF]
13 FNEAIF	Receive FIFO channel A Not Empty Interrupt Flag — Copy of FR_GIFER[FNEAIF]
14 RBIF	Receive Message Buffer Interrupt Flag — This flag is set if for at least one of the individual receive message buffers (FR_MBCCSn[MTD] = 0) the interrupt flag MBIF in the corresponding Message Buffer Configuration, Control, Status Registers (FR_MBCCSRn) is equal to 1. 0 None of the individual receive message buffers has the MBIF flag asserted. 1 At least one individual receive message buffers has the MBIF flag asserted.
15 TBIF	Transmit Message Buffer Interrupt Flag — This flag is set if for at least one of the individual single or double transmit message buffers (FR_MBCCSn[MTD] = 1) the interrupt flag MBIF in the corresponding Message Buffer Configuration, Control, Status Registers (FR_MBCCSRn) is equal to 1. 0 None of the individual transmit message buffers has the MBIF flag asserted. 1 At least one individual transmit message buffers has the MBIF flag asserted.

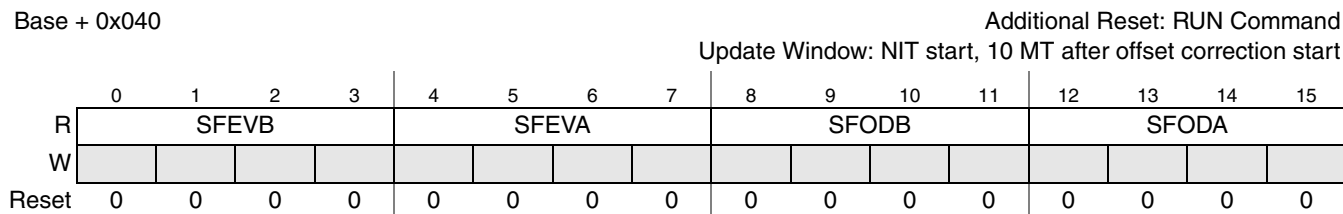
17.3.2.31 Sync Frame Counter Register (FR_SFCNTR)

This register provides the number of synchronization frames that are used for clock synchronization in the last even and in the last odd numbered communication cycle. This register is updated after the NIT start and before 10 MT after offset correction start.

NOTE

If the software application has locked the even synchronization table at the end of the static segment of an even communication cycle, the FlexRay module will not update the fields SFEVB and SFEVA.

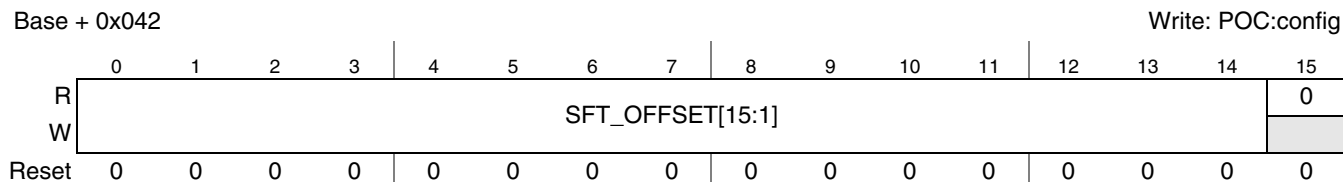
If the application has locked the odd synchronization table at the end of the static segment of an odd communication cycle, the FlexRay module will not update the values SFODB and SFODA.


Figure 17-31. Sync Frame Counter Register (FR_SFCNTR)
Table 17-38. FR_SFCNTR Field Descriptions

Field	Description
0–3 SFEVB	Sync Frames Channel B, even cycle — protocol related variable: size of (<i>vsSyncIdListB</i> for even cycle) This field provides the size of the internal list of frame IDs of received synchronization frames used for clock synchronization.
4–7 SFEVA	Sync Frames Channel A, even cycle — protocol related variable: size of (<i>vsSyncIdListA</i> for even cycle) This field provides the size of the internal list of frame IDs of received synchronization frames used for clock synchronization.
8–11 SFODB	Sync Frames Channel B, odd cycle — protocol related variable: size of (<i>vsSyncIdListB</i> for odd cycle) This field provides the size of the internal list of frame IDs of received synchronization frames used for clock synchronization.
12–15 SFODA	Sync Frames Channel A, odd cycle — protocol related variable: size of (<i>vsSyncIdListA</i> for odd cycle) This field provides the size of the internal list of frame IDs of received synchronization frames used for clock synchronization.

17.3.2.32 Sync Frame Table Offset Register (FR_SFTOR)

This register defines the FlexRay memory partition-related offset for sync frame tables. For more details, see [Section 17.4.12, “Sync Frame ID and Sync Frame Deviation Tables.”](#)


Figure 17-32. Sync Frame Table Offset Register (FR_SFTOR)
Table 17-39. FR_SFTOR Field Description

Field	Description
0–14 FR_SFTOR	Sync Frame Table Offset — The offset of the Sync Frame Tables in the FlexRay memory. This offset is required to be 16-bit aligned. Thus STF_OFFSET[0] is always 0.

17.3.2.33 Sync Frame Table Configuration, Control, Status Register (FR_SFTCCSR)

This register provides configuration, control, and status information related to the generation and access of the clock sync ID tables and clock sync measurement tables. For a detailed description, see [Section 17.4.12, “Sync Frame ID and Sync Frame Deviation Tables.”](#)

Base + 0x044

Write: Normal Mode

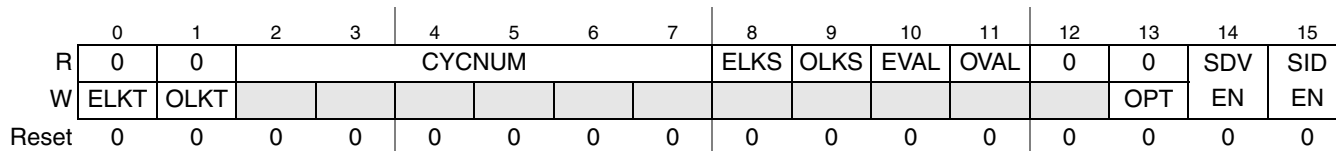


Figure 17-33. Sync Frame Table Configuration, Control, Status Register (FR_SFTCCSR)

Table 17-40. FR_SFTCCSR Field Descriptions (Sheet 1 of 2)

Field	Description
0 ELKT	Even Cycle Tables Lock/Unlock Trigger — This trigger bit is used to lock and unlock the even cycle tables. 0 No effect 1 Triggers lock/unlock of the even cycle tables.
1 OLKT	Odd Cycle Tables Lock/Unlock Trigger — This trigger bit is used to lock and unlock the odd cycle tables. 0 No effect 1 Triggers lock/unlock of the odd cycle tables.
2–7 CYCNUM	Cycle Number — This field provides the number of the cycle in which the currently locked table was recorded. If none or both tables are locked, this value is related to the even cycle table.
8 ELKS	Even Cycle Tables Lock Status — This status bit indicates whether the software application has locked the even cycle tables. 0 Application has not locked the even cycle tables. 1 Application has locked the even cycle tables.
9 OLKS	Odd Cycle Tables Lock Status — This status bit indicates whether the software application has locked the odd cycle tables. 0 Application has not locked the odd cycle tables. 1 Application has locked the odd cycle tables.
10 EVAL	Even Cycle Tables Valid — This status bit indicates whether the Sync Frame ID and Sync Frame Deviation Tables for the even cycle are valid. The FlexRay module clears this status bit when it starts updating the tables, and sets this bit when it has finished the table update. 0 Tables are not valid (update is ongoing) 1 Tables are valid (consistent).
11 OVAL	Odd Cycle Tables Valid — This status bit indicates whether the Sync Frame ID and Sync Frame Deviation Tables for the odd cycle are valid. The FlexRay module clears this status bit when it starts updating the tables, and sets this bit when it has finished the table update. 0 Tables are not valid (update is ongoing) 1 Tables are valid (consistent).
13 OPT	One Pair Trigger — This trigger bit controls whether the FlexRay module writes continuously or only one pair of Sync Frame Tables into the FlexRay memory. If this trigger is set to 1 while SDVEN or SIDEN is set to 1, the FlexRay module writes only one pair of the enabled Sync Frame Tables corresponding to the next even-odd-cycle pair into the FlexRay memory. In this case, the FlexRay module clears the SDVEN or SIDEN bits immediately. If this trigger is set to 0 while SDVEN or SIDEN is set to 1, the FlexRay module writes continuously the enabled Sync Frame Tables into the FlexRay memory. 0 Write continuously pairs of enabled Sync Frame Tables into FlexRay memory. 1 Write only one pair of enabled Sync Frame Tables into FlexRay memory.

Table 17-40. FR_SFTCCSR Field Descriptions (Sheet 2 of 2)


Field	Description
14 SDVEN	Sync Frame Deviation Table Enable — This bit controls the generation of the Sync Frame Deviation Tables. The software application must set this bit to request the FlexRay module to write the Sync Frame Deviation Tables into the FlexRay memory. 0 Do not write Sync Frame Deviation Tables 1 Write Sync Frame Deviation Tables into FlexRay memory Note: If software sets SDVEN = 1, then software must set SIDEN to 1.
15 SIDEN	Sync Frame ID Table Enable — This bit controls the generation of the Sync Frame ID Tables. The software application must set this bit to request the FlexRay module to write the Sync Frame ID Tables into the FlexRay memory. 0 Do not write Sync Frame ID Tables 1 Write Sync Frame ID Tables into FlexRay memory

17.3.2.34 Sync Frame ID Rejection Filter Register (FR_SFIDRFR)

This register defines the sync frame rejection filter ID. The software application must update this register outside of the static segment. If the application updates this register in the static segment, it can appear that the FlexRay module accepts the sync frame in the current cycle.

NOTE

This register requires 16-bit write access for correct operation.

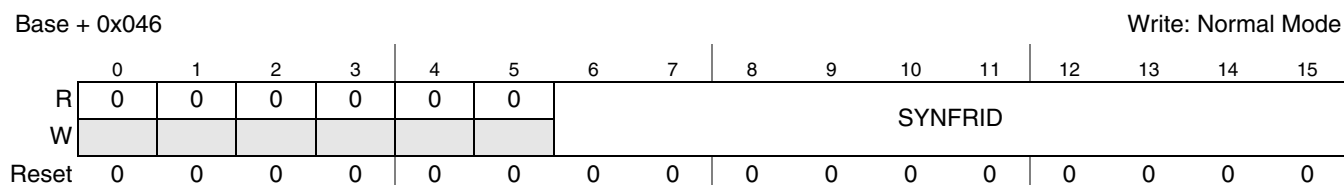
Figure 17-34. Sync Frame ID Rejection Filter Register (FR_SFIDRFR)
Table 17-41. FR_SFIDRFR Field Descriptions

Field	Description
6–15 SYNFRID	Sync Frame Rejection ID — This field defines the frame ID of a frame that must not be used for clock synchronization. For details see Section 17.4.15.2, “Sync Frame Rejection Filtering.”

17.3.2.35 Sync Frame ID Acceptance Filter Value Register (FR_SFIDAFVR)

This register defines the sync frame acceptance filter value. For details on filtering, see [Section 17.4.15, “Sync Frame Filtering.”](#)

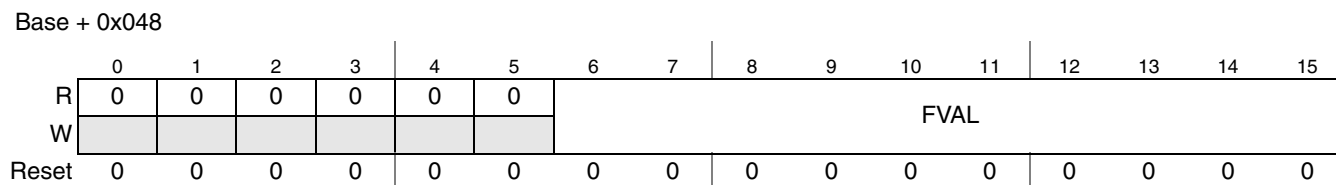

Figure 17-35. Sync Frame ID Acceptance Filter Value Register (FR_SFIDAFVR)

Table 17-42. FR_SFIDAFVR Field Descriptions

Field	Description
6–15 FVAL	Filter Value — This field defines the value for the sync frame acceptance filtering.

17.3.2.36 Sync Frame ID Acceptance Filter Mask Register (FR_SFIDAFMR)

This register defines the sync frame acceptance filter mask. For details on filtering, see [Section 17.4.15.1, “Sync Frame Acceptance Filtering.”](#)

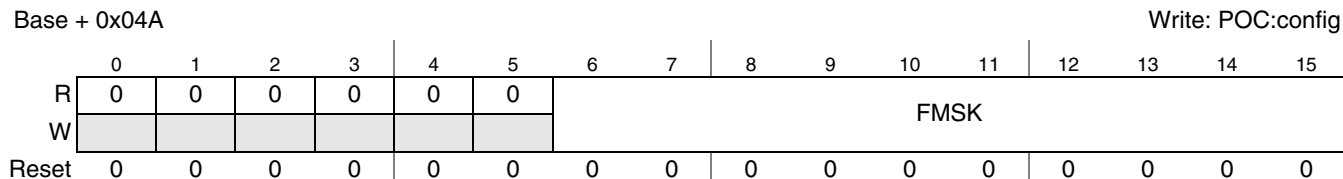


Figure 17-36. Sync Frame ID Acceptance Filter Mask Register (FR_SFIDAFMR)

Table 17-43. FR_SFIDAFMR Field Descriptions

Field	Description
6–15 FMSK	Filter Mask — This field defines the mask for the sync frame acceptance filtering.

17.3.2.37 Network Management Vector Registers (FR_NMVR0–FR_NMVR5)

Each of these six registers holds one part of the network management vector. The length of it is configured in the [Network Management Vector Length Register \(FR_NMVLR\)](#). If FR_NMVLR is programmed with a value that is less than 12 bytes, the remaining bytes of the [Network Management Vector Registers \(FR_NMVR0–FR_NMVR5\)](#), which are not used for the accumulating network management vector, will remain 0s.

The FR_NMVR provides accrued information over all received NMV in the last communication cycle. All NMVs received in one cycle are ORed into the FR_NMVR. The FR_NMVR is updated at the end of the communication cycle.

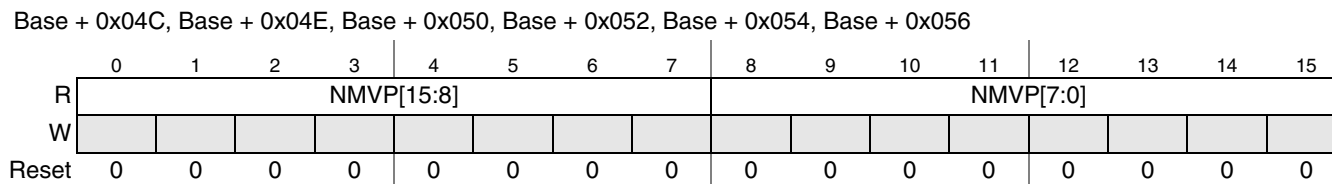


Figure 17-37. Network Management Vector Registers (FR_NMVR0–FR_NMVR5)

Table 17-44. FR_NMVR[0:5] Field Descriptions

Field	Description
0–15 NMVP	Network Management Vector Part — The mapping between the Network Management Vector Registers (FR_NMVR0–FR_NMVR5) and the receive message buffer payload bytes in NMV[0:11] is depicted in Table 17-45 .

Table 17-45. Mapping of FR_NMVRn to the Received Payload Bytes NMVn

FR_NMVRn Register	NMVn Received Payload
FR_NMVR0[NMVP(15:8)]	NMV0
FR_NMVR0[NMVP(7:0)]	NMV1
FR_NMVR1[NMVP(15:8)]	NMV2
FR_NMVR1[NMVP(7:0)]	NMV3
	▪
	▪
	▪
FR_NMVR5[NMVP(15:8)]	NMV10
FR_NMVR5[NMVP(7:0)]	NMV11

17.3.2.38 Network Management Vector Length Register (FR_NMVLR)

This register defines the length of the network management vector in bytes.

Base + 0x058												Write: POC:config				
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	NMVL			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-38. Network Management Vector Length Register (FR_NMVLR)
Table 17-46. FR_NMVLR Field Descriptions

Field	Description
12–15 NMVL	Network Management Vector Length — protocol related variable: gNetworkManagementVectorLength This field defines the length of the Network Management Vector in bytes. Legal values are between 0 and 12.

17.3.2.39 Timer Configuration and Control Register (FR_TICCR)

This register is used to configure and control the two timers T1 and T2. For timer details, see [Section 17.4.17, “Timer Support.”](#) The timer T1 is an absolute timer. The timer T2 can be configured as an absolute or relative timer.

Base + 0x05A

Write: T2_CFG: POC

.....T2_REP, T1_REP, T1SP, T2SP, T1TR, T2TR: Normal Mode

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	T2_	T2_	0	0	0	T2ST	0	0	0	T1_	0	0	0	T1ST
W			CFG	REP		T2SP	T2TR					REP		T1SP	T1TR	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-39. Timer Configuration and Control Register (FR_TICCR)

Table 17-47. FR_TICCR Field Descriptions

Field	Description
2 T2_CFG	Timer T2 Configuration — This bit configures the timebase mode of Timer T2. 0 T2 is absolute timer. 1 T2 is relative timer.
3 T2_REP	Timer T2 Repetitive Mode — This bit configures the repetition mode of Timer T2. 0 T2 is non repetitive 1 T2 is repetitive
5 T2SP	Timer T2 Stop — This trigger bit is used to stop timer T2. 0 no effect 1 stop timer T2
6 T2TR	Timer T2 Trigger — This trigger bit is used to start timer T2. 0 no effect 1 start timer T2
7 T2ST	Timer T2 State — This status bit provides the current state of timer T2. 0 timer T2 is idle 1 timer T2 is running
11 T1_REP	Timer T1 Repetitive Mode — This bit configures the repetition mode of timer T1. 0 T1 is non repetitive 1 T1 is repetitive
13 T1SP	Timer T1 Stop — This trigger bit is used to stop timer T1. 0 no effect 1 stop timer T1
14 T1TR	Timer T1 Trigger — This trigger bit is used to start timer T1. 0 no effect 1 start timer T1
15 T1ST	Timer T1 State — This status bit provides the current state of timer T1. 0 timer T1 is idle 1 timer T1 is running

NOTE

Both timers are deactivated immediately when the protocol enters a state different from **POC:normal active** or **POC:normal passive**.

17.3.2.40 Timer 1 Cycle Set Register (FR_T1CYSR)

This register defines the cycle filter value and the cycle filter mask for timer T1. For a detailed description of timer T1, refer to [Section 17.4.17.1, “Absolute Timer T1.”](#)

Base + 0x05C

Write: Anytime

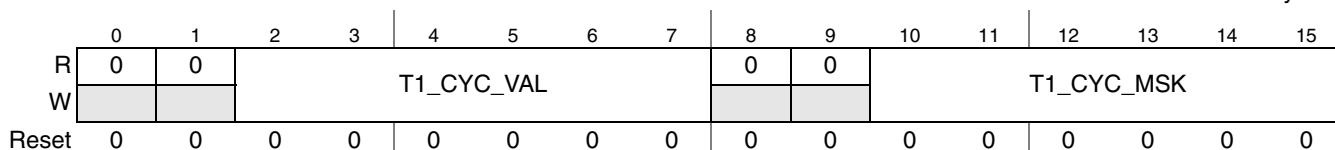


Figure 17-40. Timer 1 Cycle Set Register (FR_T1CYSR)

Table 17-48. FR_T1CYSR Field Descriptions

Field	Description
2–7 T1_CYC_VAL	Timer T1 Cycle Filter Value — This field defines the cycle filter value for timer T1.
10–15 T1_CYC_MSK	Timer T1 Cycle Filter Mask — This field defines the cycle filter mask for timer T1.

NOTE

If the software application modifies the values in this register while the timer is running, the change becomes effective immediately, and timer T1 expires according to the changed values.

17.3.2.41 Timer 1 Macrotick Offset Register (FR_T1MTOR)

This register holds the macrotick offset value for timer T1. For a detailed description of timer T1, refer to [Section 17.4.17.1, “Absolute Timer T1.”](#)

Base + 0x05E

Write: Anytime

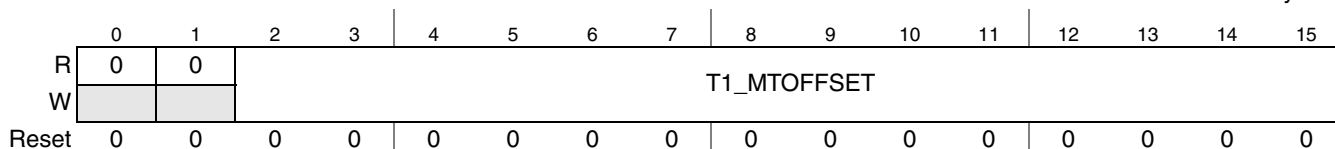


Figure 17-41. Timer 1 Macrotick Offset Register (FR_T1MTOR)

Table 17-49. FR_T1MTOR Field Descriptions

Field	Description
2–15 T1_MTOFFSET	Timer 1 Macrotick Offset — This field defines the macrotick offset value for timer 1.

NOTE

If the software application modifies the value in this register while the timer is running, the change becomes effective immediately, and timer T1 expires according to the changed value.

17.3.2.42 Timer 2 Configuration Register 0 (FR_TI2CR0)

The content of this register depends on the value of the T2_CFG bit in the [Timer Configuration and Control Register \(FR_TICCR\)](#). For a detailed description of timer T2, refer to [Section 17.4.17.2, “Absolute / Relative Timer T2.”](#)

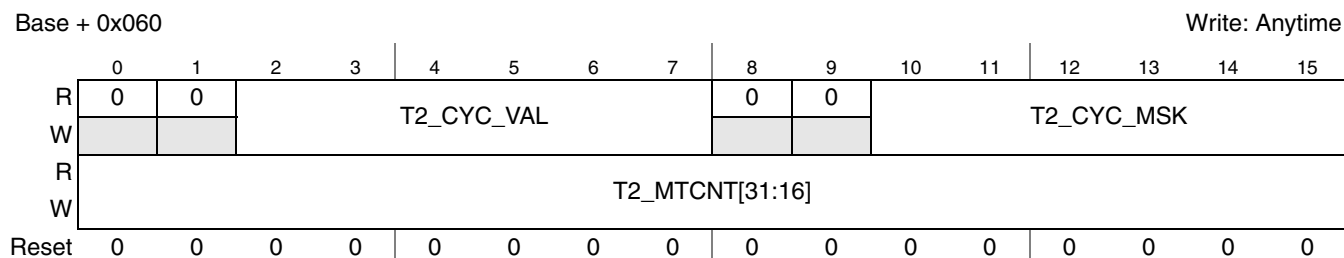


Figure 17-42. Timer 2 Configuration Register 0 (FR_TI2CR0)

Table 17-50. FR_TI2CR0 Field Descriptions

Field	Description
Fields for absolute timer T2 (FR_TICCR[T2_CFG] = 0)	
2–7 T2_CYC_VAL	Timer T2 Cycle Filter Value — This field defines the cycle filter value for timer T2.
10–15 T2_CYC_MSK	Timer T2 Cycle Filter Mask — This field defines the cycle filter mask for timer T2.
Fields for relative timer T2 (FR_TICCR[T2_CFG] = 1)	
0–15 T2_MTCNT[31:16]	Timer T2 Macrotick High Word — This field defines the high word of the macrotick count for timer T2.

NOTE

If timer T2 is configured as an *absolute* timer and the software application modifies the values in this register while the timer is running, the change becomes effective immediately and timer T2 will expire according to the changed values.

If timer T2 is configured as a *relative* timer and the application changes the values in this register while the timer is running, the change becomes effective when the timer has expired according to the old values.

17.3.2.43 Timer 2 Configuration Register 1 (FR_TI2CR1)

The content of this register depends on the value of the T2_CFG bit in the [Timer Configuration and Control Register \(FR_TICCR\)](#). For a detailed description of timer T2, refer to [Section 17.4.17.2, “Absolute / Relative Timer T2.”](#)

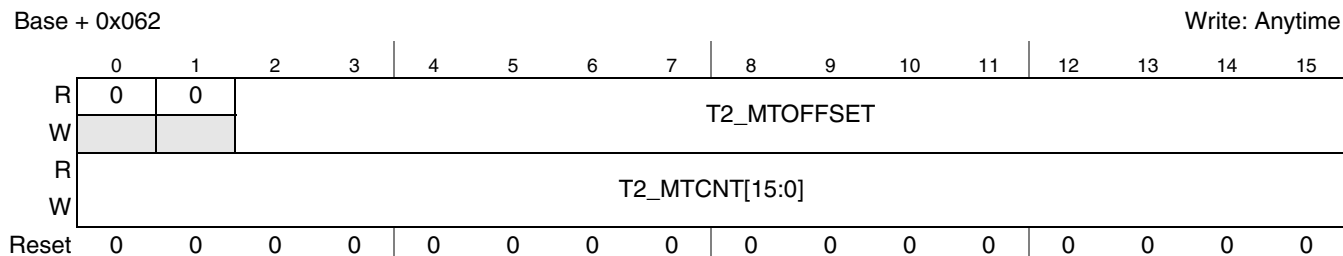


Figure 17-43. Timer 2 Configuration Register 1 (FR_TI2CR1)

Table 17-51. FR_TI2CR1 Field Descriptions

Field	Description
Fields for absolute timer T2 (FR_TICCR[T2_CFG] = 0)	
2–15 T2_MTOFFSET	Timer T2 Macrotick Offset — This field holds the macrotick offset value for timer T2.
Fields for relative timer T2 (FR_TICCR[T2_CFG] = 1)	
0–15 T2_MTCNT[15:0]	Timer T2 Macrotick Low Word — This field defines the low word of the macrotick value for timer T2.

NOTE

If timer T2 is configured as an *absolute* timer and the software application modifies the values in this register while the timer is running, the change becomes effective immediately and the timer T2 will expire according to the changed values.

If timer T2 is configured as a *relative* timer and the application changes the values in this register while the timer is running, the change becomes effective when the timer has expired according to the old values.

17.3.2.44 Slot Status Selection Register (FR_SSSR)

This register accesses the four internal non memory-mapped slot status selection registers FR_SSSR0 to FR_SSSR3. Each of these internal registers selects a slot or symbol window/NIT whose status vector will be saved in the corresponding [Slot Status Registers \(FR_SSR0–FR_SSR7\)](#) according to [Table 17-53](#). For a detailed description of slot status monitoring, refer to [Section 17.4.18, “Slot Status Monitoring.”](#)

NOTE

This register requires 16-bit write access for correct operation.

Base + 0x064

Write: Anytime

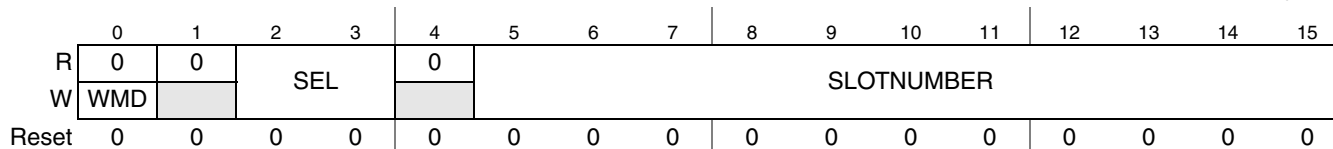


Figure 17-44. Slot Status Selection Register (FR_SSSR)

Table 17-52. FR_SSSR Field Descriptions

Field	Description
0 WMD	Write Mode — This control bit defines the write mode of this register. 0 Write to all fields in this register on write access. 1 Write to SEL field only on write access.
2–3 SEL	Selector — This field selects one of the four internal slot status selection registers for access. 00 select FR_SSSR0. 01 select FR_SSSR1. 10 select FR_SSSR2. 11 select FR_SSSR3.
5–15 SLOTNUMBER	Slot Number — This field specifies the number of the slot whose status will be saved in the corresponding slot status registers. Note: If this value is set to 0, the related slot status register provides the status of the symbol window after the NIT start, and provides the status of the NIT after the cycle start.

Table 17-53. Mapping Between FR_SSSRn and FR_SSRn

Internal Slot Status Selection Register	Write the Slot Status of the Slot Selected by FR_SSSRn for each			
	Even Communication Cycle		Odd Communication Cycle	
	For Channel B to	For Channel A to	For Channel B to	For Channel A to
FR_SSSR0	FR_SSR0[15:8]	FR_SSR0[7:0]	FR_SSR1[15:8]	FR_SSR1[7:0]
FR_SSSR1	FR_SSR2[15:8]	FR_SSR2[7:0]	FR_SSR3[15:8]	FR_SSR3[7:0]
FR_SSSR2	FR_SSR4[15:8]	FR_SSR4[7:0]	FR_SSR5[15:8]	FR_SSR5[7:0]
FR_SSSR3	FR_SSR6[15:8]	FR_SSR6[7:0]	FR_SSR7[15:8]	FR_SSR7[7:0]

17.3.2.45 Slot Status Counter Condition Register (FR_SSCCR)

This register is used to access and program the four internal non-memory mapped slot status counter condition registers FR_SSCCR0 to FR_SSCCR3. Each of these four internal slot status counter condition registers defines the mode and the conditions for incrementing the counter in the corresponding Slot Status Counter Registers (FR_SSCR0–FR_SSCR3). The correspondence is given in Table 17-55. For a detailed description of slot status counters, refer to Section 17.4.18.4, “Slot Status Counter Registers.”

NOTE

This register requires 16-bit write access for correct operation.

Base + 0x066

Write: Anytime

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	SEL		0	CNTCFG		MCY	VFR	SYF	NUF	SUF	STATUSMASK			
W	WMD															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-45. Slot Status Counter Condition Register (FR_SSCCR)
Table 17-54. FR_SSCCR Field Descriptions

Field	Description
0 WMD	Write Mode — This control bit defines the write mode of this register. 0 Write to all fields in this register on write access. 1 Write to SEL field only on write access.
2–3 SEL	Selector — This field selects one of the four internal slot counter condition registers for access. 00 select FR_SSCCR0. 01 select FR_SSCCR1. 10 select FR_SSCCR2. 11 select FR_SSCCR3.
5–6 CNTCFG	Counter Configuration — These bit field controls the channel related incrementing of the slot status counter. 00 increment by 1 if condition is fulfilled on channel A. 01 increment by 1 if condition is fulfilled on channel B. 10 increment by 1 if condition is fulfilled on at least one channel. 11 increment by 2 if condition is fulfilled on both channels channel. increment by 1 if condition is fulfilled on only one channel.
7 MCY	Multi Cycle Selection — This bit defines whether the slot status counter accumulates over multiple communication cycles or provides information for the previous communication cycle only. 0 The Slot Status Counter provides information for the previous communication cycle only. 1 The Slot Status Counter accumulates over multiple communication cycles.
8 VFR	Valid Frame Restriction — This bit is used to restrict the counter to received valid frames. 0 The counter is not restricted to valid frames only. 1 The counter is restricted to valid frames only.
9 SYF	Sync Frame Restriction — This bit is used to restrict the counter to received frames with the sync frame indicator bit set to 1. 0 The counter is not restricted with respect to the sync frame indicator bit. 1 The counter is restricted to frames with the sync frame indicator bit set to 1.
10 NUF	Null Frame Restriction — This bit is used to restrict the counter to received frames with the null frame indicator bit set to 0. 0 The counter is not restricted with respect to the null frame indicator bit. 1 The counter is restricted to frames with the null frame indicator bit set to 0.
11 SUF	Startup Frame Restriction — This bit is used to restrict the counter to received frames with the startup frame indicator bit set to 1. 0 The counter is not restricted with respect to the startup frame indicator bit. 1 The counter is restricted to received frames with the startup frame indicator bit set to 1.
12–15 STATUSMASK	Slot Status Mask — This bit field is used to enable the counter with respect to the four slot status error indicator bits. STATUSMASK[3] – This bit enables the counting for slots with the syntax error indicator bit set to 1. STATUSMASK[2] – This bit enables the counting for slots with the content error indicator bit set to 1. STATUSMASK[1] – This bit enables the counting for slots with the boundary violation indicator bit set to 1. STATUSMASK[0] – This bit enables the counting for slots with the transmission conflict indicator bit set to 1.

Table 17-55. Mapping between Internal FR_SSCCRn and FR_SSCRn

Condition Register	Condition Defined for Register
FR_SSCCR0	FR_SSCR0
FR_SSCCR1	FR_SSCR1
FR_SSCCR2	FR_SSCR2
FR_SSCCR3	FR_SSCR3

17.3.2.46 Slot Status Registers (FR_SSR0–FR_SSR7)

Each of these eight registers holds the status vector of the slot specified in the corresponding internal slot status selection register, which can be programmed using the [Slot Status Selection Register \(FR_SSSR\)](#). Each register is updated after the end of the corresponding slot, as shown in [Figure 17-141](#). The register bits are directly related to the protocol variables and described in more detail in [Section 17.4.18, “Slot Status Monitoring.”](#)

Base + 0x068, Base + 0x06A, Base + 0x06C, Base + 0x06E, Base + 0x070, Base + 0x072, Base + 0x074, Base + 0x076

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	VFB	SYB	NFB	SUB	SEB	CEB	BVB	TCB	VFA	SYA	NFA	SUA	SEA	CEA	BVA	TCA
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-46. Slot Status Registers (FR_SSR0–FR_SSR7)

Table 17-56. FR_SSR0–FR_SSR7 Field Descriptions

Field	Description
0 VFB	Valid Frame on Channel B — protocol related variable: <i>vSS!ValidFrame</i> channel B 0 <i>vSS!ValidFrame</i> = 0 1 <i>vSS!ValidFrame</i> = 1
1 SYB	Sync Frame Indicator Channel B — protocol related variable: <i>vRF!Header!SyFIndicator</i> channel B 0 <i>vRF!Header!SyFIndicator</i> = 0 1 <i>vRF!Header!SyFIndicator</i> = 1
2 NFB	Null Frame Indicator Channel B — protocol related variable: <i>vRF!Header!NFIndicator</i> channel B 0 <i>vRF!Header!NFIndicator</i> = 0 1 <i>vRF!Header!NFIndicator</i> = 1
3 SUB	Startup Frame Indicator Channel B — protocol related variable: <i>vRF!Header!SuFIndicator</i> channel B 0 <i>vRF!Header!SuFIndicator</i> = 0 1 <i>vRF!Header!SuFIndicator</i> = 1
4 SEB	Syntax Error on Channel B — protocol related variable: <i>vSS!SyntaxError</i> channel B 0 <i>vSS!SyntaxError</i> = 0 1 <i>vSS!SyntaxError</i> = 1
5 CEB	Content Error on Channel B — protocol related variable: <i>vSS!ContentError</i> channel B 0 <i>vSS!ContentError</i> = 0 1 <i>vSS!ContentError</i> = 1
6 BVB	Boundary Violation on Channel B — protocol related variable: <i>vSS!BViolation</i> channel B 0 <i>vSS!BViolation</i> = 0 1 <i>vSS!BViolation</i> = 1

Table 17-56. FR_SSR0–FR_SSR7 Field Descriptions (Continued)

Field	Description
7 TCB	Transmission Conflict on Channel B — protocol related variable: <i>vSS!TxConflict</i> channel B 0 <i>vSS!TxConflict</i> = 0 1 <i>vSS!TxConflict</i> = 1
8 VFA	Valid Frame on Channel A — protocol related variable: <i>vSS!ValidFrame</i> channel A 0 <i>vSS!ValidFrame</i> = 0 1 <i>vSS!ValidFrame</i> = 1
9 SYA	Sync Frame Indicator Channel A — protocol related variable: <i>vRF!Header!SyFIndicator</i> channel A 0 <i>vRF!Header!SyFIndicator</i> = 0 1 <i>vRF!Header!SyFIndicator</i> = 1
10 NFA	Null Frame Indicator Channel A — protocol related variable: <i>vRF!Header!NFIndicator</i> channel A 0 <i>vRF!Header!NFIndicator</i> = 0 1 <i>vRF!Header!NFIndicator</i> = 1
11 SUA	Startup Frame Indicator Channel A — protocol related variable: <i>vRF!Header!SuFIndicator</i> channel A 0 <i>vRF!Header!SuFIndicator</i> = 0 1 <i>vRF!Header!SuFIndicator</i> = 1
12 SEA	Syntax Error on Channel A — protocol related variable: <i>vSS!SyntaxError</i> channel A 0 <i>vSS!SyntaxError</i> = 0 1 <i>vSS!SyntaxError</i> = 1
13 CEA	Content Error on Channel A — protocol related variable: <i>vSS!ContentError</i> channel A 0 <i>vSS!ContentError</i> = 0 1 <i>vSS!ContentError</i> = 1
14 BVA	Boundary Violation on Channel A — protocol related variable: <i>vSS!BViolation</i> channel A 0 <i>vSS!BViolation</i> = 0 1 <i>vSS!BViolation</i> = 1
15 TCA	Transmission Conflict on Channel A — protocol related variable: <i>vSS!TxConflict</i> channel A 0 <i>vSS!TxConflict</i> = 0 1 <i>vSS!TxConflict</i> = 1

17.3.2.47 Slot Status Counter Registers (FR_SSCR0–FR_SSCR3)

Each of these four registers provides the slot status counter value for the previous communication cycle(s) and is updated at the cycle start. The provided value depends on the control bits and fields in the related internal slot status counter condition register FR_SSCR_x, which is accessed by the Slot Status Counter Condition Register (FR_SCCR). For more details, see [Section 17.4.18.4, “Slot Status Counter Registers.”](#)

NOTE

If the counter has reached its maximum value 0xFFFF and is in the multicycle mode (FR_SSCR_n[MCY] = 1), the counter is not reset to 0x0000. The software application can reset the counter by clearing the MCY bit and waiting for the next cycle start, when the FlexRay module clears the counter. Subsequently, the counter can be set into the multicycle mode again.

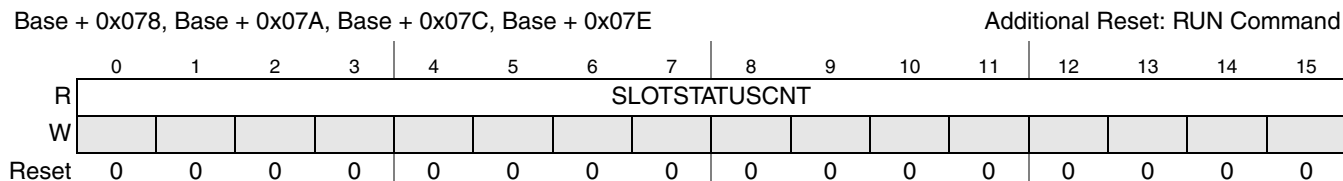


Figure 17-47. Slow Status Counter Registers (FR_SSCR0–FR_SSCR3)

Table 17-57. FR_SSCR0–FR_SSCR3 Field Descriptions

Field	Description
0–15 SLOTSTATUSCNT	Slot Status Counter — This field provides the current value of the Slot Status Counter.

17.3.2.48 MTS A Configuration Register (FR_MTSACFR)

This register controls the transmission of the media access test symbol (MTS) on channel A. For more details, see [Section 17.4.13, “MTS Generation.”](#)

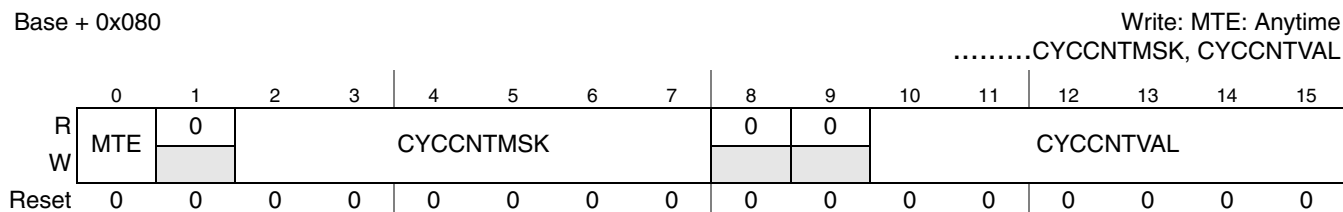


Figure 17-48. MTS A Configuration Register (FR_MTSACFR)

Table 17-58. FR_MTSACFR Field Descriptions

Field	Description
0 MTE	Media Access Test Symbol Transmission Enable — This control bit is used to enable and disable the transmission of the media access test symbol in the selected set of cycles. 0 MTS transmission disabled 1 MTS transmission enabled
2–7 CYCCNTMSK	Cycle Counter Mask — This field provides the filter mask for the MTS cycle count filter.
10–15 CYCCNTVAL	Cycle Counter Value — This field provides the filter value for the MTS cycle count filter.

17.3.2.49 MTS B Configuration Register (FR_MTSBCFR)

This register controls the transmission of the media access test symbol (MTS) on channel B. For more details, see [Section 17.4.13, “MTS Generation.”](#)

Base + 0x082

Write: MTE: Anytime
Write: CYCCNTMSK, CYCCNTVAL

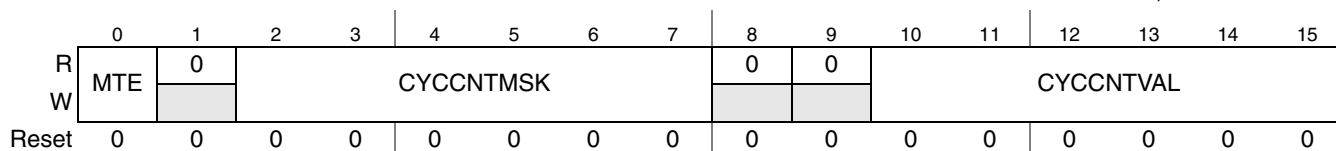


Figure 17-49. MTS B Configuration Register (FR_MTSBCFR)

Table 17-59. FR_MTSBCFR Field Descriptions

Field	Description
0 MTE	Media Access Test Symbol Transmission Enable — This control bit is used to enable and disable the transmission of the media access test symbol in the selected set of cycles. 0 MTS transmission disabled 1 MTS transmission enabled
2–7 CYCCNTMSK	Cycle Counter Mask — This field provides the filter mask for the MTS cycle count filter.
10–15 CYCCNTVAL	Cycle Counter Value — This field provides the filter value for the MTS cycle count filter.

17.3.2.50 Receive Shadow Buffer Index Register (FR_RSBR)

This register provides and retrieve the indices of the message buffer header fields currently associated with the receive shadow buffers. For more details on the receive shadow buffer concept, refer to [Section 17.4.6.3.6, “Receive Shadow Buffers Concept.”](#)

NOTE

This register requires 16-bit write access for correct operation.

Base + 0x084

Write: WMD, SEL: Anytime
.....RSBIDX: *POC:config*

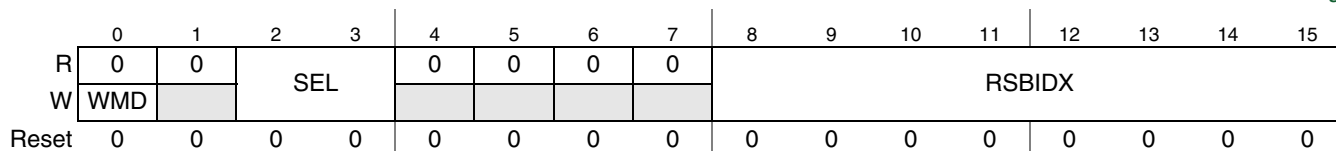


Figure 17-50. Receive Shadow Buffer Index Register (FR_RSBR)

Table 17-60. FR_RSBR Field Descriptions (Sheet 1 of 2)

Field	Description
0 WMD	Write Mode — This bit controls the write mode for this register. 0 update SEL and RSBIDX field on register write 1 update only SEL field on register write

Table 17-60. FR_RSBIR Field Descriptions (Sheet 2 of 2)

Field	Description
2–3 SEL	Selector — This field is used to select the internal receive shadow buffer index register for access. 00 FR_RSBIR_A1 — receive shadow buffer index register for channel A, segment 1 01 FR_RSBIR_A2 — receive shadow buffer index register for channel A, segment 2 10 FR_RSBIR_B1 — receive shadow buffer index register for channel B, segment 1 11 FR_RSBIR_B2 — receive shadow buffer index register for channel B, segment 2
8–15 RSBIDX	Receive Shadow Buffer Index — This field contains the current index of the message buffer header field of the receive shadow message buffer selected by the SEL field. The FlexRay module uses this index to determine the physical location of the shadow buffer header field in the FlexRay memory. The FlexRay module will update this field during receive operation. The software application provides initial message buffer header index value in the configuration phase. FlexRay module: Updates the message buffer header index after successful reception. Software Application: Provides initial message buffer header index.

17.3.2.51 Receive FIFO Selection Register (FR_RFSR)

This register selects a receiver FIFO for subsequent access through the receiver FIFO configuration registers summarized in [Table 17-61](#).

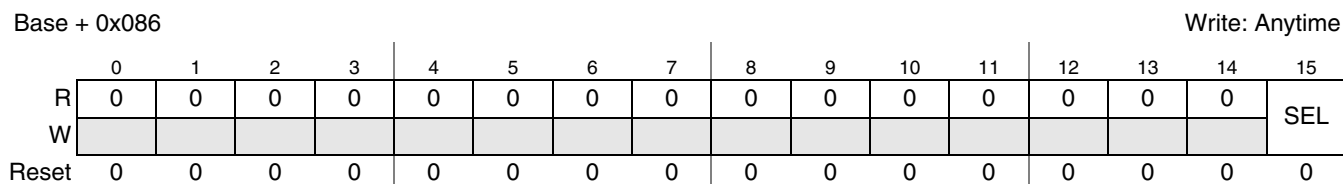


Figure 17-51. Receive FIFO Selection Register (FR_RFSR)

Table 17-61. SEL Controlled Receiver FIFO Registers

Register
Receive FIFO Start Index Register (FR_RFSIR)
Receive FIFO Depth and Size Register (FR_RFDSR)
Receive FIFO Message ID Acceptance Filter Value Register (FR_RFMDAFVR)
Receive FIFO Message ID Acceptance Filter Mask Register (FR_RFMIAFMR)
Receive FIFO Frame ID Rejection Filter Value Register (FR_RFFIDRFVR)
Receive FIFO Frame ID Rejection Filter Mask Register (FR_RFFIDRFMR)
Receive FIFO Range Filter Configuration Register (FR_RFRFCFR)
Receive FIFO Range Filter Control Register (FR_RFRFCTR)

Table 17-62. FR_RFSR Field Descriptions

Field	Description
15 SEL	Select — This control bit selects the receiver FIFO for subsequent programming. 0 Receiver FIFO for channel A selected 1 Receiver FIFO for channel B selected

17.3.2.52 Receive FIFO Start Index Register (FR_RFSIR)

This register defines the message buffer header index of the first message buffer of the selected receive FIFO.

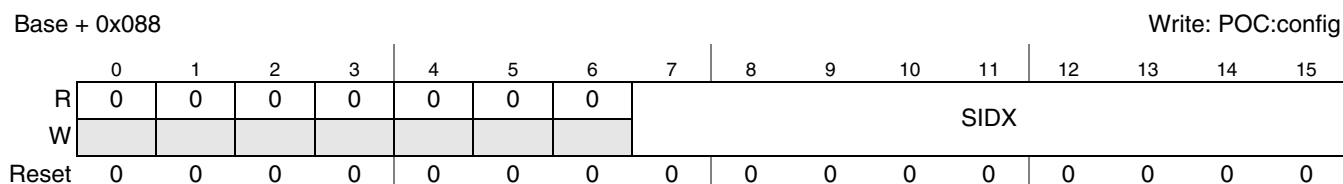


Figure 17-52. Receive FIFO Start Index Register (FR_RFSIR)

Table 17-63. FR_RFSIR Field Descriptions

Field	Description
7–15 SIDX	Start Index — This field defines the number of the message buffer header field of the first message buffer of the selected receive FIFO. The FlexRay module uses the value of the SIDX field to determine the physical location of the receiver FIFO's first message buffer header field.

17.3.2.53 Receive FIFO Depth and Size Register (FR_RFDSR)

This register defines the structure of the selected receive FIFO, i.e. the number of entries and the size of each entry.

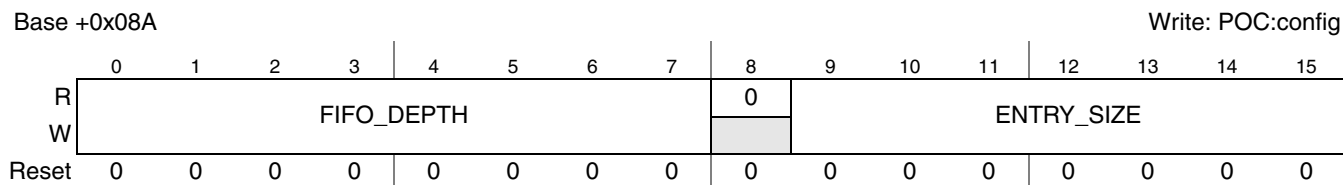


Figure 17-53. Receive FIFO Depth and Size Register (FR_RFDSR)

Table 17-64. FR_RFDSR Field Descriptions

Field	Description
0–7 FIFO_DEPTH	FIFO Depth — This field defines the depth of the selected receive FIFO, i.e. the number of entries.
9–15 ENTRY_SIZE	Entry Size — This field defines the size of the frame data sections for the selected receive FIFO in 2 byte entities.

17.3.2.54 Receive FIFO A Read Index Register (FR_RFARIR)

This register provides the message buffer header index of the next available receive FIFO A entry that the software application can read.

Base + 0x08C

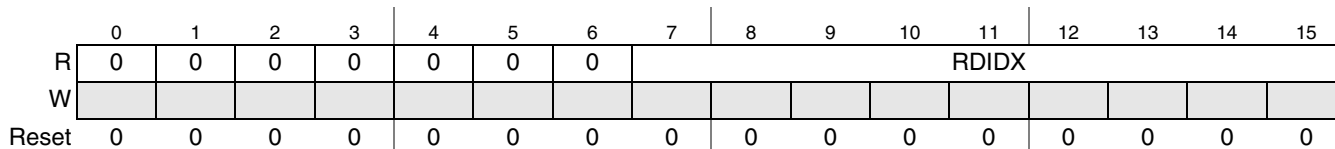


Figure 17-54. Receive FIFO A Read Index Register (FR_RFARIR)

Table 17-65. FR_RFARIR Field Descriptions

Field	Description
7–15 RDIDX	Read Index — This field provides the message buffer header index of the next available receive FIFO message buffer that the software application can read. The FlexRay module increments this index when the application writes to the FNEAIF flag in the Global Interrupt Flag and Enable Register (FR_GIFER) . The index wraps back to the first message buffer header index if the end of the FIFO was reached.

NOTE

If the receive FIFO not empty flag (FNEAIF) is not set, the RDIDX fields points to a physical message buffer that is invalid. When FNEAIF is set, the message buffer indicated by RDIDX contains valid data.

17.3.2.55 Receive FIFO B Read Index Register (FR_RFBIRIR)

This register provides the message buffer header index of the next available receive FIFO B entry that the software application can read.

Base + 0x08E

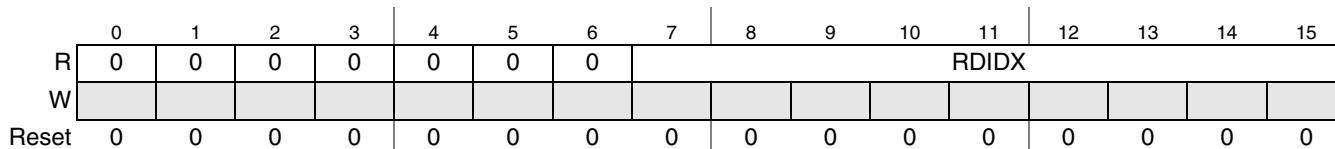


Figure 17-55. Receive FIFO B Read Index Register (FR_RFBIRIR)

Table 17-66. FR_RFBIRIR Field Descriptions

Field	Description
7–15 RDIDX	Read Index — This field provides the message buffer header index of the next available receive FIFO entry that the software application can read. The FlexRay module increments this index when the application writes to the FNEBIF flag in the Global Interrupt Flag and Enable Register (FR_GIFER) . The index wraps back to the first message buffer header index if the end of the FIFO was reached.

NOTE

If the receive FIFO not empty flag (FNEBIF) is not set, the RDIDX fields points to a physical message buffer that is invalid. Only when FNEBIF is set, the message buffer indicated by RDIDX contains valid data.

17.3.2.56 Receive FIFO Message ID Acceptance Filter Value Register (FR_RFMIDAFVR)

This register defines the filter value for the message ID acceptance filter of the selected receive FIFO. For details on message ID filtering, see [Section 17.4.9.5, “Receive FIFO Filtering.”](#)

Base + 0x090

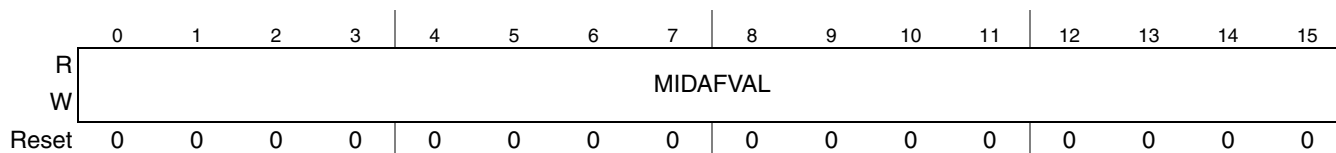


Figure 17-56. Receive FIFO Message ID Acceptance Filter Value Register (FR_RFMIDAFVR)

Table 17-67. FR_RFMIDAFVR Field Descriptions

Field	Description
0–15 MIDAFVAL	Message ID Acceptance Filter Value — Filter value for the message ID acceptance filter.

17.3.2.57 Receive FIFO Message ID Acceptance Filter Mask Register (FR_RFMIAFMR)

This register defines the filter mask for the message ID acceptance filter of the selected receive FIFO. For details on message ID filtering, see [Section 17.4.9.5, “Receive FIFO Filtering.”](#)

Base + 0x092

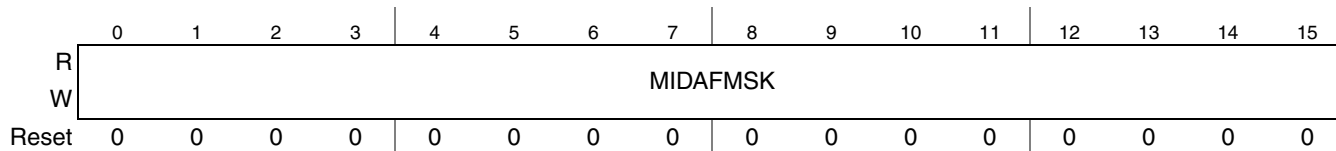


Figure 17-57. Receive FIFO Message ID Acceptance Filter Mask Register (FR_RFMIAFMR)

Table 17-68. FR_RFMIAFMR Field Descriptions

Field	Description
0–15 MIDAFMSK	Message ID Acceptance Filter Mask — Filter mask for the message ID acceptance filter.

17.3.2.58 Receive FIFO Frame ID Rejection Filter Value Register (FR_RFFIDRFVR)

This register defines the filter value for the frame ID rejection filter of the selected receive FIFO. For details on frame ID filtering, see [Section 17.4.9.5, “Receive FIFO Filtering.”](#)

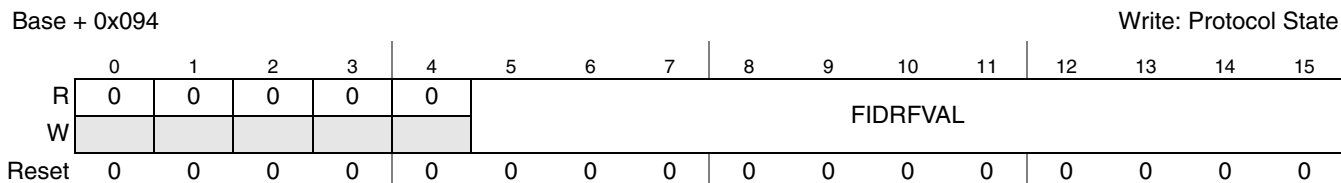


Figure 17-58. Receive FIFO Frame ID Rejection Filter Value Register (FR_RFFIDRFVR)

Table 17-69. FR_RFFIDRFVR Field Descriptions

Field	Description
5–15 FIDRFVAL	Frame ID Rejection Filter Value — Filter value for the frame ID rejection filter.

17.3.2.59 Receive FIFO Frame ID Rejection Filter Mask Register (FR_RFFIDRFMR)

This register defines the filter mask for the frame ID rejection filter of the selected receive FIFO. For details on frame ID filtering, see [Section 17.4.9.5, “Receive FIFO Filtering.”](#)

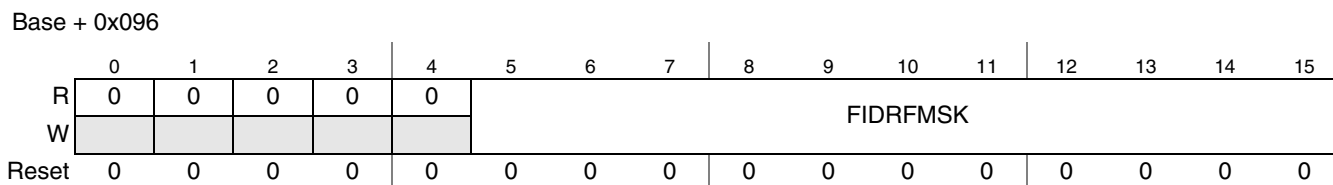


Figure 17-59. Receive FIFO Frame ID Rejection Filter Mask Register (FR_RFFIDRFMR)

Table 17-70. FR_RFFIDRFMR Field Descriptions

Field	Description
5–15 FIDRFMSK	Frame ID Rejection Filter Mask — Filter mask for the frame ID rejection filter.

17.3.2.60 Receive FIFO Range Filter Configuration Register (FR_RFRFCFR)

This register provides access to the four internal frame ID range filter boundary registers of the selected receive FIFO. For details on frame ID range filter, see [Section 17.4.9.5, “Receive FIFO Filtering.”](#)

NOTE

This register requires 16-bit write access for correct operation.

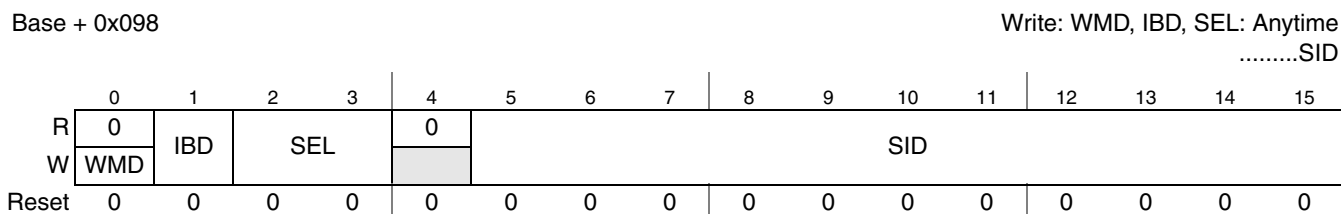


Figure 17-60. Receive FIFO Range Filter Configuration Register (FR_RFRFCFR)

Table 17-71. FR_RFRFCFR Field Descriptions

Field	Description
0 WMD	Write Mode — This control bit defines the write mode of this register. 0 Write to all fields in this register on write access. 1 Write to SEL and IBD field only on write access.
1 IBD	Interval Boundary — This control bit selects the interval boundary to be programmed with the SID value. 0 program lower interval boundary 1 program upper interval boundary
2–3 SEL	Filter Selector — This control field selects the frame ID range filter to be accessed. 00 select frame ID range filter 0. 01 select frame ID range filter 1. 10 select frame ID range filter 2. 11 select frame ID range filter 3.
5–15 SID	Slot ID — Defines the IBD-selected frame ID boundary value for the SEL-selected range filter.

17.3.2.61 Receive FIFO Range Filter Control Register (FR_RFRFCTR)

This register enables and disables each frame ID range filter and defines whether it is running as an acceptance or rejection filter.

Base + 0x09A

Write: Anytime

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	F3MD	F2MD	F1MD	F0MD	0	0	0	0	F3EN	F2EN	F1EN	F0EN
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-61. Receive FIFO Range Filter Control Register (FR_RFRFCTR)
Table 17-72. FR_RFRFCTR Field Descriptions (Sheet 1 of 2)

Field	Description
4 F3MD	Range Filter 3 Mode — This control bit defines the filter mode of the frame ID range filter 3. 0 range filter 3 runs as acceptance filter 1 range filter 3 runs as rejection filter
5 F2MD	Range Filter 2 Mode — This control bit defines the filter mode of the frame ID range filter 2. 0 range filter 2 runs as acceptance filter 1 range filter 2 runs as rejection filter
6 F1MD	Range Filter 1 Mode — This control bit defines the filter mode of the frame ID range filter 1. 0 range filter 1 runs as acceptance filter 1 range filter 1 runs as rejection filter
7 F0MD	Range Filter 0 Mode — This control bit defines the filter mode of the frame ID range filter 0. 0 range filter 0 runs as acceptance filter 1 range filter 0 runs as rejection filter
12 F3EN	Range Filter 3 Enable — This control bit is used to enable and disable the frame ID range filter 3. 0 range filter 3 disabled 1 range filter 3 enabled
13 F2EN	Range Filter 2 Enable — This control bit is used to enable and disable the frame ID range filter 2. 0 range filter 2 disabled 1 range filter 2 enabled

Table 17-72. FR_RFRFCTR Field Descriptions (Sheet 2 of 2)

Field	Description
14 F1EN	Range Filter 1 Enable — This control bit is used to enable and disable the frame ID range filter 1. 0 range filter 1 disabled 1 range filter 1 enabled
15 F0EN	Range Filter 0 Enable — This control bit is used to enable and disable the frame ID range filter 0. 0 range filter 0 disabled 1 range filter 0 enabled

17.3.2.62 Last Dynamic Transmit Slot Channel A Register (FR_LDTXSLAR)

This register provides the number of the last transmission slot in the dynamic segment for channel A. It is updated after the end of the dynamic segment and before the start of the next communication cycle.

Base + 0x09C

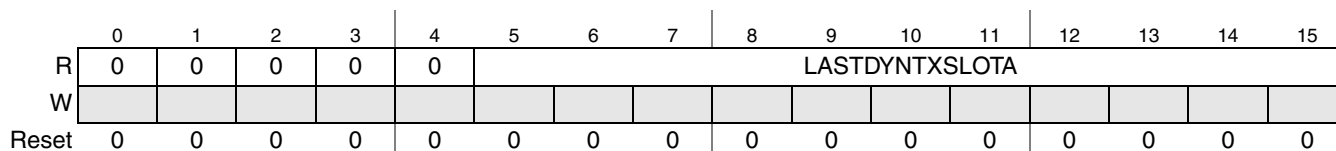


Figure 17-62. Last Dynamic Slot Channel A Register (FR_LDTXSLAR)

Table 17-73. FR_LDTXSLAR Field Descriptions

Field	Description
5–15 LASTDYNTX SLOTA	Last Dynamic Transmission Slot Channel A — protocol related variable: <i>zLastDynTxSlot</i> channel A Number of the last transmission slot in the dynamic segment for channel A. If no frame was transmitted during the dynamic segment on channel A, the value of this field is set to 0.

17.3.2.63 Last Dynamic Transmit Slot Channel B Register (FR_LDTXSLBR)

This register provides the number of the last transmission slot in the dynamic segment for channel B. It is updated after the end of the dynamic segment and before the start of the next communication cycle.

Base + 0x09E

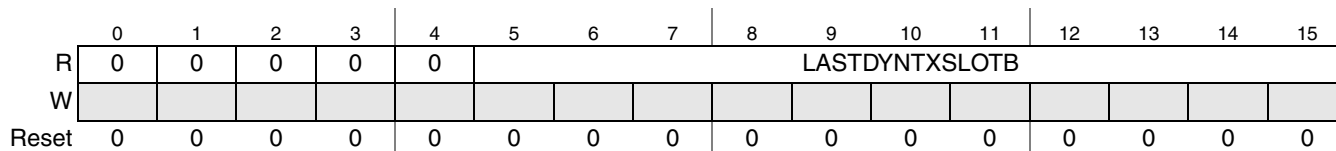


Figure 17-63. Last Dynamic Slot Channel B Register (FR_LDTXSLBR)

Table 17-74. FR_LDTXSLBR Field Descriptions

Field	Description
5–15 LASTDYNTX SLOTB	Last Dynamic Transmission Slot Channel B — protocol related variable: <i>zLastDynTxSlot</i> channel B Number of the last transmission slot in the dynamic segment for channel B. If no frame was transmitted during the dynamic segment on channel B the value of this field is set to 0.

17.3.2.64 Protocol Configuration Registers

The configuration registers described in Section 17.3.2.64.1, “Protocol Configuration Register 0 (FR_PCR0)” through Section 17.3.2.68, “Message Buffer Index Registers (FR_MBIDXn)” provide the necessary configuration information to the protocol engine. The individual values in the registers are described in Table 17-75. For more details about the FlexRay related configuration parameters and the allowed parameter ranges, see *FlexRay Communications System Protocol Specification, Version 2.1*.

Table 17-75. Protocol Configuration Register Fields (Sheet 1 of 2)

Name of Field	Description ¹	Min	Max	Unit	FR_PCR
coldstart_attempts	<i>gColdstartAttempts</i>			number	3
action_point_offset	<i>gdActionPointOffset - 1</i>			MT	0
cas_rx_low_max	<i>gdCASRxLowMax - 1</i>			<i>gdBit</i>	4
dynamic_slot_idle_phase	<i>gdDynamicSlotIdlePhase</i>			minislot	28
minislot_action_point_offset	<i>gdMinislotActionPointOffset - 1</i>			MT	3
minislot_after_action_point	<i>gdMinislot - gdMinislotActionPointOffset - 1</i>			MT	2
static_slot_length	<i>gdStaticSlot</i>			MT	0
static_slot_after_action_point	<i>gdStaticSlot - gdActionPointOffset - 1</i>			MT	13
symbol_window_exists	<i>gdSymbolWindow!=0</i>	0	1	bool	9
symbol_window_after_action_point	<i>gdSymbolWindow - gdActionPointOffset - 1</i>			MT	6
tss_transmitter	<i>gdTSSTransmitter</i>			<i>gdBit</i>	5
wakeup_symbol_rx_idle	<i>gdWakeupSymbolRxIdle</i>			<i>gdBit</i>	5
wakeup_symbol_rx_low	<i>gdWakeupSymbolRxLow</i>			<i>gdBit</i>	3
wakeup_symbol_rx_window	<i>gdWakeupSymbolRxWindow</i>			<i>gdBit</i>	4
wakeup_symbol_tx_idle	<i>gdWakeupSymbolTxIdle</i>			<i>gdBit</i>	8
wakeup_symbol_tx_low	<i>gdWakeupSymbolTxLow</i>			<i>gdBit</i>	5
noise_listen_timeout	<i>(gListenNoise * pdListenTimeout) - 1</i>			μT	16/17
macro_initial_offset_a	<i>pMacroInitialOffset[A]</i>			MT	6
macro_initial_offset_b	<i>pMacroInitialOffset[B]</i>			MT	16
macro_per_cycle	<i>gMacroPerCycle</i>			MT	10
macro_after_first_static_slot	<i>gMacroPerCycle - gdStaticSlot</i>			MT	1
macro_after_offset_correction	<i>gMacroPerCycle - gOffsetCorrectionStart</i>			MT	28
max_without_clock_correction_fatal	<i>gMaxWithoutClockCorrectionFatal</i>			cyclepairs	8
max_without_clock_correction_passive	<i>gMaxWithoutClockCorrectionPassive</i>			cyclepairs	8
minislot_exists	<i>gNumberOfMinislots!=0</i>	0	1	bool	9
minislots_max	<i>gNumberOfMinislots - 1</i>			minislot	29
number_of_static_slots	<i>gNumberOfStaticSlots</i>			static slot	2
offset_correction_start	<i>gOffsetCorrectionStart</i>			MT	11
payload_length_static	<i>gPayloadLengthStatic</i>			2-bytes	19
max_payload_length_dynamic	<i>pPayloadLengthDynMax</i>			2-bytes	24
first_minislot_action_point_offset	<i>max(gdActionPointOffset, gdMinislotActionPointOffset) - 1</i>			MT	13
allow_halt_due_to_clock	<i>pAllowHaltDueToClock</i>			bool	26

Table 17-75. Protocol Configuration Register Fields (Sheet 2 of 2)

Name of Field	Description ¹	Min	Max	Unit	FR_PCR
allow_passive_to_active	<i>pAllowPassiveToActive</i>			cyclepairs	12
cluster_drift_damping	<i>pClusterDriftDamping</i>			μT	24
comp_accepted_startup_range_a	<i>pdAcceptedStartupRange - pDelayCompensationChA</i>			μT	22
comp_accepted_startup_range_b	<i>pdAcceptedStartupRange - pDelayCompensationChB</i>			μT	26
listen_timeout	<i>pdListenTimeout - 1</i>			μT	14/15
key_slot_id	<i>pKeySlotId</i>			number	18
key_slot_used_for_startup	<i>pKeySlotUsedForStartup</i>			bool	11
key_slot_used_for_sync	<i>pKeySlotUsedForSync</i>			bool	11
latest_tx	<i>gNumberOfMinislots - pLatestTx</i>			minislot	21
sync_node_max	<i>gSyncNodeMax</i>			number	30
micro_initial_offset_a	<i>pMicroInitialOffset[A]</i>			μT	20
micro_initial_offset_b	<i>pMicroInitialOffset[B]</i>			μT	20
micro_per_cycle	<i>pMicroPerCycle</i>			μT	22/23
micro_per_cycle_min	<i>pMicroPerCycle - pdMaxDrift</i>			μT	24/25
micro_per_cycle_max	<i>pMicroPerCycle + pdMaxDrift</i>			μT	26/27
micro_per_macro_nom_half	$\text{round}(pMicroPerMacroNom / 2)$			μT	7
offset_correction_out	<i>pOffsetCorrectionOut</i>			μT	9
rate_correction_out	<i>pRateCorrectionOut</i>			μT	14
single_slot_enabled	<i>pSingleSlotEnabled</i>			bool	10
wakeup_channel	<i>pWakeupChannel</i>	see Table 17-76			10
wakeup_pattern	<i>pWakeupPattern</i>			number	18
decoding_correction_a	<i>pDecodingCorrection + pDelayCompensation[A] + 2</i>			μT	19
decoding_correction_b	<i>pDecodingCorrection + pDelayCompensation[B] + 2</i>			μT	7
filter_bypass	RX data glitch filter bypass enable	see Table 17-77			1
key_slot_header_crc	header CRC for key slot	0x000	0x7FF	number	12
extern_offset_correction	<i>pExternOffsetCorrection</i>			μT	29
extern_rate_correction	<i>pExternRateCorrection</i>			μT	21

¹ See *FlexRay Communications System Protocol Specification, Version 2.1* for detailed protocol parameter definitions

Table 17-76. Wakeup Channel Selection

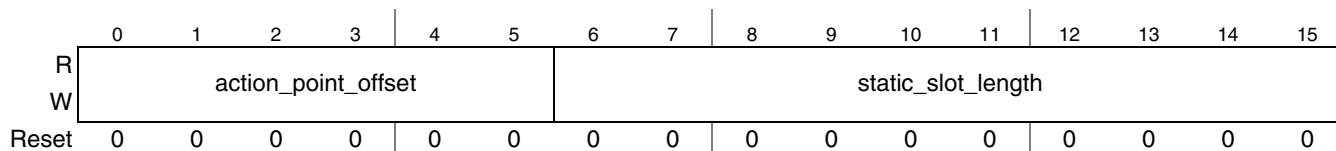
wakeup_channel	Wakeup Channel
0	A
1	B

Table 17-77. Filter Bypass Selection

filter_bypass	Selection
0	OFF
1	ON


17.3.2.64.1 Protocol Configuration Register 0 (FR_PCR0)

Base + 0x0A0


Figure 17-64. Protocol Configuration Register 0 (FR_PCR0)


17.3.2.64.2 Protocol Configuration Register 1 (FR_PCR1)

Base + 0x0A2

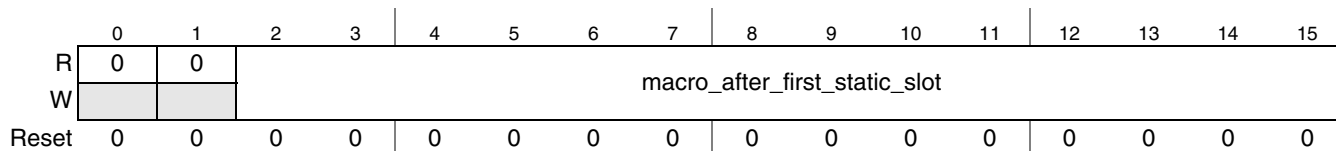
Figure 17-65. Protocol Configuration Register 1 (FR_PCR1)


17.3.2.64.3 Protocol Configuration Register 2 (FR_PCR2)

Base + 0x0A4

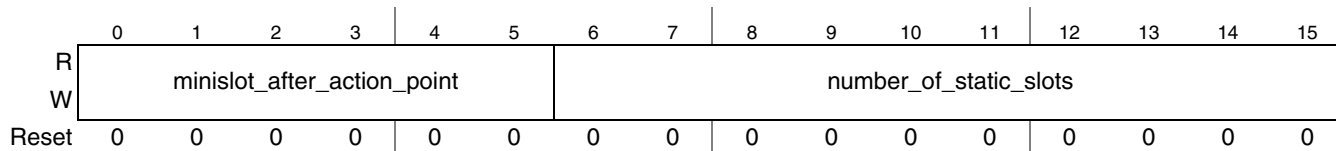
Figure 17-66. Protocol Configuration Register 2 (FR_PCR2)

17.3.2.64.4 Protocol Configuration Register 3 (FR_PCR3)

Base + 0x0A6

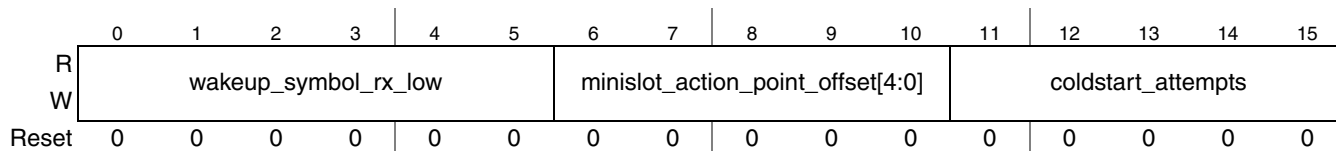
Figure 17-67. Protocol Configuration Register 3 (FR_PCR3)

17.3.2.64.5 Protocol Configuration Register 4 (FR_PCR4)

Base + 0x0A8

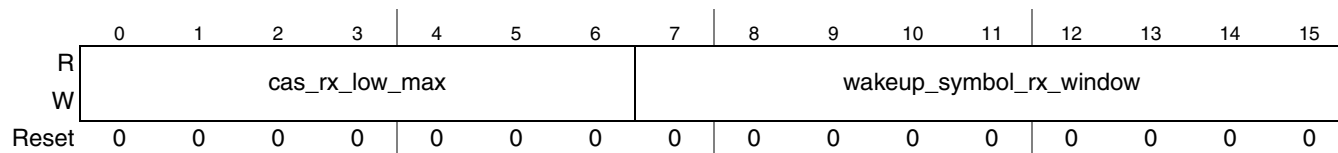


Figure 17-68. Protocol Configuration Register 4 (FR_PCR4)

17.3.2.64.6 Protocol Configuration Register 5 (FR_PCR5)

Base + 0x0AA

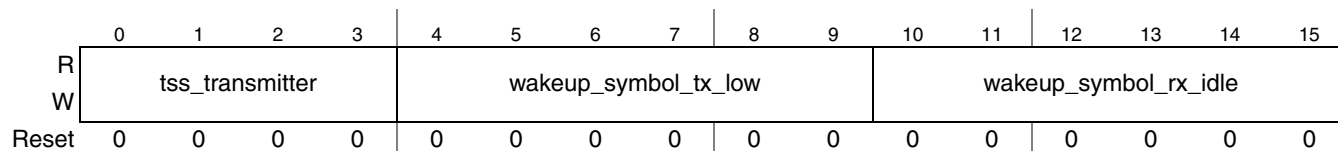


Figure 17-69. Protocol Configuration Register 5 (FR_PCR5)

17.3.2.64.7 Protocol Configuration Register 6 (FR_PCR6)

Base + 0x0AC

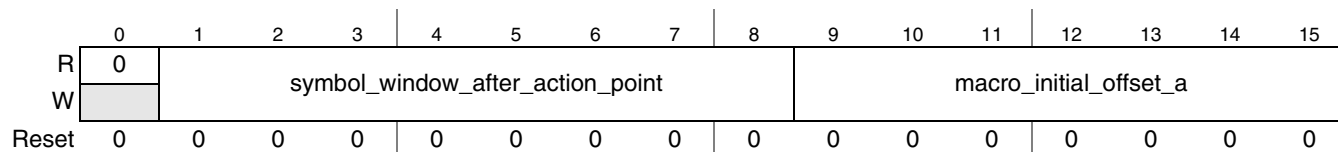


Figure 17-70. Protocol Configuration Register 6 (FR_PCR6)

17.3.2.64.8 Protocol Configuration Register 7 (FR_PCR7)

Base + 0x0AE

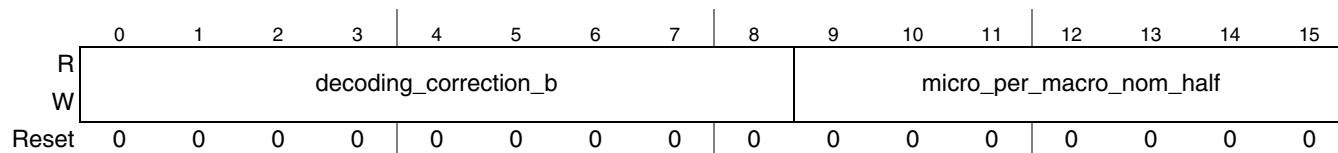


Figure 17-71. Protocol Configuration Register 7 (FR_PCR7)

17.3.2.64.9 Protocol Configuration Register 8 (FR_PCR8)

Base + 0x0B0

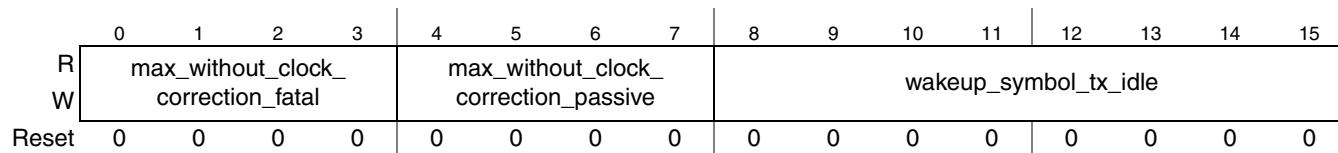


Figure 17-72. Protocol Configuration Register 8 (FR_PCR8)

17.3.2.64.10 Protocol Configuration Register 9 (FR_PCR9)

Base + 0x0B2

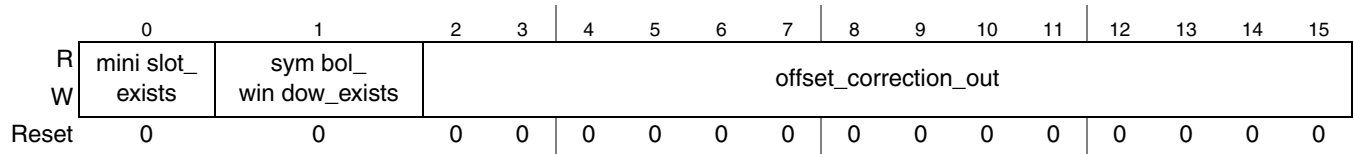


Figure 17-73. Protocol Configuration Register 9 (FR_PCR9)

17.3.2.64.11 Protocol Configuration Register 10 (FR_PCR10)

Base + 0x0B4

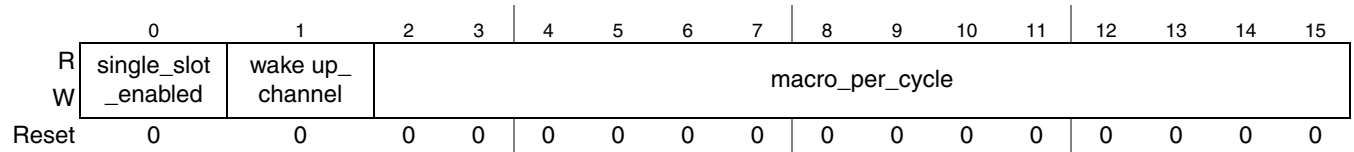


Figure 17-74. Protocol Configuration Register 10 (FR_PCR10)

17.3.2.64.12 Protocol Configuration Register 11 (FR_PCR11)

Base + 0x0B6

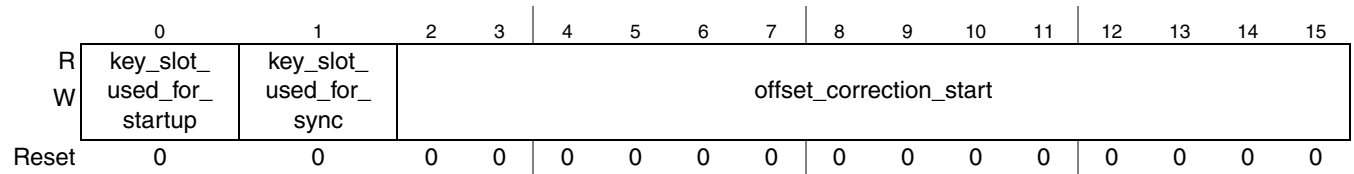


Figure 17-75. Protocol Configuration Register 11 (FR_PCR11)

17.3.2.64.13 Protocol Configuration Register 12 (FR_PCR12)

Base + 0x0B8

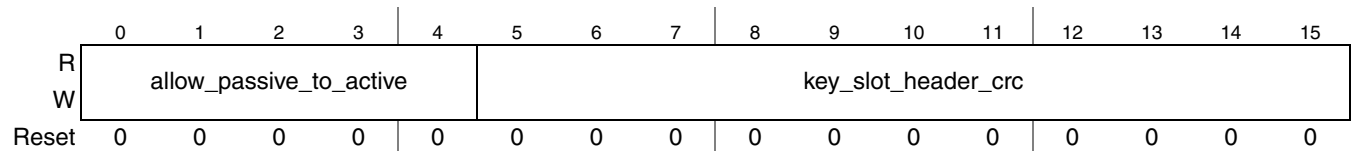


Figure 17-76. Protocol Configuration Register 12 (FR_PCR12)

17.3.2.64.14 Protocol Configuration Register 13 (FR_PCR13)

Base + 0x0BA



Figure 17-77. Protocol Configuration Register 13 (FR_PCR13)

17.3.2.64.15 Protocol Configuration Register 14 (FR_PCR14)

Base + 0x0BC

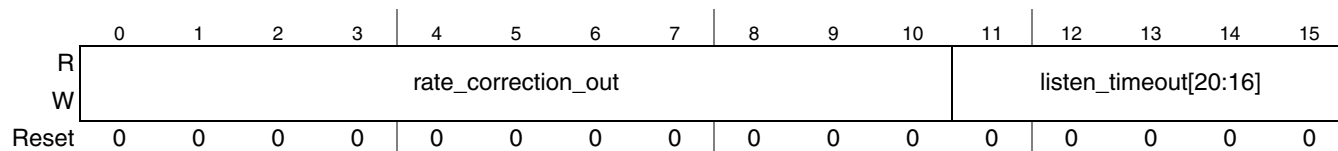


Figure 17-78. Protocol Configuration Register 14 (FR_PCR14)

17.3.2.64.16 Protocol Configuration Register 15 (FR_PCR15)

Base + 0x0BE

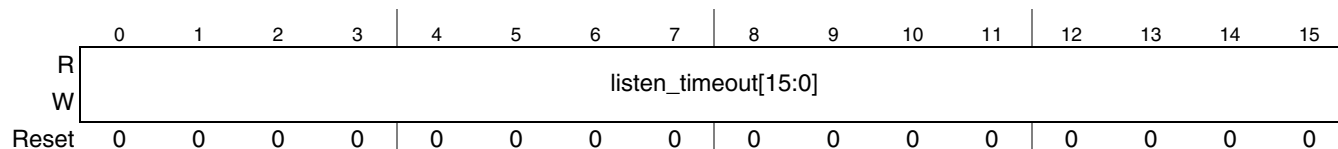


Figure 17-79. Protocol Configuration Register 15 (FR_PCR15)

17.3.2.64.17 Protocol Configuration Register 16 (FR_PCR16)

Base + 0x0C0

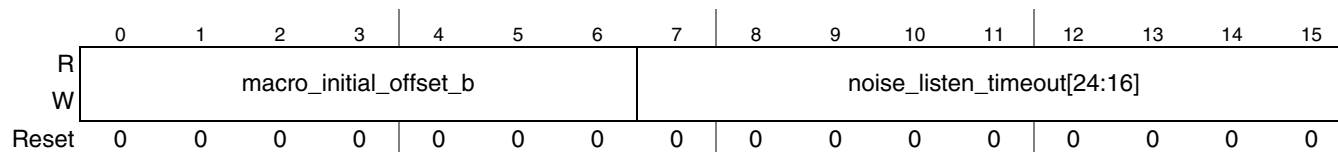


Figure 17-80. Protocol Configuration Register 16 (FR_PCR16)

17.3.2.64.18 Protocol Configuration Register 17 (FR_PCR17)

Base + 0x0C2

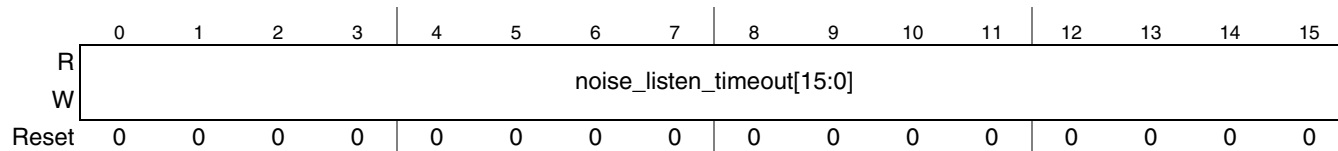


Figure 17-81. Protocol Configuration Register 17 (FR_PCR17)

17.3.2.64.19 Protocol Configuration Register 18 (FR_PCR18)

Base + 0x0C4

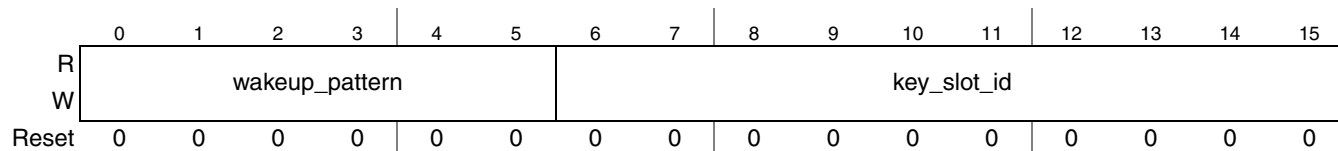
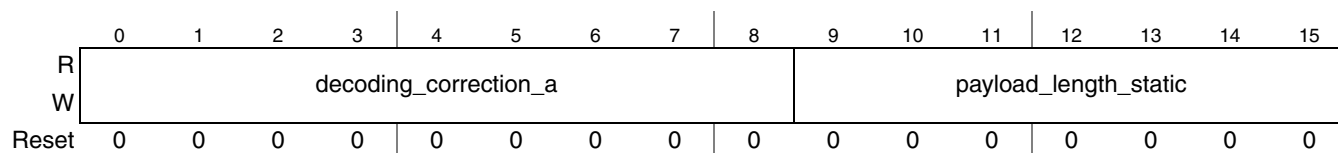


Figure 17-82. Protocol Configuration Register 18 (FR_PCR18)


17.3.2.64.20 Protocol Configuration Register 19 (FR_PCR19)

Base + 0x0C6


Figure 17-83. Protocol Configuration Register 19 (FR_PCR19)


17.3.2.64.21 Protocol Configuration Register 20 (FR_PCR20)

Base + 0x0C8

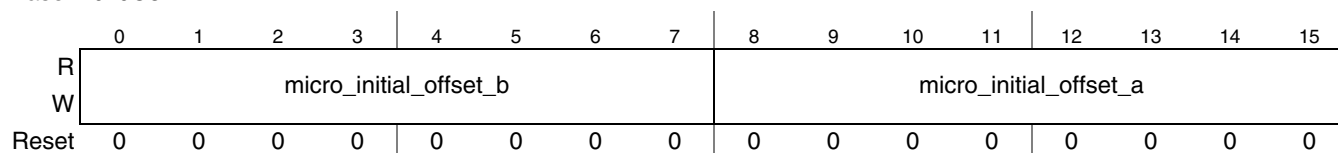
Figure 17-84. Protocol Configuration Register 20 (FR_PCR20)

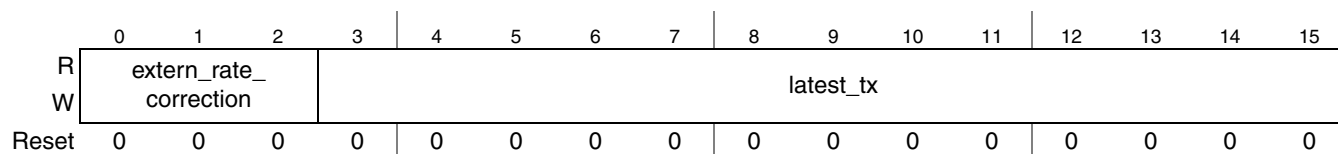17.3.2.64.22 Protocol Configuration Register 21 (FR_PCR21)

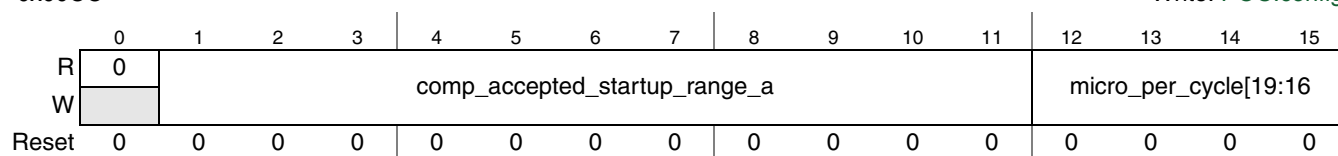
Base + 0x0CA


Figure 17-85. Protocol Configuration Register 21 (FR_PCR21)

17.3.2.64.23 Protocol Configuration Register 22 (FR_PCR22)


0x00CC

Write: POC:config


Figure 17-86. Protocol Configuration Register 22 (FR_PCR22)

17.3.2.64.24 Protocol Configuration Register 23 (FR_PCR23)

Base + 0x0CE

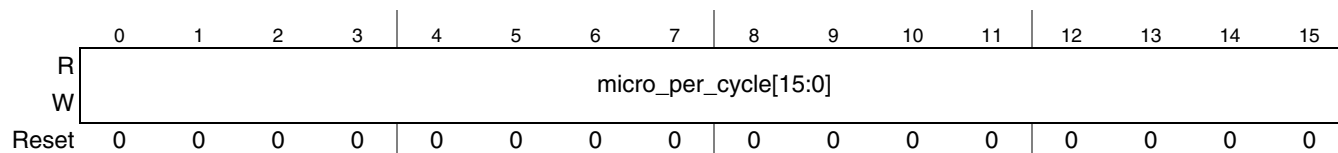
Figure 17-87. Protocol Configuration Register 23 (FR_PCR23)

17.3.2.64.25 Protocol Configuration Register 24 (FR_PCR24)

Base + 0x0D0

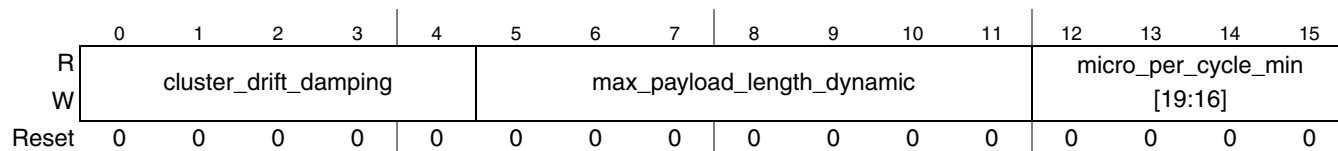


Figure 17-88. Protocol Configuration Register 24 (FR_PCR24)

17.3.2.64.26 Protocol Configuration Register 25 (FR_PCR25)

Base + 0x0D2

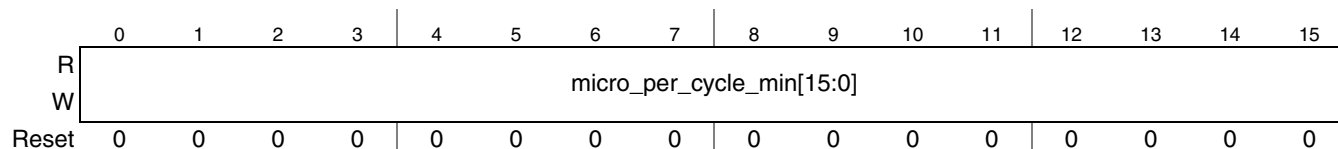


Figure 17-89. Protocol Configuration Register 25 (FR_PCR25)

17.3.2.64.27 Protocol Configuration Register 26 (FR_PCR26)

Base + 0x0D4

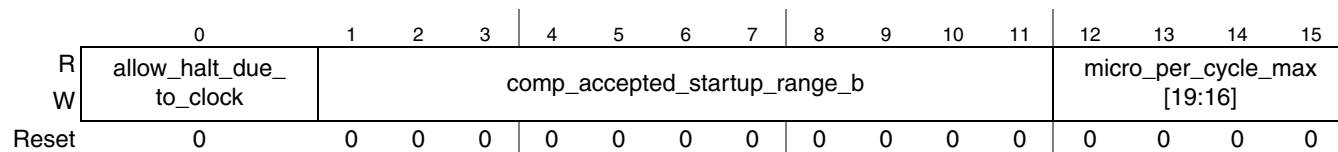


Figure 17-90. Protocol Configuration Register 26 (FR_PCR26)

17.3.2.64.28 Protocol Configuration Register 27 (FR_PCR27)

Base + 0x0D6

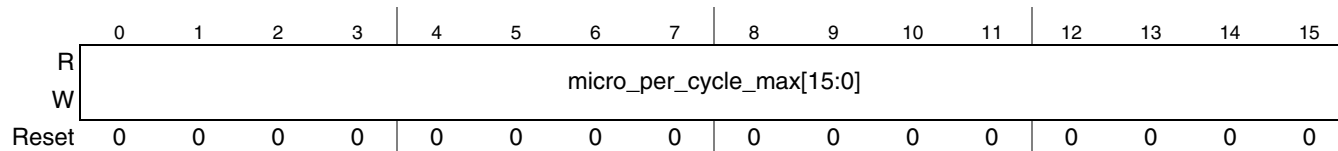


Figure 17-91. Protocol Configuration Register 27 (FR_PCR27)

17.3.2.64.29 Protocol Configuration Register 28 (FR_PCR28)

Base + 0x0D8

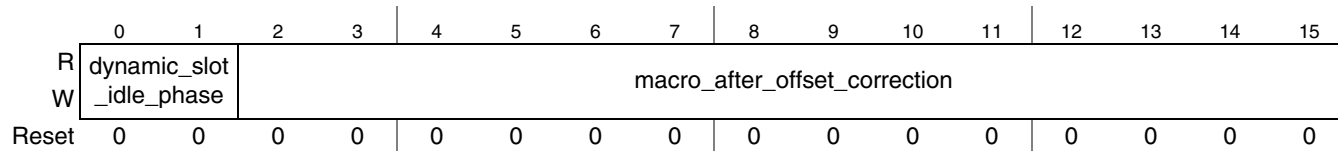


Figure 17-92. Protocol Configuration Register 28 (FR_PCR28)

17.3.2.64.30 Protocol Configuration Register 29 (FR_PCR29)

Base + 0x0DA

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	extern_offset_correction			minislots_max												
W	extern_offset_correction			minislots_max												
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-93. Protocol Configuration Register 29 (FR_PCR29)

17.3.2.64.31 Protocol Configuration Register 30 (FR_PCR30)

Base + 0x0DC

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	sync_node_max			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-94. Protocol Configuration Register 30 (FR_PCR30)

17.3.2.65 Message Buffer Configuration, Control, Status Registers (FR_MBCCSRn)

The content of these registers comprises message buffer configuration data, message buffer control data, message buffer status information, and message buffer interrupt flags.

Base + 0x100, Base + 0x108, ..., 0x04F8

 Write: MCM, MBT, MTD: *POC:config* II MB_DIS

CMT: MB_LCK

EDT, LCKT, MBIE, MBIF: Normal Mode

Additional Reset: CMT, DUP, DVAL, MBIF: Message Buffer Disable

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	MCM	MBT	MTD	CMT	0	0	MBIE	0	0	0	DUP	DVAL	EDS	LCKS	MBIF
W		MCM	MBT	MTD	CMT	EDT	LCKT	MBIE								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 17-95. Message Buffer Configuration, Control, Status Registers (FR_MBCCSRn)

Table 17-78. FR_MBCCSRn Field Descriptions (Sheet 1 of 3)

Field	Description
Message Buffer Configuration	
1 MCM	Message Buffer Commit Mode — This bit applies only to double-buffered transmit message buffers and defines the commit mode. 0 Streaming commit mode 1 Immediate commit mode
2 MBT	Message Buffer Type — This bit applies only to transmit message buffers and defines the buffering type. 0 Single-buffered transmit message buffer 1 Double-buffered transmit message buffer

Table 17-78. FR_MBCCSRn Field Descriptions (Sheet 2 of 3)

Field	Description
3 MTD	Message Buffer Transfer Direction — This bit defines the transfer direction of the message buffer. 0 Receive message buffer 1 Transmit message buffer
Message Buffer Control	
4 CMT	Commit for Transmission — This bit applies only to transmit message buffers and indicates whether the message buffer contains valid data that are ready for transmission. Both the software application and the FlexRay module can modify this bit. Application: The software application sets this bit to indicate that the transmit message buffer contains valid data ready for transmission. The application clears this bit to indicate that the message buffer data are no longer valid for transmission. FlexRay module: The FlexRay module clears this bit when the message buffer data are no longer valid for transmission. 0 Message buffer does not contain valid data. 1 Message buffer contains valid data.
5 EDT	Enable/Disable Trigger — This trigger bit is used to enable and disable a message buffer. The message buffer enable is triggered when the software application writes 1 to this bit and the message buffer is disabled, i.e. the EDS status bit is 0. The message buffer disable is triggered when the application writes 1 to this bit and the message buffer is enabled, i.e. the EDS status bit is 1. 0 No effect 1 message buffer enable/disable triggered Note: If the application writes 1 to this bit, the write access to all other bits is ignored.
6 LCKT	Lock/Unlock Trigger — This trigger bit is used to lock and unlock a message buffer. The message buffer lock is triggered when the software application writes 1 to this bit and the message buffer is not locked, i.e. the LCKS status bit is 0. The message buffer unlock is triggered when the application writes 1 to this bit and the message buffer is locked, i.e. the LCKS status bit is 1. 0 No effect 1 Trigger message buffer lock/unlock Note: If the software application writes 1 to this bit and 0 to the EDT bit, the write access to all other bits is ignored.
7 MBIE	Message Buffer Interrupt Enable — This control bit defines whether the message buffer will generate an interrupt request when its MBIF flag is set. 0 Interrupt request generation disabled 1 Interrupt request generation enabled
Message Buffer Status	
11 DUP	Data Updated — This status bit applies only to receive message buffers. It is always 0 for transmit message buffers. This bit provides information whether the frame header in the message buffer header field and the message buffer data field were updated. See Section 17.4.6.3.4, “Message Buffer Status Update” for a detailed description of the update conditions. 0 Frame Header and Message buffer data field not updated. 1 Frame Header and Message buffer data field updated.

Table 17-78. FR_MBCCSRn Field Descriptions (Sheet 3 of 3)

Field	Description
12 DVAL	Data Valid — The semantic of this status bit depends on the message buffer type and transfer direction. Receive Message Buffer: Indicates whether the message buffer data field contains valid frame data. See Section 17.4.6.3.4, “Message Buffer Status Update” for a detailed update description of the update conditions. 0 message buffer data field contains no valid frame data 1 message buffer data field contains valid frame data Single Transmit Message Buffer: Indicates whether the message is transferred again due to the state transmission mode of the message buffer. 0 Message transferred for the first time. 1 Message will be transferred again. Double Transmit Message Buffer: For the commit side it is always 0. For the transmit side it indicates whether the message is transferred again due to the state transmission mode of the message buffer. 0 Message transferred for the first time. 1 Message will be transferred again.
13 EDS	Enable/Disable Status — This status bit indicates whether the message buffer is enabled or disabled. 0 Message buffer is disabled. 1 Message buffer is enabled.
14 LCKS	Lock Status — This status bit indicates the current lock status of the message buffer. 0 Message buffer is not locked by the software application. 1 Message buffer is locked by the software application.
15 MBIF	Message Buffer Interrupt Flag — The semantic of this flag depends on the message buffer transfer direction. Receive Message Buffer: This flag is set when the slot status in the message buffer header field was updated and this slot was not an empty dynamic slot. See Section 17.4.6.3.4, “Message Buffer Status Update” for a detailed update description of the update conditions. 0 slot status not updated 1 slot status updated and slot was not an empty dynamic slot Transmit Message Buffer: This flag is set when the slot status in the message buffer header field was updated. Additionally this flag is set immediately when a transmit message buffer was enabled. 0 slot status not updated 1 slot status updated / message buffer just enabled Writing a 1 clears this flag. Writing a 0 will not change the flag state.

17.3.2.66 Message Buffer Cycle Counter Filter Registers (FR_MBCCFRn)

This register contains message buffer configuration data for the transmission mode, the channel assignment, and for the cycle counter filtering. For detailed information on cycle counter filtering, refer to [Section 17.4.7.1.2, “Message Buffer Cycle Counter Filtering.”](#)

NOTE

All bits and fields of this register are located in physical memory. They are not affected by reset and do not have reset values.

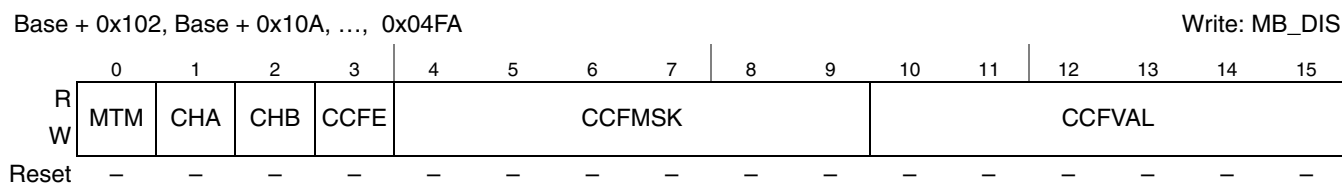

Figure 17-96. Message Buffer Cycle Counter Filter Registers (FR_MBCCFRn)

Table 17-79. FR_MBCCFRn Field Descriptions

Field	Description
0 MTM	Message Buffer Transmission Mode — This control bit applies only to transmit message buffers and defines the transmission mode. 0 Event transmission mode 1 State transmission mode
1–2 CHA CHB	Channel Assignment — These control bits define the channel assignment and control the receive and transmit behavior of the message buffer according to Table 17-80 .
3 CCFE	Cycle Counter Filtering Enable — This control bit is used to enable and disable the cycle counter filtering. 0 Cycle counter filtering disabled 1 Cycle counter filtering enabled
4–9 CCFMSK	Cycle Counter Filtering Mask — This field defines the filter mask for the cycle counter filtering.
10–15 CCFVAL	Cycle Counter Filtering Value — This field defines the filter value for the cycle counter filtering.

Table 17-80. Channel Assignment Description

CHA	CHB	Transmit Message Buffer		Receive Message Buffer	
		static segment	dynamic segment	static segment	dynamic segment
1	1	transmit on both channel A and channel B	transmit on channel A only	store first valid frame received on either channel A or channel B	store first valid frame received on channel A, ignore channel B
0	1	transmit on channel B	transmit on channel B	store first valid frame received on channel B	store first valid frame received on channel B
1	0	transmit on channel A	transmit on channel A	store first valid frame received on channel A	store first valid frame received on channel A
0	0	no frame transmission	no frame transmission	no frame stored	no frame stored

NOTE

If at least one message buffer assigned to a certain slot is assigned to both channels, then all message buffers assigned to this slot have to be assigned to both channels. Otherwise, the message buffer configuration is illegal and the result of the message buffer search is not defined.

17.3.2.67 Message Buffer Frame ID Registers (FR_MBFIDRn)

NOTE

The field in this register is located in physical memory. It is not affected by reset and does not have a reset value.

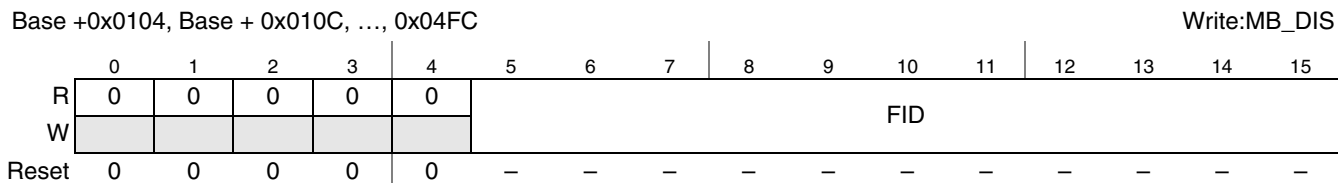


Figure 17-97. Message Buffer Frame ID Registers (FR_MBFIDRn)

Table 17-81. FR_MBFIDRn Field Descriptions

Field	Description
5–15 FID	Frame ID — The semantic of this field depends on the message buffer transfer type. For receive message buffers it is used as a filter value to determine whether or not the message buffer is used for reception of a message received in a slot with the slot ID equal to FID. For a transmit message buffer it is used to determine the slot in which the message in this message buffer will be transmitted.

17.3.2.68 Message Buffer Index Registers (FR_MBIDXRn)

NOTE

The field in this register is located in physical memory. It is not affected by reset and does not have a reset value.

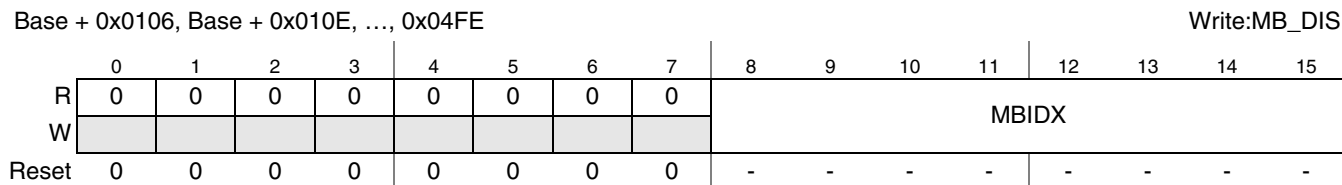


Figure 17-98. Message Buffer Index Registers (FR_MBIDXRn)

Table 17-82. FR_MBIDXRn Field Descriptions

Field	Description
0-7	Reserved
8–15 MBIDX	Message Buffer Index — This field provides the index of the message buffer header field of the physical message buffer that is currently associated with this message buffer. The software application writes the index of the initially associated message buffer header field into this register. The FlexRay module updates this register after frame reception or transmission.

17.4 Functional Description

This section provides a detailed description of the functionality implemented in the FlexRay module.

17.4.1 Message Buffer Concept

The FlexRay module uses a data structure called message buffer to store frame data, configuration, control, and status data. Each message buffer consists of two parts: the message buffer control data and the physical message buffer. The message buffer control data are located in dedicated registers. The structure of the message buffer control data depends on the message buffer type and is described in [Section 17.4.3, “Message Buffer Types.”](#) The physical message buffer is located in the FlexRay memory partition (FRM) and described in [Section 17.4.2, “Physical Message Buffer.”](#)

17.4.2 Physical Message Buffer

All FlexRay messages and related frame and slot status information of received frames and frames to be transmitted to the FlexRay bus are stored in data structures called physical message buffers. They are located in the FlexRay memory partition. The structure of a physical message buffer is depicted in [Figure 17-99.](#)

A physical message buffer consists of two fields: the message buffer header field and the message buffer data field. The message buffer header field contains the frame header, the data field offset, and the slot status. The message buffer data field contains the frame data.

The connection between the two fields is established by the data field offset.

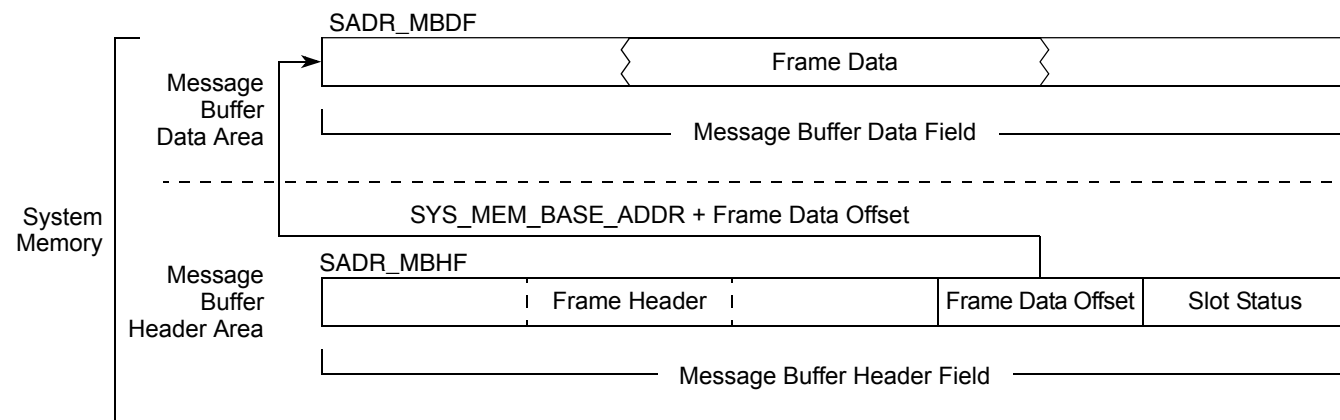


Figure 17-99. Physical Message Buffer Structure

17.4.2.1 Message Buffer Header Field

The message buffer header field is a contiguous region in the FlexRay memory partition and occupies 10 bytes. It contains the frame header, data field offset, and slot status. Its structure is shown in [Figure 17-99.](#) The physical start address SADR_MBHF of the message buffer header field must be 16-bit aligned.

17.4.2.1.1 Frame Header

The frame header occupies the first 6 bytes in the message buffer header field. It contains all FlexRay frame header related information according to the *FlexRay Communications System Protocol Specification, Version 2.1*. A detailed description of the usage and the content of the frame header is provided in [Section 17.4.5.2.1, “Frame Header Section Description.”](#)

17.4.2.1.2 Frame Data Offset

The data field offset follows the frame header in the message buffer data field and occupies two bytes. It contains the offset of the corresponding message buffer data field with respect to the FlexRay module FlexRay memory partition base address as provided by SYS_MEM_BASE_ADDR field in the [System Memory Base Address High Register \(FR_SYMBADHR\)](#) and [System Memory Base Address Low Register \(FR_SYMBADLR\)](#).” The data field offset is used to determine the start address SADR_MBDF of the corresponding message buffer data field in the FlexRay memory partition according to [Equation 17-1](#).

$$\text{SADR_MBDF} = [\text{data field offset}] + \text{FR_SYMBADxR}[\text{SYS_MEM_BASE_ADDR}] \quad \text{Eqn. 17-1}$$

17.4.2.1.3 Slot Status

The slot status occupies the last two bytes of the message buffer header field. It provides the slot and frame status related information according to the *FlexRay Communications System Protocol Specification, Version 2.1*. A detailed description of the content and usage of the slot status is provided in [Section 17.4.5.2.3, “Slot Status Description.”](#)

17.4.2.2 Message Buffer Data Field

The message buffer data field is a contiguous area of 2-byte entities. This field contains the frame payload data, or a part of it, of the frame to be transmitted to or received from the FlexRay bus. The minimum length of this field depends on the specific message buffer configuration and is specified in the message buffer descriptions in [Section 17.4.3, “Message Buffer Types.”](#)

17.4.3 Message Buffer Types

The FlexRay module provides three different types of message buffers:

- Individual message
- Receive shadow
- Receive FIFO

For each message buffer type, the structure of the physical message buffer is identical. The message buffer types differ only in the structure and content of message buffer control data, which control the related physical message buffer. The message buffer control data are described in the next sections.

17.4.3.1 Individual Message Buffers

The individual message buffers are used for all types of frame transmission and for dedicated frame reception based on individual filter settings for each message buffer. The FlexRay module supports three types of individual message buffers, which are described in [Section 17.4.6, “Individual Message Buffer Functional Description.”](#)

Each individual message buffer consists of two parts: the physical message buffer, which is located in the FlexRay memory partition, and the message buffer control data, which are located in dedicated registers. The structure of an individual message buffer is given in [Figure 17-100](#).

Each individual message buffer has a message buffer number n assigned, which determines the set of message buffer control registers associated to this individual message buffer. The individual message buffer with message buffer number n is controlled by registers FR_MBCCSR_n , FR_MBCCFR_n , FR_MBFIDR_n , and FR_MBIDXR_n .

The connection between the message buffer control registers and the physical message buffer is established by the message buffer index field MBIDX in the [Message Buffer Index Registers \(\$FR_MBIDXR_n\$ \)](#). The start address $SADR_MBHF$ of the related message buffer header field in the FlexRay memory partition is determined according to [Equation 17-2](#).

$$SADR_MBHF = (FR_MBIDXR_n[MBIDX] * 10) + FR_SYMBAD_xR[SYS_MEM_BASE_ADDR] \tag{Eqn. 17-2}$$

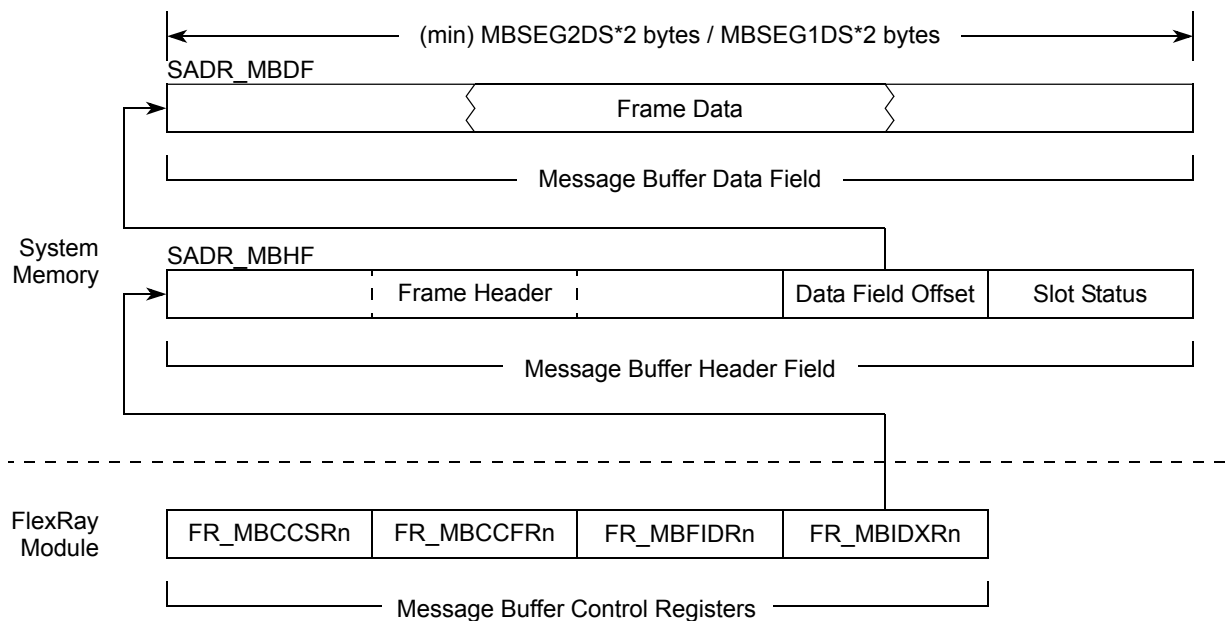


Figure 17-100. Individual Message Buffer Structure

17.4.3.1.1 Individual Message Buffer Segments

The set of the individual message buffers can be split up into two message buffer segments using the [Message Buffer Segment Size and Utilization Register \(\$FR_MBSSUTR\$ \)](#). All individual message buffers

with a message buffer number $n \leq \text{FR_MBSSUTR}[\text{LAST_MB_SEG1}]$ belong to the first message buffer segment. All individual message buffers with a message buffer number $n > \text{FR_MBSSUTR}[\text{LAST_MB_SEG1}]$ belong to the second message buffer segment. The following rules apply to the length of the message buffer data field:

- All physical message buffers associated to individual message buffers that belong to the same message buffer segment must have message buffer data fields of the same length.
- The minimum length of the message buffer data field for individual message buffers in the first message buffer segment is $\text{FR_MBDSR}[\text{MBSEG1DS}] * 2$ bytes.
- The minimum length of the message buffer data field for individual message buffers assigned to the second segment is $\text{FR_MBDSR}[\text{MBSEG2DS}] * 2$ bytes.

17.4.3.2 Receive Shadow Buffers

The receive shadow buffers are required for the frame reception process for individual message buffers. The FlexRay module provides four receive shadow buffers: one receive shadow buffer per channel and per message buffer segment.

Each receive shadow buffer consists of two parts: the physical message buffer located in the FlexRay memory partition and the receive shadow buffer control registers located in dedicated registers. The structure of a receive shadow buffer is shown in [Figure 17-101](#). The four internal shadow buffer control registers can be accessed by the [Receive Shadow Buffer Index Register \(FR_RSBIR\)](#).

The connection between the receive shadow buffer control register and the physical message buffer for the selected receive shadow buffer is established by the receive shadow buffer index field RSBIDX in the [Receive Shadow Buffer Index Register \(FR_RSBIR\)](#). The start address SADR_MBHF of the related message buffer header field in the FlexRay memory partition is determined according to [Equation 17-3](#).

$$\text{SADR_MBHF} = (\text{FR_RSBIR}[\text{RSBIDX}] * 10) + \text{FR_SYMBADxR}[\text{SYS_MEM_BASE_ADDR}] \text{Eqn. 17-3}$$

The length required for the message buffer data field depends on the message buffer segment that the receive shadow buffer is assigned to. For the receive shadow buffers assigned to the first message buffer segment, the length must be the same as for the individual message buffers assigned to the first message buffer segment. For the receive shadow buffers assigned to the second message buffer segment, the length must be the same as for the individual message buffers assigned to the second message buffer segment. The receive shadow buffer assignment is described in [Section 17.3.2.50, “Receive Shadow Buffer Index Register \(FR_RSBIR\).”](#)

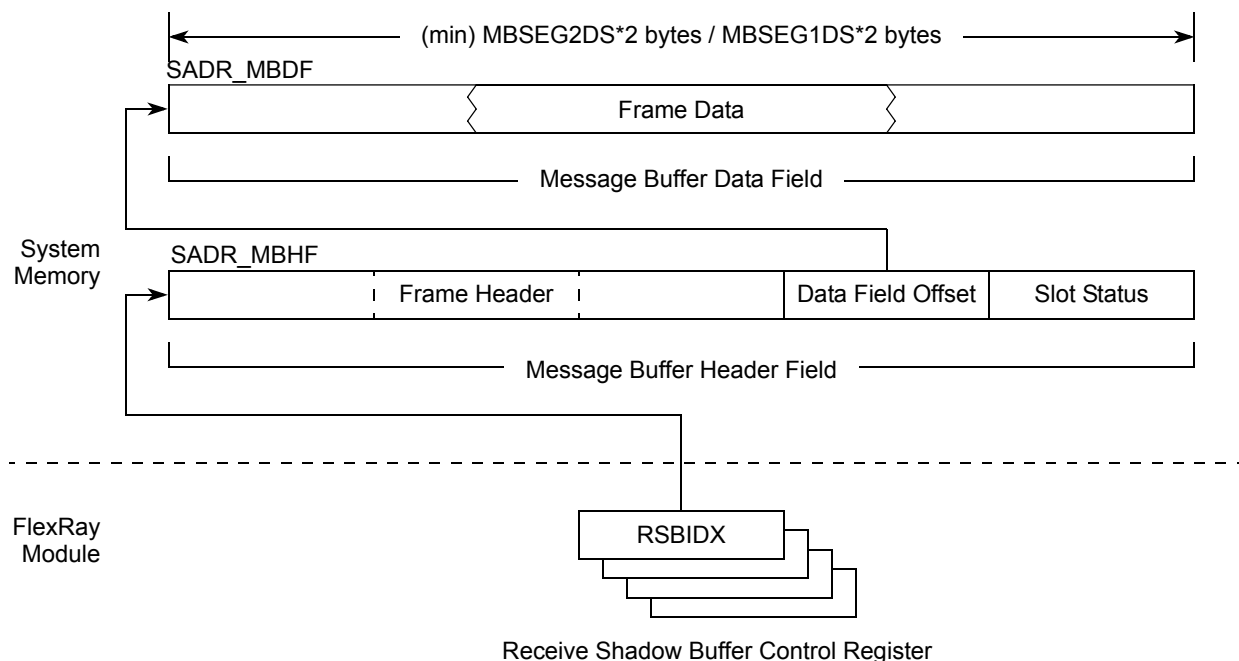


Figure 17-101. Receive Shadow Buffer Structure

17.4.3.3 Receive FIFO

The receive FIFO implements a frame reception system based on the FIFO concept. The FlexRay module provides two independent receive FIFOs, one per channel.

A receive FIFO consists of a set of physical message buffers in the FlexRay memory partition and a set of receive FIFO control registers located in dedicated registers. The structure of a receive FIFO is given in Figure 17-102.

The connection between the receive FIFO control registers and the set of physical message buffers is established by the start index field *SIDX* in the [Receive FIFO Start Index Register \(FR_RFSIR\)](#), the FIFO depth field *FIFO_DEPTH* in the [Receive FIFO Depth and Size Register \(FR_RFDSR\)](#), and the read index field *RDIDX* [Receive FIFO A Read Index Register \(FR_RFARIR\)](#) / [Receive FIFO B Read Index Register \(FR_RFBIRIR\)](#). The start address *SADR_MBHF_1* of the first message buffer header field that belongs to the receive FIFO in the FlexRay memory partition is determined according to [Equation 17-4](#).

$$SADR_MBHF_1 = (FR_RFSIR[SIDX] * 10) + FR_SYMBADxR[SYS_MEM_BASE_ADDR] \text{ Eqn. 17-4}$$

The start address *SADR_MBHF_n* of the last message buffer header field that belongs to the receive FIFO in the FlexRay memory partition is determined according to [Equation 17-5](#).

$$SADR_MBHF_n = ((FR_RFSIR[SIDX] + FR_RFDSR[FIFO_DEPTH]) * 10) + FR_SYMBADxR[SYS_MEM_BASE_ADDR] \text{ Eqn. 17-5}$$

NOTE

All message buffer header fields assigned to a receive FIFO must be a contiguous region.

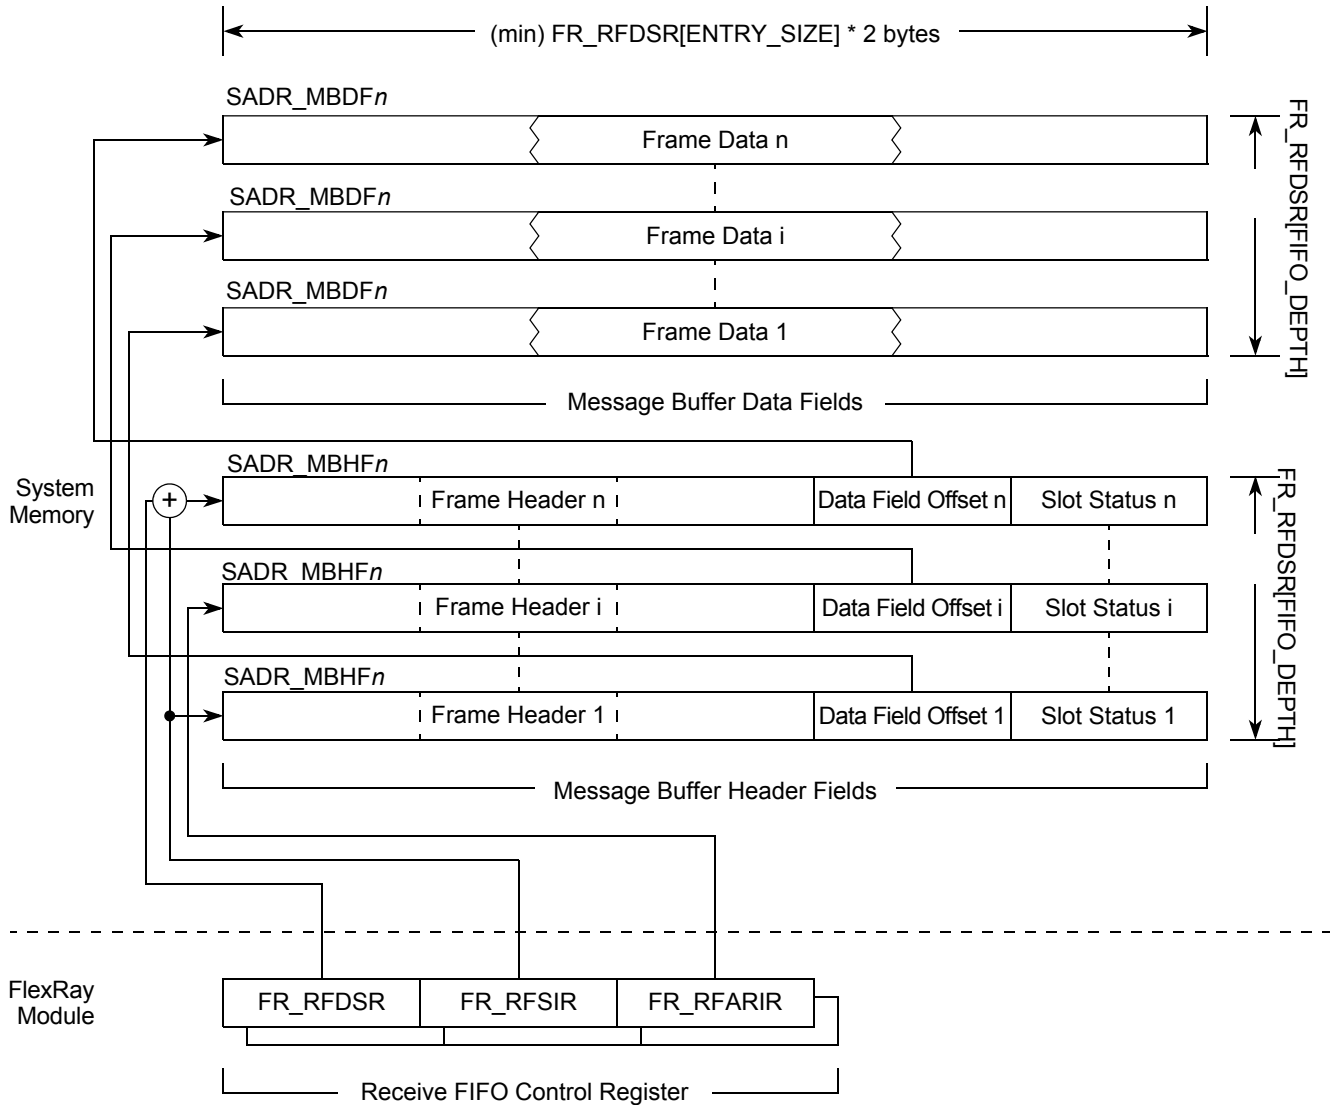


Figure 17-102. Receive FIFO Structure

17.4.3.4 Message Buffer Configuration and Control Data

This section describes the configuration and control data for each message buffer type.

17.4.3.4.1 Individual Message Buffer Configuration Data

Before an individual message buffer can be used for transmission or reception, it must be configured. There is a set of common configuration parameters that applies to all individual message buffers and a set of configuration parameters that applies to each message buffer individually.

Common Configuration Data

The set of common configuration data for individual message buffers is located in these registers:

- [Message Buffer Data Size Register \(FR_MBDSR\)](#)
The MBSEG2DS and MBSEG1DS fields define the minimum length of the message buffer data field with respect to the message buffer segment.
- [Message Buffer Segment Size and Utilization Register \(FR_MBSSUTR\)](#)
The LAST_MB_SEG1 and LAST_MB_UTIL fields define the segmentation of the individual message buffers and the number of individual message buffers that are used. For more details, see [Section 17.4.3.1.1, “Individual Message Buffer Segments.”](#)

Specific Configuration Data

The set of message buffer specific configuration data for individual message buffers is located in the these registers:

- [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#)
The MCM, MBT, MTD bits configure the message buffer type.
- [Message Buffer Cycle Counter Filter Registers \(FR_MBCCFRn\)](#)
The MTM, CHA, CHB bits configure the transmission mode and the channel assignment. The CCFE, CCFMSK, and CCFVAL bits and fields configure the cycle counter filter.
- [Message Buffer Frame ID Registers \(FR_MBFIDRn\)](#)
For a transmit message buffer, the FID field is used to determine the slot in which the message in this message buffer will be transmitted.
- [Message Buffer Index Registers \(FR_MBIDXRn\)](#)
This MBIDX field provides the index of the message buffer header field of the physical message buffer that is currently associated with this message buffer.

17.4.3.5 Individual Message Buffer Control Data

During normal operation, each individual message buffer can be controlled by the control and trigger bits CMT, LCKT, EDT, and MBIE in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#).

17.4.3.6 Receive Shadow Buffer Configuration Data

Before frame reception into the individual message buffers can be performed, the receive shadow buffers must be configured. The configuration data is provided by the [Receive Shadow Buffer Index Register \(FR_RSBIR\)](#). For each receive shadow buffer, the software application provides the message buffer header index. When the protocol is in the [POC:normal active](#) or [POC:normal passive](#) state, the receive shadow buffers are under full FlexRay module control.

17.4.3.7 Receive FIFO Control and Configuration Data

This section describes the configuration and control data for the two receive FIFOs.

17.4.3.7.1 Receive FIFO Configuration Data

The FlexRay module provides two completely independent receive FIFOs, one per channel. Each FIFO has its own set of configuration data. The configuration data are located in these registers:

- Receive FIFO Start Index Register (FR_RFSIR)
- Receive FIFO Depth and Size Register (FR_RFDSR)
- Receive FIFO Message ID Acceptance Filter Value Register (FR_RFMIDAFVR)
- Receive FIFO Message ID Acceptance Filter Mask Register (FR_RFMIAFMR)
- Receive FIFO Frame ID Rejection Filter Value Register (FR_RFFIDRFVR)
- Receive FIFO Frame ID Rejection Filter Mask Register (FR_RFFIDRFMR)
- Receive FIFO Range Filter Configuration Register (FR_RFRFCFR)

17.4.3.7.2 Receive FIFO Control Data

The software application can access the receive FIFO at any time using the values provided in the [Receive FIFO A Read Index Register \(FR_RFARIR\)](#) and [Receive FIFO B Read Index Register \(FR_RFBIRIR\)](#). To update the [Receive FIFO A Read Index Register \(FR_RFARIR\)](#), the application must write 1 to the FIFO A Not Empty Interrupt Flag FNEA_IF in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#). To update the [Receive FIFO B Read Index Register \(FR_RFBIRIR\)](#), the application must write 1 to the FIFO B Not Empty Interrupt Flag FNEB_IF in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#). Each update increments the related read index. If the read index has reached the last FIFO entry, it wraps back to the FIFO start index.

NOTE

The read index is incremented or wrapped on each update, even if the FIFO is empty. The results in a non-empty FIFO, and the non-empty FIFO flag FNEX_IF is set to 1.

17.4.4 FlexRay Memory Layout

The FlexRay module supports a wide range of possible layouts for the FlexRay memory partition. [Figure 17-103](#) shows an example layout. The following set of rules applies to the layout of the FlexRay memory partition:

- The FlexRay memory partition is a contiguous region.
- The maximum size of the FlexRay memory partition is 64 Kbytes.
- The FlexRay memory partition starts at a 16 byte boundary.

The FlexRay memory partition contains three areas: the message buffer header area, the message buffer data area, and the sync frame table area. The areas are described in this section.

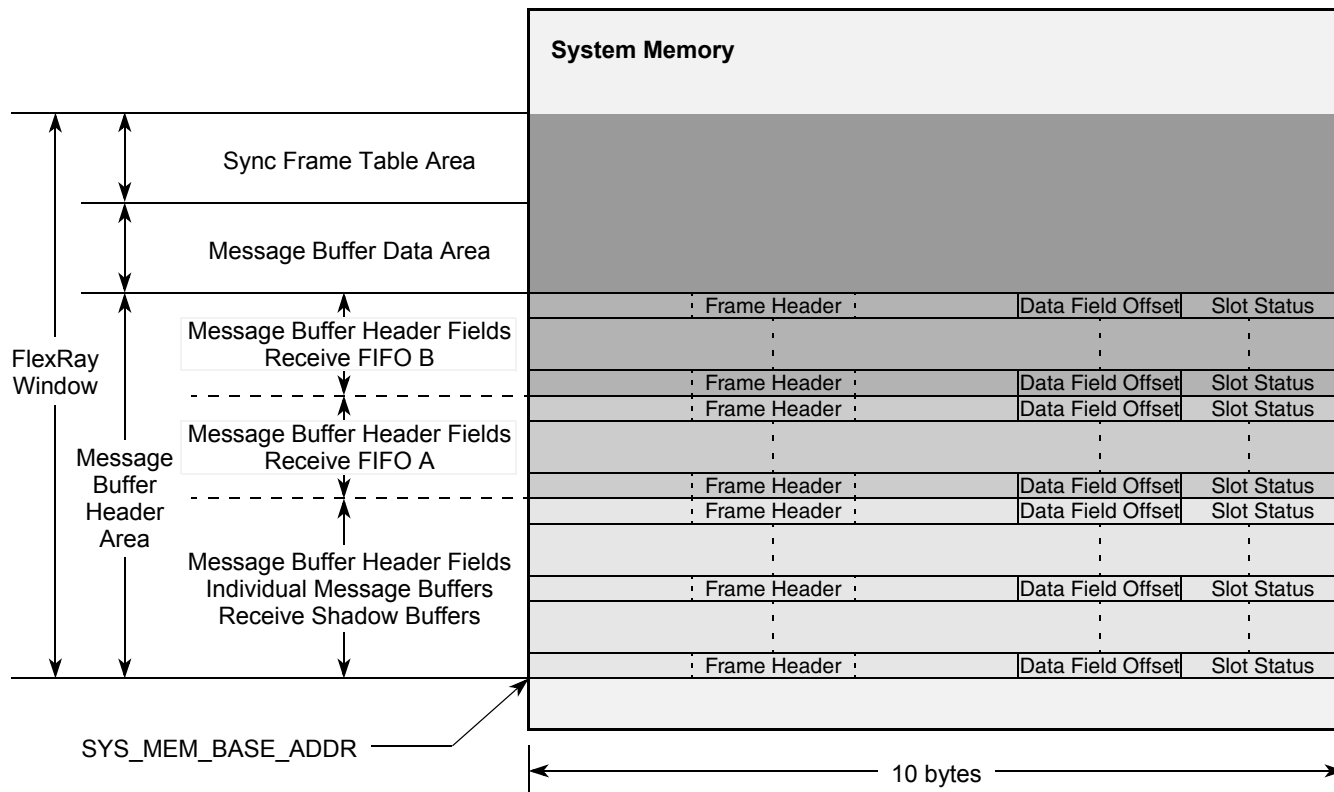


Figure 17-103. FlexRay Memory Partition Layout

17.4.4.1 Message Buffer Header Area

The message buffer header area contains all message buffer header fields of the physical message buffers for all message buffer types. The following rules apply to the message buffer header fields for the three type of message buffers.

1. The start address SADR_MBHF of each message buffer header field for individual message buffers and receive shadow buffers must fulfill Equation 17-6.

$$SADR_MBHF = (i * 10) + SYS_MEM_BASE_ADDR ; (0 \leq i \leq 255) \quad \text{Eqn. 17-6}$$

2. The start address SADR_MBHF of each message buffer header field for the receive FIFO must fulfill Equation 17-7.

$$SADR_MBHF = (i * 10) + SYS_MEM_BASE_ADDR ; (0 \leq i \leq 511) \quad \text{Eqn. 17-7}$$

3. The message buffer header fields for a receive FIFO have to be a contiguous area.

17.4.4.2 Message Buffer Data Area

The message buffer data area contains all the message buffer data fields of the physical message buffers. Each message buffer data field must start at a 16-bit boundary.

17.4.4.3 Sync Frame Table Area

The sync frame table area is used to provide a copy of the internal sync frame tables for software application access. Refer to [Section 17.4.12, “Sync Frame ID and Sync Frame Deviation Tables”](#) for the description of the sync frame table area.

17.4.5 Physical Message Buffer Description

This section provides a detailed description of the usage and the content of the two parts of a physical message buffer, the message buffer header field, and the message buffer data field.

17.4.5.1 Message Buffer Protection and Data Consistency

The physical message buffers are located in the FlexRay memory partition (FRM). The FlexRay module provides no means to protect the FlexRay memory partition from uncontrolled or illegal host or other client write access. To ensure data consistency of the physical message buffers, the software application must follow the write access scheme that is given in the description of each of the physical message buffer fields.

17.4.5.2 Message Buffer Header Field Description

This section provides a detailed description of the usage and content of the message buffer header field. A description of the structure of the message buffer header fields is given in [Section 17.4.2.1, “Message Buffer Header Field.”](#) Each message buffer header field consists of three sections: the frame header section, the data field offset, and the slot status section. For a detailed description of the Data Field Offset, see [Section 17.4.2.1.2, “Frame Data Offset.”](#)

17.4.5.2.1 Frame Header Section Description

Frame Header Section Content

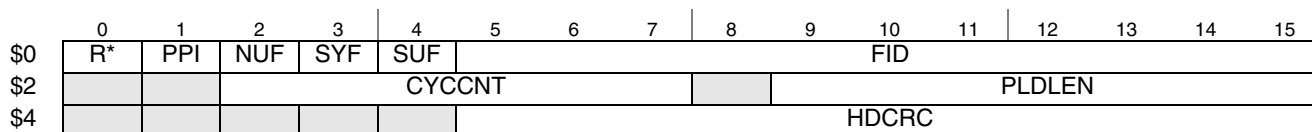
The semantic and content of the frame header section depends on the message buffer type.

For individual receive message buffers and receive FIFOs, the frame header receives the frame header data of the *first valid frame* received on the assigned channels. If a receive message buffer is assigned to both channels, the first valid frame received on either channel A or channel B is stored.

For receive shadow buffers, the frame header receives the frame header data of the current frame received, regardless of whether the frame is valid or not.

For single and double transmit message buffers, the software application writes the frame header of the frame to be transmitted into this location. The frame header will be read when the frame is transferred to the FlexRay bus.

The structure of the frame header in the message buffer header field is given in [Figure 17-104](#).



= Unimplemented or Reserved (write ignored)

Figure 17-104. Frame Header Structure

Frame Header Section Access

The frame header is located in the FlexRay memory partition (FRM). To ensure data consistency, the software application must follow the write access scheme described below.

For receive message buffers, receive shadow buffers, and receive FIFOs, the application must not write to the frame header field.

For transmit message buffers, software must follow the write access restrictions given in [Table 17-83](#). This table shows the condition under which the application can write to the frame header entries. In general, the software application can modify all frame header entries when the protocol is in the **POC:config** state or when the message buffer is disabled. For message buffers assigned to the dynamic segment, the application can modify all frame header entries except the frame ID when the message buffer is locked.

Table 17-83. Frame Header Write Access Constraints

Field	TX					
	Single Buffered		Double Buffered			
	Static Segment	Dynamic Segment	Static Segment		Dynamic Segment	
			Commit Side	Transmit Side	Commit Side	Transmit Side
FID	<i>POC:config</i> or MB_DIS					
R ¹ , PPI NUF, SYF SUF CYCCNT PLDLEN HDCRD	<i>POC:config</i> or MB_DIS	<i>POC:config</i> or MB_DIS or MB_LCK	<i>POC:config</i> or MB_DIS		<i>POC:config</i> or MB_DIS or MB_LCK	<i>POC:config</i> or MB_DIS

¹ For protocol compliant operation, this Reserved control bit must be set to 0 for transmit message buffers.

The frame header entries NUF, SYF, SUF, and CYCCNT are not used for frame transmission. These values are generated internally before frame transmission, depending on the current transmission state and configuration.

For transmit message buffers assigned to the static segment, the PLDLEN value must be equal to the value of the payload_length_static field in the [Protocol Configuration Register 19 \(FR_PCR19\)](#). If this is not fulfilled, the static payload length error flag SPL_EF in the [CHI Error Flag Register \(FR_CHIERFR\)](#) is set when the message buffer is under transmission. The PE generates a syntactically and semantically correct

frame with `payload_length_static` payload words and the payload length field in the frame header set to `payload_length_static`.

For transmit message buffers assigned to the dynamic segment, the `PLDLEN` value must be less than or equal to the value of the `max_payload_length_dynamic` field in the [Protocol Configuration Register 24 \(FR_PCR24\)](#). If this is not fulfilled, the dynamic payload length error flag `DPL_EF` in the [CHI Error Flag Register \(FR_CHIERFR\)](#) is set when the message buffer is under transmission. The PE generates a syntactically and semantically correct dynamic frame with `PLDLEN` payload words and the payload length field in the frame header set to `PLDLEN`.

Table 17-84. Frame Header Field Descriptions

Field	Description
R	<p>Reserved Bit — This bit corresponds to the Reserved bit in the FlexRay frame header.</p> <ul style="list-style-type: none"> For receive and FIFO message buffers, this is a status bit and represents the value of the Reserved bit in the frame received on the FlexRay bus in the corresponding slot. For transmit message buffers, this is a control bit. The FlexRay module transmits this within the frame header. <p>Note: For protocol compliant operation, this control bit must be set to 0 for transmit message buffers.</p>
PPI	<p>Payload Preamble Indicator — This bit corresponds to the <i>Payload Preamble Indicator</i> in the FlexRay frame header.</p> <ul style="list-style-type: none"> For receive and FIFO message buffers, this is a status bit and represents the value of the <i>Payload Preamble Indicator</i> of the first valid frame received on the FlexRay in the slot indicated by the <code>CYCCNT</code> field. For transmit message buffers, this is a control bit. The FlexRay module uses this value to set the <i>Payload Preamble Indicator</i> in the frame header of the frame to transmit. <p>0 No network management vector or message ID in frame payload data 1 Static Segment: Frame payload data contains network management vector Dynamic Segment: Frame payload data contains message ID</p>
NUF	<p>Null Frame Indicator — This bit corresponds to the <i>Null Frame Indicator</i> in the FlexRay frame header.</p> <ul style="list-style-type: none"> For receive message buffers and receive FIFOs, this is a status bit and represents the value of the <i>Null Frame Indicator</i> of the first valid frame received on the FlexRay bus in the slot indicated by the <code>CYCCNT</code> field. For transmit message buffers, the value of this bit is ignored. The FlexRay module determines internally whether a null frame or non-null frame must be transmitted and sets the <i>Null Frame Indicator</i> accordingly. <p>0 Null frame received 1 Normal frame received</p>
SYF	<p>Sync Frame Indicator — This bit corresponds to the <i>Sync Frame Indicator</i> in the FlexRay frame header.</p> <ul style="list-style-type: none"> For receive message buffers and receive FIFOs, this is a status bit and represents the value of the <i>Sync Frame Indicator</i> of the first valid frame received on the FlexRay bus in the slot indicated by the <code>CYCCNT</code> field. For transmit message buffers, the value of this bit is ignored. The FlexRay module determines internally whether a sync frame must be transmitted and sets the <i>Sync Frame Indicator</i> accordingly.
SUF	<p>Startup Frame Indicator — This bit corresponds to the <i>Startup Frame Indicator</i> in the FlexRay frame header.</p> <ul style="list-style-type: none"> For receive message buffers and receive FIFOs, this is a status bit and represents the value of the <i>Startup Frame Indicator</i> of the first valid frame received on the FlexRay bus in the slot indicated by the <code>CYCCNT</code> field. For transmit message buffers, the value of this bit is ignored. The FlexRay module determines internally whether a startup frame must be transmitted and sets the <i>Startup Frame Indicator</i> accordingly.
FID	<p>Frame ID</p> <ul style="list-style-type: none"> For receive message buffers and receive FIFOs, this field provides the value of the <i>Frame ID</i> field of the first valid frame received on the FlexRay bus in the slot indicated by the <code>CYCCNT</code> field. For transmit message buffers, this field provides the value that will be transmitted in the <i>Frame ID</i> field of the FlexRay frame. <p>Note: For transmit message buffers, the software application must program this field to the same value as in the corresponding Message Buffer Frame ID Registers (FR_MBFIDRn). If the FlexRay module detects a mismatch while transmitting the frame header, it will set the frame ID error flag <code>FID_EF</code> in the CHI Error Flag Register (FR_CHIERFR). The value of the FID field will be ignored and replaced by the value provided in the Message Buffer Frame ID Registers (FR_MBFIDRn).</p>

Table 17-84. Frame Header Field Descriptions (Continued)

Field	Description
CYCCNT	<p>Cycle Count</p> <ul style="list-style-type: none"> For receive message buffer and receive FIFOs, this field provides the number of the communication cycle in which the frame stored in this message buffer was received. For transmit message buffers, the value of this field is ignored. The FlexRay module will overwrite this value with the current cycle count value when it transmits the frame.
PLDLLEN	<p>Payload Length in 16-Bit Units</p> <ul style="list-style-type: none"> For receive message buffers and receive FIFOs, this field provides the value of the payload length field of the first valid frame received on the FlexRay bus in the slot indicated by the FID field. For transmit message buffers assigned to the static segment, this value is ignored for the frame generation. The FlexRay module uses the value in the FR_PCR19[payload_length_static] to set the value of the <i>Payload length</i> field in the transmitted frame. For transmit message buffers assigned to the dynamic segment, this value is used to set the value of the <i>Payload length</i> field in the transmitted frame. <p>Note: The value of this field is given in numbers of 16-bit units</p>
HDCRC	<p>Header CRC</p> <ul style="list-style-type: none"> For receive and FIFO message buffers, this field provides the value of the <i>Header CRC</i> of the received frame. For transmit message buffers, this field provides the <i>Header CRC</i> value as it was given by the software application. The FlexRay module transmits this value in the <i>Header CRC</i> field of the transmitted frame.

17.4.5.2.2 Data Field Offset Description

Data Field Offset Content

For a detailed description of the Data Field Offset, see [Section 17.4.2.1.2, “Frame Data Offset.”](#)

Data Field Offset Access

The application shall program the Data Field Offset when configuring the message buffers either in the `POC:config` state or when the message buffer is disabled.

17.4.5.2.3 Slot Status Description

The slot status is a read-only structure for the software application and a write-only structure for the FlexRay module. The semantic and content of the slot status in the message buffer header field depends on the message buffer type.

Receive Message Buffer and Receive FIFO Slot Status Description

This section describes the slot status structure for the individual receive message buffers and receive FIFOs. The content of the slot status structure for receive message buffers depends on the message buffer type and on the channel assignment for individual receive message buffers as given by [Table 17-85](#).

Table 17-85. Receive Message Buffer Slot Status Content

Receive Message Buffer Type	Slot Status Content
Individual Receive Message Buffer assigned to both channels (FR_MBCCSRn[CHA]=1 and FR_MBCCSRn[CHB]=1)	see Figure 17-105
Individual Receive Message Buffer assigned to channel A (FR_MBCCSRn[CHA]=1 and FR_MBCCSRn[CHB]=0)	see Figure 17-106
Individual Receive Message Buffer assigned to channel B (FR_MBCCSRn[CHA]=0 and FR_MBCCSRn[CHB]=1)	see Figure 17-107
Receive FIFO Channel A message buffer	see Figure 17-106
Receive FIFO Channel B message buffer	see Figure 17-107

The meaning of the bits in the slot status structure is explained in [Table 17-86](#).

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	VFB	SYB	NFB	SUB	SEB	CEB	BVB	CH	VFA	SYA	NFA	SUA	SEA	CEA	BVA	0
Reset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Figure 17-105. Receive Message Buffer Slot Status Structure (ChA and ChB)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	VFA	SYA	NFA	SUA	SEA	CEA	BVA	0
Reset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Figure 17-106. Receive Message Buffer Slot Status Structure (ChA)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	VFB	SYB	NFB	SUB	SEB	CEB	BVB	1	0	0	0	0	0	0	0	0
Reset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Figure 17-107. Receive Message Buffer Slot Status Structure (ChB)
Table 17-86. Receive Message Buffer Slot Status Field Descriptions

Field	Description
Common Message Buffer Status Bits	
0 VFB	Valid Frame on Channel B — protocol related variable: <i>vSS!ValidFrame</i> channel B 0 <i>vSS!ValidFrame</i> = 0 1 <i>vSS!ValidFrame</i> = 1
1 SYB	Sync Frame Indicator Channel B — protocol related variable: <i>vRF!Header!SyFIndicator</i> channel B 0 <i>vRF!Header!SyFIndicator</i> = 0 1 <i>vRF!Header!SyFIndicator</i> = 1
2 NFB	Null Frame Indicator Channel B — protocol related variable: <i>vRF!Header!NFIndicator</i> channel B 0 <i>vRF!Header!NFIndicator</i> = 0 1 <i>vRF!Header!NFIndicator</i> = 1
3 SUB	Startup Frame Indicator Channel B — protocol related variable: <i>vRF!Header!SuFIndicator</i> channel B 0 <i>vRF!Header!SuFIndicator</i> = 0 1 <i>vRF!Header!SuFIndicator</i> = 1

Table 17-86. Receive Message Buffer Slot Status Field Descriptions (Continued)

Field	Description
4 SEB	Syntax Error on Channel B — protocol related variable: <i>vSS!SyntaxError</i> channel B 0 <i>vSS!SyntaxError</i> = 0 1 <i>vSS!SyntaxError</i> = 1
5 CEB	Content Error on Channel B — protocol related variable: <i>vSS!ContentError</i> channel B 0 <i>vSS!ContentError</i> = 0 1 <i>vSS!ContentError</i> = 1
6 BVB	Boundary Violation on Channel B — protocol related variable: <i>vSS!BViolation</i> channel B 0 <i>vSS!BViolation</i> = 0 1 <i>vSS!BViolation</i> = 1
7 CH	Channel first valid received — This status bit indicates the channel that has received the <i>first valid</i> frame in the slot. 0 First valid frame received on channel A, or no valid frame received. 1 First valid frame on channel B Note: This flag is set to 0 if no valid frame was received at all.
8 VFA	Valid Frame on Channel A — protocol related variable: <i>vSS!ValidFrame</i> channel A 0 <i>vSS!ValidFrame</i> = 0 1 <i>vSS!ValidFrame</i> = 1
9 SYA	Sync Frame Indicator Channel A — protocol related variable: <i>vRF!Header!SyFIndicator</i> channel A 0 <i>vRF!Header!SyFIndicator</i> = 0 1 <i>vRF!Header!SyFIndicator</i> = 1
10 NFA	Null Frame Indicator Channel A — protocol related variable: <i>vRF!Header!NFIndicator</i> channel A 0 <i>vRF!Header!NFIndicator</i> = 0 1 <i>vRF!Header!NFIndicator</i> = 1
11 SUA	Startup Frame Indicator Channel A — protocol related variable: <i>vRF!Header!SuFIndicator</i> channel A 0 <i>vRF!Header!SuFIndicator</i> = 0 1 <i>vRF!Header!SuFIndicator</i> = 1
12 SEA	Syntax Error on Channel A — protocol related variable: <i>vSS!SyntaxError</i> channel A 0 <i>vSS!SyntaxError</i> = 0 1 <i>vSS!SyntaxError</i> = 1
13 CEA	Content Error on Channel A — protocol related variable: <i>vSS!ContentError</i> channel A 0 <i>vSS!ContentError</i> = 0 1 <i>vSS!ContentError</i> = 1
14 BVA	Boundary Violation on Channel A — protocol related variable: <i>vSS!BViolation</i> channel A 0 <i>vSS!BViolation</i> = 0 1 <i>vSS!BViolation</i> = 1

Transmit Message Buffer Slot Status Description

This section describes the slot status structure for transmit message buffers. Only the TCA and TCB status bits are directly related to the transmission process. All other status bits in this structure are related to a receive process that may have occurred. The content of the slot status structure for transmit message buffers depends on the channel assignment, as given by [Table 17-87](#).

Table 17-87. Transmit Message Buffer Slot Status Content

Receive Message Buffer Type	Slot Status Content
Individual Transmit Message Buffer assigned to both channels (FR_MBCCSRn[CHA]=1 and FR_MBCCSRn[CHB]=1)	see Figure 17-108
Individual Transmit Message Buffer assigned to channel A (FR_MBCCSRn[CHA]=1 and FR_MBCCSRn[CHB]=0)	see Figure 17-109
Individual Transmit Message Buffer assigned to channel B (FR_MBCCSRn[CHA]=0 and FR_MBCCSRn[CHB]=1)	see Figure 17-110

The meaning of the bits in the slot status structure is described in [Table 17-86](#).

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	VFB	SYB	NFB	SUB	SEB	CEB	BVB	TCB	VFA	SYA	NFA	SUA	SEA	CEA	BVA	TCA
Reset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Figure 17-108. Transmit Message Buffer Slot Status Structure (ChA & ChB)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	VFA	SYA	NFA	SUA	SEA	CEA	BVA	TCA
Reset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Figure 17-109. Transmit Message Buffer Slot Status Structure (ChA)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	VFB	SYB	NFB	SUB	SEB	CEB	BVB	TCB	0	0	0	0	0	0	0	0
Reset	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Figure 17-110. Transmit Message Buffer Slot Status Structure (ChB)
Table 17-88. Transmit Message Buffer Slot Status Structure Field Descriptions

Field	Description
0 VFB	Valid Frame on Channel B — protocol related variable: <i>vSS!ValidFrame</i> channel B 0 <i>vSS!ValidFrame</i> = 0 1 <i>vSS!ValidFrame</i> = 1
1 SYB	Sync Frame Indicator Channel B — protocol related variable: <i>vRF!Header!SyFIndicator</i> channel B 0 <i>vRF!Header!SyFIndicator</i> = 0 1 <i>vRF!Header!SyFIndicator</i> = 1
2 NFB	Null Frame Indicator Channel B — protocol related variable: <i>vRF!Header!NFIndicator</i> channel B 0 <i>vRF!Header!NFIndicator</i> = 0 1 <i>vRF!Header!NFIndicator</i> = 1
3 SUB	Startup Frame Indicator Channel B — protocol related variable: <i>vRF!Header!SuFIndicator</i> channel B 0 <i>vRF!Header!SuFIndicator</i> = 0 1 <i>vRF!Header!SuFIndicator</i> = 1
4 SEB	Syntax Error on Channel B — protocol related variable: <i>vSS!SyntaxError</i> channel B 0 <i>vSS!SyntaxError</i> = 0 1 <i>vSS!SyntaxError</i> = 1
5 CEB	Content Error on Channel B — protocol related variable: <i>vSS!ContentError</i> channel B 0 <i>vSS!ContentError</i> = 0 1 <i>vSS!ContentError</i> = 1

Table 17-88. Transmit Message Buffer Slot Status Structure Field Descriptions (Continued)

Field	Description
6 BVB	Boundary Violation on Channel B — protocol related variable: <i>vSS!BViolation</i> channel B 0 <i>vSS!BViolation</i> = 0 1 <i>vSS!BViolation</i> = 1
7 TCB	Transmission Conflict on Channel B — protocol related variable: <i>vSS!TxConflict</i> channel B 0 <i>vSS!TxConflict</i> = 0 1 <i>vSS!TxConflict</i> = 1
8 VFA	Valid Frame on Channel A — protocol related variable: <i>vSS!ValidFrame</i> channel A 0 <i>vSS!ValidFrame</i> = 0 1 <i>vSS!ValidFrame</i> = 1
9 SYA	Sync Frame Indicator Channel A — protocol related variable: <i>vRF!Header!SyFIndicator</i> channel A 0 <i>vRF!Header!SyFIndicator</i> = 0 1 <i>vRF!Header!SyFIndicator</i> = 1
10 NFA	Null Frame Indicator Channel A — protocol related variable: <i>vRF!Header!NFIndicator</i> channel A 0 <i>vRF!Header!NFIndicator</i> = 0 1 <i>vRF!Header!NFIndicator</i> = 1
11 SUA	Startup Frame Indicator Channel A — protocol related variable: <i>vRF!Header!SuFIndicator</i> channel A 0 <i>vRF!Header!SuFIndicator</i> = 0 1 <i>vRF!Header!SuFIndicator</i> = 1
12 SEA	Syntax Error on Channel A — protocol related variable: <i>vSS!SyntaxError</i> channel A 0 <i>vSS!SyntaxError</i> = 0 1 <i>vSS!SyntaxError</i> = 1
13 CEA	Content Error on Channel A — protocol related variable: <i>vSS!ContentError</i> channel A 0 <i>vSS!ContentError</i> = 0 1 <i>vSS!ContentError</i> = 1
14 BVA	Boundary Violation on Channel A — protocol related variable: <i>vSS!BViolation</i> channel A 0 <i>vSS!BViolation</i> = 0 1 <i>vSS!BViolation</i> = 1
15 TCA	Transmission Conflict on Channel A — protocol related variable: <i>vSS!TxConflict</i> channel A 0 <i>vSS!TxConflict</i> = 0 1 <i>vSS!TxConflict</i> = 1

17.4.5.3 Message Buffer Data Field Description

The message buffer data field is used to store the frame payload data, or a part of it, of the frame to be transmitted to or received from the FlexRay bus. The minimum required length of this field depends on the message buffer type that the physical message buffer is assigned to and is given in [Table 17-89](#). The structure of the message buffer data field is given in [Figure 17-111](#).

Table 17-89. Message Buffer Data Field Minimum Length

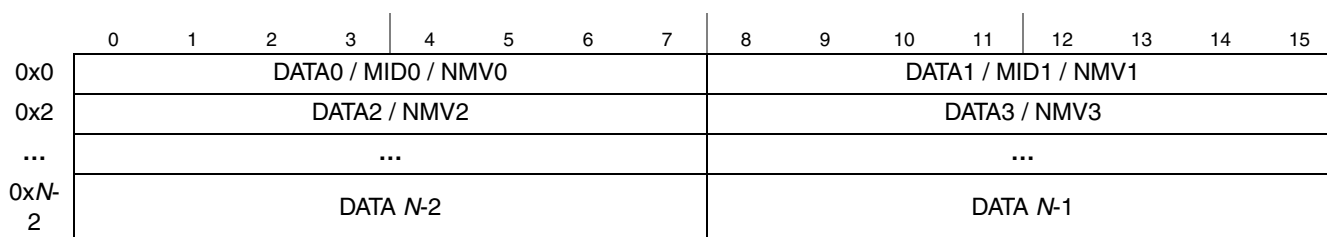
Physical Message Buffer Assigned To	Minimum Length Defined By
Individual Message Buffer in Segment 1	FR_MBDSR[MBSEG1DS]
Receive Shadow Buffer in Segment 1	FR_MBDSR[MBSEG1DS]
Individual Message Buffer in Segment 2	FR_MBDSR[MBSEG2DS]
Receive Shadow Buffer in Segment 2	FR_MBDSR[MBSEG2DS]

Table 17-89. Message Buffer Data Field Minimum Length

Physical Message Buffer Assigned To	Minimum Length Defined By
Receive FIFO for channel A	FR_RFDSR[ENTRY_SIZE](FR_RFSR.SEL = 0)
Receive FIFO for channel B	FR_RFDSR[ENTRY_SIZE](FR_RFSR.SEL = 1)

NOTE

The FlexRay module will not access any locations outside the message buffer data field boundaries given by [Table 17-89](#).


Figure 17-111. Message Buffer Data Field Structure

The message buffer data field is located in the FlexRay memory partition, so the FlexRay module has no means to control software application write access to the field. To ensure data consistency, the application must follow a write access scheme.

17.4.5.3.1 Message Buffer Data Field Read Access

For transmit message buffers, the FlexRay module will not modify the content of the message buffer data field. Thus the software application can read back the data at any time without any impact on data consistency.

For receive message buffers, the application must lock the related receive message buffer and retrieve the message buffer header index from the [Message Buffer Index Registers \(FR_MBIDXn\)](#). While the message buffer is locked, the FlexRay module will not update the message buffer data field.

For receive FIFOs, software can read the message buffer indicated by the [Receive FIFO A Read Index Register \(FR_RFARIR\)](#) or the [Receive FIFO B Read Index Register \(FR_RFBRIR\)](#) when the related receive FIFO non-empty interrupt flag FNEAIF or FNEBIF is set in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#). While the non-empty interrupt flag is set, the FlexRay module will not update the message buffer data field related to message buffer indicated by [Receive FIFO A Read Index Register \(FR_RFARIR\)](#) or the [Receive FIFO B Read Index Register \(FR_RFBRIR\)](#).

17.4.5.3.2 Message Buffer Data Field Write Access

For receive message buffers, receive shadow buffers, and receive FIFOs, the software application must not write to the message buffer data field.

For transmit message buffers, the application must follow the write access restrictions given in [Table 17-92](#).

Table 17-90. Frame Data Write Access Constraints

Field	Single Buffered	Double Buffered	
		Commit Side	Transmit Side
DATA, MID, NMV	<i>POC:config</i> or MB_DIS or MB_LCK	<i>POC:config</i> or MB_DIS or MB_LCK	<i>POC:config</i> or MB_DIS

Table 17-91. Frame Data Field Descriptions

Field	Description
DATA[0:N-1]	Message Data — For receive message buffer and receive FIFOs, this field provides the message data received for this message buffer. For transmit message buffers, the field provides the message data to be transmitted.
MID[0:1]	Message Identifier — If the payload preamble bit PPI is set in the message buffer frame header, the MID field holds the message ID of a dynamic frame located in the message buffer. The receive FIFO filter uses the received message ID for message ID filtering.
NMV[0:11]	Network Management Vector — If the payload preamble bit PPI is set in the message buffer frame header, the network management vector field holds the network management vector of a static frame located in the message buffer. Note: The MID and NMV bytes replace the corresponding DATA bytes.

17.4.6 Individual Message Buffer Functional Description

The FlexRay module provides three basic types of individual message buffers:

1. Single transmit message buffers
2. Double transmit message buffers
3. Receive message buffers

Before an individual message buffer can be used, it must be configured by the software application. After the initial configuration, the message buffer can be reconfigured later. The set of the configuration data for individual message buffers is given in [Section 17.4.3.4.1, “Individual Message Buffer Configuration Data.”](#)

17.4.6.1 Individual Message Buffer Configuration

The individual message buffer configuration consists of two steps. The first step is to allocate the required amount of memory for the FlexRay memory partition. The second step is to program the message buffer configuration registers, which is described in this section.

17.4.6.1.1 Common Configuration Data

One part of the message buffer configuration data is common to all individual message buffers and the receive shadow buffers. These data can only be set when the protocol is in the *POC:config* state.

The software application configures the number of utilized individual message buffers by writing the message buffer number of the last utilized message buffer into the LAST_MB_UTIL field in the [Message Buffer Segment Size and Utilization Register \(FR_MBSSUTR\)](#).

The application configures the size of the two segments of individual message buffers by writing the message buffer number of the last message buffer in the first segment into the LAST_MB_SEG1 field in the [Message Buffer Segment Size and Utilization Register \(FR_MBSSUTR\)](#)

Software configures the length of the message buffer data fields for both of the message buffer segments by writing to the MBSEG2DS and MBSEG1DS fields in the [Message Buffer Data Size Register \(FR_MBDSR\)](#).

Depending on the current receive functionality of the FlexRay module, the software application must configure the receive shadow buffers. For each segment and for each channel with at least one individual receive message buffer assigned, the application must configure the related receive shadow buffer using the [Receive Shadow Buffer Index Register \(FR_RSIBIR\)](#).

17.4.6.1.2 Specific Configuration Data

The second part of the message buffer configuration data is specific for each message buffer.

These data can be changed only when either:

- Protocol is in the [POC:config](#) state
- Message buffer is disabled, i.e. [FR_MBCCSRn]EDS = 0

The type of individual message buffer is defined by the MTD and MBT bits in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#) as given in [Table 17-92](#).

Table 17-92. Individual Message Buffer Types

FR_MBCCSR n		Description
FR_MBCCSR[MTD]	FR_MBCCSR[MBT]	
0	0	Receive Message Buffer
0	1	Reserved
1	0	Single Transmit Message Buffer
1	1	Double Transmit Message Buffer

Message buffer specific configuration data consists of:

1. MCM, MBT, MTD bits in [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#)
2. All fields and bits in [Message Buffer Cycle Counter Filter Registers \(FR_MBCCFRn\)](#)
3. All fields and bits in [Message Buffer Frame ID Registers \(FR_MBFIDRn\)](#)
4. All fields and bits in [Message Buffer Index Registers \(FR_MBIDXRn\)](#)

The meaning of the specific configuration data depends on the message buffer type, as given in the detailed message buffer type descriptions [Section 17.4.6.2, “Single Transmit Message Buffers,”](#) [Section 17.4.6.3, “Receive Message Buffers,”](#) and [Section 17.4.6.4, “Double Transmit Message Buffer.”](#)

17.4.6.2 Single Transmit Message Buffers

The section provides a detailed description of the functionality of the single-buffered transmit message buffers.

A single transmit message buffer is used by the software application to provide message data to the FlexRay module that will be transmitted over the FlexRay bus. The FlexRay module uses the message buffer to provide information about the transmission process and status information about the slot in which message data was transmitted.

An individual message buffer with message buffer number n is configured to be a single transmit message buffer by these settings:

- FR_MBCCSRn[MBT] = 0 (single-buffered message buffer)
- FR_MBCCSRn[MTD] = 1 (transmit message buffer)

17.4.6.2.1 Access Regions

For certain message buffer fields, both the software application and the FlexRay module have access. To ensure data consistency, a message buffer locking scheme is implemented, which is used to control the access to the data, control, and status bits of a message buffer. The access regions for single transmit message buffers are depicted in Figure 17-112. A description of the regions is given in Table 17-93.

If a region is active as indicated in Table 17-94, the access scheme given for that region applies to the message buffer.

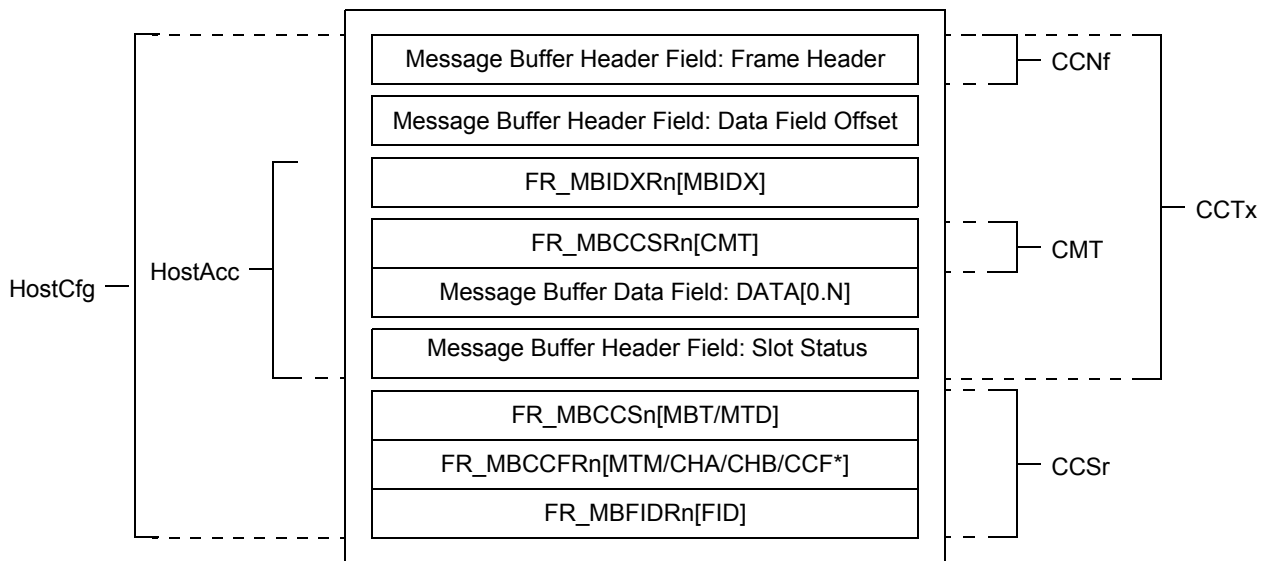


Figure 17-112. Single Transmit Message Buffer Access Regions

Table 17-93. Single Transmit Message Buffer Access Regions Description

Access		Description
Region	Type	
Cfg	host-write	Message Buffer Configuration
Msg	host-r/w	Message Data and Slot Status Access
Nf	module-read	Message Header Access for Null Frame Transmission
Tx	module-r/w	Message Transmission and Slot Status Update

Table 17-93. Single Transmit Message Buffer Access Regions Description (Continued)

Access		Description
Region	Type	
Cm	module-read	Message Buffer Validation
Sr	module-read	Message Buffer Search

The trigger bits FR_MBCCSRn[EDT] and FR_MBCCSRn[LCKT], and the interrupt enable bit FR_MBCCSRn[MBIE] are not under access control and can be accessed from the software application at any time.

The status bits FR_MBCCSRn[EDS] and FR_MBCCSRn[LCKS] are not under access control and can be accessed from the FlexRay module at any time.

The interrupt flag FR_MBCCSnR[MBIF] is not under access control and can be accessed from the software application and the FlexRay module at any time. FlexRay module set access has higher priority.

The FlexRay module restricts its access to the regions depending on the current state of the message buffer. The application must adhere to these restrictions in order to ensure data consistency. The transmit message buffer states are given in Figure 17-113. A description of the states is given in Table 17-94, which also provides the access scheme for the access regions.

The status bits FR_MBCCSRn[EDS] and FR_MBCCSRn[LCKS] provide the application with the required status information. The internal status information is not visible to the software application.

17.4.6.2.2 Message Buffer States

This section describes the transmit message buffer states and provides a state diagram.

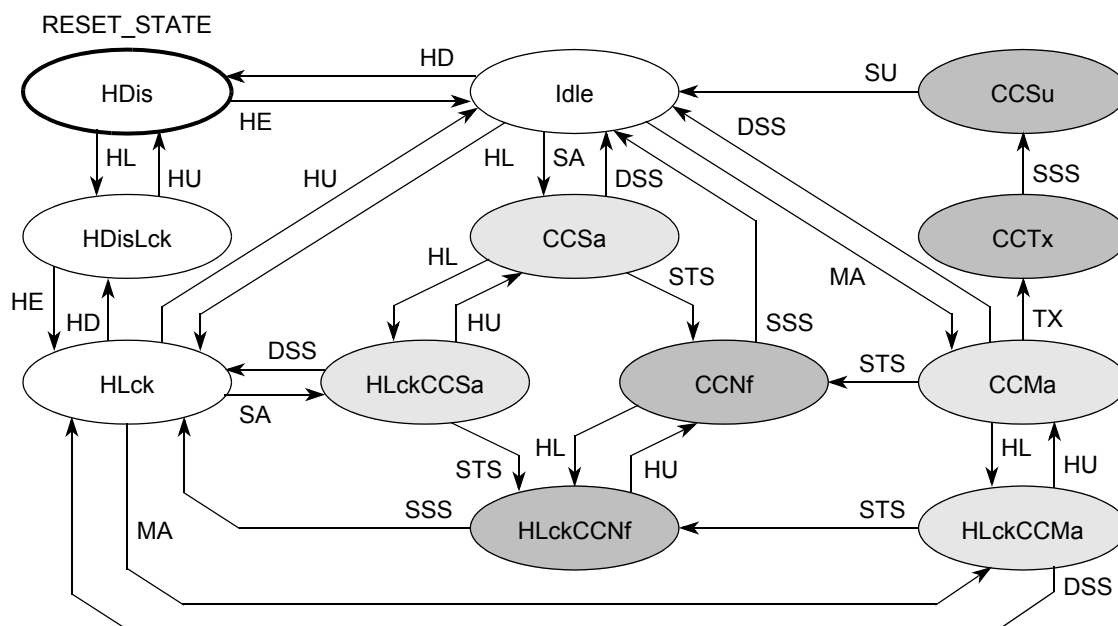


Figure 17-113. Single Transmit Message Buffer States

Table 17-94. Single Transmit Message Buffer State Description

State	FR_MBCCSRn		Access Region		Description
	EDS	LCKS	Appl.	Module	
Idle	1	0	–	CM, SR	Idle - Message Buffer is idle. Included in message buffer search.
HDis	0	0	CFG	–	Disabled - Message Buffer under configuration. Excluded from message buffer search.
HDisLck	0	1	CFG	–	Disabled and Locked - Message Buffer under configuration. Excluded from message buffer search.
HLck	1	1	MSG	SR	Locked - Applications access to data, control, and status. Included in message buffer search.
CCSa	1	0	–	–	Slot Assigned - Message buffer assigned to next static slot. Ready for Null Frame transmission.
HLckCCSa	1	1	MSG	–	Locked and Slot Assigned - Applications access to data, control, and status. Message buffer assigned to next static slot
CCNf	1	0	–	NF	Null Frame Transmission Header is used for null frame transmission.
HLckCCNf	1	1	MSG	NF	Locked and Null Frame Transmission - Applications access to data, control, and status. Header is used for null frame transmission.
CCMa	1	0	–	CM	Message Available - Message buffer is assigned to next slot and cycle counter filter matches.
HLckCCMa	1	1	MSG	–	Locked and Message Available - Applications access to data, control, and status. Message buffer is assigned to next slot and cycle counter filter matches.
CCTx	1	0	–	TX	Message Transmission - Message buffer data transmit. Payload data from buffer transmitted
CCSu	1	0	–	TX	Status Update - Message buffer status update. Update of status flags, the slot status field, and the header index.

17.4.6.2.3 Message Buffer Transitions

Application Transitions

The application transitions can be triggered by the software application using the commands described in [Table 17-95](#). Software issues the commands by writing to the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#). Only one command can be issued with one write access. Each command is executed immediately. If the command is ignored, it must be issued again.

The enable and disable commands are issued by writing 1 to the trigger bit $FR_MBCCSRn[EDT]$. The transition that will be triggered by each of these commands depends on the current value of the status bit $FR_MBCCSRn[EDS]$. If the command triggers the disable transition HD, and the message buffer is in one of the states CCSa, HLckCCSa, CCMa, HLckCCMa, CCNf, HLckCCNf, or CCTx, the disable transition has no effect (command is ignored) and the message buffer state is not changed. No notification is given to the software application.

The lock and unlock commands are issued by writing 1 to the trigger bit $FR_MBCCSRn[LCKT]$. The transition that will be triggered by each of these commands depends on the current value of the status bit $FR_MBCCSRn[LCKS]$. If the command triggers the lock transition HL, and the message buffer is in the state CCTx, the lock transition has no effect (command is ignored) and the message buffer state is not

changed. In this case, the message buffer lock error flag LCK_EF in the [CHI Error Flag Register \(FR_CHIERFR\)](#) is set.

Table 17-95. Single Transmit Message Buffer Software Application Transitions

Transition	Command	Condition	Description
HE	FR_MBCCSRn[EDT]:= 1	FR_MBCCSRn[EDS] = 0	Application triggers message buffer enable.
HD		FR_MBCCSRn[EDS] = 1	Application triggers message buffer disable.
HL	FR_MBCCSRn[LCKT]:= 1	FR_MBCCSRn[LCKS] = 0	Application triggers message buffer lock.
HU		FR_MBCCSRn[LCKS] = 1	Application triggers message buffer unlock.

Module Transitions

The module transitions that can be triggered by the FlexRay module are described in [Table 17-96](#). Each transition will be triggered for certain message buffers when the related condition is fulfilled.

Table 17-96. Single Transmit Message Buffer Module Transitions

Transition	Condition	Description
SA	slot match and static slot	Slot Assigned - Message buffer is assigned to next static slot.
MA	slot match and CycleCounter match	Message Available - Message buffer is assigned to next slot and cycle counter filter matches.
TX	slot start and FR_MBCCSRn[CMT] = 1	Transmission Slot Start - Slot Start and commit bit CMT is set. In case of a dynamic slot, <i>pLatestTx</i> is not exceeded.
SU	status updated	Status Updated - Slot Status field and message buffer status flags updated. Interrupt flag set.
STS	static slot start	Static Slot Start - Start of static slot.
DSS	dynamic slot start or symbol window start or NIT start	Dynamic Slot or Segment Start . - Start of dynamic slot or symbol window or NIT.
SSS	slot start or symbol window start or NIT start	Slot or Segment Start - Start of static slot or dynamic slot or symbol window or NIT.

Transition Priorities

The software application can trigger only one transition at a time. There is no need to specify priorities among them.

As shown in the first part of [Table 17-97](#), the module transitions have a higher priority than the application transitions. For all states except the CCMA state, both a lock/unlock transition HL/HD and a module transition can be executed at the same time. The result state is reached by first applying the software application transition and subsequently the module transition to the intermediately reached state. For example, if the message buffer is in the HLck state, the application unlocks the message buffer by the HU transition and the module triggers the slot assigned transition SA. The intermediate state is Idle and the resulting state is CCSa.

The priorities among the module transitions is given in the second part of [Table 17-97](#).

Table 17-97. Single Transmit Message Buffer Transition Priorities

State	Priorities	Description
Module vs. Software Application		
Idle, HLck	SA > HD MA > HD	Slot Assigned > Message Buffer Disable Message Available > Message Buffer Disable
CCMa	TX > HL	Transmission Start > Message Buffer Lock
Module Internal		
Idle, HLck	MA > SA	Message Available > Slot Assigned
CCMa	TX > STS TX > DSS	Transmission Slot Start > Static Slot Start Transmission Slot Start > Dynamic Slot Start

17.4.6.2.4 Transmit Message Setup

To transmit a message over the FlexRay bus, the software application writes the message data into the message buffer data field and sets the commit bit CMT in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#). The physical access to the message buffer data field is described in [Section 17.4.3.1, “Individual Message Buffers.”](#)

As indicated by [Table 17-94](#), the application shall write to the message buffer data field and change the commit bit CMT only if the transmit message buffer is in one of the states HDis, HDisLck, HLck, HLckCCSa, HLckCCMa, or HLckCCMa. A message buffer can be identified for message transmission only if it is the Idle state. Software can change the state of a message buffer if it issues the appropriate commands given in [Table 17-95](#). The state change is indicated through the FR_MBCCSRn[EDS] and FR_MBCCSRn[LCKS] status bits.

If the transmit message buffer enters one of the states HDis, HDisLck, HLck, HLckCCSa, HLckCCMa, or HLckCCMa the FR_MBCCSRn[DVAL] flag is negated.

17.4.6.2.5 Message Transmission

As a result of the message buffer search described in [Section 17.4.19, “Interrupt Support,”](#) the FlexRay module triggers the message available transition MA for up to two transmit message buffers. This changes the message buffer state from Idle to CCMa and the message buffers can be used for message transmission in the next slot.

The FlexRay module transmits a message from a message buffer if both of the following two conditions are fulfilled at the start of the transmission slot:

1. The message buffer is in the message available state CCMa.
2. The message data is still valid, i.e. FR_MBCCSRn[CMT] = 1.

In this case, the FlexRay module triggers the TX transition and changes the message buffer state to CCTx. A transmit message buffer timing and state change diagram for message transmission is given in [Figure 17-114](#). In this example, the message buffer with message buffer number n is Idle at the start of the search slot, matches the slot and cycle number of the next slot, and message buffer data is valid, i.e. FR_MBCCSRn[CMT] = 1.

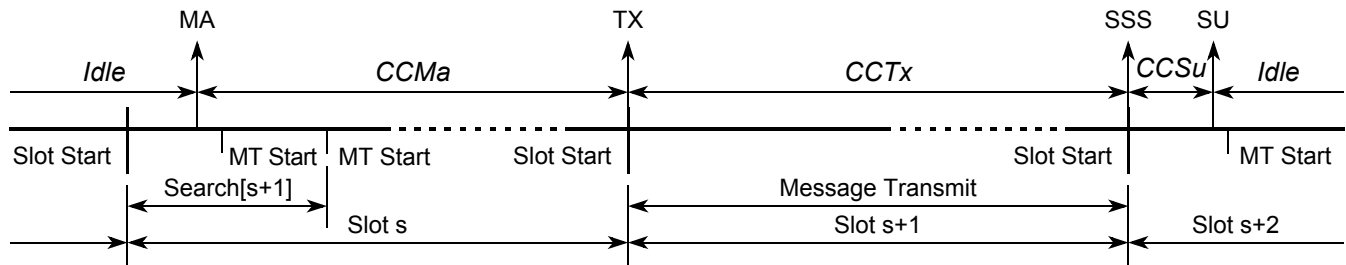


Figure 17-114. Message Transmission Timing

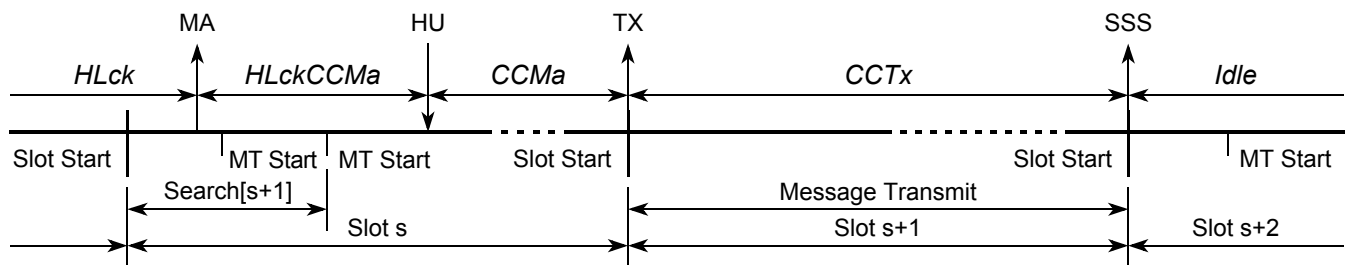


Figure 17-115. Message Transmission from HLck State with Unlock

The amount of message data read from the FRM and transferred to the FlexRay bus is determined by the these three items:

1. The message buffer segment that the message buffer is assigned to, as defined by the [Message Buffer Segment Size and Utilization Register \(FR_MBSSUTR\)](#)
2. The message buffer data field size, as defined by the related field of the [Message Buffer Data Size Register \(FR_MBDSR\)](#)
3. The value of the PLDLEN field in the message buffer header field, as described in [Section 17.4.5.2.1, “Frame Header Section Description”](#)

If a message buffer is assigned to message buffer segment 1, and $PLDLEN > MBSEG1DS$, then $2 * MBSEG1DS$ bytes will be read from the message buffer data field and zero padding is used for the remaining bytes for the FlexRay bus transfer. If $PLDLEN \leq MBSEG1DS$, the FlexRay module reads and transfers $2 * PLDLEN$ bytes. The same holds for segment 2 and $MBSEG2DS$.

17.4.6.2.6 Null Frame Transmission

A static slot with slot number S is assigned to the FlexRay module for channel A , if at least one transmit message buffer is configured with the $FR_MBFIDR_n[FID]$ set to S and $FR_MBCCFR_n[CHA]$ set to 1. A null frame is transmitted in the static slot S on channel A , if this slot is assigned to the FlexRay module for channel A , and all transmit message buffers with $FR_MBFIDR_n[FID] = s$ and $FR_MBCCFR_n[CHA] = 1$ are either not committed ($FR_MBCCSR_n[CMT] = 0$) or locked by the application ($FR_MBCCSR_n[LCKS] = 1$). Otherwise, the cycle counter filter is enabled and does not match.

Additionally, the software application can clear the commit bit of a message buffer that is in the CCMA state, which is called uncommit or transmit abort. This message buffer will be used for null frame transmission.

As a result of the message buffer search described in Section 17.4.19, “Interrupt Support,” the FlexRay module triggers the slot assigned transition SA for up to two transmit message buffers if at least one of the conditions mentioned above is fulfilled for these message buffers. The transition SA changes the message buffer states from either Idle to CCSa or from HLck to HLckCCSa. In each case, these message buffers will be used for null frame transmission in the next slot. A message buffer timing and state change diagram for null frame transmission from Idle state is given in Figure 17-116.

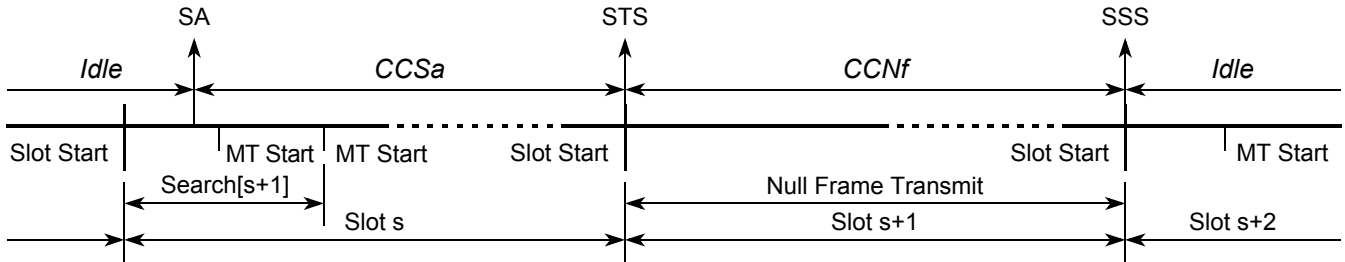


Figure 17-116. Null Frame Transmission from Idle State

A message buffer timing and state change diagram for null frame transmission from HLck state is given in Figure 17-117.

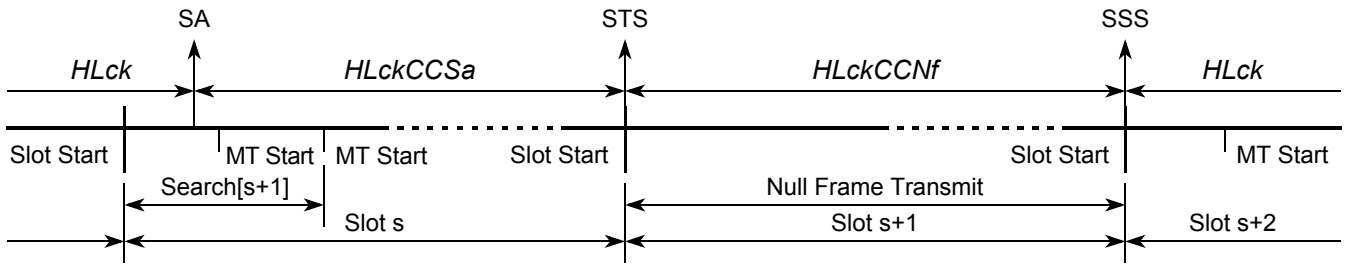


Figure 17-117. Null Frame Transmission from HLck State

If a transmit message buffer is in the CCSa or HLckCCSa state at the start of the transmission slot, a null frame is transmitted in any case, even if the message buffer is unlocked or committed before the transmission slot starts. A transmit message buffer timing and state change diagram for null frame transmission for this case is given in Figure 17-118.

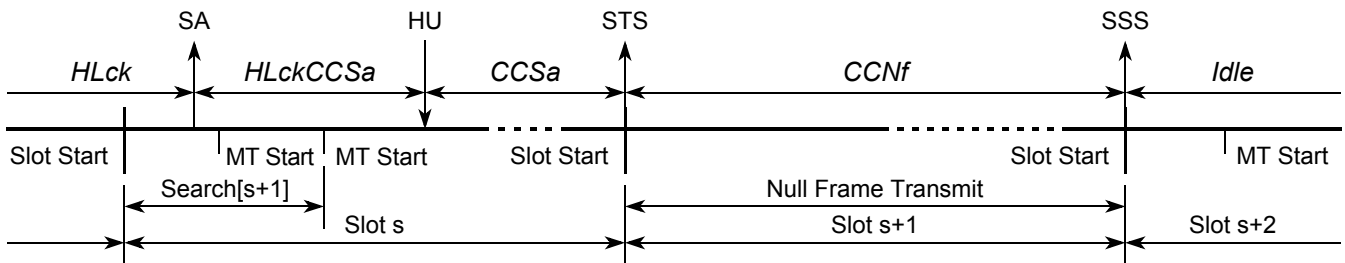


Figure 17-118. Null Frame Transmission from HLck State with Unlock

Because the null frame transmission will not use the message buffer data, the application can lock/unlock the message buffer during null frame transmission. A transmit message buffer timing and state change diagram for null frame transmission for this case is given in [Figure 17-119](#).

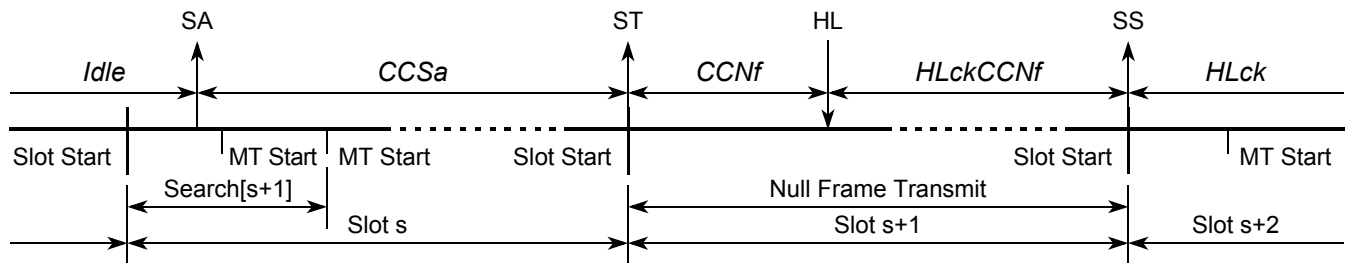


Figure 17-119. Null Frame Transmission with Locking

17.4.6.2.7 Message Buffer Status Update

After the end of each slot, the PE generates the slot status vector. Depending on this status, the transmitted frame type, and the amount of transmitted data, the message buffer status is updated.

Message Buffer Status Update after Complete Message Transmission

The term ‘complete message transmission’ refers to the fact that all payload data stored in the message buffer is sent to the FlexRay bus. In this case, the FlexRay module updates the slot status field of the message buffer and triggers the status updated transition SU. With the SU transition, the FlexRay module sets the message buffer interrupt flag `FR_MBCCS[MBIF]` to indicate the successful message transmission.

Depending on the transmission mode flag `FR_MBCCFRn[MTM]`, the FlexRay module changes the commit flag `FR_MBCCSRn[CMT]` and the valid flag `FR_MBCCSRn[DVAL]`. If the `FR_MBCCFRn[MTM]` flag is negated, the message buffer is in event transmission mode. In this case, each committed message is transmitted only once. The commit flag `FR_MBCCSRn[CMT]` is cleared with the SU transition. If the `FR_MBCCFRn[MTM]` flag is asserted, the message buffer is in state transmission mode. In this case, each committed message is transmitted as long as the software application provides new data or locks the message buffers. The FlexRay module will not clear the `FR_MBCCSRn[CMT]` flag at the end of transmission and will set the valid flag `FR_MBCCSRn[DVAL]` to indicate that the message will be transmitted again.

Message Buffer Status Update after Incomplete Message Transmission

The term ‘incomplete message transmission’ refers to the fact that not all payload data that should be transmitted is sent to the FlexRay bus. This may be caused by the following regular conditions in the dynamic segment:

1. The transmission slot starts in a minislot with a minislot number greater than `pLatestTx`.
2. The transmission slot did not exist in the dynamic segment at all.

Additionally, an incomplete message transmission can be caused by internal communication errors. If those errors occur, the protocol engine communication failure interrupt flag `PECF_IF` is set in the [Protocol Interrupt Flag Register 1 \(FR_PIFR1\)](#).

In any of these two cases, the status of the message buffer is not changed at all with the SU transition. The slot status field is not updated, the status and control flags are not changed, and the interrupt flag is not set.

Message Buffer Status Update after Null Frame Transmission

After the transmission of a null frame, the status of the message buffer that was used for the null frame transmission is not changed at all. The slot status field is not updated, the status and control flags are not changed, and the interrupt flag is not set.

17.4.6.3 Receive Message Buffers

The section provides a detailed description of the functionality of the receive message buffers.

A receive message buffer receives a message from the FlexRay bus based on individual filter criteria. The FlexRay module uses the receive message buffer to provide the following data to the software application:

1. Message data received
2. Information about the reception process
3. Status information about the slot in which the message was received

An individual message buffer with message buffer number n is configured as a receive message buffer by the following configuration settings:

- $FR_MBCCSR_n[MBT] = 0$ (single-buffered message buffer)
- $FR_MBCSR_n[MTD] = 0$ (receive message buffer)

To certain message buffer fields, both the software application and the FlexRay module have access. To ensure data consistency, a message buffer locking scheme is implemented that is used to control the access to the data, control, and status bits of a message buffer. The access regions for receive message buffers are depicted in Figure 17-120. A description of the regions is given in Table 17-98. If an region is active as indicated in Table 17-99, the access scheme given for that region applies to the message buffer.

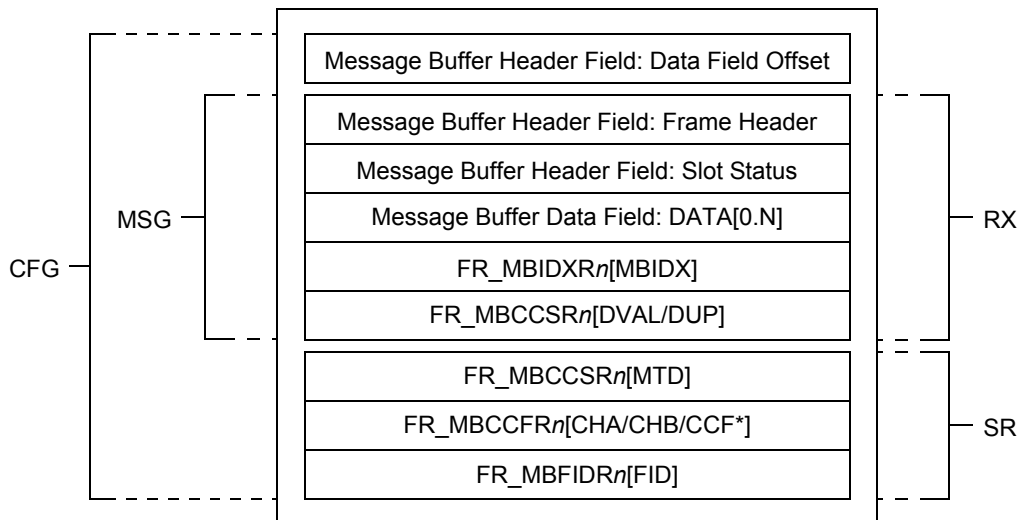


Figure 17-120. Receive Message Buffer Access Regions

Table 17-98. Receive Message Buffer Access Region Description


Region	Access from		Region used for
	Software Application	Module	
CFG	read/write	-	Message Buffer Configuration, Message Data and Status Access
MSG	read/write	-	Message Data, Header, and Status Access
RX	-	write-only	Message Reception and Status Update
SR	-	read-only	Message Buffer Search Data

The trigger bits $FR_MBCCSRn[EDT]$ and $FR_MBCCSRn[LCKT]$ and the interrupt enable bit $FR_MBCCSRn[MBIE]$ are not under access control and can be accessed from the software application at any time. The status bits $FR_MBCCSRn[EDS]$ and $FR_MBCCSRn[LCKS]$ are not under access control and can be accessed from the FlexRay module at any time.

The interrupt flag $FR_MBCCSRn[MBIF]$ is not under access control and can be accessed from the application and the FlexRay module at any time. FlexRay module set access has higher priority.

The FlexRay module restricts its access to the regions depending on the current state of the message buffer. The software application must adhere to these restrictions in order to ensure data consistency. The receive message buffer states are given in [Figure 17-121](#). A description of the message buffer states is given in [Table 17-94](#), which also provides the access scheme for the access regions.

The status bits $FR_MBCCSRn[EDS]$ and $FR_MBCCSRn[LCKS]$ provide the application with the required status information. The internal status information is not visible to the application.

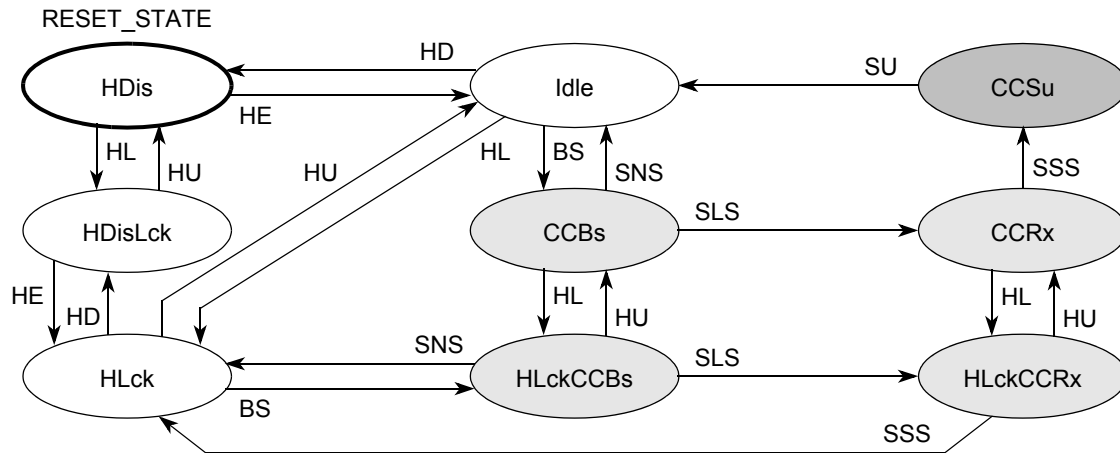
Figure 17-121. Receive Message Buffer States
Table 17-99. Receive Message Buffer States and Access

State	FR_MBCCSRn		Access from		Description
	EDS	LCKS	Appl.	Module	
Idle	1	0	-	SR	Idle - Message Buffer is idle. Included in message buffer search.
HDis	0	0	CFG	-	Disabled - Message Buffer under configuration. Excluded from message buffer search.

Table 17-99. Receive Message Buffer States and Access (Continued)

State	FR_MBCCSRn		Access from		Description
	EDS	LCKS	Appl.	Module	
HDisLck	0	1	CFG	–	Disabled and Locked - Message Buffer under configuration. Excluded from message buffer search.
HLck	1	1	MSG	–	Locked - Applications access to data, control, and status. Included in message buffer search.
CCBs	1	0	–	–	Buffer Subscribed - Message buffer subscribed for reception. Filter matches next (slot, cycle, channel) tuple.
HLckCCBs	1	1	MSG	–	Locked and Buffer Subscribed - Applications access to data, control, and status. Message buffer subscribed for reception.
CCRx	1	0	–	RX	Message Receive Message data received into related shadow buffer.
CCSu	1	0	–	RX	Status Update - Message buffer status update. Update of status flags, the slot status field, and the header index.

17.4.6.3.1 Message Buffer Transitions

Application Transitions

The application transitions that can be triggered by the software application using the commands described in [Table 17-100](#). The application issues the commands by writing to the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#). Only one command can be issued with one write access. Each command is executed immediately. If the command is ignored, it must be issued again.

The enable and disable commands issued by writing 1 to the trigger bit $FR_MBCCSRn[EDT]$. The transition that will be triggered by each of these command depends on the current value of the status bit $FR_MBCCSRn[EDS]$. If the command triggers the disable transition HD and the message buffer is in one of the states CCBs, HLckCCBs, or CCRx, the disable transition has no effect (command is ignored) and the message buffer state is not changed. No notification is given to the software application.

The lock and unlock commands issued by writing 1 to the trigger bit $FR_MBCCSRn[LCKT]$. The transition that will be triggered by each of these commands depends on the current value of the status bit $FR_MBCCSRn[LCKS]$. If the command triggers the lock transition HL while the message buffer is in the state CCRx, the lock transition has no effect (command is ignored) and message buffer state is not changed. In this case, the message buffer lock error flag LCK_EF in the [CHI Error Flag Register \(FR_CHIERFR\)](#) is set.

Table 17-100. Receive Message Buffer Software Application Transitions

Transition	Host Command	Condition	Description
HE	$FR_MBCCSRn[EDT] := 1$	$FR_MBCCSRn[EDS] = 0$	Application triggers message buffer enable.
HD		$FR_MBCCSRn[EDS] = 1$	Application triggers message buffer disable.
HL	$FR_MBCCSRn[LCKT] := 1$	$FR_MBCCSRn[LCKS] = 0$	Application triggers message buffer lock.
HU		$FR_MBCCSRn[LCKS] = 1$	Application triggers message buffer unlock.

Module Transitions

The module transitions that can be triggered by the FlexRay module are described in [Table 17-101](#). Each transition will be triggered for certain message buffers when the related condition is fulfilled.

Table 17-101. Receive Message Buffer Module Transitions

Transition	Condition	Description
BS	slot match and CycleCounter match	Buffer Subscribed - The message buffer filter matches next slot and cycle.
SLS	slot start	Slot Start - Start of either Static Slot or Dynamic Slot.
SNS	symbol window start or NIT start	Symbol Window or NIT Start - Start of either Symbol Window or NIT.
SSS	slot start or symbol window start or NIT start	Slot or Segment Start - Start of either Static Slot, Dynamic Slot, Symbol Window, or NIT.
SU	status updated	Status Updated - Slot Status field, message buffer status flags, header index updated. Interrupt flag set.

Transition Priorities

The software application can trigger only one transition at a time. There is no need to specify priorities among them.

As shown in [Table 17-102](#), the module transitions have a higher priority than the application transitions. For all states except the CCRx state, a module transition and the application lock/unlock transition HL/HU and can be executed at the same time. The result state is reached by first applying the module transition and subsequently the application transition to the intermediately reached state. For example, if the message buffer is in the buffer subscribed state CCBs and the module triggers the slot start transition SLS at the same time as the application locks the message buffer by the HL transition, the intermediate state is CCRx. The resulting state is locked buffer subscribed state HLckCCRx.

Table 17-102. Receive Message Buffer Transition Priorities

State	Priorities	Description
Module vs. Software Application		
Idle	BS > HD	Buffer Subscribed > Message Buffer Disable
HLck	BS > HD	Buffer Subscribed > Message Buffer Disable
CCRx	SSS > HL	Slot or Segment Start > Message Buffer Lock

17.4.6.3.2 Message Buffer Search

The FlexRay module starts a sequential search that checks all message buffers at the following protocol related events:

- Slot start, in the static frame segment
- Minislot start, in the dynamic frame segment
- NIT start

The filters that are used for the search are described in [Section 17.4.7.1, “Individual Message Buffer Filtering.”](#)

As a result of the message buffer search, the FlexRay module changes the state of up to two enabled receive message buffers from either idle state Idle or locked state HLck to the either subscribed state CCBs or locked buffer subscribed state HLckCCBs. It does so by triggering the buffer subscribed transition BS.

If the receive message buffers for the next slot are assigned to both channels, then at most one receive message buffer is changed to a buffer subscribed state.

If more than one matching message buffers assigned to a certain channel, then only the message buffer with the lowest message buffer number is in one of the states mentioned above.

17.4.6.3.3 Message Reception

With the start of the next static or dynamic slot the module trigger the slot start transition SLS. This changes the state of the subscribed receive message buffers from either CCBs to CCRx or from HLckCCBs to HLckCCRx, respectively.

During the reception slot, the received frame data are written into the shadow buffers. For details on receive shadow buffers, see [Section 17.4.6.3.6, “Receive Shadow Buffers Concept.”](#) The data and status of the receive message buffers that are the CCRx or HLckCCRx are not modified in the reception slot.

17.4.6.3.4 Message Buffer Status Update

With the start of the next static or dynamic slot or with the start of the symbol window or NIT, the module triggers the slot or segment start transition SSS. This transition changes the state of the receive message buffers from either CCRx to CCSu or from HLckCCRx to HLck, respectively.

If a message buffer was in the locked state HLckCCRx, no update will be performed. The received data are lost. This is indicated by setting the frame lost channel A/B error flag FRLA_EF/FRLB_EF in the [CHI Error Flag Register \(FR_CHIERFR\)](#).

If a message buffer was in the CCRx state, it is now in the CCSu state. After the evaluation of the slot status provided by the PE the message buffer is updated. The message buffer update depends on the slot status bits and the segment the message buffer is assigned to. This is described in [Table 17-103](#).

Table 17-103. Receive Message Buffer Update

<i>vSS!ValidFrame</i>	<i>vRF!Header!NFIndicator</i>	Update Description
1	1	Valid non-null frame received. - Message Buffer Data Field updated. - Frame Header Field updated. - Slot Status Field updated. - DUP:= 1 - DVAL:= 1 - MBIF:= 1
1	0	Valid null frame received. - Message Buffer Data Field <i>not</i> updated. - Frame Header Field <i>not</i> updated. - Slot Status Field updated. - DUP:= 0 - DVAL <i>not</i> changed - MBIF:= 1


Table 17-103. Receive Message Buffer Update (Continued)

<i>vSS!ValidFrame</i>	<i>vRF!Header!NFIndicator</i>	Update Description
0	x	<p>No valid frame received.</p> <ul style="list-style-type: none"> - Message Buffer Data Field not updated. - Frame Header Field not updated. - Slot Status Field updated. - DUP:= 0 - DVAL <i>not</i> changed. - MBIF:= 1, if the slot was not an empty dynamic slot. <p>Note: An empty dynamic slot is indicated by the following frame and slot status bit values: <i>vSS!ValidFrame</i> = 0 and <i>vSS!SyntaxError</i> = 0 and <i>vSS!ContentError</i> = 0 and <i>vSS!BViolation</i> = 0.</p>

NOTE

If the number of the last slot in the current communication cycle on a given channel is n , then all receive message buffers assigned to this channel with $FR_MBFIDR_n[FID] > n$ will not be updated at all.

When the receive message buffer update has finished the status updated transition, SU is triggered, which changes the buffer state from CCSu to Idle. An example receive message buffer timing and state change diagram for a normal frame reception is given in Figure 17-122.

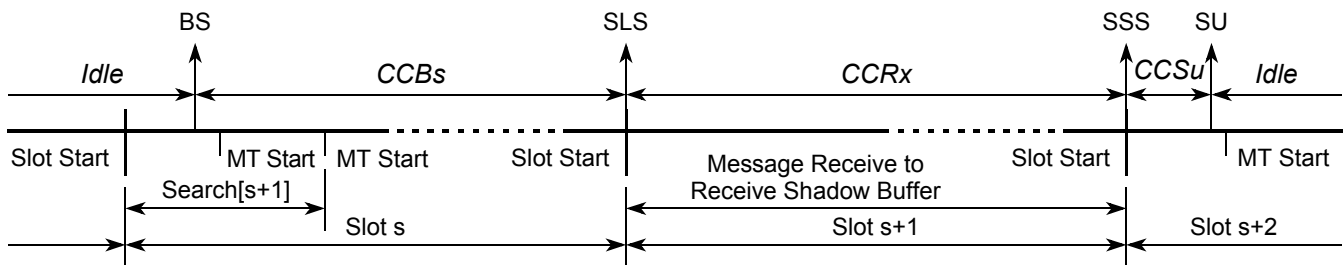
Figure 17-122. Message Reception Timing

The amount of message data written into the message buffer data field of the receive shadow buffer is determined by these items:

1. The message buffer segment that the message buffer is assigned to, as defined by the [Message Buffer Segment Size and Utilization Register \(FR_MBSSUTR\)](#).
2. The message buffer data field size, as defined by the related field of the [Message Buffer Data Size Register \(FR_MBDSR\)](#)
3. The number of bytes received over the FlexRay bus

If the message buffer is assigned to the message buffer segment 1, and the number of received bytes is greater than $2 * FR_MBDSR[MBSEG1DS]$, the FlexRay module writes only $2 * FR_MBDSR[MBSEG1DS]$ bytes into the message buffer data field of the receive shadow buffer. If the number of received bytes is less than $2 * FR_MBDSR[MBSEG1DS]$, the FlexRay module writes only the received number of bytes and will not change the trailing bytes in the message buffer data field of the receive shadow buffer. The same holds for the message buffer segment 2 with $FR_MBDSR[MBSEG1DS]$.

17.4.6.3.5 Received Message Access

To access the message data received over the FlexRay bus, the software application reads the message data stored in the message buffer data field of the corresponding receive message buffer. The access to the message buffer data field is described in [Section 17.4.3.1, “Individual Message Buffers.”](#)

The application can read the message buffer data field if the receive message buffer is one of the states HDis, HDisLck, or HLck. If the message buffer is in one of these states, the FlexRay module will not change the content of the message buffer.

17.4.6.3.6 Receive Shadow Buffers Concept

The receive shadow buffer concept applies only to individual receive message buffers. The intention of this concept is to ensure that only syntactically and semantically valid received non-null frames are presented to the application in a receive message buffer. The basic structure of a receive shadow buffer is described in [Section 17.4.3.2, “Receive Shadow Buffers.”](#)

The receive shadow buffers temporarily store the received frame header and message data. After the slot boundary, the slot status information is generated. If the slot status information indicates the reception of the valid non-null frame (see [Table 17-103](#)), the FlexRay module writes the slot status into the slot status field of the receive shadow buffer and exchanges the content of the [Message Buffer Index Registers \(FR_MBIDXRn\)](#) with the content of the corresponding internal shadow buffer index register. In all other cases, the FlexRay module writes the slot status into the identified receive message buffer, depending on the slot status and the FlexRay segment the message buffer is assigned to.

The shadow buffer concept, with its index exchange, results in the fact that the FRM located message buffer associated to an individual receive message buffer changes after successful reception of a valid frame. This means that the message buffer area in the FRM accessed by the application for reading the received message is different from the initial setting of the message buffer. Therefore, the software application must not rely on the index information written initially into the [Message Buffer Index Registers \(FR_MBIDXRn\)](#). Instead, the index of the message buffer header field must be fetched from the [Message Buffer Index Registers \(FR_MBIDXRn\)](#).

17.4.6.4 Double Transmit Message Buffer

The section provides a detailed description of the functionality of the double transmit message buffers.

Double transmit message buffers are used by the software application to provide the FlexRay module with the message data to be transmitted over the FlexRay bus. The FlexRay module uses this message buffer to provide information to the application about the transmission process, and status information about the slot in which message data was transmitted.

In contrast to the single transmit message buffers, the application can provide new transmission data while the transmission of the previously provided message data is running. This scheme is called double buffering and can be considered as a FIFO of depth 2.

Double transmit message buffers are implemented by combining two individual message buffers that form the two sides of a double transmit message buffer: the commit side is accessed by the application to provide message data, and the transmit side is used by the FlexRay module to transmit message data to the FlexRay

bus. They are located in adjacent individual message buffers. The message buffer that implements the commit side has an even message buffer number $2n$. The transmit side message buffer follows the commit side message buffer and has the message buffer number $2n+1$. The basic structure and data flow of a double transmit message buffer is given in [Figure 17-123](#).

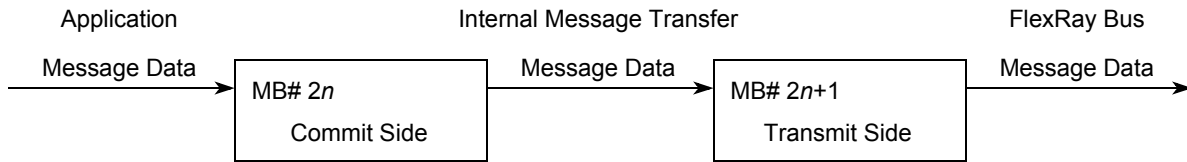


Figure 17-123. Double Transmit Buffer Structure and Data Flow

NOTE

Both the commit and the transmit side must be configured with identical values, except for the [Message Buffer Index Registers \(FR_MBIDXR_n\)](#).

17.4.6.4.1 Access Regions

To certain message buffer fields, both the software application and the FlexRay module have access. To ensure data consistency, a message buffer locking scheme is implemented, which controls the exclusive access to the data, control, and status bits of the message buffer.

The access scheme for double transmit message buffers is depicted in [Figure 17-124](#). The given regions represent fields that can be accessed from both the application and the FlexRay module and, thus, require access restrictions. A description of the regions is given in [Table 17-104](#).

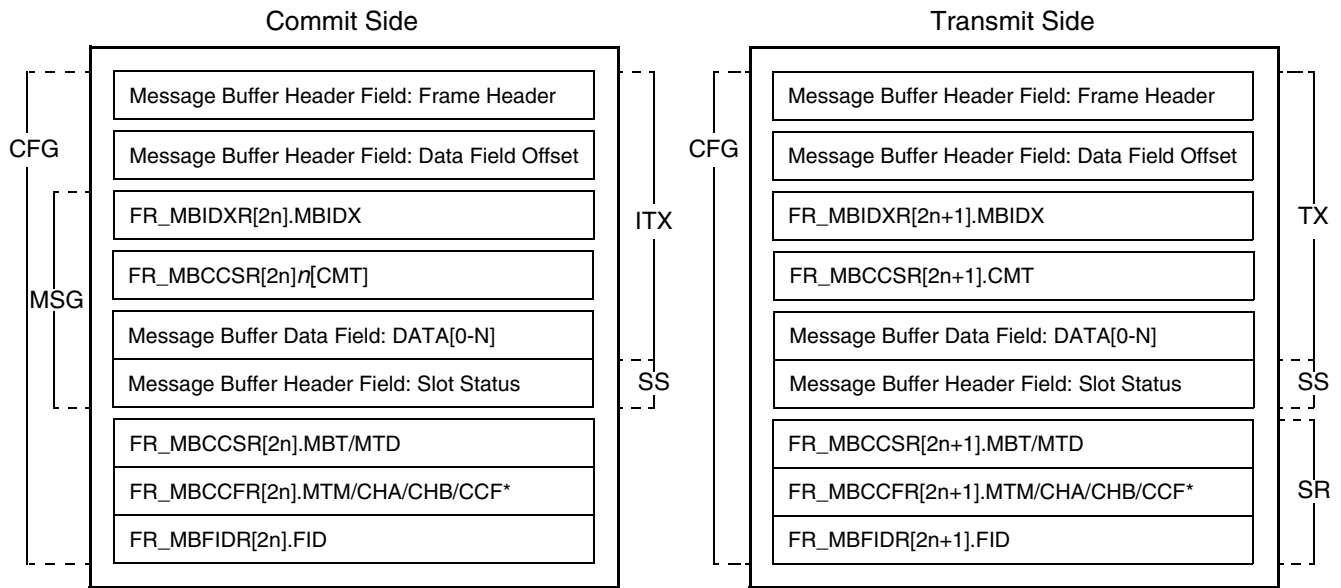


Figure 17-124. Double Transmit Message Buffer Access Regions Layout

Table 17-104. Double Transmit Message Buffer Access Regions Description

Access			Description
Region	Type		
	Software Application	Module	
Commit Side			
CFG	read/write	-	Message Buffer Configuration
MSG	read/write	-	Message Buffer Data and Control access
ITX	-	read/write	Internal Message Transfer.
SS	-	write-only	Slot Status Update
Transmit Side			
CFG	read/write	-	Message Buffer Configuration
SR	-	read-only	Message Buffer Search
TX	-	read-only	Internal Message Transfer, Message Transmission
SS	-	write-only	Slot Status Update

Trigger bits FR_MBCCSR n [EDT] and FR_MBCCSR n [LCKT] and the interrupt enable bit FR_MBCCSR n [MBIE] are not under access control and can be accessed from the software application at any time. The status bits FR_MBCCSR n [EDS] and FR_MBCCSR n [LCKS] are not under access control and can be accessed from the FlexRay module at any time.

The interrupt flag FR_MBCCSnR.MBIF is not under access control and can be accessed from the application and the FlexRay module at any time. FlexRay module set access has higher priority.

The FlexRay module restricts its access to the regions, depending on the current state of the corresponding part of the double transmit message buffer. The application must adhere to these restrictions to ensure data consistency. The states for the commit side of a double transmit message buffer are shown in [Figure 17-125](#). A description of the states is given in [Table 17-105](#). The states for the transmit side of a double transmit message buffer are shown in [Figure 17-126](#). A description of the states is given in [Table 17-106](#). The description tables also provide the access scheme for the access regions.

Status bits FR_MBCCSR n [EDS] and FR_MBCCSR n [LCKS] provide the software application with the required message buffer status information. The internal status information is not visible to the application.

17.4.6.4.2 Message Buffer States

This section describes the transmit message buffer states and provides a state diagram.

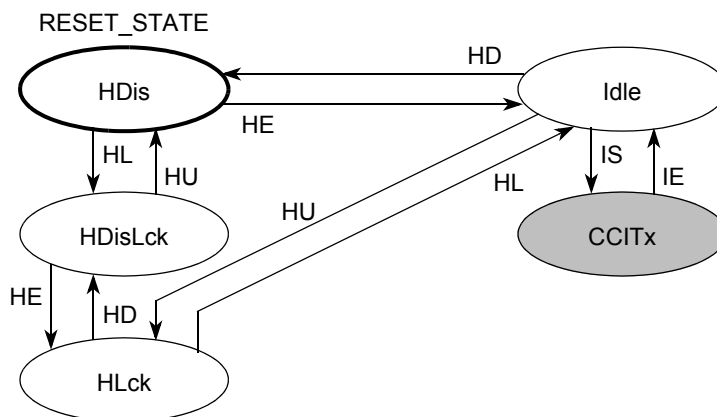


Figure 17-125. Double Transmit Message Buffer State Diagram (Commit Side)

A description of the states of the commit side of a double transmit message buffer is given in [Table 17-105](#).

Table 17-105. Double Transmit Message Buffer State Description (Commit Side)

State	FR_MBCCSR[2n]		Access Region		Description
	EDS	LCKS	Appl.	Module	
common states					
HDis	0	0	CFG	–	Disabled - Message Buffer under configuration. Commit Side can <i>not</i> be used for internal message transfer.
CCITx	1	0	–	ITX	Internal Message Transfer - Message Buffer Data transferred from commit side to transmit side.
commit side specific states					
Idle	1	0	–	ITX, SS	Idle - Message Buffer Commit Side is idle. Commit Side can be used for internal message transfer.
HDisLck	0	1	CFG	SS	Disabled and Locked - Message Buffer under configuration. Commit Side can <i>not</i> be used for internal message transfer.
HLck	1	1	MSG	SS	Locked - Applications access to data, control, and status. Commit Side can <i>not</i> be used for internal message transfer.

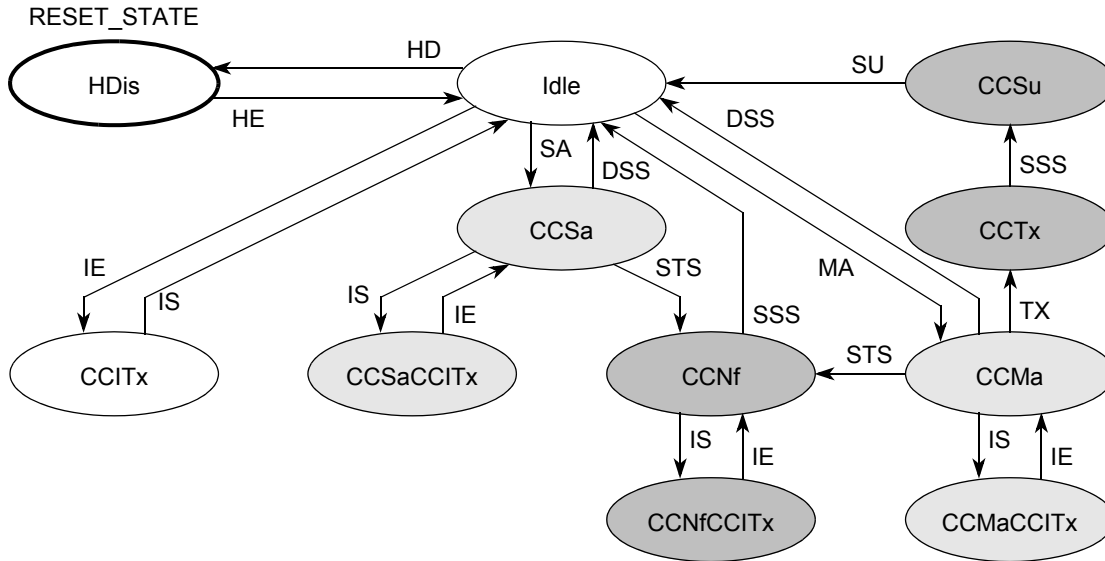


Figure 17-126. Double Transmit Message Buffer State Diagram (Transmit Side)

A description of the states of the transmit side of a double transmit message buffer is given in [Table 17-106](#).

Table 17-106. Double Transmit Message Buffer State Description (Transmit Side) (Sheet 1 of 2)

State	FR_MBCCSRn		Access Region		Description
	EDS	LCKS	Appl.	Module	
common states					
HDis	0	0	CFG	–	Disabled - Message Buffer under configuration. Excluded from message buffer search.
CCITx	1	0	–	TX	Internal Message Transfer - Message Buffer Data transferred from commit side to transmit side.
transmit side specific states					
Idle	1	0	–	SR	Idle - Message Buffer Transmit Side is idle. Transmit Side is included in message buffer search.
CCSa	1	0	–	–	Slot Assigned - Message buffer assigned to next static slot. Ready for Null Frame transmission.
CCSaCCITx	1	0	–	TX	Slot Assigned and Internal Message Transfer - Message buffer assigned to next static slot and Message Buffer Data transferred from commit side to transmit side.
CCNf	1	0	–	TX	Null Frame Transmission Header is used for null frame transmission.
CCNfCCITx	1	0	–	TX	Null Frame Transmission and Internal Message Transfer - Header is used for null frame transmission and Message Buffer Data transferred from commit side to transmit side.
CCMa	1	0	–	–	Message Available - Message buffer is assigned to next slot and cycle counter filter matches.
CCMaCCITx	1	0	–	–	Message Available and Internal Message Transfer - Message buffer is assigned to next slot and cycle counter filter matches and Message Buffer Data transferred from commit side to transmit side.

Table 17-106. Double Transmit Message Buffer State Description (Transmit Side) (Sheet 2 of 2)

State	FR_MBCCSRn		Access Region		Description
	EDS	LCKS	Appl.	Module	
CCTx	1	0	–	TX	Message Transmission - Message buffer data transmit. Payload data from buffer transmitted
CCSu	1	0	–	SS	Status Update - Message buffer status update. Update of status flags, the slot status field, and the header index. Note: The slot status field of the commit side is updated too, even if the application has locked the commit side.

17.4.6.4.3 Message Buffer Transitions

Application Transitions

Application transitions can be triggered by the software application using the commands described in [Table 17-107](#). The application issues the commands by writing to the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#). Only one command can be issued with one write access. Each command is executed immediately. If the command is ignored, it must be issued again.

The enable and disable commands can be issued on the transmit side only. Any enable or disable command issued on the commit side will be ignored without notification. The transitions that will be triggered depends on the value of the EDS bit. The enable and disable commands will affect both the commit side and the transmit side at the same time. If the application triggers the disable transition HD while the transmit side is in state CCSa, CCSaCCITx, CCNf, CCNfCCITx, CCMa, CCMaCCITx, CCTx, or CCSu, the disable transition has no effect (command is ignored) and the message buffer state is not changed. No notification is given to the software application.

The lock and unlock commands can be issued on the commit side only. Any lock or unlock command issued on the transmit side will be ignored and the double transmit buffer lock error flag DBL_EF in the [CHI Error Flag Register \(FR_CHIERFR\)](#) will be set. The transitions that will be triggered depends on the current value of the LCKS bit. The lock and unlock commands will only affect the commit side. If the application triggers the lock transition HL while the commit side is in the state CCITx, the message buffer state will not be changed and the message buffer lock error flag LCK_EF in the [CHI Error Flag Register \(FR_CHIERFR\)](#) will be set.

Table 17-107. Double Transmit Message Buffer Host Transitions

Transition	Host Command	Condition	Description
HE	FR_MBCCSR[2n+1][EDT]= 1	FR_MBCCSR[2n+1][EDS] = 0	Application triggers message buffer enable.
HD		FR_MBCCSR[2n+1][EDS] = 1	Application triggers message buffer disable.
HL	FR_MBCCSR[2n][LCKT]= 1	FR_MBCCSR[2n][LCKS] = 0	Application triggers message buffer lock.
HU		FR_MBCCSR[2n][LCKS] = 1	Application triggers message buffer unlock.

Module Transitions

The module transitions that can be triggered by the FlexRay module are described in [Table 17-108](#). The transitions C1 and C2 apply to both sides of the message buffer and are applied at the same time. All other FlexRay module transitions apply to the transmit side only.

Table 17-108. Double Transmit Message Buffer Module Transitions

Transition	Condition	Description
common transitions		
IS	See Section 17.4.6.4.5 , "Internal Message Transfer"	Internal Message Transfer Start - Start transfer of message data from commit side to transmit side.
IE		Internal Message Transfer End - Stop transfer of message data from commit side to transmit side. Note: The internal message transfer is stopped before the slot or segment start.
transmit side specific transitions		
SA	slot match and static slot	Slot Assigned - Message buffer is assigned to next static slot.
MA	slot match and CycleCounter match	Message Available - Message buffer is assigned to next slot and cycle counter filter matches.
TX	slot start and $FR_MBCCSR[2n+1][CMT] = 1$	Transmission Slot Start - Slot Start and commit bit CMT is set. In case of a dynamic slot, <i>pLatestTx</i> is not exceeded.
SU	status updated	Status Updated - Slot Status field and message buffer status flags updated. Interrupt flag set.
STS	static slot start	Static Slot Start - Start of static slot.
DSS	dynamic slot start or symbol window start or NIT start	Dynamic Slot or Segment Start - Start of dynamic slot or symbol window or NIT.
SSS	slot start or symbol window start or NIT start	Slot or Segment Start - Start of static slot or dynamic slot or symbol window or NIT.

Transition Priorities

The software application can trigger only one transition at a time. There is no need to specify priorities among them.

As shown in the first part of [Table 17-109](#), the module transitions have a higher priority than the application transitions. The priorities among the FlexRay module transitions and the related states are given in the second part of [Table 17-109](#). These priorities apply only to the transmit side. The internal message transmit start transition IS has the lowest priority.

Table 17-109. Double Transmit Message Buffer Transition Priorities

State	Priority	Description
Module vs. Software Application		
Idle	IS > HD IS > HL	Internal Message Transfer Start > Message Buffer Disable Internal Message Transfer Start > Message Buffer Lock
module internal		
Idle	MA > SA	Message Available > Slot Assigned
CCMa	TX > STS TX > DSS	Transmission Slot Start > Static Slot Start Transmission Slot Start > Dynamic Slot Start

17.4.6.4.4 Message Preparation

The software application provides the message data through the commit side. The transmission itself is executed from the transmit side. The transfer of the message data from the commit side to the transmit side is done by the internal message transfer, which is described in [Section 17.4.6.4.5, “Internal Message Transfer.”](#)

To transmit a message over the FlexRay bus, the application writes the message data into the message buffer data field of the commit side and sets the commit bit CMT in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#). The physical access to the message buffer data field is described in [Section 17.4.3.1, “Individual Message Buffers.”](#)

As indicated by [Table 17-105](#), the application writes to the message buffer data field and changes the commit bit CMT only if the transmit message buffer is in states HDis, HDisLck, or HLck. The application can change the state of a message buffer if it issues the appropriate commands given in [Table 17-107](#). The state change is indicated through the FR_MBCCSRn[EDS] and FR_MBCCSRn[LCKS] status bits.

17.4.6.4.5 Internal Message Transfer

The internal message transfer transfers the message data from the commit side to the transmit side. The internal message transfer is implemented as the swapping of the content of the [Message Buffer Index Registers \(FR_MBIDXn\)](#) of the commit side and the transmit side. After the swapping, the commit side CMT bit is cleared, the commit side interrupt flag MBIF is set, the transmit side CMT bit is set, and the transmit side DVAL bit is cleared.

The conditions and the point in time when the internal message transfer is started are controlled by the message buffer commit mode bit MCM in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#). The MCM bit configures the message buffer for either the streaming commit mode or the immediate commit mode. A detailed description is given in [Streaming Commit Mode](#) and [Immediate Commit Mode](#). The internal message transfer is triggered with the transition IS. Both sides of the message buffer enter one of the CCITx states. The internal message transfer is finished with the transition IE.

Streaming Commit Mode

The intention of the streaming commit mode is to ensure that each committed message is transmitted at least once. The FlexRay module will not start the internal message transfer for a message buffer as long as the message data on the transmit side is not transmitted at least once.

The streaming commit mode is configured by clearing the message buffer commit mode bit MCM in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#).

In this mode, the internal message transfer from the commit side to the transmit side is started for a double transmit message buffer when all of these conditions are fulfilled:

1. Commit side is in the Idle state.
2. Commit site message data are valid, i.e. FR_MBCCSR[2n][CMT] = 1.
3. Transmit side is in one state Idle, CCSa, or CCMa.
4. Transmit side contains either no valid message data, i.e. FR_MBCCSR[2n+1][CMT] = 0 or the message data were transmitted at least once, i.e. FR_MBCCSR[2n+1][DVAL] = 1.

An example of a streaming commit mode state change diagram is given in [Figure 17-127](#). In this example, both the commit and the transmit side do not contain valid message data and the application provides two messages. The message buffer does not match the next slot.

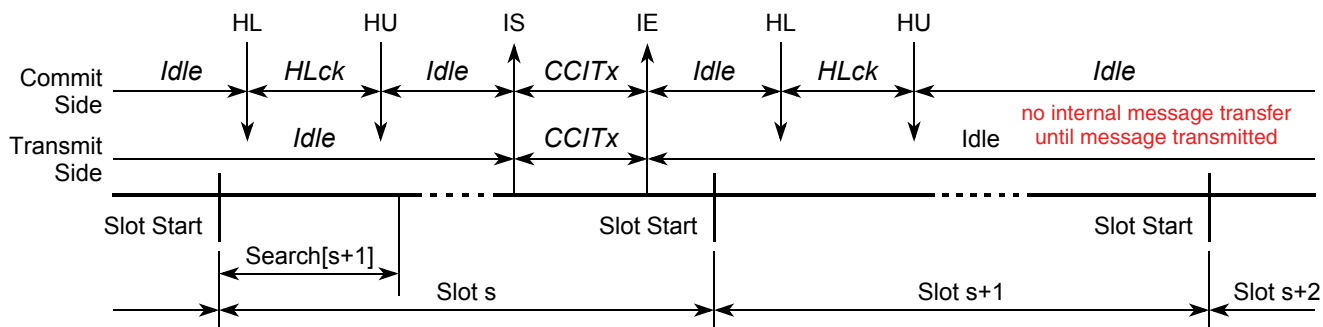


Figure 17-127. Internal Message Transfer in Streaming Commit Mode

Immediate Commit Mode

The intention of the immediate commit mode is to transmit the latest data provided by the software application. This implies that it is not guaranteed that each provided message will be transmitted at least once.

The immediate commit mode is configured by setting the message buffer commit mode bit MCM in the [Message Buffer Configuration, Control, Status Registers \(FR_MBCCSRn\)](#).

In this mode, the internal message transfer from the commit side to the transmit side is started for one double transmit message buffer when all of these conditions are fulfilled:

1. Commit side is in the Idle state.
2. Commit site message data is valid, i.e. $FR_MBCCSR[2n][CMT] = 1$.
3. Transmit side is in one state Idle, CCSa, or CCMa.

Whether the transmit side contains valid message data or not is not checked. If message data are valid and not transmitted, they may be overwritten.

An example of a streaming commit mode state change diagram is given in [Figure 17-128](#). In this example, both the commit and the transmit side do not contain valid message data, and the application provides two messages and the first message is gets overwritten. The message buffer does not match the next slot.

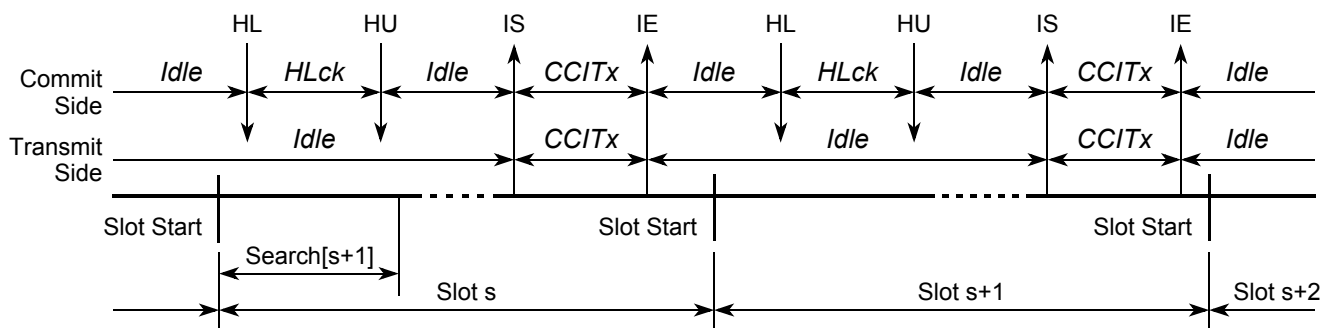


Figure 17-128. Internal Message Transfer in Immediate Commit Mode

17.4.6.4.6 Message Transmission

For double transmit message buffers, the message buffer search checks only the transmit side part. The internal scheduling ensures that the internal message transfer is stopped on the message buffer search start. Thus, the transmit side of message buffer that is not in its transmission or status update slot is always in the Idle state.

The message transmit behavior and transmission state changes of the transmit side of a double transmit message buffer are the same as for single-buffered transmit buffers, except that the transmit side of double buffers can not be locked by the application, i.e. the HU and HL transition do not exist. Please refer to [Section 17.4.6.2.5, “Message Transmission.”](#)

17.4.6.4.7 Message Buffer Status Update

The message buffer status update behavior of the transmit side of a double transmit message buffer is the same as for single transmit message buffers, which is described in [Section 17.4.6.2.7, “Message Buffer Status Update.”](#)

Additionally, the slot status field of the commit side is updated after the update of the slot status field of the transmit side, even if the commit side is locked by the application. This is implemented to provide the slot status of the most recent transmission slot.

17.4.7 Individual Message Buffer Search

This section provides a detailed description of the message buffer search algorithm.

The message buffer search checks all enabled individual message buffer to determine if a certain slot is assigned to this node for transmission or a certain slot for reception. The message buffer search is a sequential algorithm and is started at the following protocol related events:

- Each NIT start
- Each slot start in the static frame segment
- Each minislot start in the dynamic frame segment

The search within the NIT searches for message buffers assigned or subscribed to slot 1. The search within slot n searches for message buffers assigned or subscribed to slot $n+1$.

If the message buffer search is running while the next message buffer search start event appears, the message buffer search is stopped and the message buffer search error flag MSB_EF is set in the [CHI Error Flag Register \(FR_CHIERFR\)](#). This appears only if the CHI frequency is too low to search through all message buffers within the NIT or a minislot. The message buffer result is not defined in this case. For more details, see [Section 17.5.2, “Number of Usable Message Buffers.”](#)

The filters criteria used for the message buffer search is described in [Section 17.4.7.1, “Individual Message Buffer Filtering.”](#) For double transmit message buffers, only the transmit side is included in the search. During the search, a list of all matching message buffers is created. If all message buffers assigned or subscribed to the next slot are assigned to only one channel, then two lists of matching message buffer will be created, one for each channel. If all message buffers assigned or subscribed to the next slot are assigned to both channels, only one sorted list of matching message buffers is created.

Each message buffer list is sorted according to the priorities given in [Table 17-110](#). From the group with the highest priority, the message buffer with the lowest message buffer number is selected. For this message buffer, the corresponding transition given in [Table 17-110](#) is triggered as a result of the message buffer search.

Table 17-110. Message Buffer Search Priority

Priority	FR_MBCCSRn				Description	Transition
	MTD	LCKS	CMT	CCFM ¹		
(highest) 0	1	0	1	1	transmit buffer, unlocked, committed, matches cycle count	MA
1	1	0	0	1	transmit buffer, <i>locked</i> or <i>uncommitted</i> , matches cycle count	SA
	1	1	x	1		SA
2	1	x	x	0	transmit buffer, assigned to slot	SA
3	0	0	0	1	<i>receive</i> buffer, unlocked, matches cycle count	SB
(lowest) 4	0	1	1	1	<i>receive</i> buffer, <i>locked</i> , matches cycle count	SB

¹ Cycle Counter Filter Match, see [Section 17.4.7.1.2, “Message Buffer Cycle Counter Filtering”](#)

17.4.7.1 Individual Message Buffer Filtering

The message buffer search identifies the matching message buffers by applying two individual message buffer filters: the frame ID filter and the cycle count filter.

17.4.7.1.1 Message Buffer Frame ID Filtering

The message buffer frame ID filter is used to determine if the message buffer can be considered for reception or transmission in a certain slot on a per channel basis.

The frame ID filter matches for a message buffer with message buffer number n and the search slot s , if the value of the FID field in the [Message Buffer Frame ID Registers \(FR_MBFIDRn\)](#) equals s .

Only message buffers with a frame ID filter match may appear in the matching message buffer list. All transmit message buffer with a matching frame ID will appear in the matching message buffer list. Only receive message buffer with a matching frame ID and a matching cycle counter filter will appear in the matching message buffer list.

17.4.7.1.2 Message Buffer Cycle Counter Filtering

The message buffer cycle counter filter is a value-mask filter defined by the CCFE, CCFMSK, and CCFVAL fields in the [Message Buffer Cycle Counter Filter Registers \(FR_MBCCFRn\)](#). This filter determines a set of communication cycles in which the message buffer is considered for message reception or message transmission. If the cycle counter filter is disabled, i.e. CCFE = 0, this set of cycles consists of all communication cycles.

If the cycle counter filter of a message buffer does not match a certain communication cycle number, this message buffer is not considered for message transmission or reception in that communication cycle. In case of a transmit message buffer, though, this buffer is added to the matching message buffer list with

CCFM = '0' to indicate the slot assignment and to trigger the null frame transmission. In the case of a receive message buffer, this buffer is not added to the matching message buffer list.

A message buffer matches its cycle counter filter for the communication cycle with the number CCN if at least one of the following conditions is true:

$$\text{MBCCFR}_n[\text{CCFE}] == 0 \quad \text{Eqn. 17-8}$$

$$\text{CCN}[5:0] \& \text{MBCCFR}_n[\text{CCFMSK}][5:0] == \text{MBCCFR}_n[\text{CCFVAL}][5:0] \& \text{MBCCFR}_n[\text{CCFMSK}][5:0] \quad \text{Eqn. 17-9}$$

17.4.7.1.3 Message Buffer Channel Assignment Consistency

The message buffer channel assignment given by the CHA and CHB bits in the [Message Buffer Cycle Counter Filter Registers \(FR_MBCCFR_n\)](#) defines the channels on which the message buffer will receive or transmit. The message buffer with number *n* transmits or receives on channel A if $\text{FR_MBCCFR}_n[\text{CHA}] = 1$, and transmits or receives on channel B if $\text{FR_MBCCFR}_n[\text{CHB}] = 1$.

To ensure correct message buffer operation, all message buffers assigned to the same slot must have a consistent channel assignment. That means that all message buffers assigned to the same slot must be either assigned to only one channel, or assigned to both channels. If both types of channel assignments occur for one slot, the behavior of the message buffer search is not defined. An inconsistent channel assignment for message buffer 0 and message buffer 1 is depicted in [Figure 17-129](#).

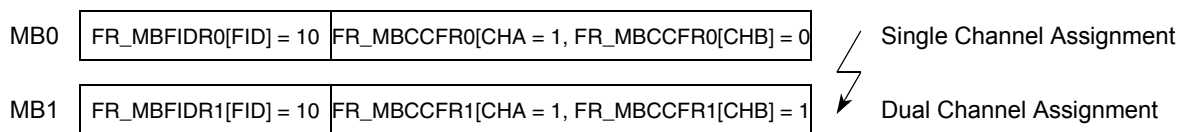


Figure 17-129. Inconsistent Channel Assignment

17.4.8 Individual Message Buffer Reconfiguration

The initial configuration of each individual message buffer can be changed even when the protocol is not in the [POC:config](#) state. This is referred to as individual message buffer reconfiguration. The configuration bits and fields that can be changed are given in the section on [Specific Configuration Data](#). The common configuration data given in the section on [Specific Configuration Data](#) can not be reconfigured when the protocol is out of the [POC:config](#) state.

17.4.8.1 Reconfiguration Schemes

Depending on the target and destination basic state of the message buffer that is to be reconfigured, there are three reconfiguration schemes.

17.4.8.1.1 Basic Type Not Changed (RC1)

A reconfiguration will not change the basic type of the individual message buffer, if both the message buffer transfer direction bit $\text{FR_MBCCS}_n[\text{MTD}]$ and the message buffer type bit $\text{FR_MBCCS}_n[\text{MBT}]$ are not changed. This type of reconfiguration is denoted by RC1 in [Figure 17-130](#). Single transmit and receive

message buffers can be RC1-reconfigured when in the HDis or HDisLck state. Double transmit message buffers can be RC1-reconfigured if both the transmit side and the commit side are in the HDis state.

17.4.8.1.2 Buffer Type Not Changed (RC2)

A reconfiguration will not change the buffer type of the individual message buffer if the message buffer type bit `FR_MBCCSRn[MBT]` is not changed. This type of reconfiguration is denoted by RC2 in Figure 17-130. It applies only to single transmit and receive message buffers. Single transmit and receive message buffers can be RC2-reconfigured when in the HDis or HDisLck state.

17.4.8.1.3 Buffer Type Changed (RC3)

A reconfiguration will change the buffer type of the individual message buffer if the message buffer type bit `FR_MBCCSRn[MBT]` is changed. This type of reconfiguration is denoted by RC3 in Figure 17-130. The RC3 reconfiguration splits one double buffer into two single buffers or combines two single buffer into one double buffer. In the later case, the two single message buffers must have consecutive message buffer numbers and the smaller one must be even. Message buffers can be RC3 reconfigured if they are in the HDis state.

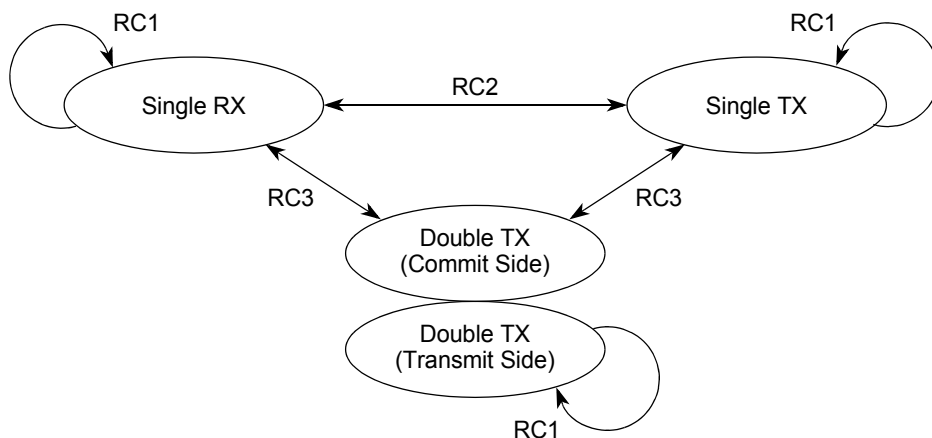


Figure 17-130. Message Buffer Reconfiguration Scheme

17.4.9 Receive FIFO

This section provides a detailed description of the two receive FIFOs.

17.4.9.1 Overview

The receive FIFOs implement the queued receive buffer defined by the *FlexRay Communications System Protocol Specification, Version 2.1*. One receive FIFO is assigned to channel A, the other receive FIFO is assigned to channel B. Both FIFOs work completely independently from each other.

The message buffer structure of each FIFO is described in Section 17.4.3.3, “Receive FIFO.” The area in the FRM for each of the two receive FIFOs is characterized by:

- The index of the first FIFO entry given by [Receive FIFO Start Index Register \(FR_RFSIR\)](#)

- The number of FIFO entries and the length of each FIFO entry as given by [Receive FIFO Depth and Size Register \(FR_RFDSR\)](#)

17.4.9.2 Receive FIFO Configuration

The receive FIFO control and configuration data are given in [Section 17.4.3.7, “Receive FIFO Control and Configuration Data.”](#) Configuring the receive FIFOs consists of two steps:

1. Allocating the required amount of FRM for the FlexRay window. This includes the allocation of the message buffer header area and the allocation of the message buffer data fields. For more details see [Section 17.4.4, “FlexRay Memory Layout.”](#)
2. Programming of the configuration data register while the PE is in [POC:config](#).

The following steps configure the layout of the FIFO:

- The number of the first message buffer header index that belongs to the FIFO is written into the [Receive FIFO Start Index Register \(FR_RFSIR\)](#).
- The depth of the FIFO is written into the FIFO_DEPTH field in the [Receive FIFO Depth and Size Register \(FR_RFDSR\)](#).
- The length of the message buffer data field for the FIFO is written into the ENTRY_SIZE field in the [Receive FIFO Depth and Size Register \(FR_RFDSR\)](#).

NOTE

To ensure, that the read index RDIDX always points to a message buffer that contains valid data, the receive FIFO must have at least two entries.

The FIFO filters are configured through the FIFO filter registers.

17.4.9.3 Receive FIFO Reception

The frame reception to the receive FIFO is enabled, if for a certain slots no message buffer is assigned or subscribed. In this case the FIFO filter path shown in [Figure 17-131](#) is activated.

When the receive FIFO filter path indicates that the received frame must be appended to the FIFO, the FlexRay module writes the received frame header and slot status into the message buffer header field indicated by the internal FIFO header write index. The payload data is written in the message buffer data field. If the status of the received frame indicates a valid frame, the internal FIFO header write index is updated and the FIFO not-empty interrupt flag FNEAIF/FNEBIF in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#) is set.

17.4.9.4 Receive FIFO Message Access

If the FIFO not-empty interrupt flag FNEAIF/FNEBIF in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#) is set, the receive FIFO contains valid received messages, which can be accessed by the software application.

The receive FIFO does not require locking to access the message buffers. To access the message, the application first reads the receive FIFO read index RDIDX from the [Receive FIFO A Read Index Register \(FR_RFARIR\)](#) or [Receive FIFO B Read Index Register \(FR_RFBRIR\)](#), respectively. This index points to

the message buffer header field of the next message buffer that contains valid data. The application can access the message data as described in [Section 17.4.3.3, “Receive FIFO.”](#) When the application has read all message buffer data and status information, it writes 1 to the FIFO not-empty interrupt flags FNEAIF or FNEBIF. This clears the interrupt flag and updates the RDIDX field in the [Receive FIFO A Read Index Register \(FR_RFARIR\)](#) or [Receive FIFO B Read Index Register \(FR_RFBRIR\)](#), respectively. When the RDIDX value has reached the last message buffer header field that belongs to the FIFO, it wraps around to the index of the first message buffer header field that belongs to the FIFO. This value is provided by the SIDX field in the [Receive FIFO Start Index Register \(FR_RFSIR\)](#).

17.4.9.5 Receive FIFO Filtering

The receive FIFO filtering is activated after all enabled individual receive message buffers have been searched without success for a message buffer to receive the current frame.

The FlexRay module provides three sets of FIFO filters. The FIFO filters are applied to valid non-null frames only. The FIFO will not receive invalid or null-frames. For each FIFO filter, the pass criteria is specified in the related section given below. Only frames that have passed all filters will be appended to the FIFO. The FIFO filter path is depicted in [Figure 17-131](#). A received frame passes the FIFO filtering if it has passed all three types of filters.

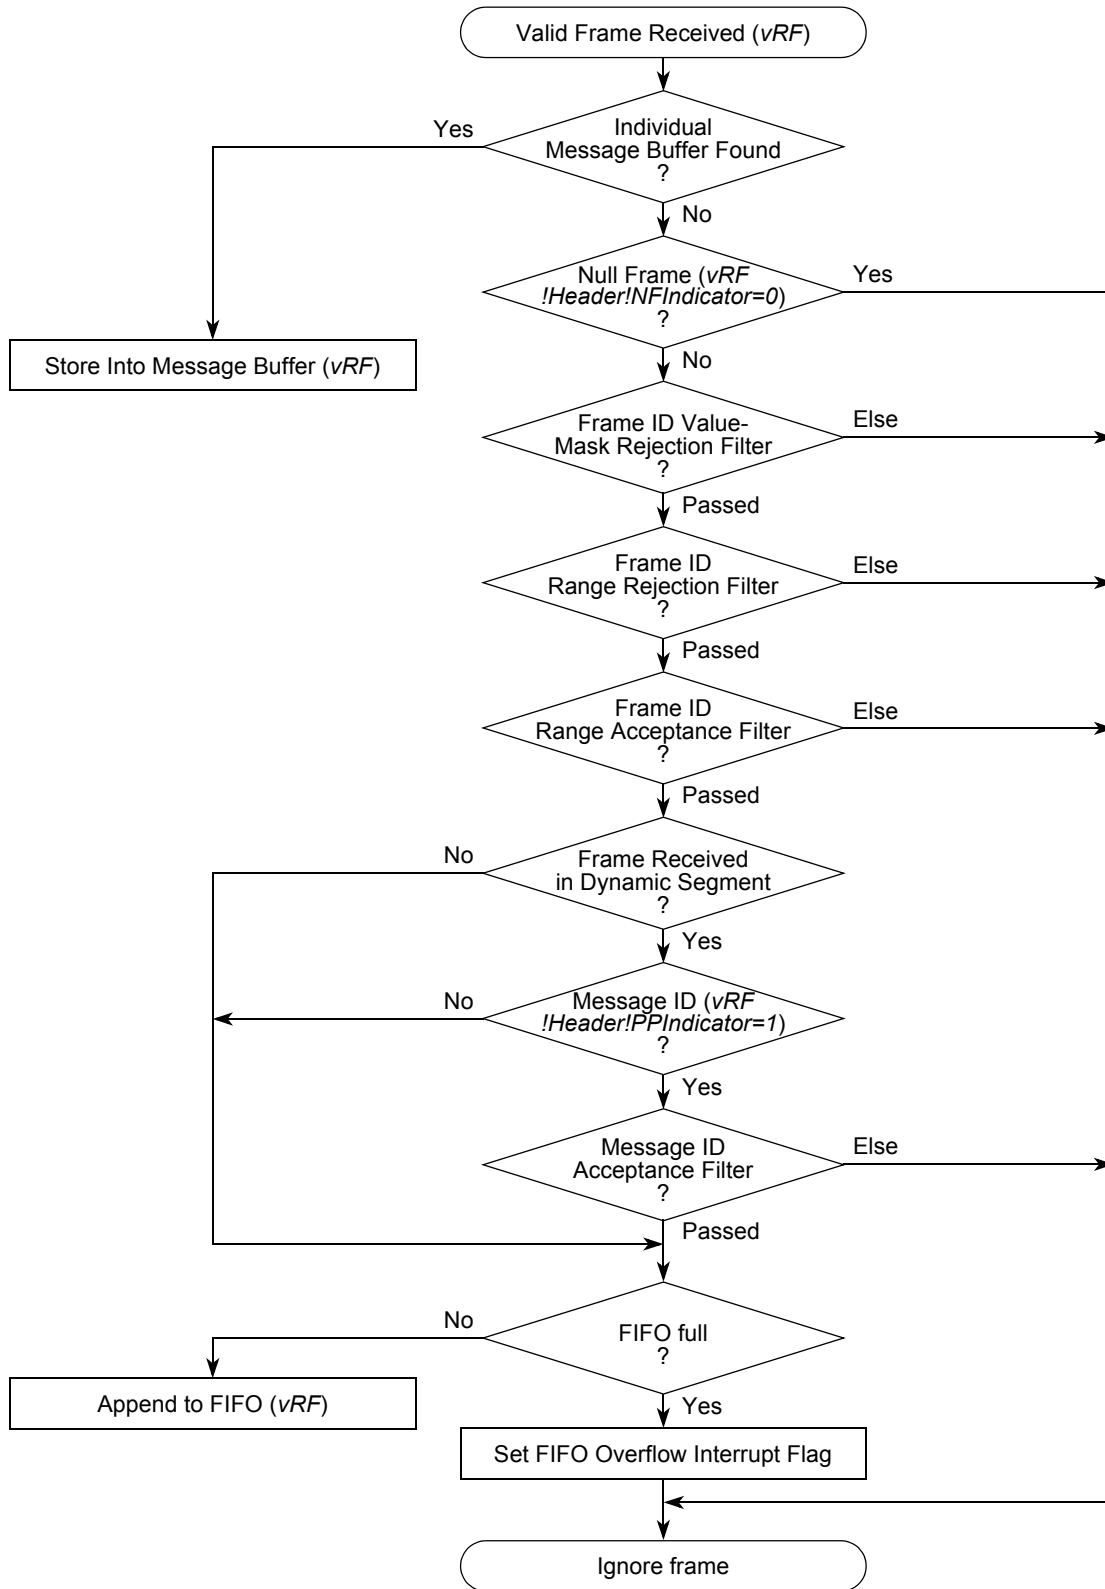


Figure 17-131. Received Frame FIFO Filter Path

17.4.9.5.1 RX FIFO Frame ID Value-Mask Rejection Filter

The frame ID value-mask rejection filter is a value-mask filter defined by the fields in the [Receive FIFO Frame ID Rejection Filter Value Register \(FR_RFFIDRFVR\)](#) and the [Receive FIFO Frame ID Rejection Filter Mask Register \(FR_RFFIDRFMR\)](#). Each received frame with a frame ID FID that does not match the value-mask filter value passes the filter, i.e. is not rejected.

Consequently, a received valid frame with the frame ID FID passes the RX FIFO frame ID Value-mask rejection filter if [Equation 17-10](#) is fulfilled:

$$FID \& RFFIDRFMR[FIDRFMSK] \neq RFFIDRFVR[FIDRFVAL] \& RFFIDRFMR[FIDRFMSK] \quad \text{Eqn. 17-10}$$

The RX FIFO frame ID value-mask rejection filter can be configured to pass all frames by the following settings:

- $FR_RFFIDRFVR[FIDRFVAL] := 0x000$ and $FR_RFFIDRFMR[FIDRFMSK] := 0x7FF$

Using the settings above, only the frame with frame ID 0 will be rejected, which is an invalid frame. All other frames will pass.

The RX FIFO frame ID Value-mask rejection filter can be configured to reject all frames by the following settings:

- $FR_RFFIDRFMR[FIDRFMSK] := 0x000$

Using the settings above, [Equation 17-10](#) can never be fulfilled ($0 \neq 0$) and thus all frames are rejected; no frame will pass. This is the reset value for the RX FIFO.

17.4.9.5.2 RX FIFO Frame ID Range Rejection Filter

Each of the four RX FIFO frame ID range filters can be configured as a rejection filter. The filters are configured by the [Receive FIFO Range Filter Configuration Register \(FR_RFRFCFR\)](#) and controlled by the [Receive FIFO Range Filter Control Register \(FR_RFRFCTR\)](#). The RX FIFO frame ID range filters apply to all received valid frames. A received frame with the frame ID FID passes the RX FIFO frame ID range rejection filters if either no rejection filter is enabled, or, for all of the enabled RX FIFO frame ID range rejection filters, i.e. $FR_RFRFCTR[FiMD] = 1$ and $FR_RFRFCTR[FiEN] = 1$, [Equation 17-11](#) is fulfilled.

$$FID < RFRFCFRi[SID(0)] \text{ and } RFRFCFRi[SID(1)] < FID \quad \text{Eqn. 17-11}$$

Consequently, all frames with a frame ID that fulfills [Equation 17-12](#) for at least one of the enabled rejection filters will be rejected and not pass.

$$RFRFCFRi[SID(0)] \leq FID \leq RFRFCFRi[SID(1)] \quad \text{Eqn. 17-12}$$

17.4.9.5.3 RX FIFO Frame ID Range Acceptance filter

Each of the four RX FIFO frame ID range filters can be configured as an acceptance filter. The filters are configured by the [Receive FIFO Range Filter Configuration Register \(FR_RFRFCFR\)](#) and controlled by the [Receive FIFO Range Filter Control Register \(FR_RFRFCTR\)](#). The RX FIFO frame ID range filters apply to all received valid frames. A received frame with the frame ID FID passes the RX FIFO frame ID range acceptance filters if either no acceptance filter is enabled, or, for at least one of the enabled RX FIFO

frame ID range acceptance filters, i.e. $FR_RFRFCTR[FiMD] = 0$ and $FR_RFRFCTR[FiEN] = 1$, Equation 17-13 is fulfilled.

$$RFRFCFRi[SID(0)] \leq FID \leq RFRFCFRi[SID(1)] \quad \text{Eqn. 17-13}$$

17.4.9.5.4 RX FIFO Message ID Acceptance Filter

The RX FIFO message ID acceptance filter is a value-mask filter and is defined by the [Receive FIFO Message ID Acceptance Filter Value Register \(FR_RFMIDAFVR\)](#) and the [Receive FIFO Message ID Acceptance Filter Mask Register \(FR_RFMIAFMR\)](#). This filter applies only to valid frames received in the dynamic segment with the payload preamble indicator bit PPI set to 1. All other frames will pass this filter.

A received valid frame in the dynamic segment with the payload preamble indicator bit PPI set to 1 and with the message ID MID (the first two bytes of the payload) will pass the RX FIFO message ID acceptance filter if Equation 17-14 is fulfilled.

$$MID \& RFMIDAFMR[MIDAFMSK] = RFMIDAFVR[MIDAFVAL] \& RFMIDAFMR[MIDAFMSK] \quad \text{Eqn. 17-14}$$

The RX FIFO message ID acceptance filter can be configured to accept all frames by setting

- $FR_RFMIDAFMR[MIDAFMSK] := 0x000$

Using the settings above, Equation 17-14 is always fulfilled and all frames will pass.

17.4.10 Channel Device Modes

This section describes the two FlexRay channel device modes that are supported by the FlexRay module.

17.4.10.1 Dual Channel Device Mode

In the dual channel device mode, both FlexRay ports are connected to physical FlexRay bus lines. The FlexRay port consisting of the signals FR_A_RX, FR_A_TX, and FR_A_TX_EN is connected to the physical bus channel A. The FlexRay port consisting of the signals FR_B_RX, FR_B_TX, and FR_B_TX_EN is connected to the physical bus channel B. The dual channel system is shown in Figure 17-132.

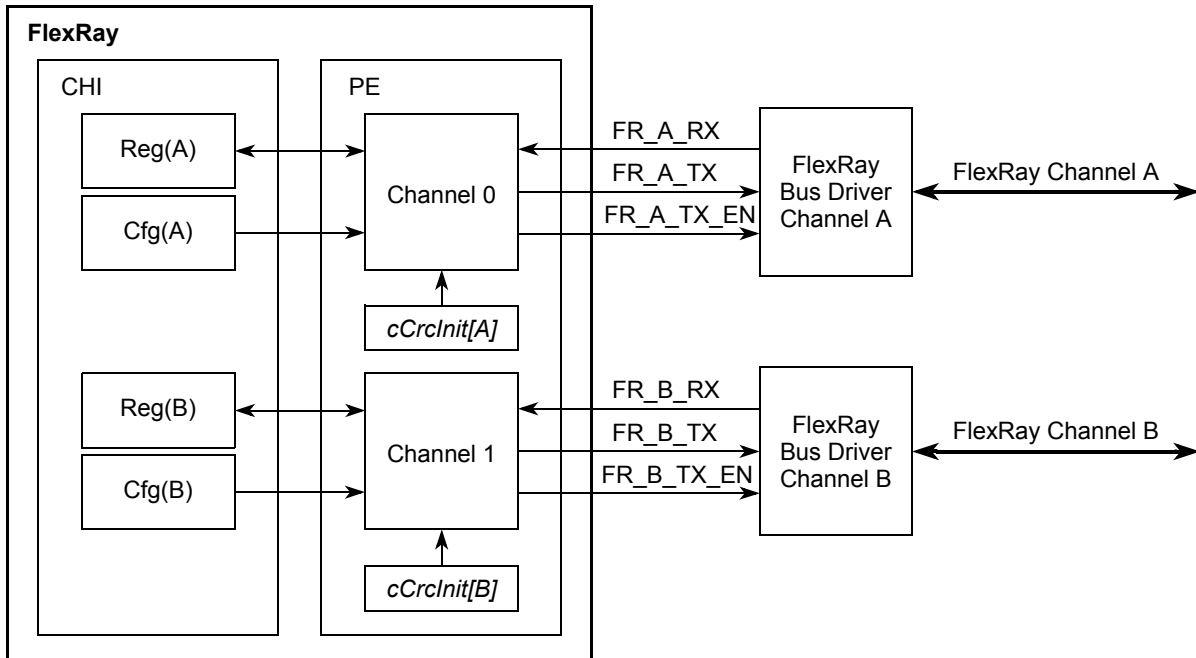


Figure 17-132. Dual Channel Device Mode

17.4.10.2 Single Channel Device Mode

The single channel device mode supports devices that have only one FlexRay port available. This FlexRay port consists of the signals FR_A_RX, FR_A_TX, and FR_A_TX_EN and can be connected to either the physical bus channel A (shown in Figure 17-133) or the physical bus channel B (shown in Figure 17-134).

If the device is configured as a single channel device by setting FR_MCR[SCD] to 1, only the internal channel A and the FlexRay Port A is used. Depending on the setting of FR_MCR[CHA] and FR_MCR[CHB], internal channel A behaves either as a FlexRay channel A or FlexRay channel B. The bit FR_MCR[CHA] must be set if the FlexRay port A is connected to a FlexRay channel A. The bit FR_MCR[CHB] must be set if the FlexRay port A is connected to a FlexRay channel B. The two FlexRay channels differ only in the initial value for the frame CRC cCrcInit. For a single channel device, the application can access and configure only the registers related to internal channel A.

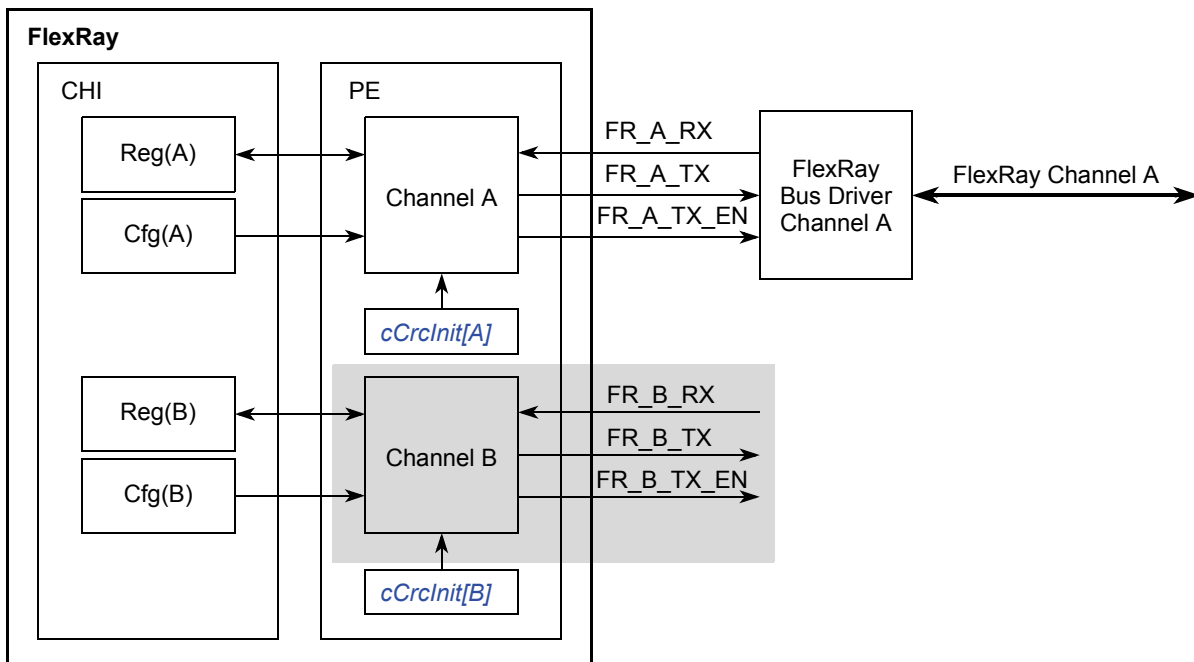


Figure 17-133. Single Channel Device Mode (Channel A)

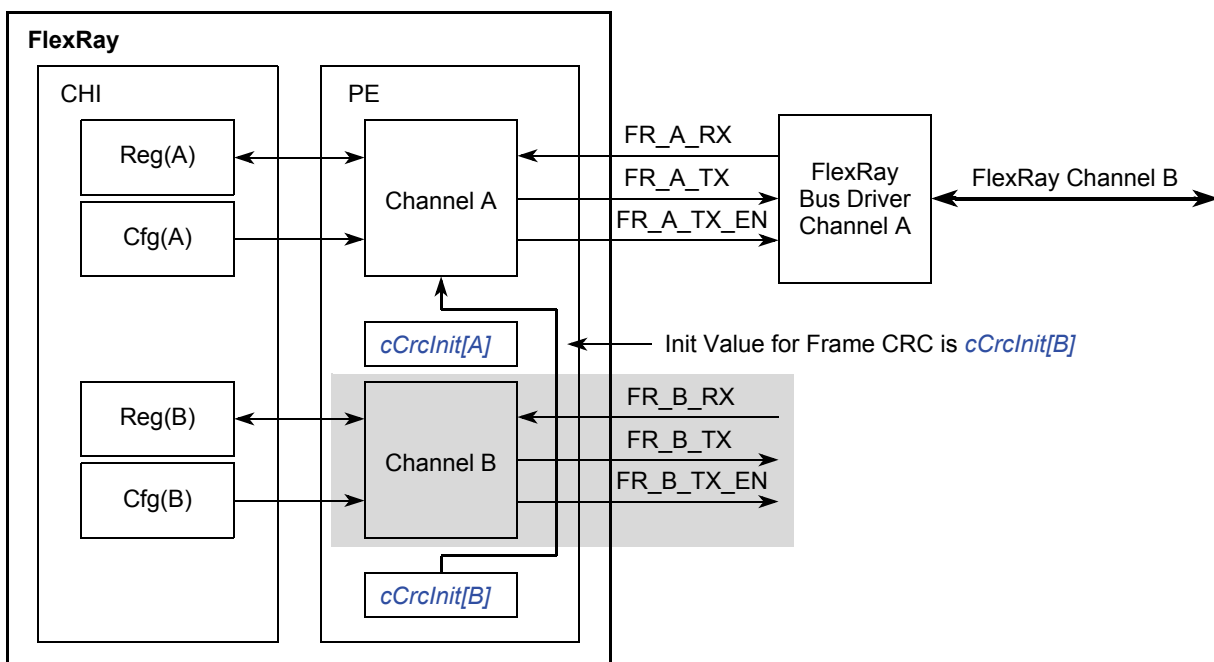


Figure 17-134. Single Channel Device Mode (Channel B)

17.4.11 External Clock Synchronization

The application of the external rate and offset correction is triggered when the software application writes to the EOC_AP and ERC_AP fields in the [Protocol Operation Control Register \(FR_POCR\)](#). The PE

applies the external correction values in the next even-odd cycle pair, as shown in [Figure 17-135](#) and [Figure 17-136](#).

If offset correction applied in the NIT of cycle $2n+1$ is to be affected by the external offset correction, the EOC_AP field must be written to after the start of cycle $2n$ and before the end of the static segment of cycle $2n+1$. If this field is written to after the end of the static segment of cycle $2n+1$, it is not guaranteed that the external correction value will be applied in cycle $2n+1$. If the value is not applied in cycle $2n+1$, then the value will be applied in the cycle $2n+3$. Refer to [Figure 17-135](#) for timing details.

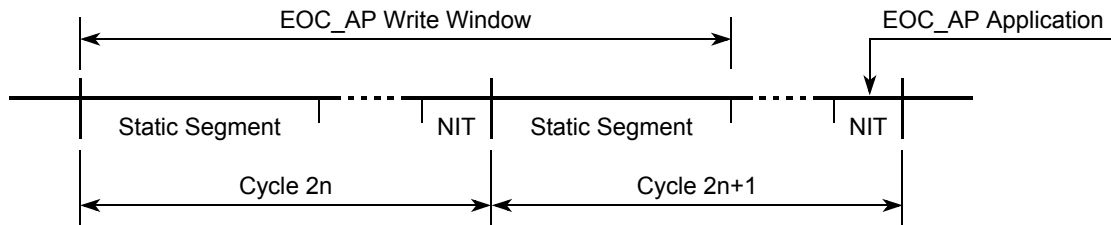


Figure 17-135. External Offset Correction Write and Software Application Timing

If the rate correction for the cycle pair $[2n+2, 2n+3]$ is affected by the external offset correction, the ERC_AP field must be written to after the start of cycle $2n$ and before the end of the static segment start of cycle $2n+1$. If this field is written to after the end of the static segment of cycle $2n+1$, it is not guaranteed that the external correction value is applied in cycle pair $[2n+2, 2n+3]$. If the value is not applied for cycle pair $[2n+2, 2n+3]$, then the value will be applied for cycle pair $[2n+4, 2n+5]$. Refer to [Figure 17-136](#) for details.

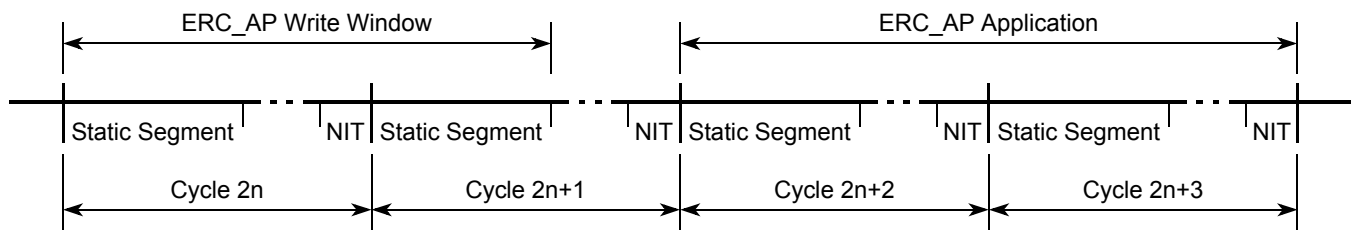


Figure 17-136. External Rate Correction Write and software application Timing

17.4.12 Sync Frame ID and Sync Frame Deviation Tables

FlexRay protocol requires a snapshot of the synchronization frame ID tables for the even and odd communication cycle of both channels. The FlexRay module provides the means to write a copy of these internal tables into the FRM and ensures software access to consistent tables by means of table locking. Once the software application has locked the table successfully, the FlexRay module will not overwrite these tables and the application can read a consistent snapshot.

NOTE

Only synchronization frames that have passed the synchronization frame filters are considered for clock synchronization and appear in the sync frame tables.

17.4.12.1 Sync Frame ID Table Content

The Sync Frame ID Table is a snapshot of the protocol related variables `vsSyncIdListA` and `vsSyncIdListB` for each even and odd communication cycle. This table provides a list of the frame IDs of the synchronization frames received on the corresponding channel and cycle that are used for the clock synchronization.

17.4.12.2 Sync Frame Deviation Table Content

The Sync Frame Deviation Table is a snapshot of the protocol-related variable `zsDev(id)(oe)(ch)!Value`. Each Sync Frame Deviation Table entry provides the deviation value for the sync frame, with the frame ID presented in the corresponding entry in the Sync Frame ID Table.

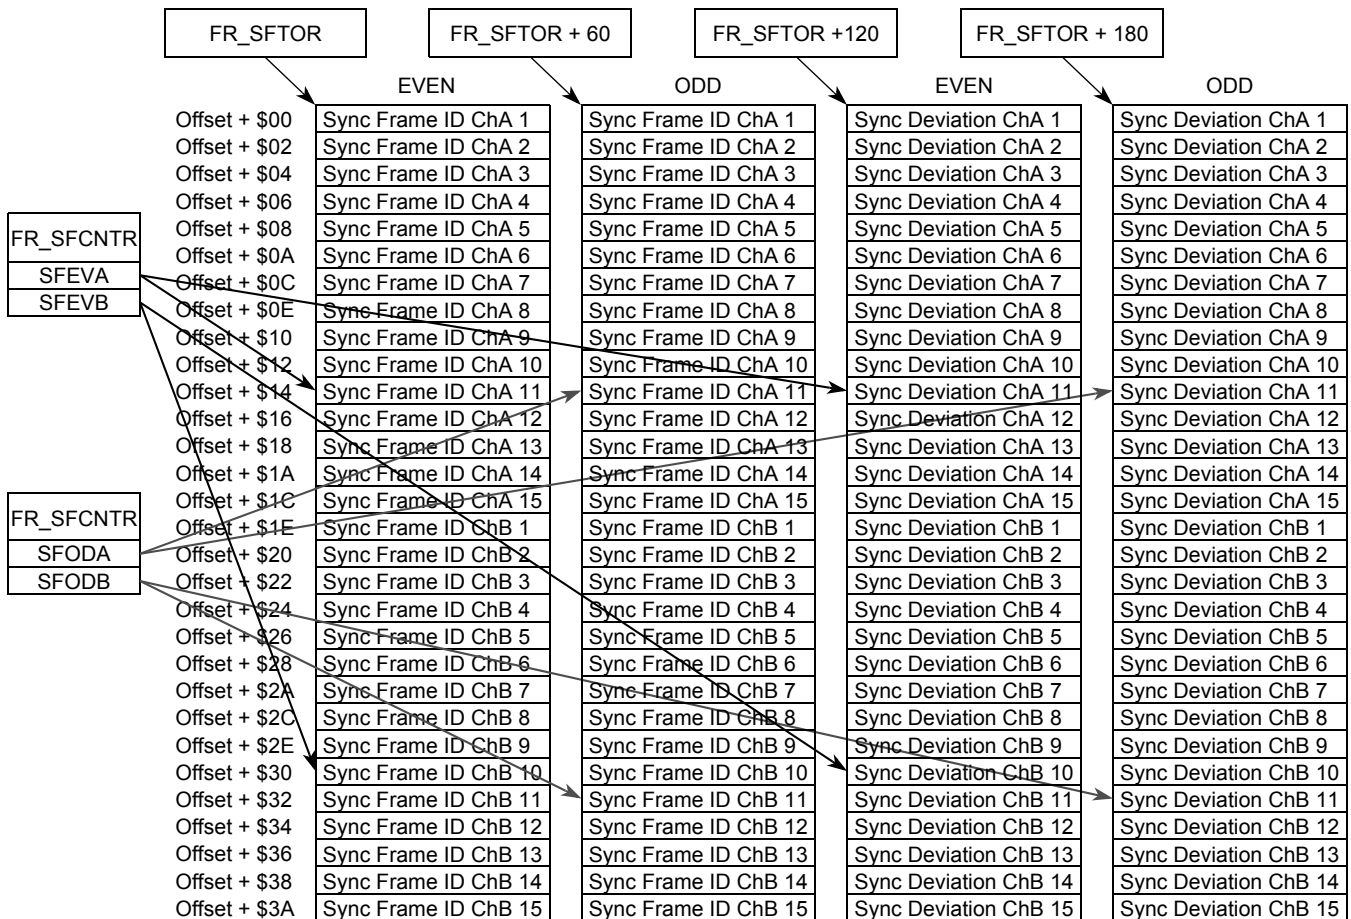


Figure 17-137. Sync Table Memory Layout

17.4.12.3 Sync Frame ID and Sync Frame Deviation Table Setup

The FlexRay module writes a copy of the internal synchronization frame ID and deviation tables into the FRM if requested by software. The software application must provide the appropriate amount of FRM for the tables. The memory layout of the tables is given in Figure 17-137. Each table occupies 120 16-bit entries.

While the protocol is in `POC:config` state, the application must program the offsets for the tables into the [Sync Frame Table Offset Register \(FR_SFTOR\)](#).

17.4.12.4 Sync Frame ID and Sync Frame Deviation Table Generation

The software application controls the generation process of the Sync Frame ID and Sync Frame Deviation Tables into the FRM using the [Sync Frame Table Configuration, Control, Status Register \(FR_SFTCCSR\)](#). A summary of the copy modes is given in [Table 17-111](#).

Table 17-111. Sync Frame Table Generation Modes

FR_SFTCCSR			Description
OPT	SDVEN	SIDEN	
0	0	0	No Sync Frame Table copy
0	0	1	Sync Frame ID Tables will be copied continuously
0	1	0	Reserved
0	1	1	Sync Frame ID Tables and Sync Frame Deviation Tables will be copied continuously
1	0	0	No Sync Frame Table copy
1	0	1	Sync Frame ID Tables for next even-odd-cycle pair will be copied
1	1	0	Reserved
1	1	1	Sync Frame ID Tables and Sync Frame Deviation Tables for next even-odd-cycle pair will be copied

The Sync Frame Table generation process for the even cycle is described below. The same sequence applies to the odd cycle.

If the application has enabled the sync frame table generation by setting `FR_SFTCCSR[SIDEN]` to 1, the FlexRay module starts the update of the even cycle related tables after the start of the NIT of the next even cycle. The FlexRay module checks if the application has locked the tables by reading the `FR_SFTCCSR[ELKS]` lock status bit. If this bit is set, the FlexRay module will not update the table in this cycle. If this bit is cleared, the FlexRay module locks this table and starts the table update. To indicate that these tables are currently updated and may contain inconsistent data, the FlexRay module clears the even table valid status bit `FR_SFTCCSR[EVAL]`. Once all table entries related to the even cycle have been transferred into the FRM, the FlexRay module sets the even table valid bit `FR_SFTCCSR[EVAL]` and the even cycle table written interrupt flag `EVT_IF` in the [Protocol Interrupt Flag Register 1 \(FR_PIFR1\)](#). If the interrupt enable flag `EVT_IE` is set, an interrupt request is generated.

To read the generated tables, software must lock the tables to prevent the FlexRay module from updating these tables. The locking is initiated by writing a 1 to the even table lock trigger `FR_SFTCCSR[ELKT]`. When the even table is not currently updated by the FlexRay module, the lock is granted and the Even Table Lock Status bit `FR_SFTCCSR[ELKS]` is set. This indicates that the application has successfully locked the even sync tables and the corresponding status information fields `SFRA`, `SFRB` in the Sync Frame Counter Register (`FR_SFCNTR`). The value in the `FR_SFTCCSR[CYCNUM]` field provides the number of the cycle that this table is related to.

The number of available table entries per channel is provided in the `FR_SFCNTR[SFEVA]` and `FR_SFCNTR[SFEVB]` fields. The application can now start to read the sync table data from the locations given in [Figure 17-137](#).

After reading all the data from the locked tables, the application must unlock the table by writing to the even table lock trigger `FR_SFTCCSR[ELKT]` again. The even table lock status bit `FR_SFTCCSR[ELKS]` is reset immediately.

If the sync frame table generation is disabled, the table valid bits `FR_SFTCCSR[EVAL]` and `FR_SFTCCSR[EVAL]` are reset when the counter values in the Sync Frame Counter Register (`FR_SFCNTR`) are updated. This is done because the tables stored in the FRM are no longer related to the values in the Sync Frame Counter Register (`FR_SFCNTR`).

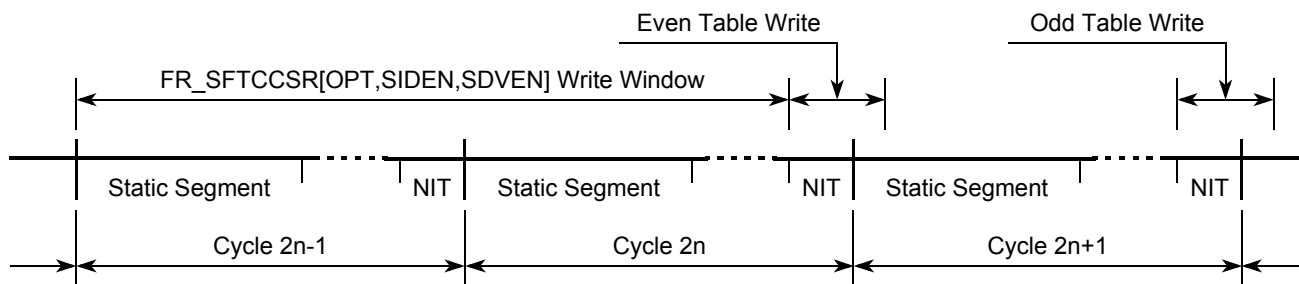


Figure 17-138. Sync Frame Table Trigger and Generation Timing

17.4.12.5 Sync Frame Table Access

The sync frame tables will be transferred into the FRM during the table write windows shown in Figure 17-138. During the table write, the software application cannot lock the table that is currently written. If the application locks the table outside of the table write window, the lock is granted immediately.

17.4.12.5.1 Sync Frame Table Locking and Unlocking

The software application locks the even/odd sync frame table by writing 1 to the lock trigger bit `ELKT/OLKT` in the [Sync Frame Table Configuration, Control, Status Register \(`FR_SFTCCSR`\)](#). If the affected table is not currently written to the FRM, the lock is granted immediately, and the lock status bit `ELKS/OLKS` is set. If the affected table is currently written to the FRM, the lock is not granted. In this case, the application must issue the lock request again until the lock is granted.

The application unlocks the even/odd sync frame table by writing 1 to the lock trigger bit `ELKT/OLKT`. The lock status bit `ELKS/OLKS` is cleared immediately.

17.4.13 MTS Generation

The FlexRay module provides a flexible means to request the transmission of the media access test symbol (MTS) in the symbol window on channel A or channel B.

The software application can configure the set of communication cycles in which the MTS will be transmitted over the FlexRay bus by programming the `CYCCNTMSK` and `CYCCNTVAL` fields in the [MTS A Configuration Register \(`FR_MTSACFR`\)](#) and [MTS B Configuration Register \(`FR_MTSBCFR`\)](#).

The application enables or disables the generation of the MTS on either channel by setting or clearing the MTE control bit in the [MTS A Configuration Register \(`FR_MTSACFR`\)](#) or [MTS B Configuration Register](#)

(FR_MTSBCFR). If an MTS is to be transmitted in a certain communication cycle, the application must set the MTE control bit during the static segment of the preceding communication cycle.

The MTS is transmitted over channel A in the communication cycle with number CCN, if Equation 17-15, Equation 17-16, and Equation 17-17 are fulfilled.

$$\text{PSR0[PROTSTATE]} = \text{NORMAL_ACTIVE} \quad \text{Eqn. 17-15}$$

$$\text{MTSACFR[MTE]} = 1 \quad \text{Eqn. 17-16}$$

$$\text{CCN[5:0]} \& \text{MTSACFR[CCFMSK][5:0]} = \text{MTSACFR[CCFVAL][5:0]} \& \text{MTSACFR[CCFMSK][5:0]} \quad \text{Eqn. 17-17}$$

The MTS is transmitted over channel B in the communication cycle with number CCN, if Equation 17-15, Equation 17-18, and Equation 17-19 are fulfilled.

$$\text{MTSBCFR[MTE]} = 1 \quad \text{Eqn. 17-18}$$

$$\text{CCN[5:0]} \& \text{MTSBCFR[CCFMSK][5:0]} = \text{MTSBCFR[CCFVAL][5:0]} \& \text{MTSBCFR[CCFMSK][5:0]} \quad \text{Eqn. 17-19}$$

17.4.14 Sync Frame and Startup Frame Transmission

The transmission of sync frames and startup frames is controlled by these register fields:

- FR_PCR18[key_slot_id] provides the number of the slot for sync or startup frame transmission.
- FR_PCR11[key_slot_used_for_sync] indicates sync frame transmission.
- FR_PCR11[key_slot_used_for_startup] indicates startup frame transmission.
- FR_PCR12[key_slot_header_crc]:provides header crc for sync frame or startup frame.
- Message Buffer with message buffer number $n = \text{FR_PCR18[key_slot_id]}$.

The generation of the sync or startup frames depends on the current protocol state. In the POC:startup state, the generation is independent of the message buffer setup; in the POC:normal active state, the generation is affected by the current message buffer setup.

17.4.14.1 Sync Frame and Startup Frame Transmission in POC:startup

In the POC:startup state, the sync and startup frame transmission is independent of the message buffer setup. If at least one of the indication bits FR_PCR11[key_slot_used_for_sync] or FR_PCR11[key_slot_used_for_startup] is set, a null frame will be transmitted in the slot with slot number FR_PCR18[key_slot_id]. The header CRC for this null frame is taken from FR_PCR12[key_slot_header_crc]. The settings of the sync and startup frame indicators are taken from FR_PCR11[key_slot_used_for_sync] and FR_PCR11[key_slot_used_for_startup].

17.4.14.2 Sync Frame and Startup Frame Transmission in POC:normal active

In the POC:normal active state, the sync and startup frame transmission depends on the message buffer setup. If at least one of the indication bits FR_PCR11[key_slot_used_for_sync] or FR_PCR11[key_slot_used_for_startup] is set, or if a transmit message buffer with FR_MBFIDR n [FID] == FR_PCR18[key_slot_id] is configured and enabled, a null frame or data frame will be transmitted in

the slot with slot number FR_PCR18[key_slot_id]. The header CRC for this frame is taken from FR_PCR12[key_slot_header_crc], the settings of the sync and startup frame indicators are taken from FR_PCR11[key_slot_used_for_sync] and FR_PCR11[key_slot_used_for_startup]. A data frame will be transmitted if the message buffer is unlocked and committed and the cycle counter filter matches the current cycle.

17.4.15 Sync Frame Filtering

Each received synchronization frame must pass the sync frame acceptance filter and the sync frame rejection filter before it is considered for clock synchronization. If the synchronization frame filtering is globally disabled, i.e. the SFFE control bit in the [Module Configuration Register \(FR_MCR\)](#) is cleared, all received synchronization frames are considered for clock synchronization. If a received synchronization frame did not pass at least one of the two filters, this frame is processed as a normal frame and is not considered for clock synchronization.

17.4.15.1 Sync Frame Acceptance Filtering

The synchronization frame acceptance filter is implemented as a value-mask filter. The value is configured in the [Sync Frame ID Acceptance Filter Value Register \(FR_SFIDAFVR\)](#) and the mask is configured in the [Sync Frame ID Acceptance Filter Mask Register \(FR_SFIDAFMR\)](#). A received synchronization frame with the frame ID FID passes the sync frame acceptance filter, if [Equation 17-20](#) or [Equation 17-21](#) evaluates to true.

$$\text{MCR[SFFE]} == 0 \quad \text{Eqn. 17-20}$$

$$\text{FID[9:0]} \& \text{SFIDAFMR[FMSK[9:0]} == \text{SFIDAFVR[FVAL[9:0]} \& \text{SFIDAFMR[FMSK[9:0]} \quad \text{Eqn. 17-21}$$

NOTE

Sync frames are transmitted in the static segment only. Thus FID <= 1023.

17.4.15.2 Sync Frame Rejection Filtering

The synchronization frame rejection filter is a comparator. The compare value is defined by the [Sync Frame ID Rejection Filter Register \(FR_SFIDRFR\)](#). A received synchronization frame with the frame ID FID passes the sync frame rejection filter if [Equation 17-22](#) or [Equation 17-23](#) evaluates to true.

$$\text{MCR[SFFE]} == 0 \quad \text{Eqn. 17-22}$$

$$\text{FID[9:0]} \neq \text{SFIDRFR[SYNFRID][9:0]} \quad \text{Eqn. 17-23}$$

NOTE

Sync frames are transmitted in the static segment only. Thus FID <= 1023.

17.4.16 Strobe Signal Support

The FlexRay module provides a number of strobe signals for observing internal protocol timing related signals in the protocol engine. The signals are listed and described in [Table 17-13](#).

17.4.16.1 Strobe Signal Assignment

Each of the strobe signals listed in [Table 17-13](#) can be assigned to one of the four strobe ports using the [Strobe Signal Control Register \(FR_STBSCR\)](#). To assign multiple strobe signals, the software application must write multiple times to the [Strobe Signal Control Register \(FR_STBSCR\)](#) with appropriate settings.

To read out the current settings for a strobe signal with number N, the application must execute this sequence:

1. Write to FR_STBSCR with WMD = 1 and SEL = N. (updates SEL field only).
2. Read FR_STBCSR.

The SEL field provides N and the ENB and STBPSEL fields provides the settings for signal N.

17.4.16.2 Strobe Signal Timing

This section provides detailed timing information of the strobe signals with respect to the protocol engine clock.

The strobe signals display internal PE signals. Due to the internal architecture of the PE, some signals are generated several PE clock cycles before the actual action is performed on the FlexRay bus. These signals are listed in [Table 17-13](#) with a negative clock offset. An example waveform is given in [Figure 17-139](#).

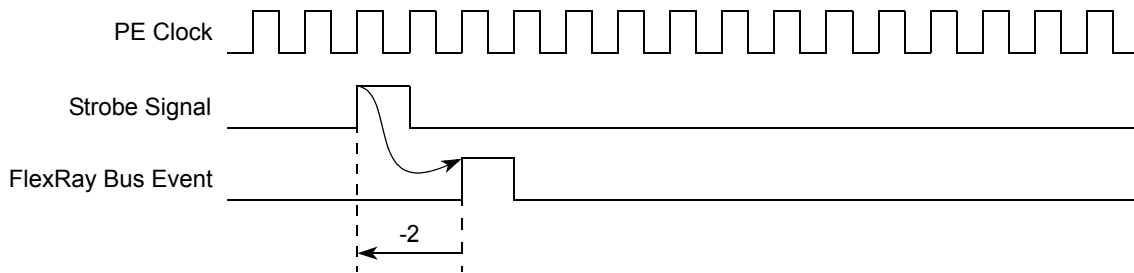


Figure 17-139. Strobe Signal Timing (type = pulse, clk_offset = -2)

Other signals refer to events that occurred on the FlexRay bus some cycles before the strobe signal is changed. These signals are listed in [Table 17-13](#) with a positive clock offset. An example waveform is given in [Figure 17-140](#).

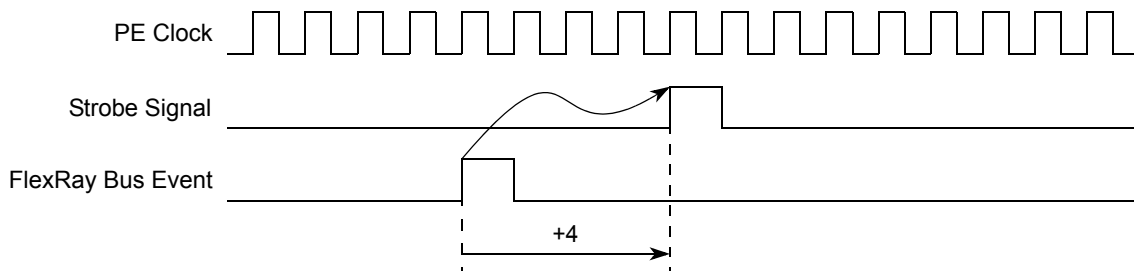


Figure 17-140. Strobe Signal Timing (type = pulse, clk_offset = +4)

17.4.17 Timer Support

The FlexRay module provides two timers that run on the FlexRay time base. Each timer generates a maskable interrupt when it reaches a configured point in time. Timer T1 is an absolute timer, and timer T2 can be configured to be an absolute or a relative timer. Both timers can be configured to be repetitive. In the non-repetitive mode, timer stops if it expires. In repetitive mode, timer is restarted when it expires.

Both timers are active only when the protocol is in **POC:normal active** or **POC:normal passive** state. If the protocol is not in one of these modes, the timers are stopped. The software application must restart the timers when the protocol has reached the **POC:normal active** or **POC:normal passive** state.

17.4.17.1 Absolute Timer T1

The absolute timer T1 has the protocol cycle count and the macrotick count as the time base. The timer 1 interrupt flag **TI1_IF** in the **Protocol Interrupt Flag Register 0 (FR_PIFR0)** is set at the macrotick start event, if [Equation 17-24](#) and [Equation 17-25](#) are fulfilled.

$$\text{CYCCTR}[\text{CYCCNT}] \& \text{T1CYSR}[\text{T1_CYC_MSK}] = \text{T1CYSR}[\text{T1_CYC_VAL}] \& \text{T1CYSR}[\text{T1_CYC_MSK}] \quad \text{Eqn. 17-24}$$

$$\text{MTCTR}[\text{MTCT}] = \text{TI1MTOR}[\text{T1_MTOFFSET}] \quad \text{Eqn. 17-25}$$

If the timer 1 interrupt enable bit **TI1_IE** in the **Protocol Interrupt Enable Register 0 (FR_PIER0)** is asserted, an interrupt request is generated.

The status bit **T1ST** is set when the timer is triggered and is cleared when the timer expires and is non-repetitive. If the timer expires but is repetitive, the **T1ST** bit is not cleared and the timer is restarted immediately. The **T1ST** is cleared when the timer is stopped.

17.4.17.2 Absolute / Relative Timer T2

Timer T2 can be configured to be an absolute or relative timer by setting the **T2_CFG** control bit in the **Timer Configuration and Control Register (FR_TICCR)**. The status bit **T2ST** is set when the timer is triggered, and is cleared when the timer expires and is non-repetitive. If the timer expires but is repetitive, the **T2ST** bit is not cleared and the timer is restarted immediately. The **T2ST** is cleared when the timer is stopped.

17.4.17.2.1 Absolute Timer T2

If timer T2 is configured as an absolute timer, it has the same functionality timer T1, but the configuration from **Timer 2 Configuration Register 0 (FR_TI2CR0)** and **Timer 2 Configuration Register 1 (FR_TI2CR1)** is used. On expiration of timer T2, the interrupt flag **TI2_IF** in the **Protocol Interrupt Flag Register 0 (FR_PIFR0)** is set. If the timer 1 interrupt enable bit **TI1_IE** in the **Protocol Interrupt Enable Register 0 (FR_PIER0)** is asserted, an interrupt request is generated.

17.4.17.2.2 Relative Timer T2

If the timer T2 is configured as a relative timer, the interrupt flag **TI2_IF** in the **Protocol Interrupt Flag Register 0 (FR_PIFR0)** is set, when the programmed amount of macroticks **MT[31:0]**, defined by **Timer 2 Configuration Register 0 (FR_TI2CR0)** and **Timer 2 Configuration Register 1 (FR_TI2CR1)**, has

expired since the trigger or restart of timer 2. The relative timer is implemented as a down counter and expires when it has reached 0. At the macrotick start event, the value of MT[31:0] is checked and then decremented. Thus, if the timer is started with MT[31:0] == 0, it expires at the next macrotick start.

17.4.18 Slot Status Monitoring

The FlexRay module provides several means for slot status monitoring. All slot status monitors use the same slot status vector provided by the PE. The PE provides a slot status vector for each static slot, each dynamic slot, symbol window, and the NIT, on a per channel base. The content of the slot status vector is described in Table 17-112. The PE provides the slot status vector within the first macrotick after the end of the related slot/window/NIT, as shown in Figure 17-141.

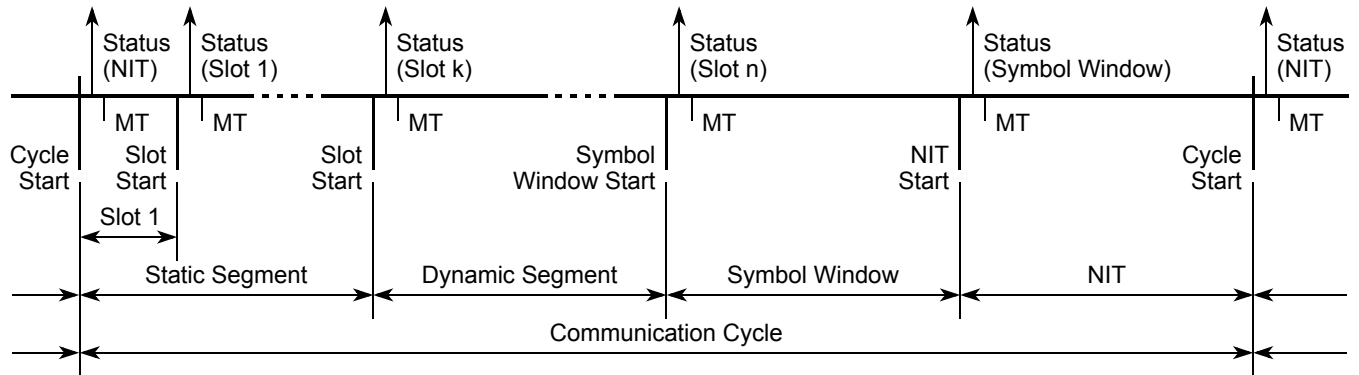


Figure 17-141. Slot Status Vector Update

NOTE

The slot status for the NIT of cycle *n* is provided after the start of cycle *n*+1.

Table 17-112. Slot Status Content

	Status Content
Static or Dynamic Slot	<p>Slot Related Status <i>vSS!ValidFrame</i> - valid frame received <i>vSS!SyntaxError</i> - syntax error occurred while receiving <i>vSS!ContentError</i> - content error occurred while receiving <i>vSS!BViolation</i> - boundary violation while receiving <i>for slots in which the module transmits:</i> <i>vSS!TxConflict</i> - reception ongoing while transmission starts <i>for slots in which the module does not transmit:</i> <i>vSS!TxConflict</i> - reception ongoing while transmission starts first valid - channel that has received the first valid frame</p> <p>received frame related status <i>extracted from</i> a) header of valid frame, if <i>vSS!ValidFrame</i> = 1 b) last received header, if <i>vSS!ValidFrame</i> = 0 c) set to '0', if nothing was received <i>vRF!Header!NFIndicator</i> - Null Frame Indicator (0 for null frame) <i>vRF!Header!SuFIndicator</i> - Startup Frame Indicator <i>vRF!Header!SyFIndicator</i> - Sync Frame Indicator</p>
Symbol Window	<p>Symbol Window Related Status <i>vSS!ValidFrame</i> - always 0 <i>vSS!ContentError</i> - content error occurred while receiving <i>vSS!SyntaxError</i> - syntax error occurred while receiving <i>vSS!BViolation</i> - boundary violation while receiving <i>vSS!TxConflict</i> - reception ongoing while transmission starts</p> <p>received symbol related status <i>vSS!ValidMTS</i> - valid Media Test Access Symbol received</p> <p>received frame related status <i>see static/dynamic slot</i></p>
NIT	<p>NIT Related Status <i>vSS!ValidFrame</i> - always 0 <i>vSS!ContentError</i> - content error occurred while receiving <i>vSS!SyntaxError</i> - syntax error occurred while receiving <i>vSS!BViolation</i> - boundary violation while receiving <i>vSS!TxConflict</i> - always 0</p> <p>received frame related status <i>see static/dynamic slot</i></p>

17.4.18.1 Channel Status Error Counter Registers

The two channel status error counter registers, [Channel A Status Error Counter Register \(FR_CASERCR\)](#) and [Channel B Status Error Counter Register \(FR_CBSERCR\)](#), increment by one if at least one of four slot status error bits ([vSS!SyntaxError](#), [vSS!ContentError](#), [vSS!BViolation](#), or [vSS!TxConflict](#)) is set to 1. The status vectors for all slots in the static and dynamic segment, in the symbol window, and in the NIT are taken into account. The counters wrap round after they have reached the maximum value.

17.4.18.2 Protocol Status Registers

The [Protocol Status Register 2 \(FR_PSR2\)](#) provides slot status information about network idle time NIT and the symbol window. The [Protocol Status Register 3 \(FR_PSR3\)](#) provides aggregated slot status information.

17.4.18.3 Slot Status Registers

The eight slot status registers, [Slot Status Registers \(FR_SSR0–FR_SSR7\)](#), can be used to observe the status of static slots, dynamic slots, the symbol window, or the NIT without individual message buffers. These registers provide all slot status related and received frame / symbol related status information, as given in [Table 17-112](#), except of the first valid indicator for non-transmission slots.

17.4.18.4 Slot Status Counter Registers

The FlexRay module provides four slot status error counter registers, [Slot Status Counter Registers \(FR_SSCR0–FR_SSCR3\)](#). Each of these slot status counter registers is updated with the value of an internal slot status counter at the start of a communication cycle. The internal slot status counter is incremented if its increment condition, defined by the [Slot Status Counter Condition Register \(FR_SSCCR\)](#), matches the status provided by the PE. All static slots, the symbol window, and the NIT status are taken into account. Dynamic slots are excluded. The internal slot status counting and update timing is shown in [Figure 17-142](#).

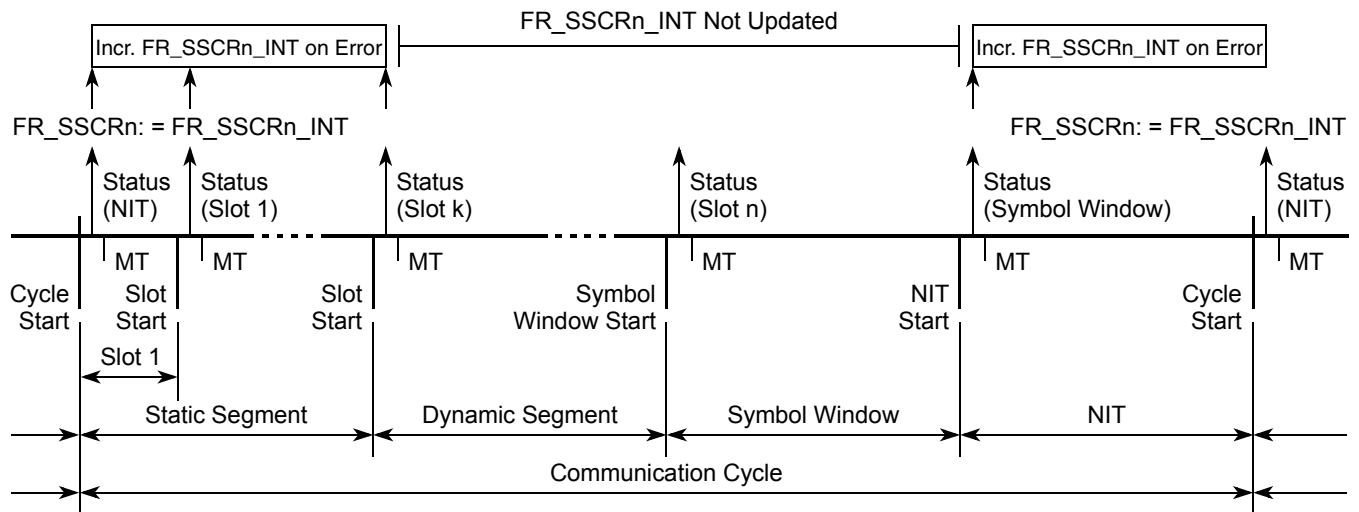


Figure 17-142. Slot Status Counting and FR_SSCRn Update

The PE provides the status of the NIT in the first slot of the next cycle. Due to these facts, the FR_SSCRn register reflects, in cycle *n*, the status of the NIT of cycle *n-2*, and the status of all static slots and the symbol window of cycle *n-1*.

The increment condition for each slot status counter consists of two parts: the frame related condition part and the slot related condition part. The internal slot status counter FR_SSCRn_INT is incremented if at least one of the conditions is fulfilled:

1. Frame-related condition:

- $(FR_SSCCRn[VFR] | FR_SSCCRn[SYF] | FR_SSCCRn[NUF] | FR_SSCCRn[SUF])$ // count on frame condition
= 1;

and

- $(\sim FR_SSCCRn[VFR] | vSS!ValidFrame)$ & // valid frame restriction
 $(\sim FR_SSCCRn[SYF] | vRF!Header!SyFIndicator)$ & // sync frame indicator restriction
 $(\sim FR_SSCCRn[NUF] | \sim vRF!Header!NFIndicator)$ & // null frame indicator restriction
 $(\sim FR_SSCCRn[SUF] | vRF!Header!SuFIndicator)$ // startup frame indicator restriction
 = 1;

NOTE

The indicator bits SYF, NUF, and SUF are valid only when a valid frame is received. Thus it is required to always set the VFR, whenever count on frame condition is used.

2. Slot-related condition:

- $((FR_SSCCRn[STATUSMASK[3] \& vSS!ContentError) | // increment on content error$
 $(FR_SSCCRn[STATUSMASK[2] \& vSS!SyntaxError) | // increment on syntax error$
 $(FR_SSCCRn[STATUSMASK[1] \& vSS!BViolation) | // increment on boundary violation$
 $(FR_SSCCRn[STATUSMASK[0] \& vSS!TxConflict)) // increment on transmission conflict$
 = 1;

If the slot status counter is in single cycle mode, i.e. $FR_SSCCRn[MCY] = 0$, the internal slot status counter FR_SSCRn_INT is reset at each cycle start. If the slot status counter is in the multicycle mode, i.e. $FR_SSCCRn[MCY] = 1$, the counter is not reset and incremented, until the maximum value is reached.

17.4.18.5 Message Buffer Slot Status Field

Each individual message buffer and each FIFO message buffer provides a slot status field, which provides the information shown in [Table 17-112](#) for the static/dynamic slot. The update conditions for the slot status field depend on the message buffer type. Refer to the Message Buffer Update Sections in [Section 17.4.6](#), “[Individual Message Buffer Functional Description](#).”

17.4.19 Interrupt Support

The FlexRay module provides five individual interrupt sources and three combined interrupt sources.

17.4.19.1 Individual Interrupt Sources

There are five individual message buffer interrupt sources: receive (2), wakeup, protocol, and CHI.

Each individual message buffer provides an interrupt flag $FR_MBCCSn[MBIF]$ and an interrupt enable bit $FR_MBCCSn[MBIE]$. The module sets the interrupt flag when the slot status of the message buffer was updated. If the interrupt enable bit is asserted, an interrupt request is generated.

17.4.19.1.1 Receive FIFO Interrupts

The device FlexRay module provides two receive FIFO interrupt sources.

Each of the two receive FIFOs provides a receive FIFO not empty interrupt flag. The module sets the receive FIFO not empty interrupt flags (FR_GIFER[FNEBIF], FR_GIFER[FNEAIF]) in the [Global Interrupt Flag and Enable Register \(FR_GIFER\)](#) if the corresponding receive FIFO is not empty.

17.4.19.1.2 Wakeup Interrupt

The module provides one interrupt source related to the wakeup.

The module sets the wakeup interrupt flag FR_GIFER[WUPIF] when it has received an wakeup symbol on the FlexRay bus. The module generates an interrupt request if the interrupt enable bit FR_GIFER[WUPIE] is asserted.

17.4.19.1.3 Protocol Interrupts

The module provides one interrupt source for protocol related events. For details, see the [Protocol Interrupt Flag Register 0 \(FR_PIFR0\)](#) and the [Protocol Interrupt Flag Register 1 \(FR_PIFR1\)](#). Each interrupt source has its own interrupt enable bit.

17.4.19.1.4 CHI Error Interrupts

The module provides one interrupt source for CHI related error events. For details, see the [CHI Error Flag Register \(FR_CHIERFR\)](#). There is one common interrupt enable bit FR_GIFER[CHIE] for all CHI error interrupt sources.

17.4.19.2 Combined Interrupt Sources

The device FlexRay module has three combined interrupt sources: transmit, receive, and global. Each combined interrupt source generates an interrupt request only when at least one of the interrupt source that is combined generates an interrupt request.

17.4.19.2.1 Transmit Message Buffer Interrupt

The device has one combined transmit message buffer interrupt. The combined transmit message buffer interrupt request is generated when at least one of the individual transmit message buffers generates an interrupt request and the interrupt enable bit FR_GIFER[TBIE] is asserted.

17.4.19.2.2 Receive Message Buffer Interrupt

The device has one combined receive message buffer interrupt. The combined receive message buffer interrupt request is generated when at least one of the individual receive message buffers generates an interrupt request and the interrupt enable bit FR_GIFER[RBIE] is asserted.

17.4.19.2.3 Global Interrupt

The combined module interrupt request is a global interrupt generated if at least one of the combined interrupt sources generates an interrupt request and the interrupt enable bit FR_GIFER[MIE] is asserted.

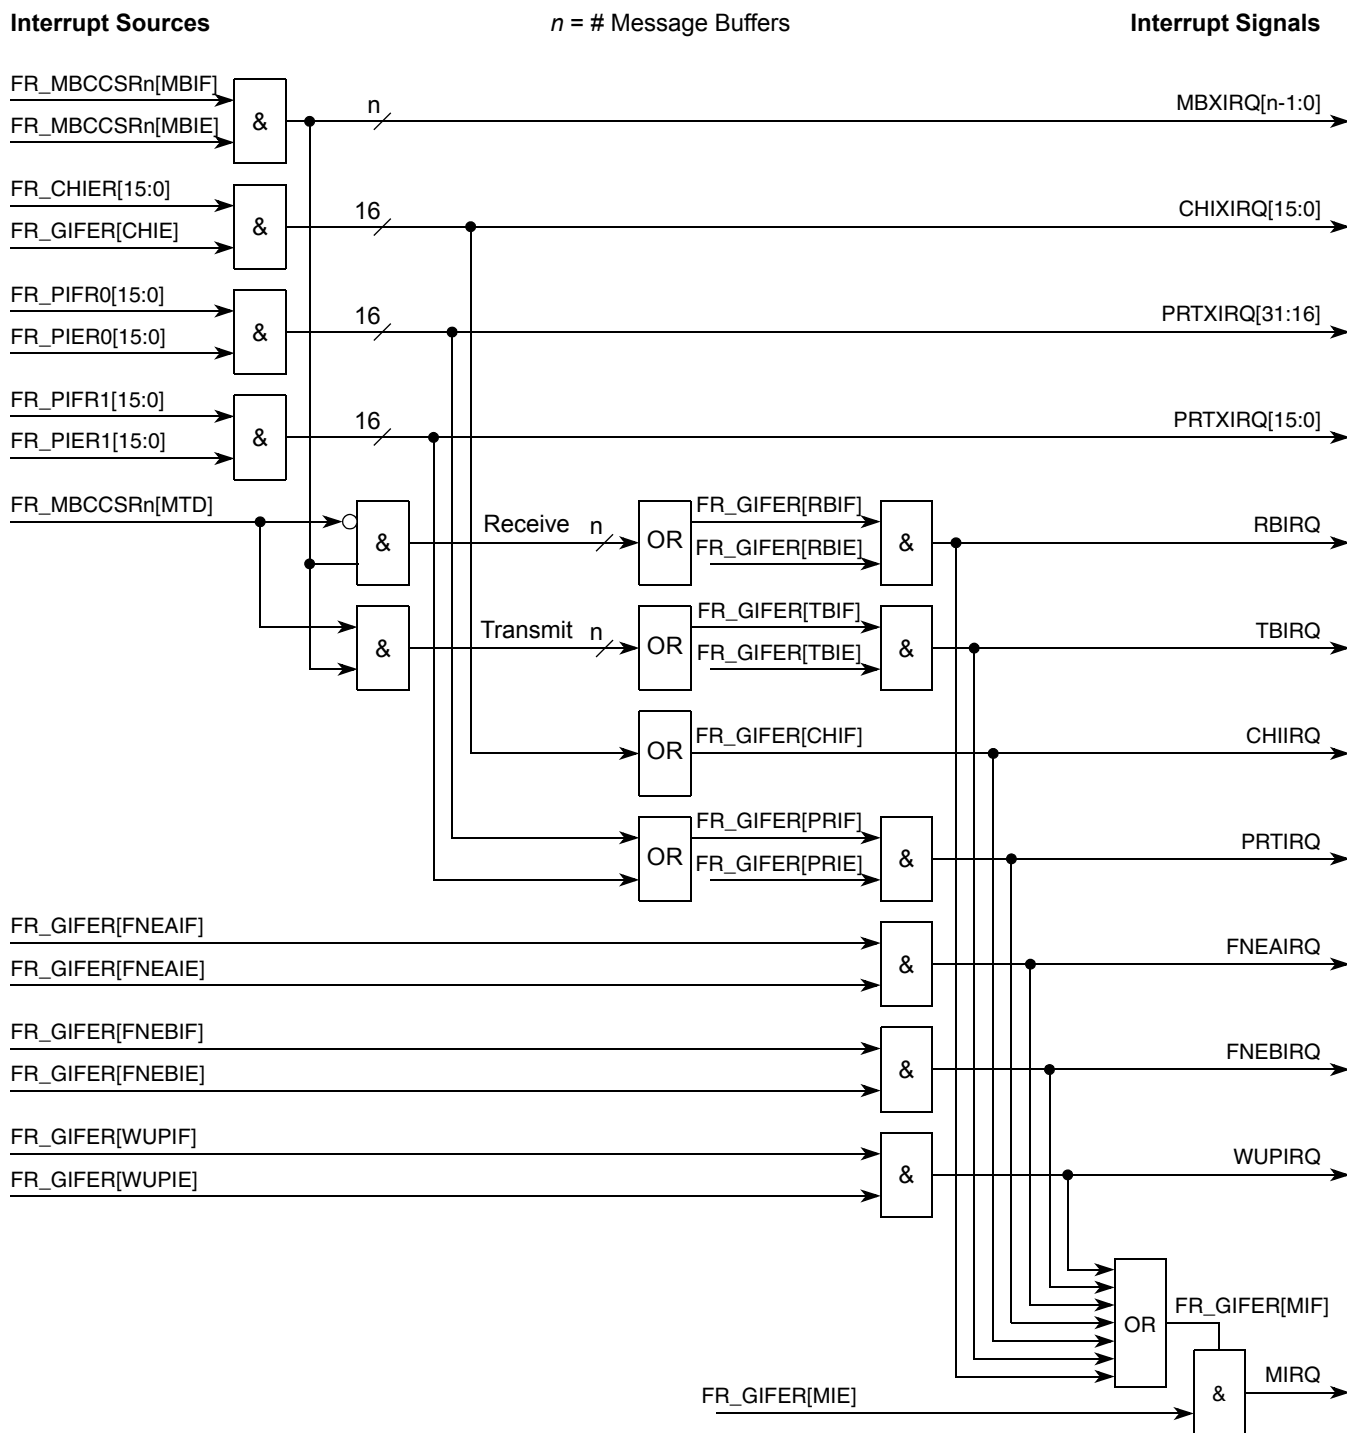


Figure 17-143. Scheme of Cascaded Interrupt Request

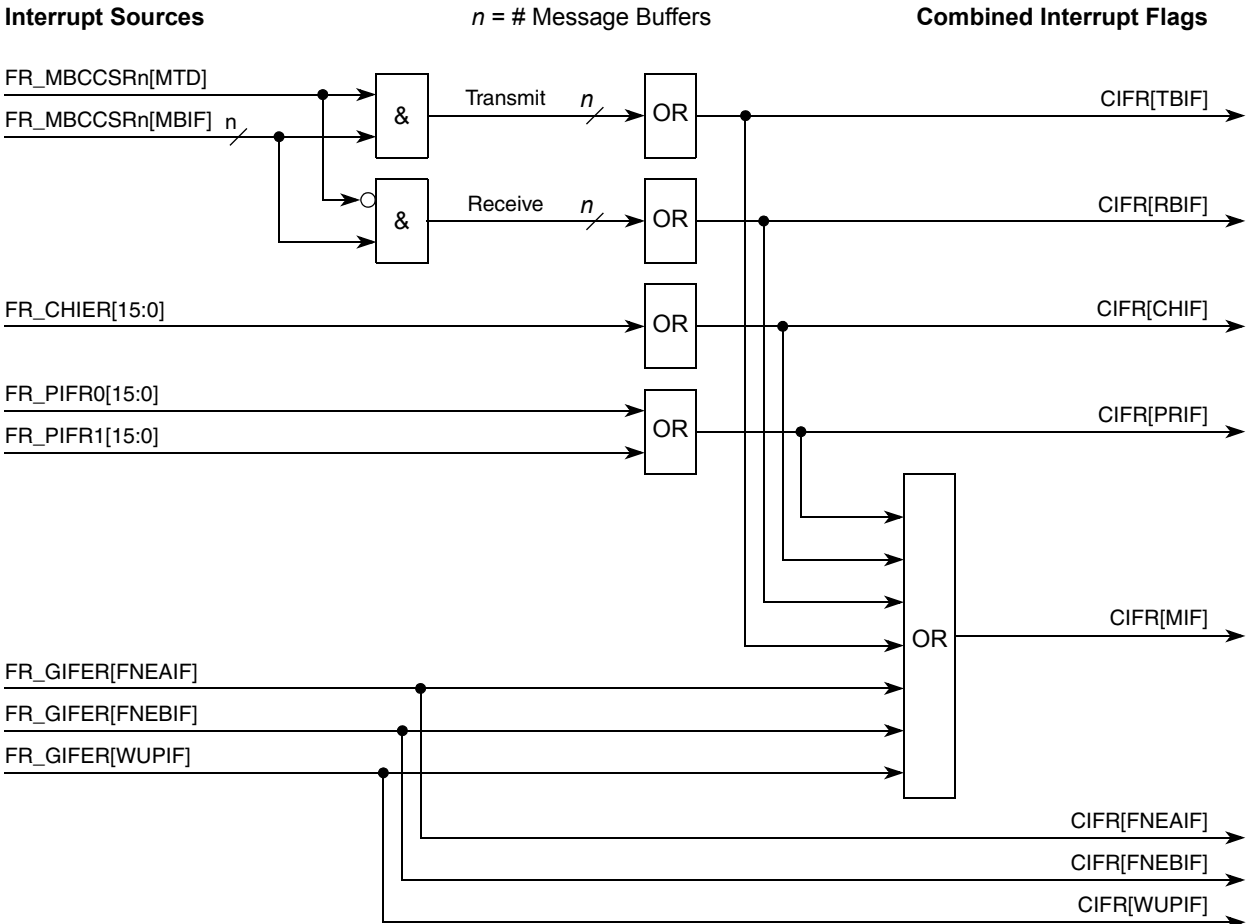


Figure 17-144. Scheme of Combined Interrupt Flags

17.5 Initialization/Application Information

17.5.1 FlexRay Initialization Sequence

The full FlexRay module is reset with the hard reset. Additionally, the protocol engine is reset in stop mode and as a result of the RESET protocol command issued using the protocol operation control register (FR_POCR).

The hard reset resets all internal registers and all registers in the modules memory map. The protocol engine reset resets only the registers in the protocol engine. All registers in memory are not reset.

The following is an initialization sequence applicable to the FlexRay module after a hard reset:

1. Allocate FlexRay memory partition.
 - Determine the system memory base address of the FlexRay memory partition.
2. Configure FlexRay module.
 - Set the control bits in the module configuration register (FR_MCR).
 - Set the system memory base address in the system memory base address high register (FR_SYMBADHR) and in the system memory base address low register (FR_SYMBADLR).
3. Enable the FlexRay module.
 - Set the MEN bit in the Module configuration register (FR_MCR).
 - The module enters normal mode.
4. Configure the protocol engine.
 - Write the CONFIG command into the POCCMD field of the protocol operation control register (FR_POCR).
 - Write to the FR_PCR[0:31] registers to set all protocol parameters.
5. Configure the message buffers and FIFOs.
 - Set the number of message buffers used and the message buffer segmentation in the message buffer segment size and utilization register (FR_MBSSUTR).
 - Define the message buffer data size in the message buffer data size register (FR_MBDSR).
 - Configure each message buffer by setting the configuration values in the message buffer configuration, control, status registers (FR_MBCCSR n), message buffer cycle counter filter registers (FR_MBCCFR n), message buffer frame id registers (FR_MBFIDR n), and message buffer index registers (FR_MBIDXR n).
 - Configure the receive FIFOs
6. Start the FlexRay module as a FlexRay node.
 - Write the READY protocol command into the POCCMD field of the Protocol operation control register (FR_POCR).
 - Now the FlexRay module enters the FlexRay protocol.

After this sequence, the module is configured as a FlexRay node and is ready to be integrated into the FlexRay cluster.

17.5.2 Number of Usable Message Buffers

This section describes how to determine the number of message buffers that can be utilized at a given CHI clock frequency f_{chi} .

The FlexRay module uses a sequential search to determine the individual message buffers suitable for transmission or reception in the next slot. This search must be finished within one FlexRay slot. The shortest FlexRay slot is an empty dynamic slot. An empty dynamic slot is a minislot and consists of at least 2 macroticks. The minimum length of a corrected macrotick is 39 μT . The length of 1 μT is 25 ns. This results in a minimum slot length of:

$$t_{\text{slotmin}} = 1.95\mu\text{s} = 25 \frac{\text{ns}}{\mu\text{T}} \cdot 39 \frac{\mu\text{T}}{\text{MT}} \cdot 2\text{MT} \quad \text{Eqn. 17-26}$$

The search engine is located in the CHI and runs on the CHI clock. The search engine searches one individual message buffer per clock cycle. For internal status update and double buffer commit operations and as a result of the clock domain crossing jitter, an additional amount of 10 clock cycles is required to ensure correct operation.

For a given number of message buffers and for a given CHI clock frequency f_{chi} , this results in a search duration of:

$$t_{\text{search}} = \frac{1}{f_{\text{chi}}} \cdot (|\text{messagebuffers}| + 10) \quad \text{Eqn. 17-27}$$

As mentioned above, each message buffer search has to be finished within one slot. Thus the following equation has to be fulfilled:

$$t_{\text{search}} \leq t_{\text{slotmin}} \quad \text{Eqn. 17-28}$$

This results in the formula to determine the minimum required CHI frequency for a given number of message buffers that can be utilized.

$$f_{\text{chi}} \geq \frac{|\text{messagebuffers}| + 10}{1.95\mu\text{s}} \quad \text{Eqn. 17-29}$$

The minimum CHI frequency for a selected number of message buffer is given [Table 17-113](#).

Table 17-113. Minimum CHI Frequency Examples

Number of Message Buffers	Minimum f_{CHI}
32	21.54 MHz
64	37.95 MHz
128	70.77 MHz

17.5.3 FlexRay Shut Down Sequence

This section describes a safe shutdown sequence for the FlexRay module to stop the module gracefully:

- Do not send invalid data on the FlexRay bus.
- Do not corrupt the FlexRay bus and disturb ongoing communication.
- Finish all ongoing reception.

Firstly, the software application has to disable all message buffers by triggering the EDT trigger bit in the message buffer configuration, control, status registers (FR_MBCCSR n) until the EDS flag is cleared by the module. This ensures that no transmission is started by the module. If all message buffers are disabled, the application issues the HALT command to the PE using the protocol operation control register (FR_POCR). The PE then waits for the end of the communication cycle and goes into HALT state. The application can observe this state change in the PROT field of the protocol status register 0 (FR_PSR0).

17.5.4 Protocol Control Command Execution

This section considers the issues of the protocol control command execution.

The software application issues any of the protocol control commands listed in the POCCMD field of [Table 17-15](#) by writing the command to the POCCMD field of the [Protocol Operation Control Register \(FR_POCR\)](#). As a result, the FlexRay module sets the BSY bit while the command is transferred to the PE. When the PE has accepted the command, the BSY flag is cleared. All commands are accepted by the PE.

The PE maintains a protocol command vector. For each command that was accepted by the PE, the PE sets the corresponding command bit in the protocol command vector. If a command is issued while the corresponding command bit is set, the command is not queued and is lost.

If the command execution block of the PE is idle, it selects the next accepted protocol command with the highest priority from the current protocol command vector according to the protocol control command priorities given in [Table 17-114](#). If the current protocol state does not allow the execution of this protocol command (see POC state changes in *FlexRay Communications System Protocol Specification, Version 2.1*) the FlexRay module asserts the illegal protocol command interrupt flag IPC_IF in the [Protocol Interrupt Flag Register 1 \(FR_PIFR1\)](#). The protocol command is not executed in this case.

Some protocol commands may be interrupted by other commands or the detection of a fatal protocol error as indicated by [Table 17-114](#). If the application issues the RESET, FREEZE, or READY command, or if the PE detects a fatal protocol error, some commands already stored in the command vector will be removed from this vector.

Table 17-114. Protocol Control Command Priorities

Protocol Command	Priority	Interrupted By	Cleared and Terminated By
RESET	1 (highest)	none	
FREEZE	2		RESET
READY	3		RESET
CONFIG_COMPLETE	3		RESET
ALL_SLOTS	4	RESET, FREEZE, READY, CONFIG_COMPLETE, fatal protocol error	RESET, FREEZE, READY, CONFIG_COMPLETE, fatal protocol error
ALLOW_COLDSTART	5		RESET
RUN	6		RESET, FREEZE, fatal protocol error
WAKEUP	7		RESET, FREEZE, fatal protocol error
DEFAULT_CONFIG	8		RESET, FREEZE, fatal protocol error
CONFIG	9		RESET
HALT	10 (lowest)		RESET, FREEZE, READY, CONFIG_COMPLETE, fatal protocol error

17.5.5 Protocol Reset Command

The section considers the issues of the protocol RESET command. The application software issues the protocol reset command by writing the RESET command code to the POCMD field of the protocol operation control register (FR_POCR). As a result, the PE stops its operation immediately, the FlexRay bus ports put into their idle state, and no more data or status information is sent to the CHI. The lack of PE signals stops all message buffer operations in the CHI. In particular, the message buffers that are currently under internal use remain internally locked. To overcome this message buffer internal lock situation, the application must put the protocol into the **POC:default config** state. This will release all internal message buffer locks.

The following sequence must be executed by the application to put the protocol into the **POC:default config** state:

1. Repeat sending the protocol command FREEZE via the protocol operation control register (FR_POCR), until the freeze bit FRZ in the protocol status register 1 (FR_PSR1) is set.
2. Repeat sending the protocol command DEFAULT_CONFIG via the protocol operation control register (FR_POCR), until the freeze bit FRZ bit in the protocol status register 1 (FR_PSR1) is clear and the PROTSTATE field in the protocol status register 0 (FR_PSR0) is set to DEFAULT_CONFIG.

17.6 Document Revision History

Table 115. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release



Chapter 18


Enhanced Modular Input/Output Subsystem (eMIOS)

18.1 Introduction

This chapter describes the enhanced modular input/output subsystem (eMIOS), which provides functionality to generate or measure timed events.

18.1.1 Block Diagram

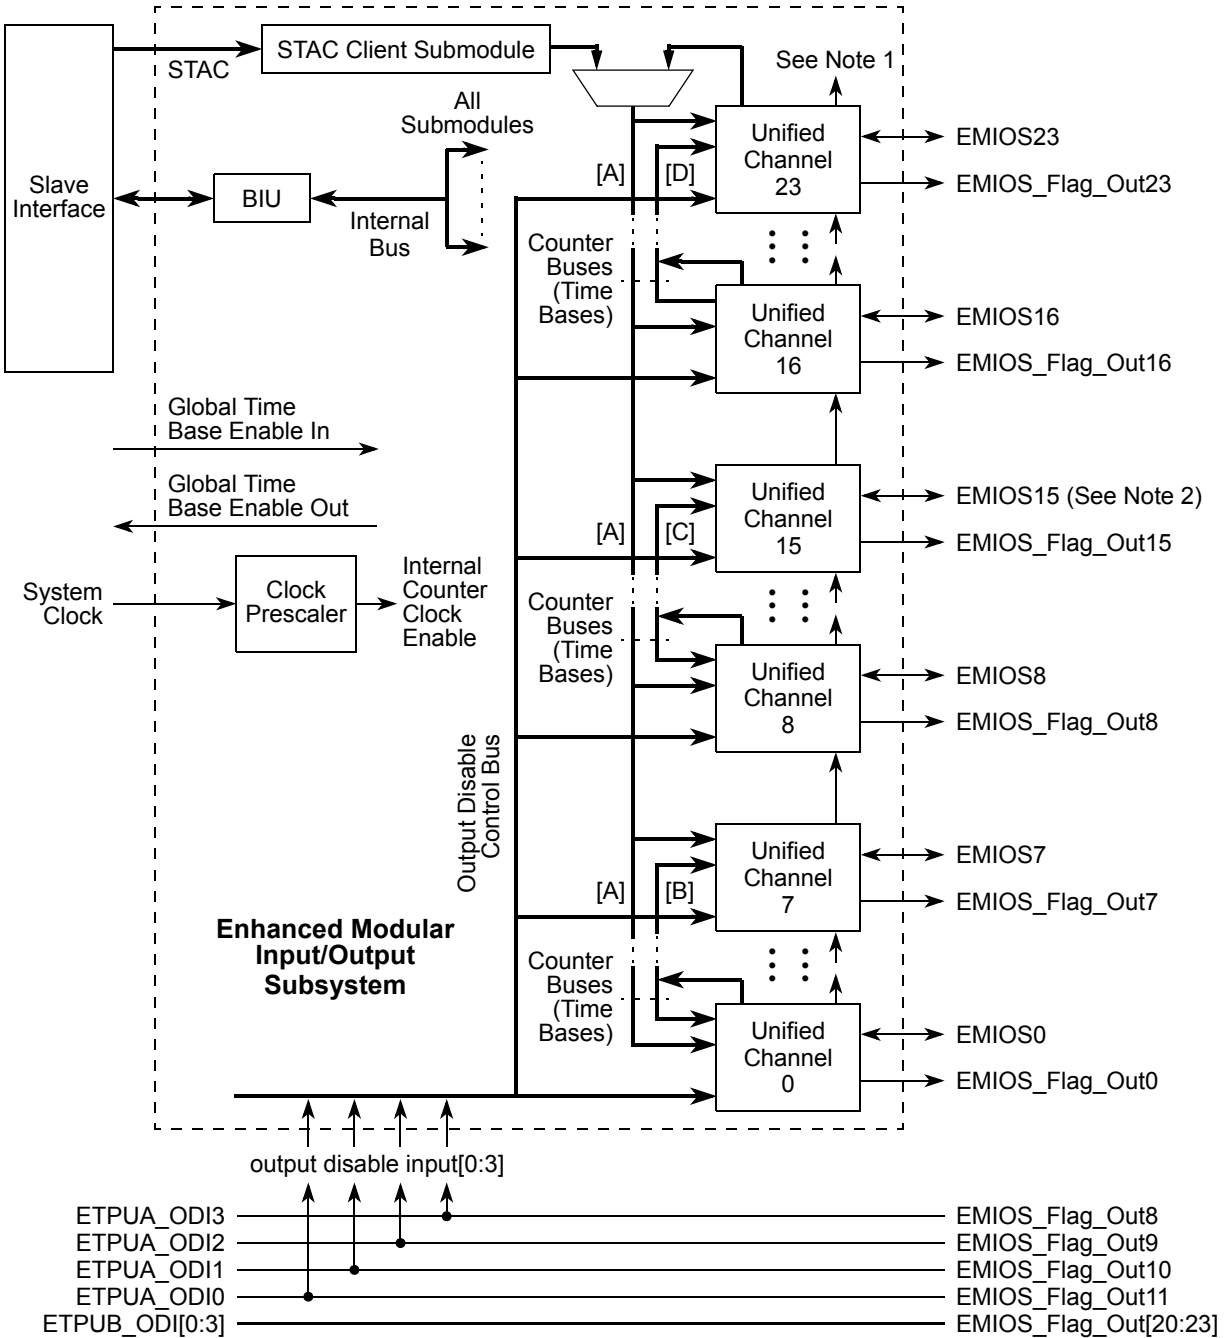Figure 18-1 shows the block diagram of the eMIOS.



Note 1: Connection between UC[n-1] and UCn necessary to implement QDEC mode.
 Note 2: On channels 12–15, there is no input from EMIOS[12:15], but only from the DSPI module.

Figure 18-1. eMIOS Block Diagram

18.1.2 Overview

The eMIOS builds on the MIOS concept by using a unified channel module that provides a superset of the functionality of all the individual MIOS channels, while providing a consistent user interface. This allows more flexibility as each unified channel can be programmed for different functions.

18.1.3 Features

- 24 unified channels
- Unified channels features
 - 24-bit registers for captured/match values
 - 24-bit internal counter
 - Internal prescaler
 - Dedicated output pin for buffer direction control
 - Selectable time base
 - Can generate its own time base
- Four 24-bit wide counter buses
 - Counter bus A can be driven by unified channel 23 or by the STAC bus.
 - Counter bus B, C, and D are driven by unified channels 0, 8, and 16, respectively.
 - Counter bus A can be shared among all unified channels. UCs 0 to 7 can share counter bus A and B, UCs 8 to 15 can share counter bus A and C, and UCs 16 to 23 can share counter buses A and D.
- One global prescaler
- Shared time bases through the counter buses
- Synchronization among internal and external time bases
- Shadow FLAG register
- State of module can be frozen for debug purposes
- DMA request capability for some channels
- Motor control capability

18.1.4 Modes of Operation

18.1.4.1 eMIOS Modes

The eMIOS operates in one of the modes described below:

- User mode

This is the normal operating mode. When $EMIOS_MCR[FRZ] = 0$, and $EMIOS_CCR[FREN] = 0$, the eMIOS is in user mode.
- Debug mode

Debug mode is individually programmed for each channel. When entering this mode, the UC registers' contents are frozen, but remain available for read and write access through the slave

interface. After leaving debug mode, all counters that were frozen upon debug mode entry will resume at the point where they were frozen.

In debug mode, all clocks are running and all registers are accessible; thus, this mode is not intended for power saving, but for use during software debugging.

- Freeze mode

Freeze mode enables the eMIOS to freeze the registers of the unified channels when debug mode is requested at the MCU level. While in freeze mode, the eMIOS continues to operate to allow the MCU access to the unified channels' registers. The unified channel will remain frozen until the EMIOS_MCR[FRZ] bit is written to zero, the MCU exits debug mode, or a unified channel's EMIOS_CCR[FREN] bit is cleared.

18.1.4.2 Unified Channel Modes

The unified channels can be configured to operate in the following modes:

Table 18-1. Unified Channel Modes

Mode
General purpose input/output
Single action input capture
Single action output compare
Input pulse width measurement
Input period measurement
Double action output compare
Pulse/edge accumulation
Pulse/edge counting
Quadrature decode
Windowed programmable time accumulation
Modulus counter, normal
Modulus counter, buffered
Output pulse width and frequency modulation, normal
Output pulse width and frequency modulation, buffered
Center aligned output pulse width modulation with dead time insertion, normal
Center aligned output pulse width modulation with dead time insertion, buffered
Output pulse width modulation, normal
Output pulse width modulation, buffered

These modes are described in [Section 18.4.4.4, “Modes of Operation of the Unified Channels.”](#)

18.2 External Signal Description

18.2.1 Overview

Each unified channel has one input and one output signal connected to the channel's I/O pin. Refer to the SIU, eTPU, and DSPI sections for details about the connection to pads and other modules.

The internal *output disable input* signals 0-3 (refer to [Table 18-3](#)) are provided to implement the output disable feature needed for motor control. They are connected to EMIOS_Flag_Out signals according to [Section 18.2.1.2, “Output Disable Input—eMIOS Output Disable Input Signals.”](#)

18.2.1.1 External Signals

When configured as an input, EMIOS n is synchronized and filtered by the programmable input filter (PIF). The output of the PIF is then used by the channel logic and is available to be read by the MCU through the UCIN bit of the EMIOS_CSR n .

When configured as an output, EMIOS n is a registered output and is available for reading by the MCU through the UCOUT bit of the EMIOS_CSR n .

Table 18-2. External Signals

Signal	Direction	Function	Reset State
EMIOS[0:11, 16:23]	Input	eMIOS Unified Channel n input	—
EMIOS[0:23]	Output	eMIOS Unified Channel n output	0 / Hi-Z ¹

¹ A value of 0 refers to the reset value of the signal. Hi-Z refers to the state of the external pin if a tri-state output buffer is controlled by the corresponding eMIOS signal.

18.2.1.2 Output Disable Input—eMIOS Output Disable Input Signals

Output disable inputs to both the eMIOS and the eTPU modules are connected to EMIOS_Flag_Out n signals according to [Table 18-3](#).

Table 18-3. eMIOS Output Disable Input Signals

eMIOS Channel ¹	eMIOS Output Disable Input Signal ²	eTPU Output Disable Input Signal ³
EMIOS_Flag_Out8	output disable input 3	ETPUA_ODI3
EMIOS_Flag_Out9	output disable input 2	ETPUA_ODI2
EMIOS_Flag_Out10	output disable input 1	ETPUA_ODI1
EMIOS_Flag_Out11	output disable input 0	ETPUA_ODI0
EMIOS_Flag_Out20	—	ETPUB_ODI0
EMIOS_Flag_Out21	—	ETPUB_ODI1

Table 18-3. eMIOS Output Disable Input Signals (continued)

eMIOS Channel ¹	eMIOS Output Disable Input Signal ²	eTPU Output Disable Input Signal ³
EMIOS_Flag_Out22	—	ETPUB_ODI2
EMIOS_Flag_Out23	—	ETPUB_ODI3

¹ All other EMIOS_Flag_Out n output signals are not connected.

² Each of the four internal eMIOS *output disable input* signals can be programmed to disable the output of any eMIOS channel if that channel has selected output disable capability by the setting of its EMIOS_CCR n [ODIS] bit, and by specifying the output disable input in its EMIOS_CCR n [ODISSL] field.

³ ETPU x _ODI y input signals disable outputs for eTPU engine x , channels ($y*8$) through ($y*8+7$). Refer to the ETPU chapter for more details.

18.3 Memory Map/Register Definition

Addresses of unified channel (UC) registers are specified as offsets from the channel’s base address, otherwise the eMIOS base address is used as reference.

The overall address map organization is shown in [Table 18-4](#). [Table 18-5](#) describes the unified channel registers. All registers are cleared on reset.

Table 18-4. eMIOS Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xC3FA_0000)	EMIOS_MCR	Module Configuration Register	32
Base + 0x004	EMIOS_GFR	Global Flag Register	32
Base + 0x008	EMIOS_OUDR	Output Update Disable Register	32
Base + 0x00C– Base + 0x01F	—	Reserved	—
Base + 0x020	UC0	Unified Channel 0 Registers	256
Base + 0x040	UC1	Unified Channel 1 Registers	256
Base + 0x060	UC2	Unified Channel 2 Registers	256
Base + 0x080	UC3	Unified Channel 3 Registers	256
Base + 0x0A0	UC4	Unified Channel 4 Registers	256
Base + 0x0C0	UC5	Unified Channel 5 Registers	256
Base + 0x0E0	UC6	Unified Channel 6 Registers	256
Base + 0x100	UC7	Unified Channel 7 Registers	256
Base + 0x120	UC8	Unified Channel 8 Registers	256
Base + 0x140	UC9	Unified Channel 9 Registers	256
Base + 0x160	UC10	Unified Channel 10 Registers	256
Base + 0x180	UC11	Unified Channel 11 Registers	256

Table 18-4. eMIOS Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x1A0	UC12	Unified Channel 12 Registers	256
Base + 0x1C0	UC13	Unified Channel 13 Registers	256
Base + 0x1E0	UC14	Unified Channel 14 Registers	256
Base + 0x200	UC15	Unified Channel 15 Registers	256
Base + 0x220	UC16	Unified Channel 16 Registers	256
Base + 0x240	UC17	Unified Channel 17 Registers	256
Base + 0x260	UC18	Unified Channel 18 Registers	256
Base + 0x280	UC19	Unified Channel 19 Registers	256
Base + 0x2A0	UC20	Unified Channel 20 Registers	256
Base + 0x2C0	UC21	Unified Channel 21 Registers	256
Base + 0x2E0	UC22	Unified Channel 22 Registers	256
Base + 0x300	UC23	Unified Channel 23 Registers	256

Table 18-5. Unified Channel Memory Map

Address	Register Name	Register Description	Size (bits)
UC n Base + 0x00	EMIOS_CADR n	Channel A Data Register	32
UC n Base + 0x04	EMIOS_CBDR n	Channel B Data Register	32
UC n Base + 0x08	EMIOS_CCNTR n	Channel Counter Register	32
UC n Base + 0x0C	EMIOS_CCR n	Channel Control Register	32
UC n Base + 0x10	EMIOS_CSR n	Channel Status Register	32
UC n Base + 0x14	EMIOS_ALTAN	Channel Alternate Address Register	32
UC n Base + 0x18– UC n Base + 0x1F	—	Reserved	—

18.3.1 Register Description

All registers are 32-bit wide. This section illustrates the eMIOS with 24 unified channels supporting 24-bit wide data.

18.3.1.1 eMIOS Module Configuration Register (EMIOS_MCR)

EMIOS_MCR contains global control bits for the eMIOS module.

Address: Base + 0x00

Access: User read/write

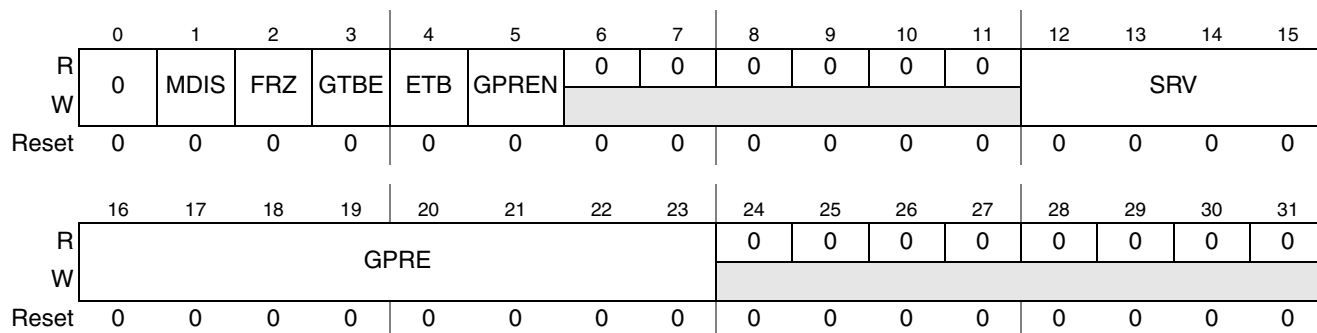


Figure 18-2. eMIOS Module Configuration Register (EMIOS_MCR)

Table 18-6. EMIOS_MCR Field Descriptions

Field	Description
0	Reserved. This bit is readable/writable, but has no effect.
1 MDIS	Module disable. Puts the eMIOS in low power mode. The MDIS bit is used to stop the clock of the module, except the access to registers EMIOS_MCR and EMIOS_OUDR. 0 Clock is running 1 Enter low power mode
2 FRZ	Freeze. Enables the eMIOS to freeze the registers of the unified channels when debug mode is requested at MCU level. Each unified channel should have FREN bit set in order to enter freeze mode. While in freeze mode, the eMIOS continues to operate to allow the MCU access to the unified channels registers. The unified channel will remain frozen until the FRZ bit is written to zero or the MCU exits debug mode or the unified channel FREN bit is cleared. 0 Allows unified channels to continue to operate when device enters debug mode and the EMIOS_CCRn[FREN] bit is set 1 Stops unified channels operation when in debug mode and the EMIOS_CCRn[FREN] bit is set
3 GTBE ¹	Global time base enable. Used to export a global time base enable from the module and provide a method to start time bases of several modules simultaneously. 0 Global time base enable out signal negated 1 Global time base enable out signal asserted Note: The global time base enable input signal controls the internal counters. When asserted, internal counters are enabled. When negated, internal counters disabled.
4 ETB	External time base. Selects the time base source that drives counter bus [A]. 0 Unified channel 23 drives counter bus [A] 1 STAC drives counter bus[A] Note: If ETB is set to select STAC as the counter bus[A] source, the GTBE must be set to enable the STAC to counter bus[A]. See Section 18.4.2, “STAC Client Submodule” and the shared time and angle clock (STAC) bus interface section and the STAC bus configuration register (ETPU_REDCR) section of the eTPU chapter for more information about the STAC.

Table 18-6. EMIOS_MCR Field Descriptions (continued)

Field	Description														
5 GPREN	Global prescaler enable. Enables the prescaler counter. 0 Prescaler disabled (no clock) and prescaler counter is cleared 1 Prescaler enabled														
6–11	Reserved.														
12–15 SRV[0:3]	Server time slot. Selects the address of a specific STAC server to which the STAC client submodule is assigned (refer to Section 18.4.2, “STAC Client Submodule,” for details) 0000 – eTPU engine A, TCR1 0001 – eTPU engine B, TCR1 0010 – eTPU engine A, TCR2 0011 – eTPU engine B, TCR2 0100–1111 reserved														
16–23 GPRE[0:7]	Global prescaler. Selects the clock divider value for the global prescaler, as shown here: <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>GPRE[0:7]</th> <th>Divide Ratio</th> </tr> </thead> <tbody> <tr> <td>00000000</td> <td>1</td> </tr> <tr> <td>00000001</td> <td>2</td> </tr> <tr> <td>.</td> <td>.</td> </tr> <tr> <td>.</td> <td>.</td> </tr> <tr> <td>.</td> <td>.</td> </tr> <tr> <td>11111111</td> <td>256</td> </tr> </tbody> </table>	GPRE[0:7]	Divide Ratio	00000000	1	00000001	2	11111111	256
GPRE[0:7]	Divide Ratio														
00000000	1														
00000001	2														
.	.														
.	.														
.	.														
11111111	256														
24–31	Reserved.														

¹ The GTBE signal is an inter-module signal, not an external pin on the device.

18.3.1.2 eMIOS Global Flag Register (EMIOS_GFR)

The EMIOS_GFR is a read-only register that groups the FLAG bits from all channels. This organization improves interrupt handling on simpler devices. These bits are mirrors of the FLAG bits of each channel register (EMIOS_CSR) and flag bits in those channel registers cannot be cleared by accessing this ‘mirror’ register.

Address: Base + 0x04

Access: User read only

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	F23	F22	F21	F20	F19	F18	F17	F16
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	F15	F14	F13	F12	F11	F10	F9	F8	F7	F6	F5	F4	F3	F2	F1	F0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 18-3. eMIOS Global Flag Register (EMIOS_GFR)

18.3.1.3 eMIOS Output Update Disable Register (EMIOS_OUDR)

The EMIOS_OUDR serves to disable transfers from the A2 to the A1 channel registers and from the B2 to the B1 channel registers when values are written to these registers, and the channel is running in modulus counter (MC) mode or an output mode.

Address: Base + 0x08

Access: User read/write

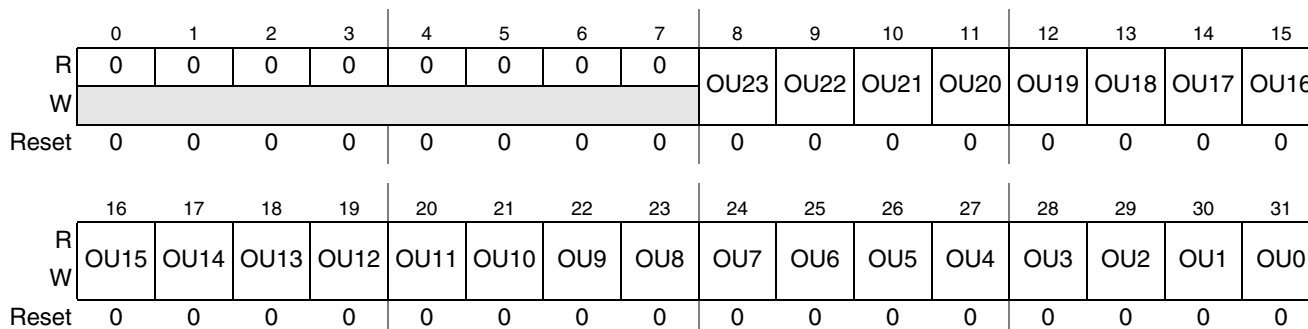


Figure 18-4. eMIOS Output Update Disable Register (EMIOS_OUDR)

Table 18-7. EMIOS_OUDR Field Descriptions

Field	Description
0–7	Reserved.
8–31 OU n	Channel n output update disable. When running in MC mode or an output mode, values are written to registers A2 and B2. OU n bits are used to disable transfers from registers A2 to A1 and B2 to B1. Each bit controls one channel. 0 Transfer enabled. Depending on the operating mode, transfer may occur immediately or in the next period. Unless stated otherwise, transfer occurs immediately. 1 Transfers disabled

18.3.1.4 eMIOS Channel A Data Register (EMIOS_CADR n)

Depending on the mode of operation, internal registers A1 or A2, used for matches and captures, can be assigned to address EMIOS_CADR n . Both A1 and A2 are cleared by reset. Table 18-8 summarizes the EMIOS_CADR n writing and reading accesses for all operating modes. For more information see section Section 18.4.4.4, “Modes of Operation of the Unified Channels.”

Address: UC n Base + 0x00

Access: User read/write

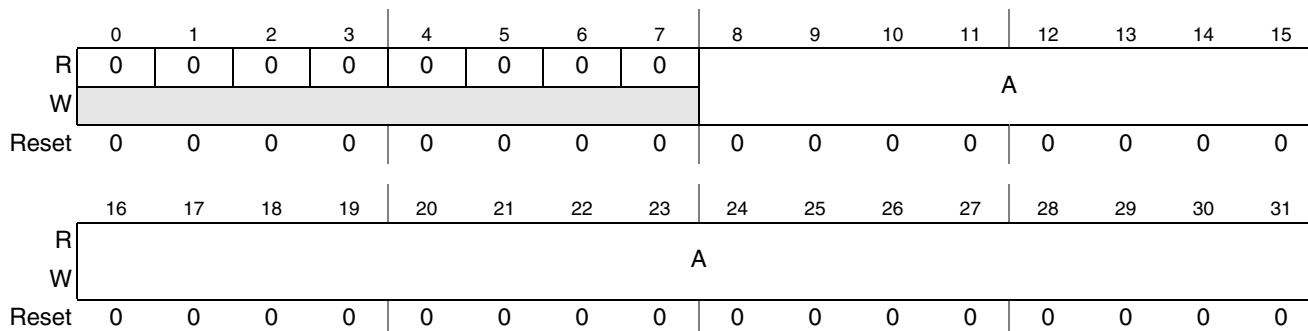


Figure 18-5. eMIOS Channel A Data Register (EMIOS_CADR n)

18.3.1.5 eMIOS Channel B Data Register (EMIOS_CBDR_n)

Depending on the mode of operation, internal registers B1 or B2 can be assigned to address EMIOS_CBDR_n. Both B1 and B2 are cleared by reset. Table 18-8 summarizes the EMIOS_CBDR_n writing and reading accesses for all operating modes. For more information see section Section 18.4.4.4, “Modes of Operation of the Unified Channels.”

NOTE

The EMIOS_CBDR_n must not be read speculatively. For future compatibility, the TLB entry covering the EMIOS_CBDR_n must be configured to be guarded.

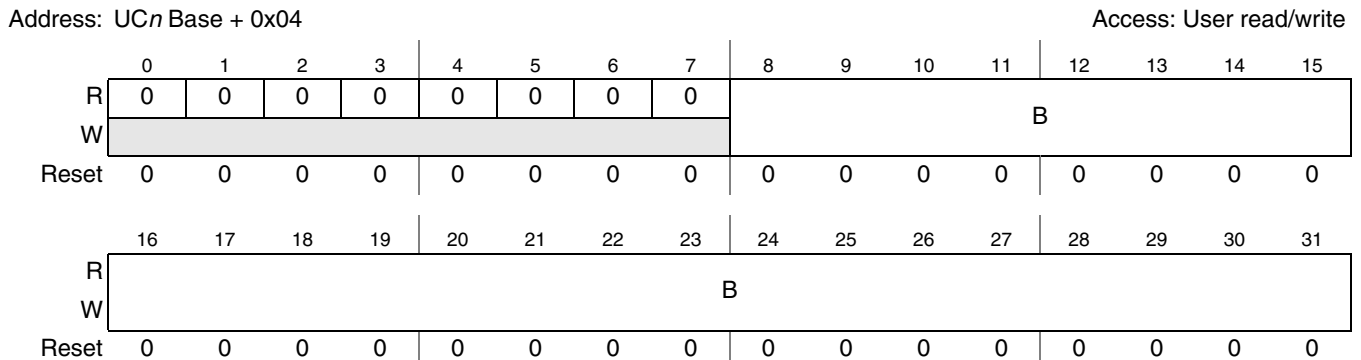


Figure 18-6. eMIOS Channel B Data Register (EMIOS_CBDR_n)

Table 18-8. EMIOS_CADR_n, EMIOS_CBDR_n, and EMIOS_ALTAN_n Value Assignments

Operating Mode	Register Access				
	Write	Read	Write	Read	Alternate Read
GPIO	A1, A2	A1	B1,B2	B1	—
SAIC ¹	—	A2	B2	B2	—
SAOC ¹	A2	A1	B2	B2	—
IPWM	—	A2	—	B1	—
IPM	—	A2	—	B1	—
DAOC	A2	A1	B2	B1	—
PEA	A1	A2	—	B1	—
PEC ¹	A1	A1	B1	B1	A2
QDEC ¹	A1	A1	B2	B2	—
WPTA	A1	A1	B1	B1	A2
MC – Normal ¹	A2	A1	B2	B2	—
MC – Buffered	A2	A1	B2	B2	—
OPWFM – Normal	A2	A1	B2	B1	—

Table 18-8. EMIOS_CADR_n, EMIOS_CBDR_n, and EMIOS_ALTAN Value Assignments (continued)

Operating Mode	Register Access				
	Write	Read	Write	Read	Alternate Read
OPWFM – Buffered	A2	A1	B2	B1	—
OPWMC – Normal	A2	A1	B2	B1	—
OPWMC – Buffered	A2	A1	B2	B1	—
OPWM – Normal	A2	A1	B2	B1	—
OPWM – Buffered	A2	A1	B2	B1	—

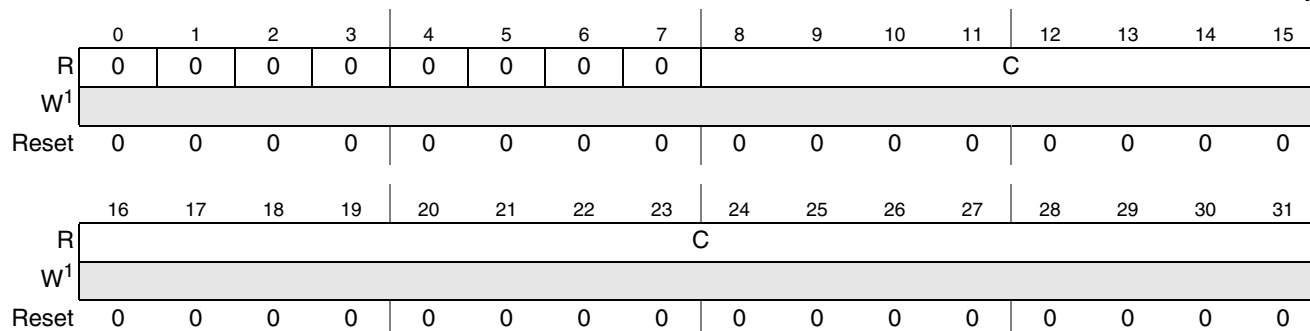
¹ In these modes, the register EMIOS_CBDR_n is not used, but B2 can be accessed.

18.3.1.6 eMIOS Channel Counter Register (EMIOS_CCNTR_n)

The EMIOS_CCNTR_n contains the value of the internal counter. When GPIO mode is selected or the channel is frozen, the EMIOS_CCNTR_n is readable and writable. For all others modes, the EMIOS_CCNTR_n is a read-only register. When entering some operating modes, this register is automatically cleared (refer to section [Section 18.4.4.4, “Modes of Operation of the Unified Channels,”](#) for details).

Address: UC_n Base + 0x08

Access: User read only



¹ In GPIO mode or freeze action, this register is writable.

Figure 18-7. eMIOS Channel Counter Register (EMIOS_CCNTR_n)

18.3.1.7 eMIOS Channel Control Register (EMIOS_CCR_n)

The eMIOS_CCR_n enables the setting of several control parameters for a unified channel. Among these controls are the setting of a channel prescaler, channel mode selection, input trigger sensitivity and filtering, interrupt and DMA request enabling, and output mode control.

Address: UC_n Base + 0x0C

Access: User read/write

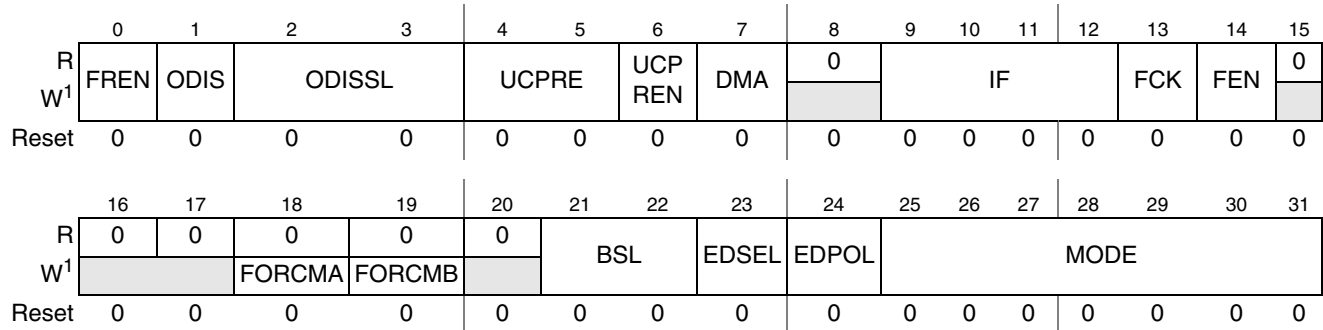


Figure 18-8. eMIOS Channel Control Register (EMIOS_CCR_n)

Table 18-9. EMIOS_CCR_n Field Description

Field	Description										
0 FREN	Freeze enable. If set and validated by FRZ bit in EMIOS_MCR, freezes all registers values when in debug mode, allowing the MCU to perform debug functions. 0 Normal operation 1 Freeze UC registers values										
1 ODIS	Output disable. Allows output disable in any output mode except GPIO. 0 The output pin operates normally 1 If the selected <i>output disable input</i> signal is asserted, the output pin goes to the complement of EDPOL for OPWFM, OPWFMB, and OPWMB modes, but the unified channel continues to operate normally; that is, it continues to produce FLAG and matches. When the selected <i>output disable input</i> signal is negated, the output pin operates normally.										
2–3 ODISSL[0:1]	Output disable select. Selects one of the four <i>output disable input</i> signals. 00 <i>output disable input</i> 0 01 <i>output disable input</i> 1 10 <i>output disable input</i> 2 11 <i>output disable input</i> 3										
4–5 UCPRE[0:1]	Prescaler. Selects the clock divider value for the unified channel internal prescaler, as shown below. <table border="1" style="margin: 10px auto; border-collapse: collapse; text-align: center;"> <thead> <tr> <th>UCPRE[0:1]</th> <th>Divide Ratio</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>1</td> </tr> <tr> <td>01</td> <td>2</td> </tr> <tr> <td>10</td> <td>3</td> </tr> <tr> <td>11</td> <td>4</td> </tr> </tbody> </table>	UCPRE[0:1]	Divide Ratio	00	1	01	2	10	3	11	4
UCPRE[0:1]	Divide Ratio										
00	1										
01	2										
10	3										
11	4										
6 UCPREN	Prescaler enable. Enables the prescaler counter. 0 Prescaler disabled (no clock) and prescaler counter is loaded with UCPRE value 1 Prescaler enabled										

Table 18-9. eMIOS_CCRn Field Description (continued)

Field	Description																																																																											
7 DMA	<p>Direct memory access. Selects if the FLAG generation will be used as an interrupt or as a DMA request.</p> <p>0 FLAG assigned to Interrupt request 1 FLAG assigned to DMA request</p> <p>Not all eMIOS channels support DMA, as shown below. The DMA bit should not be changed from its default value of 0 for any channel that does not support DMA.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">eMIOS Channel</th> <th style="text-align: center;">DMA = 0</th> <th style="text-align: center;">DMA = 1</th> </tr> </thead> <tbody> <tr><td style="text-align: center;">0</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">1</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">2</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">3</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">4</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">5</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">6</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">7</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">8</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">9</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">10</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">11</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">12</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">13</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">14</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">15</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">16</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">17</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">18</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">19</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">DMA request</td></tr> <tr><td style="text-align: center;">20</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">21</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">22</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> <tr><td style="text-align: center;">23</td><td style="text-align: center;">Interrupt</td><td style="text-align: center;">Reserved</td></tr> </tbody> </table>	eMIOS Channel	DMA = 0	DMA = 1	0	Interrupt	DMA request	1	Interrupt	DMA request	2	Interrupt	DMA request	3	Interrupt	DMA request	4	Interrupt	DMA request	5	Interrupt	Reserved	6	Interrupt	DMA request	7	Interrupt	DMA request	8	Interrupt	DMA request	9	Interrupt	DMA request	10	Interrupt	DMA request	11	Interrupt	DMA request	12	Interrupt	Reserved	13	Interrupt	Reserved	14	Interrupt	Reserved	15	Interrupt	Reserved	16	Interrupt	DMA request	17	Interrupt	DMA request	18	Interrupt	DMA request	19	Interrupt	DMA request	20	Interrupt	Reserved	21	Interrupt	Reserved	22	Interrupt	Reserved	23	Interrupt	Reserved
eMIOS Channel	DMA = 0	DMA = 1																																																																										
0	Interrupt	DMA request																																																																										
1	Interrupt	DMA request																																																																										
2	Interrupt	DMA request																																																																										
3	Interrupt	DMA request																																																																										
4	Interrupt	DMA request																																																																										
5	Interrupt	Reserved																																																																										
6	Interrupt	DMA request																																																																										
7	Interrupt	DMA request																																																																										
8	Interrupt	DMA request																																																																										
9	Interrupt	DMA request																																																																										
10	Interrupt	DMA request																																																																										
11	Interrupt	DMA request																																																																										
12	Interrupt	Reserved																																																																										
13	Interrupt	Reserved																																																																										
14	Interrupt	Reserved																																																																										
15	Interrupt	Reserved																																																																										
16	Interrupt	DMA request																																																																										
17	Interrupt	DMA request																																																																										
18	Interrupt	DMA request																																																																										
19	Interrupt	DMA request																																																																										
20	Interrupt	Reserved																																																																										
21	Interrupt	Reserved																																																																										
22	Interrupt	Reserved																																																																										
23	Interrupt	Reserved																																																																										
8	Reserved.																																																																											

Table 18-9. EMIOS_CCRn Field Description (continued)

Field	Description														
9–12 IF[0:3]	<p>Input filter. Controls the programmable input filter, selecting the minimum input pulse width that can pass through the filter, as shown below. For output modes, these bits have no meaning.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>IF[0:3]¹</th> <th>Minimum input pulse width [filter clock periods]</th> </tr> </thead> <tbody> <tr> <td>0000</td> <td>Bypassed²</td> </tr> <tr> <td>0001</td> <td>2 filter clock periods</td> </tr> <tr> <td>0010</td> <td>4 filter clock periods</td> </tr> <tr> <td>0100</td> <td>8 filter clock periods</td> </tr> <tr> <td>1000</td> <td>16 filter clock periods</td> </tr> <tr> <td>all others</td> <td>Reserved</td> </tr> </tbody> </table> <p>¹ Filter latency is 3 clock cycles. ² The input signal is synchronized before arriving at the digital filter.</p>	IF[0:3] ¹	Minimum input pulse width [filter clock periods]	0000	Bypassed ²	0001	2 filter clock periods	0010	4 filter clock periods	0100	8 filter clock periods	1000	16 filter clock periods	all others	Reserved
IF[0:3] ¹	Minimum input pulse width [filter clock periods]														
0000	Bypassed ²														
0001	2 filter clock periods														
0010	4 filter clock periods														
0100	8 filter clock periods														
1000	16 filter clock periods														
all others	Reserved														
13 FCK	<p>Filter clock select. Selects the clock source for the programmable input filter.</p> <p>0 Prescaled clock 1 Main clock</p>														
14 FEN	<p>FLAG enable. Allows the unified channel FLAG bit to generate an interrupt signal or a DMA request signal (The type of signal to be generated is defined by the DMA bit).</p> <p>0 Disable (FLAG does not generate an interrupt or DMA request) 1 Enable (FLAG will generate an interrupt or DMA request)</p>														
15–17	Reserved.														
18 FORCMA	<p>Force match A. For output modes, the FORCMA bit is equivalent to a successful comparison on comparator A (except that the FLAG bit is not set). This bit is cleared by reset and is always read as zero. This bit is valid for every output operating mode which uses comparator A, otherwise it has no effect.</p> <p>0 Has no effect 1 Force a match at comparator A</p> <p>For input modes, the FORCMA bit is not used and writing to it has no effect.</p>														
19 FORCMB	<p>Force match B. For output modes, the FORCMB bit is equivalent to a successful comparison on comparator B (except that the FLAG bit is not set). This bit is cleared by reset and is always read as zero. This bit is valid for every output operating mode which uses comparator B, otherwise it has no effect.</p> <p>0 Has no effect 1 Force a match at comparator B</p> <p>For input modes, the FORCMB bit is not used and writing to it has no effect.</p>														
20	Reserved.														

Table 18-9. EMIOS_CCRn Field Description (continued)

Field	Description										
21–22 BSL[0:1]	<p>Bus select. Used to select either one of the counter buses or the internal counter to be used by the unified channel.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">BSL[0:1]</th> <th style="text-align: center;">Selected Bus</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">00</td> <td style="text-align: center;">All channels: counter bus [A]</td> </tr> <tr> <td style="text-align: center;">01</td> <td style="text-align: center;">Channels 0 to 7: counter bus [B] Channels 8 to 15: counter bus [C] Channels 16 to 23: counter bus [D]</td> </tr> <tr> <td style="text-align: center;">10</td> <td style="text-align: center;">Reserved</td> </tr> <tr> <td style="text-align: center;">11</td> <td style="text-align: center;">All channels: internal counter (see Note below)</td> </tr> </tbody> </table> <p>Note: In certain modes the internal counter is used internally and therefore cannot be used as the channel time base.</p>	BSL[0:1]	Selected Bus	00	All channels: counter bus [A]	01	Channels 0 to 7: counter bus [B] Channels 8 to 15: counter bus [C] Channels 16 to 23: counter bus [D]	10	Reserved	11	All channels: internal counter (see Note below)
BSL[0:1]	Selected Bus										
00	All channels: counter bus [A]										
01	Channels 0 to 7: counter bus [B] Channels 8 to 15: counter bus [C] Channels 16 to 23: counter bus [D]										
10	Reserved										
11	All channels: internal counter (see Note below)										
23 EDSEL	<p>Edge selection bit. For input modes, the EDSEL bit selects whether the internal counter is triggered by both edges of a pulse or just by a single edge as defined by the EDPOL bit. When not shown in the mode of operation description, this bit has no effect.</p> <p>0 Single edge triggering defined by the EDPOL bit 1 Both edges triggering</p> <p>For GPIO input mode, the EDSEL bit selects if a FLAG can be generated.</p> <p>0 A FLAG is generated as defined by the EDPOL bit 1 No FLAG is generated</p> <p>For SAOC mode, the EDSEL bit selects the behavior of the output flip-flop at each match.</p> <p>0 The EDPOL value is transferred to the output flip-flop 1 The output flip-flop is toggled</p>										

Table 18-9. EMIOS_CCR n Field Description (continued)

Field	Description
24 EDPOL	<p>Edge polarity.</p> <p>For input modes (except QDEC and WPTA mode), the EDPOL bit asserts which edge triggers either the internal counter or an input capture or a FLAG. When not shown in the mode of operation description, this bit has no affect.</p> <p>0 Trigger on a falling edge 1 Trigger on a rising edge</p> <p>For WPTA mode, the internal counter is used as a time accumulator and counts up when the input gating signal has the same polarity of EDPOL bit.</p> <p>0 Counting occurs when the input gating signal is low 1 Counting occurs when the input gating signal is high</p> <p>For QDEC (MODE[6] cleared), the EDPOL bit selects the count direction according to <i>direction</i> signal (UCn input).</p> <p>0 Counts down when UCn is asserted 1 Counts up when UCn is asserted</p> <p>NOTE: UC[n-1] EDPOL bit selects which edge clocks the internal counter of UCn</p> <p>0 Trigger on a falling edge 1 Trigger on a rising edge</p> <p>For QDEC (MODE[6] set), the EDPOL bit selects the count direction according to the phase difference.</p> <p>0 Internal counter decrements if phase_A is ahead phase_B signal 1 Internal counter increments if phase_A is ahead phase_B signal</p> <p>NOTE: In order to operate properly, EDPOL bit must contain the same value in UCn and UC[n-1]</p> <p>For output modes, the EDPOL bit is used to select the logic level on the output pin. When software selects any output mode except GPIO, the initial state of the output flip-flop is the complement of EDPOL.</p> <p>0 A match on comparator A clears the output flip-flop, while a match on comparator B sets it 1 A match on comparator A sets the output flip-flop, while a match on comparator B clears it</p>
25–31 MODE	Mode selection. Selects the mode of operation of the unified channel, as shown in Table 18-10 .

Table 18-10. Unified Channel MODE Bits

MODE[0:6]	Unified Channel Mode of Operation
0000000	General purpose input/output mode (input)
0000001	General purpose input/output mode (output)
0000010	Single action input capture
0000011	Single action output compare
0000100	Input pulse width measurement
0000101	Input period measurement
0000110	Double action output compare (with FLAG set on the second match)

Table 18-10. Unified Channel MODE Bits (continued)

MODE[0:6]	Unified Channel Mode of Operation
0000111	Double action output compare (with FLAG set on both match)
0001000	Pulse/edge accumulation (continuous)
0001001	Pulse/edge accumulation (single shot)
0001010	Pulse/edge counting (continuous)
0001011	Pulse/edge counting (single shot)
0001100	Quadrature decode (for count and direction encoders type)
0001101	Quadrature decode (for phase_A and phase_B encoders type)
0001110	Windowed programmable time accumulation
0001111	Reserved
0010000	Modulus counter (up counter, internal clock source)
0010001	Modulus counter (up counter, external clock source)
0010010–0010011	Reserved
0010100	Modulus counter (up/down counter, no change in counter direction upon match of input counter and register B1, internal clock source)
0010101	Modulus counter (up/down counter, no change in counter direction upon match of input counter and register B1, external clock source)
0010110	Modulus counter (up/down counter, change in counter direction upon match of input counter and register B1 and sets the FLAG, internal clock source)
0010111	Modulus counter (up/down counter, change in counter direction upon match of input counter and register B1 and sets the FLAG, external clock source)
0011000	Output pulse width and frequency modulation (FLAG set at match of internal counter and comparator B, immediate update)
0011001	Output pulse width and frequency modulation (FLAG set at match of internal counter and comparator B, next period update)
0011010	Output pulse width and frequency modulation (FLAG set at match of internal counter and comparator A or comparator B, immediate update)
0011011	Output pulse width and frequency modulation (FLAG set at match of internal counter and comparator A or comparator B, next period update)
0011100	Center aligned output pulse width modulation (FLAG set in trailing edge, trailing edge dead-time)

Table 18-10. Unified Channel MODE Bits (continued)

MODE[0:6]	Unified Channel Mode of Operation
0011101	Center aligned output pulse width modulation (FLAG set in trailing edge, leading edge dead-time)
0011110	Center aligned output pulse width modulation (FLAG set in both edges, trailing edge dead-time)
0011111	Center aligned output pulse width modulation (FLAG set in both edges, leading edge dead-time)
0100000	Output pulse width modulation (FLAG set at match of internal counter and comparator B, immediate update)
0100001	Output pulse width modulation (FLAG set at match of internal counter and comparator B, next period update)
0100010	Output pulse width modulation (FLAG set at match of internal counter and comparator A or comparator B, immediate update)
0100011	Output pulse width modulation (FLAG set at match of internal counter and comparator A or comparator B, next period update)
1100100– 1111111	Reserved
1010000	Modulus up counter, buffered, internal clock
1010001	Modulus up counter, buffered, external clock
1010010– 1010001	Reserved
1010100	Modulus up/down counter, buffered (FLAG set on one event, internal clock)
1010101	Modulus up/down counter, buffered (FLAG set on one event, external clock)
1010110	Modulus up/down counter, buffered (FLAG set on both events, internal clock)
1010111	Modulus up/down counter, buffered (FLAG set on both events, external clock)
1011000	Output pulse width and frequency modulation, buffered (FLAG set at match of internal counter and comparator B)
1011001	Reserved
1011010	Output pulse width and frequency modulation, buffered (FLAG set at match of internal counter and comparator A or comparator B)
1011011	Reserved
1011100	Center aligned output pulse width modulation, buffered (FLAG set on trailing edge, trailing edge dead-time)
1011101	Center aligned output pulse width modulation, buffered (FLAG set on trailing edge, leading edge dead-time)
1011110	Center aligned output pulse width modulation, buffered (FLAG set on both edges, trailing edge dead-time)

Table 18-10. Unified Channel MODE Bits (continued)

MODE[0:6]	Unified Channel Mode of Operation
1011111	Center aligned output pulse width modulation, buffered (FLAG set on both edges, leading edge dead-time)
1100000	Output pulse width modulation, buffered (FLAG set on second match)
1100001	Reserved
1100010	Output pulse width modulation, buffered (FLAG set on both matches)

18.3.1.8 eMIOS Channel Status Register (EMIOS_CSRn)

EMIOS_CSRn reflects the status of the UC input/output signals and the overflow condition of the internal counter, as well as the occurrence of a trigger event.

Address: UCn Base + 0x10

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	OVR	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	w1c															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	OVFL	0	0	0	0	0	0	0	0	0	0	0	0	UCIN	UCOUT	FLAG
W	w1c															w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 18-9. eMIOS Channel Status Register (EMIOS_CSRn)

Table 18-11. EMIOS_CSRn Field Descriptions

Field	Description
0 OVR	Overrun. Indicates that FLAG generation occurred when the FLAG bit was already set. This bit can be cleared by writing a 1 to it or by clearing the FLAG bit. 0 Overrun has not occurred 1 Overrun has occurred
1–15	Reserved.
16 OVFL	Overflow. Indicates that an overflow has occurred in the internal counter. OVFL is cleared by writing a 1 to it. 0 No overflow 1 An overflow had occurred
17–28	Reserved.
29 UCIN	Unified channel input pin. Reflects the input pin state after being filtered and synchronized.

Table 18-11. EMIOS_CSR n Field Descriptions (continued)

Field	Description
30 UCOUT	Unified channel output pin. The UCOUT bit reflects the output pin state.
31 FLAG	FLAG. Set when an input capture or a match event in the comparators occurred. This bit is cleared by writing a 1 to it. 0 FLAG cleared 1 FLAG set event has occurred Note: When EMIOS_CCR[DMA] bit is set, the FLAG bit is cleared by the eDMA controller.

18.3.1.9 eMIOS Alternate Address Register (EMIOS_ALTAn)

The EMIOS_ALTAn register provides an alternate read-only address to access channel registers in PEC and WPTA modes. If EMIOS_ALTAn is used it is possible to access the A2 register in the PEC and WPTA modes. The EMIOS_ALTAn address register does not implement coherency mechanisms such as the blocking of B register updates after the A register is read.

Table 18-8, “EMIOS_CADR n , EMIOS_CBDR n , and EMIOS_ALTAn Value Assignments,” shows the internal registers accessed by address EMIOS_ALTAn in each one of the channel operation modes.

 Address: UC n Base + 0x14

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	ALTA[8:15]							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ALTA[16:31]															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 18-10. eMIOS Alternate Address Register (EMIOS_ALTAn)
Table 18-12. EMIOS_ALTAn Field Descriptions

Field	Description
0–7	Reserved.
8–31 ALTA	Alternate address. Set when an alternate address is provided for accessing both the A1 and A2 channel registers. 0 Access only A1 register 1 Access both A1 and A2 registers

18.4 Functional Description

The eMIOS provides independent channels (UC) that can be configured and accessed by the MCU. Four time bases can be shared by the channels through four counter buses and each unified channel can generate its own time base. Optionally, the counter A bus can be driven by an external time base from the eTPU imported through the STAC interface.

NOTE

Counter bus A can be driven by unified channel 23 or by the STAC bus. Counter bus B, C, and D are driven by unified channels 0, 8, and 16, respectively. Counter bus A can be shared among all unified channels. UCs 0 to 7 can share counter bus A and B, UCs 8 to 15 can share counter bus A and C, and UCs 16 to 23 can share counter buses A and D.

The following four components of the eMIOS are discussed below:

- Bus interface unit
- STAC client submodule
- Global clock prescaler
- Unified channels and their modes of operation

18.4.1 Bus Interface Unit (BIU)

The bus interface unit provides the interface between the internal bus and the slave interface, allowing communication among all submodules and the slave interface. The BIU allows 8-, 16-, and 32-bit accesses. They are performed over a 32-bit data bus in a single cycle clock.

18.4.1.1 Effect of Freeze on the BIU

When the FRZ bit in the EMIOS_MCR is set and the module is in debug mode, the operation of the BIU is not affected.

18.4.2 STAC Client Submodule

The shared time and angle count (STAC) bus provides access to one external time base, imported from the STAC bus to the eMIOS unified channels. The eTPU module's time bases and angle count can be exported and/or imported through the STAC client submodule interface. Time bases and/or angle information of either eTPU engine can be exported to the other eTPU engine and to the eMIOS module, which is only a STAC client. There are restrictions on engine export/import targets: one engine cannot export from or import to itself, nor can it import time base and/or angle count if in angle mode.

The device's STAC server identification assignment is shown in [Table 18-13](#). The time slot assignment is fixed, so only time bases running at system clock $\div 4$ or slower can be integrally exported. The STAC client submodule runs with the system clock, and its time slot timing is synchronized with the eTPU timing on reset. The time slot sequence is 0-1-2-3, such that they are alternated between engines 1 and 2.

Table 18-13. STAC Client Submodule Server Slot Assignment

Engine	Time Base	Server ID
1	TCR1	0
1	TCR2	2
2	TCR1	1
2	TCR2	3

Figure 18-11 provides a block diagram for the STAC client submodule.



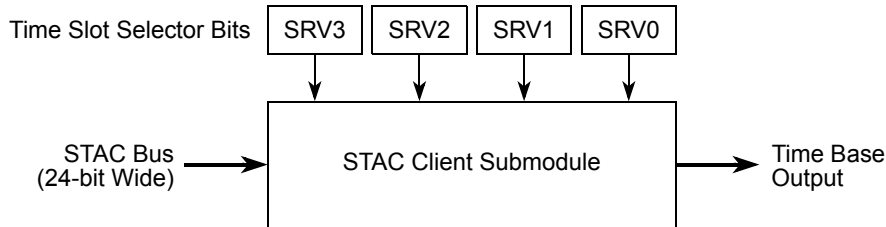


Figure 18-11. STAC Client Submodule Block Diagram

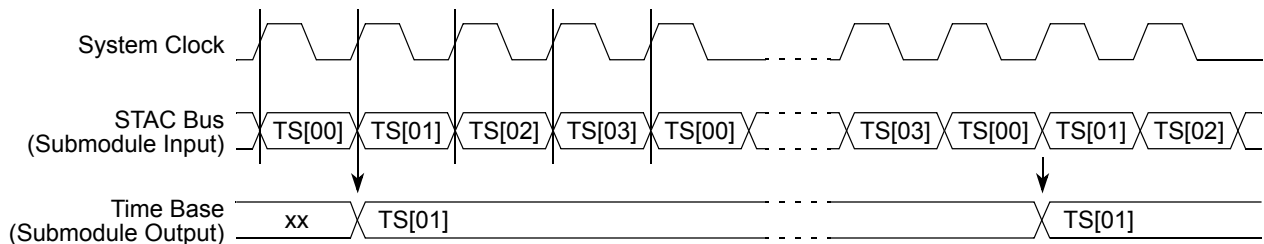Bits SRV[0:3] in register EMIOS_MCR, selects the desired time slot of the STAC bus to be output. Figure 18-12 shows a timing diagram for the STAC client submodule.



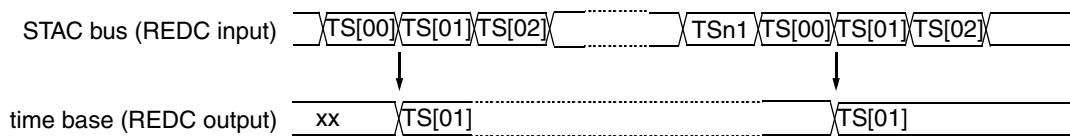Note: In this case, SRV bits were set to capture TS[01].



- NOTES:
1. Maximum of 16 Time Slots (TSn)
 2. In this case, SRV bits were set to capture TS[01]

Figure 18-12. Timing Diagram for the STAC Bus and STAC Client Submodule Output

Every time the selected time slot changes, the STAC Client Submodule output is updated.

18.4.2.1 Effect of Freeze on the STAC Client Submodule

When the FRZ bit in the EMIOS_MCR is set and the module is in debug mode, the operation of the STAC client submodule is not affected; that is, there is no freeze function in this submodule.

18.4.3 Global Clock Prescaler Submodule (GCP)

The GCP divides the system clock to generate a clock for the clock prescalers of the unified channels. The system clock is prescaled by the value defined according to the GPRE[0:7] bits in the EMIOS_MCR. The output is clocked every time the counter overflows. Counting is enabled by setting EMIOS_MCR[GPREN]. The counter can be stopped at any time by clearing this bit, thereby stopping the internal counter in all the unified channels.

18.4.3.1 Effect of Freeze on the GCP


When the FRZ bit in the EMIOS_MCR is set and the module is in debug mode, the operation of the GCP submodule is not affected; that is, there is no freeze function in this submodule.

18.4.4 Unified Channel (UC)

Figure 18-13 shows the unified channel block diagram. Each unified channel consists of the following:

- Counter bus selector that selects the time base to be used by the channel for all timing functions
- Programmable clock prescaler
- Two double buffered data registers A and B that allow up to two input capture and/or output compare events to occur before software intervention is needed.
- Two comparators (equal only) A and B that compare the selected counter bus with the value in the data registers
- Internal counter that can be used as a local time base or to count input events
- Programmable input filter that ensures that only valid pin transitions are received by a channel
- Programmable input edge detector that detects rising, falling, or both edges
- Output flip-flop that holds the logic level to be applied to the output pin
- eMIOS status and control registers
- Output disable input selector that selects the output disable input signal to be used as the unified channel output disable
- Control state machine (FSM)

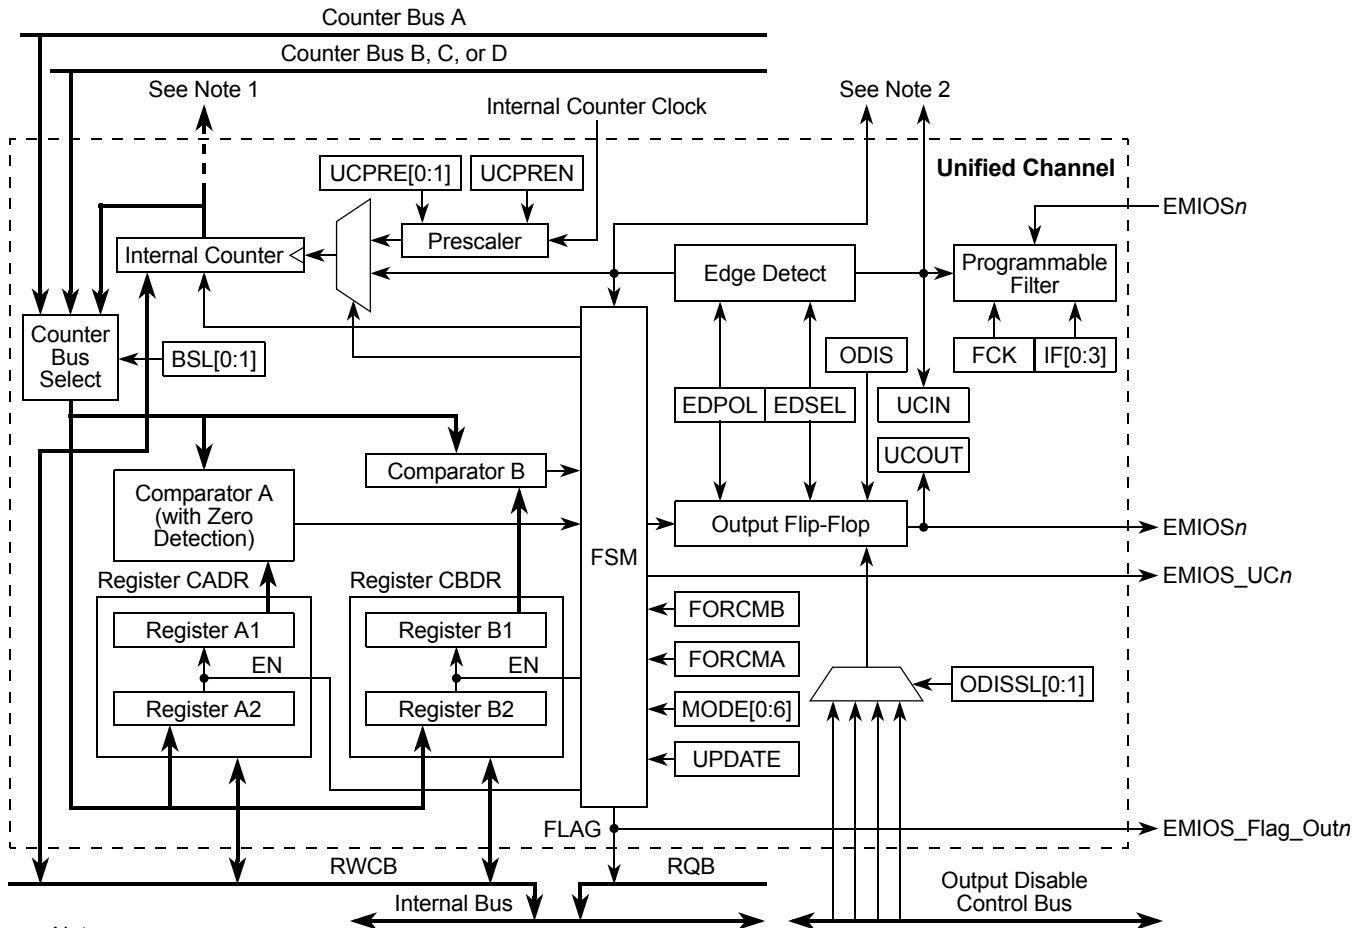The major components and functions of the unified channels are discussed in [Section 18.4.4.1, “Programmable Input Filter \(PIF\)”](#) through [Section 18.4.4.4, “Modes of Operation of the Unified Channels.”](#)



Notes:

- Counter bus A can be driven by either the STAC bus or channel 23. Refer to EMIOs_MCR[ETB]. Channel 0 drives counter bus B, channel 8 drives counter bus C and channel 16 drives counter bus D. Counter bus B can be selected as the counter for channels 0-7, counter bus C for channels 8-15, and counter bus D for channels 16-23. Refer to Figure 1-1 and EMIOs_CCRn[BS].
- Goes to the finite state machine of the UC[n-1]. These signals are used for QDEC mode.

Figure 18-13. Unified Channel Block Diagram

18.4.4.1 Programmable Input Filter (PIF)

The PIF ensures that only valid input pin transitions are received by the unified channel edge detector. A block diagram of the PIF is shown in Figure 18-14.

The PIF is a 5-bit programmable up counter that is incremented by the selected clock source, according to bits IF[0:3] in EMIOs_CCRn. The clock source is selected by the EMIOs_CCRn[FCK] bit.

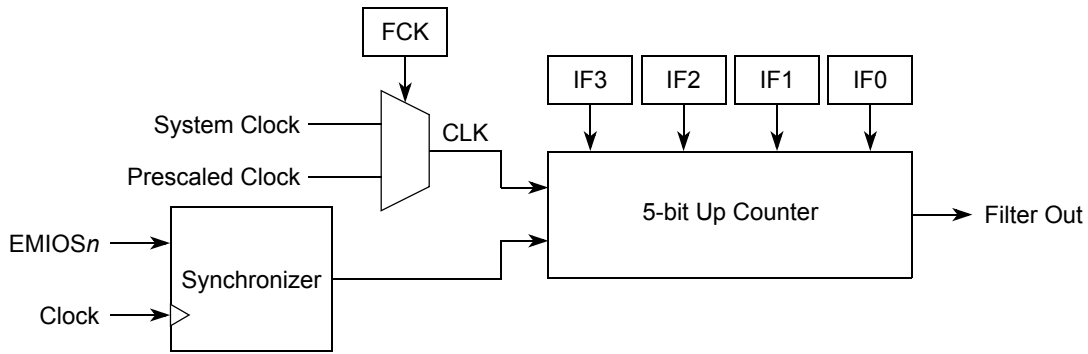


Figure 18-14. Programmable Input Filter Submodule Diagram

The input signal is synchronized by the system clock. When a state change occurs in this signal, the 5-bit counter starts counting up. As long as the new state is stable on the pin, the counter continues incrementing. If a counter overflow occurs, the new pin value is validated. In this case, it is transmitted as a pulse edge to the edge detector. If the opposite edge appears on the pin before validation (overflow), the counter is reset. At the next synchronized pin transition, the counter starts counting again. Any pulse that is shorter than a full range of the masked counter is regarded as a glitch, and it is not passed on to the edge detector. A timing diagram of the input filter is shown in [Figure 18-15](#).

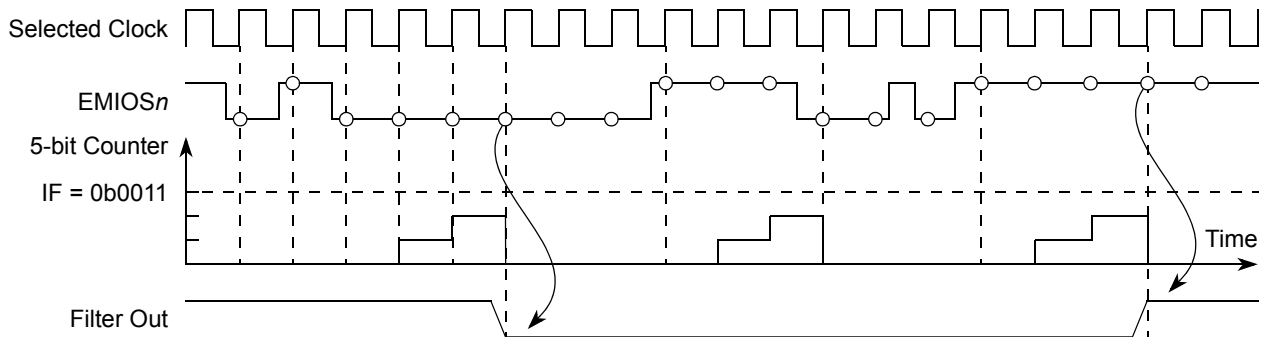


Figure 18-15. Programmable Input Filter Example

18.4.4.2 Clock Prescaler (CP)

A unified channel has a clock prescaler (CP) that divides the global clock prescaler (refer to [Section 18.4.3](#), “[Global Clock Prescaler Submodule \(GCP\)](#)”) output signal to generate a clock enable for the internal counter of the unified channel. It is a programmable 2-bit down counter. The global clock prescaler submodule (GCP) output signal is prescaled by the value defined in [Table 18-9](#) according to the UCPRE[0:1] bits in the EMIOS_CCRn. The output is clocked every time the counter reaches zero. Counting is enabled by setting the UCPREN bit in the EMIOS_CCRn. The counter can be stopped at any time by clearing this bit, thereby stopping the internal counter in the unified channel.

18.4.4.3 Effect of Freeze on the Unified Channel

When in debug mode and the EMIOS_MCR[FRZ] bit and the EMIOS_CCRn[FREN] bit are both set, the internal counter and the unified channel’s capture and compare functions are halted. The UC is frozen in its current state.

During freeze, all registers are accessible. When the unified channel is operating in an output mode, the force match functions remain available, allowing the software to force the output to the desired level.

Note that for input modes, any input events that may occur while the channel is frozen are ignored.

When exiting debug mode or freeze enable bit is cleared (FRZ in the EMIOS_MCR or FREN in the EMIOS_CCR n) the channel actions resume.

18.4.4.4 Modes of Operation of the Unified Channels

The mode of operation of a unified channel is determined by the mode select bits MODE[0:6] in the EMIOS_CCR n . See [Table 18-10](#) for details.

When entering an output mode (except for GPIO mode), the output flip-flop is set to the complement of the EDPOL bit in the EMIOS_CCR n .

Because the internal counter EMIOS_CCNTR n continues to run in all modes (except for GPIO mode), it is possible to use this counter as the $\bar{U}C$ time base unless it (the internal counter) is a required resource in the operation of the selected mode.

To provide smooth waveform generation while allowing A and B registers to be changed on the fly, the double-buffered modes MCB, OPWFMB, OPWMB, and OPWMCB are provided (beginning at [Section 18.4.4.4.15, “Modulus Counter, Buffered Mode \(MCB\)”](#)). In these modes the A and B registers are double buffered. Descriptions of the double-buffered modes are presented separately, because there are several basic differences from the single-buffered MC, OPWFM, OPWM, and OPWMC modes.

In the following pages, [Section 18.4.4.4.1, “General Purpose Input/Output Mode \(GPIO\)”](#) through [Section 18.4.4.4.14, “Output Pulse Width Modulation Mode \(OPWM\)”](#) and [Section 18.4.4.4.18, “Output Pulse Width Modulation, Buffered Mode \(OPWMB\)”](#) explain in detail the unified channels’ modes of operation.

18.4.4.4.1 General Purpose Input/Output Mode (GPIO)

In GPIO mode, all input capture and output compare functions of the UC are disabled, the internal counter (EMIOS_CCNTR n register) is cleared and disabled. All control bits remain accessible. In order to prepare the UC for a new operating mode, writing to registers EMIOS_CADR n or EMIOS_CBDR n stores the same value in registers A1/A2 or B1/B2, respectively.

MODE[6] bit selects between input (MODE[6] = 0) and output (MODE[6] = 1) modes.

It is required that when changing MODE[0:6], the application software goes to GPIO mode first in order to reset the UC’s internal functions properly. Failure to do this can lead to invalid and unexpected output compares and input capture results, or can cause the FLAGS to be set incorrectly.

In GPIO input mode, the FLAG generation is determined according to EDPOL and EDSEL bits and the input pin status can be determined by reading the UCIN bit.

In GPIO output mode, the unified channel is used as a single output port pin and the value of the EDPOL bit is permanently transferred to the output flip-flop.

NOTE

The GPIO modes provided in the eMIOS are particularly useful as interim modes when certain other eMIOS modes are being dynamically configured and enabled or disabled during the execution of the application. For normal GPIO function on the eMIOS pins, it is recommended that the SIU be used to configure those pins as system GPIO. See [Section 6.2.1.3](#), “General-Purpose I/O Pins (GPIO[0:213]),” pins.

18.4.4.4.2 Single Action Input Capture Mode (SAIC)

In SAIC mode, when a triggering event occurs on the input pin, the value on the selected time base is captured into register A2. At the same time, the FLAG bit is set to indicate that an input capture has occurred. Register EMIOS_CADR_n returns the value of register A2.

The input capture is triggered by a rising, falling or either edges in the input pin, as configured by EDPOL and EDSEL bits in EMIOS_CCR_n.

Figure 18-16 shows how the unified channel can be used for input capture.

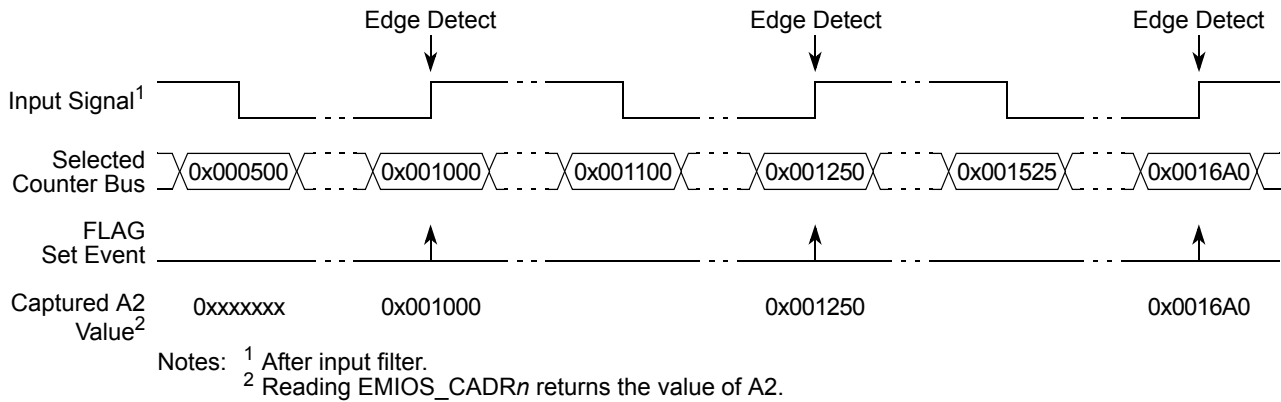


Figure 18-16. Single Action Input Capture Example

18.4.4.4.3 Single Action Output Compare Mode (SAOC)

In SAOC mode a match value is loaded in register A2 and then transferred to register A1 to be compared with the selected time base. When a match occurs, the EDSEL bit selects if the output flip-flop is toggled or if the value in EDPOL is transferred to it. At the same time, the FLAG bit is set to indicate that the output compare match has occurred. Writing to register EMIOS_CADR_n stores the value in register A2 and reading to register EMIOS_CADR_n returns the value of register A1.

An output compare match can be simulated in software by setting the FORCMA bit in EMIOS_CCR_n. In this case, the FLAG bit is not set.

Figure 18-17 and Figure 18-18 show how the unified channel can be used to perform a single output compare with EDPOL value being transferred to the output flip-flop and toggling the output flip-flop at each match, respectively.

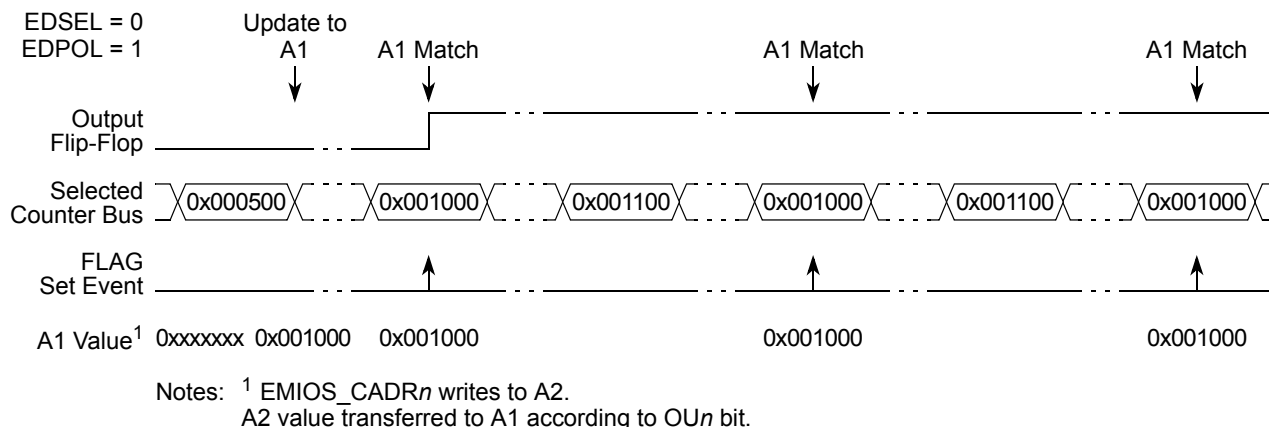


Figure 18-17. SAOC Example with EDPOL Value Transferred to the Output Flip-flop

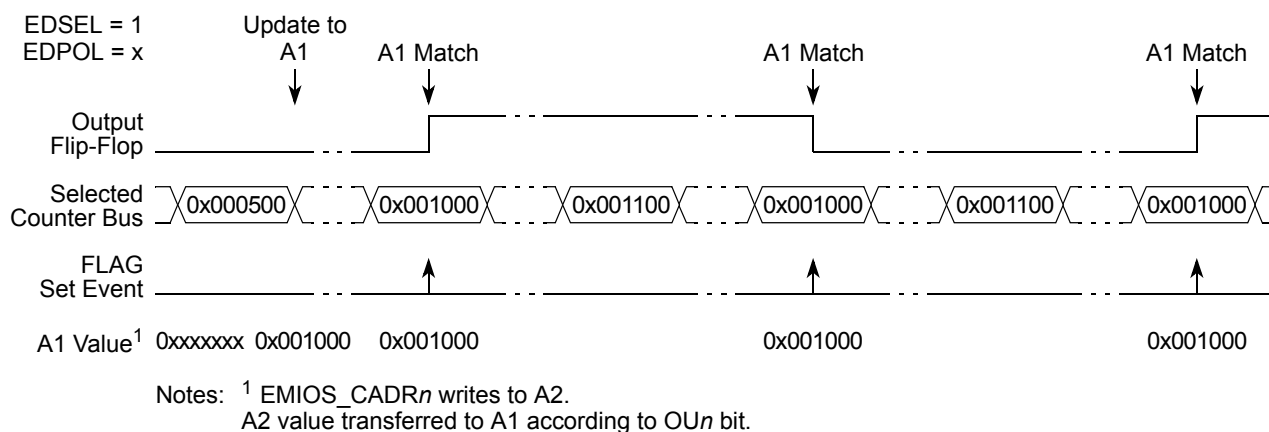


Figure 18-18. SAOC Example Toggling the Output Flip-flop

18.4.4.4 Input Pulse Width Measurement Mode (IPWM)

The IPWM mode allows the measurement of the width of a positive or negative pulse by capturing the leading edge on register B1 and the trailing edge on register A2. Successive captures are done on consecutive edges of opposite polarity. The leading edge sensitivity (that is, pulse polarity) is selected by EDPOL bit in the EMIOS_CCR_n. Registers EMIOS_CADR_n and EMIOS_CBDR_n return the values in register A2 and B1, respectively.


The capture function of register A2 remains disabled until the first leading edge triggers the first input capture on register B2. When this leading edge is detected, the count value of the selected time base is latched into register B2; the FLAG bit is not set. When the trailing edge is detected, the count value of the selected time base is latched into register A2 and, at the same time, the FLAG bit is set and the content of register B2 is transferred to register B1.

If subsequent input capture events occur while the corresponding FLAG bit is set, registers A2, B1, and A1 will be updated with the latest captured values and the FLAG will remain set. Registers EMIOS_CADR_n and EMIOS_CBDR_n return the value in registers A2 and B1, respectively.

In order to guarantee coherent access, reading EMIOS_CADR n forces B1 to be updated with the content of register A1. At the same time transfers between B2 and B1 are disabled until the next read of the EMIOS_CBDR n register. Reading EMIOS_CBDR n forces B1 to be updated with A1 register content and re-enables transfers from B2 to B1, to take effect at the next trailing edge capture. Transfers from B2 to A1 are not blocked at any time.

The input pulse width is calculated by subtracting the value in B1 from A2.

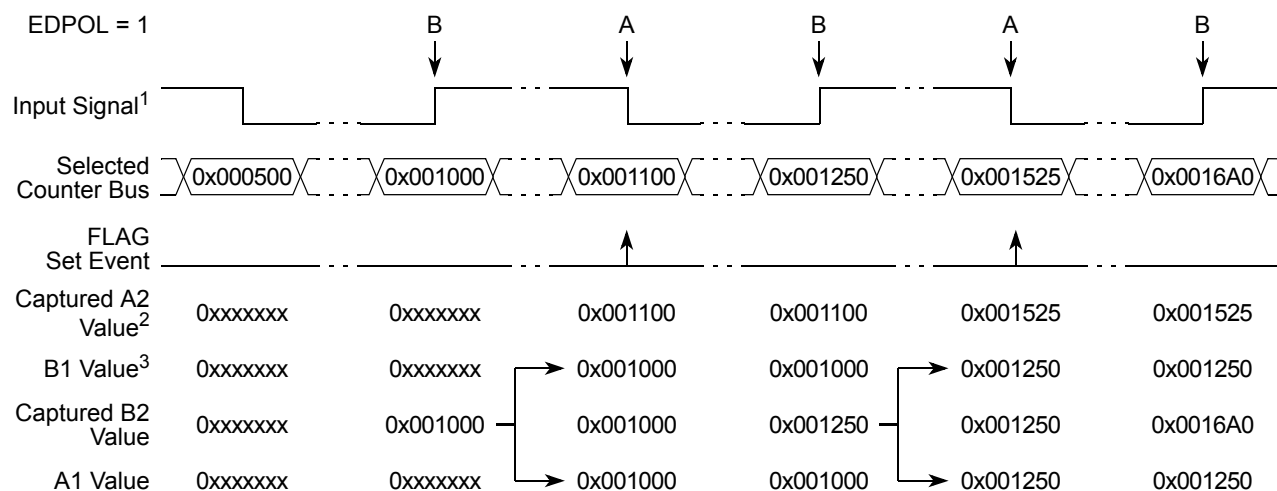Figure 18-19 shows how the unified channel can be used for input pulse width measurement.



- Notes: ¹ After input filter.
² Reading EMIOS_CADR n returns the value of A2, writing EMIOS_CADR n writes to A2.
³ Reading EMIOS_CBDR n returns the value of B1, writing EMIOS_CBDR n writes to B1.

Figure 18-19. Input Pulse Width Measurement Example

Figure 18-20 shows the A1 and B1 updates when EMIOS_CADR n and EMIOS_CBDR n register reads occur. Note that the A1 register always has coherent data related to the A2 register. Note also that when an EMIOS_CADR n read is performed, the B1 register is loaded with A1 register content. This guarantee that the data in register B1 always has the coherent data related to the last EMIOS_CADR n read. The B1 register updates remains locked until an EMIOS_CBDR n read occurs. If an EMIOS_CADR n read is performed, the B1 register is updated with A1 register content even if the B1 update is locked by a previous EMIOS_CADR n read operation.

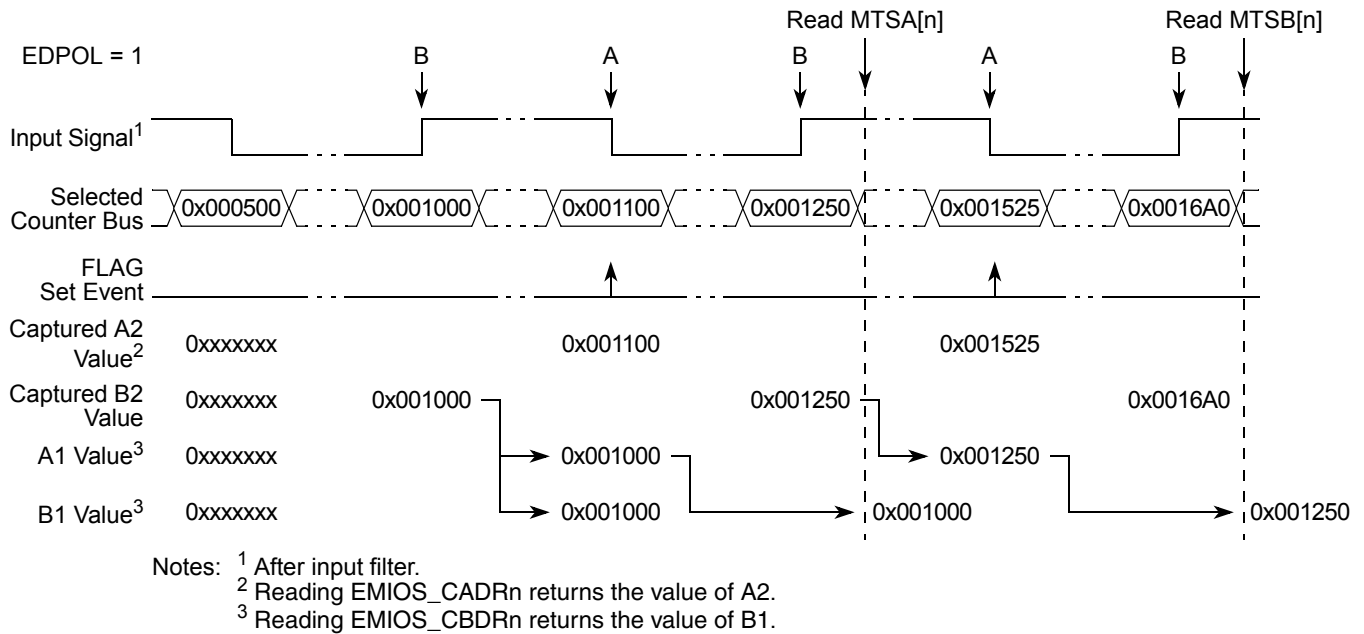


Figure 18-20. B1 and A1 Updates at EMIOS_CADR_n and EMIOS_CBDR_n Reads

Reading EMIOS_CADR_n followed by EMIOS_CBDR_n always provides coherent data. If coherent data is not required, the sequence of reads should be inverted; EMIOS_CBDR_n should be read prior to EMIOS_CADR_n. Note that even in this case B1 register updates will be blocked after an EMIOS_CADR_n read, thus a second EMIOS_CBDR_n read is required in order to release B1 register updates.

18.4.4.4.5 Input Period Measurement Mode (IPM)

The IPM mode allows the measurement of the period of an input signal by capturing two consecutive rising edges or two consecutive falling edges. Successive input captures are done on consecutive edges of the same polarity. The edge polarity is defined by the EDPOL bit in the EMIOS_CCR_n.

When the first edge of selected polarity is detected, the selected time base is latched into the registers A2 and B2, and the data previously held in register B2 is transferred to register B1. On this first capture the FLAG line is not set, and the values in registers B1 is meaningless. On the second and subsequent captures, the FLAG line is set and data in register B2 is transferred to register B1.

When the second edge of the same polarity is detected, the counter bus value is latched into registers A2 and B2, the data previously held in register B2 is transferred to data register B1 and to register A1. The FLAG bit is set to indicate that the start and end points of a complete period have been captured. This sequence of events is repeated for each subsequent capture. Registers EMIOS_CADR_n and EMIOS_CBDR_n return the values in register A2 and B1, respectively.

In order to allow coherent data, reading EMIOS_CADR_n forces A1 content to be transferred to the B1 register and disables transfers between B2 and B1. These transfers are disabled until the next read of the EMIOS_CBDR_n register. Reading EMIOS_CBDR_n forces A1 content to be transferred to B1 and re-enables transfers from B2 to B1, to take effect at the next edge capture.

The input pulse period is calculated by subtracting the value in B1 from A2.

Figure 18-21 shows how the unified channel can be used for input period measurement.

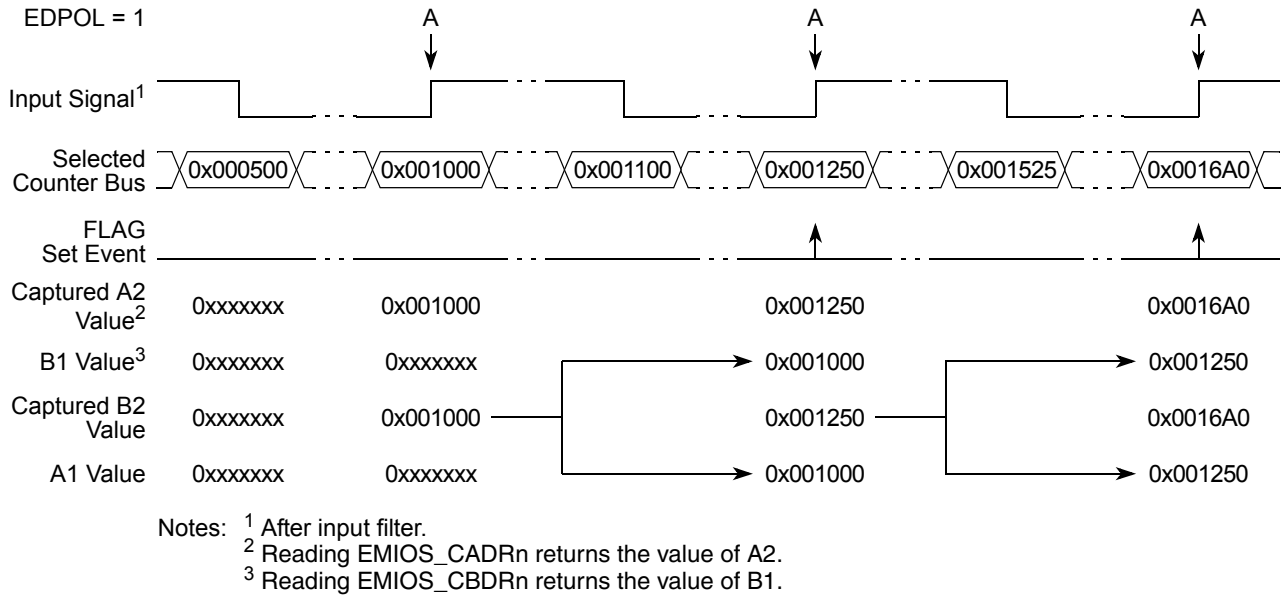


Figure 18-21. Input Period Measurement Example

Figure 18-22 describes the A1 and B1 register updates when EMIOS_CADR_n and EMIOS_CBDR_n read operations are performed. When an EMIOS_CADR_n read occurs the content of A1 is transferred to B1 thus providing coherent data in the A2 and B1 registers. Transfers from B2 to B1 are then blocked until EMIOS_CBDR_n is read. After EMIOS_CBDR_n is read, register A1 content is transferred to register B1 and the transfers from B2 to B1 are re-enabled to occur at the transfer edges, which is the leading edge in the Figure 18-22 example.

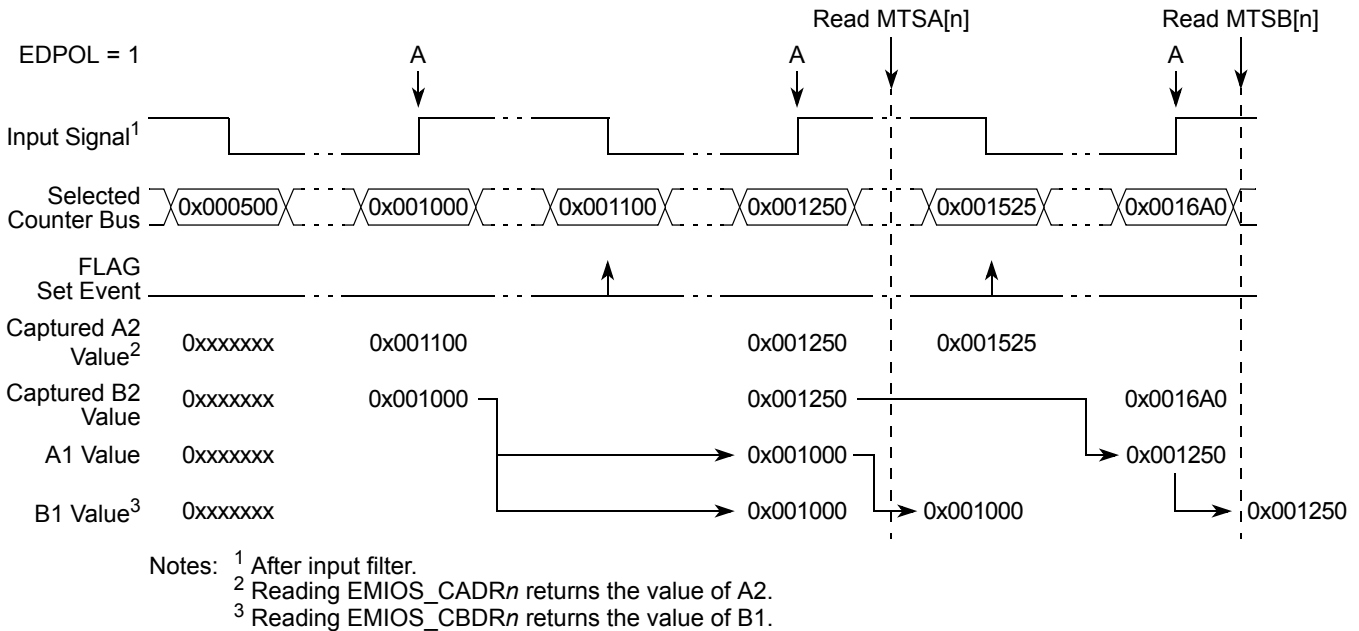


Figure 18-22. A1 and B1 Updates at EMIOS_CADR and EMIOS_CBDR Reads

18.4.4.4.6 Double Action Output Compare Mode (DAOC)

In the DAOC mode the leading and trailing edges of the variable pulse width output are generated by matches occurring on comparators A and B, respectively.

When the DAOC mode is first selected (coming from GPIO mode) both comparators are disabled. Comparators A and B are enabled by updating registers A1 and B1 respectively and remain enabled until a match occurs on that comparator, when it is disabled again. In order to update registers A1 and B1, a write to A2 and B2 must occur and the EMIOS_CCR n [ODIS] bit must be cleared.

The output flip-flop is set to the value of EMIOS_CCR n [EDPOL] when a match occurs on comparator A and to the complement of EDPOL when a match occurs on comparator B.

MODE[6] controls if the EMIOS_CSR n [FLAG] is set on both matches or just on the second match (see Table 18-10 for details).

If subsequent enabled output compares occur on registers A1 and B1, pulses will continue to be generated, regardless of the state of the FLAG bit.

At any time, the EMIOS_CCR n [FORCMA] and EMIOS_CCR n [FORCMB] bits allow the software to force the output flip-flop to the level corresponding to a comparison event in comparator A or B, respectively. Note that the FLAG bit is not affected by these forced operations.

NOTE

If both registers (A1 and B1) are loaded with the same value, the unified channel behaves as if a single match on comparator B had occurred; that is, the output flip-flop will be set to the complement of EDPOL bit and the FLAG bit is set.

Figure 18-23 and Figure 18-24 show how the unified channel can be used to generate a single output pulse with FLAG bit being set on the second match or on both matches, respectively.

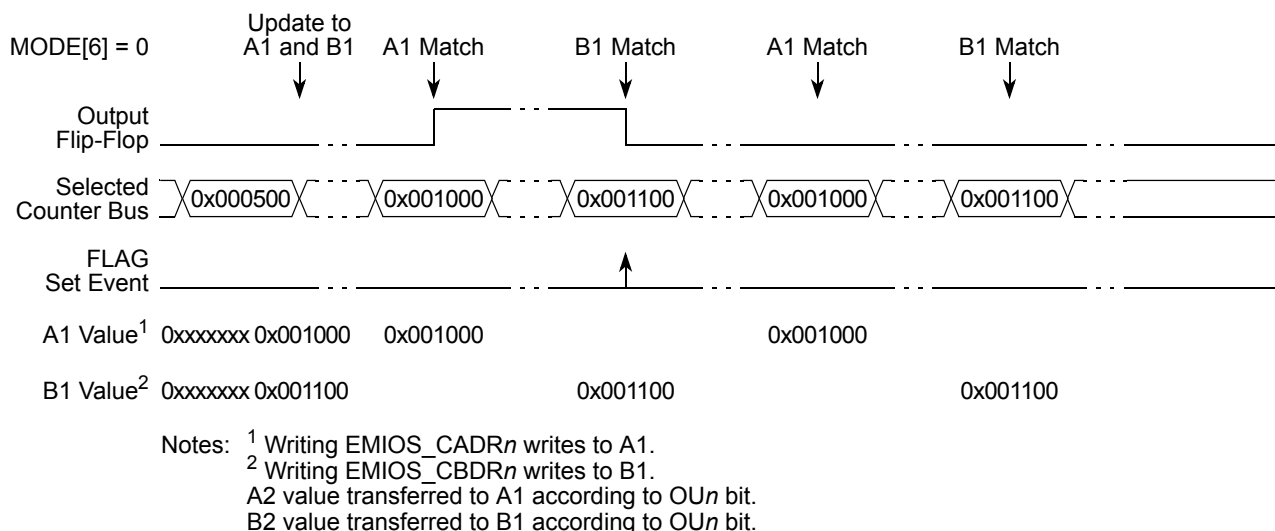


Figure 18-23. Double Action Output Compare with FLAG Set on the Second Match

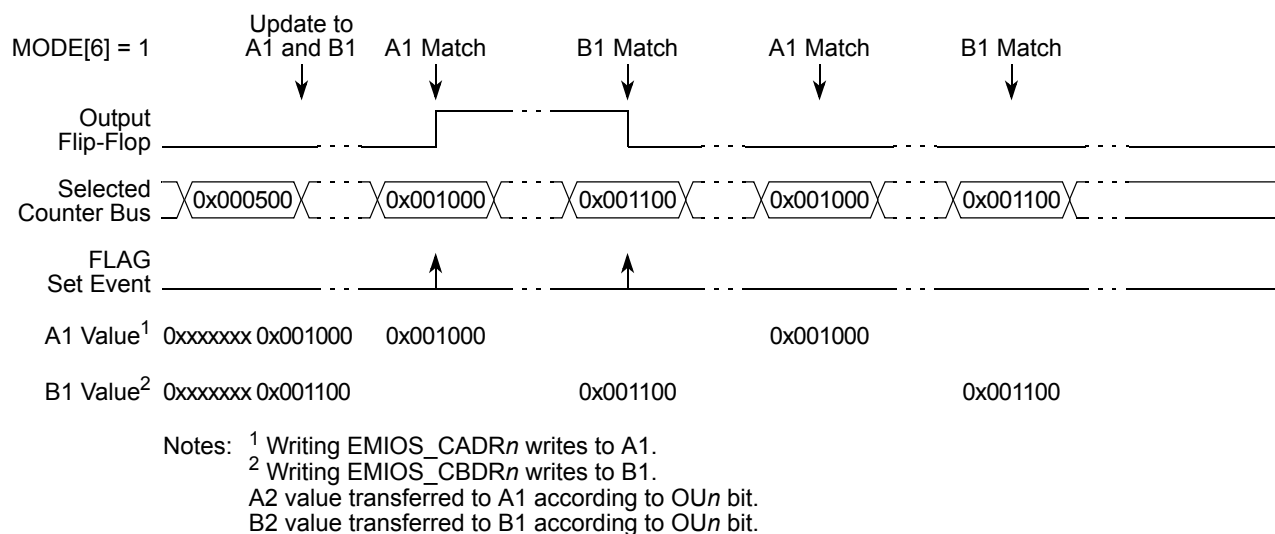


Figure 18-24. Double Action Output Compare with FLAG Set on Both Matches

18.4.4.4.7 Pulse/Edge Accumulation Mode (PEA)

The PEA mode returns the time taken to detect a desired number of input events. MODE[6] bit selects between continuous or single shot operation.

After writing to register A1, the internal counter is cleared on the first input event, ready to start counting input events and the selected timebase is latched into register B2. On the match between the internal counter and register A1, a counter bus capture is triggered to register A2 and B2. The data previously held in register B2 is transferred to register B1 and the FLAG bit is set to indicate that an event has occurred. The desired time interval can be determined by subtracting register B1 from A2. Registers EMIOS_CADR_n and EMIOS_CBDR_n return the values in register A2 and B1, respectively.

In order to guarantee coherent access, reading EMIOS_CADR_n disables transfers between B2 and B1. These transfers are disabled until the next read of the EMIOS_CBDR_n register. Reading the EMIOS_CBDR_n register re-enables transfers from B2 to B1, to take effect at the next transfer event, as described above.¹

Triggering of the counter clock (an input event) is done by a rising or falling edge or both edges on the input pin. The polarity of the triggering edge is selected by the EDSEL and EDPOL bits in EMIOS_CCR_n.

For continuous operating mode (MODE[6] cleared), the counter is cleared on the next input event after a FLAG generation and continues to operate as described above.

For single shot operation (MODE[6] set), the counter is not cleared or incremented after a FLAG generation, until a new writing operation to register A is performed.

1. If B1 was not updated due to B2 to B1 transfer being disabled after reading register EMIOS_CADR_n, further EMIOS_CADR_n and EMIOS_CBDR_n reads will not return coherent data until a new bus capture is triggered to registers A2 and B2. This capture event is indicated by the channel FLAG being asserted. If enabled, the FLAG also generates an interrupt.

NOTE

The FORCMA and FORCMB bits have no effect when the unified channel is configured for PEA mode.

Figure 18-25 and Figure 18-26 show how the unified channel can be used for continuous and single shot pulse/edge accumulation mode.

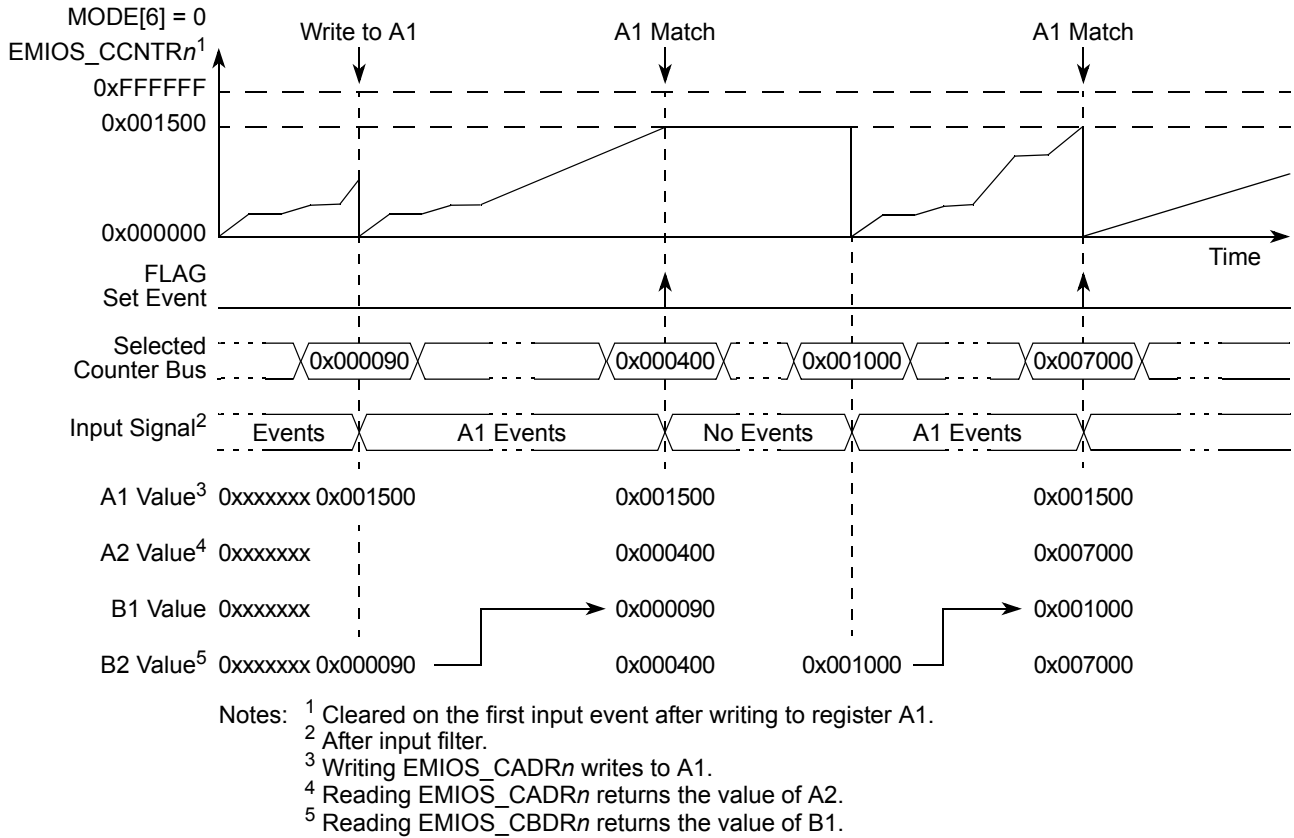


Figure 18-25. Pulse/Edge Accumulation Continuous Mode Example

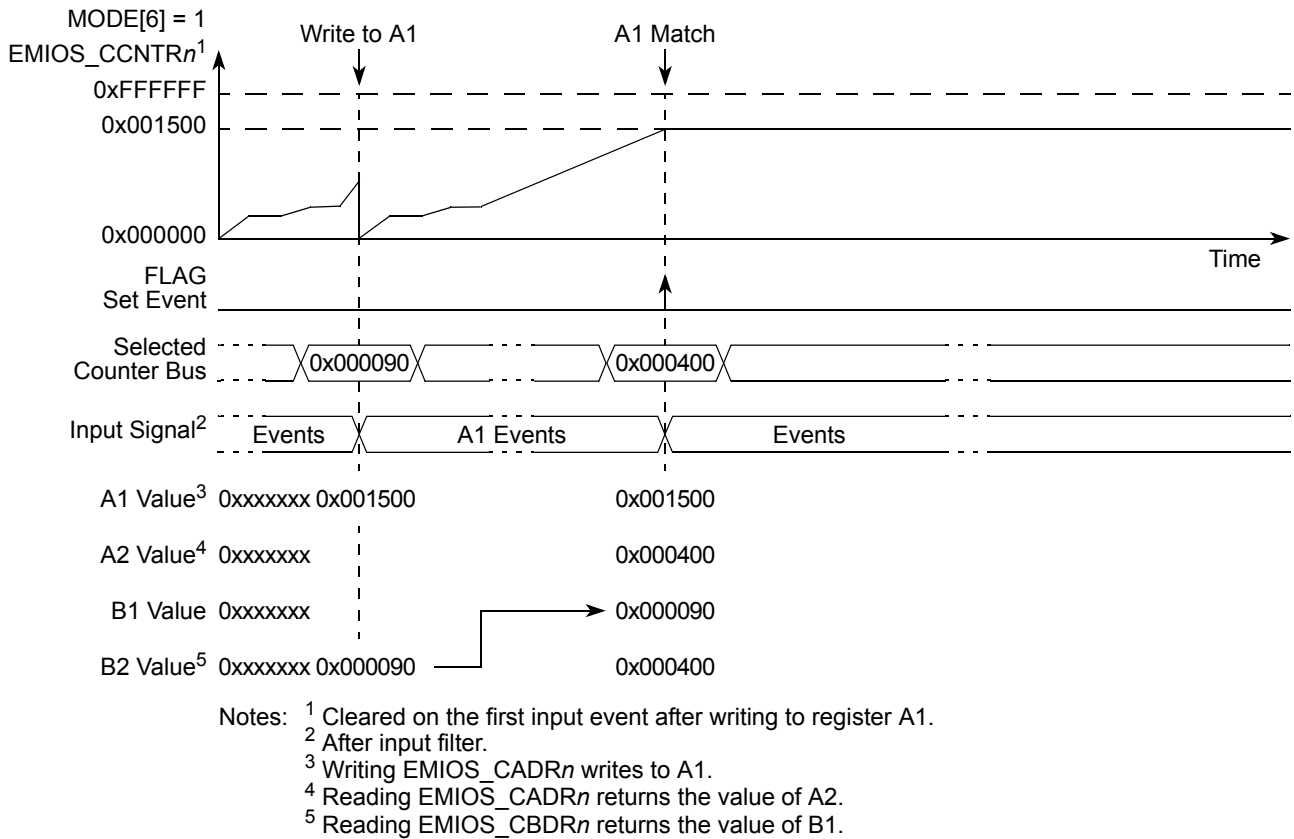


Figure 18-26. Pulse/Edge Accumulation Single-shot Mode Example

18.4.4.4.8 Pulse/Edge Counting Mode (PEC)

The PEC mode returns the amount of pulses or edges detected on the input for a desired time window. MODE[6] bit selects between continuous or single shot operation.

Triggering of the internal counter is done by a rising or falling edge or both edges on the input signal. The polarity and the triggering edge is selected by EDSEL and EDPOL bits in EMIOS_CCR_n.

Register A1 holds the start time and register B1 holds the stop time for the time window. After writing to register A1, when a match occur between comparator A and the selected timebase, the internal counter is cleared and it is ready to start counting input events. When the time base matches comparator B1, the internal counter is disabled and its content is transferred to register A2. At the same time the FLAG bit is set. Reading registers EMIOS_ALTAN or A2 returns the amount of detected pulses.

For continuous operation (MODE[6] cleared), the next match between comparator A and the selected time base clears the internal counter and counting is enabled again. In order to guarantee the accuracy when reading EMIOS_CCNTR_n after the flag is set, the software must check if the time base value is out of the time interval defined by registers A1 and B1. Alternatively register A2 always holds the latest available measurement providing coherent data at any time after the first FLAG occurs. This register is addressed by the alternate address EMIOS_ALTAN.

For single shot operation (MODE[6] set), the next match between comparator A and the selected time base has no effect, until a new write to register A is performed. The EMIOS_CCNTRn content is also transferred to register A2 when a match in the B comparator occurs.

NOTE

The FORCMA and FORCMB bits have no effect when the unified channel is configured for PEC mode.

Figure 18-27 and Figure 18-28 show how the unified channel can be used for continuous or single shot pulse/edge counting mode.

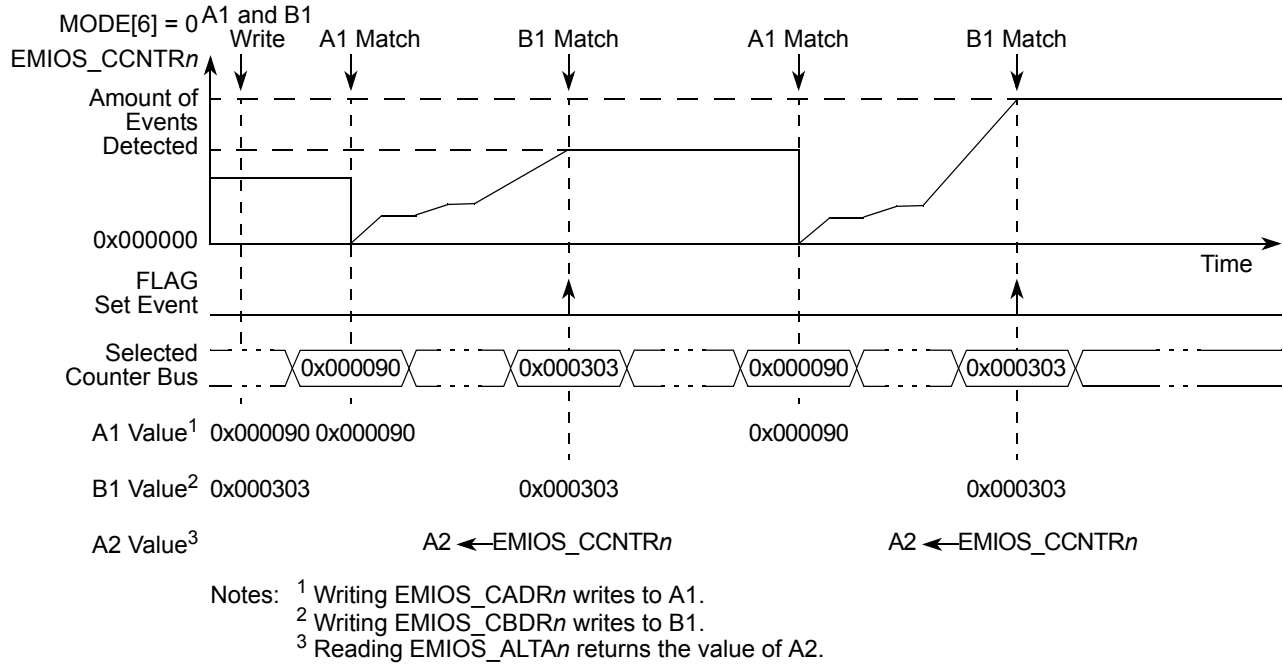


Figure 18-27. Pulse/Edge Counting Continuous Mode Example

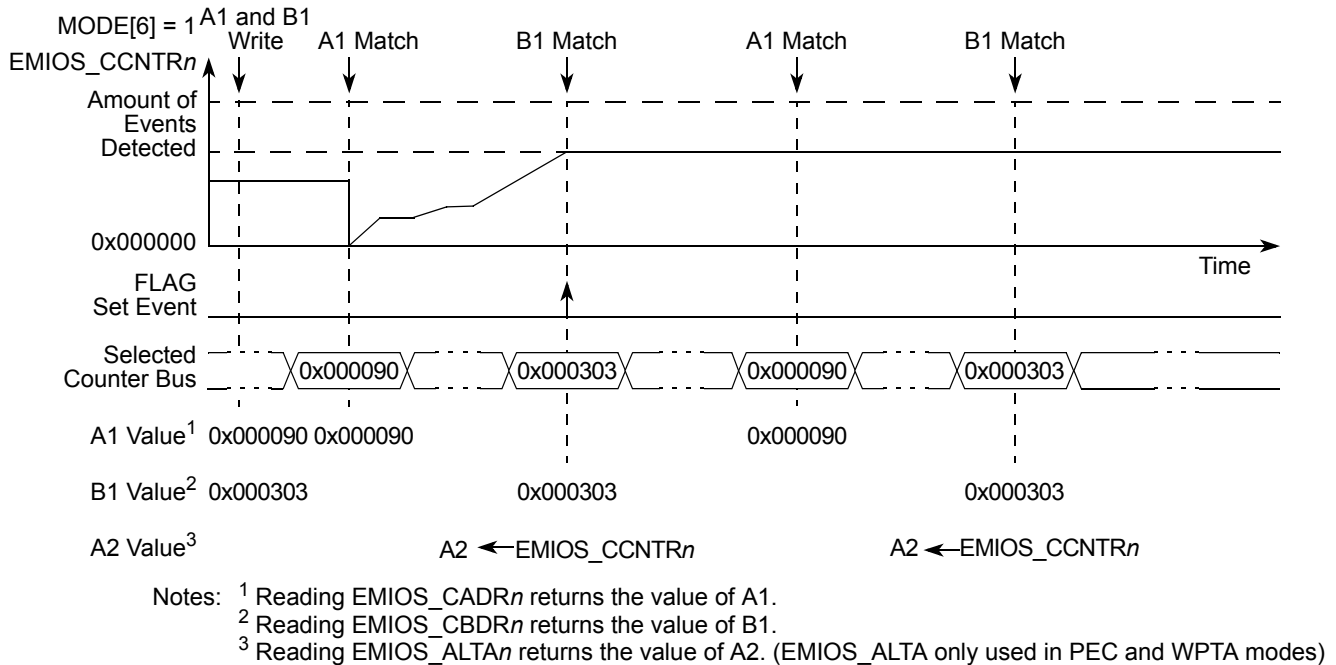


Figure 18-28. Pulse/Edge Counting Single-Shot Mode Example

18.4.4.4.9 Quadrature Decode Mode (QDEC)

Quadrature decode mode uses UC_n operating in QDEC mode and the programmable input filter (PIF) from UC[n-1]. Note that UC[n-1] can be configured, at the same time, to an operation mode that does not use I/O pins, such as MC mode (modulus counter). The connection among the UCs is circular; that is, when UC0 is running in QDEC mode, the programmable input filter from UC23 is being used.


This mode generates a FLAG every time the internal counter matches A1 register. The internal counter is automatically selected and is not cleared when entering this mode.

MODE[6] bit selects which type of encoder will be used: count and direction encoder or phase_A and phase_B encoders.

When operating with count and direction encoder (MODE[6] cleared), UC_n input pin must be connected to the direction signal and UC[n-1] input pin must be connected to the count signal of the quadrature encoder. UC_n EDPOL bit selects count direction according to direction signal and UC[n-1] EDPOL bit selects if the internal counter is clocked by the rising or falling edge of the count signal.


When operating with phase_A and phase_B encoder (MODE[6] set), UC_n input pin must be connected to the phase_A signal and UC[n-1] input pin must be connected to the phase_B signal of the quadrature encoder. EDPOL bit selects the count direction according to the phase difference between phase_A and phase_B signals.

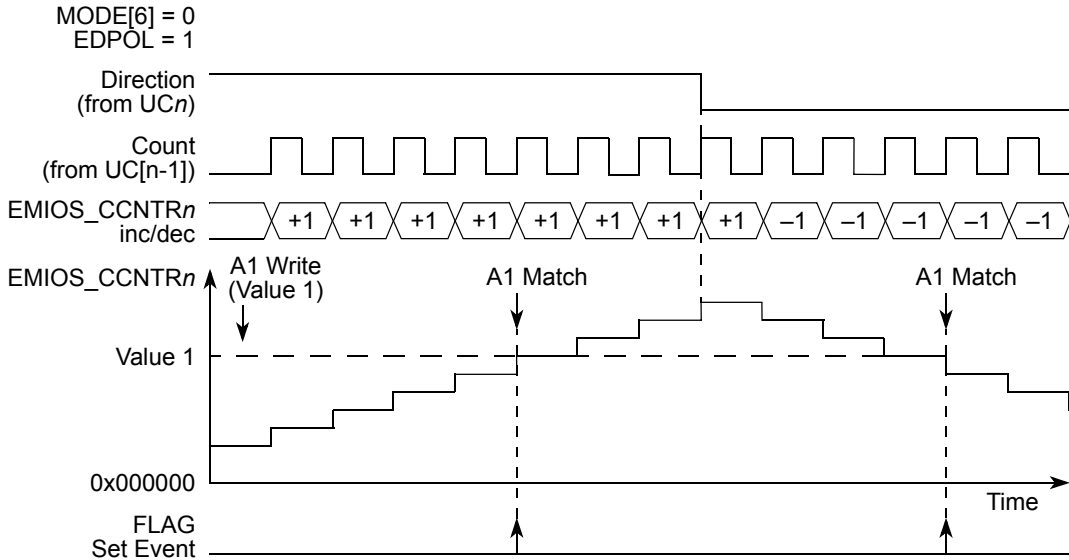Figure 18-29 and Figure 18-30 show two unified channels configured to quadrature decode mode for count and direction encoder and phase_A and phase_B encoders, respectively.



Note: Writing EMIOS_CADR_n writes to A1.

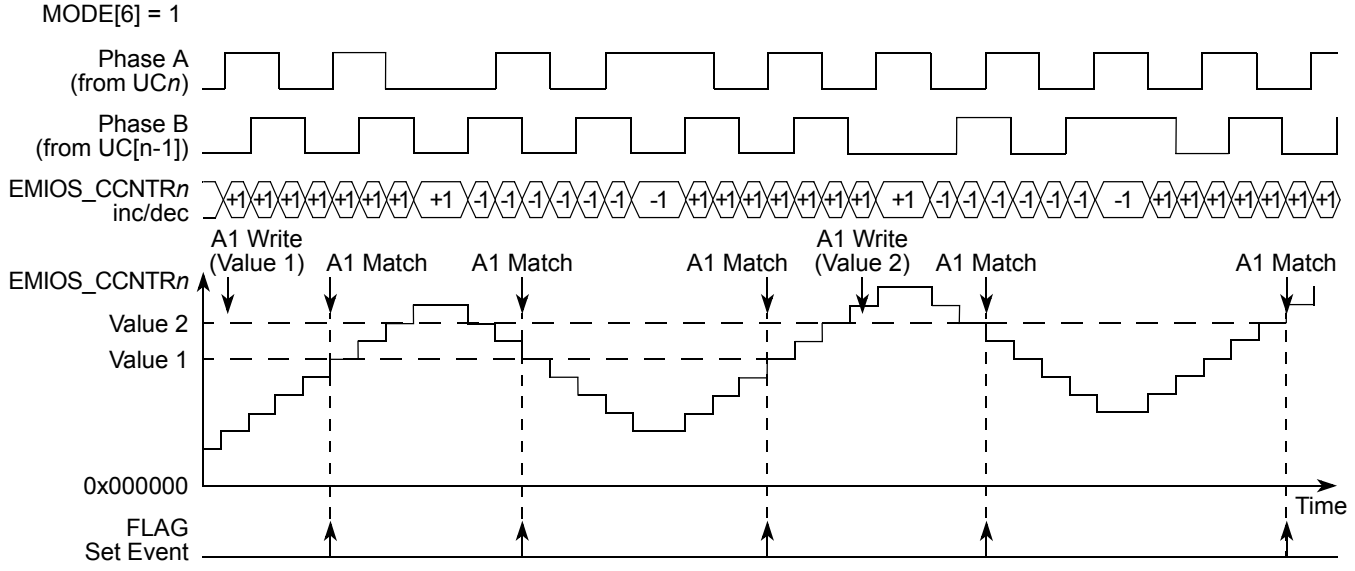Figure 18-29. Quadrature Decode Mode Example with Count and Direction Encoder



Note: Writing EMIOS_CADR_n writes to A1.

Figure 18-30. Quadrature Decode Mode Example with Phase_A and Phase_B Encoder

18.4.4.4.10 Windowed Programmable Time Accumulation Mode (WPTA)

The WPTA mode accumulates the sum of the total high time or low time of an input signal over a programmable interval (time window).

The prescaler bits UCPRE[0:1] in EMIOS_CCR_n define the increment rate of the internal counter.


Register A1 holds the start time and register B1 holds the stop time of the programmable time interval. When a match occurs between register A and the selected timebase, the internal counter is cleared and it is ready to start counting. The internal counter is used as a time accumulator; that is, it counts up when the input signal has the same polarity of EDPOL bit in EMIOS_CCR n and does not count otherwise. When a match occurs in comparator B, the internal counter is disabled regardless of the input signal polarity and the FLAG bit is set. At the same time the content of EMIOS_CCNTR n is transferred to register A2. Reading EMIOS_CCNTR n or A2 returns the high or low time of the input signal.

Note that EMIOS_CCNTR n is stable only outside the time window defined from A1 to B1 matches, otherwise its contents reflects a count in progress and not the final value. Alternatively to EMIOS_CCNTR n , register A2 returns the latest available measurement. Because this register is updated only at comparator B matches, it always contains stable and up-to-date data. In WPTA mode this register is accessible through the alternate register address EMIOS_ALTAN.

NOTE

The FORCMA and FORCMB bits have no effect when the unified channel is configured for WPTA mode.

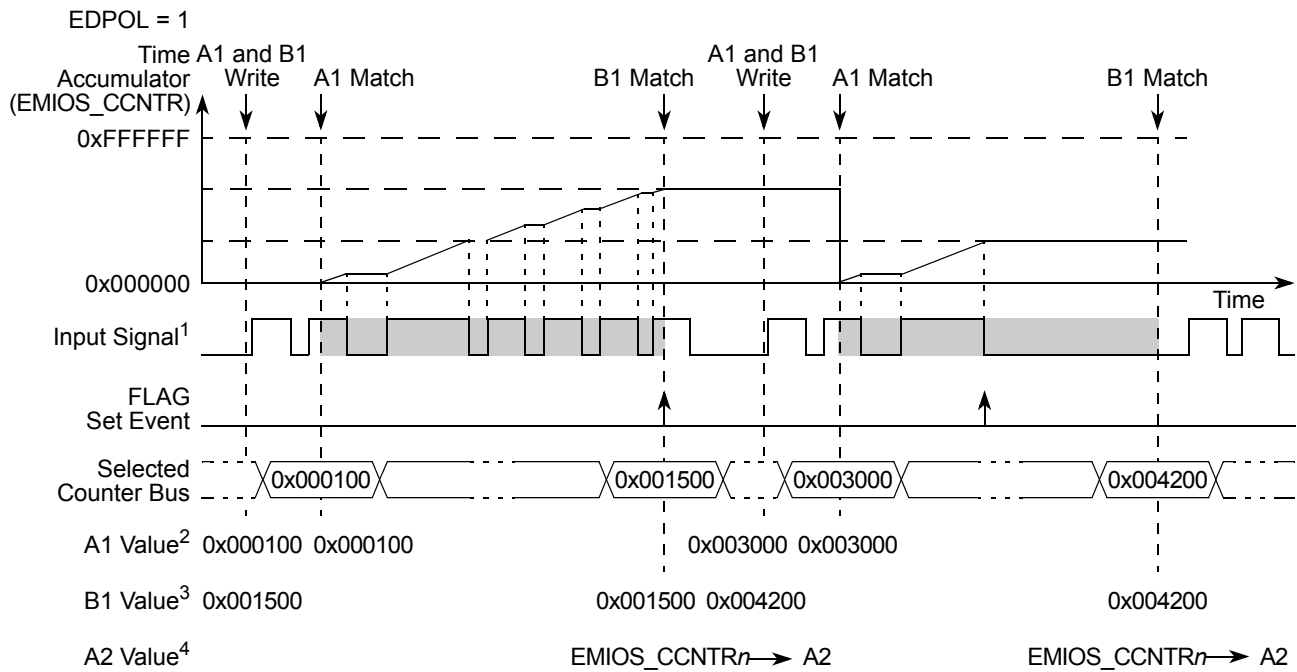Figure 18-31 shows how the unified channel can be used to accumulate high time.



- Notes:
- ¹ After input filter.
 - ² Writing EMIOS_CADR n writes to A1.
 - ³ Writing EMIOS_CBDR n writes to B1.
 - ⁴ Reading EMIOS_ALTAN returns the value of A2. (EMIOS_ALTAN only used in PEC and WPTA modes)

Figure 18-31. Windowed Programmable Time Accumulation Example

18.4.4.4.11 Modulus Counter Mode (MC)

The MC mode can be used to provide a time base for a counter bus or as a general purpose timer.

MODE[6] bit selects internal or external clock source when cleared or set, respectively. When external clock is selected, the input signal pin is used as the source and the triggering polarity edge is selected by the EDPOL and EDSEL in the EMIOS_CCR*n*.

When software selects the modulus counter mode, the internal counter is initially reset to 0. The internal counter counts up from the current value until it matches the value in register A1. Register B1 is cleared and is not accessible to the MCU. MODE[4] bit selects up mode or up/down mode, when cleared or set, respectively.

When in up count mode, a match between the internal counter and register A1 sets the FLAG and clears the internal counter.

When in up/down count mode, a match between the internal counter and register A1 sets the FLAG and changes the counter direction from increment to decrement. A match between register B1 and the internal counter changes the counter direction from decrement to increment and sets the FLAG only if MODE[5] bit is set.

NOTE

The FORCMA and FORCMB bits have no effect when the unified channel is configured for MC mode.

NOTE

Any update to the A register will take place immediately, regardless of the current state of the counter and whether the counter is in up mode, or up/down mode.

Figure 18-32 and Figure 18-33 shows how the unified channel can be used as modulus counter in up mode and up/down mode, respectively.

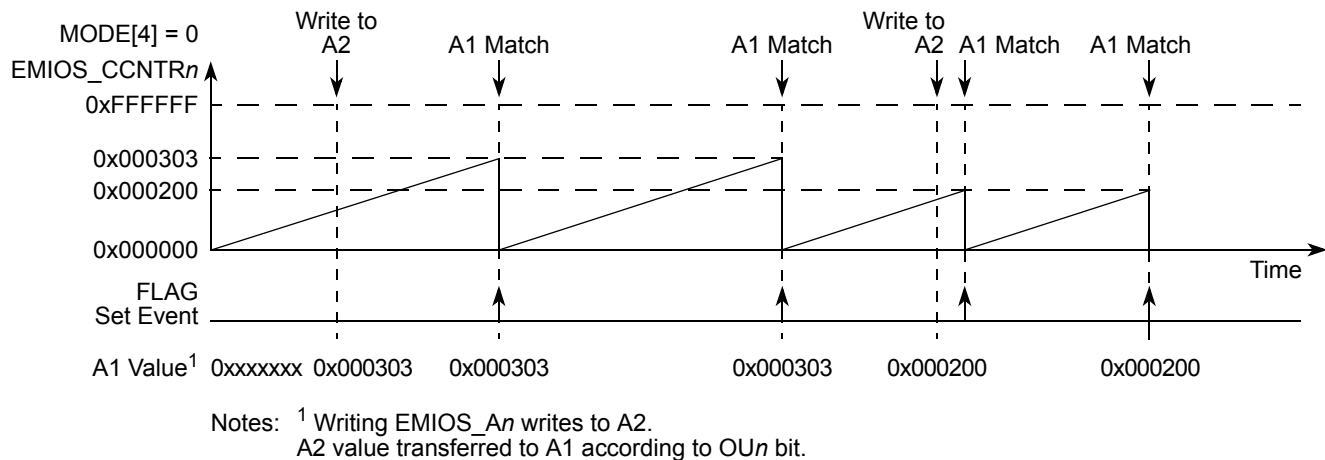


Figure 18-32. Modulus Counter Up Mode Example

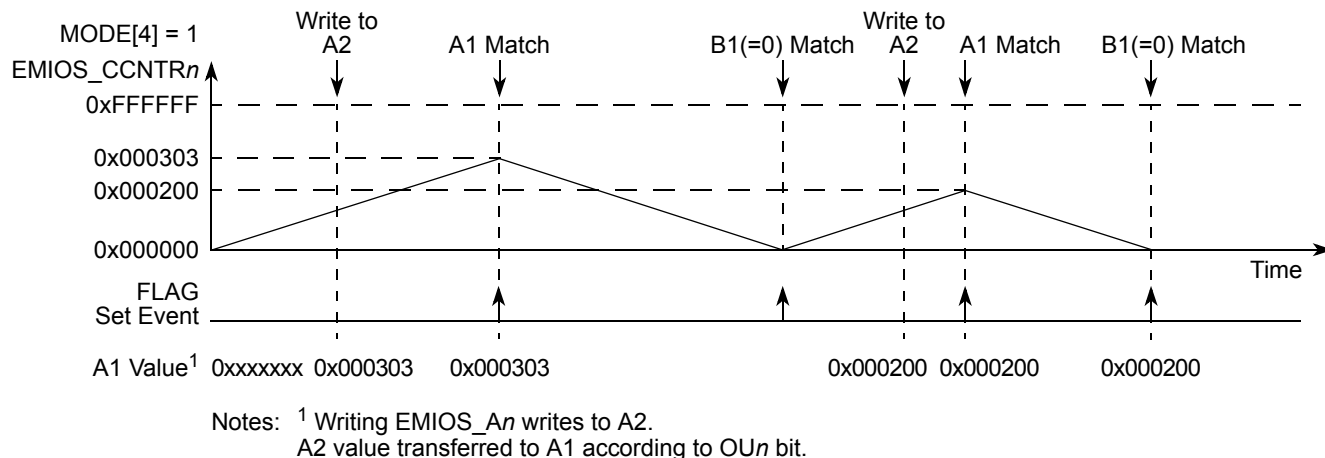


Figure 18-33. Modulus Counter Up/Down Mode Example

18.4.4.4.12 Output Pulse Width and Frequency Modulation Mode (OPWFM)

In this mode, the duty cycle is (register A1 + 1) and the period is (register B1 + 1). The MODE[6] bit controls the transfer from register B2 to B1, which can be done either immediately (MODE[6] cleared), providing the fastest change in the duty cycle, or at every match of register A1 (MODE[6] set).

The internal counter is automatically selected as a time base, therefore the BSL[0:1] bits in register EMIOS_CCRn have no meaning. The output flip-flop's active state is the complement of EDPOL bit. The output flip-flop is active during the duty cycle (from the start of the cycle until a match occurs in comparator A). After the match in comparator A the output flip-flop is in the inactive state (the value of EDPOL) until the next cycle starts. When a match on comparator A occurs, the output flip-flop is set to the value of the EDPOL bit. When a match occurs on comparator B, the output flip-flop is set to the complement of the EDPOL bit and the internal counter is cleared.

FLAG can be generated at match B, when MODE[5] is cleared, or in both matches, when MODE[5] is set.

At any time, the FORCMA and FORCMB bits allow the software to force the output flip-flop to the level corresponding to a match on A or B respectively. Also, FORCMB clears the internal counter. Note that the FLAG bit is not set by the FORCMA or FORCMB operations.

If subsequent comparisons occur on comparators A and B, the PWFm pulses continue to be output, regardless of the state of the FLAG bit.

In order to achieve 0% duty cycle, both registers A1 and B1 must be set to the same value. When a simultaneous match occurs on comparators A and B, the output flip-flop is set at every period to the value of EDPOL bit.

To temporarily change from the current duty cycle to 0% and then return to the current duty cycle, the sequence is the following:

1. If not currently stored, store value of register A.
2. Set A=B.
3. If immediate 0% duty cycle is desired, set FORCA=1.

- To return to the previous duty cycle, restore register A with its former value.

100% duty cycle is possible by writing 0x000000 to register A. When a match occurs, the output flip-flop is set at every period to the complement of EDPOL bit. The transfer from register B2 to B1 is still controlled by MODE[6] bit.

To temporarily change from the current duty cycle to 100% and then return to the current duty cycle, the sequence is the following:

- If not currently stored, store value of register A.
- Set A=0.
- If immediate 100% duty cycle is desired, set FORCB=1.
- To return to the previous duty cycle, restore register A with its former value.

NOTE

Updates to the A register will always occur immediately. If next period update is selected via the mode[6] bit, only the B register update is delayed until the next period.

Figure 18-34 shows the unified channel running in OPFWM mode with immediate register update and Figure 18-35 shows the unified channel running in OPFWM mode with next period update PFWM mode. In both figures EDPOL = 1, so the output is low during the duty cycle. Table 18-14 has additional illustrative examples.


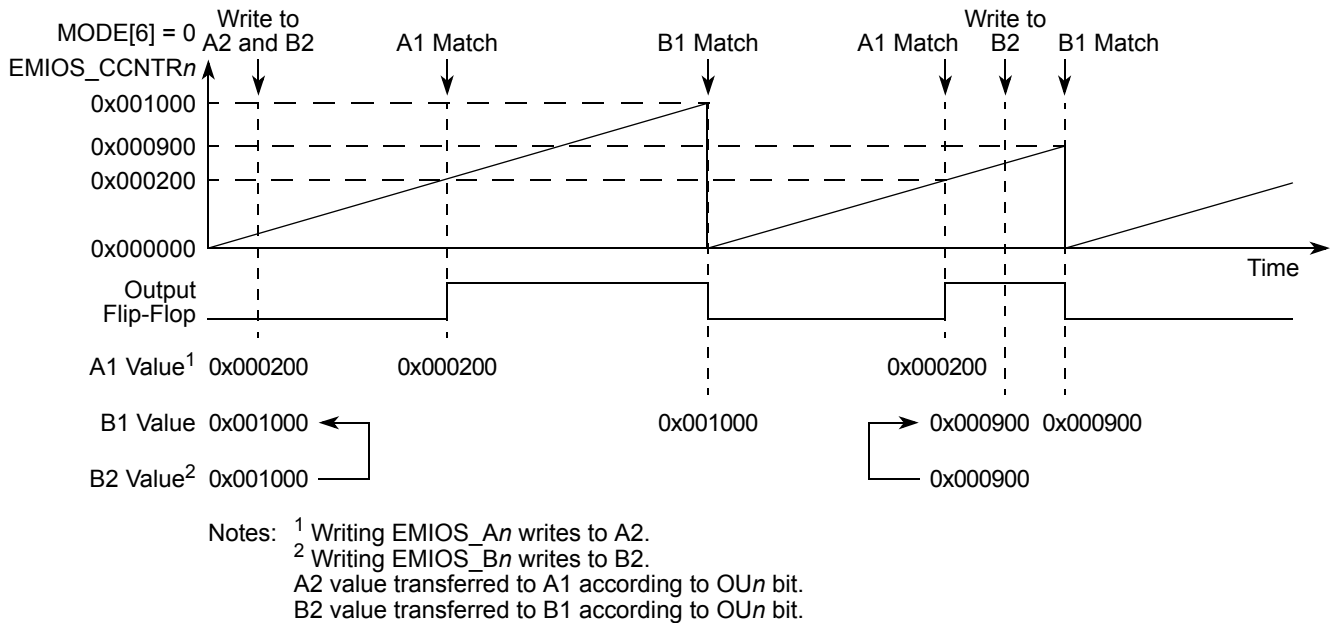


Figure 18-34. OPFWM with Immediate Update

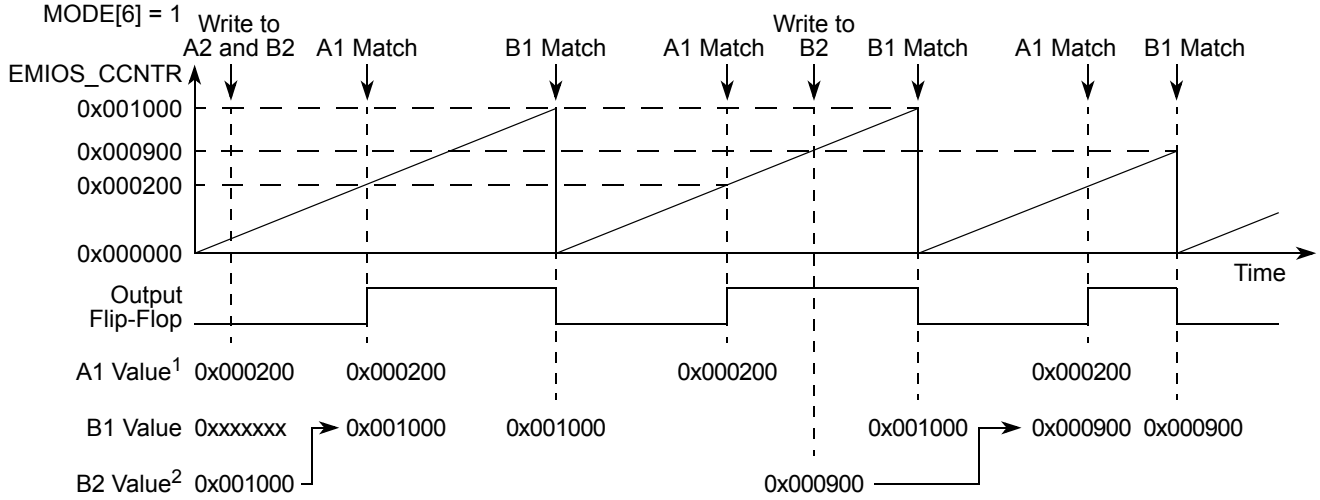

Notes: ¹ Writing EMIOS_An writes to A2.
² Writing EMIOS_Bn writes to B2.
A2 value transferred to A1 according to OUn bit.
B2 value transferred to B1 according to OUn bit.

Figure 18-35. OPWFM with Next Period Update

Table 18-14. Examples of Output Waveforms

EDPOL	Duty Cycle	A (decimal)	B (decimal)	Waveform
0 (active high output)	0%	1000	1000	H L
	25%	250	1000	H L
	50%	500	1000	H L
	75%	750	1000	H L
	100%	0	1000	H L

Table 18-14. Examples of Output Waveforms (continued)

EDPOL	Duty Cycle	A (decimal)	B (decimal)	Waveform
1 (active low output)	0%	1000	1000	H L
	25%	250	1000	H L
	50%	500	1000	H L
	75%	750	1000	H L
	100%	0	1000	H L

18.4.4.4.13 Center Aligned Output Pulse Width Modulation with Dead-time Mode (OPWMC)

This operating mode generates a center aligned PWM with dead time insertion in the leading or trailing edge.

The selected counter bus must be running an up/down time base, as shown in [Figure 18-33](#). BSL[0:1] bits select the time base. Register A1 contains the ideal duty cycle for the PWM signal and is compared with the selected time base. Register B1 contains the dead time value and is compared with the internal counter. For a leading edge dead time insertion, the output PWM duty cycle is equal to the difference between register A1 and register B1, and for a trailing edge dead time insertion, the output PWM duty cycle is equal to the sum of register A1 and register B1. MODE[6] bit selects between trailing and leading dead time insertion, respectively.

NOTE

It is recommended that the internal prescaler of the OPWMCB channel be set to the same value as the MCB channel prescaler, and the prescalers should also be synchronized. This allows the A1 and B1 registers to represent the same time scale for duty cycle and dead time insertion.

When operating with leading edge dead time insertion, the first match between A1 and the selected time base clears the internal counter and switches the selected time base to the internal counter. When a match occurs between register B1 and the selected time base, the output flip-flop is set to the value of the EDPOL bit and the time base is switched to the selected counter bus. In the next match between register A1 and the selected time base, the output flip-flop is set to the complement of the EDPOL bit. This sequence repeats continuously.

When operating with trailing edge dead time insertion, the first match between A1 and the selected time base sets the output flip-flop to the value of the EDPOL bit. In the next match between register A1 and the selected time base, the internal counter is cleared and the selected time base is switched to the internal counter. When a match occurs between register B1 and the selected time base, the output flip-flop is set to the complement of the EDPOL bit and the time base is switched to the selected counter bus. This sequence repeats continuously.

FLAG can be generated in the trailing edge of the output PWM signal when MODE[5] is cleared, or in both edges, when MODE[5] is set.

At any time, the FORCMA or FORCMB bits are equivalent to a successful comparison on comparator A or B with the exception that the FLAG bit is not set.

NOTE

When in freeze mode, the FORCMA or FORCMB bits only allow the software to force the output flip-flop to the level corresponding of a match on A or B respectively.

If subsequent matches occur on comparators A and B, the PWM pulses continue to be generated, regardless of the state of the FLAG bit.

In order to achieve a duty cycle of 100%, both registers A1 and B1 must be set to the same value. When a simultaneous match occurs between the selected time base and registers A1 and B1, the output flip-flop is set at every period to the value of EDPOL bit and the selected time base switches to the selected counter bus, allowing a new cycle to begin at any time, as previously described. 0% duty cycle is possible by writing 0x000000 to register A. When a match occurs, the output flip-flop is set at every period to the complement of EDPOL bit and the selected time base switches to the selected counter bus, allowing a new cycle to begin at any time, as previously described. In both cases, FLAG is generated regardless of MODE[5] bit.


NOTE

If A1 and B1 are set to the 0x000000, a 0% duty cycle waveform is produced.

NOTE


Any updates to the A or B register will take place immediately.

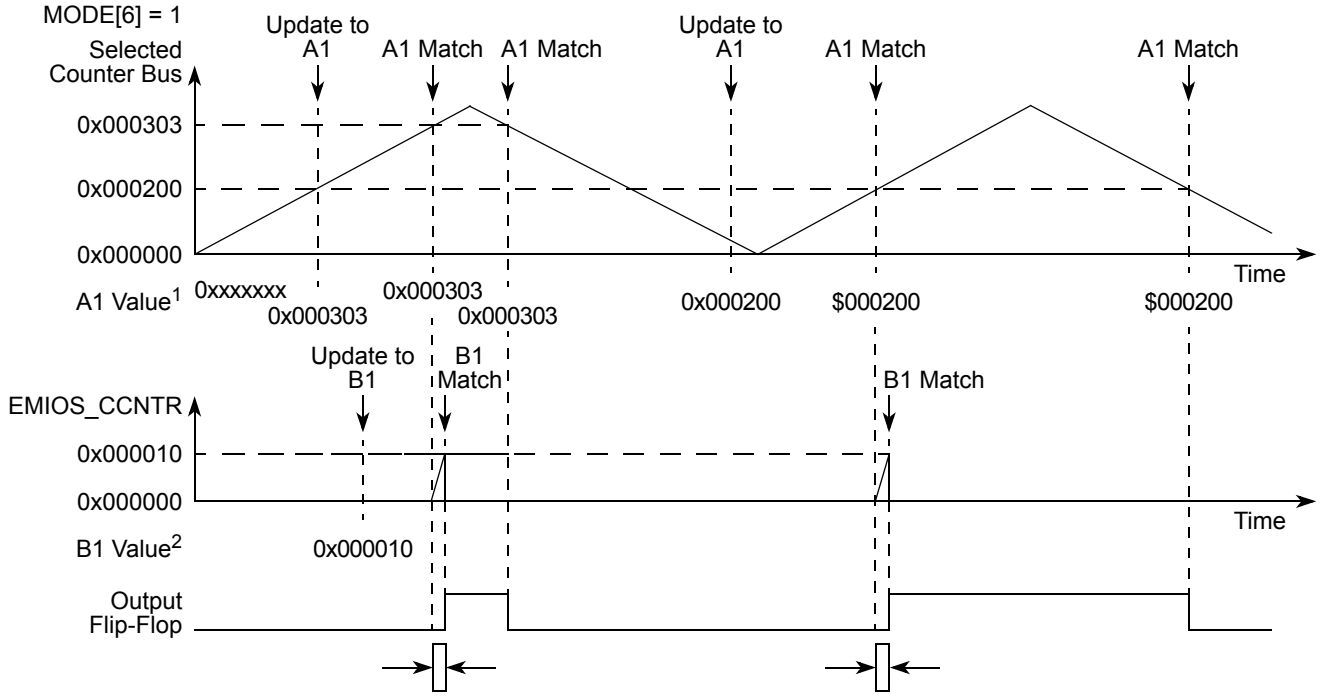Figure 18-36 and Figure 18-37 show the unified channel running in OPWMC with leading and trailing dead time, respectively.



- Notes:
- ¹ Writing EMIOS_An writes to A1.
 - ² Writing EMIOS_Bn writes to B1.
 - A2 value transferred to A1 according to OUn bit.
 - B2 value transferred to B1 according to OUn bit.

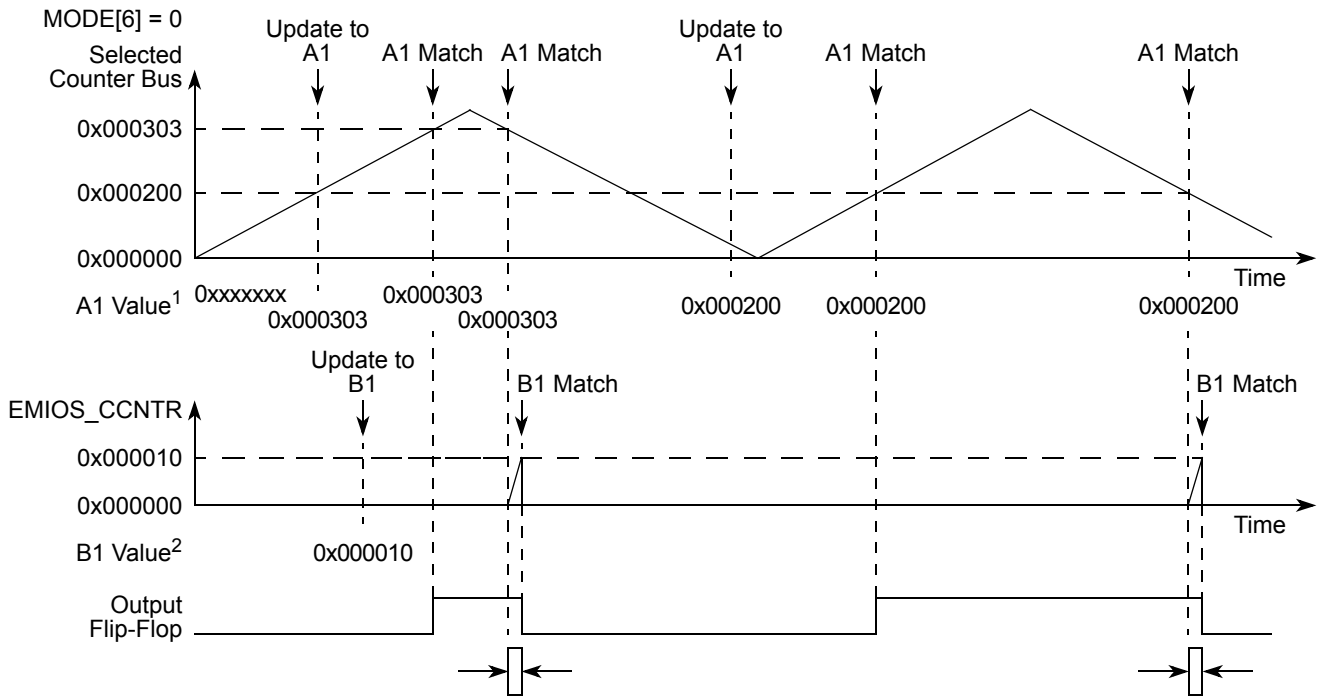Figure 18-36. Output PWM with Leading Dead-time Insertion



Notes: ¹ Writing EMIOS_An writes to A2.
² Writing EMIOS_Bn writes to B1.
 A2 value transferred to A1 according to OUn bit.
 B2 value transferred to B1 according to OUn bit.

Figure 18-37. Output PWM with Trailing Dead-time Insertion

18.4.4.4.14 Output Pulse Width Modulation Mode (OPWM)

Registers A1 and B1 define the leading and trailing edges of the PWM output pulse, respectively. MODE[6] bit controls the transfer from register B2 to B1, which can be done either immediately (MODE[6] cleared), providing the fastest change in the duty cycle, or at every match of register A1 (MODE[6] set).

The value loaded in register A1 is compared with the value on the selected time base. When a match on comparator A occurs, the output flip-flop is set to the value of the EDPOL bit. When a match occurs on comparator B, the output flip-flop is set to the complement of the EDPOL bit.

FLAG can be generated at match B, when MODE[5] is cleared, or in both matches, when MODE[5] is set.

At any time, the FORCMA and FORCMB bits allow the software to force the output flip-flop to the level corresponding to a match on A or B respectively. Note that FLAG bit is not set by the FORCMA and FORCMB operations.

If subsequent matches occur on comparators A and B, the PWM pulses continue to be generated, regardless of the state of the FLAG bit.

In order to achieve 0% duty cycle, both registers A1 and B1 must be set to the same value. When a simultaneous match on comparators A and B occur, the output flip-flop is set at every period to the value of EDPOL bit. 0% duty cycle is possible by writing 0x000000 to register A. When a match occurs, the

output flip-flop is set at every period to the complement of EDPOL bit. The transfer from register B2 to B1 is still controlled by MODE[6] bit.

NOTE

If A1 and B1 are set to the 0x000000, a 100% duty cycle waveform is produced.

NOTE

Updates to the A register will always occur immediately. If next period update is selected via the mode[6] bit, only the B register update is delayed until the next period.

Figure 18-38 and Figure 18-39 show the unified channel running in OPWM with immediate update and next period update, respectively.

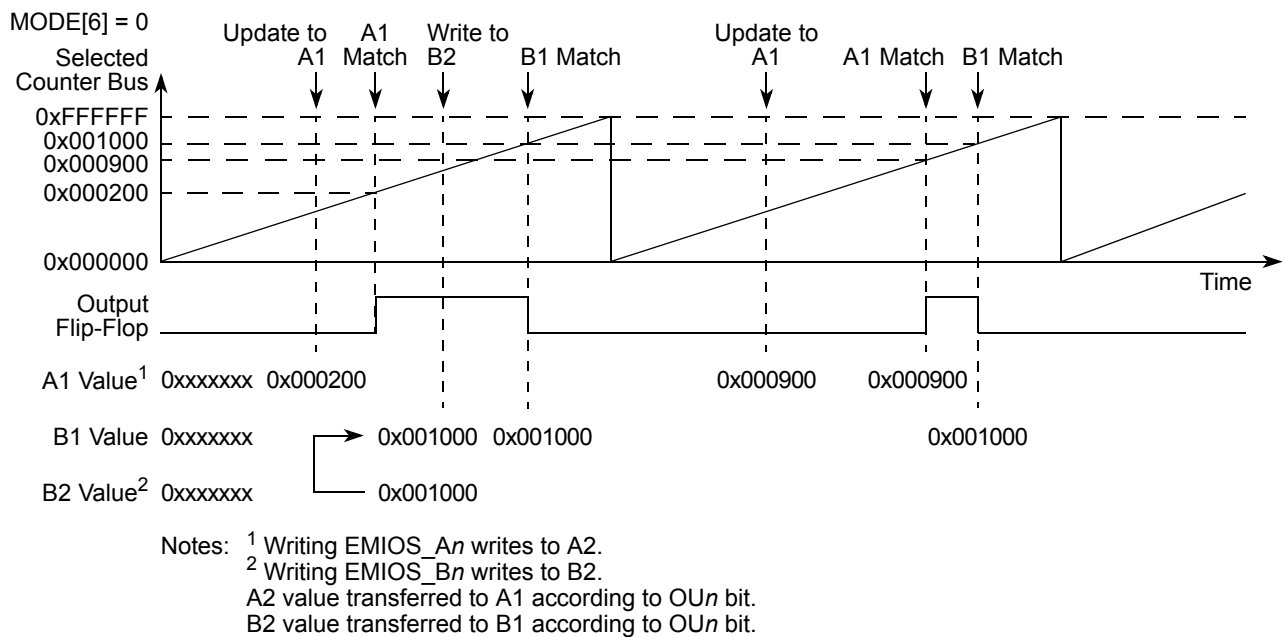


Figure 18-38. Output PWM with Immediate Update

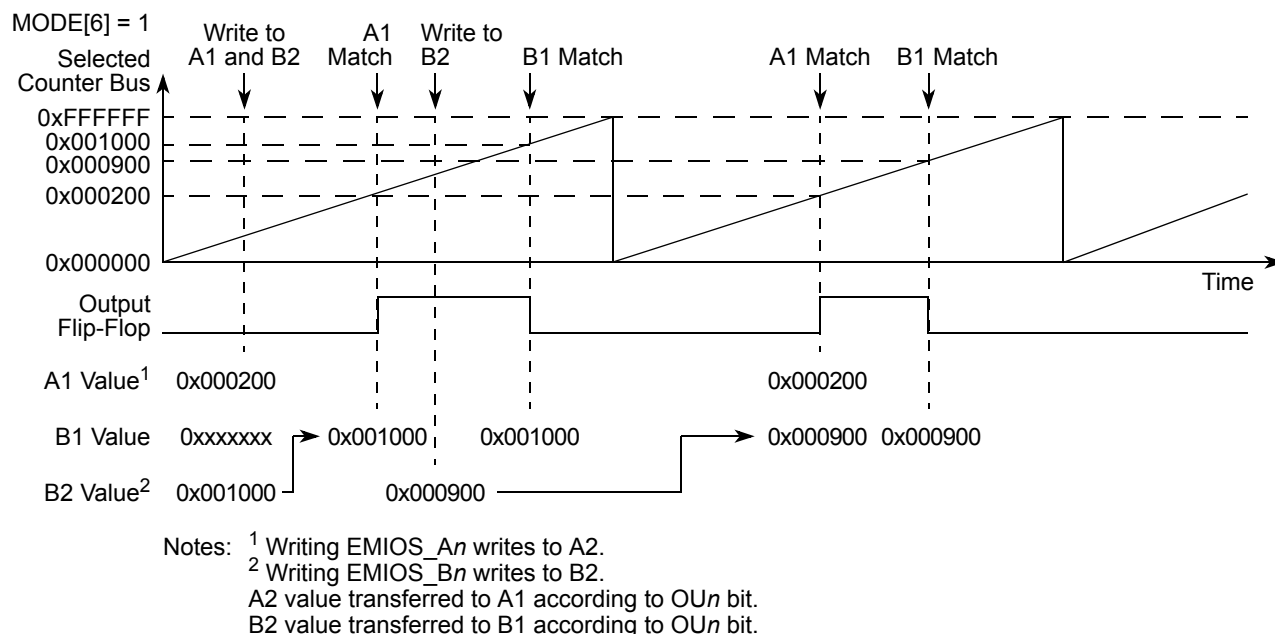


Figure 18-39. Output PWM with Next Period Update

18.4.4.4.15 Modulus Counter, Buffered Mode (MCB)

The MCB mode provides a time base which can be shared with other channels through the internal counter buses. Register A1 is double buffered, thus allowing smooth transitions between cycles when changing the A2 register value on the fly. The A1 register is updated at the cycle boundary, which is defined as when the internal counter reaches the value one. Note that the internal counter values are within a range from one up to register A1 value in MCB mode.

The MODE[6] bit selects the internal clock source if clear or external if set. When an external clock is selected, the channel input pin is used as the channel clock source. The active edge of this clock is defined by EDPOL and EDSEL bits in the EMIOS_CCR channel register.

When entering the MCB mode, if up counter is selected (MODE[4] = 0), the internal counter starts counting up from its current value to until an A1 match occurs. On the next system clock cycle after an A1 match occurs, the internal counter is set to one and the counter continues counting up. If up/down mode is selected (MODE[4] = 1), the counter changes direction at the A1 match and counts down until it reaches one and is then set to count up again. In this mode B1 is set to one and cannot be changed, as it is used to generate a match to switch from down count to up count.

Note that versus the MC mode, the MCB mode counts between one and the A1 register value. The counter cycle period in up count mode is equal to the A1 value. In up/down counter mode the period is defined by the formula: $(2 \times A1) - 2$.

Figure 18-40 illustrates the counter cycle for several A1 values. Register A1 is loaded with the A2 value at the cycle boundary. Thus any value written to A2 within cycle (n) will be updated to A1 at the next cycle boundary, and therefore will be used on cycle (n+1). The cycle boundary between cycle (n) and cycle (n+1) is defined as the first clock cycle of cycle (n+1). Note that flags are set when A1 matches occur.

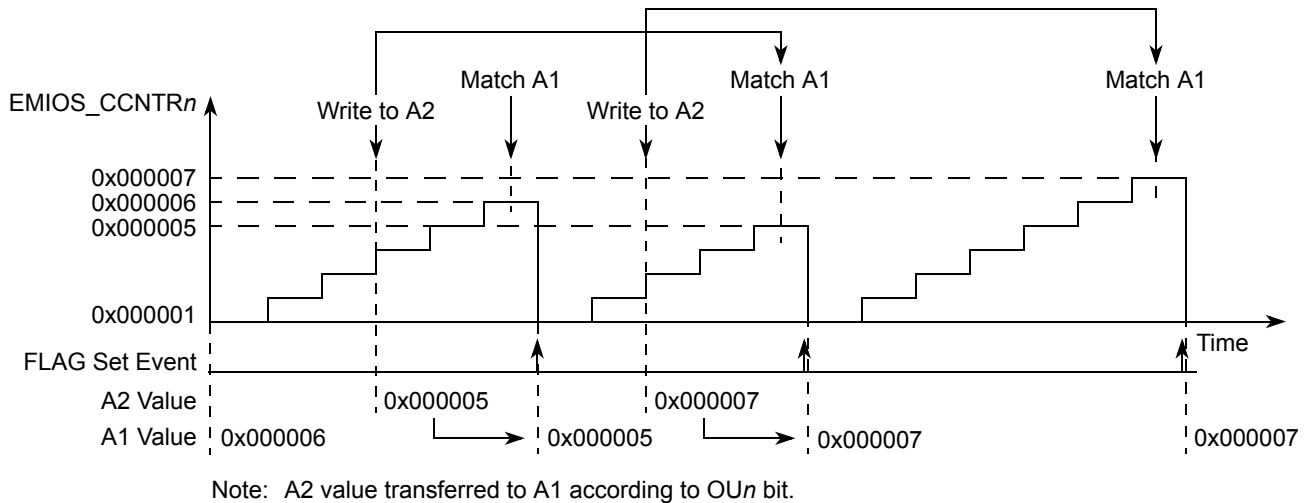


Figure 18-40. eMIOS MCB Mode Example — Up Operation

Figure 18-41 illustrates the MCB up/down counter mode. The A1 register is updated at the cycle boundary. If A2 is written in cycle (n), this new value will be used in cycle ($n+1$) for the next A1 match.

Flags are generated only at an A1 match if $MODE[5]$ is 0. If $MODE[5]$ is 1, flags are also generated at the cycle boundary.


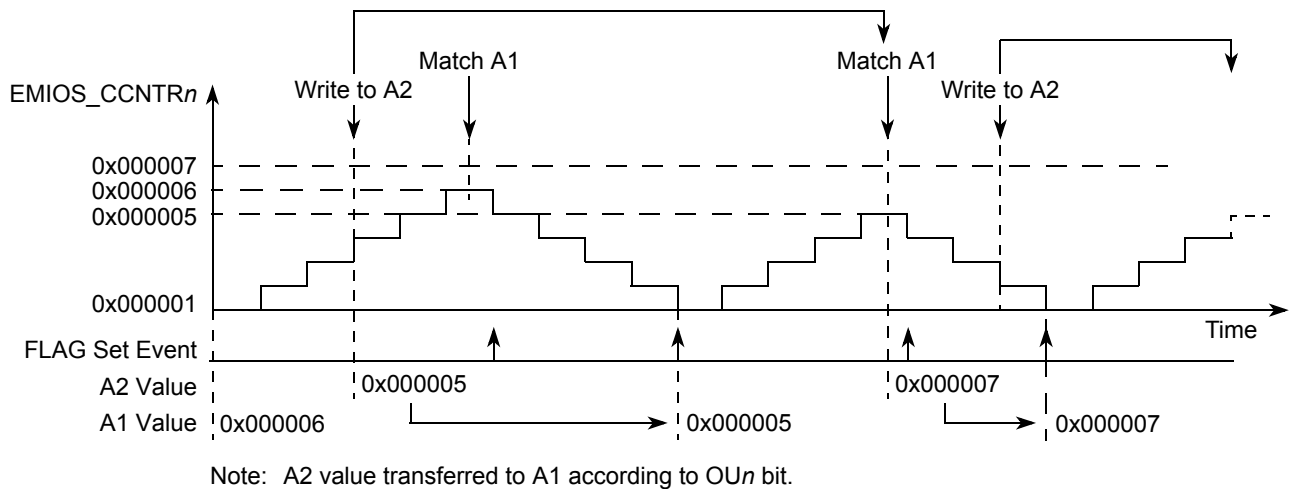


Figure 18-41. eMIOS MCB Mode Example — Up/Down Operation

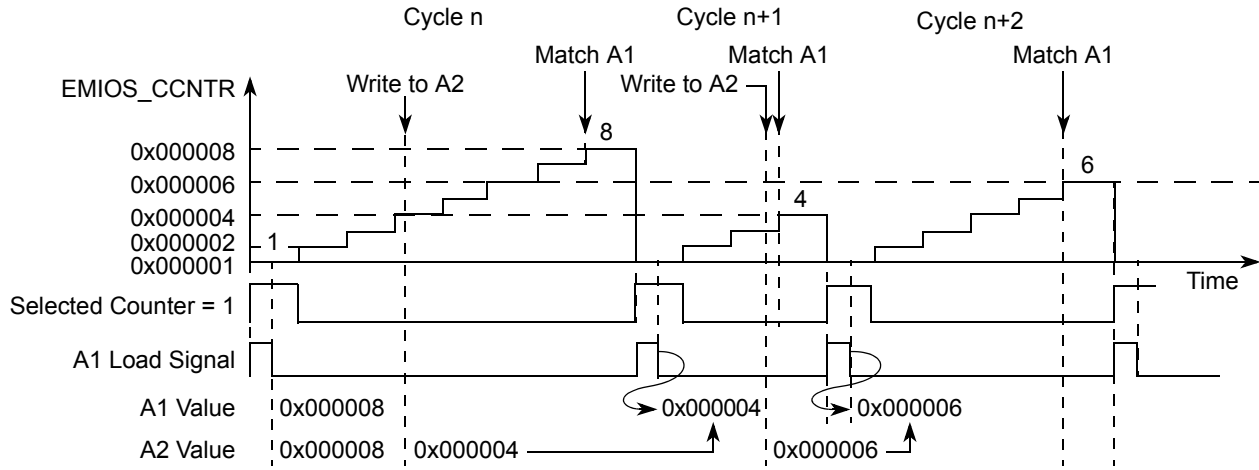
Figure 18-42 provides a more detailed illustration of the A1 update process in up counter mode. The A1 load signal is generated based on the detection of the internal counter reaching one, and has the duration of one system clock cycle. Note that during the load pulse A1 still holds its previous value. It is actually updated at the second system clock cycle.



Note: A2 value transferred to A1 according to OUn bit.

Figure 18-42. eMIOS MCB Mode Example — Up Operation A1 Register Update

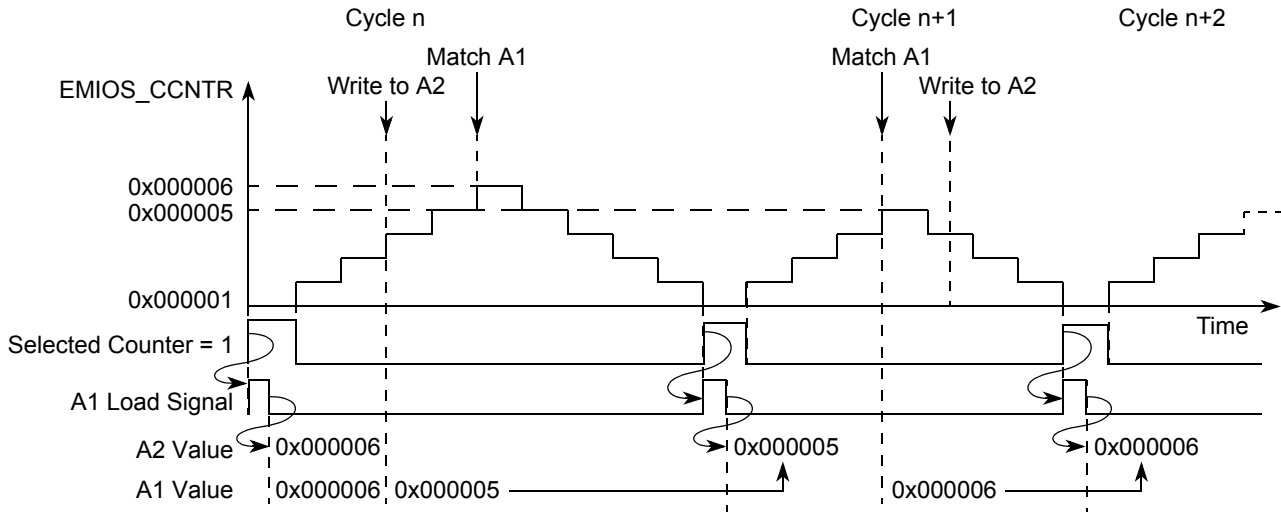Figure 18-43 illustrates the A1 register update process in up/down counter mode. Note that A2 can be written at any time within cycle (n) in order to be used in cycle ($n+1$). Thus A1 receives the new value at the next cycle boundary. The EMIOS_OUDR[n] bits can be used to disable the update of A1 register.



Note: A2 value transferred to A1 according to OUn bit (the transfer is triggered by the A1 load signal).

Figure 18-43. eMIOS MCB Mode Example — Up/Down Operation A1 Register Update

18.4.4.4.16 Output Pulse Width and Frequency Modulation, Buffered Mode (OPWFMB)

This mode generates waveforms with variable duty cycle and frequency. The internal channel counter is automatically selected as the time base, A1 sets the duty cycle and B1 determines the frequency. Both A1 and B1 are double buffered to allow smooth signal generation when changing the register values on the fly. 0% and 100% duty cycles are supported.

In order to provide smooth and consistent channel operation, this mode differs substantially from the OPWFM mode. The main differences are in how A1 and B1 are updated, the delay from the A1 match to the output flip-flop transition, and the range of the internal counter which ranges from 1 up to B1 value.

When a match on comparator A occurs, the output register is set to the value of EDPOL. When a match on comparator B occurs, the output register is set to the complement of EDPOL. A B1 match also causes the internal counter to transition to 1, thus re-starting the counter cycle.

Figure 18-44 shows an example of OPWFMB mode operation. Note that the output flip-flop transition occurs when the A1 or B1 match signal is negated, as detected by the negative edge of the A1 and B1 match signals. For example, if register A1 is set to 0x000004, the output flip-flop transitions 4 counter periods after the cycle starts, plus one system clock cycle. Note that in the example shown in Figure 18-44 the prescaler ratio is set to two (refer to Section 18.5.3, “Time Base Generation”).

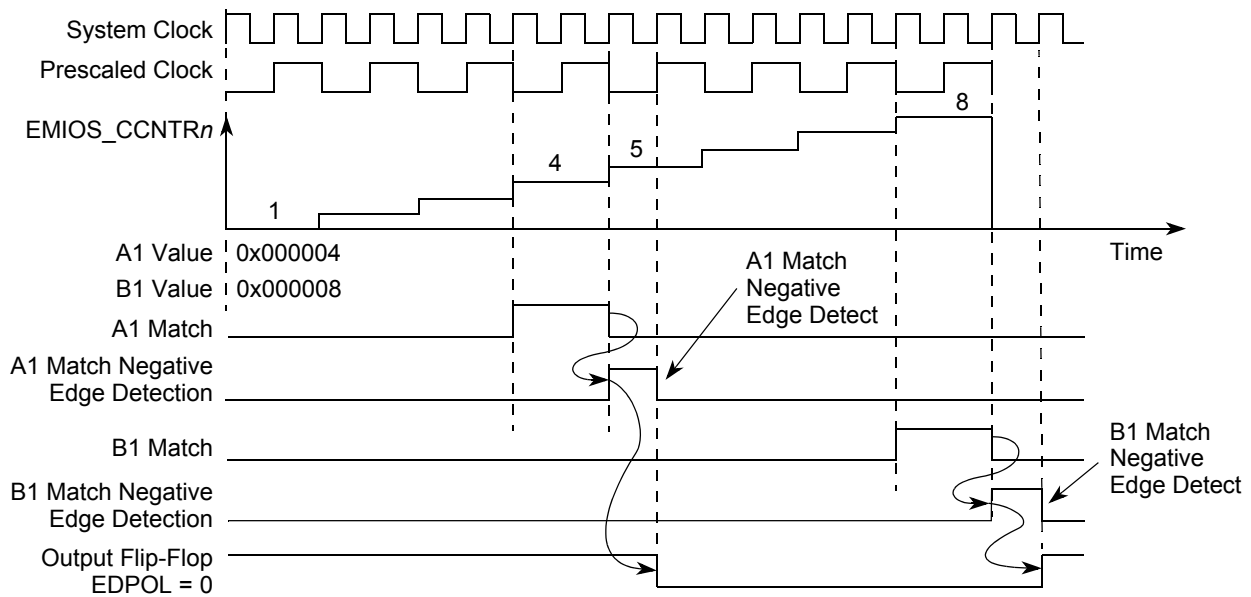


Figure 18-44. eMIOS OPWFMB Mode Example — A1/B1 Match to Output Register Delay

Figure 18-45 shows the generated output signal if A1 is 0. Since the counter does not reach zero in this mode, the channel internal logic infers a match as if A1 = 1, with the difference that in this case the positive edge of the match signal is used to trigger the output flip-flop transition instead of the positive edge that is used when A1 = 1. Note that the A1 positive edge match signal from cycle (n+1) occurs at the same time as the B1 match negative edge from cycle (n). This allows the use of the A1 match positive edge to mask the B1 match negative edge when they occur at the same time. The result is that no transition occurs on the output flip-flop, and a 0% duty cycle is generated.

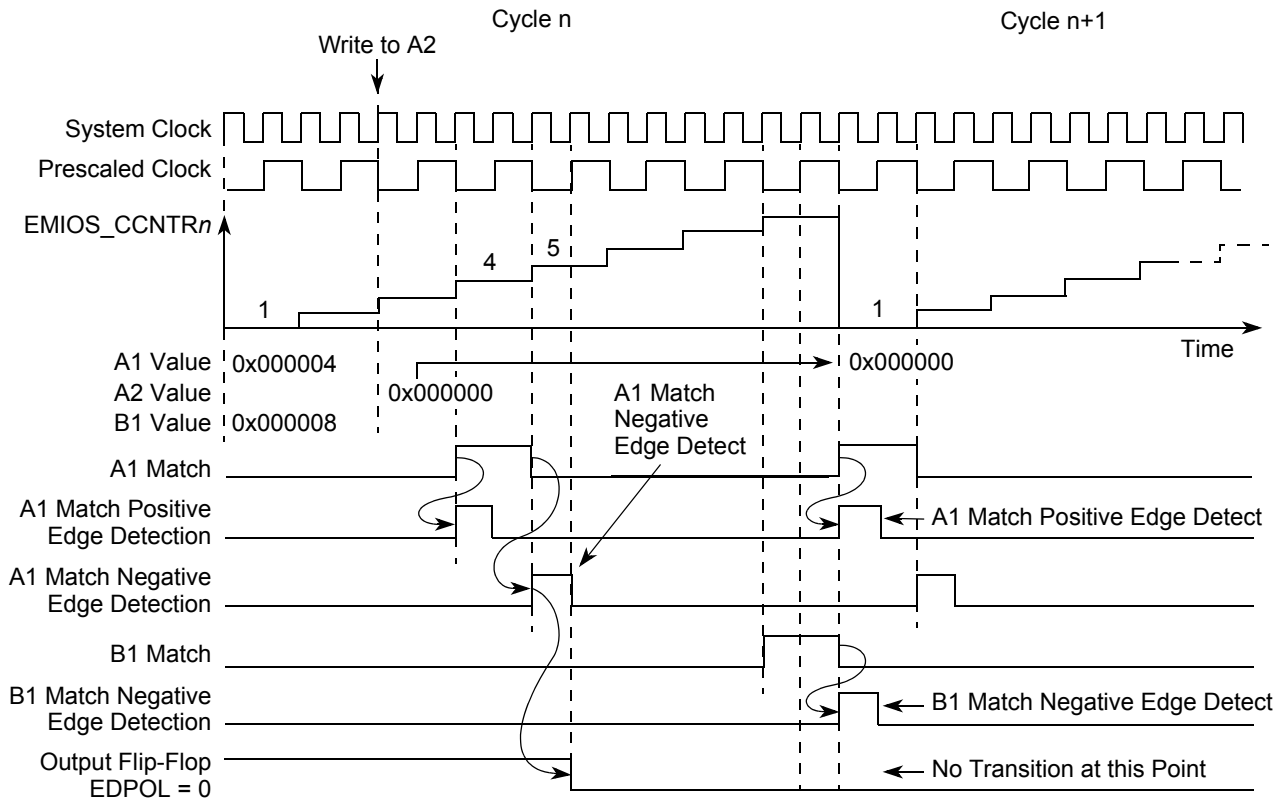


Figure 18-45. eMIOS OPWFMB Mode Example — A1 = 0 (0% Duty Cycle)

Figure 18-46 shows the timing for the A1 and B1 loading. A1 and B1 use the same signal to trigger a load, which is generated based on the selected counter reaching one. This event is defined as the cycle boundary. The load signal pulse has the duration of one system clock cycle and occurs at the first system clock period of every cycle of the counter. If A2 and B2 are written within cycle (n), their values are loaded into A1 and B1, respectively, at the first clock of cycle ($n+1$). The update disable bits, EMIOS_OUDR, can be used to control the update of these registers, thus allowing the delay of A1 and B1 update for synchronization purposes.

During the load pulse A1 still holds its old value, which is updated on the following system clock cycle. During the A1 load pulse, an internal by-pass allows the use of A2 instead of A1 for matches if A2 is either 0 or 1, thus allowing matches to be generated even when A1 is being loaded. This approach allows a uniform channel operation for any A2 value, including 1 and 0.

In Figure 18-46 it is assumed that the channel and global prescalers are set to one, meaning that the channel internal counter transition at every system clock cycle. FLAGS can be generated only on B1 matches when MODE[5] is cleared, or on both A1 and B1 matches when MODE[5] is set. Since B1 FLAG occurs at the cycle boundary, this flag can be used to indicate that A2 or B2 data written on cycle (n) were loaded to A1 or B1, respectively, thus generating matches in cycle ($n+1$).

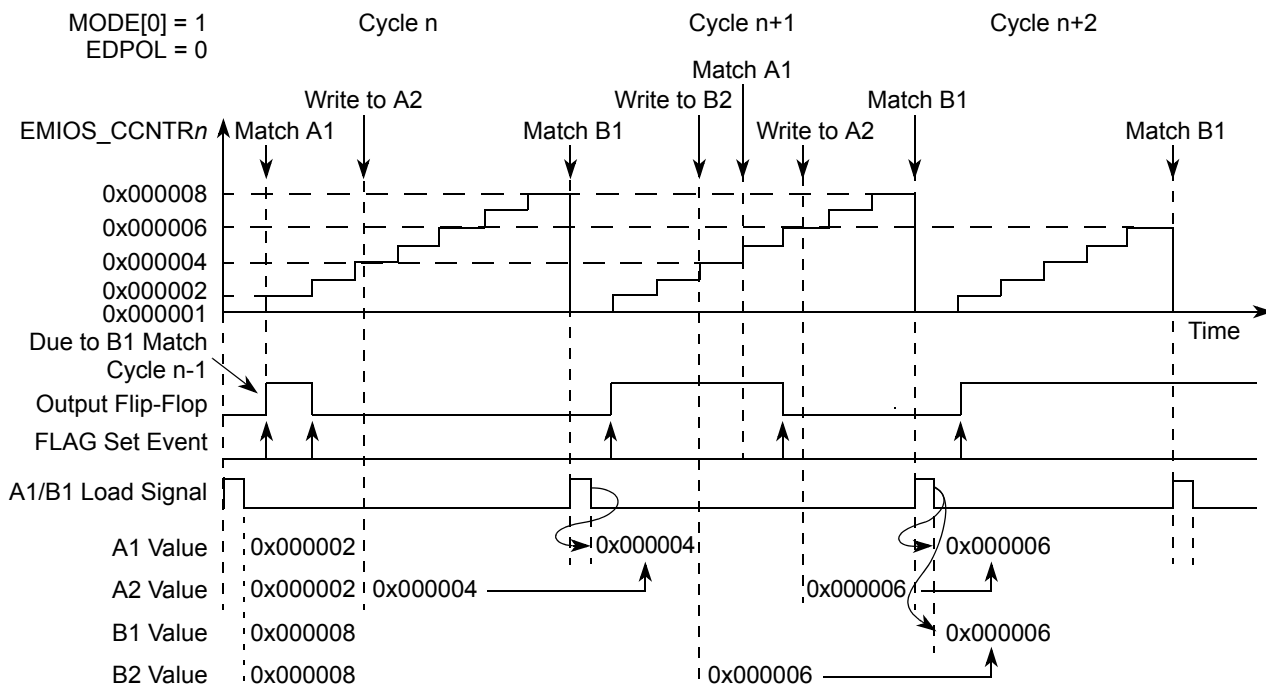


Figure 18-46. eMIOS OPWFMB Mode Example — A1/B1 Updates and Flags

Figure 18-47 shows the operation of the output disable feature in OPWFMB mode. Unlike OPWFM mode, the output disable forces the channel output flip-flop to the EDPOL bit value. This functionality targets applications that use active high signals and a high to low transition at A1 match. For such cases EDPOL should be 0.

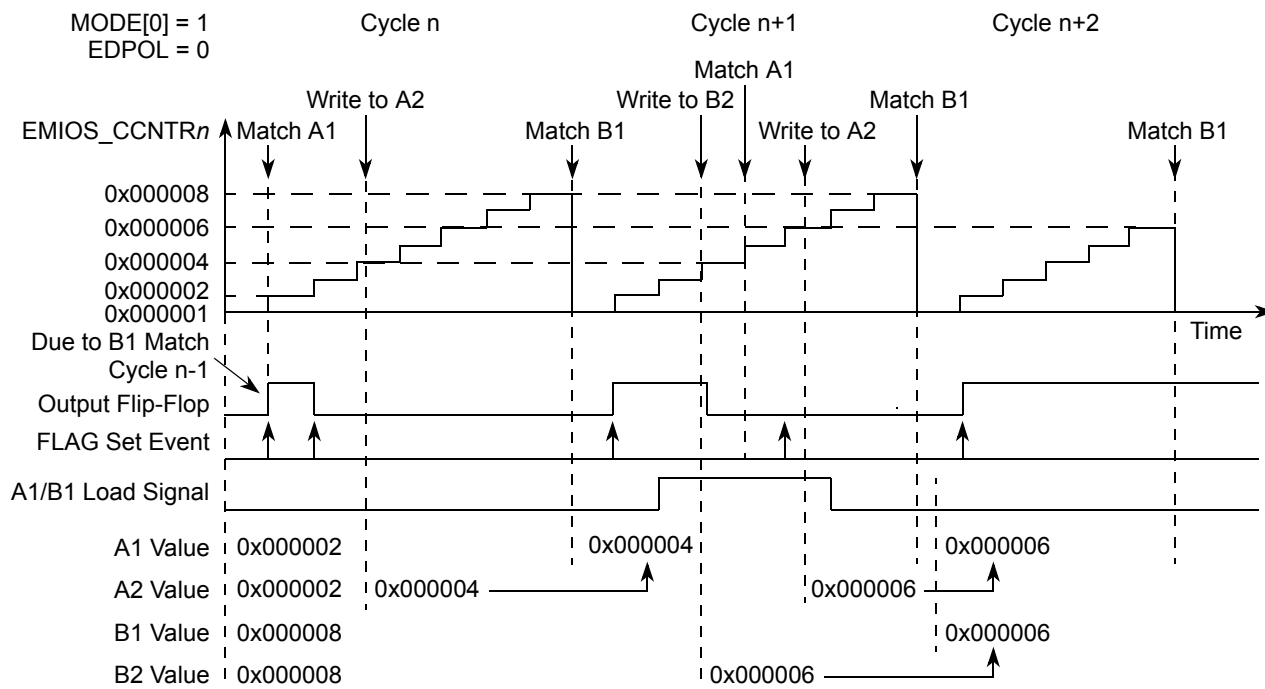


Figure 18-47. eMIOS OPWFMB Mode Example — Active Output Disable

Note that the output disable has a synchronous operation, meaning that the assertion of the output disable input signal causes the channel output flip-flop to transition to EDPOL at the next system clock cycle. If the output disable input is negated, the output flip-flop transitions at the following A1 or B1 match.

In Figure 18-47 it is assumed that the output disable input is enabled and selected for the channel (refer to Section 18.3.1.7, “eMIOS Channel Control Register (EMIOS_CCRn),” for a detailed description of the ODIS and ODISSL bits and selection of the output disable inputs).

The FORCMA and FORCMB bits allow the software to force the output flip-flop to the level corresponding to a match on comparators A or B respectively. Similar to a B1 match, FORCMB clears the internal counter. The FLAG bit is not set when the FORCMA or FORCMB bits are set.

Figure 18-48 illustrates the generation of 100% and 0% duty cycle signals. It is assumed that EDPOL = 0 and the prescaler ratio is 1. Initially A1 = 0x000008 and B1 = 0x000008. In this case, a B1 match has precedence over an A1 match, thus the output flip-flop is set to the complement of EDPOL. This cycle corresponds to a 100% duty cycle signal. The same output signal can be generated for any A1 value greater than or equal to B1.

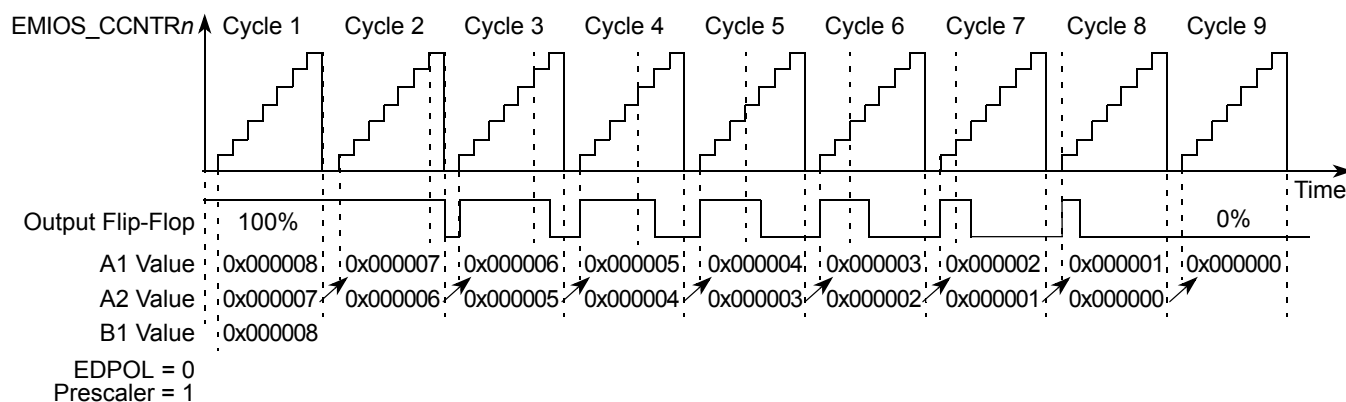


Figure 18-48. eMIOS OPWFMB Mode Example — 100% to 0% Duty Cycle

A 0% duty cycle signal is generated if $A1 = 0$ as shown in [Figure 18-48](#) cycle 9. In this case the $B1 = 0x000008$ match from cycle 8 occurs at the same time as the $A1 = 0x000000$ match from cycle 9. Refer to [Figure 18-45](#) for a description of A1 and B1 match generation for a case where A1 match has precedence over B1 match and the output signal transitions to EDPOL.

18.4.4.4.17 Center Aligned Output Pulse Width Modulation, Buffered Mode (OPWMCB)

This mode generates a center aligned PWM with dead time insertion on the leading or trailing edge. A1 and B1 registers are double buffered to allow smooth output signal generation when changing A2 or B2 values on the fly.

The selected counter bus for a channel configured to OPWMCB mode must be another channel running in MCB up/down counter mode (refer to [Section 18.4.4.4.15, “Modulus Counter, Buffered Mode \(MCB\)”](#)). Register A1 contains the ideal duty cycle for the PWM signal and is compared with the selected time base. Register B1 contains the dead time value and is compared against the internal counter. For a leading edge dead time insertion, the output PWM duty cycle is equal to the difference between register A1 and register B1, and for a trailing edge dead time insertion, the output PWM duty cycle is equal to the sum of register A1 and register B1. The MODE[6] bit selects between trailing and leading dead time insertion, respectively.

NOTE

It is recommended that the internal prescaler of the OPWMCB channel be set to the same value as the MCB channel prescaler, and the prescalers should also be synchronized. This allows the A1 and B1 registers to represent the same time scale for duty cycle and dead time insertion.

[Figure 18-49](#) illustrates loading of the A1 and B1 registers, which occurs when the selected counter bus reaches the value one. This counter value defines the cycle boundary. Values written to A2 or B2 within cycle (n) are loaded into A1 or B1 registers and are used to generate matches in cycle ($n+1$).

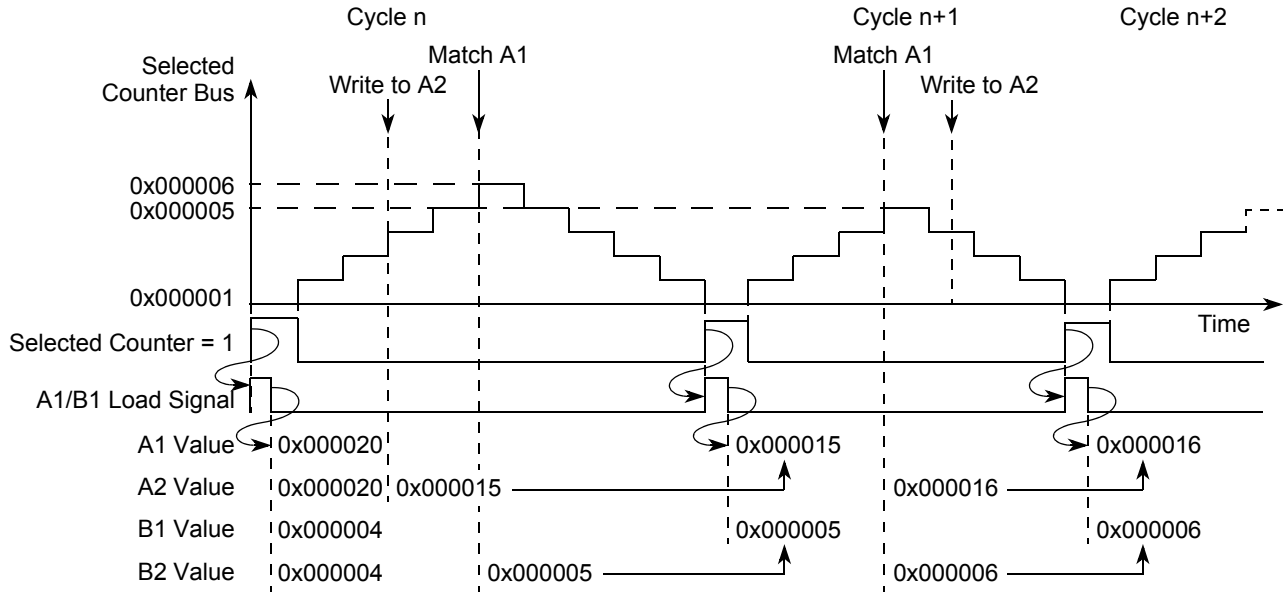


Figure 18-49. eMIOS OPWMCB Mode Example — A1/B1 Register Loading

The EMIOS_OUDR[n] bit can be used to disable the A1 and B1 updates, thus allowing the loading of these registers to be synchronized with the load of A1 or B1 registers in others channels. Note that by using the update disable bit, the A1 and B1 registers can be updated in the same counter cycle.

In this mode A1 matches set the internal counter to one. When operating with leading edge dead time insertion, the first A1 match resets the internal counter to 0x000001. When a match occurs between register B1 and the internal time base, the output flip-flop is set to the value of the EDPOL bit. In the following match between A1 and the selected time base, the output flip-flop is set to the complement of the EDPOL bit. This sequence repeats continuously. [Figure 18-50](#) shows two cycles of a center aligned PWM signal. Note that both A1 and B1 register values are changing within the same cycle, which allows the duty cycle and dead time values to be changed at simultaneously.

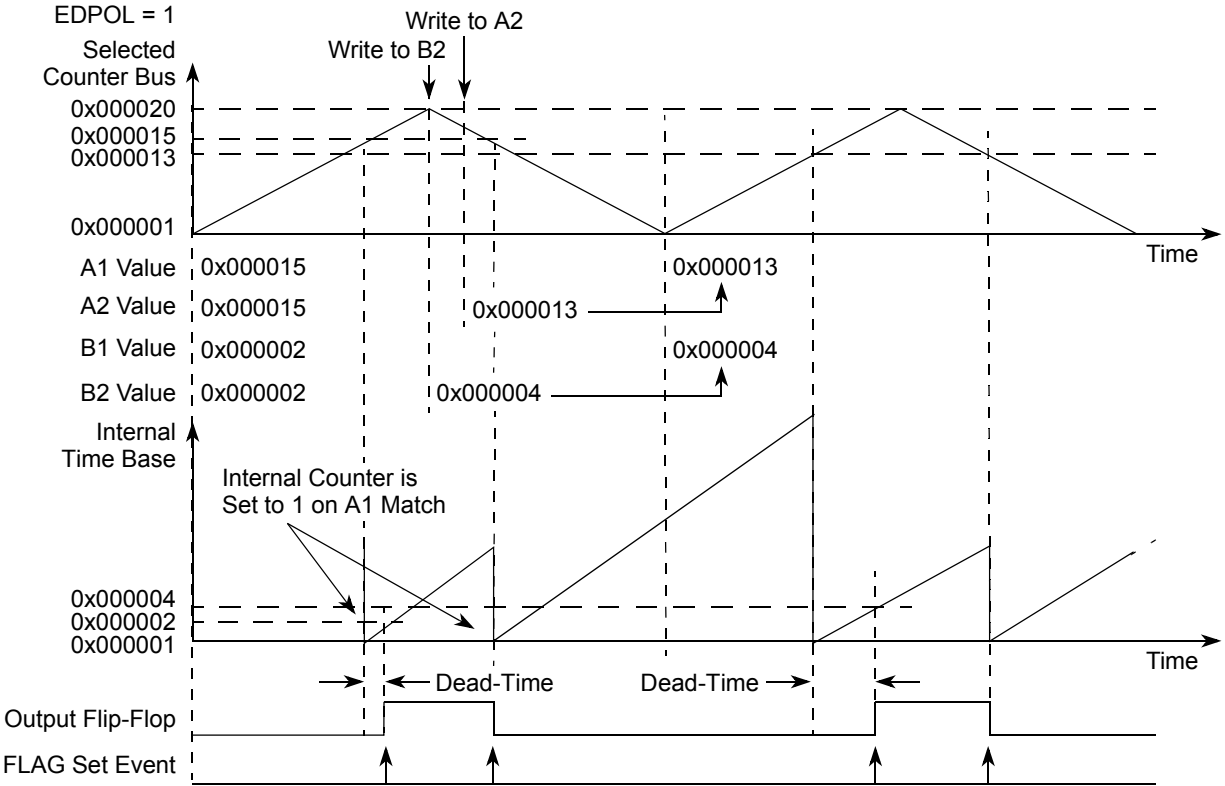


Figure 18-50. eMIOS PWMCB Mode Example — Lead Dead Time Insertion

As shown in [Figure 18-51](#), when operating with trailing edge dead time insertion the first match between A1 and the selected time base sets the output flip-flop to the value of the EDPOL bit and resets the internal counter to 0x000001. In the second match between register A1 and the selected time base, the internal counter is reset to 0x000001 and B1 matches are enabled. When the match between register B1 and the selected time base occurs the output flip-flop is set to the complement of the EDPOL bit. This sequence repeats continuously.

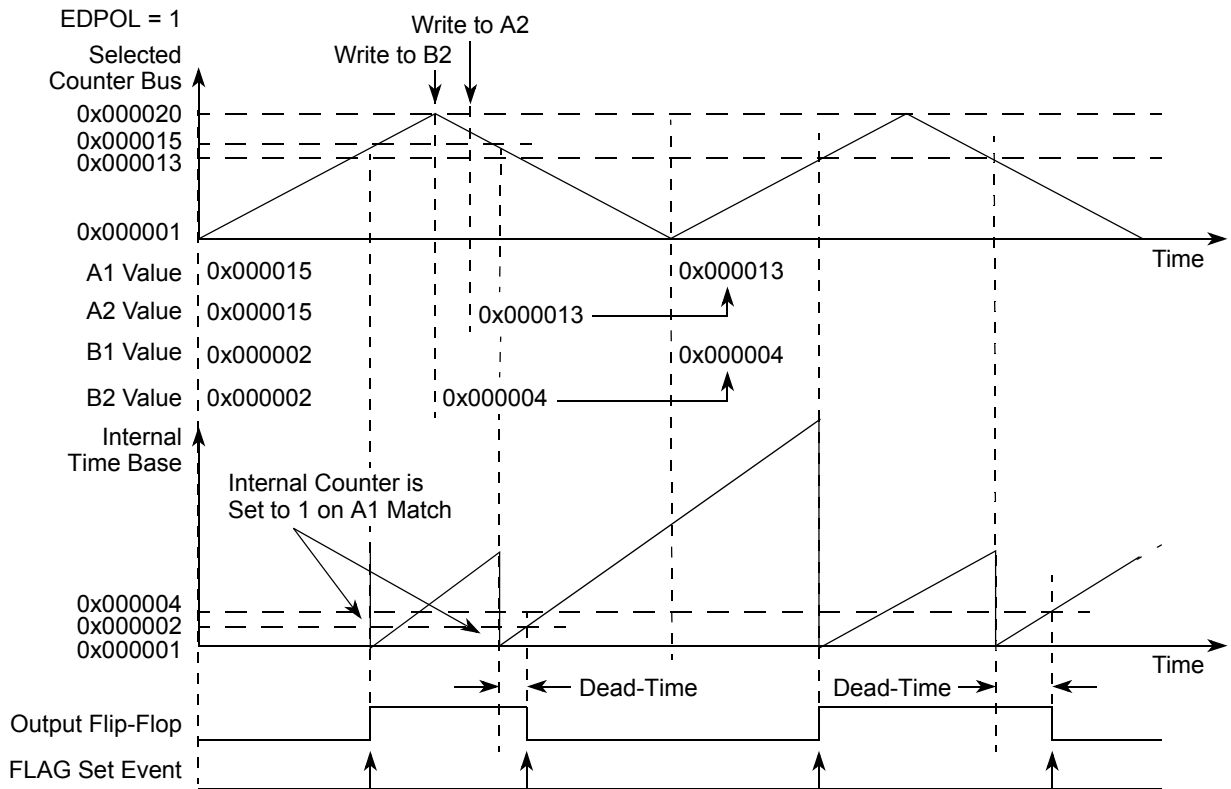


Figure 18-51. eMIOS PWMCB Mode Example — Trailing Dead Time Insertion

FLAG can be generated in the trailing edge of the output PWM signal when MODE[5] is cleared, or on both edges when MODE[5] is set. If subsequent matches occur on A and B, the PWM pulses continue to be generated, regardless of the state of the FLAG bit.

NOTE

In OPWMCB mode, FORCMA and FORCMB do not have the same behavior as a regular match. Instead they force the output flip-flop to a constant value which depends upon the selected dead time insertion mode, lead or trail and the value of the EDPOL bit.

FORCMA has different behaviors depending on the selected dead time insertion mode. In leading dead time insertion mode, writing one to FORCMA sets the output flip-flop to the compliment of EDPOL. In trailing dead time insertion mode, the output flip-flop is forced to the value of EDPOL.

If FORCMB is set, the output flip-flop value depends on the selected dead time insertion mode. In leading dead time insertion mode, FORCMB sets the output flip-flop to the value of EDPOL. In trailing dead time insertion mode, the output flip-flop is forced to the compliment of EDPOL.

NOTE

Setting the FORCMA bit does not reset the internal time base to 0x000001 as a regular A1 match does. FORCMA and FORCMB have the same behavior even in freeze or normal mode regarding the output flip-flop transition.

The FLAG bit is not set in the case of the FORCMA, FORCMB or both bits being set at the same time.

When FORCMA and FORCMB are both set, the output flip-flop is set to the compliment of the EDPOL bit. This is equivalent to FORCMA having precedence over FORCMB when lead dead time insertion is selected and FORCMB having precedence over FORCMA when trailing dead time insertion is selected.

Duty cycles from 0% to 100% can be generated by setting appropriate A1 and B1 values relative to the period of the external time base. Setting $A1 = 1$ or $A1 = 0$ generates a 100% duty cycle waveform. If $A1 > \text{period} \div 2$, where period refers to the selected counter bus period, then a 0% duty cycle is produced. Assuming EDPOL is one and OPWMCB mode with trailing dead time insertion mode is selected, 100% duty cycle signals can be generated if B1 occurs at or after the cycle boundary (external counter = 1).

NOTE

A special case occurs when A1 is set to the external counter bus period $\div 2$, which is the maximum value of the external counter. In this case the output flip-flop is constantly set to the EDPOL bit value.

Internal channel logic prevents matches from one cycle to propagate to the next cycle. In trailing dead time insertion mode, a B1 match from cycle (n) could eventually cross the cycle boundary and occur in cycle ($n+1$). In this case the B1 match is masked out and does not cause the output flip-flop to transition. Therefore matches in cycle ($n+1$) are not affected by the late B1 matches from cycle (n).

Figure 18-52 shows a 100% duty cycle output signal generated by setting $A1 = 4$ and $B1 = 3$. In this case the trailing edge is positioned at the boundary of cycle ($n+1$), which is actually considered to belong to cycle ($n+2$) and therefore does not cause the output flip-flop to transition.

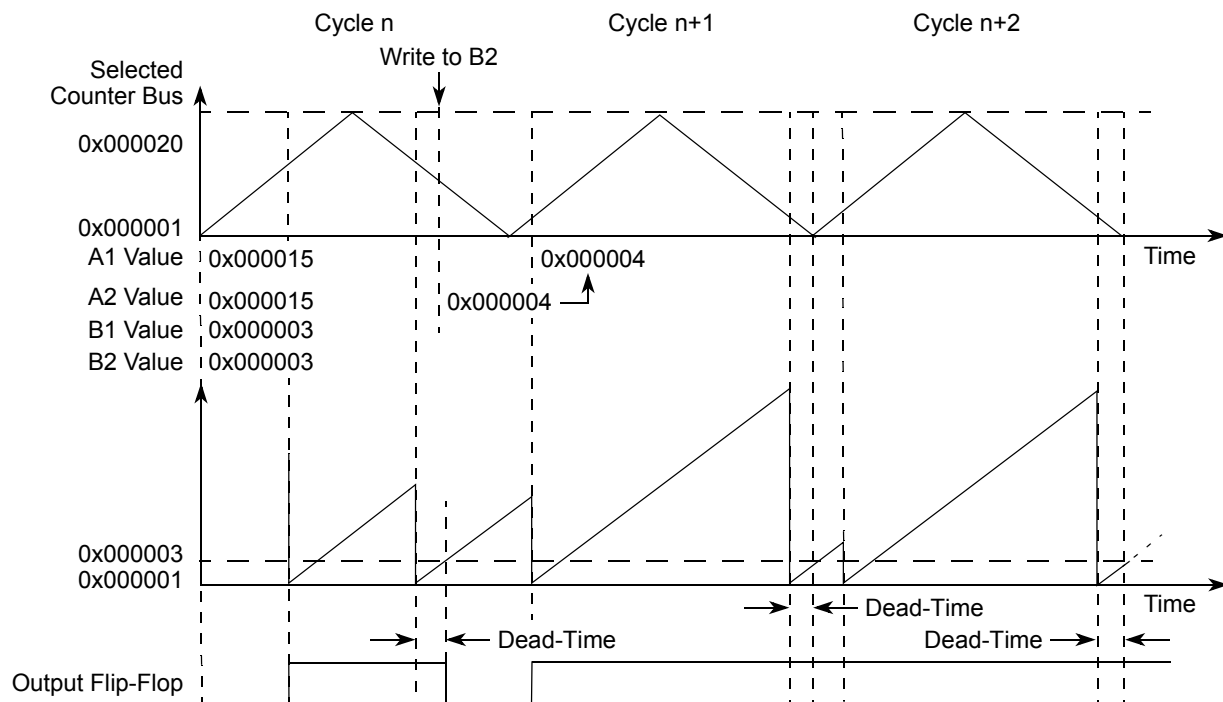


Figure 18-52. eMIOS PWMCB Mode Example — 100% Duty Cycle ($A1 = 4$, $B1 = 3$)

The output disable input, if enabled, causes the output flip-flop to transition to the compliment of EDPOL. This allows to the channel output flip-flop to be forced to a safety state. The internal channel matches continue to occur in this case, thus generating flags. When the output disable is negated, the channel output flip-flop is again controlled by A1 and B1 matches. This process is synchronous, meaning that the output channel pin transitions only occur on system clock edges.

It is important to note that, like in OPWMB and OPWFMB modes, the match signal used to set or clear the channel output flip-flop is generated on the negation of the channel comparator output signal which compares the selected time base with A1 or B1. Refer to [Figure 18-44](#), which illustrates the delay from matches to output flip-flop transition in OPWFMB mode.

18.4.4.4.18 Output Pulse Width Modulation, Buffered Mode (OPWMB)

OPWMB mode is used to generate pulses with programmable leading and trailing edge placement. An external counter is selected from one of the counter buses. The A1 register value defines the first edge and B1 defines the second edge. The output signal polarity is defined by the EDPOL bit. If EDPOL is zero, a negative edge occurs when A1 matches the selected counter bus and a positive edge occurs when B1 matches the selected counter bus.

The A1 and B1 registers are double buffered and updated from A2 and B2, respectively, at the cycle boundary. The load operation is similar to the OPWFMB mode. Refer to [Figure 18-46](#) for more information on A1 and B1 register updates.

Flags are generated at B1 matches when MODE[5] is cleared, or on both A1 and B1 matches when MODE[5] is set. If subsequent matches occur on comparators A and B, the PWM pulses continue to be generated regardless of the state of the FLAG bit.

The FORCMA and FORCMB bits allow software to force the output flip-flop to the level corresponding to a match on A1 or B1 respectively. FLAG is not set by the FORCMA and FORCMB operations.

The following rules apply to the OPWMB mode:

- B1 matches have precedence over A1 matches if they occur at the same time within the same counter cycle.
- A1 = 0 match from cycle (n) has precedence over a B1 match from cycle ($n-1$).
- A1 matches are masked if they occur after a B1 match within the same cycle.
- Values written to A2 or B2 on cycle (n) are loaded to A1 or B1 at the following cycle boundary (assuming EMIOS_OUDR[n] is not asserted). Thus the new values will be used for A1 and B1 matches in cycle ($n+1$).

[Figure 18-53](#) illustrates operation in OPWMB mode with A1/B1 matches and the transition of the channel output flip-flop. In this example EDPOL is zero.

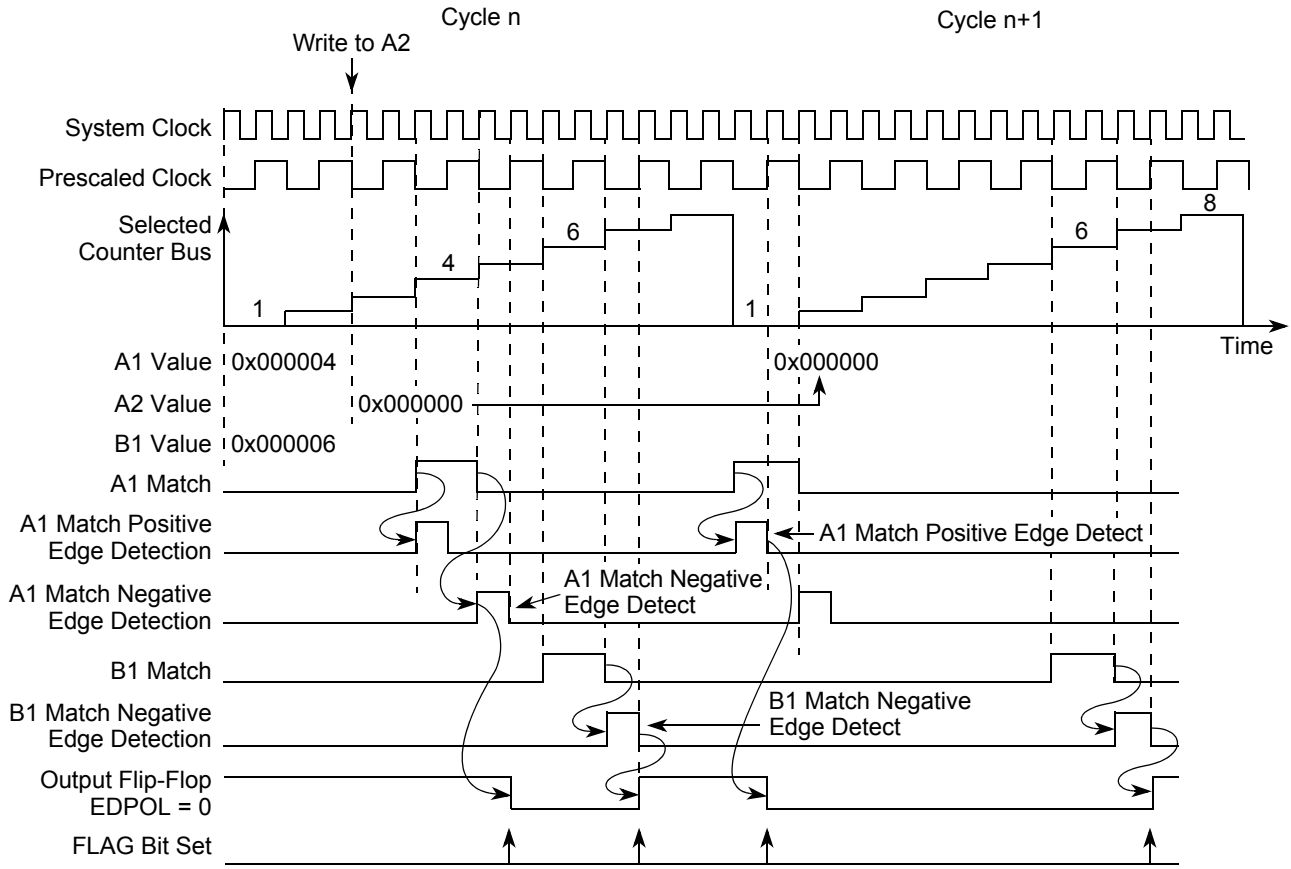


Figure 18-53. eMIOS OPWMB Mode Example — Matches and Flags

Note that the output flip-flop transitions are based on the negative edges of the A1 and B1 match signals. [Figure 18-53](#) shows the value of A1 being set to zero in cycle (n+1). In this case the match positive edge is used instead of the negative edge to transition the output flip-flop.

[Figure 18-54](#) illustrates the channel operation for 0% duty cycle. Note that the A1 match signal positive edge occurs at the same time as the B1 = 8 signal negative edge. In this case the A1 match has precedence over the B1 match, causing the output flip-flop to remain at the EDPOL value, thus generating a 0% duty cycle.

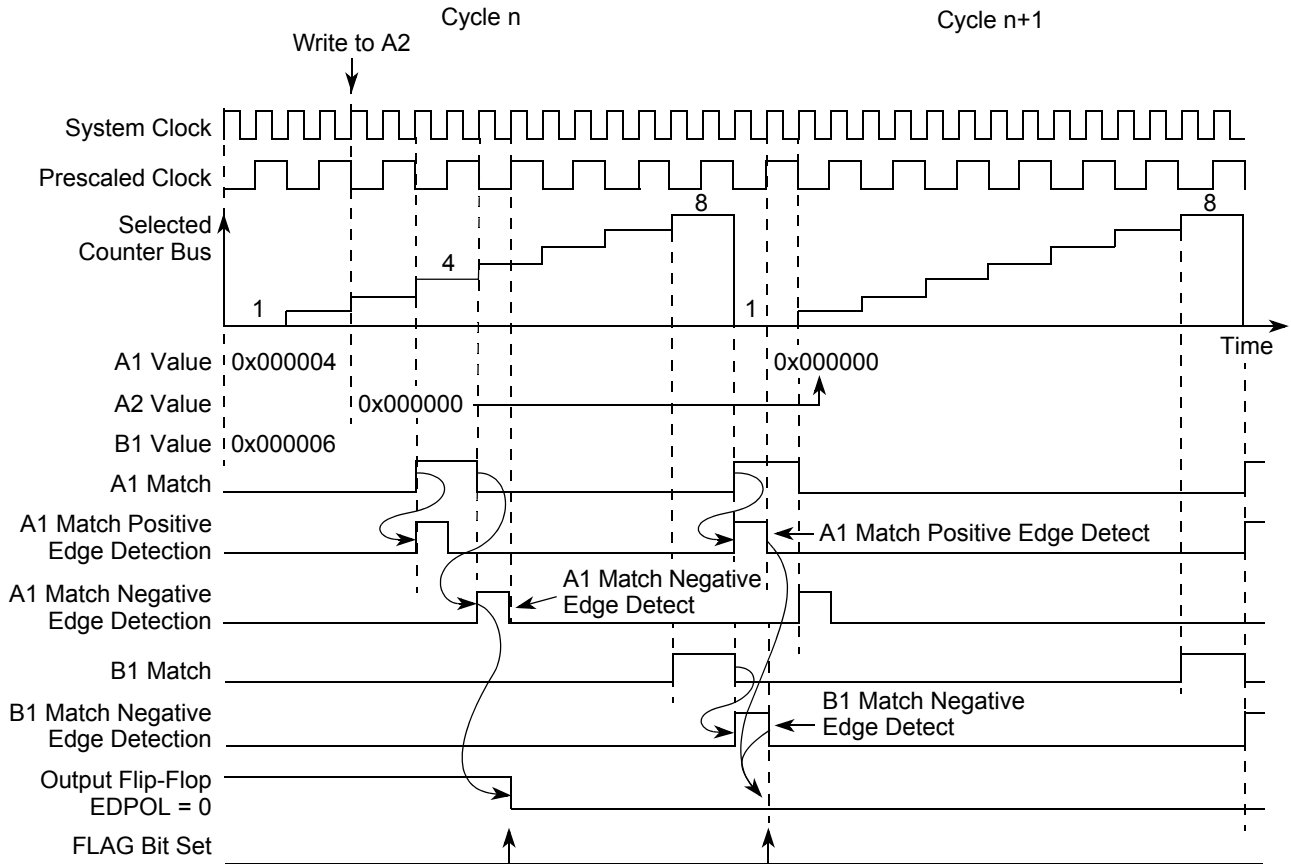


Figure 18-54. eMIOS OPWMB Mode Example — 0% Duty Cycle

Figure 18-55 shows the operation of the OPWMB mode with the output disable signal asserted. The output disable forces a transition in the output flip-flop to the EDPOL bit value. After the output disable is negated, the output flip-flop is allowed to transition at the next A1 or B1 match. The output disable does not modify the flag bit behavior. Note that there is one system clock delay between the assertion of the output disable signal and the transition of the output flip-flop.

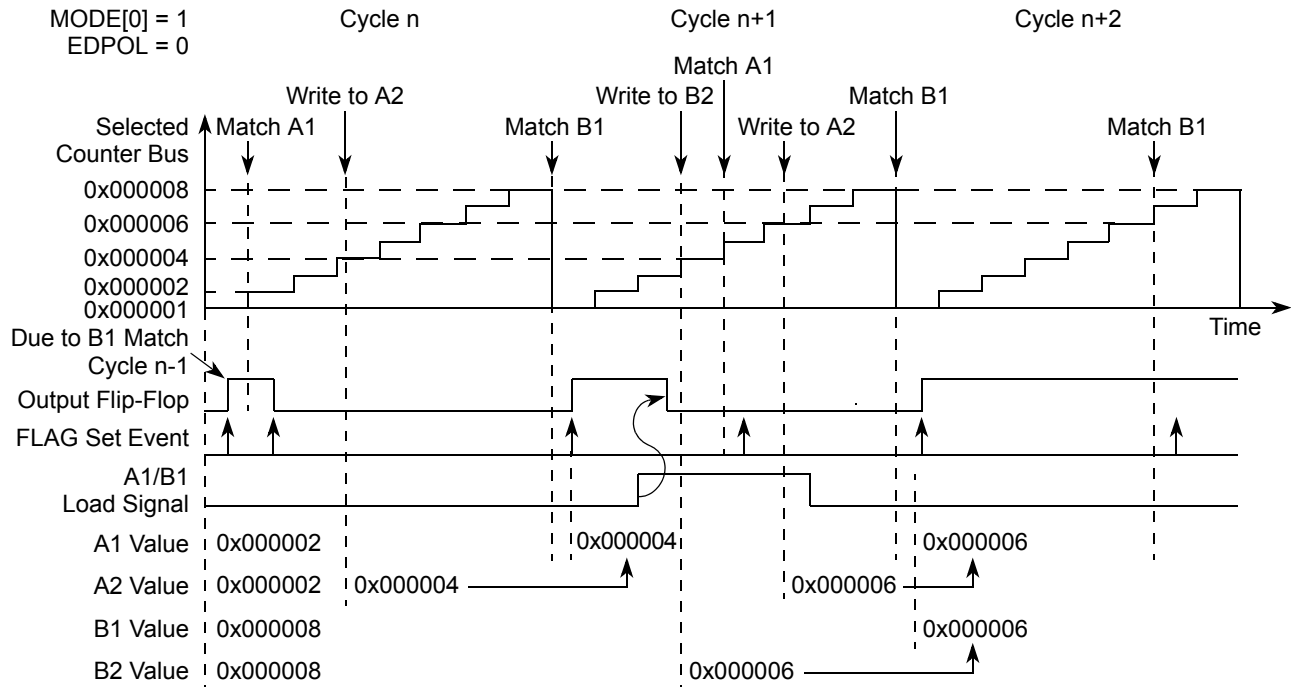


Figure 18-55. eMIOS OPWMB Mode Example — Active Output Disable

Figure 18-56 shows a waveform changing from 100% to 0% duty cycle. In this case EDPOL is zero and B1 is set to the same value as the period of the selected external time base.

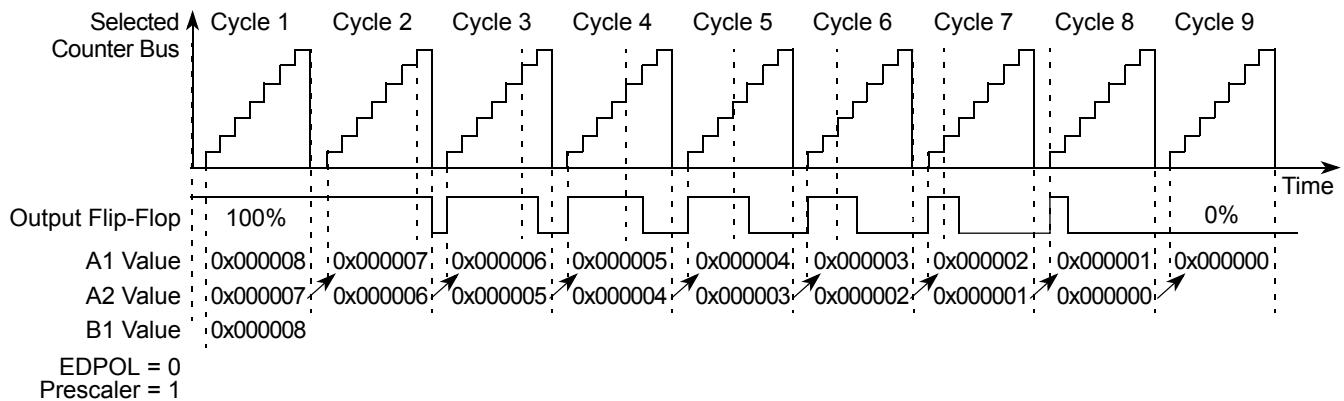


Figure 18-56. eMIOS OPWMB Mode Example — 100% to 0% Duty Cycle

In Figure 18-56 if B1 is set to a value lower than 0x000008 it is not possible to achieve 0% duty cycle by only changing A1 register value. Since B1 matches have precedence over A1 matches, the output flip-flop transitions to the compliment of EDPOL at B1 matches. In this example, if B1 = 0x000009, a B1 match does not occur, and thus a 0% duty cycle signal is generated.

18.5 Initialization / Application Information

Upon reset all of the unified channels of the eMIOS default to general purpose inputs (GPIO input mode).

18.5.1 Considerations on Changing a UC Mode

Before changing an operating mode, the UC must be programmed to GPIO mode, and `EMIOS_CADRn` and `EMIOS_CBDRn` must be updated with the correct values for the next operating mode. Then the `EMIOS_CCRn` can be written with the new operating mode. If a UC is changed from one mode to another without performing this procedure, the first operating cycle of the selected time base is unpredictable.

NOTE

When interrupts are enabled and an interrupt is generated, the FLAG bits should be cleared before exiting the interrupt service routine.

18.5.2 Generating Correlated Output Signals

Correlated output signals can be generated by all output operating modes. Bits `ODISn` can be used to control the update of these output signals.

In order to guarantee that the internal counters of correlated channels are incremented in the same clock cycle, the internal prescalers must be set up before enabling the global prescaler. If the internal prescalers are set after enabling the global prescaler, the internal counters may increment in the same ratio, but at a different clock cycle.

It is recommended to drive output disable input signals with the `EMIOS_Flag_Out` signals of some UCs running in SAIC mode. When an output disable condition occurs, the software interrupt routine must service the output channels before servicing the channels running SAIC. This procedure avoid glitches in the output pins.

18.5.3 Time Base Generation

For all channel operation modes that generate a time base (MC, OPWFM, OPWM, MCB, OPWFMB and OPWMB), the internal counter rate can be modified by configuring the clock prescaler ratio. The clock prescaler can use several ratios calculated as:

$$\text{Ratio} = (\text{GPRES} + 1) \times (\text{UCPRE} + 1)$$

The prescaled clocks in [Figure 18-58](#), [Figure 18-59](#), and [Table 18-57](#) illustrate this ratio. For example, if the ratio is 1, the prescaled clock is high and continuously enables the internal counter (`EMIOS_CCNTn`) ([Figure 18-58](#)); if the ratio is 3, then it pulses every 3 clock cycles ([Figure 18-59](#)) and the internal counter increments every 3 clock cycles; if the ratio is 9, it pulses every 9 clock cycles, etc. This high pulse enables the `EMIOS_CCNTn` to increment as long as no other conditions disable this counter. The match signal is generated by pulsing every time the internal counter matches the programmed match value. Note that for the same programmed match value, the period is shorter when using a prescaler ratio greater than one.



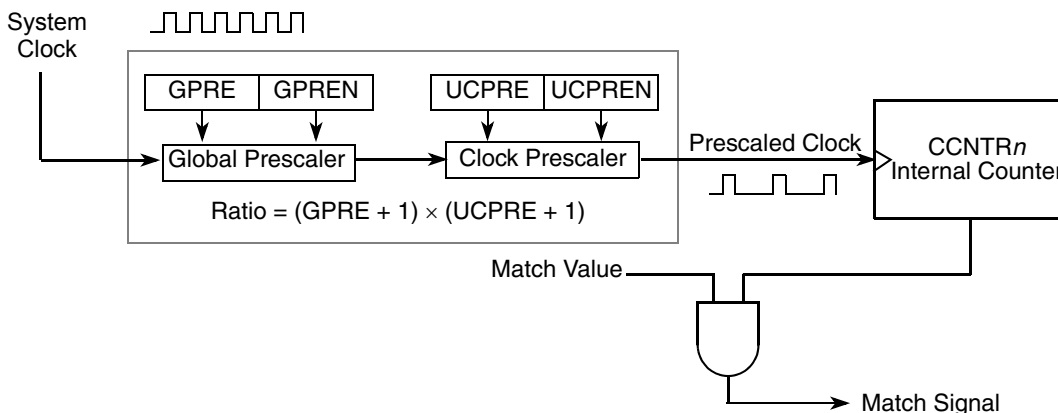


Figure 18-57. eMIOS Time Base Generation Block Diagram

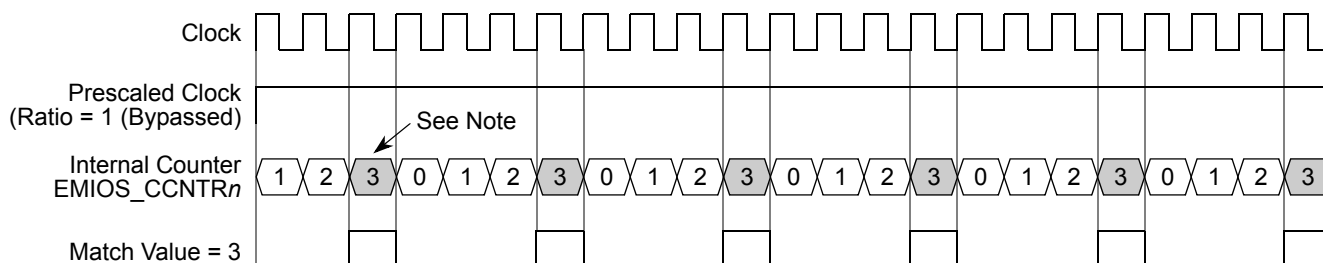

Note: The period of the time base includes the match value. When a match occurs, the first clock cycle is used to clear the internal counter, starting another period.

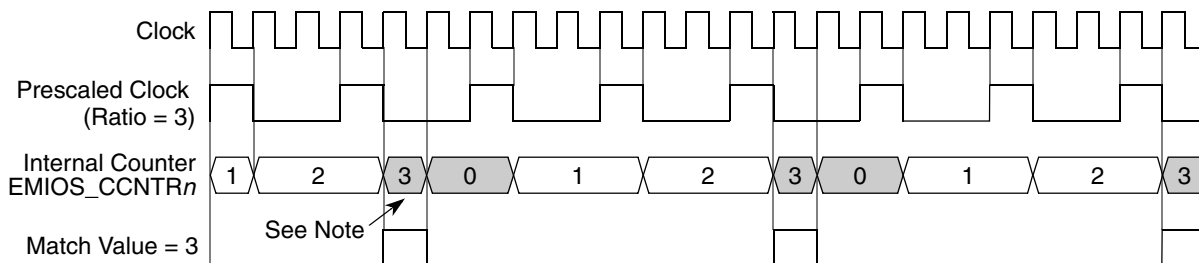Figure 18-58. eMIOS Time Base Example — Fastest Prescaler Ratio



NOTE: The period of the time base does not include the match value. When a match occurs, the first clock cycle is used to clear the internal counter, starting another period

Figure 18-59. eMIOS Time Base Example — Prescale Ratio = 3, Match Value = 3

18.6 Document Revision History

Table 18-15. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release



Chapter 19

Enhanced Time Processing Unit (eTPU)

19.1 Introduction

The enhanced time processing unit (eTPU) is a new timing unit featured on the device microcontroller that operates in parallel with the device core (CPU). The eTPU does the following:

- Executes programs independently from the host core
- Detects and precisely records timing of input events
- Generates complex output waveforms
- Is controlled by the core without a requirement for real-time host processing

The host core setup and service times for each input and output event are greatly minimized. The device contains one eTPU.

The eTPU improves the performance of the device by providing high resolution timing:

- eTPU dedicated channels that include two match and two capture registers, as opposed to the previous generation TPUs which only had one of each register
- eTPU engines that are optimized with specific instructions to service channel hardware
- The fast instruction execution rate of the eTPU engine that reduces service time

Because responding to hardware service requests is primarily done by the eTPU engine, the host is free to handle higher level operations.

19.1.1 The Device eTPU Implementation

For more detailed information regarding the eTPU module and compiler, refer to the *Enhanced Time Processing (eTPU) Reference Manual*. The device contains a specific implementation of the eTPU's full functionality. This chapter will focus only on an eTPU overview and those details that are different than the full instantiation of the module. These differences include the following:

- 2.5 Kbytes of shared data memory (SDM). This memory is alternately referred to as eTPU shared parameter (data) RAM (SPRAM).
- 12 Kbytes of shared code memory (SCM).
- For the device, only one eTPU engine: eTPU A
- The eTPU debug interface is built into the device's debug module. Refer to Section 10.2.1 of the eTPU reference manual for details on eTPU debug.
- Data transfer requests are implemented as a single DMA request to the device's DMA controller. All 32 channels' data transfer request signals are logically OR'd to produce the single DMA request.

- I/O channel pairs may be shared on a common pin. The output buffer enable (OBE) is not used in the device. The outputs are enabled in the SIU; refer to [Chapter 6, “System Integration Unit \(SIU\).”](#)

Because of the above differences between the device’s implementation of the eTPU and the full eTPU, full register bit descriptions are included within this chapter as well as in the *Enhanced Time Processing (eTPU) Reference Manual*.

19.1.2 Block Diagram

Figure 19-1 shows a top-level eTPU block diagram. It displays the MPC5566’s dual eTPU engine configuration. The MPC5565 and MPC5567 have one eTPU engine.

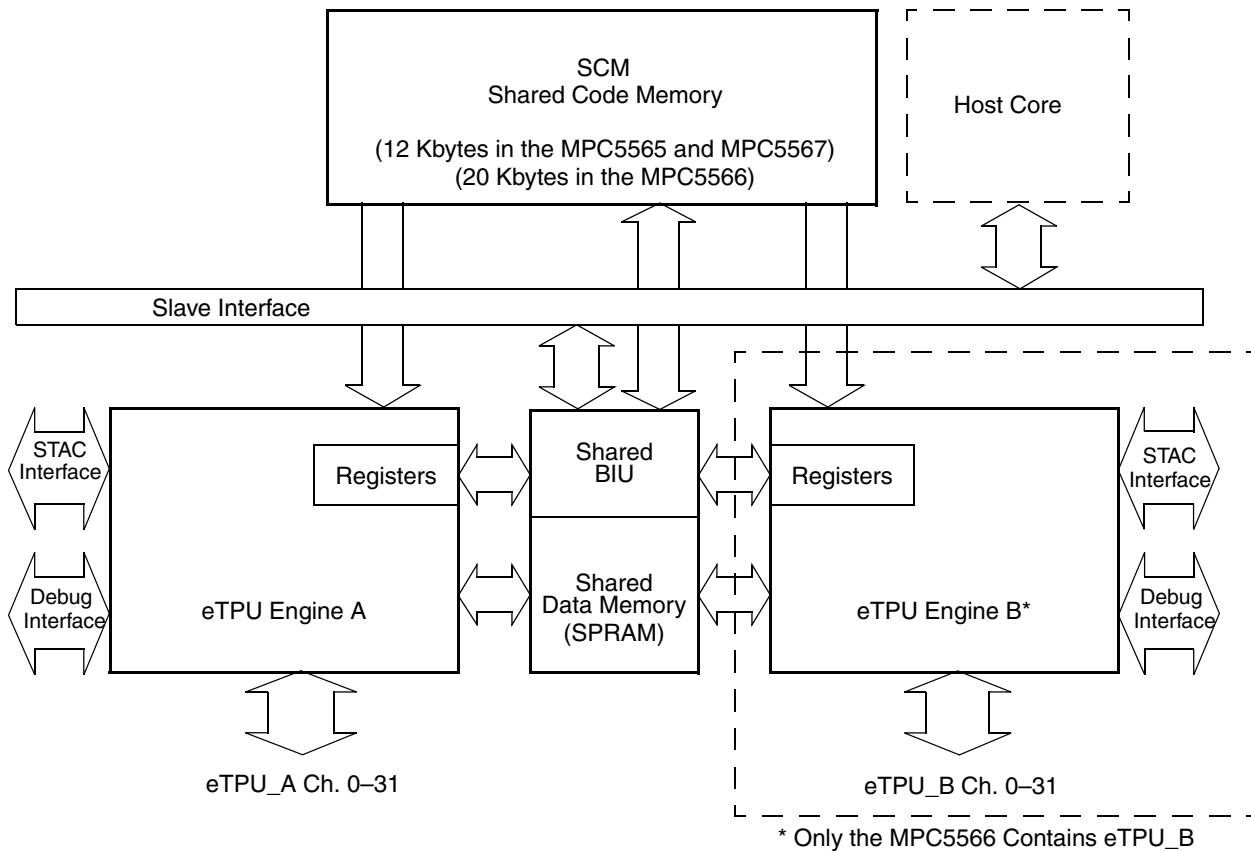


Figure 19-1. eTPU Block Diagram

Figure 19-2 shows the block diagram for the eTPU engine.

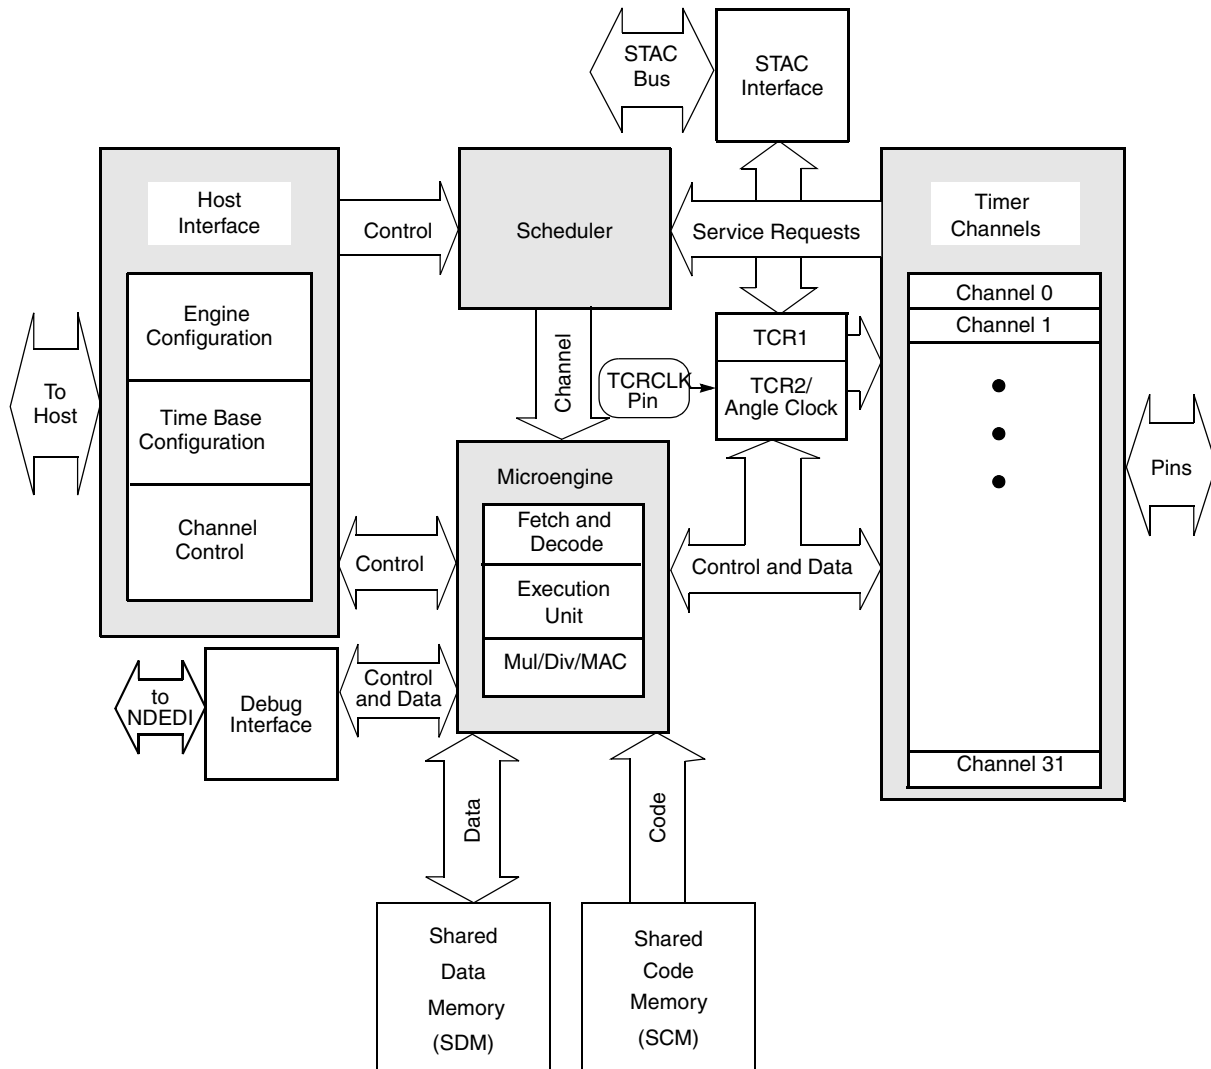


Figure 19-2. eTPU Engine Block Diagram

19.1.3 eTPU Operation Overview

The eTPU is a real-time microprocessed subsystem. Therefore it runs microengine code from instruction memory (SCM) to handle specific events and accesses data memory (SDM) for parameters, work data, and application state information. Events may originate from I/O channels (due to pin transitions and/or time base matches), device core requests, or inter-channel requests. Events that call for local eTPU processing activate the microengine by issuing a service request. The service request microcode may send an interrupt to the device core, but the core cannot be directly interrupted by I/O channel events.

Each channel is associated with a function that defines its behavior. A function is a software entity consisting of a set of microengine routines, called threads, that respond to eTPU service requests. Function routines, which reside in the SCM, are also responsible for channel configuration. A function may be

assigned to several channels, but a channel can only be associated with one function at a given moment. The eTPU has the capability to change the function assigned to a channel if reconfigured by the device core. The association between functions and channels is defined by the device core.

The eTPU hardware supplies resource sharing features that support concurrency:

- A hardware scheduler dispatches the service request microengine routines based on a set of priorities defined by the device's core. Each channel has its own unique priority assignment that primarily depends on CPU assignment. The channel's number is an inherent property also used to determine priority.
- A service request routine cannot be interrupted by another service request until it ends, that is, until an end instruction is executed. This sequence of uninterrupted instruction execution is called a thread. A thread may be interrupted only by resetting the entire eTPU module.
- Channel-specific contexts (registers and flags) are automatically switched between the end of a thread and the beginning of the next one.
- SDM arbitration, a dual-parameter coherency controller, and semaphores can be used to ensure coherent access to eTPU data shared by both eTPU engines and the device core.

19.1.3.1 eTPU Engine

The eTPU engine processes input pin transitions and generates output pin waveforms. These events are triggered by eTPU timers (time bases) that are driven by a system clock to give absolute time control or by an asynchronous counter such as an angle clock that may be tracking the angle of a rotating shaft.

The eTPU engine consists of the following blocks: 32 independent timer channels, a task scheduler, a host interface, and a microprocessor (hereinafter called a microengine) that has dedicated hardware for input signal processing and output signal generation over the 32 I/O channels. Each channel can also choose between two 24-bit counter registers for a time base.

The microengines fetch microinstructions from shared code memory (SCM). eTPU application parameters and global and local variables, referred to as work data, are held in 32-bit shared data memory (SDM), which is also used for passing information between the device's core and microengine. The bus interface unit (BIU) allows the device's core to access eTPU registers, SDM, and SCM.

19.1.3.1.1 Time Bases

The eTPU engine has two 24-bit count registers TCR1 and TCR2 that provide reference time bases for all match and input capture events. Prescalers for both time bases are controlled by the device core through bit fields in the eTPU engine configuration registers.

The values for each of TCR1 and TCR2 counter registers can be independently derived from the system clock or from an external input via the TCRCLK pin. In addition, the TCR2 time base can be derived from special angle-clock hardware that enables implementing angle-based functions. This feature is added to support advanced angle-based engine control applications.

The TCRs may also drive or be driven by an eMIOS time base through the shared time and counter (STAC) bus, or they may be written by eTPU function software.

19.1.3.1.2 eTPU Timer Channels

The eTPU engine has 32 identical, independent channels. Each channel corresponds to an input/output signal pair. Every channel has access to two 24-bit counter registers, TCR1 and TCR2.

Each channel consists of event logic which supports a total of four events, two capture and two match events. The event logic contains two 24-bit capture registers and two 24-bit match registers. The match registers are compared to a selected TCR by greater-than-or-equal-to and equal-only comparators. The match and compare register pairs enable many combinations of single and double-action functions.

The channel configuration can be changed by the microengine. Each channel can perform double capture, double match or a variety of other capture-match combinations. Service requests may be generated on one or both of the match events and/or on one of the capture events.

Digital filters that have different filtering modes are provided for the input signals.

Every channel can use any time base or angle counter for either match or capture operation. For example, a match on TCR1 can capture the value of TCR2. The channels can request service from the microengine due to recognized pin transitions (input events) or time base matches.

Every eTPU channel may be configured with the following combinations:

- Single input capture, no match (TPU3 functionality)
- Single input capture with single match time-out (TPU3 functionality)
- Single input capture with double match time-out with several double match submodes
- Double input capture with single or double match time-out with several double match submodes
- Single output match (TPU3 functionality)
- Double output match with several double match submodes
- Input-dependent output generation

The double match functionality has various combinations for generation of service request and determining pin actions.

19.1.3.1.3 Host Interface

The engine's host interface allows the device core to control the operation of the eTPU. In order for the eTPU to start operation, the device core must initialize the eTPU by writing to the appropriate host interface registers to assign a function and priority to each channel. In addition, the device core writes to the host service request and channel configuration registers to further define operation for each initialized channel.

NOTE

The host transfers the code image for the eTPU microcode to the SCM, then the host enables eTPU access to the SCM (which also disables host access).

19.1.3.1.4 Shared Data Memory (SDM)

The SDM works as data RAM that can be accessed by the device core and up to two eTPU engines. This memory is used for either:

Enhanced Time Processing Unit (eTPU)

- Information transfer between the device core and the eTPU
- Data storage for the eTPU microcode program
- Communication between the two eTPU engines

The SDM width is 32 bits, and is accessible by the host in any of the three formats: byte, 16-bit, or 32-bit. The eTPU can access the SDM's full 32 bits, lower 24 bits or upper byte (8-bit).

The host can also access the SDM space mirrored in an alternate area with parameter sign extension (PSE). PSE allows for 24-bit data to be accessed as 32 bit sign-extended data without using the device's bandwidth to extend the data.

Parameter signal extension accesses differ from the usual host accesses to the original SDM area as follows:

- Writes are effective only to the lower 3 bytes of a word: the word's most significant byte (byte address) is kept unaltered in SDM.

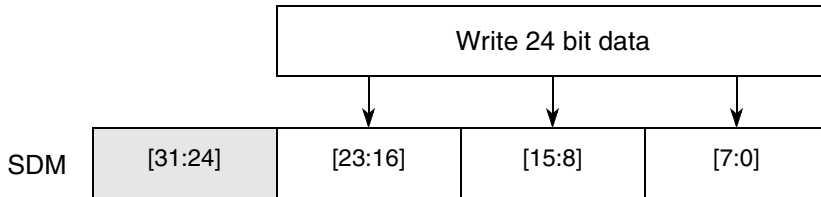


Figure 19-3. SDM Write

NOTE

For the most significant byte, it should be recalled that the word format is big endian, as in the default PowerPC word format.

- Reads return the lower 3 bytes of a word sign-extended to 32 bits, that is: the most significant bit of the word's second most significant byte (byte addresses) is copied in all 8 bits of the most significant read byte.

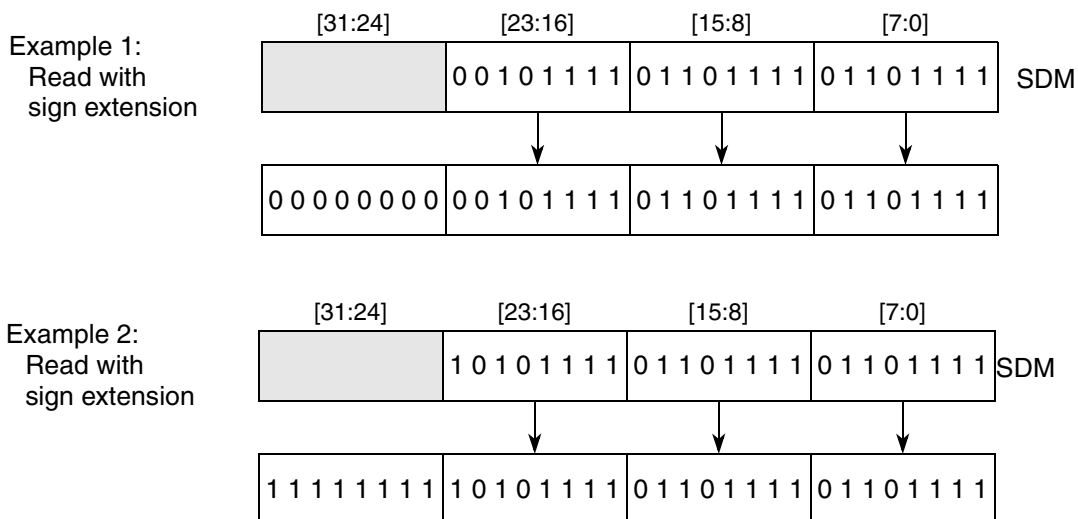


Figure 19-4. PSE Accesses

Each eTPU channel can be associated with a variable number of parameters located in the SDM, according to its selected function. In addition, the SDM can be fully shared between two eTPU engines, enabling communication between them. Each function may require a different number of parameters. During eTPU initialization the host has to program channel base addresses, allocating proper parameters for each channel according to its selected function.

In the host address space each parameter occupies four bytes (32 bits). eTPU usage of the upper byte is achieved by having a 32-bit Preload (P) register that can access the upper byte, the lower 24 bits, or all the 32 bits. The microcode can switch between access sizes at any time.

Each function may require a different number of parameters. During the eTPU initialization the host has to program channel base addresses, allocating proper parameters for each channel according to its selected function.

19.1.3.1.5 Task Scheduler

As mentioned in [Section 19.1.3, “eTPU Operation Overview,”](#) every channel function is composed of one or more threads, and threads cannot be interrupted by host or channel events, such as channel servicing. The function of the task scheduler, therefore, is to recognize and prioritize the channels needing service and grant execution time to each channel. The time given to an individual thread for execution or service is called a time slot. The duration of a time slot is determined by the number of instructions executed in the thread plus SDM wait-states received, and varies in length. Although several channels may request service at the same time, the function threads must be executed serially.

At any time, an arbitrary number of channels can require service. The channel logic, eTPU microcode, or the host application notifies the scheduler by issuing a service request.

Out of reset, all channels are disabled. The device core makes a channel active by assigning it one of three priorities: high, middle, or low. The scheduler determines the order in which channels are serviced based

on channel number and assigned priority. The priority mechanism, implemented in hardware, ensures that all requesting channels are serviced.

19.1.3.1.6 Microengine

The eTPU microengine is a simple RISC implementation that performs each instruction in a microcycle of two system clocks, while pre-fetching the next instruction through an instruction pipeline. Instruction execution time is constant for the arithmetic logic unit (ALU) unless it gets wait states from SDM arbitration.

Microcode is stored in shared code memory (SCM) that is 32 bits wide. The microengine instruction set provides basic arithmetic and logic operations, flow control (jumps and subroutine calls), SDM access, and channel configuration and control. The instruction formats are defined in such a way that allow particular combinations of two or three of these operations with unconflicting resources to be executed in parallel in the same microcycle, thus improving performance.

The microengine also has an independent multiply/divide/MAC unit that performs these complex operations in parallel with other microengine instructions.

Channel functionality is integrated to the instruction set through channel control operations and conditional branch operations, which support jumps/calls on channel-specific conditions. This allows quick and terse channel configuration and control code, contributing to reduced service time.

19.1.3.2 Debug Interface

Nexus level 3 debug support is available through the eTPU Nexus development interface (NDEDI). Refer to [Chapter 26, “Nexus Development Interface.”](#)

19.1.4 Features

The eTPU includes these distinctive features:

- Up to 32 channels for each eTPU engine: each channel is associated with an I/O signal pair
 - Enhanced input digital filters on the input pins for improved noise immunity. The eTPU digital filter can use two samples, three samples, or work in continuous mode.
 - Orthogonal channels, except for channel 0: each channel can perform any time function. Each time function can be assigned to more than one channel at a given time, so each signal can have any functionality. Channel 0 has the same capabilities of the others, but can also work with special angle counter logic (see below).
 - A link service request allows activation of a channel thread by request of another channel, even between eTPU engines.
 - A host service request allows activation of a channel thread by the device core request.
 - Each channel has an event mechanism that supports single and double action functionality in various combinations. It includes two 24-bit capture registers, two 24-bit match registers, 24-bit greater-equal or equal-only comparator.

- Two independent 24-bit time bases for channel synchronization
 - The first time base may be clocked by the system clock with programmable prescaler division from 2 to 512 (in steps of 2), or by the output of the second time base prescaler.
 - The first time base can also be clocked by an external signal with programmable prescaler divisions of 1 to 256.
 - The second time base may be clocked by an external signal with programmable prescaler divisions from 1 to 64 or by the system clock divided by 8.
 - The second time base counter can work as an angle counter, enabling angle-based applications to match angle instead of time.
 - The second time base can alternatively be used as a pulse accumulator gated by an external signal.
 - Either time base can be written or read by either eTPU engine at any time.
 - Either time base can be read, but not written, by the host.
 - Both time bases can be exported or imported from engine to engine through the STAC (shared time and counter) bus.

NOTE

An engine cannot export/import to/from itself. An engine cannot import a time base and/or angle count if it is in angle mode.

- Event-triggered RISC processor (microengine)
 - 2-stage pipeline implementation (fetch and execution), with separate instruction memory (SCM) and data memory (SDM).
 - Two-system-clock microcycle fixed-length instruction execution for the ALU.
 - 12 Kbytes of shared code memory (SCM).
 - 2.5 Kbytes of shared data memory (SDM)
 - Instruction set with embedded channel support, including specialized channel control subinstructions and conditional branching on channel-specific flags.
 - Channel-oriented addressing: channel-bound address mode with host configured channel base address allows the same function to operate independently on different channels.
 - Channel-bound data address space of up to 128 32-bit parameters (512 bytes).
 - Global parameter address mode allows access to common channel data of up to 256 32-bit parameters (1024 bytes).
 - Support for indirect and stacked data access schemes.
 - Parallel execution of: data access, ALU, channel control and flow control subinstructions in selected combinations.
 - 32-bit microengine registers and 24-bit resolution ALU, with 1 microcycle addition and subtraction, absolute value, bitwise logical operations on 24-bit, 16-bit, or byte operands: single bit manipulation, shift operations, sign extension and conditional execution.
 - Additional 24-bit multiply/MAC/divide unit which supports all signed/unsigned/multiply/MAC combinations, and unsigned 24-bit divide. The MAC/divide unit works in parallel with the regular microcode commands.

- Resource sharing features resolve channel contention for common use of channel registers, memory and microengine time
 - Hardware scheduler works as a ‘task management’ unit, dispatching event service routines by predefined, host-configured priority.
 - Automatic channel context switch when a ‘task switch’ occurs; that is, one function thread ends and another begins to service a request from another channel. Channel-specific registers, flags and parameter base address are automatically loaded for the next serviced channel.
 - Individual channel priority setting in three levels: high, middle, and low.
 - Scheduler priority scheme allows calculation of worst case latency for event servicing and ensures servicing of all channels by preventing permanent blockage.
 - SDM shared between host core and both eTPU engines, supporting channel-channel or host-channel communication.
 - Hardware implementation of four semaphores allows for resource arbitration between channels in both eTPU engines.
 - Hardware semaphores are directly supported by the microengine instruction set.
 - Dual-parameter coherency hardware support allows coherent (to host) access to 2 parameters by microengines in back-to-back accesses.
 - Coherent dual-parameter controller allows coherent (to microengines) accesses to two parameters by the host.
- Test and development support features
 - Nexus level 3 debug support through the eTPU Nexus block (NDEDI)
 - Software breakpoints
 - SCM (code memory) continuous signature-check built-in code integrity test multiple input signature calculator (MISC): runs concurrently with eTPU normal operation

19.2 Modes of Operation

The eTPU is capable of working in the following modes.

19.2.1 User Configuration Mode

By having access to the shared code memory (SCM), the core has the ability to program the eTPU cores with time functions.

19.2.2 User Mode

In user mode the core does not access the eTPU shared code memory, and pre-defined eTPU functions are used.

19.2.3 Debug Mode

The core debugs eTPU code, accessing special trace/debug features via Nexus interface:

- Hardware breakpoint/watchpoint setting
- Access to internal registers
- Single-step execution
- Forced instruction execution
- Software breakpoint insertion and removal

19.2.4 Module Disable Mode

eTPU engine clocks are stopped through a register write to ETPU_ECR bit MDIS, saving power. Input sampling stops. eTPU engines can be in stop mode independently. Module disable mode stops only the engine clock, so that the shared BIU and global channel registers can be accessed, and interrupts and DMA requests can be cleared and enabled/disabled. An engine only enters module disable mode when any currently running thread is finished.

These modes are loosely selected: there is no unique register field or signals to choose between them. Some features of one mode can be used with features of other modes.

19.2.5 eTPU Mode Selection

User and user configuration are the production operating modes, and differ from each other only in access to SCM.

Module disable mode is entered by setting ETPU_ECR[MDIS]. eTPU engines can be individually stopped (there is one ETPU_ECR for each engine).

19.3 External Signal Description

19.3.1 Overview

There are 69 external signals associated with each eTPU engine: 32 channel input signals, 32 channel output signals, 4 output disable signals, and a TCRCLK clock input, totalling 138 in a dual engine system, or 69 in a single engine system.

19.3.2 Detailed Signal Description

19.3.2.1 Output and Input Channel Signals

Each eTPU channel has an input and output associated with it, and these can be connected to external pins or wired internally to other peripheral devices. As shown in [Figure 21-22](#) and its associated [Table 21-20](#), for example, eTPU output channel 0 (signal ETPUA0_ETPUA12_GPIO114) is serialized to DSPI C and then connected to input 2 on IMUX for external IRQ3. Most eTPU channels are serialized, just eTPU channels 22 and 23 are connected to their respective pins alone.

Some channels are serialized through one DSPI to two different locations. The eTPU channel 29 (signal ETPUA29_PCSC2_GPIO143) is serialized to both eTPU_A input channel 29 and input 1 on IMUX for external IRQ8. This serialization is performed by DSPI B. Finally, some channels are serialized through different DSPIs. The eTPU channel 17, for example, is serialized through DSPI B to input 1 on IMUX for external IRQ6, but also serialized by DSPI D to input 3 on IMUX for external IRQ2.

Figure 21-21, Figure 21-22, and Figure 21-23 along with Table 21-19, Table 21-20, and Table 21-21 explain the serial connectivities of the eTPU and eMIOS channels.

19.3.2.2 Time Base Clock Signal (TCRCLK[A:B])

The TCRCLK[A] input signals are used to control the TCR1 and TCR2 time bases for eTPU A.

NOTE

Throughout this document, TCRCLKA and TCRCLKB are referred to generically as TCRCLK.

There is one independent TCRCLK input for each engine. Table 19-1 shows the TCRCLK pin connections. For pulse accumulator operations TCRCLK can be used as a gate for a counter based on the system clock divided by eight. For angle operations TCRCLK can be used to get the tooth transition indications in angle mode. Further details can be found in the eTPU reference manual's Section 5.9 and 5.10.

19.3.2.3 Channel Output Disable Signals

Each eTPU engine has four input signals that are used to force the outputs of a group of 8 channels to an inactive level. These signals originate from the eMIOS. When an output disable signal is active, all the 8 channels assigned to the disable signal that have their ODIS bits set to 1 in ETPU_CnCR register have their outputs forced to the opposite of the value specified in the ETPU_CnCR[OPOL] bit. Therefore, individual channels can be selected to be affected by the output disable signals, as well as their disabling forced polarity.

The output disable channel groups are defined in Table 19-1.

Table 19-1. Output Disable Channel Groups

eMIOS Channel	Engine	eTPU Channels Disabled
11	A	0–7
10		8–15
9		16–23
8		24–31

19.4 Memory Map and Register Definition

19.4.1 Memory Map

The eTPU system simplified memory map is shown in [Table 19-2](#). The base address for the eTPU module is listed as BASE. Each of the register areas shown may have their own reserved address areas.

[Table 19-2](#) shows a detailed memory map.

Table 19-2. eTPU High-Level Memory Map

Address	Register Description
Base (C3FC_0000) Base + 0x0_001F	eTPU system module configuration registers
Base + 0x0_0020 – Base + 0x0_002F	eTPU A time base registers
Base + 0x0_0030– Base + 0x0_01FF	Reserved
Base + 0x0_0200– Base + 0x0_02FF	eTPU[A:B] global channel registers
Base + 0x0_0300– Base + 0x0_03FF	Reserved
Base + 0x0_0400– Base + 0x0_07FF	eTPU A channel registers
Base + 0x0_0800– Base + 0x0_7FFF	
Base + 0x0_9000– Base + 0x0_BFFF	Reserved
Base + 0x0_C000– Base + 0x0_FFFF	SDM PSE mirror ¹ (3 Kbytes)
Base + 0x1_0000– Base + 0x1_FFF	SCM (12 Kbytes — MPC5565 and MPC5567)
Base + 0x1_5000– Base + 0x1_FFFF	Not writable Reads the return value of ETPU_SCMOFFDATAR register.

¹ Parameter Sign Extension access area. See the eTPU reference manual.

19.4.2 Register Description

[Table 19-3](#) shows the eTPU registers and their locations, without examples or explanation of how the fields are used. For a complete description of these registers users should refer to the *Enhanced Time Processing Unit (eTPU) Reference Manual*. The features are explained in detail there.

Table 19-3. Detailed Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xC3FC_0000)	ETPU_MCR	eTPU module configuration register	32
Base + 0x0_0004	ETPU_CDCR	eTPU coherent dual-parameter controller register	32
Base + 0x0_0008	—	Reserved	—
Base + 0x0_000C	ETPU_MISCCMPR	eTPU MISC compare register	32
Base + 0x0_0010	ETPU_SCMOFFDATAR	eTPU SCM off-range data register	32
Base + 0x0_0014	ETPU_ECR_A	eTPU A engine configuration register	32
Base + 0x0_001C	—	Reserved	—
Base + 0x0_0020	ETPU_TBCR_A	eTPU A time base configuration register	32
Base + 0x0_0024	ETPU_TB1R_A	eTPU A time base 1	32
Base + 0x0_0028	ETPU_TB2R_A	eTPU A time base 2	32
Base + 0x0_002C	ETPU_REDCR_A	eTPU A STAC bus interface configuration register	32
Base + 0x0_0030– Base + 0x0_003F	—	Reserved	—
Base + 0x0_0050– Base + 0x0_01FF	—	Reserved	—
Base + 0x0_0200	ETPU_CISR_A	eTPU A channel interrupt status register	32
Base + 0x0_0208	—	Reserved	—
Base + 0x0_020C	—	Reserved	—
Base + 0x0_0210	ETPU_CDTRSR_A	eTPU A channel data transfer request status register	32
Base + 0x0_0218	—	Reserved	—
Base + 0x0_021C	—	Reserved	—
Base + 0x0_0220	ETPU_CIOSR_A	eTPU A channel interrupt overflow status register	32
Base + 0x0_0228	—	Reserved	—
Base + 0x0_022C	—	Reserved	—
Base + 0x0_0230	ETPU_CDTROSRA	eTPU A channel data transfer request overflow status register	32
Base + 0x0_0238	—	Reserved	—
Base + 0x0_023C	—	Reserved	—
Base + 0x0_0240	ETPU_CIER_A	eTPU A channel interrupt enable register	32
Base + 0x0_0248	—	Reserved	—
Base + 0x0_024C	—	Reserved	—
Base + 0x0_0250	ETPU_CDTRER_A	eTPU A channel data transfer request enable register	32
Base + 0x0_0258– Base + 0x0_027F	—	Reserved	—

Table 19-3. Detailed Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x0_0280	ETPU_CPSSR_A	eTPU A channel pending service status register	32
Base + 0x0_0288	—	Reserved	—
Base + 0x0_028C	—	Reserved	—
Base + 0x0_0290	ETPU_CSSR_A	eTPU A channel service status register	32
Base + 0x0_0298– Base + 0x0_03FF	—	Reserved	—
Base + 0x0_0400	ETPU_C0CR_A	eTPU A channel 0 configuration register	32
Base + 0x0_0404	ETPU_C0SCR_A	eTPU A channel 0 status and control register	32
Base + 0x0_0408	ETPU_C0HSRR_A	eTPU A channel 0 host service request register	32
Base + 0x0_040C	—	Reserved	—
Base + 0x0_0410	ETPU_C1CR_A	eTPU A channel 1 configuration register	32
Base + 0x0_0414	ETPU_C1SCR_A	eTPU A channel 1 status and control register	32
Base + 0x0_0418	ETPU_C1HSRR_A	eTPU A channel 1 host service request register	32
Base + 0x0_041C	—	Reserved	—
· · ·	· · ·	· · ·	· · ·
Base + 0x0_05F0	ETPU_C31CR_A	eTPU A channel 31 configuration register	32
Base + 0x0_05F4	ETPU_C31SCR_A	eTPU A channel 31 status and control register	32
Base + 0x0_05F8	ETPU_C31HSRR_A	eTPU A channel 31 host service request register	32
Base + 0x0_05FC– Base + 0x0_07FF	—	Reserved	—
Base + 0x0_09FC– Base + 0x0_7FFF	—	Reserved	—
Base + 0x0_8000– Base + 0x0_8FFF	SDM	Shared Data Memory (parameter RAM)	2.5 Kbytes
Base + 0x0_8C00– Base + 0x0_BFFF	—	Reserved	—
Base + 0x0_C000– Base + 0x0_FFFF	—	SDM PSE mirror ¹	3 Kbytes
Base + 0x0_CC00– Base + 0x0_FFFF	—	Reserved	—
Base + 0x1_0000– Base + 0x1_FFF	SCM	Shared Code Memory ²	12 Kbytes
Base + 0x1_000– Base + 0x1_FFFF	—	Reserved	—

¹ Parameter sign extension access area. See the eTPU reference manual.

² SCM access is only available under certain conditions when ETPU_MCR[VIS] = 1. The SCM can only be written in 32-bit accesses.

19.4.2.1 System Configuration Registers

19.4.2.1.1 eTPU Module Configuration Register (ETPU_MCR)

This register is global to both eTPU engines, and resides in the shared BIU. ETPU_MCR gathers global configuration and status in the eTPU system, including global exception. It is also used for configuring the SCM (shared code memory) operation and test.

Address: Base + 0x0_0000

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	MGE A	MGE B	ILFA	ILFB	0	0	0		SCMSIZE			
W	GEC															
Reset	0	0	0	0	0	0	0	0	0	0	0		SCMSIZE			
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	SCM MISF	SCM MISEN	0	0	VIS	0	0	0	0	0	GTBE
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-5. ETPU_MCR Register

Table 19-4. ETPU_MCR Field Descriptions

Field	Description
0 GEC	Global exception clear. Negates global exception request and clears global exception status bits MGEA, MGEB, ILFA, ILFB and SCMMISF. A read will always return 0. Writes have the following effect: 0 Keep global exception request and status bits ILFA, ILFB, MGEA, MGEB, and SCMMISF as is. 1 Negate global exception, clear status bits ILFA, ILFB, MGEA, MGEB, and SCMMISF. GEC works the same way with either one or both engines in stop mode.
1–3	Reserved.
4 MGEA	Microcode global exception engine A. Indicates that a global exception was asserted by microcode executed on the respective engine. The determination of the reason why the global exception was asserted is application dependent: it can be coded in an SDM status parameter, for instance. This bit is cleared by writing 1 to GEC. 0 No microcode-requested global exception pending. 1 Global exception requested by microcode is pending.
5 MGEB	Microcode global exception engine B. Indicates that a global exception was asserted by microcode executed on the respective engine. The determination of the reason why the global exception was asserted is application dependent: it can be coded in an SDM status parameter, for instance. This bit is cleared by writing 1 to GEC. 0 No microcode requested global exception pending. 1 Global exception requested by microcode is pending.

Table 19-4. ETPU_MCR Field Descriptions (continued)

Field	Description
6 ILFA	Illegal instruction flag eTPU A. Set by the microengine to indicate that an illegal instruction was decoded in engine A. This bit is cleared by host writing 1 to GEC. For more information about illegal instructions, see Section 9.6 in the eTPU reference manual. 0 Illegal Instruction not detected. 1 Illegal Instruction detected by eTPU A.
7 ILFB	Illegal instruction flag eTPU B. Set by the microengine to indicate that an illegal instruction was decoded in engine B. This bit is cleared by host writing 1 to GEC. For more details, refer to the eTPU reference manual. 0 Illegal Instruction not detected. 1 Illegal Instruction detected by eTPU B.
8–10	Reserved.
11–15 SCMSIZE [0:4]	SCM size. Holds the number of 2 Kbyte SCM Blocks minus 1. This value is MCU-dependent.
16–20	Reserved.
21 SCMMISF	SCM MISC Flag. Set by the SCM MISC (multiple input signature calculator) logic to indicate that the calculated signature does not match the expected value, at the end of a MISC iteration. For more details, refer to the eTPU reference manual for more details. 0 Signature mismatch not detected. 1 MISC has read entire SCM array and the expected signature in ETPU_MISCCMPR does not match the value calculated. This bit is cleared by writing 1 to GEC.
22 SCM MISEN	SCM MISC enable. Used for enabling/disabling the operation of the MISC logic. SCMMISEN is readable and writable at any time. The MISC logic will only operate when this bit is set to 1. When the bit is reset the MISC address counter is set to the initial SCM address. When enabled, the MISC will continuously cycle through the SCM addresses, reading each and calculating a CRC. In order to save power, the MISC can be disabled by clearing the SCMMISEN bit. For more details, refer to the eTPU reference manual. 0 MISC operation disabled. The MISC logic is reset to its initial state. 1 MISC operation enabled. (Toggling to 1 clears the SCMMISF bit) SCMMISEN is cleared automatically when MISC logic detects an error; that is, when SCMMISF transitions from 0 to 1, disabling the MISC operation.
23–24	Reserved.
25 VIS	SCM visibility. Determines SCM visibility to the slave bus interface and resets the MISC state (but SCMMISEN keeps its value). 0 SCM is not visible to the slave bus. Accessing SCM address space issues a bus error. 1 SCM is visible to the slave bus. The MISC state is reset. This bit is write protected when any of the engines are not in halt or stop states. When VIS=1, the ETPU_ECR MDIS bits are write protected, and only 32-bit aligned SCM writes are supported. The value written to SCM is unpredictable if other transfer sizes are used.
26 – 30	Reserved.
31 GTBE	Global time base enable. Enables time bases in both engines, allowing them to be started synchronously. An assertion of GTBE also starts the eMIOS time base ¹ . This enables the eTPU time bases and the eMIOS time base to all start synchronously. 1 time bases in both eTPU engines and eMIOS are enabled to run. 0 time bases in both engines are disabled to run. Note: When GTBE is turned off with Angle Mode enabled, the EAC must be reinitialized before GTBE is turned on again.

¹ The eMIOS also has an GTBE bit. Assertion of either the eMIOS or eTPU GTBE bit starts time bases for the eMIOS and eTPU, see the eTPU reference manual.

19.4.2.1.2 eTPU Coherent Dual-Parameter Controller Register (ETPU_CDCR)

ETPU_CDCR configures and controls dual-parameter coherent transfers. For more information, refer to the eTPU reference manual.

Address: Base + 0x0_0004

Access: Read/Write

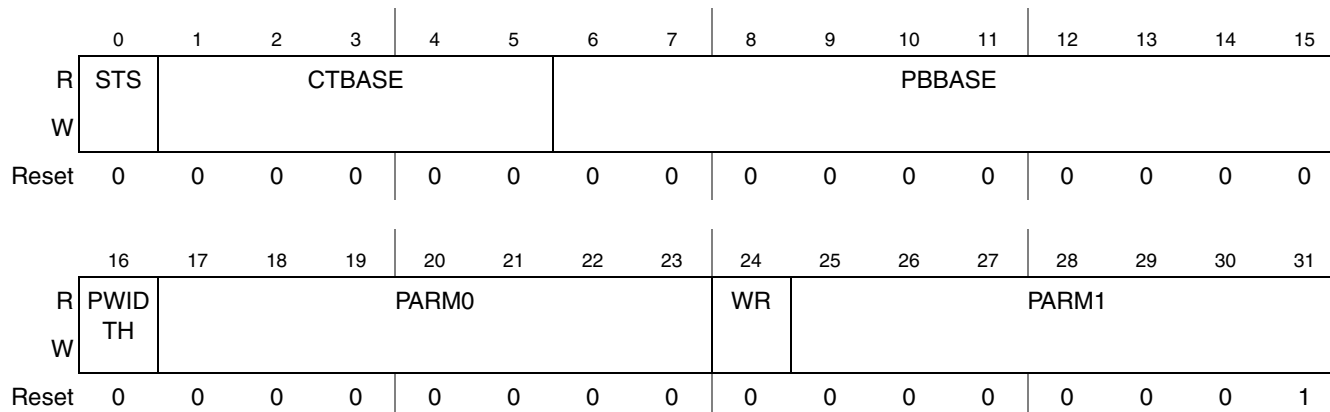


Figure 19-6. eTPU Coherent Dual-Parameter Controller Register (ETPU_CDCR)

Table 19-5. ETPU_CDCR Field Descriptions

Field	Description
0 STS	Start. Set by the host in order to start the data transfer between the parameter buffer pointed by PBBASE and the target addresses selected by the concatenation of fields CTBASE and PARM0/1. The host receives wait-states until the data transfer is complete. Coherency logic resets STS once the data transfer is complete. For more information, refer to the eTPU reference manual. 0 (Write) does not start a coherent transfer. 1 (Write) starts a coherent transfer.
1–5 CTBASE [0:4]	Channel transfer base. This field concatenates with fields PARM0/PARM1 to determine the absolute offset (from the SDM base) of the parameters to be transferred: Parameter 0 address = {CTBASE, PARM0} × 4 + SDM base Parameter 1 address = {CTBASE, PARM1} × 4 + SDM base
6–15 PBBASE [0:9]	Parameter buffer base address. Points to the base address of the parameter buffer location, with granularity of 2 parameters (8 bytes). The host (byte) address of the first parameter in the buffer is PBBASE × 8 + SDM Base Address.
16 PWIDTH	Parameter width selection. Selects the width of the parameters to be transferred between the PB and the target address. 0 Transfer 24-bit parameters. The upper byte remains unchanged in the destination address. 1 Transfer 32-bit parameters. All 32 bits of the parameters are written in the destination address.
17–23 PARM0 [0:6]	Channel parameter number 0. This field in concatenation with CTBASE[3:0] determine the address offset (from the SDM base address) of the parameter which is the destination or source (defined by WR) of the coherent transfer. The SDM address offset of the parameter is {CTBASE, PARM0}*4. Note that PARM0 allows non-contiguous parameters to be transferred coherently ¹ .

Table 19-5. ETPU_CDCR Field Descriptions (continued)

Field	Description
24 WR	Read/Write selection. This bit selects the direction of the coherent data transfer. 0 Read operation. Data transfer is from the selected parameter RAM address to the PB. 1 Write operation. Data transfer is from the PB to the selected parameter RAM address.
25–31 PARM1 [0:6]	Channel parameter number 1. This field in concatenation with CTBASE[3:0] determines the address offset (from the SDM base) of the parameter which is the destination or source (defined by WR) of the coherent transfer. The SDM address offset of the parameter is {CTBASE, PARM1}*4. Note that PARM1 allows non-contiguous parameters to be transferred coherently ¹ .


¹ The parameter pointed by {CTBASE, PARM0} is the first transferred.

19.4.2.1.3 eTPU MISC Compare Register (ETPU_MISCCMPR)

The multiple input signature calculator compare register (ETPU_MISCCMPR) holds the 32-bit signature expected from the whole shared code memory (SCM) array. This register must be written by the host with the 32-bit word to be compared against the calculated signature at the end of the MISC cycle. This register is global to both eTPU engines. For more details, refer to the eTPU reference manual.

Address: Base + 0x0_000C

Access: Read/Write

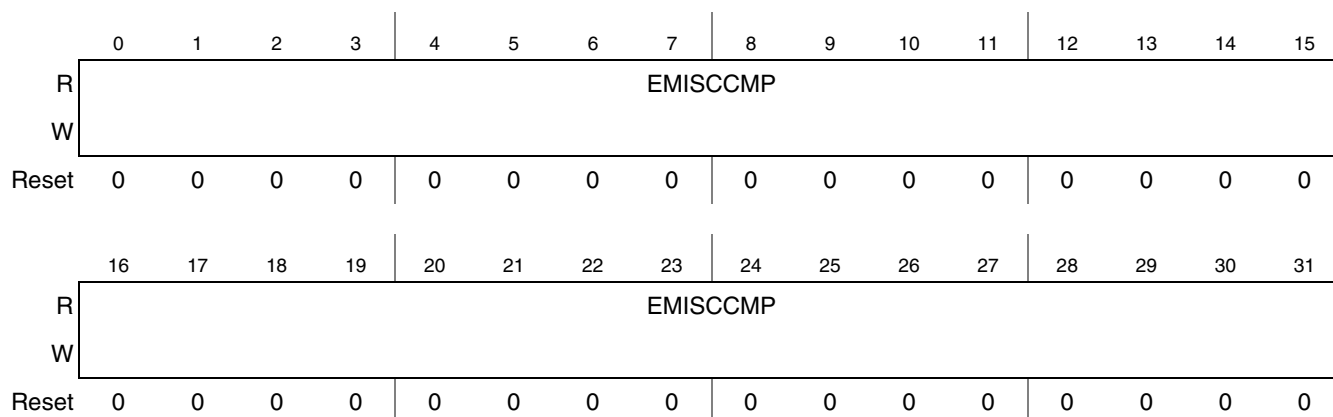
Figure 19-7. eTPU MISC Compare Register (ETPU_MISCCMPR)
Table 19-6. ETPU_MISCCMPR Field Descriptions

Field	Description
0–31 EMISCCMP [0:31]	Expected multiple input signature calculator compare register value. For more information, refer to the eTPU reference manual.

19.4.2.1.4 eTPU SCM Off-Range Data Register (ETPU_SCMOFFDATAR)

ETPU_SCMOFFDATAR holds the 32-bit value returned when the SCM array is accessed at non implemented addresses, either by the host or by the microengine. This register can be written by the host with the 32-bit instruction to be executed by the microengine to recover from runaway code. This register is global to both ETPU engines.

Enhanced Time Processing Unit (eTPU)

Address: Base + 0x0_0010

Access: Read/Write

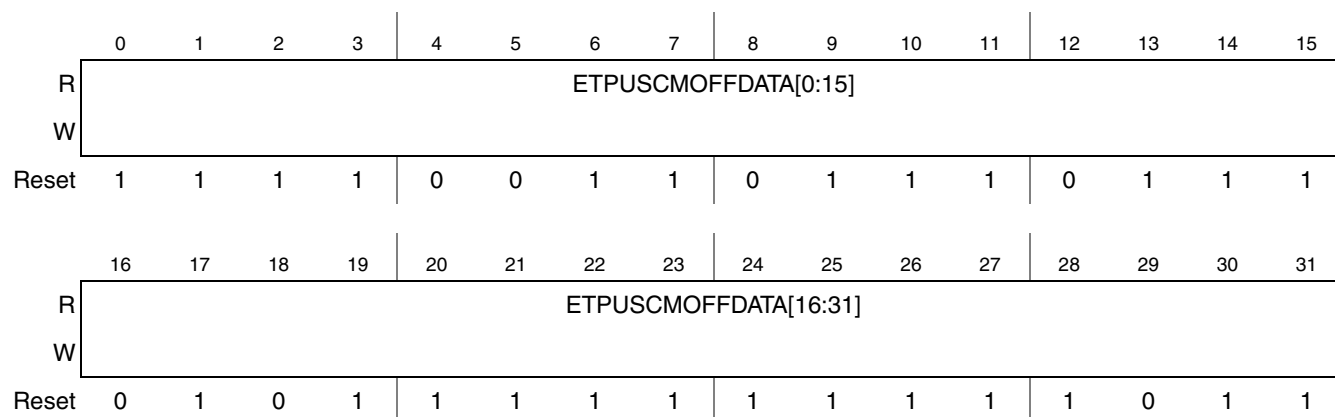


Figure 19-8. eTPU SCM Off-Range Data Register (ETPU_SCMOFFDATAR)

Table 19-7. ETPU_SCMOFFDATAR Field Descriptions

Field	Description
0–31 ETPU SCMOFF DATAR	SCM Off-range read data value.

19.4.2.1.5 eTPU Engine Configuration Register (ETPU_ECR)

Each engine has its own ETPU_ECR. The ETPU_ECR holds configuration and status fields that are programmed independently in each engine.

Address: Base + 0x0_0014 (eTPU A)

Access: Read/Write

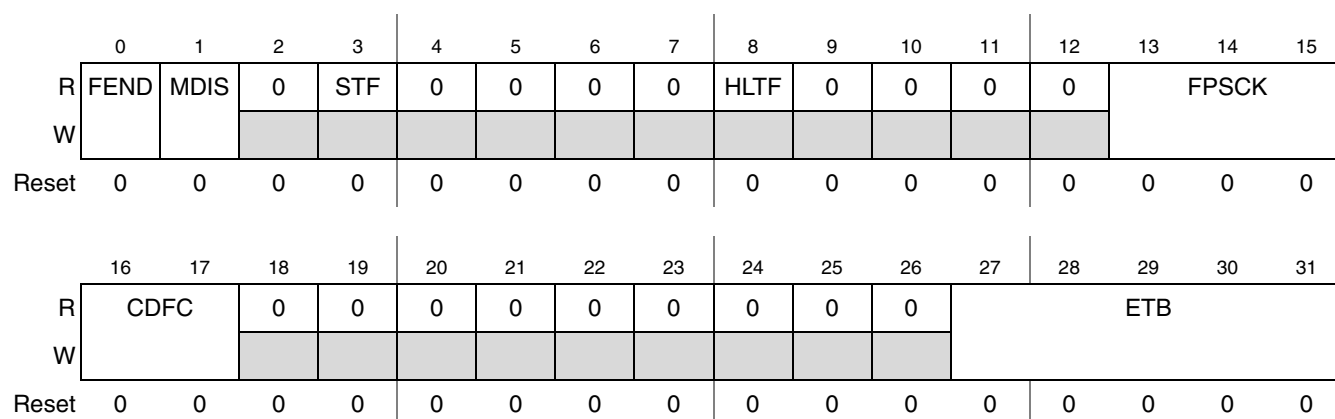


Figure 19-9. eTPU Engine Configuration Register (ETPU_ECR)

Table 19-8. ETPU_ECR Field Descriptions

Field	Description
0 FEND	Force end. Assertion terminates any current running thread as if an END instruction have been executed. For more information, refer to the eTPU reference manual. 0 Normal operation. 1 Terminates current thread. This bit is self-negating.
1 MDIS	Module disable internal stop. This is the low power stop bit. When MDIS is set, the engine shuts down its internal clocks. TCR1 and TCR2 cease to increment, and input sampling stops. The engine asserts the stop flag (STF) bit to indicate that it has stopped. However, the BIU continues to run, and the host can access all registers except for the channel registers ¹ and writes to time base registers. More information on channel registers may be found in Section 19.4.2.4, “Channel Configuration and Control Registers.” After MDIS is set, even before STF asserts, data read from the channel registers is not meaningful, a Bus Error is issued, and writes are unpredictable. When the MDIS bit is asserted while the microcode is executing, the eTPU will stop when the thread is complete. 0 eTPU engine runs. 1 Commands engine to stop its clocks. Stop completes on the next system clock after the stop condition is valid. The MDIS bit is write-protected when ETPU_MCR[VIS]=1. Note: Once MDIS has been switched from 1 to 0 or vice-versa, do not switch its value again until STF is written to.
2	Reserved.
3 STF	Stop flag bit. Each engine asserts its stop flag (STF) to indicate that it has stopped. Only then the host can assume that the engine has actually stopped. The eTPU system is fully stopped when the STF bits of both eTPU engines are asserted. The engine only stops when any ongoing thread is complete in this case. 0 The engine is operating. 1 The engine has stopped (after the local MDIS bit has been asserted, or after the STAC bus stop line has been asserted). Summarizing engine stop conditions, which STF reflects: STF_A:= (after stop completed) MDIS_A STF_B:= (after stop completed) MDIS_B STF_A and STF_B mean STF bit from engine A and STF bit from engine B respectively.
4–7	Reserved.
8 HLTF	Halt mode flag. If eTPU engine entered halt state, this flag is asserted. The flag remains asserted while the microengine is in halt state, even during a single-step or forced instruction execution. Refer to the eTPU reference manual for further details about entering halt mode. 0 eTPU engine is not halted. 1 eTPU engine is halted
9–12	Reserved.

Table 19-8. ETPU_ECR Field Descriptions (continued)

Field	Description																		
13–15 FPSCK [0:2]	<p>Filter prescaler clock control. Controls the prescaling of the clocks used in digital filters for the channel input signals and TCRCLK input. The following table illustrates filter prescaler clock control.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">Filter Control</th> <th style="text-align: center;">Sample on System Clock Divided by:</th> </tr> </thead> <tbody> <tr><td style="text-align: center;">000</td><td style="text-align: center;">2</td></tr> <tr><td style="text-align: center;">001</td><td style="text-align: center;">4</td></tr> <tr><td style="text-align: center;">010</td><td style="text-align: center;">8</td></tr> <tr><td style="text-align: center;">011</td><td style="text-align: center;">16</td></tr> <tr><td style="text-align: center;">100</td><td style="text-align: center;">32</td></tr> <tr><td style="text-align: center;">101</td><td style="text-align: center;">64</td></tr> <tr><td style="text-align: center;">110</td><td style="text-align: center;">128</td></tr> <tr><td style="text-align: center;">111</td><td style="text-align: center;">256</td></tr> </tbody> </table> <p>Filtering can be controlled independently by the engine, but all input digital filters in the same engine have same clock prescaling. For more details, refer to the eTPU reference manual.</p>	Filter Control	Sample on System Clock Divided by:	000	2	001	4	010	8	011	16	100	32	101	64	110	128	111	256
Filter Control	Sample on System Clock Divided by:																		
000	2																		
001	4																		
010	8																		
011	16																		
100	32																		
101	64																		
110	128																		
111	256																		
16–17 CDFC [0:1]	<p>Channel digital filter control. Select a digital filtering mode for the channels when configured as inputs for improved noise immunity. Channel digital filter control is illustrated in the following table.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">CDFC</th> <th style="text-align: center;">Selected Digital Filter</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">00</td> <td>TPU2/3 two sample mode: Using the filter clock which is the system clock divided by (2, 4, 8,..., 256) as a sampling clock (selected by FPSCK field in ETPU_ECR), comparing two consecutive samples which agree with each other sets the input signal state. This is the default reset state.</td> </tr> <tr> <td style="text-align: center;">01</td> <td>Reserved.</td> </tr> <tr> <td style="text-align: center;">10</td> <td>eTPU three sample mode: Similar to the TPU2/3 two sample mode, but comparing three consecutive samples which agree with each other sets the input signal state.</td> </tr> <tr> <td style="text-align: center;">11</td> <td>eTPU continuous mode: Signal needs to be stable for the whole filter clock period. This mode compares all the values at the rate of system clock divided by two, between two consecutive filter clock pulses. If all the values agree with each other, input signal state is updated.</td> </tr> </tbody> </table> <p>The eTPU has three digital filtering modes for the channels which provide programmable trade-off between signal latency and noise immunity. For more information on filtering, refer to the eTPU reference manual. Changing CDFC during eTPU normal input channel operation is not recommended since it changes the behavior of the transition detection logic while executing its operation.</p>	CDFC	Selected Digital Filter	00	TPU2/3 two sample mode: Using the filter clock which is the system clock divided by (2, 4, 8,..., 256) as a sampling clock (selected by FPSCK field in ETPU_ECR), comparing two consecutive samples which agree with each other sets the input signal state. This is the default reset state.	01	Reserved.	10	eTPU three sample mode: Similar to the TPU2/3 two sample mode, but comparing three consecutive samples which agree with each other sets the input signal state.	11	eTPU continuous mode: Signal needs to be stable for the whole filter clock period. This mode compares all the values at the rate of system clock divided by two, between two consecutive filter clock pulses. If all the values agree with each other, input signal state is updated.								
CDFC	Selected Digital Filter																		
00	TPU2/3 two sample mode: Using the filter clock which is the system clock divided by (2, 4, 8,..., 256) as a sampling clock (selected by FPSCK field in ETPU_ECR), comparing two consecutive samples which agree with each other sets the input signal state. This is the default reset state.																		
01	Reserved.																		
10	eTPU three sample mode: Similar to the TPU2/3 two sample mode, but comparing three consecutive samples which agree with each other sets the input signal state.																		
11	eTPU continuous mode: Signal needs to be stable for the whole filter clock period. This mode compares all the values at the rate of system clock divided by two, between two consecutive filter clock pulses. If all the values agree with each other, input signal state is updated.																		

Table 19-8. ETPU_ECR Field Descriptions (continued)

Field	Description																											
18–26	Reserved.																											
27–31 ETB [0:4]	<p>Entry table base. Determines the location of the microcode entry table for the eTPU functions in SCM. More information about entry points is located in the eTPU reference manual. The following table shows the entry table base address options.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>ETB</th> <th>Entry Table Base Address for CPU Host Address (byte format)</th> <th>Entry Table Base Address for Microcode Address (word format)</th> </tr> </thead> <tbody> <tr> <td>00000</td> <td>0x0_0000</td> <td>0x0_0000</td> </tr> <tr> <td>00001</td> <td>0x0_0800</td> <td>0x0_0200</td> </tr> <tr> <td>00010</td> <td>0x0_1000</td> <td>0x0_400</td> </tr> <tr> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>11110</td> <td>0x0_F000</td> <td>0x0_3C00</td> </tr> <tr> <td>11111</td> <td>0x0_F800</td> <td>0x0_3E00</td> </tr> </tbody> </table>	ETB	Entry Table Base Address for CPU Host Address (byte format)	Entry Table Base Address for Microcode Address (word format)	00000	0x0_0000	0x0_0000	00001	0x0_0800	0x0_0200	00010	0x0_1000	0x0_400	11110	0x0_F000	0x0_3C00	11111	0x0_F800	0x0_3E00
ETB	Entry Table Base Address for CPU Host Address (byte format)	Entry Table Base Address for Microcode Address (word format)																										
00000	0x0_0000	0x0_0000																										
00001	0x0_0800	0x0_0200																										
00010	0x0_1000	0x0_400																										
.	.	.																										
.	.	.																										
.	.	.																										
11110	0x0_F000	0x0_3C00																										
11111	0x0_F800	0x0_3E00																										

¹ The time base registers can still be read in stop mode, but writes are ineffective and a bus error is issued. Global channel registers and SDM can be accessed normally.

19.4.2.2 Time Base Registers

Time base registers allow the configuration and visibility of internally-generated time bases TCR1 and TCR2. There is one of each of these registers for each eTPU engine.

NOTE

Writes to this register issue a bus error and are ineffective when MDIS=1.
Reads are always allowed.

19.4.2.2.1 eTPU Time Base Configuration Register (ETPU_TBCR)

This register configures several time base options.

Enhanced Time Processing Unit (eTPU)

Address: Base + 0x0_0020 (eTPU A)

Access: Read/Write

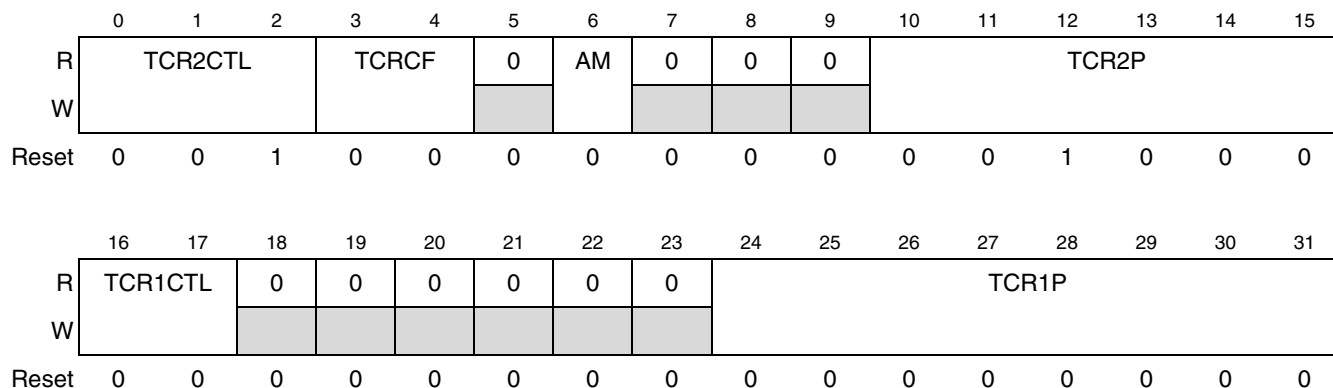


Figure 19-10. eTPU Time Base Configuration Register (ETPU_TBCR)

NOTE

The MPC5566 has two eTPU engines, where the MPC5565 and MPC5567 only has one. So for MPC5566, there are 2 TCRCLK signals, one for each eTPU engine: TCRCLKA and TCRCLKB

Table 19-9. ETPU_TBCR Field Descriptions

Field	Description																								
– TCR2CTL	<p>TCR2 clock/gate control. Part of the TCR2 clocking system. These bits determine the clock source for TCR2 before the prescaler. TCR2 can count on any detected edge of the TCRCLK signal or use it for gating system clock divided by 8. After reset, TCRCLK signal rising edge is selected. TCR2 can also be clocked by an internal peripheral timebase signal or the system clock divided by 8. TCR2CTL also determines the TCRCLK edge selected for angle tooth detection in angle mode. Refer to the eTPU reference manual for more information. TCR2 clock sources are listed in the following table.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">TCR2CTL</th> <th style="text-align: center;">AM=0 (TCR2 Clock)</th> <th style="text-align: center;">AM=1 (Angle Tooth Detection)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">000</td> <td>Gated DIV8 clock (system clock / 8). When the external TCRCLK signal is low, the DIV8 clock is blocked, preventing it from incrementing the TCR2 prescaler. When the external TCRCLK signal is high, TCR2 prescaler is incremented at the frequency of the system clock divided by 8.</td> <td>See Note¹</td> </tr> <tr> <td style="text-align: center;">001</td> <td>Rise transition on TCRCLK signal increments TCR2 prescaler.</td> <td>Rising Edge</td> </tr> <tr> <td style="text-align: center;">010</td> <td>Fall transition on TCRCLK signal increments TCR2 prescaler.</td> <td>Falling Edge</td> </tr> <tr> <td style="text-align: center;">011</td> <td>Rise or fall transition on TCRCLK signal increments TCR2 prescaler.</td> <td>Rising or Falling Edge</td> </tr> <tr> <td style="text-align: center;">100</td> <td>DIV8 clock (system clock / 8)</td> <td rowspan="4">See Note¹</td> </tr> <tr> <td style="text-align: center;">101</td> <td>Peripheral Timebase clock source</td> </tr> <tr> <td style="text-align: center;">110</td> <td>Reserved</td> </tr> <tr> <td style="text-align: center;">111</td> <td>TCR2CTL shuts down TCR2 clocking, except on Angle Mode. TCR2 can also change as STAC client.</td> </tr> </tbody> </table> <p>¹ These selections must not be used with AM=1 (Angle Mode).</p>	TCR2CTL	AM=0 (TCR2 Clock)	AM=1 (Angle Tooth Detection)	000	Gated DIV8 clock (system clock / 8). When the external TCRCLK signal is low, the DIV8 clock is blocked, preventing it from incrementing the TCR2 prescaler. When the external TCRCLK signal is high, TCR2 prescaler is incremented at the frequency of the system clock divided by 8.	See Note ¹	001	Rise transition on TCRCLK signal increments TCR2 prescaler.	Rising Edge	010	Fall transition on TCRCLK signal increments TCR2 prescaler.	Falling Edge	011	Rise or fall transition on TCRCLK signal increments TCR2 prescaler.	Rising or Falling Edge	100	DIV8 clock (system clock / 8)	See Note ¹	101	Peripheral Timebase clock source	110	Reserved	111	TCR2CTL shuts down TCR2 clocking, except on Angle Mode. TCR2 can also change as STAC client.
TCR2CTL	AM=0 (TCR2 Clock)	AM=1 (Angle Tooth Detection)																							
000	Gated DIV8 clock (system clock / 8). When the external TCRCLK signal is low, the DIV8 clock is blocked, preventing it from incrementing the TCR2 prescaler. When the external TCRCLK signal is high, TCR2 prescaler is incremented at the frequency of the system clock divided by 8.	See Note ¹																							
001	Rise transition on TCRCLK signal increments TCR2 prescaler.	Rising Edge																							
010	Fall transition on TCRCLK signal increments TCR2 prescaler.	Falling Edge																							
011	Rise or fall transition on TCRCLK signal increments TCR2 prescaler.	Rising or Falling Edge																							
100	DIV8 clock (system clock / 8)	See Note ¹																							
101	Peripheral Timebase clock source																								
110	Reserved																								
111	TCR2CTL shuts down TCR2 clocking, except on Angle Mode. TCR2 can also change as STAC client.																								
– TCRCF	<p>TCRCLK signal filter control. Controls the TCRCLK digital filter determining whether the TCRCLK signal input (after a synchronizer) is filtered with the same filter clock as the channel input signals or uses the system clock divided by 2, and also whether the TCRCLK digital filter works in integrator mode or two sample mode. The following table describes TCRCLK filter clock/mode.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">TCRCF</th> <th style="text-align: center;">Filter Input</th> <th style="text-align: center;">Filter Mode</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">00</td> <td style="text-align: center;">system clock divided by 2</td> <td style="text-align: center;">two sample</td> </tr> <tr> <td style="text-align: center;">01</td> <td style="text-align: center;">filter clock of the channels</td> <td style="text-align: center;">two sample</td> </tr> <tr> <td style="text-align: center;">10</td> <td style="text-align: center;">system clock divided by 2</td> <td style="text-align: center;">integration</td> </tr> <tr> <td style="text-align: center;">11</td> <td style="text-align: center;">filter clock of the channels</td> <td style="text-align: center;">integration</td> </tr> </tbody> </table> <p>For more information, refer to the eTPU reference manual.</p>	TCRCF	Filter Input	Filter Mode	00	system clock divided by 2	two sample	01	filter clock of the channels	two sample	10	system clock divided by 2	integration	11	filter clock of the channels	integration									
TCRCF	Filter Input	Filter Mode																							
00	system clock divided by 2	two sample																							
01	filter clock of the channels	two sample																							
10	system clock divided by 2	integration																							
11	filter clock of the channels	integration																							

Table 19-9. ETPU_TBCR Field Descriptions (continued)

Field	Description										
	Reserved.										
AM	<p>Angle mode selection. When the AM bit is set the EAC (eTPU Angle Clock) hardware provides angle information to the channels using the TCR2 bus. When the AM bit is cleared (non-angle mode), EAC operation is disabled, and its internal registers can be used as general purpose registers.</p> <p>0 EAC operation is disabled. 1 TCR2 works in angle mode;</p> <p>Note: AM must not be changed when ETPU_MCR[GTBE] = 1. Note: Changing AM may cause expurious transition detections on channel 0, depending on the channel mode and state. For more information, refer to the eTPU reference manual.</p>										
	Reserved.										
TCR2P	<p>Timer count register 2 prescaler control. Part of the TCR2 clocking system. TCR2 is clocked from the output of a prescaler. The prescaler divides its input by (TCR2P+1) allowing frequency divisions from 1 to 64. The prescaler input is the system clock divided by 8 (in gated or non-gated clock mode) or Internal Timebase input, or TCRCLK filtered input. This field has no effect on TCCR2 in Angle Mode. For more information on TCR2, refer to the eTPU reference manual.</p>										
TCR1CTL	<p>TCR1 clock/gate control. Part of the TCR1 clocking system. It determines the clock source for TCR1. TCR1 can count on detected rising edge of the TCRCLK signal or the system clock divided by 2. After reset TCRCLK signal is selected. The following table shows the selection of the TCR1 clock source.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>TCR1CTL</th> <th>TCR1 Clock</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>selects TCRCLK as clock source for the TCR1 prescaler (must not be use in Angle Mode)</td> </tr> <tr> <td>01</td> <td>reserved</td> </tr> <tr> <td>10</td> <td>selects system clock divided by 2 as clock source for the TCR1 prescaler</td> </tr> <tr> <td>11</td> <td>TCR1CTL shuts down TCR1 clock. TCR1 can still change if STAC client.</td> </tr> </tbody> </table> <p>For more information on the TCR1 clocking system, refer to the eTPU reference manual.</p>	TCR1CTL	TCR1 Clock	00	selects TCRCLK as clock source for the TCR1 prescaler (must not be use in Angle Mode)	01	reserved	10	selects system clock divided by 2 as clock source for the TCR1 prescaler	11	TCR1CTL shuts down TCR1 clock. TCR1 can still change if STAC client.
TCR1CTL	TCR1 Clock										
00	selects TCRCLK as clock source for the TCR1 prescaler (must not be use in Angle Mode)										
01	reserved										
10	selects system clock divided by 2 as clock source for the TCR1 prescaler										
11	TCR1CTL shuts down TCR1 clock. TCR1 can still change if STAC client.										
TCR1P	<p>Timer count register 1 prescaler control. Clocked from the output of a prescaler. The input to the prescaler is the internal eTPU system clock divided by 2 or the output of TCRCLK filter, or Peripheral Timebase input. The prescaler divides this input by (TCR1P+1) allowing frequency divisions from 1 up to 256.</p>										

19.4.2.2.2 eTPU Time Base 1 (TCR1) Visibility Register (ETPU_TB1R)

This register provides visibility of the TCR1 time base for core host read access. This register is read-only. The value of the TCR1 time base shown can be driven by the TCR1 counter or imported, depending on the configuration set in ETPU_REDCR. For more information, refer to the eTPU reference manual.

Address: Base + 0x0_0024 (eTPU A)

Access: Read

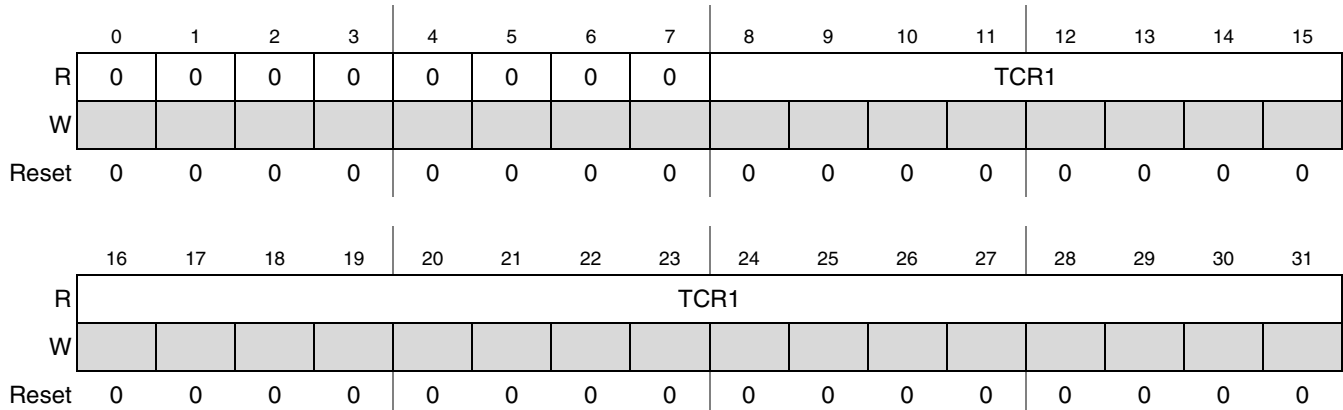


Figure 19-11. eTPU Time Base 1 (TCR1) Visibility Register (ETPU_TB1R)

Table 19-10. ETPU_TB1R Field Descriptions

Field	Description
0–7	Reserved.
8–31 TCR1 [0:23]	TCR1 value. Used on matches and captures. For more information, see the eTPU reference manual.

19.4.2.2.3 eTPU Time Base 2 (TCR2) Visibility Register (ETPU_TB2R)

This register provides visibility of the TCR2 time base for core host read access. This register is read-only. The value of the TCR2 time base shown can be driven by the TCR2 counter, the angle mode logic, or imported from the STAC interface, depending on angle mode (an engine cannot import when in angle mode) and STAC interface configurations set in registers ETPU_TBCR and ETPU_REDCR. For more information on time bases, refer to the eTPU reference manual.

Address: Base + 0x0_0028 (eTPU A)

Access: Read

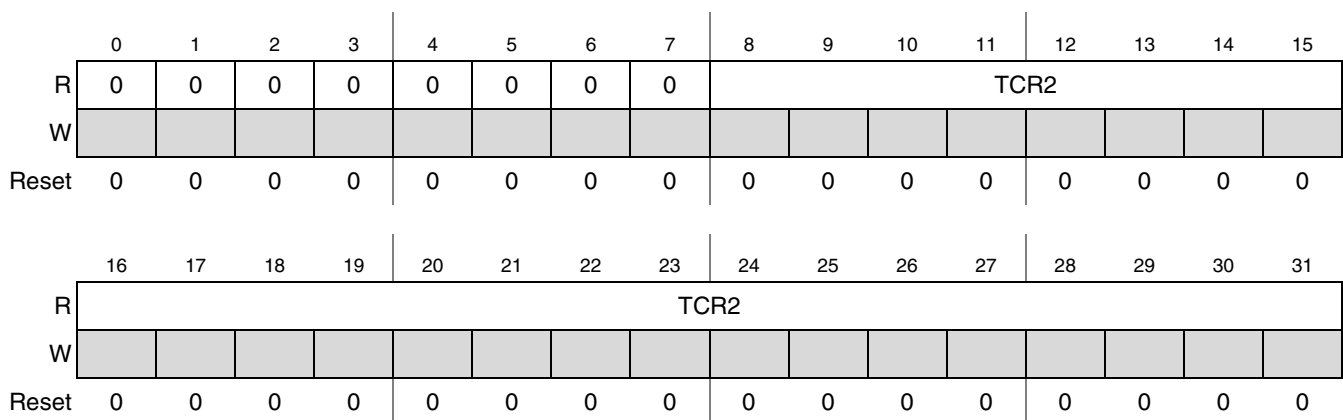


Figure 19-12. eTPU Time Base 2 (TCR2) Visibility Register (ETPU_TB2R)

Table 19-11. ETPU_TB2R Bit Field Descriptions

Field	Description
0–7	Reserved.
8–31 TCR2 [0:23]	TCR2 value. Used on matches and captures. For information on TCR2, refer to the eTPU reference manual.

19.4.2.2.4 STAC Bus Configuration Register (ETPU_REDCR)

This register configures the eTPU STAC bus interface module and operation. For more information on the STAC interface, refer to the eTPU reference manual.

Address: Base + 0x0_002C (eTPU A)

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	REN1	RSC1	0	0	SERVER_ID1				0	0	0	0	SRV1			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	REN2	RSC2	0	0	SERVER_ID2				0	0	0	0	SRV2			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-13. STAC Bus Configuration Register (ETPU_REDCR)

Table 19-12. ETPU_REDCR Field Descriptions

Field	Description
0 REN1	TCR1 resource ¹ client/server operation enable. Enables or disables client/server operation for the eTPU STAC interface. REN1 enables TCR1. 0 Server/client operation for resource 1 is disabled. 1 Server/client operation for resource 1 is enabled.
1 RSC1	TCR1 resource server/client assignment. Selects the eTPU data resource assignment to be used as a server or client. RSC1 selects the functionality of TCR1. For server mode, external plugging determines the unique server address assigned to each TCR. For a client mode, the SRV1 field determines the server address to which the client listens. 0 Resource client operation. 1 Resource server operation.
2–3	Reserved.
4–7 SERVER_ID1	STAC bus address for TCR1 as a server. For more information on the STAC interface, refer to the eTPU reference manual.
8–11	Reserved.

Table 19-12. ETPU_REDCR Field Descriptions (continued)

Field	Description
12–15 SRV1 [0:3]	TCR1 resource server. Selects the address of the specific STAC Server the local TCR1 will listen to when configured as a STAC client. For more information on the STAC interface, refer to the eTPU reference manual.
16 REN2	TCR2 resource ¹ client/server operation enable. Enables or disables client/server operation for eTPU slave resources. REN2 enables TCR2 slave bus operations. 1 Server/client operation for resource 2 is enabled. 0 Server/client operation for resource 2 is disabled.
17 RSC2	TCR2 ² resource server/client assignment. Selects the eTPU data resource assignment to be used as a server or client. RSC2 selects the functionality of TCR2. For server mode, external plugging determines the unique server address assigned to each TCR. For a client mode, the SRV2 field determines the Server address to which the client listens. 0 Resource Client operation. 1 Resource Server operation.
18–19	Reserved.
20–23 SERVER _ID2	STAC bus address for TCR2 as a server.
24–27	Reserved.
28–31 SRV2 [0:3]	TCR2 resource server. Selects the address of the specific STAC server the local TCR2 listens to when configured as a STAC Client. For more information on the STAC interface, refer to the eTPU reference manual.

¹ Resource identifies any parameter that changes in time and can be exported / imported from other device. For the eTPU, a resource can be TCR1 or TCR2 (either time or angle values).

² When TCR2 is configured as a STAC bus client (REN2 = 1, RSC2 = 0) the angle clock hardware must be disabled (ETPU_TBCCR[AM] = 0).

19.4.2.3 Global Channel Registers

The registers in this section group, by type, the interrupt status and enable bits from all the channels. This organization eases management of all channels or groups of channels by a single interrupt handler routine. These bits are mirrored by the individual channel registers.

19.4.2.3.1 eTPU Channel Interrupt Status Register (ETPU_CISR)

Host interrupt status from all channels are grouped in ETPU_CISR. The bits are mirrored by the channels' status/control registers. For more information, refer to [Section 19.4.2.4.3, “eTPU Channel n Status Control Register \(ETPU_CnSCR\),”](#) and the eTPU reference manual.

NOTE

The host core must write 1 to clear an interrupt status bit.

Enhanced Time Processing Unit (eTPU)

Address: Base + 0x0_0200 (eTPU A)

Access: Read/Write to clear

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CIS31	CIS30	CIS29	CIS28	CIS27	CIS26	CIS25	CIS24	CIS23	CIS22	CIS21	CIS20	CIS19	CIS18	CIS17	CIS16
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	CIS15	CIS14	CIS13	CIS12	CIS11	CIS10	CIS9	CIS8	CIS7	CIS6	CIS5	CIS4	CIS3	CIS2	CIS1	CIS0
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-14. eTPU Channel Interrupt Status Register (ETPU_CISR)

Table 19-13. ETPU_CISR Field Descriptions

Field	Description
0–31 CIS n	Channel n interrupt status. 0 indicates that channel n has no pending interrupt to the host core. 1 indicates that channel n has a pending interrupt to the host core. To clear a status bit, the host must write 1 to it. For details about interrupts refer to the eTPU reference manual.

19.4.2.3.2 eTPU Channel Data Transfer Request Status Register (ETPU_CDTRSR)

Data transfer request status from all channels are grouped in ETPU_CDTRSR. The bits are mirrored by the channels' status/control registers. For more information on data transfers and channel control registers, see the eTPU reference manual.

In the MPC5566, eTPU A channels [0:2,12:15,28:29] and eTPU B channels [0:3,12:15,28:31] are connected to the DMA; in the MPC5565 and MPC5567, eTPU channels [0:2, 14:15] are DMA connected. The data transfer request lines that are not connected to the DMA controller are left disconnected and do not generate transfer requests, even if their request status bits are asserted in registers ETPU_CDTRSR and ETPU_C n SCR. Channels that are not connected may still have their status bits (DTRS n) cleared by writing a 1 to the appropriate field.

Address: Base + 0x0_0210 (eTPU A)

Access: Read/Write to clear

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	DTRS 31	DTRS 30	DTRS 29	DTRS 28	DTRS 27	DTRS 26	DTRS 25	DTRS 24	DTRS 23	DTRS 22	DTRS 21	DTRS 20	DTRS 19	DTRS 18	DTRS 17	DTRS 16
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	DTRS 15	DTRS 14	DTRS 13	DTRS 12	DTRS 11	DTRS 10	DTRS 9	DTRS 8	DTRS 7	DTRS 6	DTRS 5	DTRS 4	DTRS 3	DTRS 2	DTRS 1	DTRS 0
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-15. eTPU Channel Data Transfer Request Status Register (ETPU_CDTRSR)

Table 19-14. ETPU_CDTRSR Field Descriptions

Field	Description
0–31 DTRS n	Channel n data transfer request status. 0 Indicates that channel n has no pending data transfer request. 1 Indicates that channel n has a pending data transfer request. To clear a status bit, the host must write 1 to it. For details about data transfer requests refer to the eTPU reference manual.

19.4.2.3.3 eTPU Channel Interrupt Overflow Status Register (ETPU_CIOSR)

An interrupt overflow occurs when an interrupt is issued for a channel when the previous interrupt status bit for the same channel has not been cleared. Interrupt overflow status from all channels are grouped in ETPU_CIOSR. The bits are mirrored by the channels’ status/control registers. For information about channel status registers and overflow, refer to [Section 19.4.2.4.3, “eTPU Channel \$n\$ Status Control Register \(ETPU_CnSCR\),”](#) and the eTPU reference manual.

NOTE

The host must write 1 to clear an interrupt overflow status bit.

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CIOS 31	CIOS 30	CIOS 29	CIOS 28	CIOS 27	CIOS 26	CIOS 25	CIOS 24	CIOS 23	CIOS 22	CIOS 21	CIOS 20	CIOS 19	CIOS 18	CIOS 17	CIOS 16
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	CIOS 15	CIOS 14	CIOS 13	CIOS 12	CIOS 11	CIOS 10	CIOS 9	CIOS 8	CIOS 7	CIOS 6	CIOS 5	CIOS 4	CIOS 3	CIOS 2	CIOS 1	CIOS 0
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-16. eTPU Channel Interrupt Overflow Status Register (ETPU_CIOSR)

Table 19-15. ETPU_CIOSR Field Descriptions

Field	Description
0–31 CIOS _n	Channel <i>n</i> interrupt overflow status. 0 indicates that no interrupt overflow occurred in the channel. 1 indicates that an interrupt overflow occurred in the channel. To clear a status bit, the host must write 1 to it. For details about interrupts refer to the eTPU reference manual.

19.4.2.3.4 eTPU Channel Data Transfer Request Overflow Status Register (ETPU_CDTROSR)

Data transfer request overflow status from all channels are grouped in ETPU_CDTROSR. The bits are mirrored by the channels’ status/control registers. For more information on channel status registers and data transfer request overflow, refer to [Section 19.4.2.4.3, “eTPU Channel *n* Status Control Register \(ETPU_CnSCR\),”](#) and the eTPU reference manual.

NOTE

The host must write 1 to clear a data transfer request overflow status bit.

Address: Base + 0x0_0230 (eTPU A)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	DTR OS31	DTR OS30	DTR OS29	DTR OS28	DTR OS27	DTR OS26	DTR OS25	DTR OS24	DTR OS23	DTR OS22	DTR OS21	DTR OS20	DTR OS19	DTR OS18	DTR OS17	DTR OS16
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	DTR OS15	DTR OS14	DTR OS13	DTR OS12	DTR OS11	DTR OS10	DTR OS9	DTR OS8	DTR OS7	DTR OS6	DTR OS5	DTR OS4	DTR OS3	DTR OS2	DTR OS1	DTR OS0
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-17. eTPU Channel Data Transfer Request Overflow Status Register (ETPU_CDTRCSR)

Table 19-16. ETPU_CDTRCSR Field Descriptions

Field	Description
0–31 DTRCSR _n	Channel <i>n</i> data transfer request overflow status. 0 indicates that no data transfer request overflow occurred in the channel 1 indicates that a data transfer request overflow occurred in the channel. To clear a status bit, the host must write 1 to it. For details about data transfer request overflow, refer to the eTPU reference manual.

19.4.2.3.5 eTPU Channel Interrupt Enable Register (ETPU_CIER)

The host interrupt enable bits for all 32 channels are grouped in ETPU_CIER. The bits are mirrored by the channel configuration registers. For more information on channel configuration registers and interrupt enable, refer to [Section 19.4.2.4.2, “eTPU Channel *n* Configuration Register \(ETPU_CnCR\),”](#) and the eTPU reference manual.

Address: Base + 0x0_0240 (eTPU A)

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CIE 31	CIE 30	CIE 29	CIE 28	CIE 27	CIE 26	CIE 25	CIE 24	CIE 23	CIE 22	CIE 21	CIE 20	CIE 19	CIE 18	CIE 17	CIE 16
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	CIE 15	CIE 14	CIE 13	CIE 12	CIE 11	CIE 10	CIE 9	CIE 8	CIE 7	CIE 6	CIE 5	CIE 4	CIE 3	CIE 2	CIE 1	CIE 0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-18. eTPU Channel Interrupt Enable Register (ETPU_CIER)

Table 19-17. ETPU_CIER Field Descriptions

Field	Description
0–31 CIE n	Channel n interrupt enable. Enable the eTPU channels to interrupt the device core. 0 Interrupt disabled for channel n . 1 Interrupt enabled for channel n For details about interrupts refer to the eTPU reference manual.

19.4.2.3.6 eTPU Channel Data Transfer Request Enable Register (ETPU_CDTRER)

Data transfer request enable status bits from all channels are grouped in ETPU_CDTRER. The bits are mirrored in the channels’ configuration registers. For more on configuration registers and data transfer request enable, refer to [Section 19.4.2.4.2, “eTPU Channel \$n\$ Configuration Register \(ETPU_CnCR\),”](#) and the eTPU reference manual.

Address: Base + 0x0_0250 (eTPU A)

Access: Read/Write

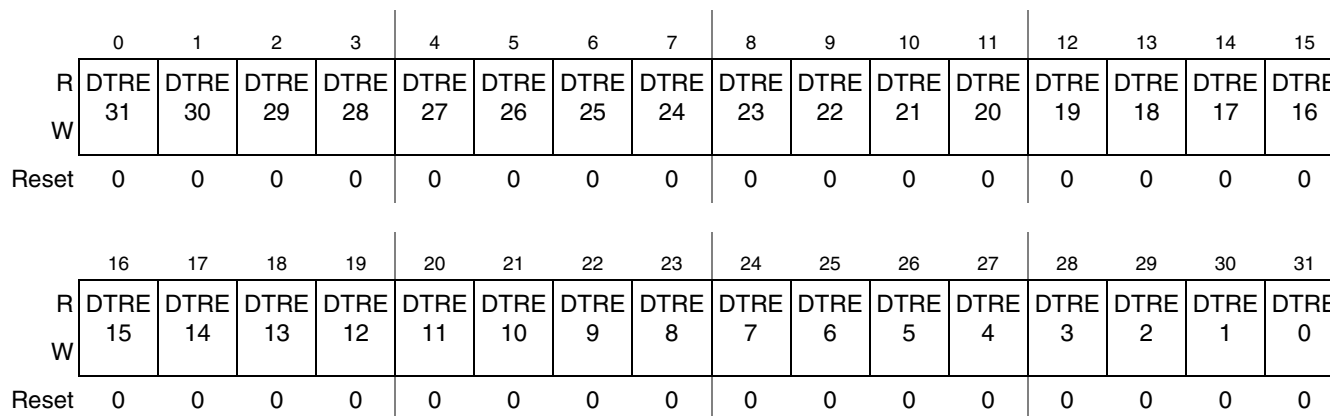


Figure 19-19. eTPU Channel Data Transfer Request Enable Register (ETPU_CDTRER)

Table 19-18. ETPU_CDTRER Field Descriptions

Field	Description
0–31 DTRE n	Channel n data transfer request enable. Enable data transfer requests for their respective channels. 0 Data transfer request disabled for channel n . 1 Data transfer request enabled for channel n . For details about interrupts refer to the eTPU reference manual.

19.4.2.3.7 eTPU Channel Pending Service Status Register (ETPU_CPSSR)

ETPU_CPSSR is a read-only register that holds the status of the pending channel service requests. For information on channel service requests, refer to the eTPU reference manual.

NOTE

More than one source may be requesting service when a channel’s service request bit is set.

Address: Base + 0x0_0280 (eTPU A)

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	SR31	SR30	SR29	SR28	SR27	SR26	SR25	SR24	SR23	SR22	SR21	SR20	SR19	SR18	SR17	SR16
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	SR15	SR14	SR13	SR12	SR11	SR10	SR9	SR8	SR7	SR6	SR5	SR4	SR3	SR2	SR1	SR0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-20. eTPU Channel Pending Service Status Register (ETPU_CPSSR)

Table 19-19. ETPU_CPSSR Bit Field Descriptions

Field	Description
0–31 SR n	<p>Pending service request n. Indicates a pending service request for channel n. The SR status for the pending request is negated at the time slot transition for the respective service thread.</p> <p>0 no service request pending for channel n</p> <p>1 pending service request for channel n</p>

NOTE

The pending service status bit for a channel is set when a service request is pending, even if the Channel is disabled ($CPR_n = 0$).

19.4.2.3.8 eTPU Channel Service Status Register (ETPU_CSSR)

ETPU_CSSR holds the current channel service status on whether it is being serviced or not. Only one bit may be asserted in this register at a given time. When no channel is being serviced the register read value is 0x0000_0000. ETPU_CSSR is a read-only register. The register can be read during normal eTPU operation for monitoring the scheduler activity. For more information on channels being serviced, refer to the eTPU reference manual.

NOTE

The ETPU_CSSR is not an absolute indication of channel status. If more than one source is requesting service, the asserted status bit only indicates that one of the requests has been granted.

NOTE

Channel service status does not always reflect decoding of the CHAN register, since the CHAN register can be changed by the service thread microcode.

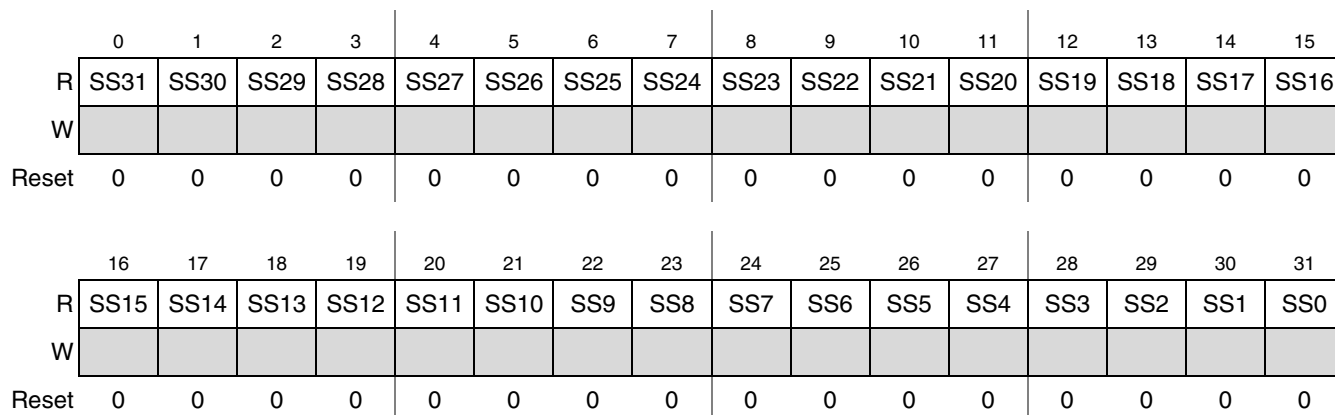


Figure 19-21. ETPU_CSSR Register

Table 19-20. ETPU_CSSR Field Descriptions

Field	Description
0–31 SS n	Service status n . Indicates that channel n is currently being serviced. It is updated at the 1st microcycle of a time slot transition. 0 channel n is not currently being serviced 1 channel n is currently being serviced Refer to the eTPU reference manual for more information on time slot transitions.

19.4.2.4 Channel Configuration and Control Registers

Each channel, for both eTPU engines, has a group of three registers used to control, configure and check status of that channel as shown in Table 19-21.

Table 19-21. Channel Registers Structure

Channel Offset	Register Name
0x00	eTPU channel configuration register (ETPU_C n CR)
0x04	eTPU channel status/control register ¹ (ETPU_C n SCR)
0x08	eTPU channel host service request register (ETPU_C n HSRR)
0x0C	Reserved

¹ In the MPC5566, eTPU A channels [0:2,12:15,28:29] and eTPU B channels [0:3,12:15,28:31] are connected to the DMA; in the MPC5565 and MPC5567, eTPU A channels [0:2, 14:15] are connected. The data transfer request lines that are not connected to the DMA controller are left disconnected and do not generate interrupt requests, even if their request status bits assert in registers ETPU_CDTRSR and ETPU_C n SCR

19.4.2.4.1 Channel Registers Layout

One contiguous area is used to map all channel registers of each eTPU engine as shown in Table 19-22.

Table 19-22. eTPU Channel Register Map

Address	Registers Structure
Base + 0x0_0400	eTPU A channel 0 register structure
Base + 0x0_0410	eTPU A channel 1 register structure
Base + 0x0_0420	eTPU A channel 2 register structure
Base + 0x0_0430– Base + 0x0_05D0
Base + 0x0_05E0	eTPU A channel 30 register structure
Base + 0x0_05F0	eTPU A channel 31 register structure
Base + 0x0_0600– Base + 0x0_07FF	Reserved
Base + 0x0_0800	eTPU B channel 0 register structure
Base + 0x0_0810	eTPU B channel 1 register structure
Base + 0x0_0820	eTPU B channel 2 register structure
Base + 0x0_0430– Base + 0x0_05D0
Base + 0x0_09E0	eTPU B channel 30 register structure
Base + 0x0_09F0	eTPU B channel 31 register structure
Base + 0x0_0A0 – Base + 0x0_0BFF	Reserved

There are 64 structures defined, one for each available channel in the eTPU System (32 for each engine). The base address for the structure presented can be calculated by using the following equation:

$$\text{Channel_Register_Structure_Base_Address} = \text{ETPU_Engine_Channel_Base} + (\text{channel_number} * 0x0_0010)$$

where:

$$\text{ETPU_Engine_Channel_Base} = \text{ETPU_Base} + (0x0_0400 \text{ for engine A or } 0x0_0800 \text{ for engine B}).$$

19.4.2.4.2 eTPU Channel *n* Configuration Register (ETPU_CnCR)

The ETPU_CnCR is a collection of the configuration bits related to an individual channel. Some of these bits are mirrored from the global channel registers.

Enhanced Time Processing Unit (eTPU)

Address: Channel_Register_Base + 0x00

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CIE	DTRE	CPR		0	0	ETPD ¹	ETCS	0	0	0	CFS				
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ODIS	OPOL	0	0	0	CPBA										
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

¹ ETPD is only offered in the MPC5565 and MPC5567.

Figure 19-22. ETPU Channel *n* Configuration Register (ETPU_CnCR)

Table 19-23. ETPU_CnCR Field Descriptions

Field	Description										
0 CIE	Channel interrupt enable. This bit is mirrored from the ETPU_CIER 0 Disable interrupt for this channel. For more information, refer to the eTPU reference manual. 1 Enable interrupt for this channel.										
1 DTRE	Channel data transfer request enable. This bit is mirrored from the ETPU_CDTRER. 0 Disable data transfer request for this channel. Refer to the eTPU reference manual for more information. 1 Enable data transfer request for this channel.										
2–3 CPR [0:1]	Channel priority. Defines the priority level for the channel. The priority level is used by the hardware scheduler. The values for CPR[1:0] and corresponding levels are shown in the table below. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>CPR</th> <th>Priority</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Disabled</td> </tr> <tr> <td>01</td> <td>Low</td> </tr> <tr> <td>10</td> <td>Middle</td> </tr> <tr> <td>11</td> <td>High</td> </tr> </tbody> </table> <p>For more information on the hardware scheduler, refer to the eTPU reference manual.</p>	CPR	Priority	00	Disabled	01	Low	10	Middle	11	High
CPR	Priority										
00	Disabled										
01	Low										
10	Middle										
11	High										
4–5	Reserved.										
6 ETPD	This bit selects which channel signal, input or output, is used in the entry point selection. The ETPD value has to be compatible with the function chosen for the channel, selected in the field CFS. For details about entry table and condition encoding schemes, refer to the eTPU reference manual. The ETPD bit is only present in the MPC5565 and MPC5567. 0 Use PSTI for entry point selection. 1 Use PSTO for entry point selection.										

Table 19-23. ETPU_CnCR Field Descriptions (continued)

Field	Description
7 ETCS	Entry table condition select. Determines the channel condition encoding scheme that selects the entry point to be taken in an entry table. The ETCS value has to be compatible with the function chosen for the channel, selected in ETPU_CnCR[CFS]. Two condition encoding schemes are available. 1 Select alternate entry table condition encoding scheme. 0 Select standard entry table condition encoding scheme. For details about entry table and condition encoding schemes, refer to the eTPU reference manual.
8–10	Reserved.
11–15 CFS [0:4]	Channel function select. Defines the function to be performed by the channel. The function assigned to the channel has to be compatible with the channel condition encoding scheme, selected by ETPU_CnCR[ETCS]. For more information about functions, refer to the eTPU reference manual.
16 ODIS	Output disable. Enables the channel to have its output forced to the value opposite to OPOL when the output disable input signal corresponding to the channel group that it belongs is active. 0 Turns off the output disable feature for the channel. For more information on output disable, refer to the eTPU reference manual. 1 Turns on the output disable feature for the channel
17 OPOL	Output polarity. Determines the output signal polarity. The activation of the output disable signal forces, when enabled by ETPU_CnCR[ODIS], the channel output signal to the opposite of this polarity. 0 Output active low (output disable drives output to high) 1 Output active high (output disable drives output to low)
18–20	Reserved.
21–31 CPBA [0:10]	Channel <i>n</i> parameter base address. The value of this field multiplied by 8 specifies the SDM parameter base host (byte) address for channel <i>n</i> (2-parameter granularity). The formula for calculating the absolute channel parameter base (byte) address, as seen by the host, is $eTPU_Base + 0x8000 + CPBA * 8$. The SDM is mirrored in the parameter sign extension (PSE) area. The formula to calculate the absolute channel parameter base (byte) address in the PSE area is $eTPU_Base + 0xC000 + CPBA * 8$. For more information on SDM addresses, refer to the eTPU reference manual.

19.4.2.4.3 eTPU Channel *n* Status Control Register (ETPU_CnSCR)

ETPU_CnSCR is a collection of the interrupt status bits of the channel, and also the function mode definition (read-write). Bits CIS, CIOS, DTRS, and DTROS for each channel can also be accessed from ETPU_CISR, ETPU_CIOSR, ETPU_CDTRSR, and ETPU_CDTROSR respectively. For more information on the three previously mentioned registers, refer to the eTPU reference manual.

NOTE

The device core must write 1 to clear a status bit.

NOTE

In the MPC5565 and MPC5567, eTPU A channels [0:2, 14:15] are DMA connected. The data transfer request lines that are not connected to the DMA controller are left disconnected and do not generate transfer requests, even if their request status bits assert in registers ETPU_CDTRSR and ETPU_CnSCR

Enhanced Time Processing Unit (eTPU)

Address: Channel_Register_Base + 0x04

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CIS	CiOS	0	0	0	0	0	0	DTRS	DTROS	0	0	0	0	0	0
W	w1c	w1c							w1c	w1c						
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	IPS	OPS	0	0	0	0	0	0	0	0	0	0	0	0	FM	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-23. eTPU Channel *n* Status Control Register (ETPU_CnSCR)

Table 19-24. ETPU_CnSCR Field Descriptions

Field	Description
0 CIS	Channel interrupt status. 0 Channel has no pending interrupt to the device core. 1 Channel has a pending interrupt to the device core. CIS is mirrored in the ETPU_CISR. For more information on ETPU_CISR and interrupts, see Section 19.4.2.3.1, “eTPU Channel Interrupt Status Register (ETPU_CISR)” , and the eTPU reference manual. The core must write 1 to clear CIS.
0 CIC	Channel interrupt clear. 0 Keep interrupt status bit unaltered. 1 Clear interrupt status bit. CIS and CIC are mirrored in the ETPU_CISR. For more information on ETPU_CISR and interrupts, see Section 19.4.2.3.1, “eTPU Channel Interrupt Status Register (ETPU_CISR)” , and eTPU reference manual.
1 CIOS	Channel interrupt overflow status. 0 Interrupt overflow negated for this channel 1 Interrupt overflow asserted for this channel CIOS is mirrored in the ETPU_CIOSR. For more information on the ETPU_CIOSR and interrupt overflow, see Section 19.4.2.3.3, “eTPU Channel Interrupt Overflow Status Register (ETPU_CIOSR)” , and the eTPU reference manual. The core must write 1 to clear CIOS.
2–7	Reserved.
8 DTRS	Data transfer request status. 0 Channel has no pending data transfer request. 1 Channel has a pending data transfer request. DTRS is mirrored in the ETPU_CISR. For more information on the ETPU_CISR and data transfer, see Section 19.4.2.3.2, “eTPU Channel Data Transfer Request Status Register (ETPU_CDTRSR)” , and the eTPU reference manual. The core must write 1 to clear DTRS.

Table 19-24. ETPU_CnSCR Field Descriptions (continued)

Field	Description
9 DTROS	Data transfer request overflow status. 0 Data transfer request overflow negated for this channel. 1 Data transfer request overflow asserted for this channel. DTROS is mirrored in the ETPU_CDTROSR. See Section 19.4.2.3.4, “eTPU Channel Data Transfer Request Overflow Status Register (ETPU_CDTROSR)” and the eTPU reference manual for more information on ETPU_CDTROSR and data transfer overflows. The core must write 1 to clear DTROS.
10–15	Reserved.
16 IPS	Channel input pin state. Shows the current value of the filtered channel input signal state
17 OPS	Channel output pin state. Shows the current value driven in the channel output signal, including the effect of the external output disable feature. If the channel input and output signals are connected to the same pad, OPS reflects the value driven to the pad. This is not necessarily the actual pad value, which drives the value in the IPS bit.
18–29	Reserved.
30–31 FM [0:1]	Channel function mode. ¹ Each function may use this field for specific configuration. These bits can be tested by microengine code.

¹ These bits are equivalent to the TPU/TPU2/TPU3 host sequence (HSQ) bits.

19.4.2.4.4 eTPU Channel *n* Host Service Request Register (ETPU_CnHSRR)

ETPU_CnHSRR is used by the device core to issue service requests to the channel.

Address: Channel_Register_Base + 0x08

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	HSR		
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 19-24. eTPU Channel *n* Host Service Request Register (ETPU_CnHSRR)

Table 19-25. ETPU_CnHSRR Field Descriptions

Field	Description
0–28	Reserved.
29–31 HSR [0:2]	<p>Host service request. Used by the host core to request service to the channel</p> <ul style="list-style-type: none"> • HSR = 000: no host service request pending • HSR > 000: function-dependent host service request pending. <p>The HSR value turns to 000 automatically at the end of microengine service for that channel. The host should write HSR > 0 only when HSR = 0. Writing HSR = 000 withdraws a pending request if the scheduler has not started to resolve the entry point, however once the scheduler starts resolving, the service thread will not be aborted.</p>

19.5 Functional Description

Refer to the eTPU reference manual for information regarding the functional description of the eTPU module.

19.6 Initialization/Application Information

After initial power-on reset, the eTPU remains in an idle state (except when debug is asserted on power-on reset—in this case, the microengine awakens in halt state). In addition, the SCM should be initialized with the eTPU application prior to configuring the eTPU.

19.7 Document Revision History

Table 26. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 20

Enhanced Queued Analog-to-Digital Converter (eQADC)

20.1 Introduction

The enhanced queued analog-to-digital converter (eQADC) provides accurate and fast conversions for a wide range of applications. The eQADC provides a parallel interface to two on-chip analog-to-digital converters (ADCs), and a single master to single slave serial interface to an off-chip external device. The two on-chip ADCs are architected to allow access to all the analog channels.

20.1.1 Block Diagram

Figure 20-1 shows the primary components inside the eQADC.

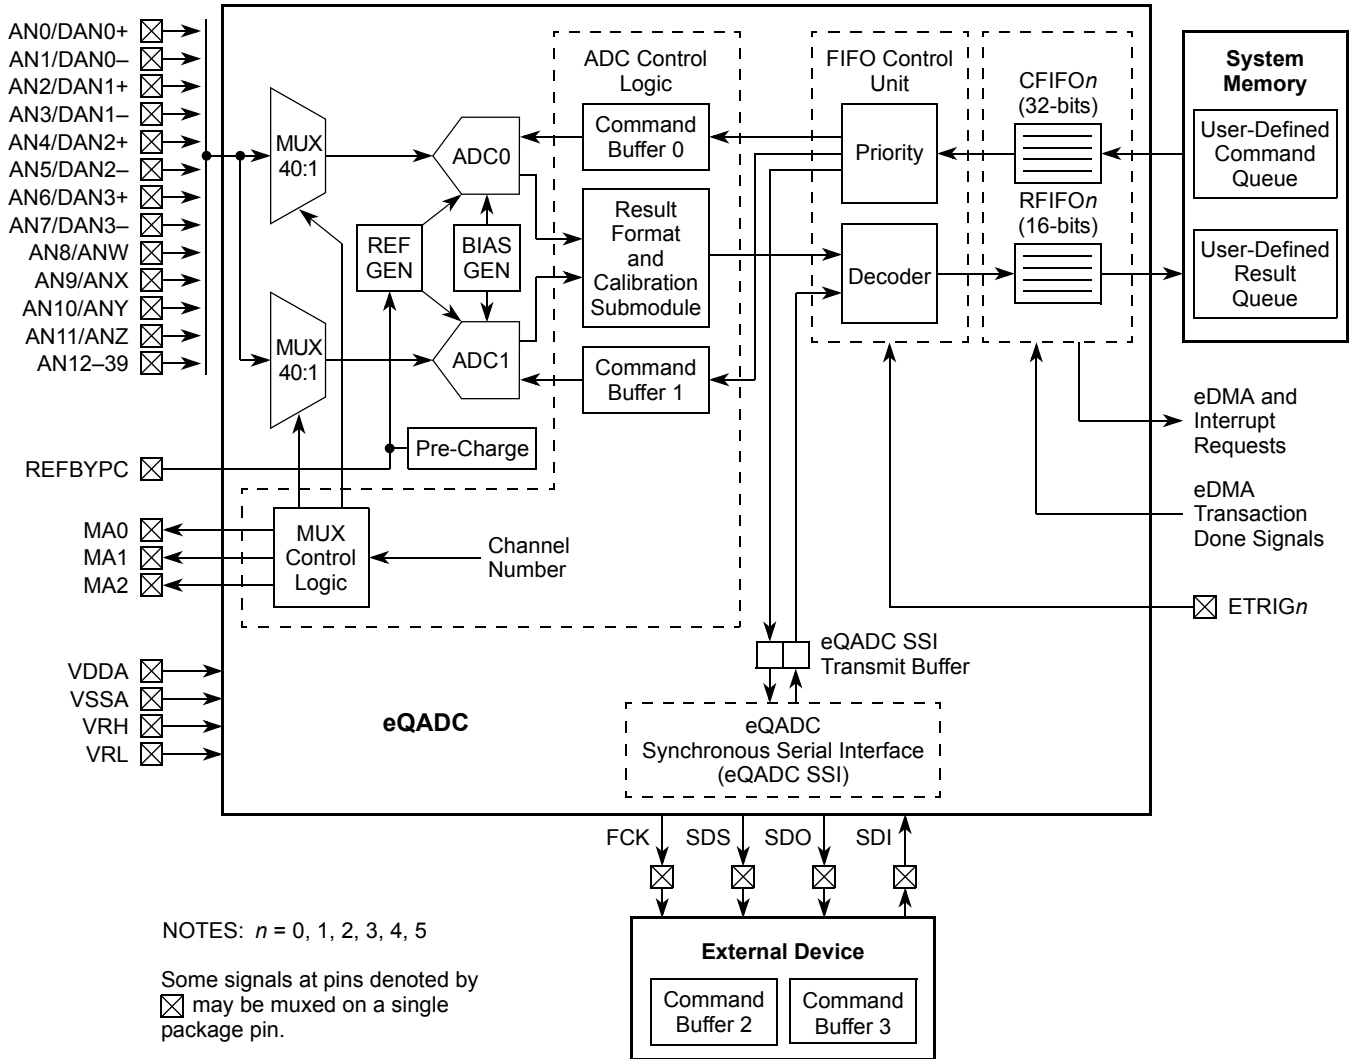


Figure 20-1. Simplified eQADC Block Diagram

20.1.2 Overview

The eQADC transfers commands from multiple command FIFOs (CFIFOs) to the on-chip ADCs or to the external device. The module can also in parallel (independently of the CFIFOs) receive data from the on-chip ADCs or from an off-chip external device into multiple result FIFOs (RFIFOs). The eQADC supports software and external hardware triggers from other modules to initiate transfers of commands from the CFIFOs to the on-chip ADCs or to the external device. (Refer to [Section 6.4.5.1, “eQADC External Trigger Input Multiplexing.”](#)) It also monitors the fullness of CFIFOs and RFIFOs, which may result in either underflow or overflow conditions. A CFIFO underflow occurs when the CFIFO is in the TRIGGERED state and it becomes empty. An RFIFO overflow occurs when an RFIFO is full and more data is ready to be moved to the RFIFO by the host CPU or by eDMA. Accordingly, the eQADC generates

eDMA or interrupt requests to control data movement between the FIFOs and the system memory, which is external to the eQADC.

The eQADC consists of the FIFO control unit which controls the CFIFOs and the RFIFOs, two ADCs with associated control logic, and the eQADC synchronous serial interface (eQADC SSI) which allows communication with an external device. There are 6 CFIFOs and 6 RFIFOs, each with 4 entries.

The FIFO control unit performs the following functions:

- Prioritizes the CFIFOs to determine what CFIFOs will have their commands transferred
- Supports software and hardware triggers to start command transfers from a particular CFIFO
- Decodes command data from the CFIFOs, and accordingly, sends these commands to one of the two on-chip ADCs or to the external device
- Decodes result data from on-chip ADCs or from the external device, and transfers data to the appropriate RFIFO

The ADC control logic manages the execution of commands bound for on-chip ADCs from the CFIFOs and with the RFIFOs via the result format and calibration submodule. The ADC control logic performs the following functions:

- Buffers command data for execution
- Decodes command data and accordingly generates control signals for the two on-chip ADCs
- Formats and calibrates conversion result data coming from the on-chip ADCs
- Generates the internal multiplexer control signals and the select signals used by the external multiplexers

The eQADC SSI allows for a full duplex, synchronous, serial communication between the eQADC and an external device.

[Figure 20-1](#) also depicts data flow through the eQADC. Commands are contained in system memory in a user-defined queue data structure. Command data is moved from the user-defined command queue to the CFIFOs by either the host CPU or by the eDMA. Once a CFIFO is triggered and becomes the highest priority, CFIFO command data is transferred from the CFIFO to the on chip ADCs, or to the external device. The ADC executes the command, and the result is moved through the result format and calibration submodule and to the RFIFO. The RFIFO target is specified by a field in the command that initiated the conversion. Data from the external device bypasses the result format and calibration submodule and is moved directly to its specified RFIFO. When data is stored in an RFIFO, data is moved from the RFIFO by the host CPU or by the eDMA to a data structure in system memory depicted in [Figure 20-1](#) as a user-defined result queue.

For users familiar with the QADC, the eQADC system upgrades the functionality provided by that module. Refer to [Section 20.5.7, “eQADC versus QADC,”](#) for a comparison between the eQADC and QADC.

20.1.3 Features

The eQADC includes these distinctive features:

- Two independent on-chip RSD cyclic ADCs
 - 12 Bit AD Resolution.
 - Targets up to 10 bit accuracy at 400 kilosamples per second (ADC_CLK=6MHz) and 8 bit accuracy at 800 kilosamples per second (ADC_CLK=12MHz) for differential conversions.
 - Differential conversions (range -2.5V to +2.5V).
 - Single-ended signal range from 0 to 5V.
 - Sample times of 2 (default), 8, 64, or 128 ADC clock cycles.
 - Provides sample time stamp information when requested.
 - Parallel interface to eQADC CFIFOs and RFIFOs.
 - Supports both right-justified unsigned and signed formats for conversion results.
- Optional automatic application of ADC calibration constants
 - Provision of reference voltages (25%VREF¹ and 75%VREF) for ADC calibration purposes
- 40 input channels available to the two on-chip ADCs
- Four pairs of differential analog input channels
- Full duplex synchronous serial interface to an external device
 - A free-running clock is provided for use by the external device.
 - Supports a 26-bit message length.
 - Transmits a null message when there are no triggered CFIFOs with commands bound for external command buffers, or when there are triggered CFIFOs with commands bound for external command buffers but the external command buffers are full.
- Priority-based CFIFOs
 - Supports six CFIFOs with fixed priority. The lower the CFIFO number, the higher its priority. When commands of distinct CFIFOs are bound for the same ADC, the higher priority CFIFO is always served first.
 - Supports software and several hardware trigger modes to arm a particular CFIFO.
 - Generates interrupt when command coherency is not achieved.
- External hardware triggers
 - Supports rising edge, falling edge, high level and low level triggers
 - Supports configurable digital filter
- Supports four external 8-to-1 muxes that can expand the input channel number from 40 to 68
- Upgrades the functionality provided by the QADC

¹. VREF=VRH-VRL.

20.1.4 Modes of Operation

This section describes the operating modes of the eQADC.

20.1.4.1 Normal Mode

This is the default operational mode when the eQADC is not in background debug or stop mode.

20.1.4.2 Debug Mode

Upon a debug mode entry request, eQADC behavior will vary according to the status of the DBG field in [Section 20.3.2.1, “eQADC Module Configuration Register \(EQADC_MCR\).”](#) If DBG is programmed to 0b00, the debug mode entry request is ignored. If DBG is programmed to 0b10 or to 0b11, the eQADC will enter debug mode. In case the eQADC SSI is enabled, the free running clock (FCK) output to external device will not stop when DBG is programmed to 0b11, but FCK will stop in low phase, when DBG is programmed to 0b10.

During debug mode, the eQADC will not transfer commands from any CFIFOs, no null messages will be transmitted to the external device, no data will be returned to any RFIFO, no hardware trigger event will be captured, and all eQADC registers can be accessed as in normal mode. Access to eQADC registers implies that CFIFOs can still be triggered using software triggers, because no scheme is implemented to write-protect registers during debug mode. eDMA and interrupt requests continue to be generated as in normal mode.

If at the time the debug mode entry request is detected, there are commands in the ADC that were already under execution, these commands will be completed but the generated results, if any, will not be sent to the RFIFOs until debug mode is exited. Commands whose execution has not started will not be executed until debug mode is exited. The clock associated with an on-chip ADC stops, during its low phase, after the ADC ceases executing commands. The time base counter will only stop after all on-chip ADCs cease executing commands.

When exiting debug mode, the eQADC relies on the FIFO control unit and on the CFIFO status to determine the next command entry to transfer.

The eQADC internal behavior after the debug mode entry request is detected differs depending on the status of command transfers.

- No command transfer is in progress.

The eQADC immediately halts future command transfers from any CFIFO.

If a null message is being transmitted, eQADC will complete the serial transmission before halting future command transfers. If valid data (conversion result or data read from an ADC register) is received by the result format and calibration submodule at the end of transmission, this data will not be sent to an RFIFO until debug mode is exited.

If the null message transmission is aborted, the eQADC will complete the abort procedure before halting future command transfers from any CFIFO. The message of the CFIFO that caused the abort of the previous serial transmission will only be transmitted after debug mode is exited.

- Command transfer is in progress.
eQADC will complete the transfer and update CFIFO status before halting future command transfers from any CFIFO.
Command transfers to the external device are considered completed when the serial transmission of the command is completed. If valid data (conversion result or data read from an ADC register) is received at the end of a serial transmission, it will not be sent to an RFIFO until debug mode is exited. The CFIFO status bits will still be updated after the completion of the serial transmission, therefore, after debug mode entry request is detected, the eQADC status bits will only stop changing several system clock cycles after the on-going serial transmission completes.
If the command message transmission is aborted, the eQADC will complete the abort procedure before halting future command transfers from any CFIFO. The message of the CFIFO that caused the abort of the previous serial transmission will only be transmitted after debug mode is exited.
- Command/null message transfer through serial interface was aborted but next serial transmission did not start.
If the debug mode entry request is detected between the time a previous serial transmission was aborted and the start of the next transmission, the eQADC will complete the abort procedure before halting future command transfers from any CFIFO. The message of the CFIFO that caused the abort of the previous serial transmission will only be transmitted after debug mode is exited.

20.1.4.3 Stop Mode

Upon a stop mode entry request detection, the eQADC progressively halts its operations until it reaches a static, stable state from which it can recover when returning to normal mode. The eQADC then asserts an acknowledge signal, indicating that it is static and that the clock input can be stopped. In stop mode, the free running clock (FCK) output to external device will stop during its low phase if the eQADC SSI is enabled, and no hardware trigger events will be captured. No capturing of hardware trigger events means that — as long as the system clock is running — CFIFOs can still be triggered using software triggers because no scheme is implemented to write-protect registers during stop mode.

If at the time the stop mode entry request is detected, there are commands in the ADC that were already under execution, these commands will be completed but the generated results, if any, will not be sent to the RFIFOs until stop mode is exited. Commands whose execution has not started will not be executed until stop mode is exited.

After these remaining commands are executed, the clock input to the ADCs is stopped. The time base counter will stop after all on-chip ADCs cease executing commands and then the stop acknowledge signal is asserted. When exiting stop mode, the eQADC relies on the CFIFO operation modes and on the CFIFO status to determine the next command entry to transfer.

The eQADC internal behavior after the stop mode entry request is detected differs depending on the status of the command transfer.

- No command transfer is in progress
The eQADC immediately halts future command transfers from any CFIFO.

If a null message is being transmitted, eQADC will complete the transmission before halting future command transfers. If valid data (conversion result or data read from an ADC register) is received at the end of the transmission, it will not be sent to an RFIFO until stop mode is exited.

If the null message transmission is aborted, the eQADC will complete the abort procedure before halting future command transfers from any CFIFO. The message of the CFIFO that caused the abort of the previous serial transmission will only be transmitted after stop mode is exited.

- Command transfer is in progress.

The eQADC will complete the transfer and update CFIFO status before halting future command transfers from any CFIFO.

Command transfers to the external device are considered completed when the serial transmission of the command is completed. If valid data (conversion result or data read from an ADC register) is received at the end of a serial transmission, it will not be sent to an RFIFO until stop mode is exited. The CFIFO status bits will still be updated after the completion of the serial transmission, therefore, after stop mode entry request is detected, the eQADC status bits will only stop changing several system clock cycles after the on-going serial transmission completes.

If the command message transmission is aborted, the eQADC will complete the abort procedure before halting future command transfers from any CFIFO. The message of the CFIFO that caused the abort of the previous serial transmission will only be transmitted after stop mode is exited.

- Command/null message transfer through serial interface was aborted but next serial transmission did not start.

If the stop mode entry request is detected between the time a previous serial transmission was aborted and the start of the next transmission, the eQADC will complete the abort procedure before halting future command transfers from any CFIFO. The message of the CFIFO that caused the abort of the previous serial transmission will only be transferred after stop mode is exited.

20.2 External Signal Description

These signals are external to the eQADC module, but may or may not be physical pins. See [Chapter 4](#), “[Signal Description](#),” for a complete list of all physical pins and signals.

Table 20-1. eQADC External Signals

Function	Description	I/O Type	Status During Reset ¹	Status After Reset ²	Type	Package
AN0 DAN0+	Single Ended Analog Input 0 Positive Terminal Differential Input	I	I / —	AN0 / —	Analog	496 416 324
AN1 DAN0-	Single Ended Analog Input 1 Negative Terminal Differential Input	I	I / —	AN1 / —	Analog	496 416 324
AN2 DAN1+	Single Ended Analog Input 2 Positive Terminal Differential Input	I	I / —	AN2 / —	Analog	496 416 324
AN3 DAN1-	Single Ended Analog Input 3 Negative Terminal Differential Input	I	I / —	AN3 / —	Analog	496 416 324
AN4 DAN2+	Single Ended Analog Input 4 Positive Terminal Differential Input	I	I / —	AN4 / —	Analog	496 416 324
AN5 DAN2-	Single Ended Analog Input 5 Negative Terminal Differential Input	I	I / —	AN5 / —	Analog	496 416 324
AN6 DAN3+	Single Ended Analog Input 6 Positive Terminal Differential Input	I	I / —	AN6 / —	Analog	496 416 324
AN7 DAN3-	Single Ended Analog Input 7 Negative Terminal Differential Input	I	I / —	AN7 / —	Analog	496 416 324
AN8 ANW	Single Ended Analog Input 8 External Multiplexed Analog Input W	I	I / —	AN8 / —	Analog	496 416 324
AN9 ANX	Single Ended Analog Input 9 External Multiplexed Analog Input X	I	I / —	AN9 / —	Analog	496 416 324

Table 20-1. eQADC External Signals (continued)

Function	Description	I/O Type	Status During Reset ¹	Status After Reset ²	Type	Package
AN10 ANY	Single Ended Analog Input 10 External Multiplexed Analog Input Y	I	I / —	AN10 / —	Analog	496 416 324
AN11 ANZ	Single Ended Analog Input 11 External Multiplexed Analog Input Z	I	I / —	AN11 / —	Analog	496 416 324
AN12 MA0 $\overline{\text{SDS}}$	Single Ended Analog Input 12 Mux Address 0 eQADC SSI Serial Data Select	I O O	I / —	AN12 / —	Analog/ Digital/ Digital	496 416 324
AN13 MA1 SDO	Single Ended Analog Input 13 Mux Address 1 eQADC SSI Serial Data Out	I O O	I / —	AN13 / —	Analog/ Digital/ Digital	496 416 324
AN14 MA2 SDI	Single Ended Analog Input 14 Mux Address 2 eQADC SSI Serial Data In	I O I	I / —	AN14 / —	Analog/ Digital/ Digital	496 416 324
AN15 FCK	Single Ended Analog Input 15 eQADC Free Running Clock	I O	I / —	AN15 / —	Analog/ Digital	496 416 324
AN16	Single Ended Analog Input 16	I	I / —	AN16 / —	Analog	496 416 324
AN[17:18]	Single Ended Analog Input 17-18	I	I / —	AN[17:19] / —	Analog	496 416 324
AN[19:20]	Single Ended Analog Input 19-20	I	I / —	AN[19:20] / —	Analog	496 416 324
AN21	Single Ended Analog Input	I	I / —	AN21 / —	Analog	496 416 324
AN[22:25]	Single Ended Analog Input	I	I / —	AN[22:25] / —	Analog	496 416 324

Table 20-1. eQADC External Signals (continued)

Function	Description	I/O Type	Status During Reset ¹	Status After Reset ²	Type	Package
AN26	Single Ended Analog Input	I	I / —	AN26/ —	Analog	496 416 324
AN[27:28]	Single Ended Analog Input	I	I / —	AN[27:28]/ —	Analog	496 416 324
AN29	Single Ended Analog Input	I	I / —	AN29/ —	Analog	496 416 324
AN[30:32]	Single Ended Analog Input	I	I / —	AN[30:32]/ —	Analog	496 416 324
AN33	Single Ended Analog Input	I	I / —	AN33 / —	Analog	496 416 324
AN[34:35]	Single Ended Analog Input	I	I / —	AN[34:35]/ —	Analog	496 416 324
AN36	Single Ended Analog Input	I	I / —	AN36 / —	Analog	496 416 324
AN[37:39]	Single Ended Analog Input 37-39	I	I / —	AN[37:39] / —	Analog	496 416 324
ETRIG0/ GPIO111	External trigger for CFIFO0, CFIFO2, and CFIFO4/ GPIO	I I/O	— / Up	— / Up	Digital	496 416
ETRIG1/ GPIO112	External trigger for CFIFO1, CFIFO3, and CFIFO5/ GPIO	I I/O	— / Up	— / Up	Digital	496 416
Power Supplies						
VRH	Voltage Reference High	I	— / —	VRH	Power	496 416 324

Table 20-1. eQADC External Signals (continued)

Function	Description	I/O Type	Status During Reset ¹	Status After Reset ²	Type	Package
VRL	Voltage Reference Low	I	— / —	VRL	Power	496 416 324
REFBYPC	Reference Bypass Capacitor Input	I	— / —	REFBYPC	Power	496 416 324
V _{DDA}	Analog Positive Power Supply	I	NA	V _{DDA}	Power	496 416 324
V _{SSA}	Analog Negative Power Supply	I	NA	V _{SSA}	Power	496 416 324

¹ Terminology is O — output, I — input, Up — weak pull up enabled, Down — weak pull down enabled, Low — output driven low, High — output driven high. A dash on the left side of the slash denotes that both the input and output buffers for the pin are off. A dash on the right side of the slash denotes that there is no weak pull up/down enabled on the pin. The signal name to the left or right of the slash indicates the pin is enabled.

² Function after reset of GPI is general-purpose input. A dash on the left side of the slash denotes that both the input and output buffers for the pin are off. A dash on the right side of the slash denotes that there is no weak pull up/down enabled on the pin.

20.3 Memory Map and Register Definition

This section provides memory maps and detailed descriptions of all registers. Data written to or read from reserved areas of the memory map is undefined.

20.3.1 eQADC Memory Map

This section provides memory maps for the eQADC.

Table 20-2. eQADC Memory Map

Address	Register Name	Register Description	Size (bits)
Base (0xFFFF8_0000)	EQADC_MCR	EQADC module configuration register	32
Base + 0x004	—	Reserved	—
Base + 0x008	EQADC_NMSFR	eQADC null message send format register	32
Base + 0x00C	EQADC_ETDFR	eQADC external trigger digital filter register	32
Base + 0x010	EQADC_CFPR0	eQADC command FIFO push register 0	32
Base + 0x014	EQADC_CFPR1	eQADC command FIFO push register 1	32

Table 20-2. eQADC Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x018	EQADC_CFPR2	eQADC command FIFO push register 2	32
Base + 0x01C	EQADC_CFPR3	eQADC command FIFO push register 3	32
Base + 0x020	EQADC_CFPR4	eQADC command FIFO push register 4	32
Base + 0x024	EQADC_CFPR5	eQADC command FIFO push register 5	32
Base + 0x028	—	Reserved	—
Base + 0x02C	—	Reserved	—
Base + 0x030	EQADC_RFPR0	eQADC result FIFO pop register 0	32
Base + 0x034	EQADC_RFPR1	eQADC result FIFO pop register 1	32
Base + 0x038	EQADC_RFPR2	eQADC result FIFO pop register 2	32
Base + 0x03C	EQADC_RFPR3	eQADC result FIFO pop register 3	32
Base + 0x040	EQADC_RFPR4	eQADC result FIFO pop register 4	32
Base + 0x044	EQADC_RFPR5	eQADC result FIFO pop register 5	32
Base + 0x048	—	Reserved	—
Base + 0x04C	—	Reserved	—
Base + 0x050	EQADC_CFCR0	eQADC command FIFO control register 0	16
Base + 0x052	EQADC_CFCR1	eQADC command FIFO control register 1	16
Base + 0x054	EQADC_CFCR2	eQADC command FIFO control register 2	16
Base + 0x056	EQADC_CFCR3	eQADC command FIFO control register 3	16
Base + 0x058	EQADC_CFCR4	eQADC command FIFO control register 4	16
Base + 0x05A	EQADC_CFCR5	eQADC command FIFO control register 5	16
Base + 0x05C	—	Reserved	—
Base + 0x060	EQADC_IDCR0	eQADC interrupt and eDMA control register 0	16
Base + 0x062	EQADC_IDCR1	eQADC interrupt and eDMA control register 1	16
Base + 0x064	EQADC_IDCR2	eQADC interrupt and eDMA control register 2	16
Base + 0x066	EQADC_IDCR3	eQADC interrupt and eDMA control register 3	16
Base + 0x068	EQADC_IDCR4	eQADC interrupt and eDMA control register 4	16
Base + 0x06A	EQADC_IDCR5	eQADC interrupt and eDMA control register 5	16
Base + 0x06C	—	Reserved	—
Base + 0x070	EQADC_FISR0	eQADC FIFO and interrupt status register 0	32
Base + 0x074	EQADC_FISR1	eQADC FIFO and interrupt status register 1	32
Base + 0x078	EQADC_FISR2	eQADC FIFO and interrupt status register 2	32
Base + 0x07C	EQADC_FISR3	eQADC FIFO and interrupt status register 3	32
Base + 0x080	EQADC_FISR4	eQADC FIFO and interrupt status register 4	32

Table 20-2. eQADC Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x084	EQADC_FISR5	eQADC FIFO and interrupt status register 5	32
Base + 0x088	—	Reserved	—
Base + 0x08C	—	Reserved	—
Base + 0x090	EQADC_CFTCR0	eQADC command FIFO transfer counter register 0	16
Base + 0x092	EQADC_CFTCR1	eQADC command FIFO transfer counter register 1	16
Base + 0x094	EQADC_CFTCR2	eQADC command FIFO transfer counter register 2	16
Base + 0x096	EQADC_CFTCR3	eQADC command FIFO transfer counter register 3	16
Base + 0x098	EQADC_CFTCR4	eQADC command FIFO transfer counter register 4	16
Base + 0x09A	EQADC_CFTCR5	eQADC command FIFO transfer counter register 5	16
Base + 0x09C	—	Reserved	—
Base + 0x0A0	EQADC_CFSSR0	eQADC command FIFO status snapshot register 0	32
Base + 0x0A4	EQADC_CFSSR1	eQADC command FIFO status snapshot register 1	32
Base + 0x0A8	EQADC_CFSSR2	eQADC command FIFO status snapshot register 2	32
Base + 0x0AC	EQADC_CFSR	eQADC command FIFO status register	32
Base + 0x0B0	—	Reserved	—
Base + 0x0B4	EQADC_SSICR	eQADC synchronous serial interface control register	32
Base + 0x0B8	EQADC_SSIRDR	eQADC synchronous serial interface receive data register	32
Base + 0x0BC– Base + 0x0FC	—	Reserved	—
Base + 0x100– Base + 0x10C	EQADC_CF0R n	eQADC CFIFO0 registers 0–3	32
Base + 0x110– Base + 0x13C	—	Reserved	—
Base + 0x140– Base + 0x14C	EQADC_CF1R n	eQADC CFIFO1 registers 0–3	32
Base + 0x150– Base + 0x17C	—	Reserved	—
Base + 0x180– Base + 0x18C	EQADC_CF2R n	eQADC CFIFO2 registers 0–3	32
Base + 0x190– Base + 0x1BC	—	Reserved	—
Base + 0x1C0– Base + 0x1CC	EQADC_CF3R n	eQADC CFIFO3 registers 0–3	32
Base + 0x1D0– Base + 0x1FC	—	Reserved	—

Table 20-2. eQADC Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x200– Base + 0x20C	EQADC_CF4Rn	eQADC CFIFO4 registers 0–3	32
Base + 0x210– Base + 0x23C	—	Reserved	—
Base + 0x240– Base + 0x24C	EQADC_CF5Rn	eQADC CFIFO5 registers 0–3	32
Base + 0x250– Base + 0x2FC	—	Reserved	—
Base + 0x300– Base + 0x30C	EQADC_RF0Rn	eQADC RFIFO0 registers 0–3	32
Base + 0x310– Base + 0x33C	—	Reserved	—
Base + 0x340– Base + 0x34C	EQADC_RF1Rn	eQADC RFIFO1 registers 0–3	32
Base + 0x350– Base + 0x37C	—	Reserved	—
Base + 0x380– Base + 0x38C	EQADC_RF2Rn	eQADC RFIFO2 registers 0–3	32
Base + 0x390– Base + 0x3BC	—	Reserved	—
Base + 0x3C0– Base + 0x3CC	EQADC_RF3Rn	eQADC RFIFO3 registers 0–3	32
Base + 0x3D0– Base + 0x3FC	—	Reserved	—
Base + 0x400– Base + 0x40C	EQADC_RF4Rn	eQADC RFIFO4 registers 0–3	32
Base + 0x410– Base + 0x43C	—	Reserved	—
Base + 0x440– Base + 0x44C	EQADC_RF5Rn	eQADC RFIFO5 registers 0–3	32
Base + 0x450– Base + 0x7FC	—	Reserved	—

20.3.2 eQADC Register Descriptions

20.3.2.1 eQADC Module Configuration Register (EQADC_MCR)

The EQADC_MCR contains bits used to control how the eQADC responds to a debug mode entry request, and to enable the eQADC SSI interface.

Address: Base+ 0x000

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	
R	0	0	0	0	0	0	0	0	0	0	0		ESSIE		0	DBG	
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

Figure 20-2. eQADC Module Configuration Register (EQADC_MCR)

Table 20-3. EQADC_MCR Field Descriptions

Field	Description
0–26	Reserved.
27–28 ESSIE [0:1]	eQADC synchronous serial interface enable. Defines the eQADC synchronous serial interface operation. 00 eQADC SSI is disabled 01 Reserved 10 eQADC SSI is enabled, FCK is free running, and serial transmissions are disabled 11 eQADC SSI is enabled, FCK is free running, and serial transmissions are enabled
29	Reserved.
30–31 DBG [0:1]	Debug enable. Defines the eQADC response to a debug mode entry request. 00 Do not enter debug mode 01 Reserved 10 Enter debug mode. If the eQADC SSI is enabled, FCK stops while the eQADC is in debug mode. 11 Enter debug mode. If the eQADC SSI is enabled, FCK is free running while the eQADC is in debug mode

NOTE

Disabling the eQADC SSI (0b00 write to ESSIE) or serial transmissions from the eQADC SSI (0b10 write to ESSIE) while a serial transmission is in progress results in the abort of that transmission.

NOTE

When disabling the eQADC SSI, the FCK will not stop until it reaches its low phase.

20.3.2.2 eQADC Null Message Send Format Register (EQADC_NMSFR)

The EQADC_NMSFR defines the format of the null message sent to the external device.

Address: Base + 0x008

Access: Read/Write

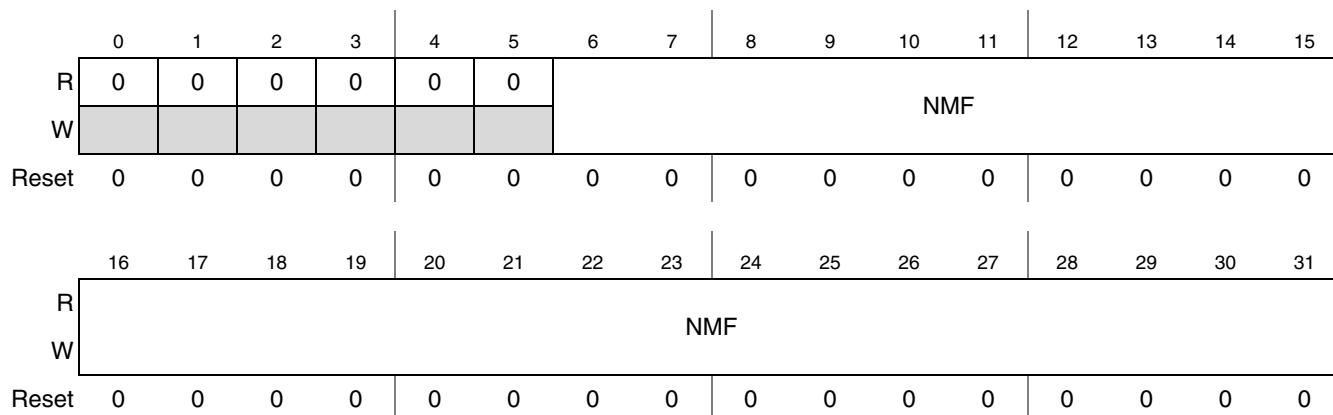


Figure 20-3. eQADC Null Message Send Format Register (EQADC_NMSFR)

Table 20-4. EQADC_NMSFR Field Descriptions

Field	Description
0–5	Reserved.
6–31 NMF [0:25]	<p>Null message format. Contains the programmable null message send value for the eQADC. The value written to this register will be sent as a null message when serial transmissions from the eQADC SSI are enabled (ESSIE field is configured to 0b11 in EQADC_MCR (Section 20.3.2.1, “eQADC Module Configuration Register (EQADC_MCR)”) and either</p> <ul style="list-style-type: none"> there are no triggered CFIFOs with commands bound for external command buffers, or; there are triggered CFIFOs with commands bound for external command buffers but the external command buffers are full. <p>Refer to Section , “Null Message Format for External Device Operation” for more information on the format of a null message.</p>

NOTE

The eQADC null message send format register only affects how the eQADC sends a null message, but it has no control on how the eQADC detects a null message on receiving data. The eQADC detects a null message by decoding the MESSAGE_TAG field on the receive data. Refer to Table 20-34 for more information on the MESSAGE_TAG field.

NOTE

Writing to the eQADC null message send format register while serial transmissions are enabled is not recommended (See EQADC_MCR[ESSIE] field in Section 20.3.2.1, “eQADC Module Configuration Register (EQADC_MCR)”).

20.3.2.3 eQADC External Trigger Digital Filter Register (EQADC_ETDFR)

The EQADC_ETDFR is used to set the minimum time a signal must be held in a logic state on the CFIFO triggers inputs to be recognized as an edge or level gated trigger. The digital filter length field specifies the

minimum number of system clocks that must be counted by the digital filter counter to recognize a logic state change.

Address: Base + 0x00C

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	DFL			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 20-4. eQADC External Trigger Digital Filter Register (EQADC_ETDFR)

Table 20-5. EQADC_ETDFR Field Description Table

Field	Description
0–27	Reserved.
28–31 DFL[0:3]	<p>Digital filter length. Specifies the minimum number of system clocks that must be counted by the digital filter counter to recognize a logic state change. The count specifies the sample period of the digital filter which is calculated according to the following equation:</p> $\text{FilterPeriod} = (\text{SystemClockPeriod} \times 2^{\text{DFL}}) + 1(\text{SystemClockPeriod})$ <p>Minimum clock counts for which an ETRIG signal needs to be stable to be passed through the filter are shown in Table 20-6. Refer to Section 20.4.3.4, “External Trigger Event Detection,” for more information on the digital filter.</p> <p>Note: The DFL field must only be written when the MODEN of all CFIFOs are configured to disabled.</p>

Table 20-6. Minimum Required Time to Valid ETRIG

DFL[0:3]	Minimum Clock Count	Minimum Time (ns) (System Clock = 120MHz)
0b0000	2	16.67
0b0001	3	25.00
0b0010	5	41.67
0b0011	9	75.00
0b0100	17	141.67
0b0101	33	275.00
0b0110	65	541.67
0b0111	129	1075.00
0b1000	257	2141.67
0b1001	513	4275.00
0b1010	1025	8541.67

Table 20-6. Minimum Required Time to Valid ETRIG (continued)

DFL[0:3]	Minimum Clock Count	Minimum Time (ns) (System Clock = 120MHz)
0b1011	2049	17075.00
0b1100	4097	34141.67
0b1101	8193	68275.00
0b1110	16385	136541.67
0b1111	32769	273075.00

20.3.2.4 eQADC CFIFO Push Registers 0–5 (EQADC_CFPR n)

The EQADC_CFPRs provide a mechanism to fill the CFIFOs with command messages from the command queues. Refer to [Section 20.4.3, “eQADC Command FIFOs,”](#) for more information on the CFIFOs and to [Section 20.4.1.2, “Message Format in eQADC,”](#) for a description on command message formats.

Address: Base + 0x010 (EQADC_CFPR0)
 Base + 0x014 (EQADC_CFPR1);
 Base + 0x018 (EQADC_CFPR2)
 Base + 0x01C (EQADC_CFPR3)
 Base + 0x020 (EQADC_CFPR4)
 Base + 0x024 (EQADC_CFPR5)

Access: Write

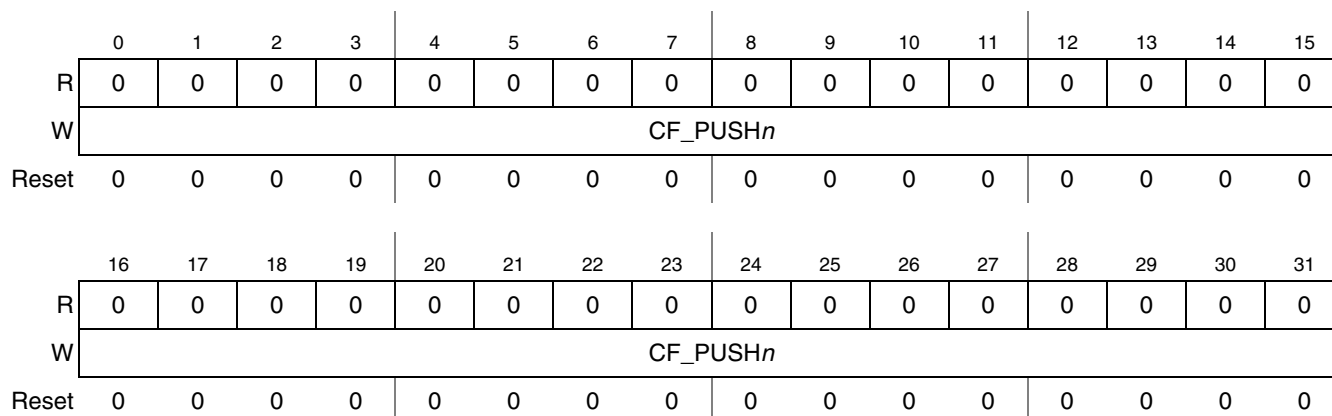


Figure 20-5. eQADC CFIFO Push Registers 0–5 (EQADC_CFPR n)

Table 20-7. EQADC_CFPR n Field Descriptions

Field	Description
0–31 CF_PUSH n [0:31]	CFIFO push data n . When CFIFO n is not full, writing to the whole word or any bytes of EQADC_CFPR n will push the 32-bit CF_PUSH n value into CFIFO n . Writing to the CF_PUSH n field also increments the corresponding CFCTR n value by one in Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)” . When the CFIFO n is full, the eQADC ignores any write to the CF_PUSH n . Reading the EQADC_CFPR n always returns 0. Note: Only whole words must be written to EQADC_CFPR. Writing half-words or bytes to EQADC_CFPR will still push the whole 32-bit CF_PUSH field into the corresponding CFIFO, but undefined data will fill the areas of CF_PUSH that were not specifically designated as target locations for the write.

20.3.2.5 eQADC Result FIFO Pop Registers 0–5 (EQADC_RFPR n)

The eQADC_RFPRs provide a mechanism to retrieve data from RFIFOs.

NOTE

The EQADC_RFPR n must not be read speculatively. For future compatibility, the TLB entry covering the EQADC_RFPR n must be configured to be guarded.

Address: Base + 0x030 (EQADC_RFPR0)
 Base + 0x034 (EQADC_RFPR1)
 Base + 0x038 (EQADC_RFPR2)
 Base + 0x03C (EQADC_RFPR3)
 Base + 0x040 (EQADC_RFPR4)
 Base + 0x044 (EQADC_RFPR5)

Access: Read

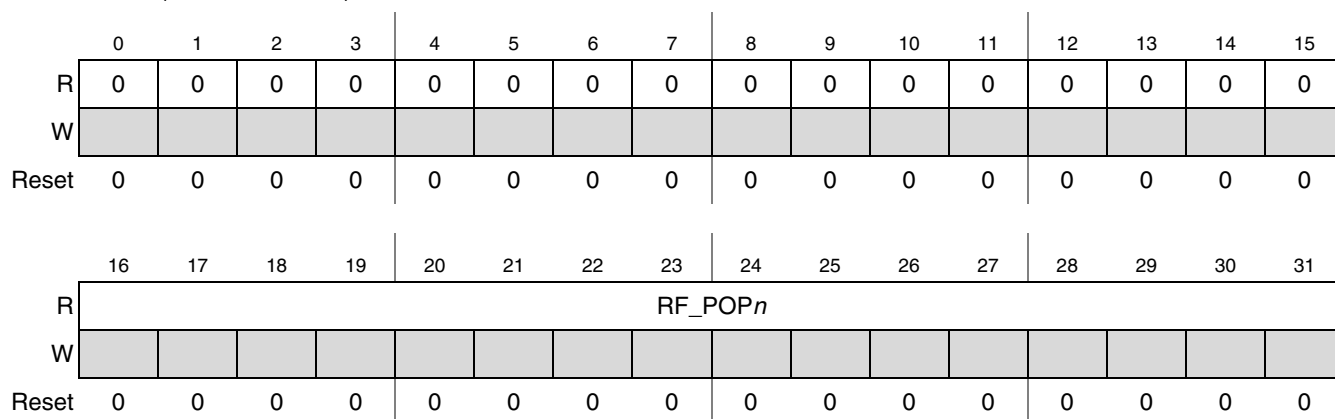


Figure 20-6. eQADC RFIFO Pop Registers 0–5 (EQADC_RFPR n)

Table 20-8. EQADC_RFPR n Field Descriptions

Field	Description
0–15	Reserved.
16–31 RF_POP n [0:15]	Result FIFO pop data n . When RFIFO n is not empty, the RF_POP n contains the next unread entry value of RFIFO n . Reading the whole word, a half-word, or any bytes of EQADC_RFPR n will pop one entry from RFIFO n , and the corresponding RFCTR n value will be decremented by 1 (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR n).” When the RFIFO n is empty, any read on EQADC_RFPR n returns undefined data value and does not decrement the RFCTR n value. Writing to EQADC_RFPR n has no effect.

20.3.2.6 eQADC CFIFO Control Registers 0–5 (EQADC_CFCR n)

The eQADC_CFCRs contain bits that affect CFIFOs. These bits specify the CFIFO operation mode and can invalidate all of the CFIFO contents.

Address: EQADC_BASE + 0x050 (EQADC_CFCR0)
 EQADC_BASE + 0x052 (EQADC_CFCR1)
 EQADC_BASE + 0x054 (EQADC_CFCR2)
 EQADC_BASE + 0x056 (EQADC_CFCR3)
 EQADC_BASE + 0x058 (EQADC_CFCR4);
 EQADC_BASE + 0x05A (EQADC_CFCR5)

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	MODE _n				0	0	0	0
W						SSE _n	CFINV _n									
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 20-7. eQADC CFIFO Control Registers (EQADC_CFCR_n)

Table 20-9. EQADC_CFCR_n Field Descriptions

Field	Description
0–4	Reserved.
5 SSE _n	CFIFO single-scan enable bit <i>n</i> . Used to set the SSS _n bit, as described in Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR_n)” . Writing a 1 to SSE _n will set the SSS _n if the CFIFO is in single-scan mode. When SSS _n is already asserted, writing a 1 to SSE _n has no effect. If the CFIFO is in continuous-scan mode or is disabled, writing a 1 to SSE _n will not set SSS _n . Writing a 0 to SSE _n has no effect. SSE _n always is read as 0. 0 No effect. 1 Set the SSS _n bit.
6 CFINV _n	CFIFO invalidate bit <i>n</i> . Causes the eQADC to invalidate all entries of CFIFO _n . Writing a 1 to CFINV _n will reset the value of CFCTR _n in the EQADC_FISR register (refer to Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR_n)”). Writing a 1 to CFINV _n also resets the push next data pointer, transfer next data pointer to the first entry of CFIFO _n in Figure 20-35 . CFINV _n always is read as 0. Writing a 0 has no effect. 0 No effect. 1 Invalidate all of the entries in the corresponding CFIFO. Note: Writing CFINV _n only invalidates commands stored in CFIFO _n ; previously transferred commands that are waiting for execution, that is commands stored in the ADC command buffers, will still be executed, and results generated by them will be stored in the appropriate RFIFO. Note: CFINV _n must not be written unless the MODE _n is configured to disabled, and CFIFO status is IDLE.
7	Reserved.
8–11 MODE _n [0:3]	CFIFO operation mode <i>n</i> . Selects the CFIFO operation mode for CFIFO _n . Refer to Section 20.4.3.5, “CFIFO Scan Trigger Modes,” for more information on CFIFO trigger mode. Note: If MODE _n is not disabled, it must not be changed to any other mode besides disabled. If MODE _n is disabled and the CFIFO status is IDLE, MODE _n can be changed to any other mode.
12–15	Reserved.

Table 20-10. CFIFO Operation Mode Table

MODE _n [0:3]	CFIFO Operation Mode
0b0000	Disabled
0b0001	Software trigger, single scan
0b0010	Low level gated external trigger, single scan
0b0011	High level gated external trigger, single scan

Table 20-10. CFIFO Operation Mode Table (continued)

MODE n [0:3]	CFIFO Operation Mode
0b0100	Falling edge external trigger, single scan
0b0101	Rising edge external trigger, single scan
0b0110	Falling or rising edge external trigger, single scan
0b0111–0b1000	Reserved
0b1001	Software trigger, continuous scan
0b1010	Low level gated external trigger, continuous scan
0b1011	High level gated external trigger, continuous scan
0b1100	Falling edge external trigger, continuous scan
0b1101	Rising edge external trigger, continuous scan
0b1110	Falling or rising edge external trigger, continuous scan
0b1111	Reserved

20.3.2.7 eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCR n)

The eQADC_IDCRs contain bits to enable the generation of interrupt or eDMA requests when the corresponding flag bits are set in EQADC_FISR n (Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR n)”).

Address: EQADC_BASE + 0x060 (EQADC_IDCR0)

Access: Read/Write

EQADC_BASE + 0x062 (EQADC_IDCR1)

EQADC_BASE + 0x064 (EQADC_IDCR2)

EQADC_BASE + 0x066 (EQADC_IDCR3)

EQADC_BASE + 0x068 (EQADC_IDCR4)

EQADC_BASE + 0x06A (EQADC_IDCR5)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	NCI	TORI	PIE n	EOQI	CFUI	0	CFF	CFF	0	0	0	0	RFOI	0	RFD	RFD
W	En	En		En	En		En	S n					En		En	S n
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 20-8. eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCR n)

Table 20-11. EQADC_IDCR n Field Descriptions

Field	Description
0 NCIE n	<p>Non-coherency interrupt enable n. Enables the eQADC to generate an interrupt request when the corresponding NCFn, described in Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”, is asserted.</p> <p>0 Disable non-coherency interrupt request 1 Enable non-coherency interrupt request</p>
1 TORIE n	<p>Trigger overrun interrupt enable n. Enables the eQADC to generate an interrupt request when the corresponding TORFn (described in Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>Apart from generating an independent interrupt request for a CFIFOn trigger overrun event, the eQADC also provides a combined interrupt at which the result FIFO overflow interrupt, the command FIFO underflow interrupt, and the command FIFO trigger overrun interrupt requests of all CFIFOs are ORed. When RFOIEn, CFUIEn, and TORIEn are all asserted, this combined interrupt request is asserted whenever one of the following 18 flags becomes asserted: RFOFn, CFUFn, and TORFn (assuming that all interrupts are enabled). See Section 20.4.7, “eQADC eDMA/Interrupt Request,” for details.</p> <p>0 Disable trigger overrun interrupt request 1 Enable trigger overrun interrupt request</p>
2 PIE n	<p>Pause interrupt enable n. Enables the eQADC to generate an interrupt request when the corresponding PFx in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>0 Disable pause interrupt request 1 Enable pause interrupt request</p>
3 EOQIE n	<p>End-of-queue interrupt enable n. Enables the eQADC to generate an interrupt request when the corresponding EOQFn in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>0 Disable end of queue interrupt request. 1 Enable end of queue interrupt request.</p>
4 CFUIE n	<p>CFIFO underflow interrupt enable n. Enables the eQADC to generate an interrupt request when the corresponding CFUFn in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>Apart from generating an independent interrupt request for a CFIFOn underflow event, the eQADC also provides a combined interrupt at which the result FIFO overflow interrupt, the command FIFO underflow interrupt, and the command FIFO trigger overrun interrupt requests of all CFIFOs are ORed. When RFOIEn, CFUIEn, and TORIEn are all asserted, this combined interrupt request is asserted whenever one of the following 18 flags becomes asserted: RFOFn, CFUFn, and TORFn (assuming that all interrupts are enabled). See Section 20.4.7, “eQADC eDMA/Interrupt Request,” for details.</p> <p>0 Disable underflow interrupt request 1 Enable underflow interrupt request</p>
5	Reserved.
6 CFFE n	<p>CFIFO fill enable n. Enables the eQADC to generate an interrupt request (CFFSn is asserted) or eDMA request (CFFSn is negated) when CFFFn in EQADC_FISRn (Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>0 Disable CFIFO fill eDMA or interrupt request 1 Enable CFIFO fill eDMA or interrupt request</p> <p>Note: CFFEn must not be negated while an eDMA transaction is in progress.</p>

Table 20-11. EQADC_IDCR n Field Descriptions (continued)

Field	Description
7 CFFS n	<p>CFIFO fill select n. Selects if an eDMA or interrupt request is generated when CFFFn in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted. If CFFEn is asserted, the eQADC generates an interrupt request when CFFSn is negated, or it generates an eDMA request if CFFSn is asserted.</p> <p>0 Generate interrupt request to move data from the system memory to CFIFOn. 1 Generate eDMA request to move data from the system memory to CFIFOn.</p> <p>Note: CFFSn must not be negated while an eDMA transaction is in progress.</p>
8–11	Reserved.
12 RFOIE n	<p>RFIFO overflow interrupt enable n. Enables the eQADC to generate an interrupt request when the corresponding RFOFn in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>Apart from generating an independent interrupt request for an RFIFOn overflow event, the eQADC also provides a combined interrupt at which the result FIFO overflow Interrupt, the command FIFO underflow interrupt, and the command FIFO trigger overrun interrupt requests of all CFIFOs are ORed. When RFOIEn, CFUIEn, and TORIEn are all asserted, this combined interrupt request is asserted whenever one of the following 18 flags becomes asserted: RFOFn, CFUFn, and TORFn (assuming that all interrupts are enabled). See Section 20.4.7, “eQADC eDMA/Interrupt Request,” for details.</p> <p>0 Disable overflow interrupt request 1 Enable overflow Interrupt request</p>
13	Reserved.
14 RFDE n	<p>RFIFO drain enable n. Enables the eQADC to generate an interrupt request (RFDSn is asserted) or eDMA request (RFDSn is negated) when RFDFn in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted.</p> <p>0 Disable RFIFO drain eDMA or interrupt request 1 Enable RFIFO drain eDMA or interrupt request</p> <p>Note: RFDEn must not be negated while an eDMA transaction is in progress.</p>
15 RFDS n	<p>RFIFO drain select n. Selects if an eDMA or interrupt request is generated when RFDFn in EQADC_FISRn (See Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted. If RFDEn is asserted, the eQADC generates an interrupt request when RFDSn is negated, or it generates an eDMA request when RFDSn is asserted.</p> <p>0 Generate interrupt request to move data from RFIFn to the system memory 1 Generate eDMA request to move data from RFIFOn to the system memory</p> <p>Note: RFDSn must not be negated while an eDMA transaction is in progress.</p>

20.3.2.8 eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR n)

The EQADC_FISRs contain flag and status bits for each CFIFO and RFIFO pair. Writing 1 to a flag bit clears it. Writing 0 has no effect. Status bits are read only. These bits indicate the status of the FIFO itself.

Enhanced Queued Analog-to-Digital Converter (eQADC)

Address: Base + 0x070 (EQADC_FISR0)

Access: Read/Write to clear

Base + 0x074 (EQADC_FISR1)

Base + 0x078 (EQADC_FISR2)

Base + 0x07C (EQADC_FISR3)

Base + 0x080 (EQADC_FISR4)

Base + 0x084 (EQADC_FISR5)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	NCF _n	TORF _n	PF _n	EOQF _n	CFUF _n	SSS _n	CFFF _n	0	0	0	0	0	RFOF _n	0	RFDF _n	0
W	w1c	w1c	w1c	w1c	w1c		w1c						w1c		w1c	
Reset	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	CFCTR _n				TNXTPTR _n				RFCTR _n				POPXTPTR _n			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 20-9. eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR_n)

Table 20-12. EQADC_FISR_n Field Descriptions

Field	Description
0 NCF _n	<p>Non-coherency flag <i>n</i>. NCF_n is set whenever a command sequence being transferred through CFIFO_n becomes non-coherent. If NCIE_n in EQADC_IDCR_n (See Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCR_n)”) and NCF_n are asserted, an interrupt request will be generated. Writing a 1 clears NCF_n. Writing a 0 has no effect. More for information on non-coherency refer to Section 20.4.3.6.5, “Command Sequence Non-Coherency Detection.”</p> <p>0 Command sequence being transferred by CFIFO_n is coherent 1 Command sequence being transferred by CFIFO_n became non-coherent</p> <p>Note: Non-coherency means that a command in the command FIFO was not immediately executed, but delayed. This may occur if the command is pre-empted, where a higher priority queue is triggered and has a competing conversion command for the same converter.</p>
1 TORF _n	<p>Trigger overrun flag for CFIFO <i>n</i>. TORF_n is set when trigger overrun occurs for the specified CFIFO in edge or level trigger mode. Trigger overrun occurs when an already triggered CFIFO receives an additional trigger. When EQADC_IDCR_n[TORIE_n] is set (See Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCR_n)”) and TORF_n are asserted, an interrupt request will be generated.</p> <p>Apart from generating an independent interrupt request for a CFIFO_n trigger overrun event, the eQADC also provides a combined interrupt at which the result FIFO overflow interrupt, the command FIFO underflow interrupt, and the command FIFO trigger overrun Interrupt requests of all CFIFOs are ORed. When RFOIE_n, CFUIE_n, and TORIE_n are all asserted, this combined interrupt request is asserted whenever one of the following 18 flags becomes asserted: RFOF_n, CFUF_n, and TORF_n (assuming that all interrupts are enabled). See Section 20.4.7, “eQADC eDMA/Interrupt Request,” for details.</p> <p>Write 1 to clear the TORF_n bit. Writing 0 has no effect.</p> <p>0 No trigger overrun occurred 1 Trigger overrun occurred</p> <p>Note: The trigger overrun flag will not set for CFIFOs configured for software trigger mode.</p>

Table 20-12. EQADC_FISR n Field Descriptions (continued)

Field	Description
2 PF n	<p>Pause flag n. PF behavior changes according to the CFIFO trigger mode.</p> <ul style="list-style-type: none"> In edge trigger mode, PFn is set when the eQADC completes the transfer of an entry with an asserted pause bit from CFIFOn. In level trigger mode, when CFIFOn is in the TRIGGERED state, PFn is set when CFIFO status changes from TRIGGERED due to the detection of a closed gate. <p>An interrupt routine, generated due to the asserted PF, can be used to verify if a complete scan of the user-defined command queue was performed. If a closed gate is detected while no command transfers are taking place, it will have immediate effect on the CFIFO status. If a closed gate is detected while a command transfer to an on-chip ADC is taking place, it will only affect the CFIFO status when the transfer completes. If a closed gate is detected during the serial transmission of a command to the external device, it will have no effect on the CFIFO status until the transmission completes.</p> <p>The transfer of entries bound for the on-chip ADCs is considered completed when they are stored in the appropriate ADC command buffer. The transfer of entries bound for the external device is considered completed when the serial transmission of the entry is completed. In software trigger mode, PFn will never become asserted.</p> <p>If PIEn (See Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn)”) and PFn are asserted, an interrupt will be generated. Writing a 1 clears the PFn. Writing a 0 has no effect. Refer to Section 20.4.3.6.3, “Pause Status,” for more information on pause flag.</p> <p>0 Entry with asserted pause bit was not transferred from CFIFOn (CFIFO in edge trigger mode), or CFIFO status did not change from the TRIGGERED state due to detection of a closed gate (CFIFO in level trigger mode).</p> <p>1 Entry with asserted pause bit was transferred from CFIFOn (CFIFO in edge trigger mode), or CFIFO status changes from the TRIGGERED state due to detection of a closed gate (CFIFO in level trigger mode).</p> <p>Note: In edge trigger mode, an asserted PFn only implies that the eQADC has finished transferring a command with an asserted pause bit from CFIFOn. It does not imply that result data for the current command and for all previously transferred commands has been returned to the appropriate RFIFO.</p> <p>Note: In software or level trigger mode, when the eQADC completes the transfer of an entry from CFIFOn with an asserted pause bit, PFn will not be set and transfer of commands will continue without pausing.</p>
3 EOQF n	<p>End-of-queue flag n. Indicates that an entry with an asserted EOQ bit was transferred from CFIFOn to the on-chip ADCs or to the external device. See Section 20.4.1.2, “Message Format in eQADC,” for details about command message formats. When the eQADC completes the transfer of an entry with an asserted EOQ bit from CFIFOn, EOQFn will be set. The transfer of entries bound for the on-chip ADCs is considered completed when they are stored in the appropriate command buffer. The transfer of entries bound for the external device is considered completed when the serial transmission of the entry is completed. If the EOQIEn bit (See Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn)”) and EOQFn are asserted, an interrupt will be generated. Writing a 1 clears the EOQFn bit. Writing a 0 has no effect. Refer to Section 20.4.3.6.2, “Command Queue Completion Status,” for more information on end-of-queue flag.</p> <p>0 Entry with asserted EOQ bit was not transferred from CFIFOn</p> <p>1 Entry with asserted EOQ bit was transferred from CFIFOn</p> <p>Note: An asserted EOQFn only implies that the eQADC has finished transferring a command with an asserted EOQ bit from CFIFOn. It does not imply that result data for the current command and for all previously transferred commands has been returned to the appropriate RFIFO.</p>

Table 20-12. EQADC_FISR n Field Descriptions (continued)

Field	Description
4 CFUF n	<p>CFIFO underflow flag n. Indicates an underflow event on CFIFOn. CFUFn is set when CFIFOn is in the TRIGGERED state and it becomes empty. No commands will be transferred from an underflowing CFIFO, nor will command transfers from lower priority CFIFOs be blocked. When CFUIEn (see Section Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn)”) and CFUFn are both asserted, the eQADC generates an interrupt request.</p> <p>Apart from generating an independent interrupt request for a CFIFOn underflow event, the eQADC also provides a combined interrupt at which the result FIFO overflow interrupt, the command FIFO underflow interrupt, and the command FIFO trigger overrun interrupt requests of all CFIFOs are ORed. When RFOIEn, CFUIEn, and TORIEn are all asserted, this combined interrupt request is asserted whenever one of the following 18 flags becomes asserted: RFOFn, CFUFn, and TORFn (assuming that all interrupts are enabled). See Section 20.4.7, “eQADC eDMA/Interrupt Request,” for details. Writing a 1 clears CFUFn. Writing a 0 has no effect.</p> <p>0 No CFIFO underflow event occurred 1 A CFIFO underflow event occurred</p>
5 SSS n	<p>CFIFO single-scan status bit n. When asserted, enables the detection of trigger events for CFIFOs programmed into single-scan level- or edge-trigger mode, and works as trigger for CFIFOs programmed into single-scan software-trigger mode. Refer to Section 20.4.3.5.2, “Single-Scan Mode,” for further details. The SSSn bit is set by writing a 1 to the SSEn bit (see Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn)”). The eQADC clears the SSSn bit when a command with an asserted EOQ bit is transferred from a CFIFO in single-scan mode, when a CFIFO is in single-scan level-trigger mode and its status changes from the TRIGGERED state due to the detection of a closed gate, or when the value of the CFIFO operation mode MODEn (see Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn)”) is changed to disabled. Writing to SSSn has no effect. SSSn has no effect in continuous-scan or in disabled mode.</p> <p>0 CFIFO in single-scan level- or edge-trigger mode will ignore trigger events, or CFIFO in single-scan software-trigger mode is not triggered. 1 CFIFO in single-scan level- or edge-trigger mode will detect a trigger event, or CFIFO in single-scan software-trigger mode is triggered.</p>
6 CFFF n	<p>CFIFO fill flag n. CFFFn is set when the CFIFOn is not full. When CFFEn (see Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn)”) and CFFFn are both asserted, an interrupt or an eDMA request will be generated depending on the status of the CFFSn bit. When CFFSn is negated (interrupt requests selected), software clears CFFFn by writing a 1 to it. Writing a 0 has no effect. When CFFSn is asserted (eDMA requests selected), CFFFn is automatically cleared by the eQADC when the CFIFO becomes full.</p> <p>0 CFIFOn is full. 1 CFIFOn is not full.</p> <p>Note: When generation of interrupt requests is selected (CFFSn=0), CFFFn must only be cleared in the ISR after the CFIFOn push register is accessed. Note: CFFFn should not be cleared when CFFSn is asserted (eDMA requests selected).</p>
7–11	Reserved.

Table 20-12. EQADC_FISR n Field Descriptions (continued)

Field	Description
12 RFOF n	<p>RFIFO overflow flag n. Indicates an overflow event on RFIFOn. RFOFn is set when RFIFOn is already full, and a new data is received from the on-chip ADCs or from the external device. The RFIFOn will not overwrite older data in the RFIFO, and the new data will be ignored. When RFOIEn (see Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn)”) and RFOFn are both asserted, the eQADC generates an interrupt request.</p> <p>Apart from generating an independent interrupt request for an RFIFOn overflow event, the eQADC also provides a combined interrupt at which the result FIFO overflow interrupt, the command FIFO underflow interrupt, and the command FIFO trigger overrun interrupt requests of all CFIFOs are ORed. When RFOIEn, CFUIEn, and TORIEn are all asserted, this combined interrupt request is asserted whenever one of the following 18 flags becomes asserted: RFOFn, CFUFn, and TORFn (assuming that all interrupts are enabled). See Section 20.4.7, “eQADC eDMA/Interrupt Request,” for details.</p> <p>Write 1 to clear RFOFn. Writing a 0 has no effect.</p> <p>0 No RFIFO overflow event occurred. 1 An RFIFO overflow event occurred.</p>
13	Reserved.
14 RFDF n	<p>RFIFO drain flag n. Indicates if RFIFOn has valid entries that can be drained or not. RFDFn is set when the RFIFOn has at least one valid entry in it. When RFDEn (see Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn)”) and RFDFn are both asserted, an interrupt or an eDMA request will be generated depending on the status of the RFDSn bit. When RFDSn is negated (interrupt requests selected), software clears RFDFn by writing a 1 to it. Writing a 0 has no effect. When RFDSn is asserted (eDMA requests selected), RFDFn is automatically cleared by the eQADC when the RFIFO becomes empty.</p> <p>0 RFIFOn is empty. 1 RFIFOn has at least one valid entry.</p> <p>Note: In the interrupt service routine, RFDF must be cleared only after the RFIFOn pop register is read. Note: RFDFn should not be cleared when RFDSn is asserted (eDMA requests selected).</p>
15	Reserved.
16–19 CFCTR n [0:3]	<p>CFIFOn entry counter. Indicates the number of commands stored in the CFIFOn. When the eQADC completes transferring a piece of new data from the CFIFOn, it decrements CFCTRn by 1. Writing a word or any bytes to the corresponding CFIFO Push Register (see Section 20.3.2.4, “eQADC CFIFO Push Registers 0–5 (EQADC_CFPRn)”) increments CFCTRn by 1. Writing any value to CFCTRn has no effect.</p>
20–23 TNX TPTR n [0:3]	<p>CFIFOn transfer next pointer. Indicates the index of the next entry to be removed from CFIFOn when it completes a transfer. When TNXTPTRn is 0, it points to the entry with the smallest memory-mapped address inside CFIFOn. TNXTPTRn is only updated when a command transfer is completed. If the maximum index number (CFIFO depth minus 1) is reached, TNXTPTRn is wrapped to 0, else, it is incremented by 1. For details refer to Section 20.4.3.1, “CFIFO Basic Functionality.” Writing any value to TNXTPTRn has no effect.</p>
24–27 RFCTR n [0:3]	<p>RFIFOn entry counter. Indicates the number of data items stored in the RFIFOn. When the eQADC stores a piece of new data into RFIFOn, it increments RFCTRn by 1. Reading the whole word, half-word or any bytes of the corresponding Result FIFO pop register (see Section 20.3.2.5, “eQADC Result FIFO Pop Registers 0–5 (EQADC_RFPRn)”) decrements RFCTRn by 1. Writing any value to RFCTRn itself has no effect.</p>
28–31 POPNX TPTR n [0:3]	<p>RFIFOn pop next pointer. Indicates the index of the entry that will be returned when EQADC_RFPRn is read. When POPNXTPTRn is 0, it points to the entry with the smallest memory-mapped address inside RFIFOn. POPNXTPTRn is updated when EQADC_RFPRn is read. If the maximum index number (RFIFO depth minus 1) is reached, POPNXTPTRn is wrapped to 0, else, it is incremented by 1. For details refer to Section 20.4.4.1, “RFIFO Basic Functionality.” Writing any value to POPNXTPTRn has no effect.</p>

20.3.2.9 eQADC CFIFO Transfer Counter Registers 0–5 (EQADC_CFTCR n)

The EQADC_CFTCRs record the number of commands transferred from a CFIFO. The EQADC_CFTCR supports the monitoring of command transfers from a CFIFO.

Address: EQADC_BASE + 0x090 (EQADC_CFTCR0) Access: Read/Write
 EQADC_BASE + 0x092 (EQADC_CFTCR1)
 EQADC_BASE + 0x094 (EQADC_CFTCR2)
 EQADC_BASE + 0x096 (EQADC_CFTCR3)
 EQADC_BASE + 0x098 (EQADC_CFTCR4)
 EQADC_BASE + 0x09A (EQADC_CFTCR5)

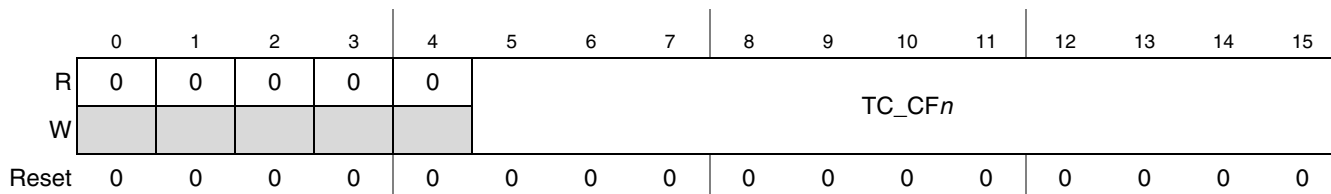


Figure 20-10. eQADC CFIFO Transfer Counter Registers (EQADC_CFTCR n)

Table 20-13. EQADC_CFTCR n Field Descriptions

Field	Description
0–4	Reserved.
5–15 TC_CF n [0:10]	Transfer counter for CFIFO n . TC_CF n counts the number of commands that have been completely transferred from CFIFO n . TC_CF n =2, for example, signifies that two commands have been transferred. The transfer of entries bound for the on-chip ADCs is considered completed when they are stored in the appropriate command buffer. The transfer of entries bound for an external device is considered completed when the serial transmission of the entry is completed. The eQADC increments the TC_CF n value by 1 after a command is transferred. TC_CF n resets to 0 after eQADC completes transferring a command with an asserted EOQ bit. Writing any value to TC_CF n sets the counter to that written value. Note: If CFIFO n is in the TRIGGERED state when its MODE n field is programmed to disabled, the exact number of entries transferred from the CFIFO until that point (TC_CF n) is only known after the CFIFO status changes to IDLE, as indicated by CFS n . For details refer to Section 20.4.3.5.1, “Disabled Mode.”

20.3.2.10 eQADC CFIFO Status Snapshot Registers 0–2 (EQADC_CFSSR n)

The EQADC_CFSSRs contain status fields to track the operation status of each CFIFO and the transfer counter of the last CFIFO to initiate a command transfer to the internal ADCs and the external command buffers. EQADC_CFSSR0–1 are related to the on-chip ADC command buffers (buffers 0 and 1) while EQADC_CFSSR2 is related to the external command buffers (buffers 2 and 3). All fields of a particular EQADC_CFSSR are captured at the beginning of a command transfer to the buffer associated with that register.

Note that captured status register values are associated with a previous command transfer. This means that the EQADC_CFSSR registers capture the status registers before the status registers change, because of the transfer of the current command that is about to be popped from the CFIFO. The EQADC_CFSSRs are read only. Writing to the EQADC_CFSSRs has no effect.

Address: Base + 0x0A0

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CFS0_T0		CFS1_T0		CFS2_T0		CFS3_T0		CFS4_T0		CFS5_T0		0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	LCFT0				TC_LCFT0										
W																
Reset	0	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0

Figure 20-11. eQADC CFIFO Status Snapshot Register 0 (EQADC_CFSSR0)

Table 20-14. EQADC_CFSSR0 Field Descriptions

Field	Description																		
0–11 CFS _n _T0 [0:1]	CFIFO status at transfer to ADC _n command buffer. Indicates the CFIFO _n status at the time a command transfer to ADC _n command buffer is initiated. CFS _n _T0 is a copy of the corresponding CFS _n in EQADC_CFSSR (see Section 20.3.2.11, “eQADC CFIFO Status Register (EQADC_CFSSR)”) captured at the time a command transfer to buffer _n is initiated.																		
12–16	Reserved.																		
17–20 LCFT0 [0:3]	<p>Last CFIFO to transfer to ADC_n command buffer. Holds the CFIFO number of last CFIFO to have initiated a command transfer to ADC_n command buffer. LCFT0 has the following values:</p> <table border="1"> <thead> <tr> <th>LCFT0[0:3]</th> <th>LCFT0 Meaning</th> </tr> </thead> <tbody> <tr> <td>0b0000</td> <td>Last command was transferred from CFIFO0</td> </tr> <tr> <td>0b0001</td> <td>Last command was transferred from CFIFO1</td> </tr> <tr> <td>0b0010</td> <td>Last command was transferred from CFIFO2</td> </tr> <tr> <td>0b0011</td> <td>Last command was transferred from CFIFO3</td> </tr> <tr> <td>0b0100</td> <td>Last command was transferred from CFIFO4</td> </tr> <tr> <td>0b0101</td> <td>Last command was transferred from CFIFO5</td> </tr> <tr> <td>0b0110–0b1110</td> <td>Reserved</td> </tr> <tr> <td>0b1111</td> <td>No command was transferred to ADC_n command buffer</td> </tr> </tbody> </table>	LCFT0[0:3]	LCFT0 Meaning	0b0000	Last command was transferred from CFIFO0	0b0001	Last command was transferred from CFIFO1	0b0010	Last command was transferred from CFIFO2	0b0011	Last command was transferred from CFIFO3	0b0100	Last command was transferred from CFIFO4	0b0101	Last command was transferred from CFIFO5	0b0110–0b1110	Reserved	0b1111	No command was transferred to ADC _n command buffer
LCFT0[0:3]	LCFT0 Meaning																		
0b0000	Last command was transferred from CFIFO0																		
0b0001	Last command was transferred from CFIFO1																		
0b0010	Last command was transferred from CFIFO2																		
0b0011	Last command was transferred from CFIFO3																		
0b0100	Last command was transferred from CFIFO4																		
0b0101	Last command was transferred from CFIFO5																		
0b0110–0b1110	Reserved																		
0b1111	No command was transferred to ADC _n command buffer																		
21–31 TC_LCFT0 [0:10]	Transfer counter for last CFIFO to transfer commands to ADC _n command buffer. Indicates the number of commands which have been completely transferred from CFIFO _n when a command transfer from CFIFO _n to ADC _n command buffer is initiated. TC_LCFT0 is a copy of the corresponding TC_CF _n in EQADC_CFTCR _n (see Section 20.3.2.9) captured at the time a command transfer from CFIFO _n to ADC _n command buffer is initiated. This field has no meaning when LCFT0 is 0b1111.																		

Address: Base + 0x0A4

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CFS0_T1	CFS1_T1	CFS2_T1	CFS3_T1	CFS4_T1	CFS5_T1	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	LCFT1			TC_LCFT1											
W																
Reset	0	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0

Figure 20-12. eQADC CFIFO Status Snapshot Register 1 (EQADC_CFSSR1)

Table 20-15. EQADC_CFSSR1 Field Descriptions

Field	Description																		
0–11 CFS _n _T1 [0:1]	CFIFO status at transfer to ADC _n command buffer. Indicates the CFIFO _n status at the time a command transfer to ADC _n command buffer is initiated. CFS _n _T1 is a copy of the corresponding CFS _n in EQADC_CFSR (see Section 20.3.2.11, “eQADC CFIFO Status Register (EQADC_CFSR)”) captured at the time a command transfer to buffer _n is initiated.																		
12–16	Reserved.																		
17–20 LCFT1 [0:3]	<p>Last CFIFO to transfer to ADC_n command buffer. Holds the CFIFO number of last CFIFO to have initiated a command transfer to ADC_n command buffer. LCFT1 has the following values:</p> <table border="1" style="margin-left: 40px;"> <thead> <tr> <th>LCFT1[0:3]</th> <th>LCFT1 Meaning</th> </tr> </thead> <tbody> <tr> <td>0b0000</td> <td>Last command was transferred from CFIFO0</td> </tr> <tr> <td>0b0001</td> <td>Last command was transferred from CFIFO1</td> </tr> <tr> <td>0b0010</td> <td>Last command was transferred from CFIFO2</td> </tr> <tr> <td>0b0011</td> <td>Last command was transferred from CFIFO3</td> </tr> <tr> <td>0b0100</td> <td>Last command was transferred from CFIFO4</td> </tr> <tr> <td>0b0101</td> <td>Last command was transferred from CFIFO5</td> </tr> <tr> <td>0b0110–0b1110</td> <td>Reserved</td> </tr> <tr> <td>0b1111</td> <td>No command was transferred to ADC_n command buffer</td> </tr> </tbody> </table>	LCFT1[0:3]	LCFT1 Meaning	0b0000	Last command was transferred from CFIFO0	0b0001	Last command was transferred from CFIFO1	0b0010	Last command was transferred from CFIFO2	0b0011	Last command was transferred from CFIFO3	0b0100	Last command was transferred from CFIFO4	0b0101	Last command was transferred from CFIFO5	0b0110–0b1110	Reserved	0b1111	No command was transferred to ADC _n command buffer
LCFT1[0:3]	LCFT1 Meaning																		
0b0000	Last command was transferred from CFIFO0																		
0b0001	Last command was transferred from CFIFO1																		
0b0010	Last command was transferred from CFIFO2																		
0b0011	Last command was transferred from CFIFO3																		
0b0100	Last command was transferred from CFIFO4																		
0b0101	Last command was transferred from CFIFO5																		
0b0110–0b1110	Reserved																		
0b1111	No command was transferred to ADC _n command buffer																		
21–31 TC_LCFT 1 [0:10]	Transfer counter for last CFIFO to transfer commands to ADC _n command buffer. Indicates the number of commands which have been completely transferred from CFIFO _n when a command transfer from CFIFO _n to ADC _n command buffer is initiated. TC_LCFT1 is a copy of the corresponding TC_CF _n in EQADC_CFTCR _n (see Section 20.3.2.9, “eQADC CFIFO Transfer Counter Registers 0–5 (EQADC_CFTCR _n)”) captured at the time a command transfer from CFIFO _n to ADC _n command buffer is initiated. This field has no meaning when LCFT1 is 0b1111.																		

The third eQADC CFIFO status snapshot register is displayed in Figure 20-13.

Address: Base + 0x0A8

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CFS0_TSSI		CFS1_TSSI		CFS2_TSSI		CFS3_TSSI		CFS4_TSSI		CFS5_TSSI		0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ENI	LCFTSSI				TC_LCFTSSI										
W																
Reset	0	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0

Figure 20-13. eQADC CFIFO Status Snapshot Register 2 (EQADC_CFSSR2)

Table 20-16. EQADC_CFSSR2 Field Descriptions

Field	Description
0–11 CFS _n _TSSI [0:1]	CFIFO Status at Transfer through the eQADC SSI. Indicates the CFIFO _n status at the time a serial transmission through the eQADC SSI is initiated. CFS _n _TSSI is a copy of the corresponding CFS _n in EQADC_CFSR (see Section 20.3.2.11, “eQADC CFIFO Status Register (EQADC_CFSR)”) captured at the time a serial transmission through the eQADC SSI is initiated.
12–15	Reserved.
16 ENI	External command buffer number Indicator. Indicates to which external command buffer the last command was transmitted. 0 Last command was transferred to command buffer 2. 1 Last command was transferred to command buffer 3.

Table 20-16. EQADC_CFSSR2 Field Descriptions (continued)

Field	Description																		
17–20 LCFTSSI [0:3]	<p>Last CFIFO to transfer commands through the eQADC SSI. Holds the CFIFO number of last CFIFO to have initiated a command transfer to an external command buffer through the eQADC SSI. LCFTSSI does not indicate the transmission of null messages. LCFTSSI has the following values:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>LCFTSSI[0:3]</th> <th>LCFTSSI Meaning</th> </tr> </thead> <tbody> <tr> <td>0b0000</td> <td>Last command was transferred from CFIFO0</td> </tr> <tr> <td>0b0001</td> <td>Last command was transferred from CFIFO1</td> </tr> <tr> <td>0b0010</td> <td>Last command was transferred from CFIFO2</td> </tr> <tr> <td>0b0011</td> <td>Last command was transferred from CFIFO3</td> </tr> <tr> <td>0b0100</td> <td>Last command was transferred from CFIFO4</td> </tr> <tr> <td>0b0101</td> <td>Last command was transferred from CFIFO5</td> </tr> <tr> <td>0b0110 – 0b1110</td> <td>Reserved</td> </tr> <tr> <td>0b1111</td> <td>No command was transferred to an external command buffer</td> </tr> </tbody> </table>	LCFTSSI[0:3]	LCFTSSI Meaning	0b0000	Last command was transferred from CFIFO0	0b0001	Last command was transferred from CFIFO1	0b0010	Last command was transferred from CFIFO2	0b0011	Last command was transferred from CFIFO3	0b0100	Last command was transferred from CFIFO4	0b0101	Last command was transferred from CFIFO5	0b0110 – 0b1110	Reserved	0b1111	No command was transferred to an external command buffer
LCFTSSI[0:3]	LCFTSSI Meaning																		
0b0000	Last command was transferred from CFIFO0																		
0b0001	Last command was transferred from CFIFO1																		
0b0010	Last command was transferred from CFIFO2																		
0b0011	Last command was transferred from CFIFO3																		
0b0100	Last command was transferred from CFIFO4																		
0b0101	Last command was transferred from CFIFO5																		
0b0110 – 0b1110	Reserved																		
0b1111	No command was transferred to an external command buffer																		
21–31 TC_ LCFTSSI [0:10]	<p>Transfer counter for last CFIFO to transfer commands through eQADC SSI. Indicates the number of commands which have been completely transferred from a particular CFIFO at the time a command transfer from that CFIFO to an external command buffer is initiated. TC_LCFTSSI is a copy of the corresponding TC_CFn in EQADC_CFTCRn (see Section 20.3.2.9, “eQADC CFIFO Transfer Counter Registers 0–5 (EQADC_CFTCRn)”) captured at the time a command transfer to an external command buffer is initiated. This field has no meaning when LCFTSSI is 0b1111.</p>																		

20.3.2.11 eQADC CFIFO Status Register (EQADC_CFSR)

The EQADC_CFSR contains the current CFIFO status. The EQADC_CFSRs are read only. Writing to the EQADC_CFSR has no effect.

Address: Base + 0x0AC

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	CFS0		CFS1		CFS2		CFS3		CFS4		CFS5		0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 20-14. eQADC CFIFO Status Register (EQADC_CFSR)

Table 20-17. EQADC_CFSR Field Descriptions

Field	Description
0–11 CFS _n [0:1]	CFIFO status. Indicates the current status of CFIFO _n . Refer to Table 20-18 for more information on CFIFO status.
12–31	Reserved.

Table 20-18. Current CFIFO Status

CFIFO Status	Field Value	Explanation
IDLE	0b00	<ul style="list-style-type: none"> CFIFO is disabled. CFIFO is in single-scan edge or level trigger mode and does not have EQADC_FISR_n[SSS] asserted. eQADC completed the transfer of the last entry of the user defined command queue in single-scan mode.
Reserved	0b01	Not applicable.
WAITING FOR TRIGGER	0b10	<ul style="list-style-type: none"> CFIFO mode is modified to continuous-scan edge or level trigger mode. CFIFO mode is modified to single-scan edge or level trigger mode and EQADC_FISR_n[SSS] is asserted. CFIFO mode is modified to single-scan software trigger mode and EQADC_FISR_n[SSS] is negated. CFIFO is paused. eQADC transferred the last entry of the queue in continuous-scan edge trigger mode.
TRIGGERED	0b11	CFIFO is triggered

20.3.2.12 eQADC SSI Control Register (EQADC_SSICR)

The EQADC_SSICR configures the SSI submodule.

Address: Base + 0x0B4

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	MDT			0	0	0	0	BR			
W																
Reset	0	0	0	0	0	1	1	1	0	0	0	0	1	1	1	1

Figure 20-15. eQADC SSI Control Register (EQADC_SSICR)

Table 20-19. EQADC_SSICR Field Descriptions

Field	Description
0–20	Reserved.
21–23 MDT [0:2]	Minimum delay after transmission. Defines the minimum delay after transmission time (t_{MDT}) expressed in serial clock (FCK) periods. t_{MDT} is the minimum time SDS should be kept negated between two consecutive serial transmissions. Table 20-20 lists the minimum delay after transfer time according to how MDT is set. The MDT field must only be written when the serial transmissions from the eQADC SSI are disabled - See EQADC_MCR[ESSIE] field in Section 20.3.2.1, “eQADC Module Configuration Register (EQADC_MCR)” .
24–27	Reserved.
28–31 BR [0:3]	Baud rate. Selects system clock divide factor as shown in Table 20-21 . The baud clock is calculated by dividing the system clock by the clock divide factor specified with the BR field. Note: The BR field must only be written when the eQADC SSI is disabled - See EQADC_MCR[ESSIE] field in Section 20.3.2.1, “eQADC Module Configuration Register (EQADC_MCR)” .

Table 20-20. Minimum Delay After Transmission (t_{MDT}) Time

MDT	t_{MDT} (FCK period)
0b000	1
0b001	2
0b010	3
0b011	4
0b100	5
0b101	6
0b110	7
0b111	8

Table 20-21. System Clock Divide Factor for Baud Clock

BR[0:3]	System Clock Divide Factor ¹
0b0000	2
0b0001	3
0b0010	4
0b0011	5
0b0100	6
0b0101	7
0b0110	8
0b0111	9
0b1000	10
0b1001	11

Table 20-21. System Clock Divide Factor for Baud Clock (continued)

BR[0:3]	System Clock Divide Factor ¹
0b1010	12
0b1011	13
0b1100	14
0b1101	15
0b1110	16
0b1111	17

¹ If the system clock is divided by an odd number then the serial clock will have a duty cycle different from 50%.

20.3.2.13 eQADC SSI Receive Data Register (EQADC_SSIRDR)

The eQADC SSI receive data register (EQADC_SSIRDR) records the last message received from the external device.

Address: Base + 0x0B8

Access: Read

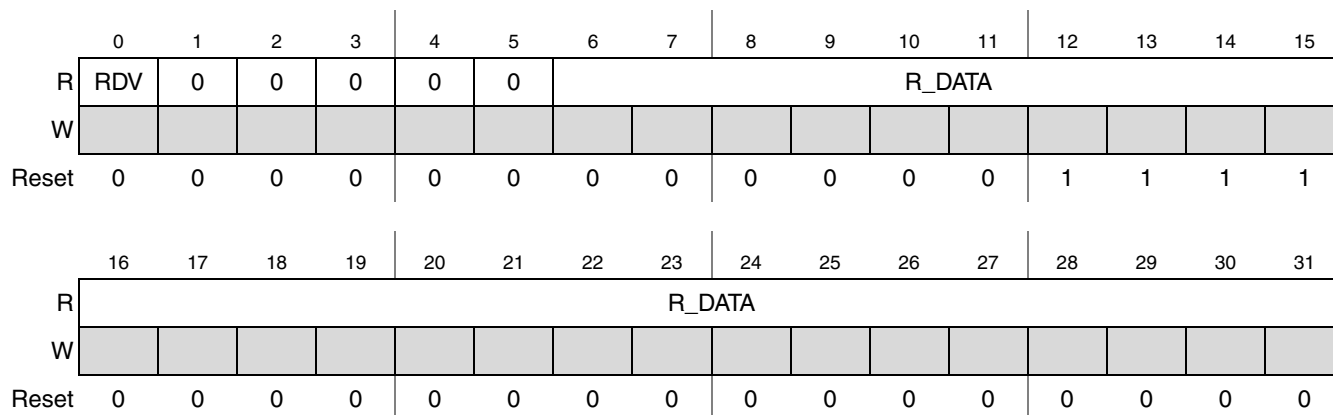


Figure 20-16. eQADC SSI Receive Data Register (EQADC_SSIRDR)

Table 20-22. EQADC_SSIRDR Field Descriptions

Field	Description
0 RDV	Receive data valid. Indicates if the last received data is valid. This bit is cleared automatically whenever the EQADC_SSIRDR is read. Writes have no effect. 0 Receive data is not valid. 1 Receive data is valid.
1–5	Reserved.
6–31 R_DATA [0:25]	eQADC receive DATA. Contains the last result message that was shifted in. Writes to the R_DATA have no effect. Messages that were not completely received due to a transmission abort will not be copied into EQADC_SSIRDR.

20.3.2.14 eQADC CFIFO Registers (EQADC_CF[0–5]Rn)

EQADC_CF[0–5]Rn provide visibility of the contents of a CFIFO for debugging purposes. Each CFIFO has four registers that are uniquely mapped to its four 32-bit entries. Refer to [Section 20.4.3, “eQADC Command FIFOs,”](#) for more information on CFIFOs. These registers are read only. Data written to these registers is ignored.

- Address: CFIFO0: Base + 0x100 (CF0R0) Access: Read
 Base + 0x104 (CF0R1)
 Base + 0x108 (CF0R2)
 Base + 0x10C (CF0R3)
 CFIFO1: Base + 0x140 (CF1R0)
 Base + 0x144 (CF1R1)
 Base + 0x148 (CF1R2)
 Base + 0x14C (CF1R3)
 CFIFO2: Base + 0x180 (CF2R0)
 Base + 0x184 (CF2R1)
 Base + 0x188 (CF2R2)
 Base + 0x18C (CF2R3)
 CFIFO3: Base + 0x1C0 (CF3R0)
 Base + 0x1C4 (CF3R1)
 Base + 0x1C8 (CF3R2)
 Base + 0x1CC (CF3R3)
 CFIFO4: Base + 0x200 (CF4R0)
 Base + 0x204 (CF4R1)
 Base + 0x208 (CF4R2)
 Base + 0x20C (CF4R3)
 CFIFO5: Base + 0x240 (CF5R0)
 Base + 0x244 (CF5R1)
 Base + 0x248 (CF5R2)
 Base + 0x24C (CF5R3)

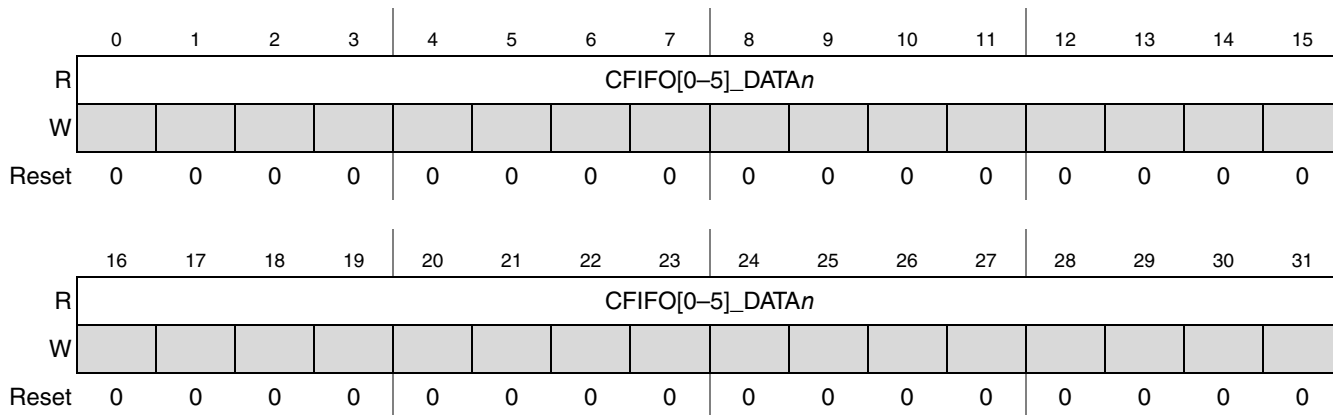


Figure 20-17. eQADC CFIFO[0–5] Registers (EQADC_CF[0–5]Rn)

Table 20-23. EQADC_CF[0–5]Rn Field Descriptions

Field	Description
0–31 CFIFO[0–5] _DATA_n [0:31]	CFIFO[0–5]_data_n. Returns the value stored within the entry of CFIFO[0–5]. Each CFIFO is composed of four 32-bit entries, with register 0 being mapped to the entry with the smallest memory mapped address.

20.3.2.15 eQADC RFIFO Registers (EQADC_RF[0–5]Rn)

EQADC_RF[0–5]Rn provide visibility of the contents of a RFIFO for debugging purposes. Each RFIFO has four registers which are uniquely mapped to its four 16-bit entries. Refer to Section 20.4.4, “Result FIFOs,” for more information on RFIFOs. These registers are read only. Data written to these registers is ignored.

Address: RFIFO0: Base + 0x300 (RF0R0) Access: Read
 Base + 0x304 (RF0R1)
 Base + 0x308 (RF0R2)
 Base+0x30C (RF0R3)
 RFIFO1: Base + 0x340 (RF1R0)
 Base + 0x344 (RF1R1)
 Base + 0x348 (RF1R2)
 Base + 0x34C (RF1R3)
 RFIFO2: Base + 0x380 (RF2R0)
 Base + 0x384 (RF2R1)
 Base + 0x388 (RF2R2)
 Base + 0x38C (RF2R3)
 RFIFO3: Base + 0x3C0 (RF3R0)
 Base + 0x3C4 (RF3R1)
 Base + 0x3C8 (RF3R2)
 Base + 0x3CC (RF3R3)
 RFIFO4: Base + 0x400 (RF4R0)
 Base + 0x404 (RF4R1)
 Base + 0x408 (RF4R2)
 Base + 0x40C (RF4R3)
 RFIFO5: Base + 0x440 (RF5R0)
 Base + 0x444 (RF5R1)
 Base + 0x448 (RF5R2)
 Base + 0x44C (RF5R3)

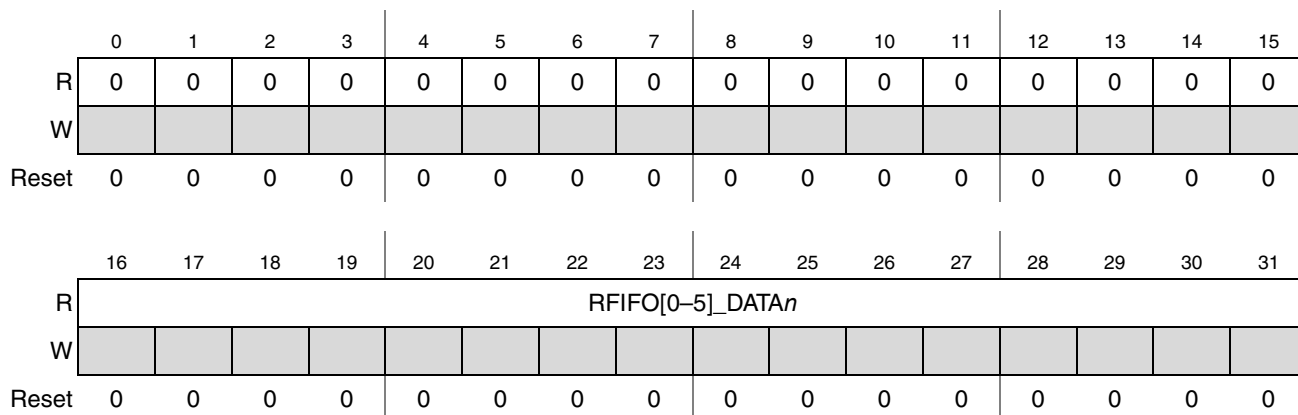


Figure 20-18. eQADC RFIFO Registers (EQADC_RF[0–5]Rn)

Table 20-24. EQADC_RF[0–5]Rn Field Descriptions

Field	Description
0–31 RFIFO[0–5] _DATA n [0:15]	RFIFO[0–5] data n. Returns the value stored within the entry of RFIFO[0–5]. Each RFIFO is composed of four 16-bit entries, with register 0 being mapped to the entry with the smallest memory mapped address.

20.3.3 On-Chip ADC Registers

This section describes a list of registers that control on-chip ADC operation. The ADC registers are not part of the CPU accessible memory map. These registers can only be accessed indirectly through configuration commands. There are five non memory mapped registers per ADC, five for ADC0 and five for ADC1. The address, usage, and access privilege of each register is shown in [Table 20-25](#) and [Table 20-26](#). Data written to or read from reserved areas of the memory map is undefined.

Their assigned addresses are the values used to set the ADC_REG_ADDRESS field of the read/write configuration commands bound for the on-chip ADCs. These are half-word addresses. Further, the following restrictions apply when accessing these registers:

- Registers ADC0_CR, ADC0_GCCR, and ADC0_OCCR can only be accessed by configuration commands sent to the ADC0 command buffer.
- Registers ADC1_CR, ADC1_GCCR, and ADC1_OCCR can only be accessed by configuration commands sent to the ADC1 command buffer.
- Registers ADC_TSCR and ADC_TBCR can be accessed by configuration commands sent to the ADC0 command buffer or to the ADC1 command buffer. A data write to ADC_TSCR through a configuration command sent to the ADC0 command buffer will write the same memory location as when writing to it through a configuration command sent to the ADC1 command buffer. The same is valid for ADC_TBCR.

NOTE

Simultaneous write accesses from the ADC0 and ADC1 command buffers to ADC_TSCR or to ADC_TBCR are not allowed.

Table 20-25. ADC0 Registers

ADC0 Register Address	Use	Access
0x00	ADC0 Address 0x00 is used for conversion command messages.	
0x01	ADC0 Control Register (ADC0_CR)	Write/Read
0x02	ADC Time Stamp Control Register (ADC_TSCR) ¹	Write/Read
0x03	ADC Time Base Counter Register (ADC_TBCR) ¹	Write/Read
0x04	ADC0 Gain Calibration Constant Register (ADC0_GCCR)	Write/Read
0x05	ADC0 Offset Calibration Constant Register (ADC0_OCCR)	Write/Read
0x06–0xFF	Reserved	—

¹ This register is also accessible by configuration commands sent to the ADC1 command buffer.

Table 20-26. ADC1 Registers

ADC1 Register Address	Use	Access
0x00	ADC1 Address 0x00 is used for conversion command messages.	
0x01	ADC1 Control Register (ADC1_CR)	Write/Read
0x02	ADC Time Stamp Control Register (ADC_TSCR) ¹	Write/Read
0x03	ADC Time Base Counter Register (ADC_TBCR) ¹	Write/Read
0x04	ADC1 Gain Calibration Constant Register (ADC1_GCCR)	Write/Read
0x05	ADC1 Offset Calibration Constant Register (ADC1_OCCR)	Write/Read
0x06–0xFF	Reserved	—

¹ This register is also accessible by configuration commands sent to the ADC0 command buffer.

20.3.3.1 ADC_n Control Registers (ADC0_CR and ADC1_CR)

The ADC_n control registers (ADC_n_CR) are used to configure the on-chip ADCs.

Address: 0x01

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	ADC0	0	0	0	ADC0-	0	0	0	0	0	0	ADC0_CLK_PS				
W	_EN					EMUX										
Reset	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ADC1	0	0	0	ADC1-	0	0	0	0	0	0	ADC1_CLK_PS				
W	_EN					EMUX										
Reset	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1

Figure 20-19. ADC_n Control Registers (ADC0_CR and ADC1_CR)

Table 20-27. ADC_n_CR Field Descriptions

Field	Description
0 ADC _n _EN	<p>ADC_n enable. Enables ADC_n to perform A/D conversions. Refer to Section 20.4.5.1, “Enabling and Disabling the on-chip ADCs,” for details.</p> <p>0 ADC is disabled. Clock supply to ADC0/1 is stopped.</p> <p>1 ADC is enabled and ready to perform A/D conversions.</p> <p>Note: The bias generator circuit inside the ADC ceases functioning when both ADC0_EN and ADC1_EN bits are negated.</p> <p>Note: Conversion commands sent to a disabled ADC are ignored by the ADC control hardware.</p> <p>Note: When the ADC_n_EN status is changed from asserted to negated, the ADC clock will not stop until it reaches its low phase.</p>
1–3	Reserved.
4 ADC _n _EMUX	<p>ADC_n external multiplexer enable. When ADC_n_EMUX is asserted, the MA pins will output digital values according to the number of the external channel being converted for selecting external multiplexer inputs. Refer to Section 20.4.6, “Internal/External Multiplexing,” for a detailed description about how ADC_n_EMUX affects channel number decoding.</p> <p>0 External multiplexer disabled; no external multiplexer channels can be selected.</p> <p>1 External multiplexer enabled; external multiplexer channels can be selected.</p> <p>Note: Both ADC_n_EMUX bits must not be asserted at the same time.</p> <p>Note: The ADC_n_EMUX bit must only be written when the ADC_n_EN bit is negated. ADC_n_EMUX can be set during the same write cycle used to set ADC_n_EN.</p>
5–10	Reserved.
11–15 ADC _n _CLK_PS [0:4]	<p>ADC_n clock prescaler. The ADC_n_CLK_PS field controls the system clock divide factor for the ADC_n clock as in Table 20-28. See Section 20.4.5.2, “ADC Clock and Conversion Speed,” for details about how to set ADC0/1_CLK_PS.</p> <p>The ADC_n_CLK_PS field must only be written when the ADC_n_EN bit is negated. This field can be configured during the same write cycle used to set ADC_n_EN.</p>

Table 20-28. System Clock Divide Factor for ADC Clock

ADC _n _CLK_PS[0:4]	System Clock Divide Factor
0b00000	2
0b00001	4
0b00010	6
0b00011	8
0b00100	10
0b00101	12
0b00110	14
0b00111	16
0b01000	18
0b01001	20
0b01010	22
0b01011	24

Table 20-28. System Clock Divide Factor for ADC Clock (continued)

ADC _n _CLK_PS[0:4]	System Clock Divide Factor
0b01100	26
0b01101	28
0b01110	30
0b01111	32
0b10000	34
0b10001	36
0b10010	38
0b10011	40
0b10100	42
0b10101	44
0b10110	46
0b10111	48
0b11000	50
0b11001	52
0b11010	54
0b11011	56
0b11100	58
0b11101	60
0b11110	62
0b11111	64

20.3.3.2 ADC Time Stamp Control Register (ADC_TSCR)

The ADC_TSCR contains a system clock divide factor used in the making of the time base counter clock. It determines at what frequency the time base counter will run. ADC_TSCR can be accessed by configuration commands sent to ADC0 or to ADC1. A data write to ADC_TSCR through a configuration command sent to ADC0 will write the same memory location as when writing to it through a configuration command sent to ADC1.

NOTE

Simultaneous write accesses from ADC0 and ADC1 to ADC_TSCR are not allowed.

Address: 0x02

Access: Read/Write

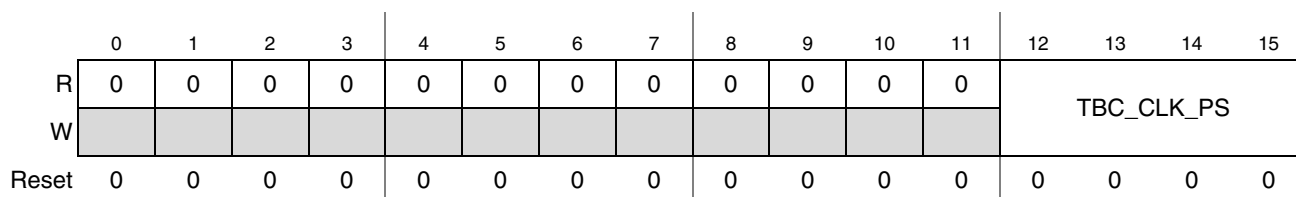


Figure 20-20. ADC Time Stamp Control Register (ADC_TSCR)

Table 20-29. ADC_TSCR Field Descriptions

Field	Description
0–11	Reserved.
12–15 TBC_CLK_PS [0:3]	Time base counter clock prescaler. Contains the system clock divide factor for the time base counter. It controls the accuracy of the time stamp. The prescaler is disabled when TBC_CLK_PS is set to 0b0000.

Table 20-30. Clock Divide Factor for Time Stamp

TBC_CLK_PS[0:3]	System Clock Divide Factor	Clock to Time Stamp Counter for a 120 MHz System Clock (MHz)
0b0000	Disabled	Disabled
0b0001	1	120
0b0010	2	60
0b0011	4	30
0b0100	6	20
0b0101	8	15
0b0110	10	12
0b0111	12	10
0b1000	16	7.5
0b1001	32	3.75
0b1010	64	1.88
0b1011	128	0.94
0b1100	256	0.47
0b1101	512	0.23
0b1110 - 0b1111	Reserved	—

NOTE

If TBC_CLK_PS is not set to disabled, it must not be changed to any other value besides disabled. If TBC_CLK_PS is set to disabled it can be changed to any other value.

20.3.3.3 ADC Time Base Counter Registers (ADC_TBCR)

The ADC_TBCR contains the current value of the time base counter. ADC_TBCR can be accessed by configuration commands sent to ADC0 or to ADC1. A data write to ADC_TBCR through a configuration command sent to ADC0 will write the same memory location as when writing to it through a configuration command sent to ADC1.

NOTE

Simultaneous write accesses from ADC0 and ADC1 to ADC_TBCR are not allowed.

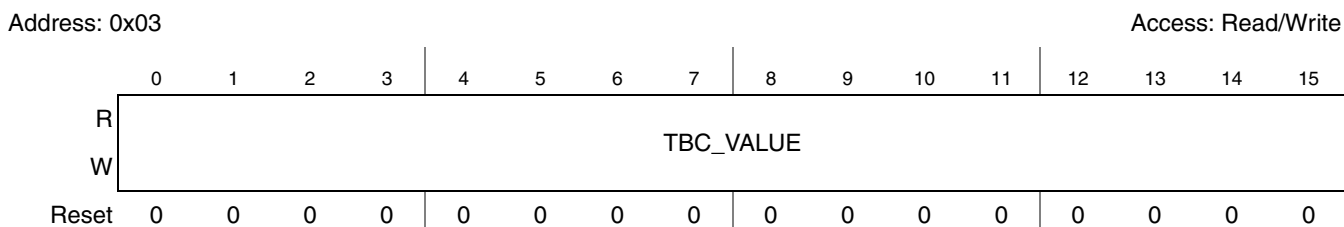


Figure 20-21. ADC Time Base Counter Register (ADC_TBCR)

Table 20-31. ADC_TBCR Field Descriptions

Field	Description
0–15 TBC_VALUE [0:15]	Time base counter VALUE. Contains the current value of the time base counter. Reading TBC_VALUE returns the current value of time base counter. Writes to TBC_VALUE register load the written data to the counter. The time base counter counts from 0x0000 to 0xFFFF and wraps when reaching 0xFFFF.

20.3.3.4 ADC_n Gain Calibration Constant Registers (ADC0_GCCR and ADC1_GCCR)

The ADC_n_GCCR contains the gain calibration constant used to fine-tune the ADC_n conversion results. Refer to [Section 20.4.5.4, “ADC Calibration Feature,”](#) for details about the calibration scheme used in the eQADC.

Address: 0x04

Access: Read/Write

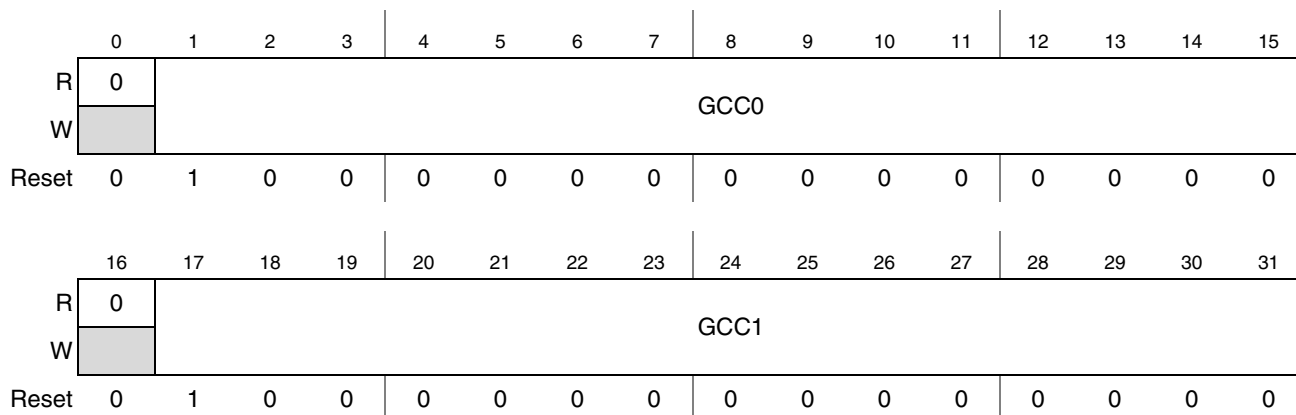


Figure 20-22. ADC_n Gain Calibration Constant Registers (ADC_n_GCCR)

Table 20-32. ADC_n_GCCR Field Descriptions

Field	Description
0	Reserved.
1–15 GCC _n [0:14]	ADC _n gain calibration constant. Contains the gain calibration constant used to fine-tune ADC _n conversion results. It is a unsigned 15-bit fixed pointed value. The gain calibration constant is an unsigned fixed point number expressed in the <i>GCC_INT.GCC_FRAC</i> binary format. The integer part of the gain constant (GCC_INT) contains a single binary digit while its fractional part (GCC_FRAC) contains 14 digits. For details about the GCC data format refer to Section 20.4.5.4.2, “MAC Unit and Operand Data Format.”

20.3.3.5 ADC_n Offset Calibration Constant Registers (ADC₀_OCCR and ADC₁_OCCR)

The ADC_n_OCCR contains the offset calibration constant used to fine-tune of ADC₀/1 conversion results. The offset constant is a signed 14-bit integer value. Refer to [Section 20.4.5.4, “ADC Calibration Feature,”](#) for details about the calibration scheme used in the eQADC.

Address: 0x05

Access: Read/Write

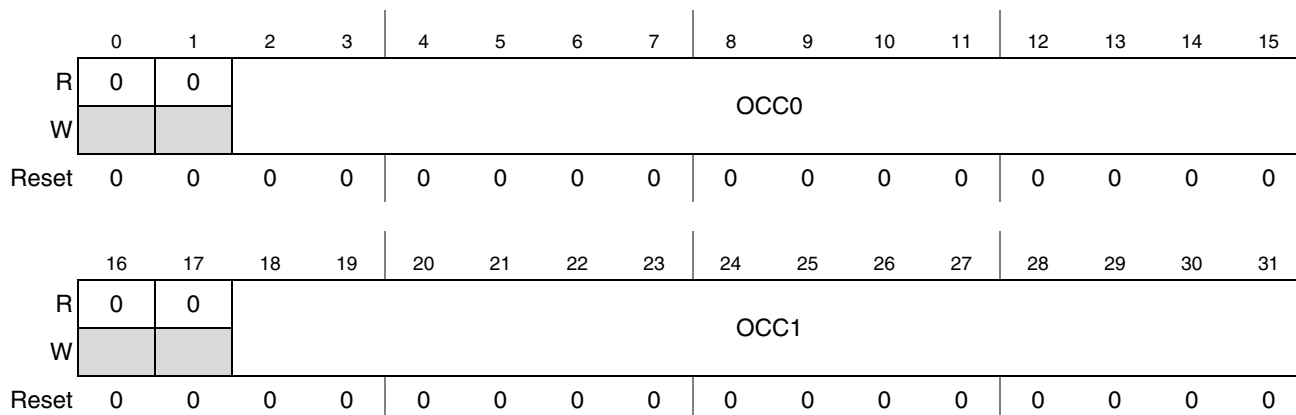


Figure 20-23. ADC_n Offset Calibration Constant Registers (ADC_n_OCCR)

Table 20-33. ADC_n_OCCR Field Descriptions

Field	Description
0–1	Reserved.
2–15 OCC _n [0:13]	ADC _n offset calibration constant. Contains the offset calibration constant used to fine-tune ADC _n conversion results. Negative values should be expressed using the two's complement representation.

20.4 Functional Description

The eQADC provides a parallel interface to two on-chip ADCs, and a single master to single slave serial interface to an off-chip external device. The two on-chip ADCs are architected to allow access to all the analog channels.

Initially, command data is contained in system memory in a user defined data queue structure. Command data is moved between the user-defined queues and CFIFOs by the host CPU or by the eDMA which responds to interrupt and eDMA requests generated by the eQADC. The eQADC supports software and hardware triggers from other modules or external pins to initiate transfers of commands from the multiple CFIFOs to the on-chip ADCs or to the external device.

CFIFOs can be configured to be in single-scan or continuous-scan mode. When a CFIFO is configured to be in single-scan mode, the eQADC scans the user-defined command queue one time. The eQADC stops transferring commands from the triggered CFIFO after detecting the EOQ bit set in the last transfer. After an EOQ bit is detected, software involvement is required to rearm the CFIFO so that it can detect new trigger events.

When a CFIFO is configured for continuous-scan mode, the whole user command queue is scanned multiple times. After the detection of an asserted EOQ bit in the last command transfer, command transfers can continue or not depending on the mode of operation of the CFIFO.

The eQADC can also in parallel and independently of the CFIFOs receive data from the on-chip ADCs or from off-chip external device into multiple RFIFOs. Result data is moved from the RFIFOs to the user-defined result queues in system memory by the host CPU or by the eDMA.

20.4.1 Data Flow in the eQADC

Figure 20-24 shows how command data flows inside the eQADC system. A command message is the predefined format in which command data is stored in the user-defined command queues. A command message has 32 bits and is composed of two parts: a CFIFO header and an ADC command. Command messages are moved from the user command queues to the CFIFOs by the host CPU or by the eDMA as they respond to interrupt and eDMA requests generated by the eQADC. The eQADC generates these requests whenever a CFIFO is not full. The FIFO control unit will only transfer the command part of the command message to the selected ADC. Information in the CFIFO header together with the upper bit of the ADC command is used by the FIFO control unit to arbitrate which triggered CFIFO will be transferring the next command. Because command transfer through the serial interface can take significantly more time than a parallel transfer to the on-chip ADCs, command transfers for on-chip ADCs occur concurrently with the transfers through the serial interface. Commands sent to the ADCs are executed in a first-in-first-out

(FIFO) basis and three types of results can be expected: data read from an ADC register, a conversion result, or a time stamp. The order at which ADC commands sent to the external device are executed, and the type of results that can be expected depends on the architecture of that device with the exception of unsolicited data like null messages for example.

NOTE

While the eQADC pops commands out from a CFIFO, it also is checking the number of entries in the CFIFO and generating requests to fill it. The process of pushing and popping commands to and from a CFIFO can occur simultaneously.

The FIFO control unit expects all incoming results to be shaped in a pre-defined result message format. [Figure 20-25](#) shows how result data flows inside the eQADC system. Results generated on the on-chip ADCs are formatted into result messages inside the result format and calibration submodule. Results returning from the external device are already formatted into result messages and therefore bypass the result format and calibration submodule located inside the eQADC. A result message is composed of an RFIFO header and an ADC Result. The FIFO control unit decodes the information contained in the RFIFO header to determine the RFIFO to which the ADC result should be sent. Once in an RFIFO, the ADC result is moved to the corresponding user result queue by the host CPU or by the eDMA as they respond to interrupt and eDMA requests generated by the eQADC. The eQADC generates these requests whenever an RFIFO has at least one entry.

NOTE

While conversion results are returned, the eQADC is checking the number of entries in the RFIFO and generating requests to empty it. The process of pushing and popping ADC results to and from an RFIFO can occur simultaneously.

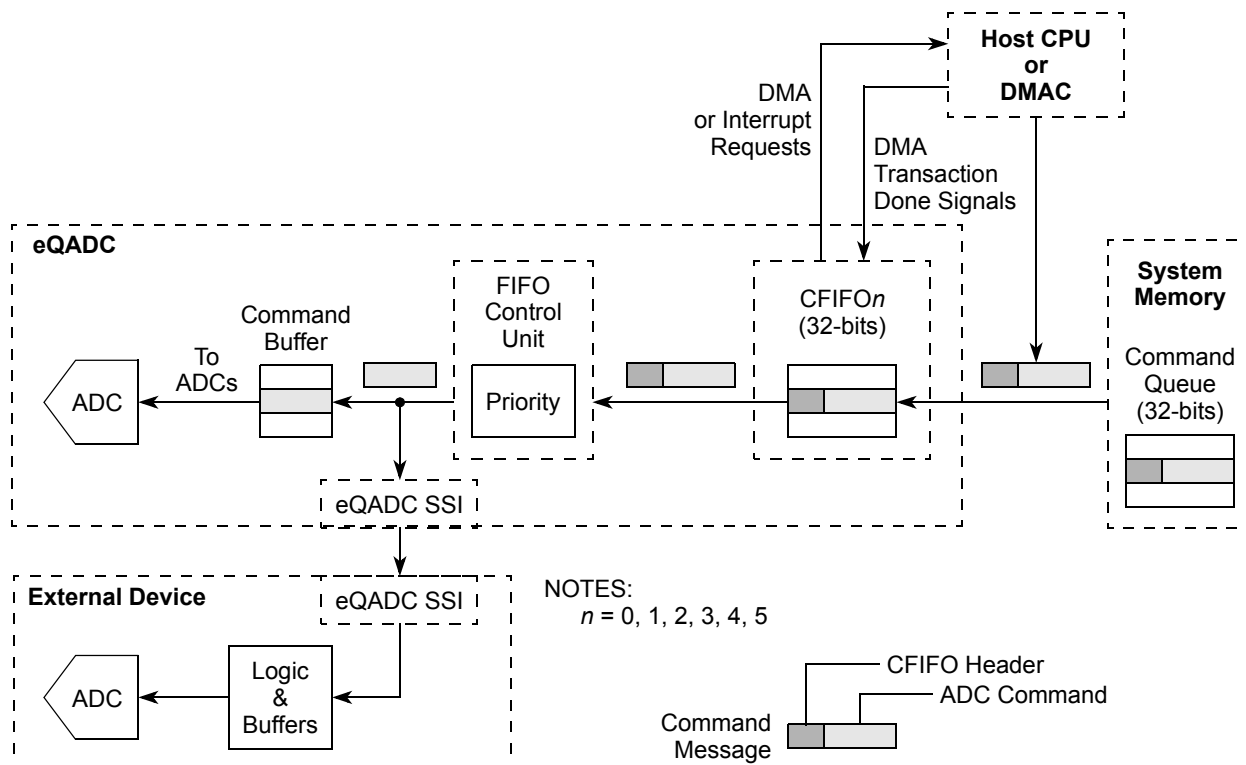


Figure 20-24. Command Flow During eQADC Operation

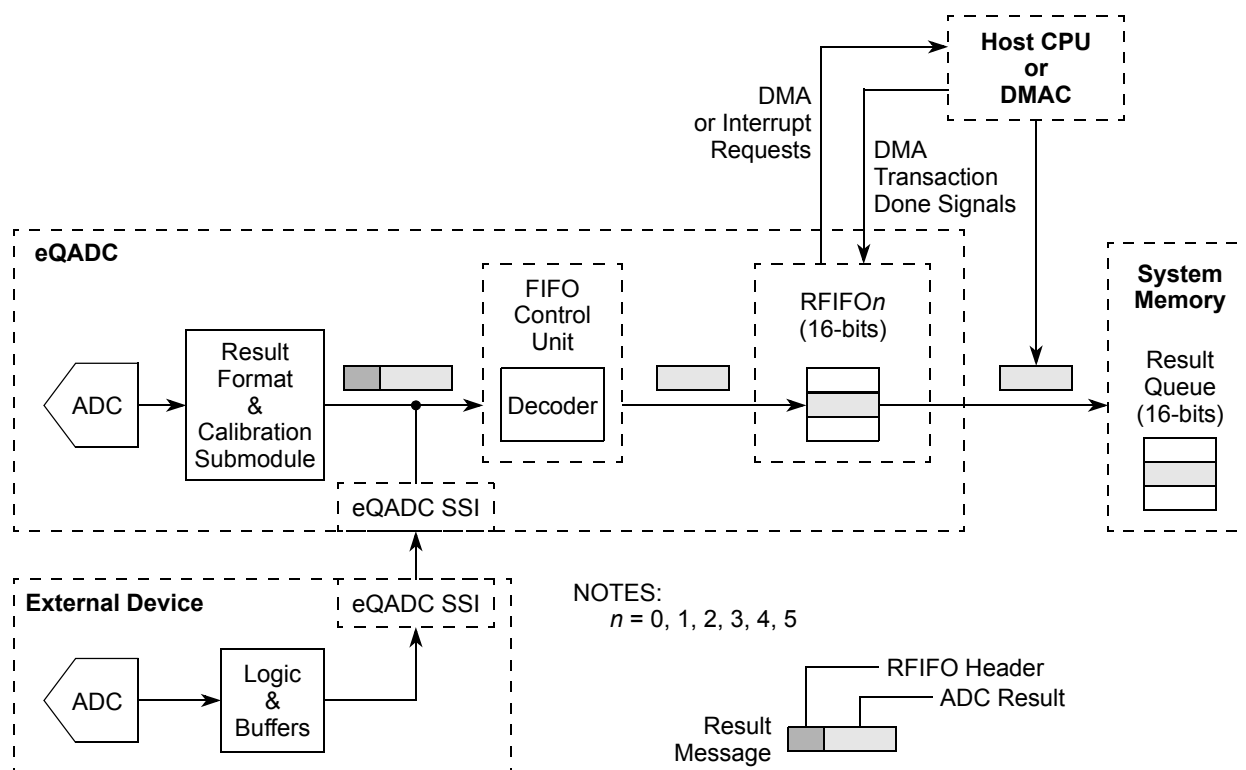


Figure 20-25. Result Flow During eQADC Operation

20.4.1.1 Assumptions/Requirements Regarding the External Device

The external device exchanges command and result data with the eQADC through the eQADC SSI interface. This section explains the minimum requirements an external device has to meet to properly interface with the eQADC. Some assumptions about the architecture of the external device are also described.

20.4.1.1.1 eQADC SSI Protocol Support

The external device must fully support the eQADC SSI protocol as specified in [Section 20.4.8, “eQADC Synchronous Serial Interface \(SSI\) Submodule,”](#) section of this document. Support for the abort feature is optional. When aborts are not supported, all command messages bound for an external command buffer must have the ABORT_ST bit negated - see [Section , “Command Message Format for External Device Operation.”](#)

20.4.1.1.2 Number of Command Buffers and Result Buffers

The external device should have a minimum of one and a maximum of two command buffers to store command data sent from the eQADC. If more than two command buffers are implemented in the external device, they are not recognized by the eQADC as valid destinations for commands. In this document, the two valid external command buffers are referred to as command buffer 2 and command buffer 3 (the two on-chip ADCs being command buffer 0 and 1). The external device decides to which external command buffer a command should go by decoding the upper bit (BN bit) of the ADC command - see [Section , “Command Message Format for External Device Operation.”](#) An external device that only implements one command buffer can ignore the BN bit.

The limit of two command buffers does not limit the number of result buffers in the slave device.

20.4.1.1.3 Command Execution and Result Return

Commands sent to a specific external command buffer should be executed in the order they were received.

Results generated by the execution of commands in an external command buffer should be returned in the order that the command buffer received these commands.

20.4.1.1.4 Null and Result Messages

The external device must be capable of correctly processing null messages as specified in the [Section 20.3.2.2, “eQADC Null Message Send Format Register \(EQADC_NMSFR\).”](#)

In case no valid result data is available to be sent to the eQADC, the external device must send data in the format specified in [Section , “Null Message Format for External Device Operation.”](#)

In case valid result data is available to be sent to the eQADC, the external device must send data in the format specified in [Section , “Result Message Format for External Device Operation.”](#)

The BUSY0/1 fields of all messages sent from the external device to the eQADC must be correctly encoded according to the latest information on the fullness state of the command buffers. For example, if external command buffer 2 is empty before the end of the current serial transmission and if at the end of this transmission the external device receives a command to command buffer 2, then the BUSY0 field, that

is to be sent to the eQADC on the next serial transmission, should be encoded assuming that the external command buffer has one entry.

20.4.1.2 Message Format in eQADC

This section explains the command and result message formats used for on-chip ADC operation and for external device operation.

A command message is the pre-defined format at which command data is stored in the user command queues. A command message has 32 bits and is composed of two parts: a CFIFO header and an ADC command. The size of the CFIFO header is fixed to 6 bits, and it works as inputs to the FIFO control unit. The header controls when a command queue ends, when it pauses, if commands are sent to internal or external buffers, and if it can abort a serial data transmission. Information contained in the CFIFO header, together with the upper bit of the ADC command, is used by the FIFO control unit to arbitrate which triggered CFIFO will transfer the next command. ADC commands are encoded inside the least significant 26 bits of the command message.

A result message is composed of an RFIFO header and an ADC result. The FIFO control unit decodes the information contained in the RFIFO header to determine the RFIFO to which the ADC result should be sent. An ADC result is always 16 bits long.

20.4.1.2.1 Message Formats for On-Chip ADC Operation

This section describes the command/result message formats used for on-chip ADC operation.

NOTE

Although this subsection describes how the command and result messages are formatted to communicate with the on-chip ADCs, nothing prevents the programmer from using a different format when communicating with an external device through the serial interface. Refer to [Section 20.4.1.2.2, “Message Formats for External Device Operation.”](#) Apart from the BN bit, the ADC command of a command message can be formatted to communicate to an arbitrary external device provided that the device returns an RFIFO header in the format expected by the eQADC. When the FIFO control unit receives return data message, it decodes the message tag field and stores the 16-bit data into the corresponding RFIFO.

Conversion Command Message Format for On-Chip ADC Operation

[Figure 20-26](#) describes the command message format for conversion commands when interfacing with the on-chip ADCs. A conversion result is always returned for conversion commands and time stamp information can be optionally requested. The lower byte of conversion commands is always set to 0 to distinguish it from configuration commands.

Enhanced Queued Analog-to-Digital Converter (eQADC)

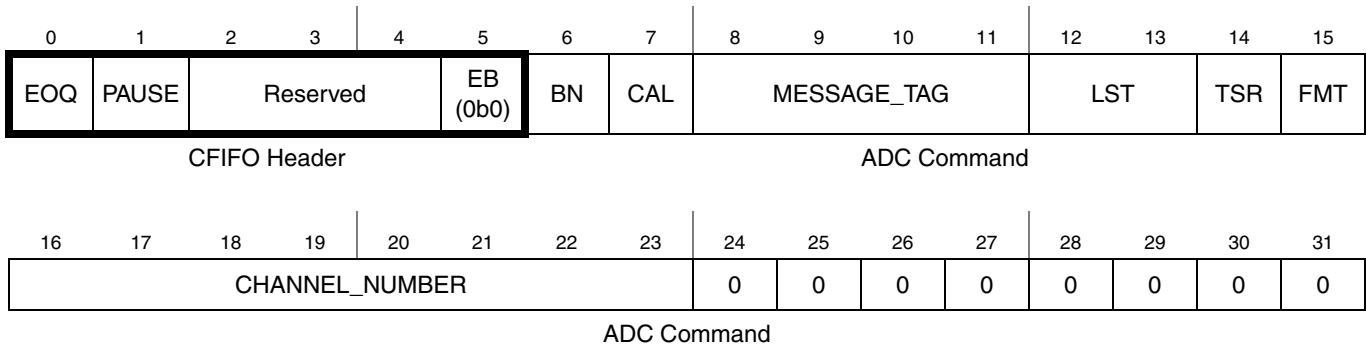


Figure 20-26. Conversion Command Message Format for On-Chip ADC Operation

Table 20-34. On-Chip ADC Field Descriptions: Conversion Command Message Format

Field	Description
0 EOQ	End-of-queue. Asserted in the last command of a command queue to indicate to the eQADC that a scan of the queue is completed. EOQ instructs the eQADC to reset its current CFIFO transfer counter value (TC_CF) to 0. Depending on the CFIFO mode of operation, the CFIFO status will also change upon the detection of an asserted EOQ bit on the last transferred command. See Section 20.4.3.5, “CFIFO Scan Trigger Modes,” for details. 0 Not the last entry of the command queue. 1 Last entry of the command queue. Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.
1 PAUSE	Pause. Allows software to create sub-queues within a command queue. When the eQADC completes the transfer of a command with an asserted pause bit, the CFIFO enters the WAITING FOR TRIGGER state. Refer to Section 20.4.3.6.1, “CFIFO Operation Status,” for a description of the state transitions. The pause bit is only valid when CFIFO operation mode is configured to single or continuous-scan edge trigger mode. 0 Do not enter WAITING FOR TRIGGER state after transfer of the current command message. 1 Enter WAITING FOR TRIGGER state after transfer of the current command message. Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.
2–4	Reserved.
5 EB	External buffer bit. A negated EB bit indicates that the command is sent to an on chip ADC. 0 Command is sent to an internal buffer. 1 Command is sent to an external buffer.
6 BN	Buffer number. Indicates which ADC the message will be sent to. ADCs 1 and 0 can either be internal or external depending on the EB bit setting. 0 Message sent to ADC 0. 1 Message sent to ADC 1.
7 CAL	Calibration. Indicates if the returning conversion result must be calibrated. 0 Do not calibrate conversion result. 1 Calibrate conversion result.

Table 20-34. On-Chip ADC Field Descriptions: Conversion Command Message Format (continued)

Field	Description																								
8–11 MESSAGE_TAG [0:3]	<p>MESSAGE_TAG field. Allows the eQADC to separate returning results into different RFIFOs. When the eQADC transfers a command, the MESSAGE_TAG is included as part of the command. Eventually the external device/on-chip ADC returns the result with the same MESSAGE_TAG. The eQADC separates incoming messages into different RFIFOs by decoding the MESSAGE_TAG of the incoming data.</p> <table border="1"> <thead> <tr> <th>MESSAGE_TAG[0:3]</th> <th>MESSAGE_TAG Meaning</th> </tr> </thead> <tbody> <tr> <td>0b0000</td> <td>Result is sent to RFIFO 0</td> </tr> <tr> <td>0b0001</td> <td>Result is sent to RFIFO 1</td> </tr> <tr> <td>0b0010</td> <td>Result is sent to RFIFO 2</td> </tr> <tr> <td>0b0011</td> <td>Result is sent to RFIFO 3</td> </tr> <tr> <td>0b0100</td> <td>Result is sent to RFIFO 4</td> </tr> <tr> <td>0b0101</td> <td>Result is sent to RFIFO 5</td> </tr> <tr> <td>0b0110–0b0111</td> <td>Reserved</td> </tr> <tr> <td>0b1000</td> <td>Null message received</td> </tr> <tr> <td>0b1001</td> <td>Reserved for customer use. ¹</td> </tr> <tr> <td>0b1010</td> <td>Reserved for customer use. ¹</td> </tr> <tr> <td>0b1011–0b1111</td> <td>Reserved</td> </tr> </tbody> </table> <p>¹ These messages are treated as null messages. Therefore, they must obey the format for incoming null messages and return valid BUSY0/1 fields. Refer to Section , “Null Message Format for External Device Operation.”</p>	MESSAGE_TAG[0:3]	MESSAGE_TAG Meaning	0b0000	Result is sent to RFIFO 0	0b0001	Result is sent to RFIFO 1	0b0010	Result is sent to RFIFO 2	0b0011	Result is sent to RFIFO 3	0b0100	Result is sent to RFIFO 4	0b0101	Result is sent to RFIFO 5	0b0110–0b0111	Reserved	0b1000	Null message received	0b1001	Reserved for customer use. ¹	0b1010	Reserved for customer use. ¹	0b1011–0b1111	Reserved
MESSAGE_TAG[0:3]	MESSAGE_TAG Meaning																								
0b0000	Result is sent to RFIFO 0																								
0b0001	Result is sent to RFIFO 1																								
0b0010	Result is sent to RFIFO 2																								
0b0011	Result is sent to RFIFO 3																								
0b0100	Result is sent to RFIFO 4																								
0b0101	Result is sent to RFIFO 5																								
0b0110–0b0111	Reserved																								
0b1000	Null message received																								
0b1001	Reserved for customer use. ¹																								
0b1010	Reserved for customer use. ¹																								
0b1011–0b1111	Reserved																								
12–13 LST [0:1]	<p>Long sampling time. These two bits determine the duration of the sampling time in ADC clock cycles. Note: For external mux mode, 64 or 128 sampling cycles is recommended.</p> <table border="1"> <thead> <tr> <th>LST[0:1]</th> <th>Sampling cycles (ADC Clock Cycles)</th> </tr> </thead> <tbody> <tr> <td>0b00</td> <td>2</td> </tr> <tr> <td>0b01</td> <td>8</td> </tr> <tr> <td>0b10</td> <td>64</td> </tr> <tr> <td>0b11</td> <td>128</td> </tr> </tbody> </table>	LST[0:1]	Sampling cycles (ADC Clock Cycles)	0b00	2	0b01	8	0b10	64	0b11	128														
LST[0:1]	Sampling cycles (ADC Clock Cycles)																								
0b00	2																								
0b01	8																								
0b10	64																								
0b11	128																								
14 TSR	<p>Time stamp request. TSR indicates the request for a time stamp. When TSR is asserted, the on-chip ADC control logic returns a time stamp for the current conversion command after the conversion result is sent to the RFIFOs. See Section 20.4.5.3, “Time Stamp Feature,” for details.</p> <p>0 Return conversion result only. 1 Return conversion time stamp after the conversion result.</p>																								
15 FMT	<p>Conversion data format. FMT specifies to the eQADC how to format the 12-bit conversion data returned by the ADCs into the 16-bit format which is sent to the RFIFOs. See Section , “ADC Result Format for On-Chip ADC Operation,” for details.</p> <p>0 Right justified unsigned. 1 Right justified signed.</p>																								

Table 20-34. On-Chip ADC Field Descriptions: Conversion Command Message Format (continued)

Field	Description
16–23 CHANNEL_NUMBER [0:7]	Channel number. Selects the analog input channel. The software programs this field with the channel number corresponding to the analog input pin to be sampled and converted. See Section 20.4.6.1, “Channel Assignment,” for details.
24–31	Reserved.

Write Configuration Command Message Format for On-Chip ADC Operation

Figure 20-27 describes the command message format for a write configuration command when interfacing with the on-chip ADCs. A write configuration command is used to set the control registers of the on-chip ADCs. No conversion data will be returned for a write configuration command. Write configuration commands are differentiated from read configuration commands by a negated R/W bit.

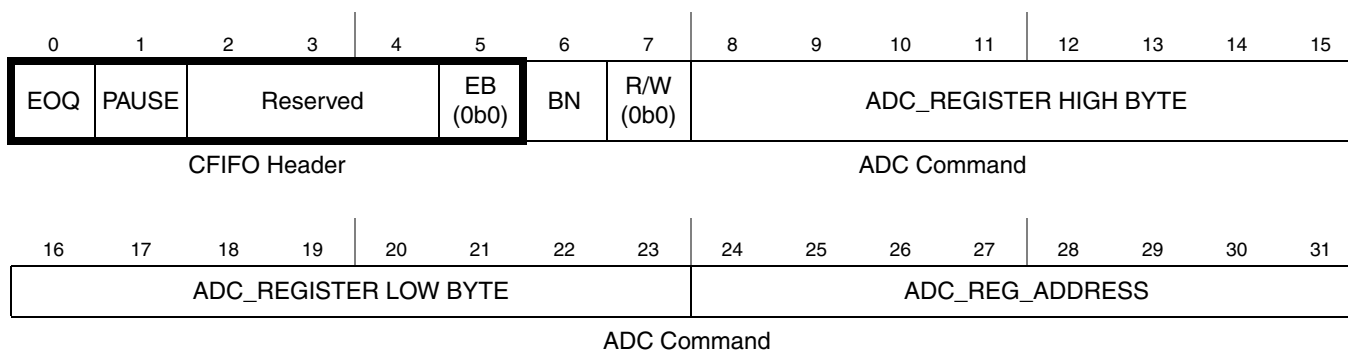


Figure 20-27. Write Configuration Command Message Format for On-chip ADC Operation

Table 20-35. On-Chip ADC Field Descriptions: Write Configuration

Field	Description
0 EOQ	End-of-queue. Asserted in the last command of a command queue to indicate to the eQADC that a scan of the queue is completed. EOQ instructs the eQADC to reset its current CFIFO transfer counter value (TC_CF) to 0. Depending on the CFIFO mode of operation, the CFIFO status will also change upon the detection of an asserted EOQ bit on the last transferred command. See Section 20.4.3.5, “CFIFO Scan Trigger Modes,” for details. 0 Not the last entry of the command queue. 1 Last entry of the command queue. Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.
1 PAUSE	Pause bit. Allows software to create sub-queues within a command queue. When the eQADC completes the transfer of a command with an asserted pause bit, the CFIFO enters the WAITING FOR TRIGGER state. Refer to Section 20.4.3.6.1, “CFIFO Operation Status,” for a description of the state transitions. The pause bit is only valid when CFIFO operation mode is configured to single or continuous-scan edge trigger mode. 0 Do not enter WAITING FOR TRIGGER state after transfer of the current command message. 1 Enter WAITING FOR TRIGGER state after transfer of the current command message. Note: If both the pause and EOQ bits are asserted in the same command message, the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.
2–4	Reserved.

Table 20-35. On-Chip ADC Field Descriptions: Write Configuration

Field	Description
5 EB	External buffer bit. This bit should always be cleared for messages sent to an on-chip ADC. 0 Command is sent to an internal command buffer. 1 Command is sent to an external command buffer.
6 BN	Buffer number. Indicates which buffer the message will be stored in. Buffers 1 and 0 can either be internal or external depending on the EB bit setting. 0 Message stored in buffer 0. 1 Message stored in buffer 1.
7 R/W	Read/write. A negated R/W indicates a write configuration command. 0 Write 1 Read
8–15 ADC_ REGISTER _HIGH_ BYTE[0:7]	ADC register high byte. The value to be written into the most significant 8 bits of control/configuration register when the R/W bit is negated.
16–23 ADC_ REGISTER _LOW_ BYTE[0:7]	ADC register low byte. The value to be written into the least significant 8 bits of a control/configuration register when the R/W bit is negated.
24–31 ADC_REG_ ADDRESS [0:7]	ADC register address. Selects a register on the ADC register set to be written or read. Only half-word addresses can be used. See Table 20-25 .

Read Configuration Command Message Format for On-Chip ADC Operation

Figure 20-28 describes the command message format for a read configuration command when interfacing with the on-chip ADCs. A read configuration command is used to read the contents of the on-chip ADC registers which are only accessible via command messages. Read configuration commands are differentiated from write configuration commands by an asserted R/W bit.

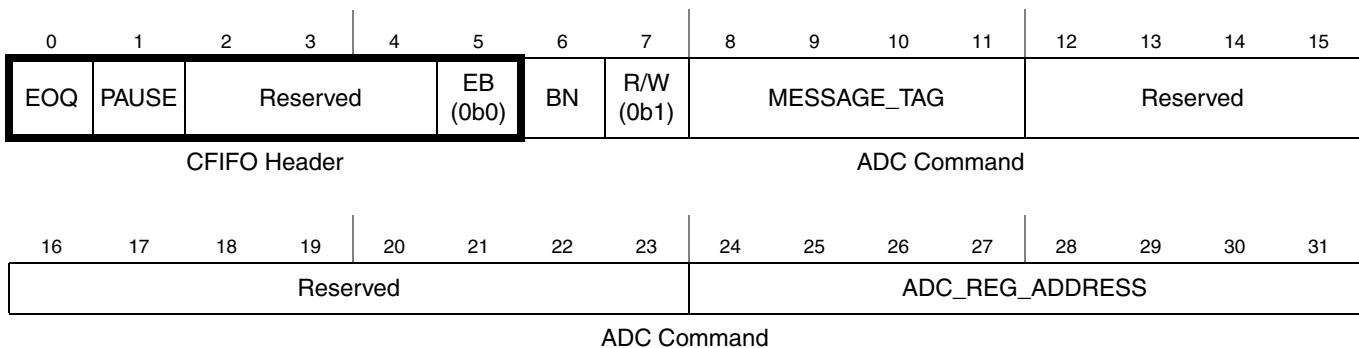


Figure 20-28. Read Configuration Command Message Format for On-Chip ADC Operation

Table 20-36. On-Chip ADC Field Descriptions: Read Configuration

Field	Description
0 EOQ	<p>End-of-queue. Asserted in the last command of a command queue to indicate to the eQADC that a scan of the queue is completed. EOQ instructs the eQADC to reset its current CFIFO transfer counter value (TC_CF) to 0. Depending on the CFIFO mode of operation, the CFIFO status will also change upon the detection of an asserted EOQ bit on the last transferred command. See Section 20.4.3.5, “CFIFO Scan Trigger Modes,” for details.</p> <p>0 Not the last entry of the command queue. 1 Last entry of the command queue.</p> <p>Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.</p>
1 PAUSE	<p>Pause bit. Allows software to create sub-queues within a command queue. When the eQADC completes the transfer of a command with an asserted pause bit, the CFIFO enters the WAITING FOR TRIGGER state. Refer to Section 20.4.3.6.1, “CFIFO Operation Status,” for a description of the state transitions. The pause bit is only valid when CFIFO operation mode is configured to single or continuous-scan edge trigger mode.</p> <p>0 Do not enter WAITING FOR TRIGGER state after transfer of the current command message. 1 Enter WAITING FOR TRIGGER state after transfer of the current command message.</p> <p>Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.</p>
2–4	Reserved.
5 EB	<p>External buffer bit. This bit should always be cleared for messages sent to an on-chip ADC.</p> <p>0 Command is sent to an internal command buffer. 1 Command is sent to an external command buffer.</p>
6 BN	<p>Buffer number. Indicates which buffer the message will be stored in. Buffers 1 and 0 can either be internal or external depending on the EB bit setting.</p> <p>0 Message stored in buffer 0. 1 Message stored in buffer 1.</p>
7 R/W	<p>Read/write. An asserted R/W bit indicates a read configuration command.</p> <p>0 Write 1 Read</p>

Table 20-36. On-Chip ADC Field Descriptions: Read Configuration (continued)

Field	Description																								
8–11 MESSAGE_TAG[0:3]	<p>MESSAGE_TAG field. Allows the eQADC to separate returning results into different RFIFOs. When the eQADC transfers a command, the MESSAGE_TAG is included as part of the command. Eventually the external device/on-chip ADC returns the result with the same MESSAGE_TAG. The eQADC separates incoming messages into different RFIFOs by decoding the MESSAGE_TAG of the incoming data.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>MESSAGE_TAG[0:3]</th> <th>MESSAGE_TAG Meaning</th> </tr> </thead> <tbody> <tr> <td>0b0000</td> <td>Result is sent to RFIFO 0</td> </tr> <tr> <td>0b0001</td> <td>Result is sent to RFIFO 1</td> </tr> <tr> <td>0b0010</td> <td>Result is sent to RFIFO 2</td> </tr> <tr> <td>0b0011</td> <td>Result is sent to RFIFO 3</td> </tr> <tr> <td>0b0100</td> <td>Result is sent to RFIFO 4</td> </tr> <tr> <td>0b0101</td> <td>Result is sent to RFIFO 5</td> </tr> <tr> <td>0b0110–0b0111</td> <td>Reserved</td> </tr> <tr> <td>0b1000</td> <td>Null message received</td> </tr> <tr> <td>0b1001</td> <td>Reserved for customer use. ¹</td> </tr> <tr> <td>0b1010</td> <td>Reserved for customer use. ¹</td> </tr> <tr> <td>0b1011–0b1111</td> <td>Reserved</td> </tr> </tbody> </table> <p>¹ These messages are treated as null messages. Therefore, they must obey the format for incoming null messages and return valid BUSY0/1 fields. Refer to Section , “Null Message Format for External Device Operation.”</p>	MESSAGE_TAG[0:3]	MESSAGE_TAG Meaning	0b0000	Result is sent to RFIFO 0	0b0001	Result is sent to RFIFO 1	0b0010	Result is sent to RFIFO 2	0b0011	Result is sent to RFIFO 3	0b0100	Result is sent to RFIFO 4	0b0101	Result is sent to RFIFO 5	0b0110–0b0111	Reserved	0b1000	Null message received	0b1001	Reserved for customer use. ¹	0b1010	Reserved for customer use. ¹	0b1011–0b1111	Reserved
MESSAGE_TAG[0:3]	MESSAGE_TAG Meaning																								
0b0000	Result is sent to RFIFO 0																								
0b0001	Result is sent to RFIFO 1																								
0b0010	Result is sent to RFIFO 2																								
0b0011	Result is sent to RFIFO 3																								
0b0100	Result is sent to RFIFO 4																								
0b0101	Result is sent to RFIFO 5																								
0b0110–0b0111	Reserved																								
0b1000	Null message received																								
0b1001	Reserved for customer use. ¹																								
0b1010	Reserved for customer use. ¹																								
0b1011–0b1111	Reserved																								
12–23	Reserved.																								
24–31 ADC_REG_ADDRESS [0:7]	ADC register address. Selects a register on the ADC register set to be written or read. Only half-word addresses can be used. See Table 20-25 .																								

ADC Result Format for On-Chip ADC Operation

When the FIFO control unit receives a return data message, it decodes the MESSAGE_TAG field and stores the 16-bit data into the appropriate RFIFO. This section describes the ADC result portion of the result message returned by the on-chip ADCs.

The 16-bit data stored in the RFIFOs can be the following:

- Data read from an ADC register with a read configuration command. In this case, the stored 16-bit data corresponds to the contents of the ADC register that was read.
- A time stamp. In this case, the stored 16-bit data is the value of the time base counter latched when the eQADC detects the end of the analog input voltage sampling. For details see [Section 20.4.5.3, “Time Stamp Feature.”](#)
- A conversion result. In this case, the stored 16-bit data contains a right justified 14-bit result data. The conversion result can be calibrated or not depending on the status of CAL bit in the command that requested the conversion. When the CAL bit is negated, this 14-bit data is obtained by executing a 2-bit left-shift on the 12-bit data received from the ADC. When the CAL bit is asserted,

this 14-bit data is the result of the calculations performed in the EQADC MAC unit using the 12-bit data received from the ADC and the calibration constants GCC and OCC (See [Section 20.4.5.4, “ADC Calibration Feature”](#)). Then, this 14-bit data is further formatted into a 16-bit format according to the status of the FMT bit in the conversion command. When FMT is asserted, the 14-bit result data is reformatted to look as if it was measured against an imaginary ground at VREF/2 (the msb (most significant bit) bit of the 14-bit result is inverted), and is sign-extended to a 16-bit format as in [Figure 20-29](#). When FMT is negated, the eQADC zero-extends the 14-bit result data to a 16-bit format as in [Figure 20-30](#). Correspondence between the analog voltage in a channel and the calculated digital values is shown in [Table 20-39](#).

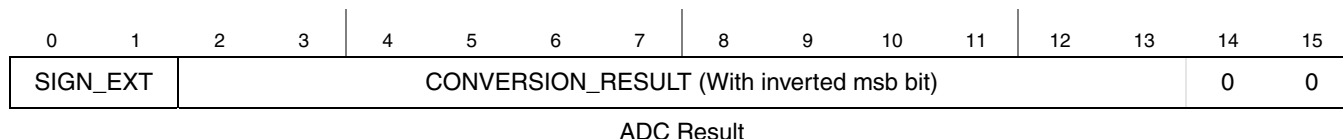


Figure 20-29. ADC Result Format when FMT = 1 (Right Justified Signed)—On-Chip ADC Operation

Table 20-37. ADC Result Format when FMT = 1 Field Descriptions

Field	Description
0–1 SIGN_EXT[0:1]	Sign extension. Only has meaning when FMT is asserted. SIGN_EXT is 0b00 when CONVERSION_RESULT is positive, and 0b11 when CONVERSION_RESULT is negative.
2–15 CONVERSION_RESULT [0:13]	Conversion result. A digital value corresponding to the analog input voltage in a channel when the conversion command was initiated. The two’s complement representation is used to express negative values.

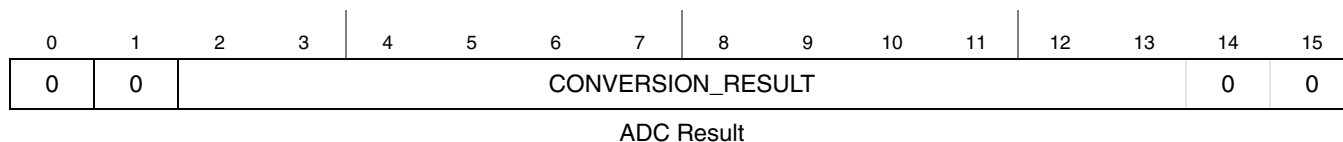


Figure 20-30. ADC Result Format when FMT = 0 (Right Justified Unsigned)—On-Chip ADC Operation

Table 20-38. ADC Result Format when FMT = 0 Field Descriptions

Field	Description
0–1 SIGN_EXT[0:1]	Sign extension. Only has meaning when FMT is asserted. SIGN_EXT is 0b00 when CONVERSION_RESULT is positive, and 0b11 when CONVERSION_RESULT is negative.
2–15 CONVERSION_RESULT [0:13]	Conversion result. A digital value corresponding to the analog input voltage in a channel when the conversion command was initiated.

Table 20-39. Correspondence between Analog Voltages and Digital Values^{1, 2}

	Voltage Level on Channel (V)	Corresponding 12-bit Conversion Result Returned by the ADC	16-bit Result Sent to RFIFOs (FMT=0) ³	16-bit Result Sent to RFIFOs (FMT=1) ³
Single-Ended Conversions	5.12	0xFFF	0x3FFC	0x1FFC
	5.12 – 1sb	0xFFF	0x3FFC	0x1FFC

	2.56	0x800	0x2000	0x0000

	1 1sb	0x001	0x0004	0xE004
	0	0x000	0x0000	0xE000
Differential Conversions	2.56	0xFFF	0x3FFC	0x1FFC
	2.56 – 1sb	0xFFF	0x3FFC	0x1FFC

	0	0x800	0x2000	0x0000

	-2.56 + 1sb	0x001	0x0004	0xE004
	-2.56	0x000	0x0000	0xE000

¹ $V_{REF}=V_{RH} - V_{RL}=5.12V$. Resulting in one 12-bit count (1sb) = 1.25mV.

² The two's complement representation is used to express negative values.

³ Assuming uncalibrated conversion results.

20.4.1.2.2 Message Formats for External Device Operation

This section describes the command messages, data messages, and null messages formats used for external device operation.

Command Message Format for External Device Operation

Figure 20-31 describes the command message format for external device operation. Command message formats for on-chip operation and for external device operation share the same CFIFO header format. However, there are no limitations regarding the format an ADC Command used to communicate to an arbitrary external device. Only the upper bit of an ADC Command has a fixed format (BN field) to indicate to the FIFO control unit/external device to which external command buffer the corresponding command should be sent. The remaining 25 bits can be anything decodable by the external device. Only the ADC command portion of a command message is transferred to the external device.

Enhanced Queued Analog-to-Digital Converter (eQADC)

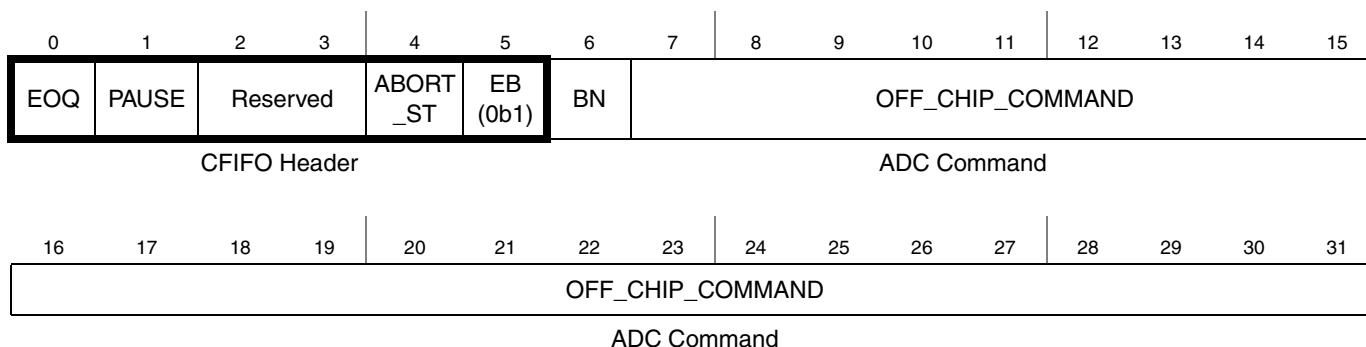


Figure 20-31. Command Message Format for External Device Operation

Table 20-40. On-Chip ADC Field Descriptions: External Device Operation

Field	Description
0 EOQ	End-of-queue. Asserted in the last command of a command queue to indicate to the eQADC that a scan of the queue is completed. EOQ instructs the eQADC to reset its current CFIFO transfer counter value (TC_CF) to 0. Depending on the CFIFO mode of operation, the CFIFO status will also change upon the detection of an asserted EOQ bit on the last transferred command. See Section 20.4.3.5, “CFIFO Scan Trigger Modes,” for details. 0 Not the last entry of the command queue. 1 Last entry of the command queue. Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.
1 PAUSE	Pause bit. Allows software to create sub-queues within a command queue. When the eQADC completes the transfer of a command with an asserted pause bit, the CFIFO enters the WAITING FOR TRIGGER state. Refer to Section 20.4.3.6.1, “CFIFO Operation Status,” for a description of the state transitions. The pause bit is only valid when CFIFO operation mode is configured to single or continuous-scan edge trigger mode. 0 Do not enter WAITING FOR TRIGGER state after transfer of the current command message. 1 Enter WAITING FOR TRIGGER state after transfer of the current command message. Note: If both the pause and EOQ bits are asserted in the same command message the respective flags are set, but the CFIFO status changes as if only the EOQ bit were asserted.
2–3	Reserved.
4 ABORT _ST	ABORT serial transmission. Indicates whether an on-going serial transmission should be aborted or not. All CFIFOs can abort null message transmissions when triggered but only CFIFO0 can abort command transmissions of lower priority CFIFOs. For more on serial transmission aborts see Section 20.4.3.2, “CFIFO Prioritization and Command Transfer.” 0 Do not abort current serial transmission. 1 Abort current serial transmission.
5 EB	External buffer. This bit should always be set for messages sent to an external ADC. 0 Command is sent to an internal command buffer. 1 Command is sent to an external command buffer.
6 BN	Refer to Section , “Conversion Command Message Format for On-Chip ADC Operation.”
7–31 OFF_CHIP_ COMMAND [0:24]	OFF-CHIP COMMAND Field. The OFF_CHIP_COMMAND field can be anything decodable by the external device. It is 25 bits long and it is transferred together with the BN bit to the external device when the CFIFO is triggered. Refer to Section , “Conversion Command Message Format for On-Chip ADC Operation,” for a description of the command message used when interfacing with the on-chip ADCs.

Result Message Format for External Device Operation

Data is returned from the ADCs in the form of result messages. A result message is composed of an RFIFO header and an ADC result. The FIFO control unit decodes the information contained in the RFIFO header and sends the contents of the ADC result to the appropriate RFIFO. Only data stored on the ADC_RESULT field is stored in the RFIFOs/result queues. The ADC result of any received message with a null data message tag will be ignored. The format of a result message returned from the external device is shown in Figure 20-32. It is 26 bits long, and is composed of a MESSAGE_TAG field, information about the status of the buffers (BUSY fields), and result data. The BUSY fields are needed to inform the eQADC about when it is appropriate to transfer commands to the external command buffers.

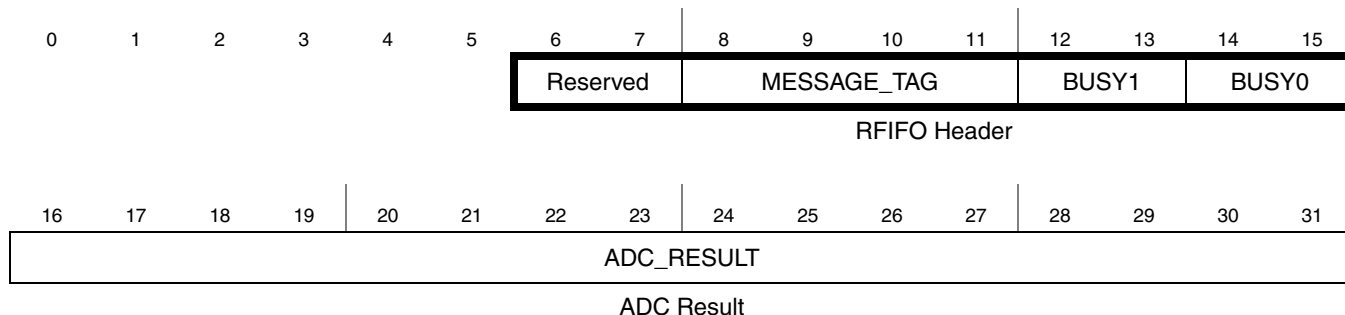


Figure 20-32. Result Message Format for External Device Operation

Table 20-41. Result Message Format for External Device Operation

Field	Description
6–7	Reserved.
8–11 MESSAGE_TAG[0:3]	MESSAGE_TAG Field. Refer to Section , “Conversion Command Message Format for On-Chip ADC Operation.”
12–15 BUSY _n [0:1]	BUSY status. The BUSY fields indicate if the external device can receive more commands. Table 20-42 shows how these two bits are encoded. When an external device cannot accept any more new commands, it must set BUSY _n to a value indicating “Do not send commands” in the returning message. The BUSY fields of values 0b10 and 0b10 can be freely encoded by the external device to allow visibility of the status of the external command buffers for debug. As an example, they could indicate the number of entries in an external command buffer.
16–31 ADC_RESULT [0:15]	ADC RESULT Field. The result data received from the external device or on-chip ADC. This can be the result of a conversion command, data requested via a read configuration command, or time stamp value. The ADC_RESULT of any incoming message with a null message tag will be ignored. When the MESSAGE_TAG is for an RFIFO, the eQADC extracts the 16-bit ADC_RESULT from the raw message and stores it into the appropriate RFIFO.

Table 20-42. Command BUFFER_n BUSY Status¹

BUSY _n [0:1]	Meaning
0b00	Send available commands—command buffer is empty
0b01	Send available commands
0b10	Send available commands
0b11	Do not send commands

¹ After reset, the eQADC always assumes that the external command buffers are full and cannot receive commands.

Null Message Format for External Device Operation

Null messages are only transferred through the serial interface to allow results and unsolicited control data, like the status of the external command buffers, to return when there are no more commands pending to transfer. Null messages are only transmitted when serial transmissions from the eQADC SSI are enabled (see ESSIE field in Section 20.3.2.1, “eQADC Module Configuration Register (EQADC_MCR),”), and when one of the following conditions apply:

1. There are no triggered CFIFOs with commands bound for external command buffers.
2. There are triggered CFIFOs with commands bound for external command buffers but the external buffers are full. The eQADC detected returning BUSY_n fields indicating “Do not send commands.”

Figure 20-33 illustrates the null message send format. When the eQADC transfers a null message, it directly shifts out the 26-bit data content inside the Section 20.3.2.2, “eQADC Null Message Send Format Register (EQADC_NMSFR).” The register must be programmed with the null message send format of the external device.

Figure 20-34 illustrates the null message receive format. It has the same fields found in a result message with the exception that the ADC result is not used. Refer to Section , “Result Message Format for External Device Operation,” for more information. The MESSAGE_TAG field must be set to the null message tag (0b1000). The eQADC does not store into an RFIFO any incoming message with a null message tag.

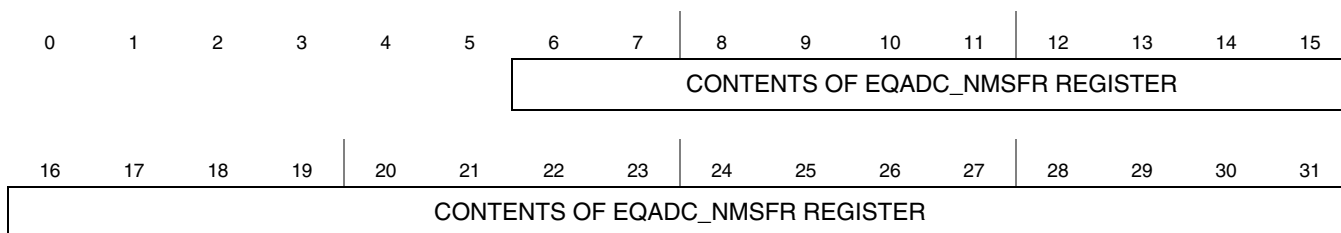


Figure 20-33. Null Message Send Format for External Device Operation

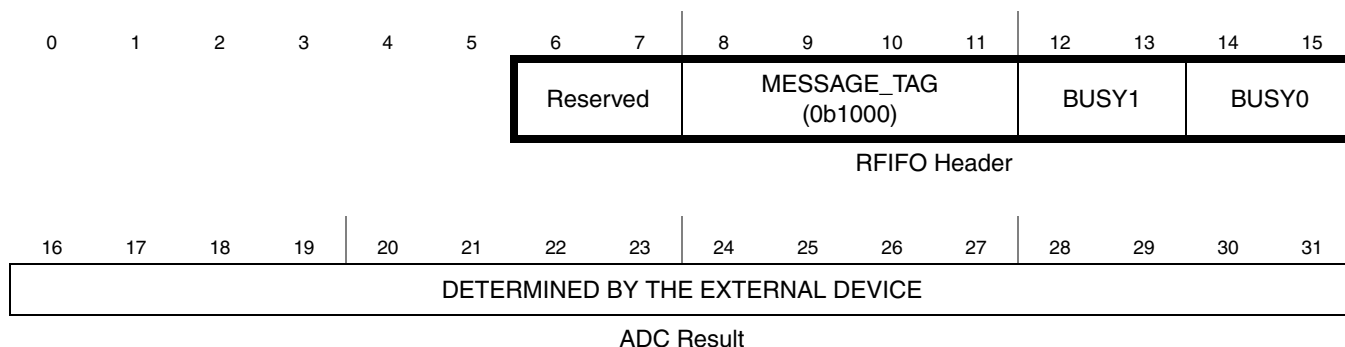


Figure 20-34. Null Message Receive Format for External Device Operation

Table 20-43. Null Message Receive Format for External Device Operation

Field	Description
6–7	Reserved.
8–11 MESSAGE_TAG[0:3]	MESSAGE_TAG field. Refer to Section , “ Conversion Command Message Format for On-Chip ADC Operation. ”
12–15 BUSY _n [0:1]	BUSY status. Refer to Section , “ Result Message Format for External Device Operation. ”
16–31	Determined by the external device.

20.4.2 Command/Result Queues

The command and result queues are actually part of the eQADC system although they are not hardware implemented inside the eQADC. Instead command and result queues are user-defined queues located in system memory. Each command queue entry is a 32-bit command message. The last entry of a command queue has the EOQ bit asserted to indicate that it is the last entry of the queue. The result queue entry is a 16-bit data item.

See [Section 20.1.4, “Modes of Operation,”](#) for a description of the message formats and their flow in eQADC.

Refer to [Section 20.5.5, “Command Queue and Result Queue Usage,”](#) for examples of how command queues and result queues can be used.

20.4.3 eQADC Command FIFOs

20.4.3.1 CFIFO Basic Functionality

There are six prioritized CFIFOs located in the eQADC. Each CFIFO is four entries deep, and each CFIFO entry is 32 bits long. A CFIFO serves as a temporary storage location for the command messages stored in the command queues in system memory. When a CFIFO is not full, the eQADC sets the corresponding CFFF bit in [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR_n\).”](#) If

CFFE is asserted as in [Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 \(EQADC_IDCRn\),”](#) the eQADC generates requests for more commands from a command queue. An interrupt request, served by the host CPU, is generated when CFFS is negated, and a eDMA request, served by the eDMA, is generated when CFFS is asserted. The host CPU or the eDMA respond to these requests by writing to the [Section 20.3.2.4, “eQADC CFIFO Push Registers 0–5 \(EQADC_CFPRn\),”](#) to fill the CFIFO.

NOTE

Only whole words must be written to EQADC_CFPR. Writing half-words or bytes to EQADC_CFPR will still push the whole 32-bit CF_PUSH field into the corresponding CFIFO, but undefined data will fill the areas of CF_PUSH that were not specifically designated as target locations for writing.

[Figure 20-35](#) describes the important components in the CFIFO. Each CFIFO is implemented as a circular set of registers to avoid the need to move all entries at each push/pop operation. The push next data pointer points to the next available CFIFO location for storing data written into the eQADC command FIFO push register. The transfer next data pointer points to the next entry to be removed from CFIFO_n when it completes a transfer. The CFIFO transfer counter control logic counts the number of entries in the CFIFO and generates eDMA or interrupt requests to fill the CFIFO. TNXTPTR in [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISRn\),”](#) indicates the index of the entry that is currently being addressed by the transfer next data pointer, and CFCTR, in the same register, provides the number of entries stored in the CFIFO.

Using TNXTPTR and CFCTR, the absolute addresses for the entries indicated by the transfer next data pointer and by the push next data pointer can be calculated using the following formulas:

$$\begin{aligned} \text{Transfer Next Data Pointer Address} &= \text{CFIFO}_n\text{_BASE_ADDRESS} + \text{TNXTPTR}_n * 4 \\ \text{Push Next Data Pointer Address} &= \text{CFIFO}_n\text{_BASE_ADDRESS} + \\ &[(\text{TNXTPTR}_n + \text{CFCTR}_n) \bmod \text{CFIFO_DEPTH}] * 4 \end{aligned}$$

where

- *a mod b* returns the remainder of the division of *a* by *b*.
- CFIFO_n_BASE_ADDRESS is the smallest memory mapped address allocated to a CFIFO_n entry.
- CFIFO_DEPTH is the number of entries contained in a CFIFO - four in this implementation.

When CFS_n in [Section 20.3.2.11, “eQADC CFIFO Status Register \(EQADC_CFSR\),”](#) is in the TRIGGERED state, the eQADC generates the proper control signals for the transfer of the entry pointed by transfer next data pointer. CFUF_n in [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISRn\),”](#) is set when a CFIFO_n underflow event occurs. A CFIFO underflow occurs when the CFIFO is in the TRIGGERED state and it becomes empty. No commands will be transferred from an underflowing CFIFO, nor will command transfers from lower priority CFIFOs be blocked. CFIFO_n is empty when the transfer next data pointer *n* equals the push next data pointer *n* and CFCTR_n is 0. CFIFO_n is full when the transfer next data pointer *n* equals the push next data pointer *n* and CFCTR_n is not 0.

When the eQADC completes the transfer of an entry from CFIFO_n: the transferred entry is popped from CFIFO_n, the CFIFO counter CFCTR in the [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISRn\),”](#) is decremented by 1, and transfer next data pointer *n* is incremented by 1 (or

wrapped around) to point to the next entry in the CFIFO. The transfer of entries bound for the on-chip ADCs is considered completed when they are stored in the appropriate ADC command buffer. The transfer of entries bound for the external device is considered completed when the serial transmission of the entry is completed.

When the EQADC_CFPR n is written and CFIFO n is not full, the CFIFO counter CFCTR n is incremented by 1, and the push next data pointer n then is incremented by 1 (or wrapped around) to point to the next entry in the CFIFO.

When the EQADC_CFPR n is written but CFIFO n is full, the eQADC will not increment the counter value and will not overwrite any entry in CFIFO n .

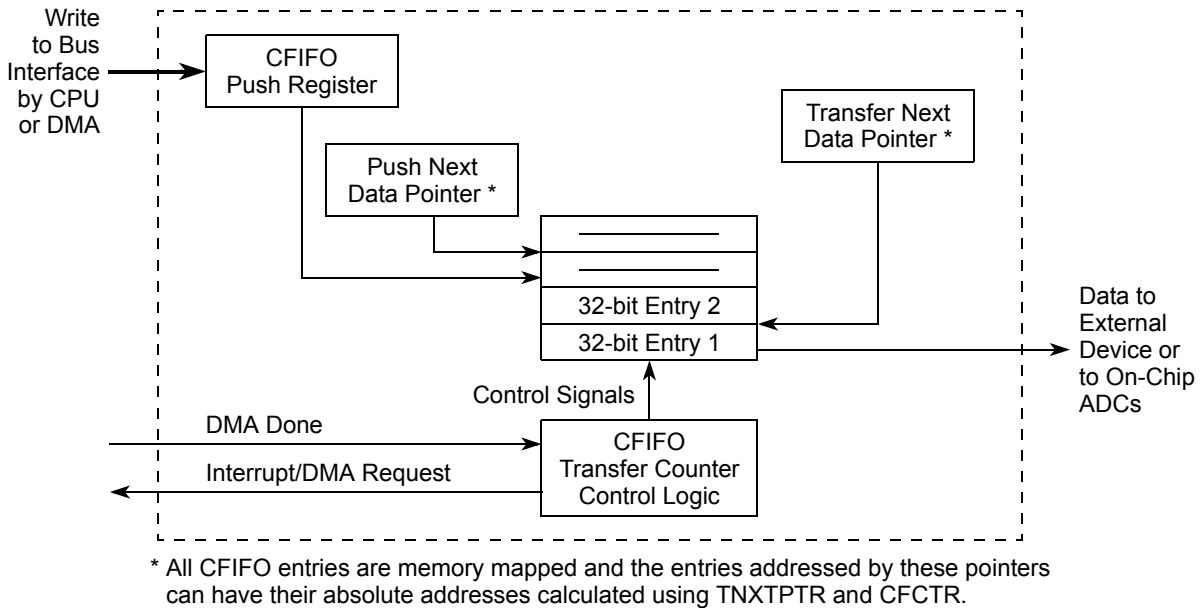


Figure 20-35. CFIFO Diagram

The detailed behavior of the push next data pointer and transfer next data pointer is described in the example shown in [Figure 20-36](#) where a CFIFO with 16 entries is shown for clarity of explanation, the actual hardware implementation has only four entries. In this example, CFIFO n with 16 entries is shown in sequence after pushing and transferring entries.

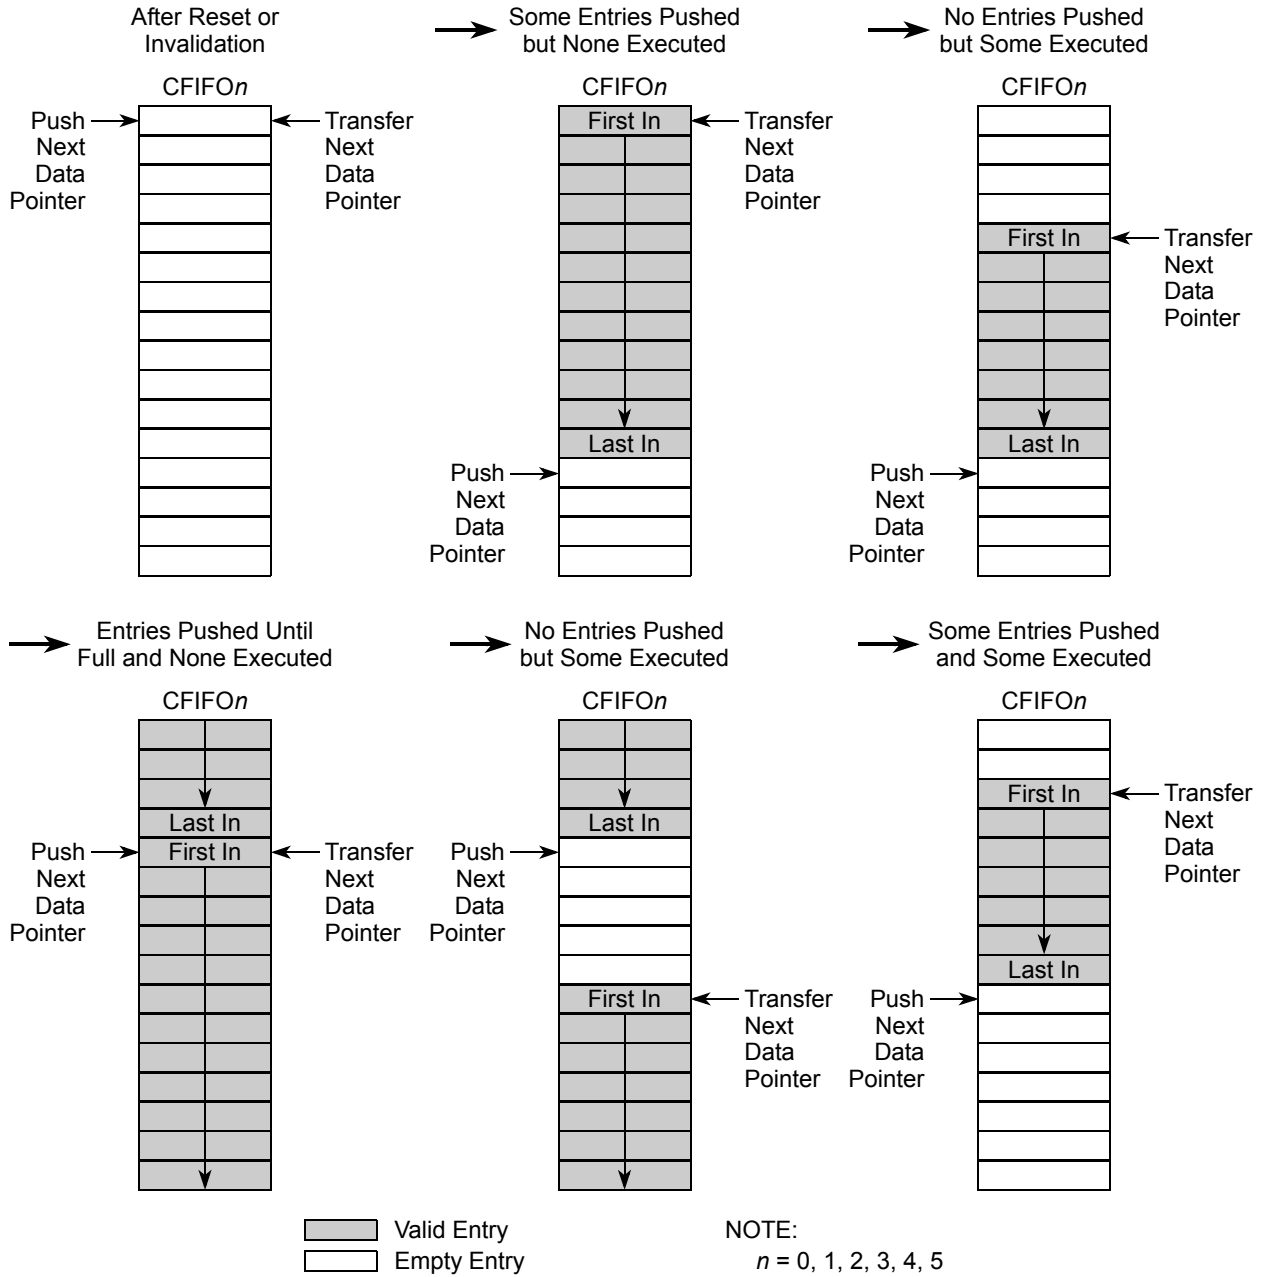


Figure 20-36. CFIFO Entry Pointer Example

20.4.3.2 CFIFO Prioritization and Command Transfer

The CFIFO priority is fixed according to the CFIFO number. A CFIFO with a smaller number has a higher priority. When commands of distinct CFIFOs are bound for the same destination (the same on-chip ADC), the higher priority CFIFO is always served first. A triggered, not-underflowing CFIFO will start the transfer of its commands when the following occur:

- Its commands are bound for an internal command buffer that is not full, and it is the highest priority triggered CFIFO sending commands to that buffer.

- Its commands are bound for an external command buffer that is not full, and it is the highest priority triggered CFIFO sending commands to an external buffer that is not full.

A triggered CFIFO with commands bound for a certain command buffer consecutively transfers its commands to the buffer until one of the following occurs:

- An asserted end of queue bit is reached.
- An asserted pause bit is encountered and the CFIFO is configured for edge trigger mode.
- CFIFO is configured for level trigger mode and a closed gate is detected.
- In case its commands are bound for an internal command buffer, a higher priority CFIFO that uses the same internal buffer is triggered.
- In case its commands are bound for an external command buffer, a higher priority CFIFO that uses an external buffer is triggered.

The prioritization logic of the eQADC, depicted in [Figure 20-37](#), is composed of three independent submodules: one that prioritizes CFIFOs with commands bound for ADC0, another that prioritizes CFIFOs with commands for ADC1, and a last one that prioritizes CFIFOs with commands for external command buffer 2 and buffer 3. As these three submodules are independent, simultaneous commands to ADC0, to ADC1, and to eQADC SSI transmit buffer are allowed. The hardware identifies the destination of a command by decoding the EB and BN bits in the command message (see [Section 20.4.1.2, “Message Format in eQADC,”](#) for details).

NOTE

Triggered but empty CFIFOs, underflowing CFIFOs, are not considered for prioritization. No data from these CFIFOs will be sent to either of the on-chip ADCs or to either of the external command buffers, nor will they stop lower priority CFIFOs from transferring commands.

Whenever ADC0 is able to receive new commands, the prioritization submodule selects the highest-priority triggered CFIFO with a command bound for ADC0, and sends it to the ADC. In case ADC0 is able to receive new entries but there are no triggered CFIFOs with commands bound for it, nothing is sent. The submodule prioritizing ADC1 usage behaves in the same way.

When the eQADC SSI is enabled and ready to start serial transmissions, the submodule prioritizing eQADC SSI usage writes command or null messages into the eQADC SSI transmit buffer, data written to the eQADC SSI transmit buffer is subsequently transmitted to the external device through the eQADC SSI link. The submodule writes commands to the eQADC SSI transmit buffer when there are triggered CFIFOs with commands bound for not-full external command buffers. The command written to the transmit buffer belongs to the highest priority CFIFO sending commands to an external buffer that is not full. This implies that a lower priority CFIFO can have its commands sent if a higher priority CFIFO cannot send its commands due to a full command buffer. The submodule writes null messages to the eQADC SSI transmit buffer when there are no triggered CFIFOs with commands bound for external command buffers, or when there are triggered CFIFOs with commands bound for external buffers but the external buffers are full. The eQADC monitors the status of the external buffers by decoding the BUSY fields of the incoming result messages from the external device (see [Section , “Result Message Format for External Device Operation,”](#) for details).

NOTE

When a lower priority CFIFO is served first because a higher priority CFIFO cannot send its commands due to a full external command buffer, there is a possibility that command transfers from the lower priority CFIFO will be interrupted and the CFIFO will become non-coherent, when the higher priority CFIFO again becomes ready to send commands. Whether the lower priority CFIFO becomes non-coherent or not depends on the rate at which commands on the external ADCs are executed, on the rate at which commands are transmitted to the external command buffers, and on the depth of those buffers.

Once a serial transmission is started, the submodule monitors triggered CFIFOs and manages the abort of serial transmissions. In case a null message is being transmitted, the serial transmission is aborted when all of the following conditions are met:

- A not-underflowing CFIFO in the TRIGGERED state has commands bound for an external command buffer that is not full, and it is the highest priority CFIFO sending commands to an external buffer that is not full.
- The ABORT_ST bit of the command to be transmitted is asserted.
- The 26th bit of the currently transmitting null message has not being shifted out.

The command from the CFIFO is then written into eQADC SSI transmit buffer, allowing for a new serial transmission to initiate.

In case a command is being transmitted, the serial transmission is aborted when all following conditions are met:

- CFIFO0 is in the TRIGGERED state, is not underflowing, and its current command is bound for an external command buffer that is not full.
- The ABORT_ST bit of the command to be transmitted is asserted.
- The 26th bit of the currently transmitting command has not being shifted out.

The command from CFIFO0 is then written into eQADC SSI transmit buffer, allowing for a new serial transmission to initiate.

NOTE

The aborted command is not popped from the preempted CFIFO and will be retransmitted as soon as its CFIFO becomes the highest priority CFIFO sending commands to an unfilled external command buffer.

After a serial transmission is completed, the eQADC prioritizes the CFIFOs and schedules a command or a null message to be sent in the next serial transmission. After the data for the next transmission has been defined and scheduled, the eQADC can, under certain conditions, stretch the \overline{SDS} negation time in order to allow the schedule of new data for that transmission. This occurs when the eQADC acknowledges that the status of a higher-priority CFIFO has changed to the TRIGGERED state and attempts to schedule that

CFIFO command before $\overline{\text{SDS}}$ is asserted. Only commands of CFIFOs that have the ABORT_ST bit asserted can be scheduled in this manner. Under such conditions:

1. A CFIFO0 command is scheduled for the next transmission independently of the type of data that was previously scheduled. The time during which $\overline{\text{SDS}}$ is negated is stretched in order to allow the eQADC to load the CFIFO0 command and start its transmission.
2. CFIFO1-5 commands are only scheduled for the next transmission if the previously scheduled data was a null message. The time during which $\overline{\text{SDS}}$ is negated is stretched in order to allow the eQADC to load that command and start its transmission. However, if the previously scheduled data was a command, no rescheduling occurs and the next transmission starts without delays.

If a CFIFO becomes triggered while $\overline{\text{SDS}}$ is negated, but the eQADC only attempts to reschedule that CFIFO command after $\overline{\text{SDS}}$ is asserted, then the current transmission is aborted depending on if the conditions for that are met or not.

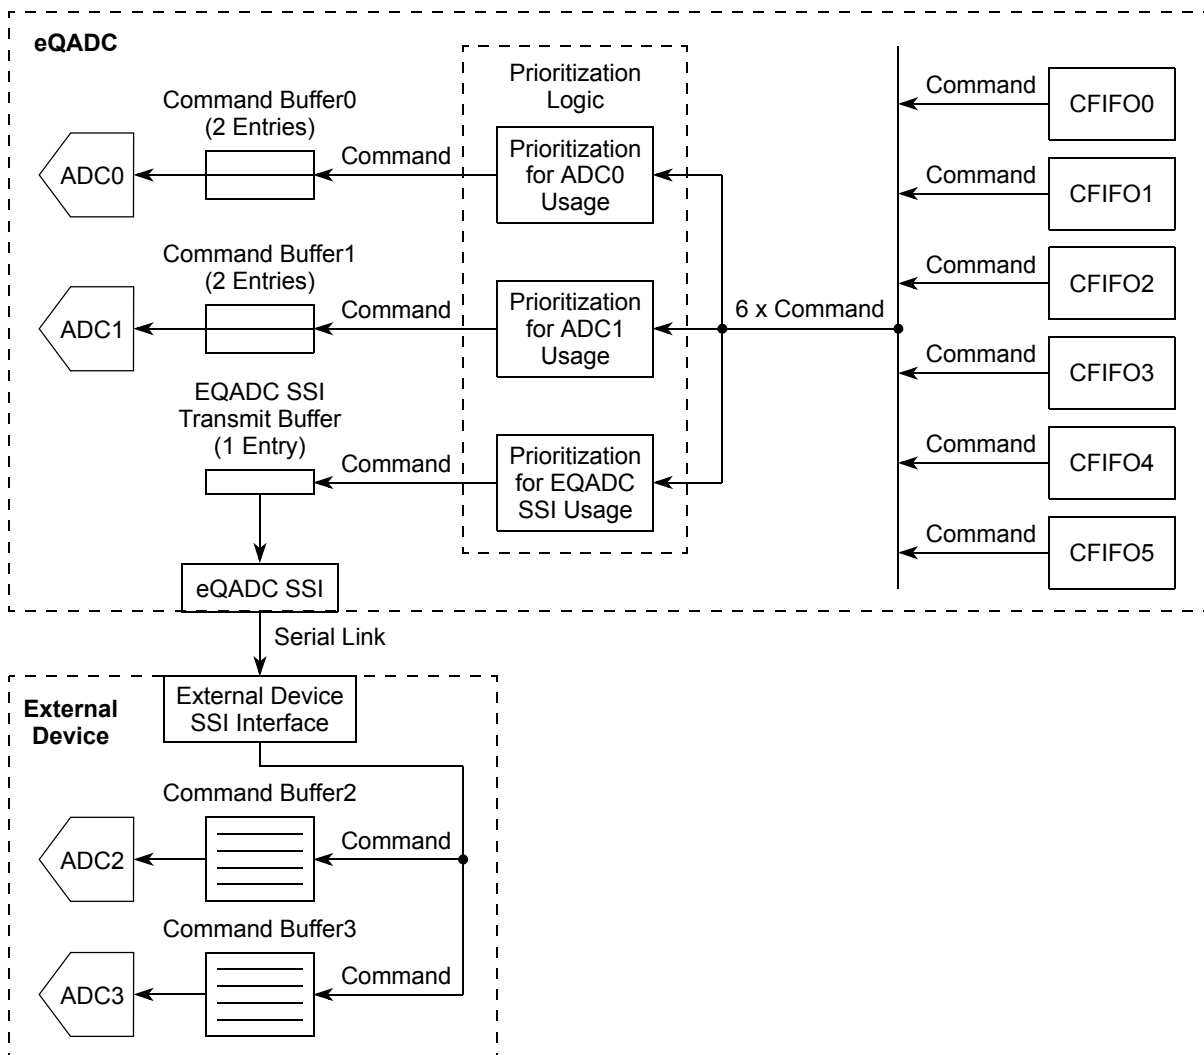


Figure 20-37. CFIFO Prioritization Logic

20.4.3.3 External Trigger from eTPU or eMIOS Channels

The six eQADC external trigger inputs can be connected to either an external pin (either ETRIG0, ETRIG1, GPIO206, or GPIO207), an eTPU channel, or an eMIOS channel. The input source for each eQADC external trigger is individually specified in the eQADC trigger input select register (SIU_ETISR) in the SIU block.

The eQADC trigger numbers specified by SIU_ETISR[TSEL(0-5)] correspond to CFIFO numbers 0-5. To calculate the CFIFO number that each trigger is connected to, divide the eDMA channel number by 2.

A complete description of the eTPU and eMIOS trigger function and configuration is found in [Section 6.4.5.1, “eQADC External Trigger Input Multiplexing.”](#)

20.4.3.4 External Trigger Event Detection

The digital filter length field in [Section 20.3.2.3, “eQADC External Trigger Digital Filter Register \(EQADC_ETDFR\),”](#) specifies the minimum number of system clocks that the external trigger signals 0 and 1 must be held at a logic level to be recognized as valid. All ETRIG signals are filtered. A counter for each queue trigger is implemented to detect a transition between logic levels. The counter counts at the system clock rate. The corresponding counter is cleared and restarted each time the signal transitions between logic levels. When the corresponding counter matches the value specified by the digital filter length field in [Section 20.3.2.3, “eQADC External Trigger Digital Filter Register \(EQADC_ETDFR\),”](#) the eQADC considers the ETRIG logic level to be valid and passes that new logic level to the rest of the eQADC.

The filter is only for filtering the ETRIG signal. Logic after the filter checks for transitions between filtered values, such as for detecting the transition from a filtered logic level zero to a filtered logic level one in rising edge external trigger mode. The eQADC can detect rising edge, falling edge, or level gated external triggers. The digital filter will always be active independently of the status of the MODE_n field in [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCRn\),”](#) but the edge, level detection logic is only active when MODE_n is set to a value different from disabled, and in case MODE_n is set to single scan mode, when the SSS bit is asserted. Note that the time necessary for a external trigger event to result into a CFIFO status change is not solely determined by the DFL field in the [Section 20.3.2.3, “eQADC External Trigger Digital Filter Register \(EQADC_ETDFR\).”](#) After being synchronized to the system clock and filtered, a trigger event is checked against the CFIFO trigger mode. Only then, after a valid trigger event is detected, the eQADC accordingly changes the CFIFO status. Refer to [Figure 20-38](#) for an example.

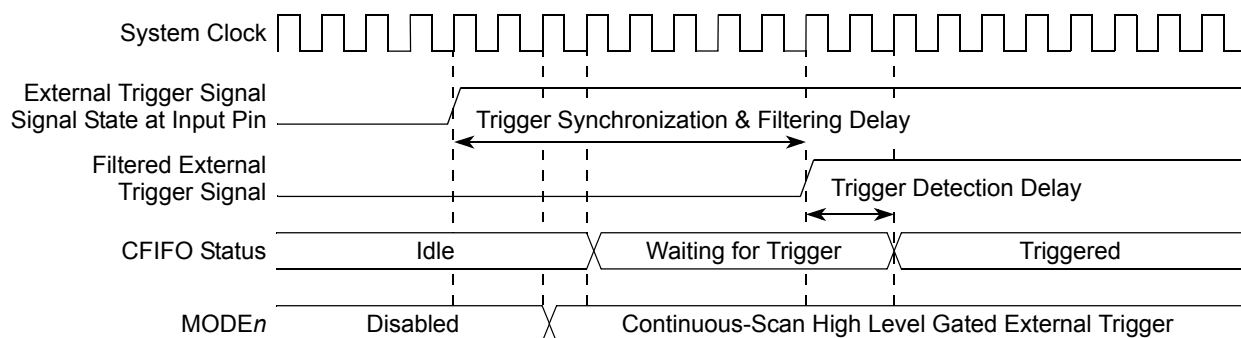


Figure 20-38. ETRIG Event Propagation Example

20.4.3.5 CFIFO Scan Trigger Modes

The eQADC supports two different scan modes, single-scan and continuous-scan. Refer to [Table 20-44](#) for a summary of these two scan modes. When a CFIFO is triggered, the eQADC scan mode determines whether the eQADC will stop command transfers from a CFIFO, and wait for software intervention to rearm the CFIFO to detect new trigger events, upon detection of an asserted EOQ bit in the last transfer. Refer to [Section 20.4.1.2, “Message Format in eQADC,”](#) for details about command formats.

CFIFOs can be configured in single-scan or continuous-scan mode. When a CFIFO is configured in single-scan mode, the eQADC scans the command queue one time. The eQADC stops future command transfers from the triggered CFIFO after detecting the EOQ bit set in the last transfer. After a EOQ bit is detected, software involvement is required to rearm the CFIFO so that it can detect new trigger events.

When a CFIFO is configured for continuous-scan mode, no software involvement is necessary to rearm the CFIFO to detect new trigger events after an asserted EOQ is detected. In continuous-scan mode the whole command queue is scanned multiple times.

The eQADC also supports different triggering mechanisms for each scan mode. The eQADC will not transfer commands from a CFIFO until the CFIFO is triggered. The combination of scan modes and triggering mechanisms allows the support of different requirements for scanning input channels. The scan mode and trigger mechanism are configured by programming the $MODE_n$ field in [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCRn\).”](#)

Enabled CFIFOs can be triggered by software or external trigger events. The elapsed time from detecting a trigger to transferring a command is a function of clock frequency, trigger synchronization, trigger filtering, programmable trigger events, command transfer, CFIFO prioritization, ADC availability, etc. Fast and predictable transfers can be achieved by ensuring that the CFIFO is not underflowing and that the target ADC can accept commands when the CFIFO is triggered.

20.4.3.5.1 Disabled Mode

The $MODE_n$ field in [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCRn\),”](#) for all of the CFIFOs can be changed from any other mode to disabled at any time. No trigger event can initiate command transfers from a CFIFO which has its MODE field programmed to disabled.

NOTE

If $MODE_n$ is not disabled, it must not be changed to any other mode besides disabled. If $MODE_n$ is disabled and the CFIFO status is IDLE, $MODE_n$ can be changed to any other mode.

If $MODE_n$ is changed to disabled:

- The CFIFO execution status will change to IDLE. The timing of this change depends on whether a command is being transferred or not:
 - When no command transfer is in progress, the eQADC switches the CFIFO to IDLE status immediately.
 - When a command transfer to an on-chip ADC is in progress, the eQADC will complete the transfer, update TC_CF, and switch CFIFO status to IDLE. Command transfers to the internal ADCs are considered completed when a command is written to the relevant buffer.
 - When a command transfer to an external command buffer is in progress, the eQADC will abort the transfer and switch CFIFO status to IDLE. If the eQADC cannot abort the transfer, that is when the 26th bit of the serial message has being already shifted out, the eQADC will complete the transfer, update TC_CF and then switch CFIFO status to IDLE.
- The CFIFOs are not invalidated automatically. The CFIFO still can be invalidated by writing a 1 to the CFINV n bit (see [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCR \$n\$ \)”](#)). Certify that CFS has changed to IDLE before setting CFINV n .
- The TC_CF n value also is not reset automatically, but it can be reset by writing 0 to it.
- The EQADC_FISR n [SSS] bit (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)) is negated. The SSS bit can be set even if a 1 is written to the EQADC_CFCR[SSE] bit (see [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCR \$n\$ \)”](#)) in the same write that the $MODE_n$ field is changed to a value other than disabled.
- The trigger detection hardware is reset. If $MODE_n$ is changed from disabled to an edge trigger mode, a new edge, matching that edge trigger mode, is needed to trigger the command transfers from the CFIFO.

NOTE

CFIFO fill requests, which generated when CFFF is asserted, are not automatically halted when $MODE_n$ is changed to disabled. CFIFO fill requests will still be generated until EQADC_IDCR n [CFFE] bit is cleared (see [Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 \(EQADC_IDCR \$n\$ \)”](#)).

20.4.3.5.2 Single-Scan Mode

In single-scan mode, a single pass through a sequence of command messages in the user-defined command queue is performed.

In single-scan software trigger mode, the CFIFO is triggered by an asserted single-scan status bit, EQADC_FISR n [SSS] (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5](#)

(EQADC_FISRn”). The SSS bit is set by writing 1 to the single-scan enable bit, EQADC_CFCRn[SSE] (see Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn”)”).

In single-scan edge- or level-trigger mode, the respective triggers are only detected when the SSS bit is asserted. When the SSS bit is negated, all trigger events for that CFIFO are ignored. Writing a 1 to the SSE bit can be done during the same write cycle that the CFIFO operation mode is configured.

Only the eQADC can clear the SSS bit. Once SSS is asserted, it remains asserted until the eQADC completes the command queue scan, or the CFIFO operation mode, EQADC_CFCRn[MODEn] (see Section 20.3.2.6) is changed to disabled. The SSS_n bit will be negated while MODE_n is disabled.

Single-Scan Software Trigger

When single-scan software trigger mode is selected, the CFIFO is triggered by an asserted SSS bit. The SSS bit is asserted by writing 1 to the SSE bit. Writing to SSE while SSS is already asserted will not have any effect on the state of the SSS bit, nor will it cause a trigger overrun event.

The CFIFO commands start to be transferred when the CFIFO becomes the highest priority CFIFO using an available on-chip ADC or an external command buffer that is not full. When an asserted EOQ bit is encountered, the eQADC will clear the SSS bit. Setting the SSS bit is required for the eQADC to start the next scan of the queue.

The pause bit has no effect in single-scan software trigger mode.

Single-Scan Edge Trigger

When SSS is asserted and an edge triggered mode is selected for a CFIFO, an appropriate edge on the associated trigger signal causes the CFIFO to become triggered. For example, if rising-edge trigger mode is selected, the CFIFO becomes triggered when a rising edge is sensed on the trigger signal. The CFIFO commands start to be transferred when the CFIFO becomes the highest priority CFIFO using an available on-chip ADC, or an external command buffer that is not full.

When an asserted EOQ bit is encountered, the eQADC clears SSS and stops command transfers from the CFIFO. An asserted SSS bit and a subsequent edge trigger event are required to start the next scan for the CFIFO. When an asserted pause bit is encountered, the eQADC stops command transfers from the CFIFO, but SSS remains set. Another edge trigger event is required for command transfers to continue. A trigger overrun happens when the CFIFO is in a TRIGGERED state and an edge trigger event is detected.

Single-Scan Level Trigger

When SSS is asserted and a level gated trigger mode is selected, the input level on the associated trigger signal puts the CFIFO in a TRIGGERED state. When the CFIFO is set to high-level gated trigger mode, a high level signal opens the gate, and a low level closes the gate. When the CFIFO is set to low-level gated trigger mode, a low level signal opens the gate, and a high level closes the gate. If the corresponding level is already present, setting the SSS bit triggers the CFIFO. The CFIFO commands start to be transferred when the CFIFO becomes the highest priority CFIFO using an available on-chip ADC or an external command buffer that is not full.

The eQADC clears the SSS bit and stops transferring commands from a triggered CFIFO when an asserted EOQ bit is encountered or when CFIFO status changes from triggered due to the detection of a closed gate.

If a closed gate is detected while no command transfers are taking place and the CFIFO status is triggered, the CFIFO status is immediately changed to IDLE, the SSS bit is negated, and the PF flag is asserted. If a closed gate is detected during the serial transmission of a command to the external device, it will have no effect on the CFIFO status until the transmission completes. Once the transmission is completed, the TC_CF counter is updated, the SSS bit is negated, the PF flag is asserted, and the CFIFO status is changed to IDLE. An asserted SSS bit and a level trigger are required to restart the CFIFO. Command transfers will restart from the point they have stopped.

If the gate closes and opens during the same serial transmission of a command to the external device, it will have no effect on the CFIFO status or on the PF flag, but the TORF flag will become asserted as was exemplified in [Figure 20-40](#). Therefore, closing the gate for a period less than a serial transmission time interval does not guarantee that the closure will affect command transfers from a CFIFO.

The pause bit has no effect in single-scan level-trigger mode.

20.4.3.5.3 Continuous-Scan Mode

In continuous-scan mode, multiple passes looping through a sequence of command messages in a command queue are executed. When a CFIFO is programmed for a continuous-scan mode, the EQADC_CFCRn[SSE] (see [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCRn\)”](#)) does not have any effect.

Continuous-Scan Software Trigger

When a CFIFO is programmed to continuous-scan software trigger mode, the CFIFO is triggered immediately. The CFIFO commands start to be transferred when the CFIFO becomes the highest priority CFIFO using an available on-chip ADC or an external command buffer that is not full. When a CFIFO is programmed to run in continuous-scan software trigger mode, the eQADC will not halt transfers from the CFIFO until the CFIFO operation mode is modified to disabled or a higher priority CFIFO preempts it. Although command transfers will not stop upon detection of an asserted EOQ bit, the EOQF is set and, if enabled, an EOQ interrupt request is generated.

The pause bit has no effect in continuous-scan software trigger mode.

Continuous-Scan Edge Trigger

When rising, falling, or either edge trigger mode is selected for a CFIFO, a corresponding edge on the associated ETRIG signal places the CFIFO in a TRIGGERED state. The CFIFO commands start to be transferred when the CFIFO becomes the highest priority CFIFO using an available on-chip ADC or an external command buffer that is not full.

When an EOQ or a pause is encountered, the eQADC halts command transfers from the CFIFO and, if enabled, the appropriate interrupt requests are generated. Another edge trigger event is required to resume command transfers but no software involvement is required to rearm the CFIFO in order to detect such event.

A trigger overrun happens when the CFIFO is already in a TRIGGERED state and a new edge trigger event is detected.

Continuous-Scan Level Trigger

When high or low level gated trigger mode is selected, the input level on the associated trigger signal places the CFIFO in a TRIGGERED state. When high-level gated trigger is selected, a high-level signal opens the gate, and a low level closes the gate. The CFIFO commands start to be transferred when the CFIFO becomes the highest priority CFIFO using an available on-chip ADC or an external buffer that is not full. Although command transfers will not stop upon detection of an asserted EOQ bit at the end of a command transfer, the EOQF is asserted and, if enabled, an EOQ interrupt request is generated.

The eQADC stops transferring commands from a triggered CFIFO when CFIFO status changes from triggered due to the detection of a closed gate. If a closed gate is detected while no command transfers are taking place and the CFIFO status is TRIGGERED, the CFIFO status is immediately changed to waiting for trigger and the PF flag is asserted. If a closed gate is detected during the serial transmission of a command to the external device, it will have no effect on the CFIFO status until the transmission completes. Once the transmission is completed, the TC_CF counter is updated, the PF flag is asserted, and the CFIFO status is changed to waiting for trigger. Command transfers will restart as the gate opens.

If the gate closes and opens during the same serial transmission of a command to the external device, it will have no effect on the CFIFO status or on the PF flag, but the TORF flag will become asserted as was exemplified in [Figure 20-40](#). Therefore, closing the gate for a period less than a serial transmission time interval does not guarantee that the closure will affect command transfers from a CFIFO.

The pause bit has no effect in continuous-scan level-trigger mode.

20.4.3.5.4 CFIFO Scan Trigger Mode Start/Stop Summary

[Table 20-44](#) summarizes the start and stop conditions of command transfers from CFIFOs for all of the single-scan and continuous-scan trigger modes.

Table 20-44. CFIFO Scan Trigger Mode—Command Transfer Start/Stop Summary

Trigger Mode	Requires Asserted SSS to Recognize Trigger Events?	Command Transfer Start/Restart Condition	Stop on asserted EOQ bit ¹ ?	Stop on asserted Pause bit ² ?	Other Command Transfer Stop Condition ^{3 4}
Single Scan Software	Not Applicable	Asserted SSS bit.	Yes	No	None.
Single Scan Edge	Yes	A corresponding edge occurs when the SSS bit is asserted.	Yes	Yes	None.
Single Scan Level	Yes	Gate is opened when the SSS bit is asserted.	Yes	No	The eQADC also stops transfers from the CFIFO when CFIFO status changes from triggered due to the detection of a closed gate. ⁵
Continuous Scan Software	No	CFIFO starts automatically after being configured into this mode.	No	No	None.

Table 20-44. CFIFO Scan Trigger Mode—Command Transfer Start/Stop Summary

Trigger Mode	Requires Asserted SSS to Recognize Trigger Events?	Command Transfer Start/Restart Condition	Stop on asserted EOQ bit ¹ ?	Stop on asserted Pause bit ² ?	Other Command Transfer Stop Condition ^{3 4}
Continuous Scan Edge	No	A corresponding edge occurs.	Yes	Yes	None.
Continuous Scan Level	No	Gate is opened.	No	No	The eQADC also stops transfers from the CFIFO when CFIFO status changes from triggered due to the detection of a closed gate. ⁵

¹ Refer to [Section 20.4.3.6.2, “Command Queue Completion Status,”](#) for more information on EOQ.

² Refer to [Section 20.4.3.6.3, “Pause Status,”](#) for more information on pause.

³ The eQADC always stops command transfers from a CFIFO when the CFIFO operation mode is disabled.

⁴ The eQADC always stops command transfers from a CFIFO when a higher priority CFIFO is triggered. Refer to [Section 20.4.3.2, “CFIFO Prioritization and Command Transfer,”](#) for information on CFIFO priority.

⁵ If a closed gate is detected while no command transfers are taking place, it will have immediate effect on the CFIFO status. If a closed gate is detected during the serial transmission of a command to the external device, it will have no effect on the CFIFO status until the transmission completes.

20.4.3.6 CFIFO and Trigger Status

20.4.3.6.1 CFIFO Operation Status

Each CFIFO has its own CFIFO status field. CFIFO status (CFS) can be read from EQADC_CFSSR (see [Section 20.3.2.11, “eQADC CFIFO Status Register \(EQADC_CFSR\).”](#) [Figure 20-39](#) and [Table 20-45](#) indicate the CFIFO status switching condition. Refer to [Table 20-18](#) for the meaning of each CFIFO operation status. The last CFIFO to transfer a command to an on-chip ADC can be read from the LCFT_n ($n=0,1$) fields (see [Section 20.3.2.10, “eQADC CFIFO Status Snapshot Registers 0–2 \(EQADC_CFSSR_n\).”](#) The last CFIFO to transfer a command to a specific external command buffer can be identified by reading the EQADC_CFSSR_n[LCFTSSI] and EQADC_CFSSR_n[ENI] fields (see [Section 20.3.2.10, “eQADC CFIFO Status Snapshot Registers 0–2 \(EQADC_CFSSR_n\).”](#)

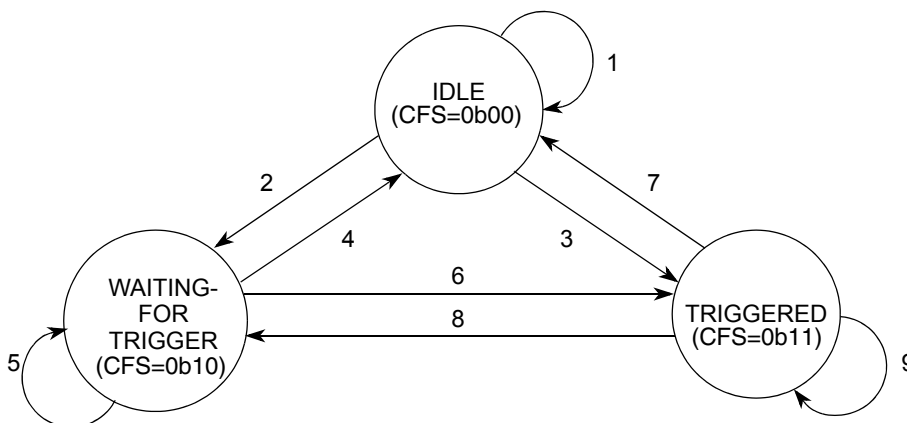


Figure 20-39. State Machine of CFIFO Status

Table 20-45. Command FIFO Status Switching Condition

No.	From Current CFIFO Status (CFS)	To New CFIFO Status (CFS)	Status Switching Condition
1	IDLE (00)	IDLE (0b00)	<ul style="list-style-type: none"> CFIFO mode is programmed to disabled, OR CFIFO mode is programmed to single-scan edge or level trigger mode and SSS is negated.
2		WAITING FOR TRIGGER (0b10)	<ul style="list-style-type: none"> CFIFO mode is programmed to continuous-scan edge or level trigger mode, OR CFIFO mode is programmed to single-scan edge or level trigger mode and SSS is asserted, OR CFIFO mode is programmed to single-scan software trigger mode.
3		TRIGGERED (0b11)	<ul style="list-style-type: none"> CFIFO mode is programmed to continuous-scan software trigger mode
4	WAITING FOR TRIGGER (10)	IDLE (0b00)	<ul style="list-style-type: none"> CFIFO mode is modified to disabled mode.
5		WAITING FOR TRIGGER (0b10)	<ul style="list-style-type: none"> No trigger occurred.
6		TRIGGERED (0b11)	<ul style="list-style-type: none"> Appropriate edge or level trigger occurred, OR CFIFO mode is programmed to single-scan software trigger mode and SSS bit is asserted.

Table 20-45. Command FIFO Status Switching Condition (continued)

No.	From Current CFIFO Status (CFS)	To New CFIFO Status (CFS)	Status Switching Condition
7	TRIGGERED (11)	IDLE (0b00)	<ul style="list-style-type: none"> CFIFO in single-scan mode, eQADC detects the EOQ bit asserted at end of command transfer, and CFIFO mode is not modified to disabled, OR CFIFO, in single-scan level trigger mode, and the gate closes while no commands are being transferred from the CFIFO, and CFIFO mode is not modified to disabled, OR CFIFO, in single-scan level trigger mode, and eQADC detects a closed gated at end of command transfer, and CFIFO mode is not modified to disabled, OR CFIFO mode is modified to disabled mode and CFIFO was not transferring commands. CFIFO mode is modified to disabled mode while CFIFO was transferring commands, and CFIFO completes or aborts the transfer.
8	TRIGGERED (11)	WAITING FOR TRIGGER (0b10)	<ul style="list-style-type: none"> CFIFO in single or continuous-scan edge trigger mode, eQADC detects the pause bit asserted at the end of command transfer, the EOQ bit in the same command is negated, and CFIFO mode is not modified to disabled, OR CFIFO in continuous-scan edge trigger mode, eQADC detects the EOQ bit asserted at the end of command transfer, and CFIFO mode is not modified to disabled, OR CFIFO, in continuous-scan level trigger mode, and the gate closes while no commands are being transferred from the CFIFO, and CFIFO mode is not modified to disabled, OR CFIFO, in continuous-scan level trigger mode, and eQADC detects a closed gated at end of command transfer, and CFIFO mode is not modified to disabled.
9		TRIGGERED (0b11)	<ul style="list-style-type: none"> No event to switch to IDLE or WAITING FOR TRIGGER status has happened.

20.4.3.6.2 Command Queue Completion Status

The end of queue flag, EQADC_FISRn[EOQF] (see Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”) is asserted when the eQADC completes the transfer of a CFIFO entry with an asserted EOQ bit. Software sets the EOQ bit in the last command message of a user-defined command queue to indicate that this entry is the end of the queue. See Section 20.4.1.2, “Message Format in eQADC,” for information on command message formats. The transfer of entries bound for the on-chip ADCs is considered completed when they are stored in the appropriate command buffer. The transfer of entries bound for the external device is considered completed when the serial transmission of the entry is completed.

The command with a EOQ bit asserted is valid and will be transferred. When EQADC_CFCRn[EOQIE] (see Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn)”) and EQADC_FISRn[EOQF] are asserted, the eQADC will generate an end of queue interrupt request.

In single-scan modes, command transfers from the corresponding CFIFO will cease when the eQADC completes the transfer of a entry with an asserted EOQ. Software involvement is required to rearm the CFIFO so that it can detect new trigger events.

NOTE

An asserted EOQ F_n only implies that the eQADC has finished transferring a command with an asserted EOQ bit from CFIFO n . It does not imply that result data for the current command and for all previously transferred commands has been returned to the appropriate RFIFO.

20.4.3.6.3 Pause Status

In edge trigger mode, when the eQADC completes the transfer of a CFIFO entry with an asserted pause bit, the eQADC will stop future command transfers from the CFIFO and set EQADC_FISR n [PF] (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)). Refer to [Section 20.4.1.2, “Message Format in eQADC,”](#) for information on command message formats. The eQADC ignores the pause bit in command messages in any software level trigger mode. The eQADC sets the PF flag upon detection of an asserted pause bit only in single or continuous-scan edge trigger mode. When the PF flag is set for a CFIFO in single-scan edge trigger mode, the EQADC_FISR n [SSS] bit will not be cleared (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)).

In level trigger mode, the definition of the PF flag has been redefined. In level trigger mode, when CFIFO n is in TRIGGERED status, PF n is set when the CFIFO status changes from TRIGGERED due to detection of a closed gate. The pause flag interrupt routine can be used to verify if the a complete scan of the command queue was performed. If a closed gate is detected while no command transfers are taking place, it will have immediate effect on the CFIFO status. If a closed gate is detected during the serial transmission of a command to the external device, it will have no effect on the CFIFO status until the transmission completes.

When EQADC_CFCR[PIE] (see [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCR \$n\$ \)”](#)) and EQADC_FISR n [PF] are asserted, the eQADC will generate a pause interrupt request.

NOTE

In edge trigger mode, an asserted PF n only implies that the eQADC finished transferring a command with an asserted pause bit from CFIFO n . It does not imply that result data for the current command and for all previously transferred commands has been returned to the appropriate RFIFO.

NOTE

In software or level trigger mode, when the eQADC completes the transfer of an entry from CFIFO n with an asserted pause bit, PF n will not be set and command transfers will continues without pausing.

20.4.3.6.4 Trigger Overrun Status

When a CFIFO is configured for edge- or level-trigger mode and is in a TRIGGERED state, an additional trigger occurring for the same CFIFO results in a trigger overrun. The trigger overrun bit for the corresponding CFIFO will be set (EQADC_FISRn[TORFn] = 1, see Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn)”). When EQADC_CFCRn[TORIE] (see Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn)”) and EQADC_FISRn[TORF] are asserted, the eQADC generates a trigger overrun interrupt request.

For CFIFOs configured for level-trigger mode, a trigger overrun event is only detected when the gate closes and reopens during a single serial command transmission as shown in Figure 20-40.

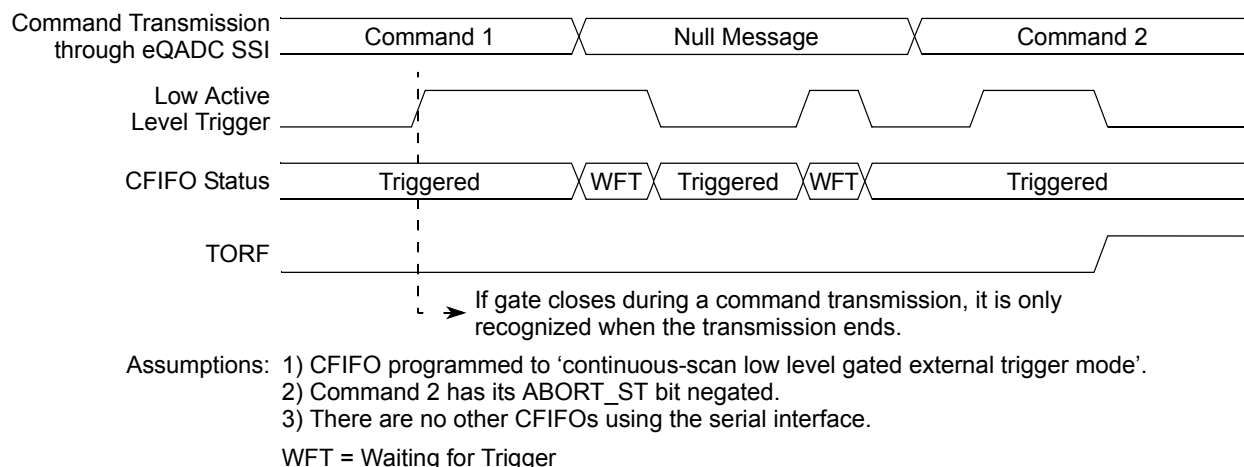


Figure 20-40. Trigger Overrun on Level-Trigger Mode CFIFOs

NOTE

The trigger overrun flag will not set for CFIFOs configured for software trigger mode.

20.4.3.6.5 Command Sequence Non-Coherency Detection

The eQADC provides a mechanism to indicate if a command sequence has been completely executed without interruptions. A command sequence is defined as a group of consecutive commands bound for the same ADC and it is expected to be executed without interruptions. A command sequence is coherent if its commands are executed in order without interruptions. Because commands are stored in the ADC’s command buffers before being executed in the eQADC, a command sequence is coherent if, while it is transferring commands to an on-chip ADC command buffer, the buffer is only fed with commands from that sequence without ever becoming empty.

A command sequence starts when:

- A CFIFO in TRIGGERED state transfers its first command to an on-chip ADC.
- The CFIFO is constantly transferring commands and the previous command sequence ended.
- The CFIFO resumes command transfers after being interrupted.

And a command sequence ended when:

- An asserted EOQ bit is detected on the last transferred command.
- CFIFO is in edge-trigger mode and asserted pause bit is detected on the last transferred command.
- The ADC to which the next command is bound is different from the ADC to which the last command was transferred.

Figure 20-41 shows examples of how the eQADC would detect command sequences when transferring commands from a CFIFO. The smallest possible command sequence can have a single command as shown in example 3 of Figure 20-41.

User Command Queue with Two Command Sequences

1	CF5_ADC1_CM0
2	CF5_ADC1_CM1
3	CF5_ADC1_CM2
4	CF5_ADC1_CM3(Pause=1)
5	CF5_ADC1_CM4
6	CF5_ADC1_CM5
7	CF5_ADC1_CM6(EOQ=1)

Example 1

Assuming that these commands are transferred by a CFIFO configured for edge trigger mode and the command transfers are never interrupted, the eQADC would check for non-coherency of two command sequences: one formed by commands 0, 1, 2, 3, and the other by commands 4, 5, 6.

User Command Queue with Three Command Sequences

1	CF5_ADC1_CM0
2	CF5_ADC1_CM1
3	CF5_ADC1_CM2
4	CF5_ADC0_CM3
5	CF5_ADC0_CM4
6	CF5_ADC1_CM5
7	CF5_ADC1_CM6(EOQ=1)

Example 2

Assuming that command transfers from the CFIFO are never interrupted, the eQADC would check for non-coherency of three command sequences. The first being formed by commands 0, 1, 2, the second by commands 3, 4 and the third by commands 5, 6. Note that even when the commands of this queue are transferred through a CFIFO in continuous-scan mode, the first three commands and the last two commands of this command queue would still constitute two distinct command sequences, although they are all bound for the same ADC, because an asserted EOQ ends a command sequence.

User Command Queue with a Seven Command Sequence

1	CF5_ADC1_CM0
2	CF5_ADC2_CM1
3	CF5_ADC3_CM2
4	CF5_ADC1_CM3
5	CF5_ADC0_CM4
6	CF5_ADC2_CM5
7	CF5_ADC1_CM6(EOQ=1)

Example 3

The eQADC would check for non-coherency of seven command sequences, all containing a single command, but NCF would never get set.

CF_n_ADCa_CMD_n – Command *n* in CFIFO_n bound for ADC_a (ADC3 and ADC4 are external devices associated with external command buffers 2 and 3).

Figure 20-41. Command Sequence Examples

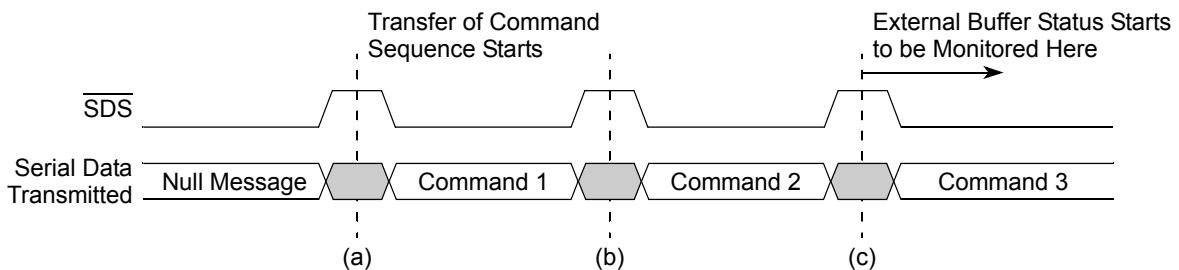
The NCF flag is used to indicate command sequence non-coherency. When the NCF_n flag is asserted, it indicates that the command sequence being transferred through CFIFO_n became non-coherent. The NCF flag only becomes asserted for CFIFOs in a TRIGGERED state.

A command sequence is non-coherent when, after transferring the first command of a sequence from a CFIFO to a buffer, it cannot successively send all the other commands of the sequence before any of the following conditions are true:

- The CFIFO through which commands are being transferred is pre-empted by a higher priority CFIFO which sends commands to the same ADC. The NCF flag becomes asserted immediately after the first command transfer from the pre-empting CFIFO, that is the higher priority CFIFO, to the ADC in use is completed. See [Figure 20-43](#).
- The external command buffer in use becomes empty. (Only the fullness of external buffers is monitored because the fill rate for internal ADC buffers is many times faster than the drain rate, and each has a dedicated priority engine.) This case happens when different CFIFOs attempt to use different external command buffers and the higher priority CFIFO bars the lower priority one from sending new commands to its buffer—see [Figure 20-44](#). An external command buffer is considered empty when the corresponding BUSY field in the last result message received from external device is encoded as “Send available commands - buffer is empty”. Refer to [Section , “Result Message Format for External Device Operation.”](#) The NCF flag becomes asserted immediately after the eQADC detects that the external buffer in use becomes empty.

NOTE

After the transfer of a command sequence to an external command buffer starts, the eQADC ignores, for non-coherency detection purposes, the BUSY fields captured at the end of the first serial transmission. Thereafter, all BUSY fields captured at the end of consecutive serial transmissions are used to check the fullness of that external command buffer. This is done because the eQADC only updates its external ADC command buffer status record when it receives a serial message, resulting that the record kept by the eQADC is always outdated by, at least, the length of one serial transmission. This prevents a CFIFO from immediately becoming non-coherent when it starts transferring commands to an empty external command buffer. Refer to [Figure 20-42](#) for an example.



Assumptions: 1) The CFIFO starts sending commands to an external command buffer when triggered.
 2) Execution of a command on the external device takes longer than the time to complete three serial transmissions.

Figure 20-42. External Command Buffer Status Detection at Command Sequence Transfer Start

Table 20-46. External Buffer Status

Capture Point at eQADC	Buffer Status at External Device	Buffer Status as Captured by the eQADC	Used for NCF detection on the eQADC?
(a)	EMPTY	EMPTY	Don't care
(b)	1 ENTRY	EMPTY	No
(c)	2 ENTRY	1 ENTRY	Yes

Once a command sequence starts to be transferred, the eQADC will check for the command sequence coherency until the command sequence ends or until one of the conditions below becomes true:

- The command sequence became non-coherent.
- The CFIFO status changed from the TRIGGERED state.
- The CFIFO had underflow.

NOTE

The NCF flag still becomes asserted if an external command buffer empty event is detected at the same time the eQADC stops checking for the coherency of a command sequence.

Once command transfers restart/continue, the non-coherency hardware will behave as if the command sequence started from that point. [Figure 20-45](#) depicts how the non-coherency hardware will behave when a non-coherency event is detected.

NOTE

If $MODE_n$ is changed to disabled while a CFIFO is transferring commands, the NCF flag for that CFIFO will not become asserted.

NOTE

When the eQADC enters debug or stop mode while a command sequence is being executed, the NCF will become asserted if an empty external command buffer is detected after debug/stop mode is exited.

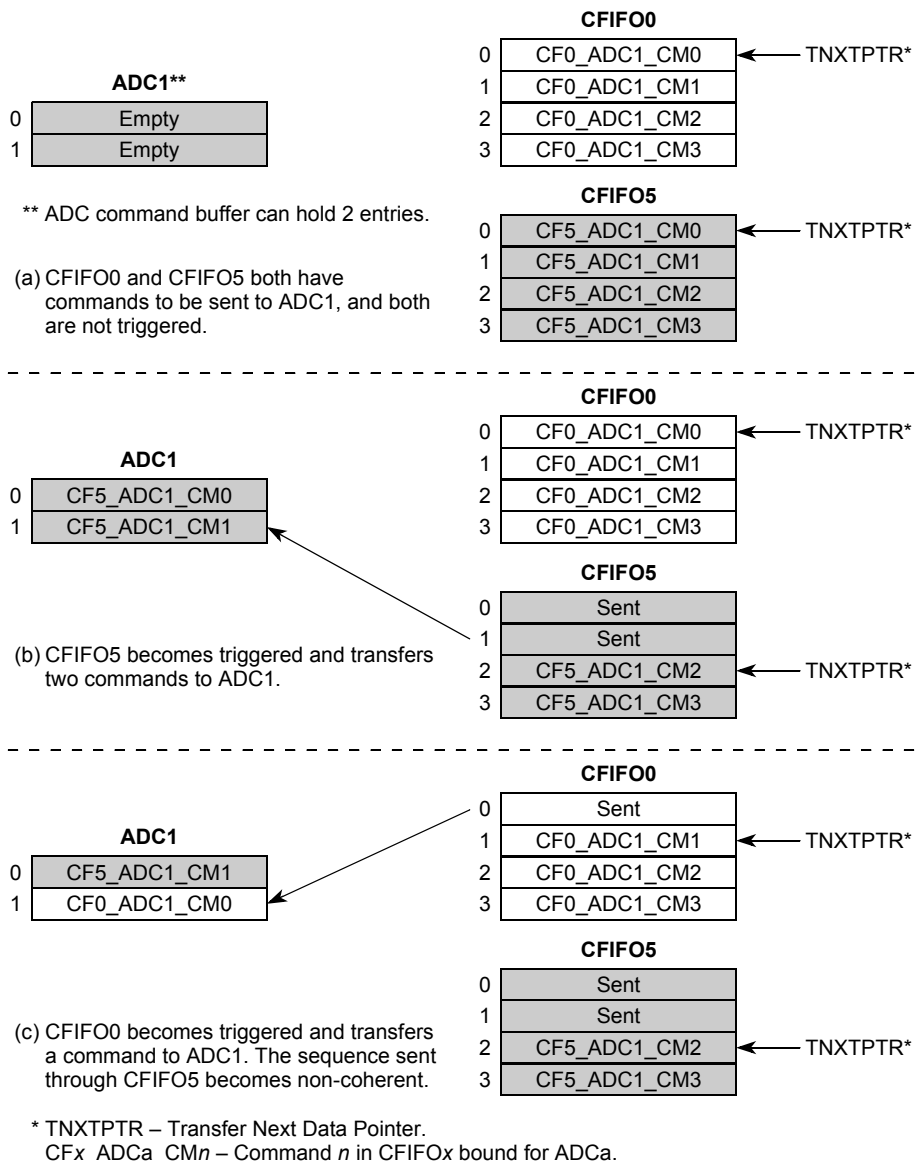


Figure 20-43. Non-Coherency Event When Different CFIFOs Use the Same Buffer

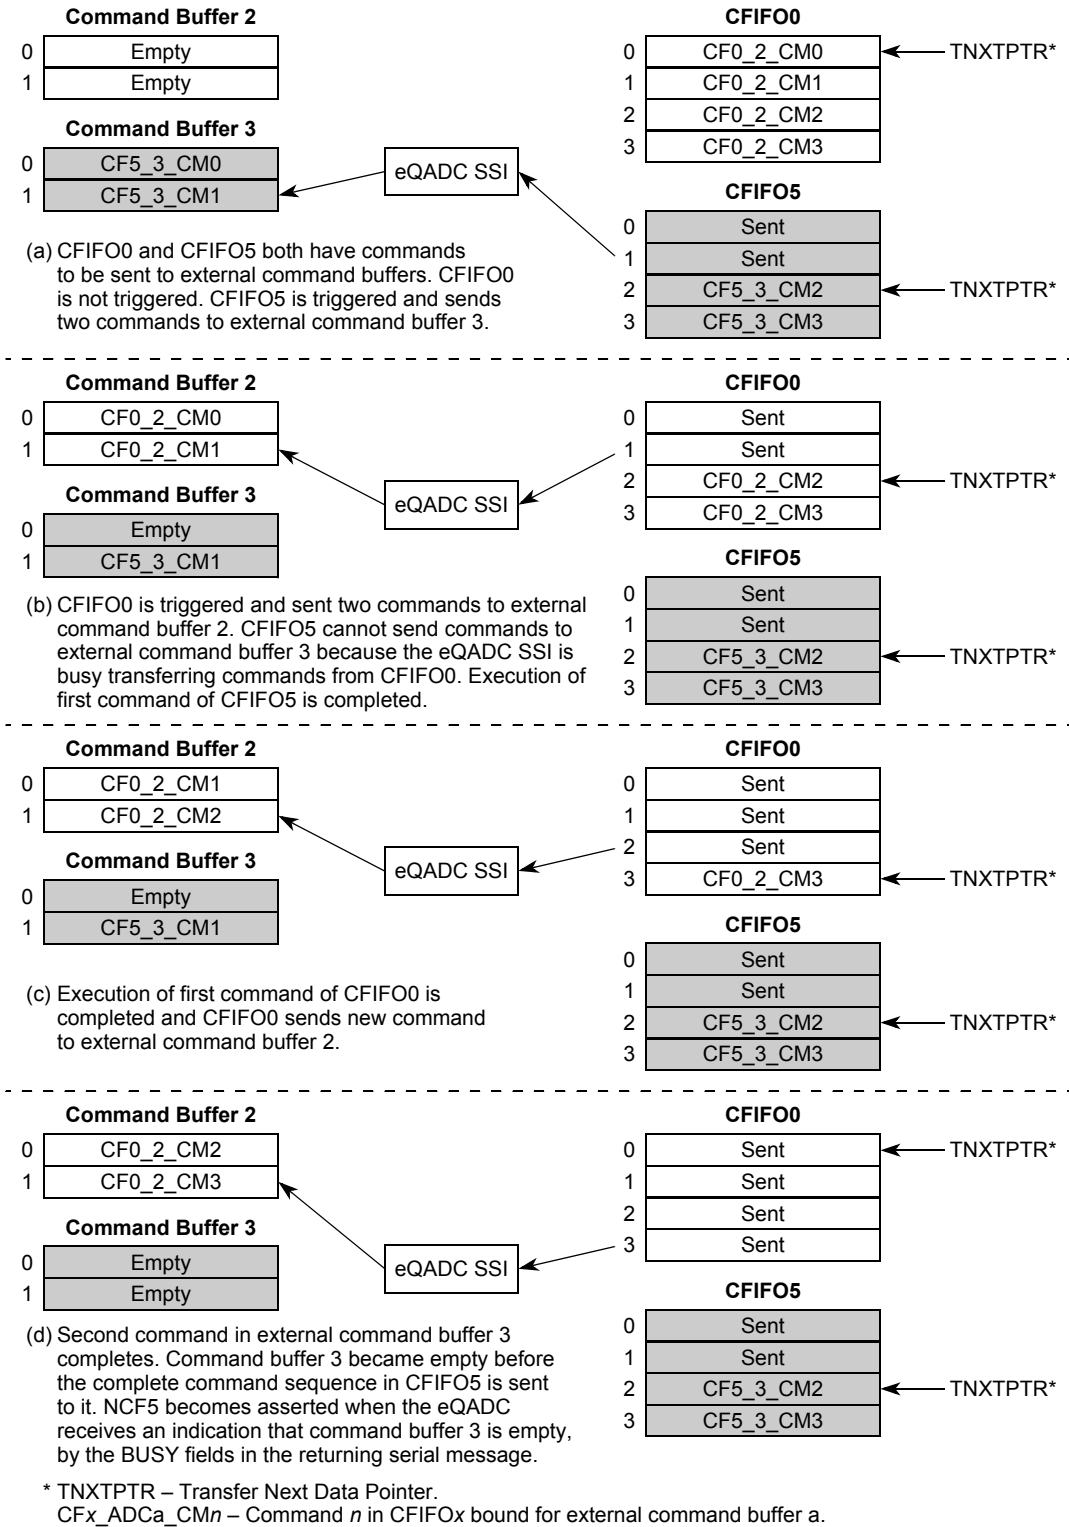


Figure 20-44. Non-Coherency Event When Different CFIFOs Are Using Different External Command Buffers

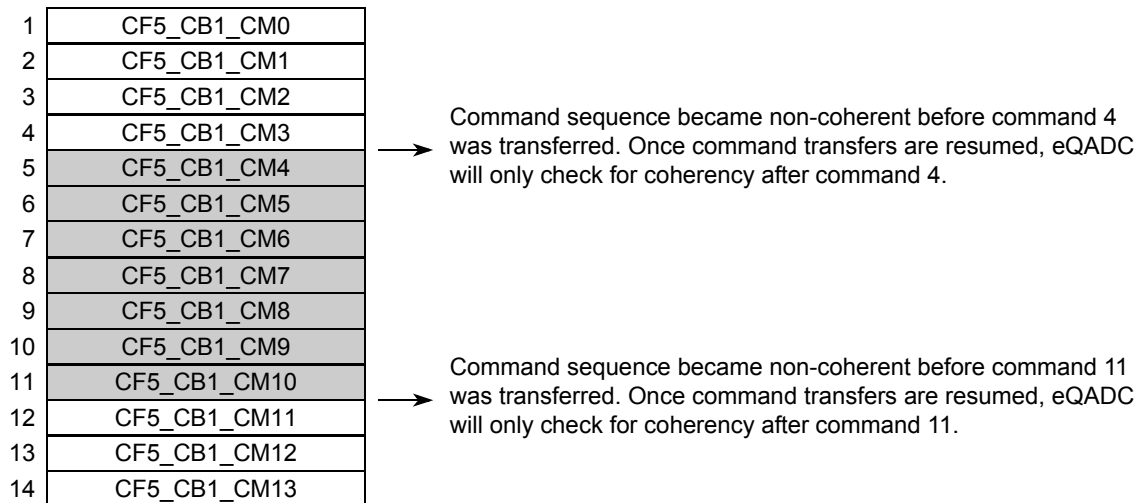


Figure 20-45. Non-coherency Detection When Transfers From A Command Sequence Are Interrupted

20.4.4 Result FIFOs

20.4.4.1 RFIFO Basic Functionality

There are six RFIFOs located in the eQADC. Each RFIFO is four entries deep, and each RFIFO entry is 16 bits long. Each RFIFO serves as a temporary storage location for the one of the result queues allocated in system memory. All result data is saved in the RFIFOs before being moved into the system result queues. When an RFIFO is not empty, the eQADC sets the corresponding EQADC_FISR_n[RFDF] (see Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR_n)”). If EQADC_IDCR_n[RFDE] is asserted (see Section 20.3.2.7), the eQADC generates a request so that the RFIFO entry is moved to a result queue. An interrupt request, served by the host CPU, is generated when EQADC_IDCR_n[RFDS] is negated, and an eDMA request, served by the eDMA, is generated when RFDS is asserted. The host CPU or the eDMA responds to these requests by reading EQADC_RFPR_n (see Section 20.3.2.5, “eQADC Result FIFO Pop Registers 0–5 (EQADC_RFPR_n)”) to retrieve data from the RFIFO.

NOTE

Reading a word, half-word, or any bytes from EQADC_RFPR_n will pop an entry from RFIFO_n, and the RFCTR_n field will be decremented by 1.

The eDMA controller should be configured to read a single result (16-bit data) from the RFIFO pop registers for every asserted eDMA request it acknowledges. Refer to Section 20.5.2, “EQADC/eDMA Controller Interface” for eDMA controller configuration guidelines.

Figure 20-46 describes the important components in the RFIFO. Each RFIFO is implemented as a circular set of registers to avoid the need to move all entries at each push/pop operation. The pop next data pointer always points to the next RFIFO message to be retrieved from the RFIFO when reading eQADC_RFPR. The receive next data pointer points to the next available RFIFO location for storing the next incoming

message from the on-chip ADCs or from the external device. The RFIFO counter logic counts the number of entries in RFIFO and generates interrupt or eDMA requests to drain the RFIFO.

EQADC_FISR n [POPNEXTPTR] (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)) indicates which entry is currently being addressed by the pop next data pointer, and EQADC_FISR n [RFCTR] provides the number of entries stored in the RFIFO. Using POPNEXTPTR and RFCTR, the absolute addresses for pop next data pointer and receive next data pointer can be calculated using the following formulas:

$$\begin{aligned} \text{Pop Next Data Pointer Address} &= \text{RFIFO}_n\text{_BASE_ADDRESS} + \text{POPNEXTPTR}_n * 4 \\ \text{Receive Next Data Pointer Address} &= \text{RFIFO}_n\text{_BASE_ADDRESS} + \\ &[(\text{POPNEXTPTR}_n + \text{RFCTR}_n) \bmod \text{RFIFO_DEPTH}] * 4 \end{aligned}$$

where

- $a \bmod b$ returns the remainder of the division of a by b .
- RFIFO n _BASE_ADDRESS is the smallest memory mapped address allocated to an RFIFO n entry.
- RFIFO_DEPTH is the number of entries contained in a RFIFO - four in this implementation.

When a new message arrives and RFIFO n is not full, the eQADC copies its contents into the entry pointed by receive next data pointer. The RFIFO counter EQADC_FISR n [RFCTR n] (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)) is incremented by 1, and the receive next data pointer n is also incremented by 1 (or wrapped around) to point to the next empty entry in RFIFO n . However, if the RFIFO n is full, the eQADC sets the EQADC_FISR n [RFOF] (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)). The RFIFO n will not overwrite the older data in the RFIFO, the new data will be ignored, and the receive next data pointer n is not incremented or wrapped around. RFIFO n is full when the receive next data pointer n equals the pop next data pointer n and RFCTR n is not 0. RFIFO n is empty when the receive next data pointer n equals the pop next data pointer n and RFCTR n is 0.

When the eQADC RFIFO pop register n is read and the RFIFO n is not empty, the RFIFO counter RFCTR n is decremented by 1, and the pop next data pointer is incremented by 1 (or wrapped around) to point to the next RFIFO entry.

When the eQADC RFIFO pop register n is read and RFIFO n is empty, eQADC will not decrement the counter value and the pop next data pointer n will not be updated. The read value will be undefined.

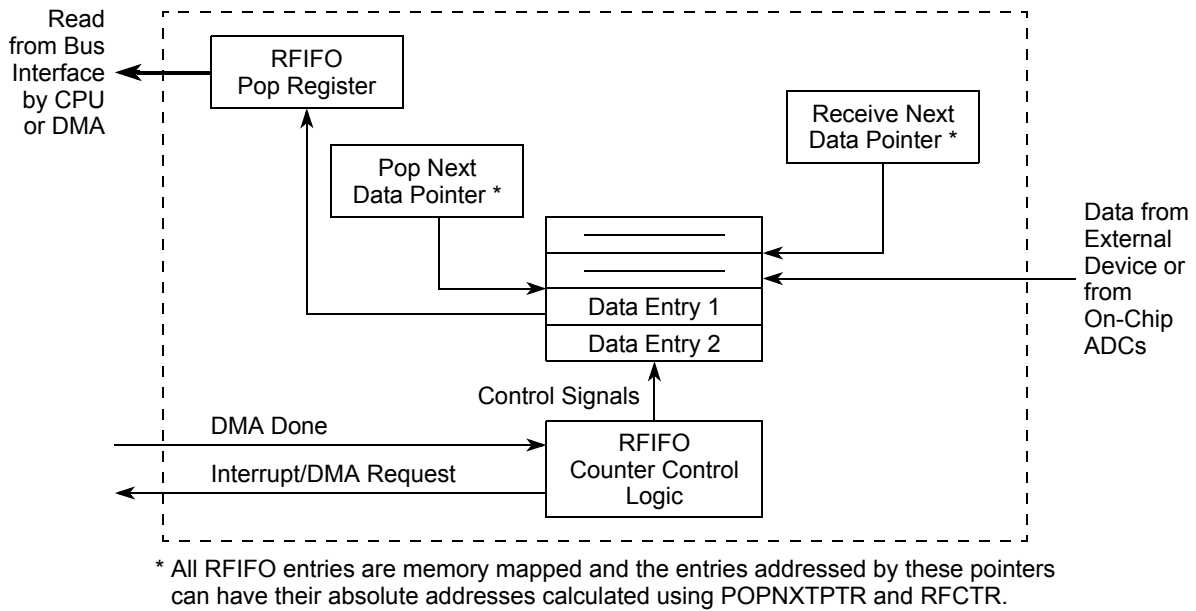


Figure 20-46. RFIFO Diagram

The detailed behavior of the pop next data pointer and receive next data pointer is described in the example shown in [Figure 20-47](#) where an RFIFO with 16 entries is shown for clarity of explanation, the actual hardware implementation has only four entries. In this example, RFIFO_n with 16 entries is shown in sequence after popping or receiving entries.

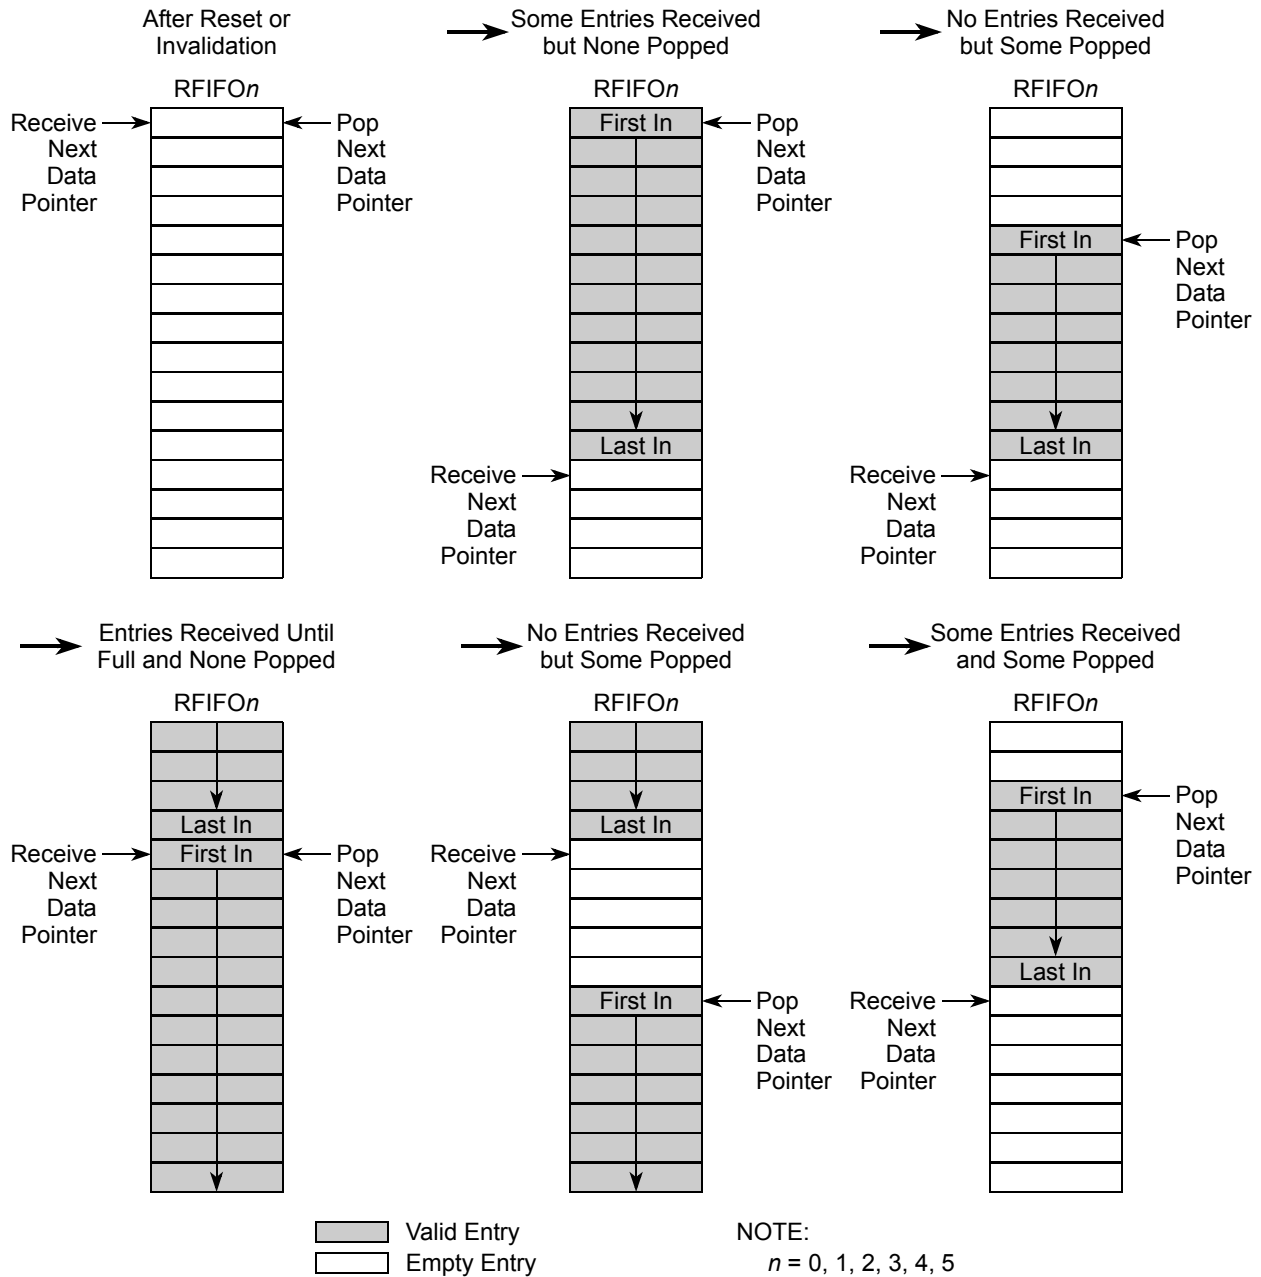


Figure 20-47. RFIFO Entry Pointer Example

20.4.4.2 Distributing Result Data into RFIFOs

Data to be moved into the RFIFOs can come from three sources: from ADC0, from ADC1, or from the external device. All result data comes with a MESSAGE_TAG field defining what should be done with the received data. The FIFO control unit decodes the MESSAGE_TAG field and:

- Stores the 16-bit data into the appropriate RFIFO if the MESSAGE_TAG indicates a valid RFIFO number or
- Ignores the data in case of a null or “reserved for customer use” MESSAGE_TAG

In general, received data is moved into RFIFOs as they become available, while an exception happens when multiple results from different sources become available at the same time. In that case, result data from ADC0 is processed first, result data from ADC1 is only processed after all ADC0 data is processed, and result data from the external device is only processed after all data from ADC0/1 is processed.

When time-stamped results return from the on-chip ADCs, the conversion result and the time stamp are always moved to the RFIFOs in consecutive clock cycles in order to guarantee they are always stored in consecutive RFIFO entries.

20.4.5 On-Chip ADC Configuration and Control

20.4.5.1 Enabling and Disabling the on-chip ADCs

The on-chip ADCs have an enable bit (ADC0_CR[ADC0_EN] and ADC1_CR[ADC1_EN], see [Section 20.3.3.1, “ADCn Control Registers \(ADC0_CR and ADC1_CR\)”](#)) which allows the enabling of the ADCs only when necessary. When the enable bit for an ADC is negated, the clock input to that ADC is stopped. The ADCs are disabled out of reset - ADC0/1_EN bits are negated - to allow for their safe configuration. The ADC must only be configured when its enable bit is negated. Once the enable bit of an ADC is asserted, clock input is started, and the bias generator circuit is turned on. When the enable bits of both ADCs are negated, the bias circuit generator is stopped.

NOTE

Conversion commands sent to a disabled ADC are ignored by the ADC control hardware.

NOTE

An 8ms wait time from VDDA power up to enabling ADC is required to pre-charge the external 100nf capacitor on REFBYPC. This time must be guaranteed by crystal startup time plus reset duration or the user. The ADC internal bias generator circuit will start up after 10us upon VRH/VRL power up and produces a stable/required bias current to the pre-charge circuit, but the current to the other analog circuits are disabled until ADCs are enabled. As soon as the ADCs are enabled, the bias currents to other analog circuits will be ready.

NOTE

Because of previous design versions, the EQADC will always wait 120 ADC clocks before issuing the first conversion command following the enabling of one of on-chip ADCs, or the exiting of stop mode. There are two independent counters checking for this delay: one clocked by ADC0_CLK and another by ADC1_CLK. Conversion commands can start to be executed whenever one of these counters completes counting 120 ADC clocks.
 [NOTE TO MIKE GARRARD: the implication of this paragraph is that the two clocks are the ADC timebases. is this the case? (Mike Garrard, can you check this one out) can they be read, or even polled to see if 120 ADC clocks is finished?]

20.4.5.2 ADC Clock and Conversion Speed

The clock input to the ADCs is defined by setting the ADC0_CR[ADC0_CLK_PS] and ADC1_CR[ADC1_CLK_PS] fields (see Section 20.3.3.1, “ADCn Control Registers (ADC0_CR and ADC1_CR)”) The ADC0/1_CLK_PS field selects the clock divide factor by which the system clock will be divided as showed in Table 20-28. The ADC clock frequency is calculated as below and it must not exceed 12 MHz.

$$\text{ADCClockFrequency} = \frac{\text{SystemClockFrequency(MHz)}}{\text{SystemClockDivideFactor}}; (\text{ADCClockFrequency} \leq 12\text{MHz})$$

Figure 20-48 depicts how the ADC clocks for ADC0 and ADC1 are generated.

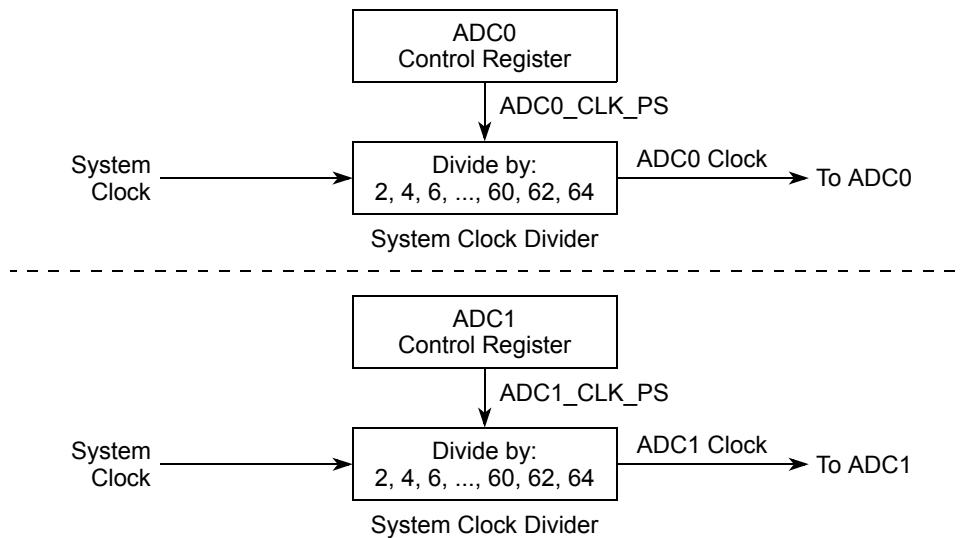


Figure 20-48. ADC0/1 Clock Generation

The ADC conversion speed (in kilosamples per second – ksamp/s) is calculated by the following formula. The number of sampling cycles is determined by the LST bits in the command message — see Section , “Conversion Command Message Format for On-Chip ADC Operation,” — and it can take one of the following values: 2, 8, 64, or 128 ADC clock cycles. The number of AD conversion cycles is 13 for differential conversions and 14 for single-ended conversions. The maximum conversion speed is achieved when the ADC Clock frequency is set to its maximum (12Mhz) and the number of sampling cycles set to its minimum (2 cycles). The maximum conversion speed for differential and single-ended conversions are 800ksamp/s and 750ksamp/s, respectively.

$$\text{ADCConversionSpeed} = \frac{\text{ADCClockFrequency(MHz)}}{(\text{NumberOfSamplingCycles} + \text{NumberOfADConversionCycles})}$$

Table 20-47 shows an example of how the ADC0/1_CLK_PS can be set when using a 120 MHz system clock and the corresponding conversion speeds for all possible ADC clock frequencies. The table also shows that according to the system clock frequency, certain clock divide factors are invalid (2, 4, 6, 8 clock divide factors in the example) since their use would result in a ADC clock frequency higher than the maximum one supported by the ADC. ADC clock frequency must not exceed 12 Mhz.

Table 20-47. ADC Clock Configuration Example (System Clock Frequency = 120 MHz)

ADC0/1_CLK_PS[0:4]	System Clock Divide Factor	ADC Clock in MHz (System Clock = 120MHz)	Differential Conversion Speed with Default Sampling Time (13 + 2 cycles) in ksamp/s	Single-Ended Conversion Speed with Default Sampling Time (14 + 2 cycles) in ksamp/s
0b00000	2	N/A	N/A	N/A
0b00001	4	N/A	N/A	N/A
0b00010	6	N/A	N/A	N/A
0b00011	8	N/A	N/A	N/A
0b00100	10	12.0	800	750
0b00101	12	10.0	667	625
0b00110	14	8.57	571	536
0b00111	16	7.5	500	469
0b01000	18	6.67	444	417
0b01001	20	6.0	400	375
0b01010	22	5.45	364	341
0b01011	24	5.0	333	313
0b01100	26	4.62	308	288
0b01101	28	4.29	286	268
0b01110	30	4.0	267	250
0b01111	32	3.75	250	234
0b10000	34	3.53	235	221
0b10001	36	3.33	222	208
0b10010	38	3.16	211	197
0b10011	40	3.0	200	188
0b10100	42	2.86	190	179
0b10101	44	2.73	182	170
0b10110	46	2.61	174	163
0b10111	48	2.5	167	156
0b11000	50	2.4	160	150
0b11001	52	2.31	154	144
0b11010	54	2.22	148	139
0b11011	56	2.14	143	134
0b11100	58	2.07	138	129
0b11101	60	2.0	133	125

Table 20-47. ADC Clock Configuration Example (System Clock Frequency = 120 MHz)

ADC0/1_CLK_PS[0:4]	System Clock Divide Factor	ADC Clock in MHz (System Clock = 120MHz)	Differential Conversion Speed with Default Sampling Time (13 + 2 cycles) in ksamp/s	Single-Ended Conversion Speed with Default Sampling Time (14 + 2 cycles) in ksamp/s
0b11110	62	1.94	129	121
0b11111	64	1.88	125	117

20.4.5.3 Time Stamp Feature

The on-chip ADCs can provide a time stamp for the conversions they execute. A time stamp is the value of the time base counter latched when the eQADC detects the end of the analog input voltage sampling. A time stamp for a conversion command is requested by setting the TSR bit in the corresponding command. When TSR is negated, that is a time stamp is not requested, the ADC returns a single result message containing the conversion result. When TSR is asserted, that is a time stamp is requested, the ADC returns two result messages; one containing the conversion result, and another containing the time stamp for that conversion. The result messages are sent in this order to the RFIFOs and both messages are sent to the same RFIFO as specified in the MESSAGE_TAG field of the executed conversion command.

The time base counter is a 16-bit up counter and wraps after reaching 0xFFFF. It is disabled after reset and it is enabled according to the setting of ADC_TSCR[TBC_CLK_PS] field (see [Section 20.3.3.2, “ADC Time Stamp Control Register \(ADC_TSCR\)”](#)). TBC_CLK_PS defines if the counter is enabled or disabled, and, if enabled, at what frequency it is incremented. The time stamps are returned regardless of whether the time base counter is enabled or disabled. The time base counter can be reset by writing 0x0000 to the ADC_TBCR ([Section 20.3.3.3, “ADC Time Base Counter Registers \(ADC_TBCR\)”](#)) with a write configuration command.

20.4.5.4 ADC Calibration Feature

20.4.5.4.1 Calibration Overview

The eQADC provides a calibration scheme to remove the effects of gain and offset errors from the results generated by the on-chip ADCs. Only results generated by the on-chip ADCs are calibrated. The results generated by ADCs on the external device are directly sent to RFIFOs unchanged. The main component of calibration hardware is a multiply-and-accumulate (MAC) unit, one per on-chip ADC, that is used to calculate the following transfer function which relates a calibrated result to a raw, uncalibrated one.

$$\text{CAL_RES} = \text{GCC} * \text{RAW_RES} + \text{OCC} + 2;$$

where:

- CAL_RES is the calibrated result corresponding the input voltage V_i .
- GCC is the gain calibration constant.
- RAW_RES is the raw, uncalibrated result corresponding to an specific input voltage V_i .
- OCC is the offset calibration constant.

- The addition of two reduces the maximum quantization error of the ADC. See [Section 20.5.6.3, “Quantization Error Reduction During Calibration.”](#)

Calibration constants GCC and OCC are determined by taking two samples of known reference voltages and using these samples to calculate their values. For details and an example about how to calculate the calibration constants and use them in result calibration refer to [Section 20.5.6, “ADC Result Calibration.”](#) Once calculated, GCC is stored in ADC0_GCCR and ADC1_GCCR (see [Section 20.3.3.4, “ADCn Gain Calibration Constant Registers \(ADC0_GCCR and ADC1_GCCR\)”](#)) and OCC in ADC0_OCCR and ADC1_OCCR (see [Section 20.3.3.5, “ADCn Offset Calibration Constant Registers \(ADC0_OCCR and ADC1_OCCR\)”](#)) from where their values are fed to the MAC unit. Since the analog characteristics of each on-chip ADC differs, each ADC has an independent pair of calibration constants.

A conversion result is calibrated according to the status of CAL bit in the command that initiated the conversion. If the CAL bit is asserted, the eQADC will automatically calculate the calibrated result before sending the result to the appropriate RFIFO. If the CAL bit is negated, the result is not calibrated, it bypasses the calibration hardware, and is directly sent to the appropriate RFIFO.

20.4.5.4.2 MAC Unit and Operand Data Format

The MAC unit diagram is shown in [Figure 20-49](#). Each on-chip ADC has a separate MAC unit to calibrate its conversion results.

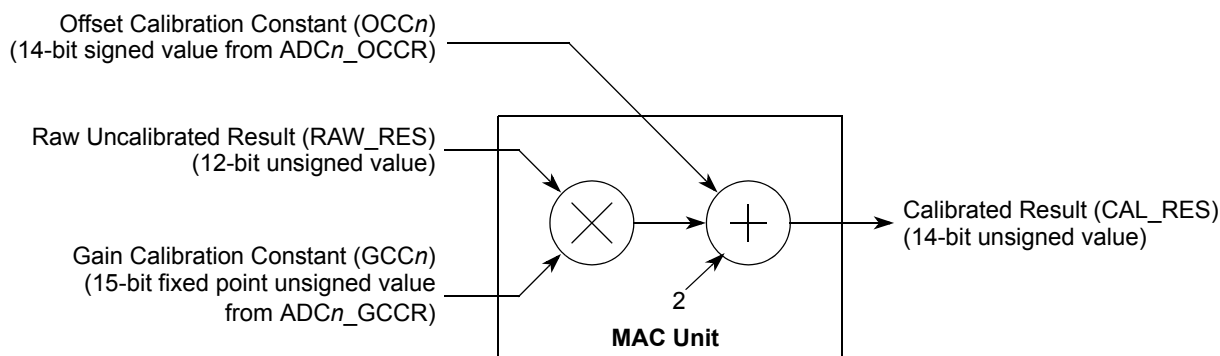


Figure 20-49. MAC Unit Diagram

The OCC_n operand is a 14-bit signed value and it is the upper 14 bits of the value stored in ADC0_OCCR and ADC1_OCCR. The RAW_RES operand is the raw uncalibrated result, and it is a direct output from the on-chip ADCs.

The GCC_n operand is a 15-bit fixed point unsigned value, and it is the upper 15 bits of the value stored in ADC0_GCCR and ADC1_GCCR. The GCC is expressed in the $GCC_INT.GCC_FRAC$ binary format. The integer part of the GCC ($GCC_INT = GCC[1]$) contains a single binary digit while its fractional part ($GCC_FRAC = GCC[2:15]$) contains 14 bits. See [Figure 20-50](#) for more information. The gain constant equivalent decimal value ranges from 0 to 1.999938..., as shown in [Table 20-49](#). Two is always added to the MAC output: see [Section 20.5.6.3, “Quantization Error Reduction During Calibration.”](#) CAL_RES output is the calibrated result, and it is a 14-bit unsigned value. CAL_RES is truncated to 0x3FFF, in case of an overflow, and to 0x0000, in case of an underflow.

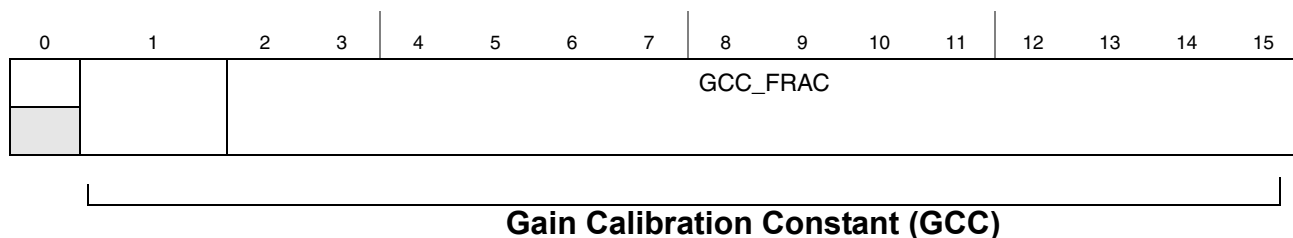


Figure 20-50. Gain Calibration Constant Format

Table 20-48. Gain Calibration Constant Format Field Descriptions

Field	Description
0	Reserved
1 GCC_INT[0]	Integer part of the gain calibration constant for ADC _n . GCC_INT is the integer part of the gain calibration constant (GCC) for ADC _{0/1} .
2–15 GCC_FRAC[1:14]	Fractional part of the gain calibration constant for ADC _n . GCC_FRAC is the fractional part of the gain calibration constant (GCC) for ADC _n . GCC_FRAC can express decimal values ranging from 0 to 0.999938...

Table 20-49. Correspondence between Binary and Decimal Representations of the Gain Constant

Gain Constant (GCC_INT.GCC_FRAC binary format)	Corresponding Decimal Value
0.0000_0000_0000_00	0
...	...
0.1000_0000_0000_00	0.5
...	...
0.1111_1111_1111_11	0.999938...
1.0000_0000_0000_00	1
...	...
1.1100_0000_0000_00	1.75
...	...
1.1111_1111_1111_11	1.999938...

20.4.5.5 ADC Control Logic Overview and Command Execution

Figure 20-51 shows the basic logic blocks involved in the ADC control and how they interact. CFIFOs/RFIFOs interact with ADC command/result message return logic through the FIFO control unit. The EB and BN bits in the command message uniquely identify the ADC to which a command should be sent. The FIFO control unit decodes these bits and sends the ADC command to the proper ADC. Other

blocks of logic are the result format and calibration submodule, the time stamp logic, and the MUX control logic.

The result format and calibration submodule formats the returning data into result messages and sends them to the RFIFOs. The returning data can be data read from an ADC register, a conversion result, or a time stamp. The formatting and calibration of conversion results also take place inside this submodule.

The time stamp logic latches the value of the time base counter when detecting the end of the analog input voltage sampling, and sends it to the result format and calibration submodule as time stamp information.

The MUX control logic generates the proper MUX control signals and, when the ADC0/1_EMUX bits are asserted, the MA signals based on the channel numbers extracted from the ADC Command.

ADC commands are stored in the ADC command buffers (2 entries) as they come in and they are executed on a first-in-first-out basis. After the execution of a command in ENTRY1 finishes, all commands are shifted one entry. After the shift, ENTRY0 is always empty and ready to receive a new command. Execution of configuration commands only starts when they reach ENTRY1. Consecutive conversion commands are pipelined, and their execution can start while in ENTRY0. This is explained below.

A/D conversion accuracy can be affected by the settling time of the input channel multiplexers. Some time is required for the channel multiplexer's internal capacitances to settle after the channel number is changed. If the time prior to and during sampling is not long enough to permit this settling, then the voltage on the sample capacitors will not accurately represent the voltage to be read. This is a problem in particular when external muxes are used.

To maximize settling time, when a conversion command is in buffer ENTRY1 and another conversion command is identified in ENTRY0, then the channel number of ENTRY0 is sent to the *MUX control logic* half an ADC clock before the start of the sampling phase of the command in ENTRY0. This pipelining of sample and settling phase is shown in [Figure 20-52\(b\)](#).

This provides more accurate sampling, which is specially important for applications that require high conversion speeds, i.e., with the ADC running at maximum clock frequency and with the analog input voltage sampling time set to a minimum (2 ADC clock cycles). In this case the short sampling time may not allow the multiplexers to completely settle. The second advantage of pipelining conversion commands is to provide equal conversion intervals even though the sample time increases on second and subsequent conversions. See [Figure 20-52](#). This is important for any digital signal process application.

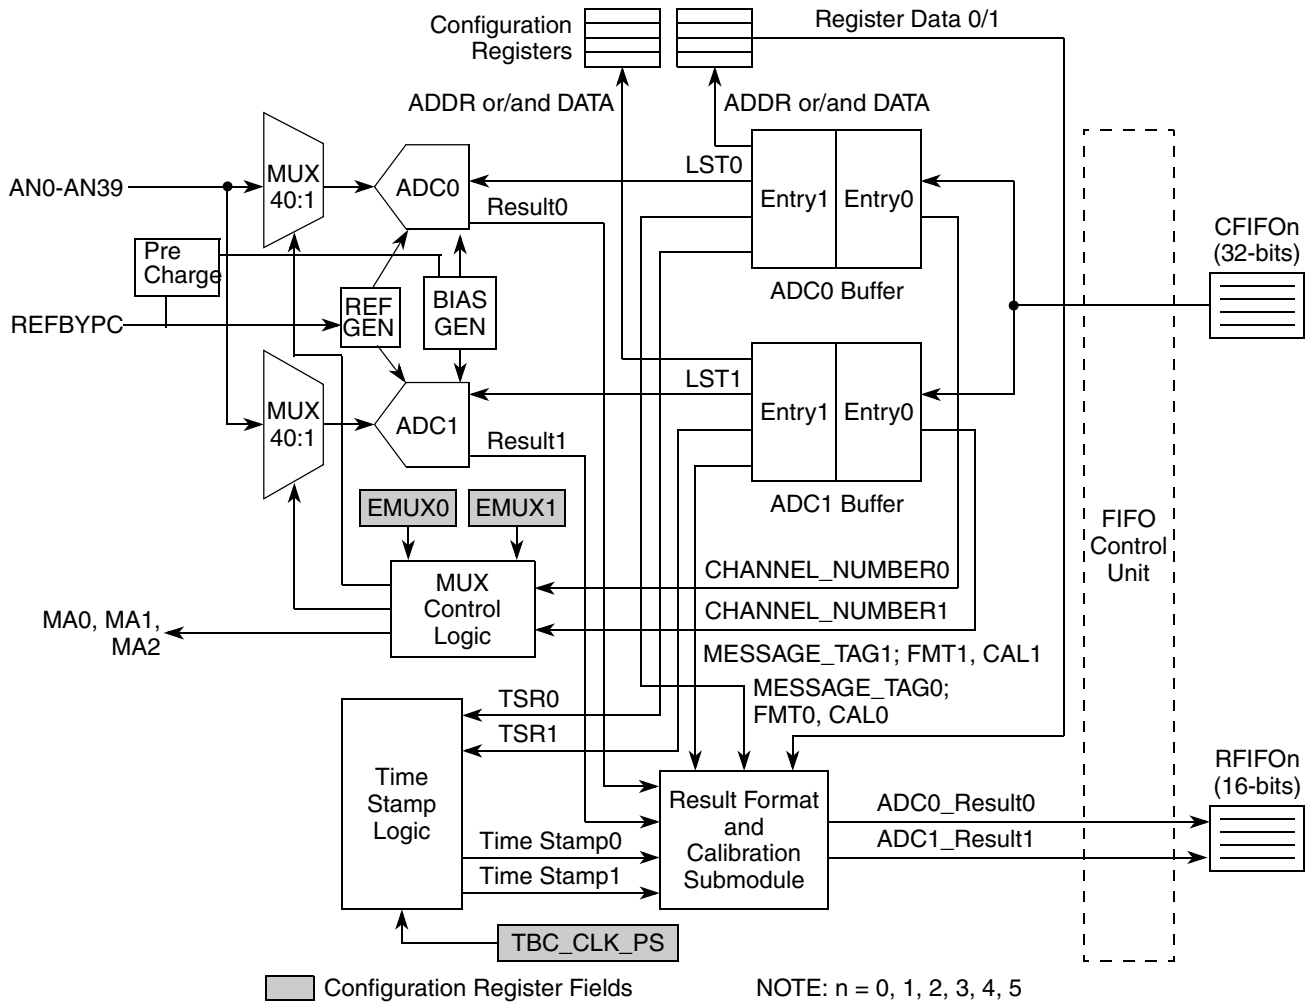


Figure 20-51. On-Chip ADC Control Scheme

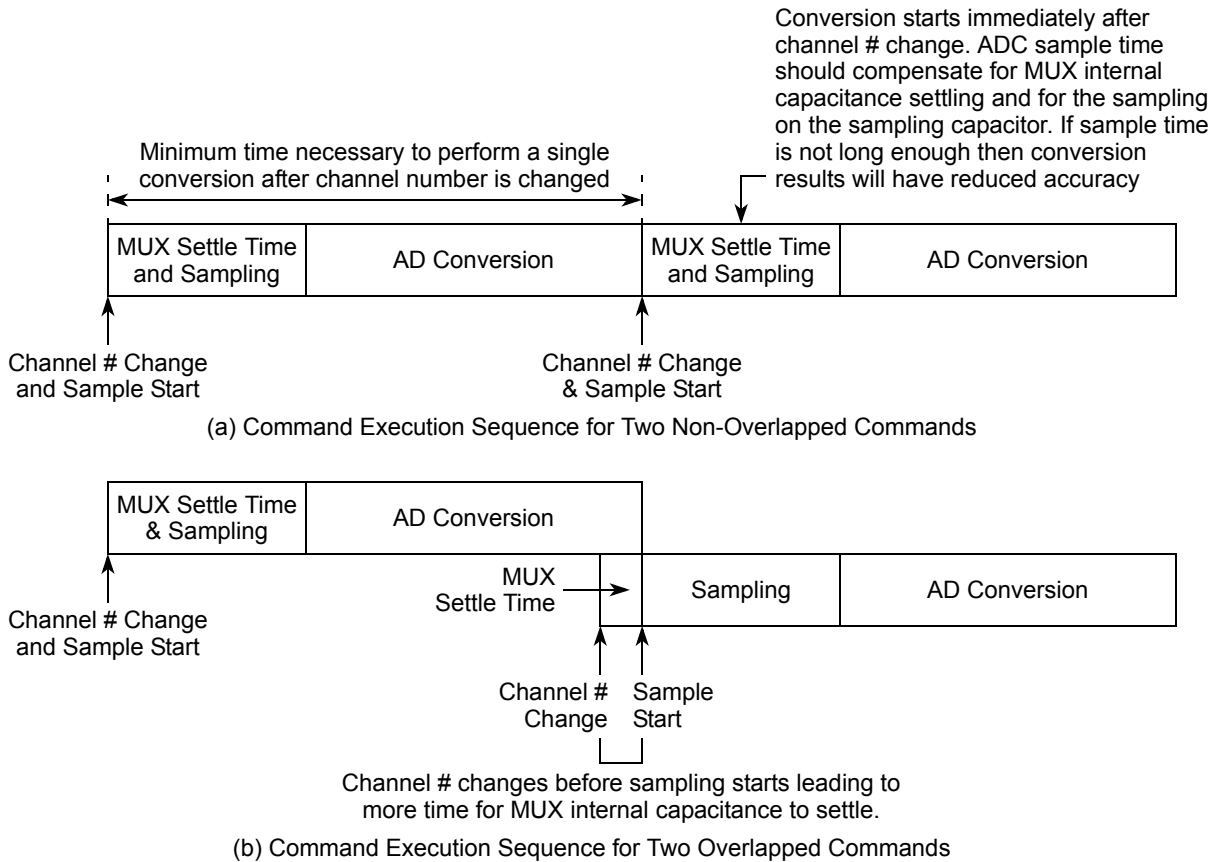


Figure 20-52. Overlapping Consecutive Conversion Commands

20.4.6 Internal/External Multiplexing

20.4.6.1 Channel Assignment

The internal analog multiplexers select one of the 40 analog input pins for conversion, based on the CHANNEL_NUMBER field of a Command Message. The analog input pin channel number assignments and the pin definitions vary depending on how the ADC0/1_EMUX are configured. Allowed combinations of ADC0/1_EMUX bits are shown in Table 20-50 together with references to tables indicating how CHANNEL_NUMBER field of each conversion command must be set to avoid channel selection conflicts.

During differential conversions the analog multiplexer passes differential signals to both the positive and negative terminals of the ADC. The differential conversions can only be initiated on four channels: DAN0, DAN1, DAN2, and DAN3. Refer to Table 20-51 and Figure 20-52 for the channel numbers used to select differential conversions.

Table 20-50. ADC_n_EMUX Bits Combinations

ADC0_EMUX	ADC1_EMUX	CHANNEL_NUMBER should be set as in	
		ADC0	ADC1
0	0	Refer to Table 20-51	Refer to Table 20-51
0	1	Refer to Table 20-51	Refer to Table 20-51
1	0	Refer to Table 20-51	Refer to Table 20-51
1	1	Reserved ¹	

¹ ADC0_EMUX and ADC1_EMUX must not be asserted at the same time.

[Table 20-51](#) shows the channel number assignments for the non-multiplexed mode. The 40 single-ended channels and 4 differential pairs are shared between the two ADCs.

Table 20-51. Non-multiplexed Channel Assignments¹

Input Pins			Channel Number in CHANNEL_NUMBER Field	
Analog Pin Name	Other Functions	Conversion Type	Binary	Decimal
AN0 to AN39		Single-ended	0000_0000 to 0010_0111	0 to 39
VRH		Single-ended	0010_1000	40
VRL		Single-ended	0010_1001	41
	$(VRH - VRL)/2$ see footnote ²	Single-ended	0010_1010	42
	$75\% \times (VRH - VRL)$	Single-ended	0010_1011	43
	$25\% \times (VRH - VRL)$	Single-ended	0010_1100	44
Reserved			0010_1101 to 0101_1111	45 to 95
DAN0+ and DAN0- DAN1+ and DAN1- DAN2+ and DAN2- DAN3+ and DAN3-		Differential Differential Differential Differential	0110_0000 0110_0001 0110_0010 0110_0011	96 97 98 99
Reserved			0110_0100 to 1111_1111	100 to 255

¹ The two on-chip ADCs can access the same analog input pins but simultaneous conversions are not allowed. Also, when one ADC is performing a differential conversion on a pair of pins, the other ADC must not access either of these two pins as single-ended channels.

² This equation only applies before calibration. After calibration, the 50% reference point will actually return approximately 20mV lower than the expected 50% of the difference between the High Reference Voltage (VRH) and the Low Reference Voltage (VRL). For calibration of the ADC only the 25% and 75% points should be used as described in [Section 20.5.6.1, "MAC Configuration Procedure"](#)

[Table 20-52](#) shows the channel number assignments for multiplexed mode. The ADC with the ADC_n_EMUX bit asserted can access 4 differential pairs, 39 single-ended, and, at most, 32 externally

multiplexed channels. Refer to [Section 20.4.6.2, “External Multiplexing,”](#) for a detailed explanation about how external multiplexing can be achieved.

Table 20-52. Multiplexed Channel Assignments¹

Input Pins			Channel Number in CHANNEL_NUMBER Field	
Analog Pin Name	Other Functions	Conversion Type	Binary	Decimal
AN0 to AN7		Single-ended	0000_0000 to 0000_0111	0 to 7
Reserved			0000_1000 to 0000_1011	8 to 11
AN12 to AN39		Single-ended	0000_1100 to 0010_0111	12 to 39
VRH		Single-ended	0010_1000	40
VRL		Single-ended	0010_1001	41
	(VRH–VRL)/2	Single-ended	0010_1010	42
	75% x (VRH–VRL)	Single-ended	0010_1011	43
	25% x (VRH–VRL)	Single-ended	0010_1100	44
Reserved			0010_1101 to 0011_1111	45 to 63
ANW	—	Single-ended	0100_0xxx	64 to 71
ANX	—	Single-ended	0100_1xxx	72 to 79
ANY	—	Single-ended	0101_0xxx	80 to 87
ANZ	—	Single-ended	0101_1xxx	88 to 95
DAN0+ and DAN0- DAN1+ and DAN1- DAN2+ and DAN2- DAN3+ and DAN3-		Differential Differential Differential Differential	0110_0000 0110_0001 0110_0010 0110_0011	96 97 98 99
Reserved			0011_0100 to 1111_1111	100 to 255

¹ The two on-chip ADCs can access the same analog input pins but simultaneous conversions are not allowed. Also, when one ADC is performing a differential conversion on a pair of pins, the other ADC must not access either of these two pins as single-ended channels.

20.4.6.2 External Multiplexing

The eQADC can use from one to four external multiplexers to expand the number of analog signals that may be converted. Up to 32 analog channels can be converted through external multiplexer selection. The externally multiplexed channels are automatically selected by the CHANNEL_NUMBER field of a command message, in the same way done with internally multiplexed channels. The software selects the external multiplexed mode by setting the ADC0/1_EMUX bit in either ADC0_CR or ADC1_CR depending on which ADC will perform the conversion. [Figure 20-52](#) shows the channel number assignments for the multiplexed mode. There are 4 differential pairs, 40 single-ended, and, at most, 32 externally multiplexed channels that can be selected. Only one ADC can have its ADC0/1_EMUX bit asserted at a time.

[Figure 20-53](#) shows the maximum configuration of four external multiplexer chips connected to the eQADC. The external multiplexer chip selects one of eight analog inputs and connects it to a single analog

output, which is fed to a specific input of the eQADC. The eQADC provides three multiplexed address signals, MA0, MA1, and MA2, to select one of eight inputs. These three multiplexed address signals are connected to all four external multiplexer chips. The analog output of the four multiplex chips are each connected to four separate eQADC inputs, ANW, ANX, ANY, and ANZ. The MA pins correspond to the three least significant bits of the channel number that selects ANW, ANX, ANY, and ANZ with MA0 being the most significant bit - See [Table 20-53](#).

Table 20-53. Encoding of MA Pins¹

Channel Number selecting ANW, ANX, ANY, ANZ (decimal)				MA0	MA1	MA2
ANW	ANX	ANY	ANZ			
64	72	80	88	0	0	0
65	73	81	89	0	0	1
66	74	82	90	0	1	0
67	75	83	91	0	1	1
68	76	84	92	1	0	0
69	77	85	93	1	0	1
70	78	86	94	1	1	0
71	79	87	95	1	1	1

¹ 0 means pin is driven LOW and 1 that pin is driven HIGH.

When the external multiplexed mode is selected for either ADC, the eQADC automatically creates the MA output signals from CHANNEL_NUMBER field of a command message. The eQADC also converts the proper input channel (ANW, ANX, ANY, and ANZ) by interpreting the CHANNEL_NUMBER field. As a result, up to 32 externally multiplexed channels appear to the conversion queues as directly connected signals.

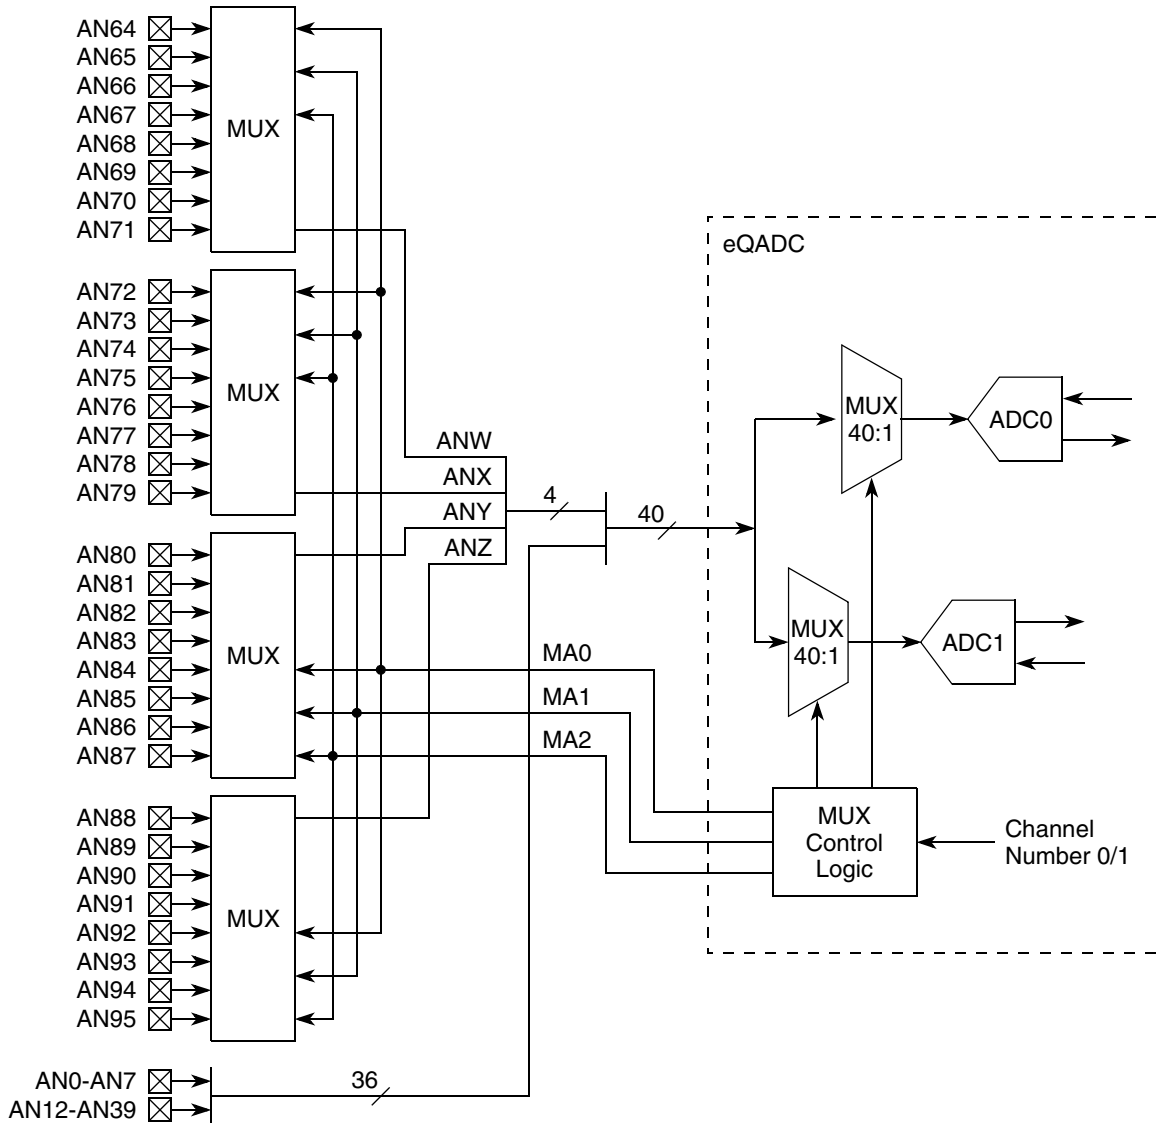


Figure 20-53. Example of External Multiplexing

20.4.7 eQADC eDMA/Interrupt Request

Table 20-54 lists methods to generate interrupt requests in the eQADC queuing control and triggering control. The eDMA/interrupt request select bits and the eDMA/interrupt enable bits are described in Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn),” and the interrupt flag bits are described in Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISRn).” Table 20-54 depicts all interrupts and eDMA requests generated by the eQADC.

Table 20-54. eQADC FIFO Interrupt Summary¹

Interrupt	Condition	Clearing Mechanism
Non Coherency Interrupt	NCIE _n = 1 NCF _n = 1	Clear NCF _n bit by writing a 1 to the bit.
Trigger Overrun Interrupt ²	TORIE _n = 1 TORF _n = 1	Clear TORF _n bit by writing a 1 to the bit.
Pause Interrupt	PIE _n = 1 PF _n = 1	Clear PF _n bit by writing a 1 to the bit.
End of Queue Interrupt	EOQIE _n = 1 EOQF _n = 1	Clear EOQF _n bit by writing a 1 to the bit.
Command FIFO Underflow Interrupt ²	CFUIE _n = 1 CFUF _n = 1	Clear CFUF _n bit by writing a 1 to the bit.
Command FIFO Fill Interrupt	CFFE _n = 1 CFFS _n = 0 CFFF _n = 1	Clear CFFF _n bit by writing a 1 to the bit.
Result FIFO Overflow Interrupt ²	RFOIE _n = 1 RFOF _n = 1	Clear RFOF _n bit by writing a 1 to the bit.
Result FIFO Drain Interrupt	RFDE _n = 1 RFDS _n = 0 RFDF _n = 1	Clear RFDF _n bit by writing a 1 to the bit.

¹ For details refer to [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR_n\)”](#), and [Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 \(EQADC_IDCR_n\)”](#).

² Apart from generating an independent interrupt request for when a RFIFO overflow interrupt, a CFIFO underflow interrupt, and a CFIFO trigger overrun interrupt occurs, the eQADC also provides a combined interrupt request at which these requests from ALL CFIFOs are ORed. Refer to [Figure 20-54](#) for details.

[Table 20-55](#) describes a list of methods to generate eDMA requests by the eQADC.

Table 20-55. eQADC FIFO eDMA Summary¹

eDMA Request	Condition	Clearing Mechanism
Result FIFO Drain eDMA Request	RFDE _n = 1 RFDS _n = 1 RFDF _n = 1	The eQADC automatically clears the RFDF _n when RFIFOn becomes empty. Writing 1 to the RFDF _n bit is not allowed while RDFS = 1.
Command FIFO Fill eDMA Request	CFFE _n = 1 CFFS _n = 1 CFFF _n = 1	The eQADC automatically clears the CFFF _n when CFIFOn becomes full. Writing 1 to the CFFF _n bit is not allowed while CFDS = 1.

¹ For details refer to [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR_n\)”](#), and [Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 \(EQADC_IDCR_n\)”](#).

Enhanced Queued Analog-to-Digital Converter (eQADC)

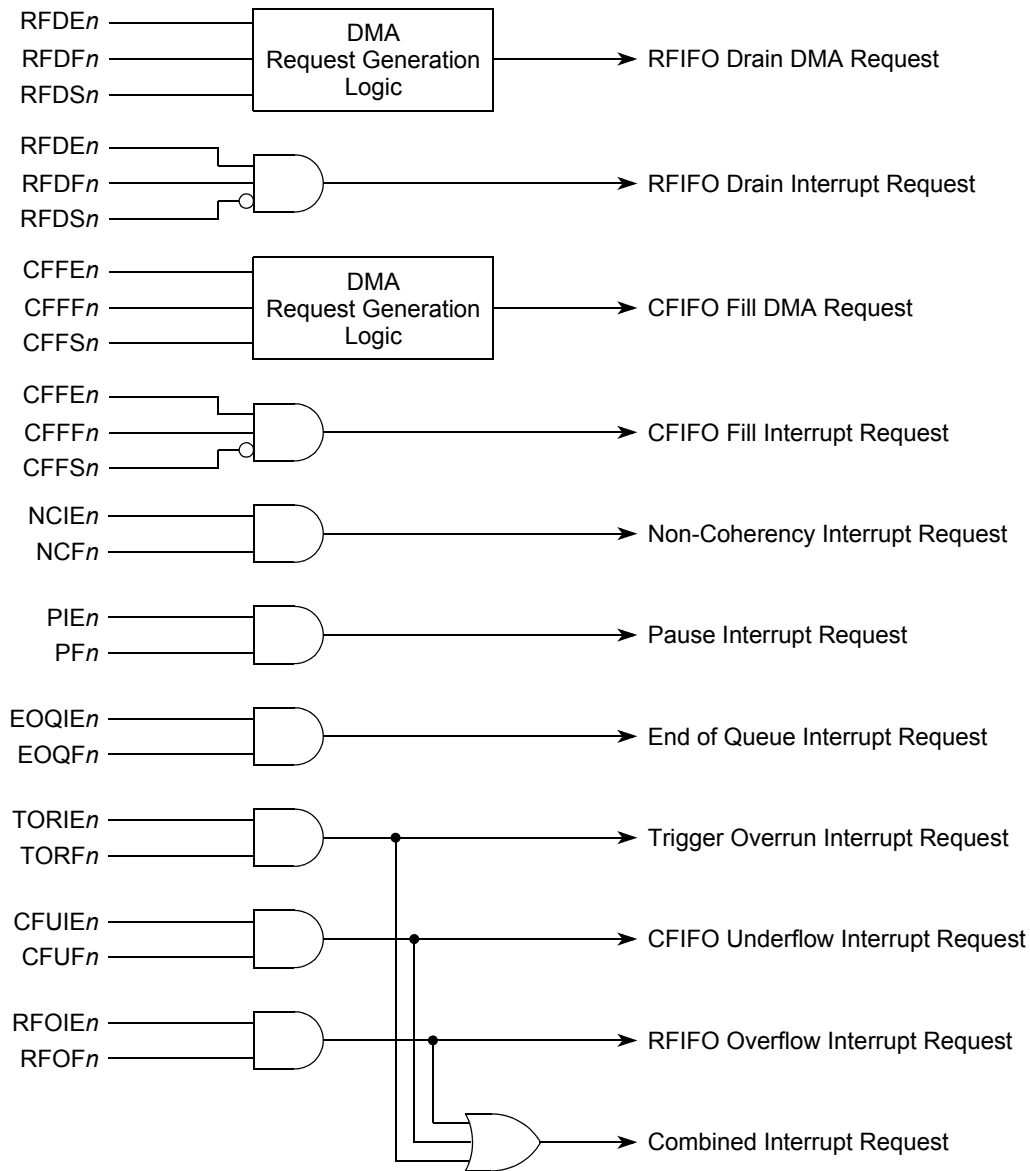


Figure 20-54. eQADC eDMA and Interrupt Requests

20.4.8 eQADC Synchronous Serial Interface (SSI) Submodule

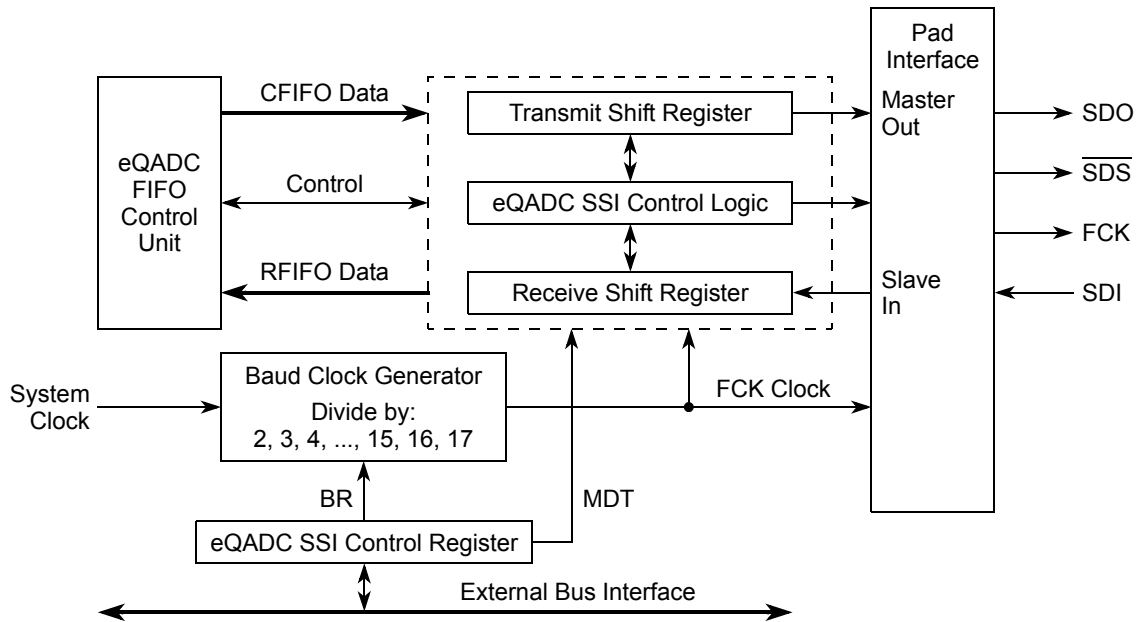


Figure 20-55. eQADC Synchronous Serial Interface Block Diagram

The eQADC SSI protocol allows for a full duplex, synchronous, serial communication between the eQADC and a single external device. Figure 20-55 shows the different components inside the eQADC SSI. The eQADC SSI submodule on the eQADC is always configured as a master. The eQADC SSI has four associated port pins:

- Free running clock (FCK)
- Serial data select ($\overline{\text{SDS}}$)
- Serial data in (SDI)
- Serial data out (SDO)

The FCK clock signal times the shifting and sampling of the two serial data signals and it is free running between transmissions, allowing it to be used as the clock for the external device. The $\overline{\text{SDS}}$ signal will be asserted to indicate the start of a transmission, and negated to indicate the end or the abort of a transmission. SDI is the master serial data input and SDO the master serial data output.

The eQADC SSI submodule is enabled by setting the EQADC_MCR[ESSIE] (see Section 20.3.2.1, “eQADC Module Configuration Register (EQADC_MCR)”). When enabled, the eQADC SSI can be optionally capable of starting serial transmissions. When serial transmissions are disabled (ESSIE set to 0b10), no data will be transmitted to the external device but FCK will be free-running. This operation mode permits the control of the timing of the first serial transmission, and can be used to avoid the transmission of data to an unstable external device, for example, a device that is not fully reset. This mode of operation is specially important for the reset procedure of an external device that uses the FCK as its main clock.

The main elements of the eQADC SSI are the shift registers. The 26-bit transmit shift register in the master and 26-bit receive shift register in the slave are linked by the SDO pin. In a similar way, the 26-bit transmit shift register in the slave and 26-bit receive shift register in the master are linked by the SDI pin. See

Figure 20-56. When a data transmission operation is performed, data in the transmit registers is serially shifted twenty-six bit positions into the receive registers by the FCK clock from the master; data is exchanged between the master and the slave. Data in the master transmit shift register in the beginning of a transmission operation becomes the output data for the slave, and data in the master receive shift register after a transmission operation is the input data from the slave.

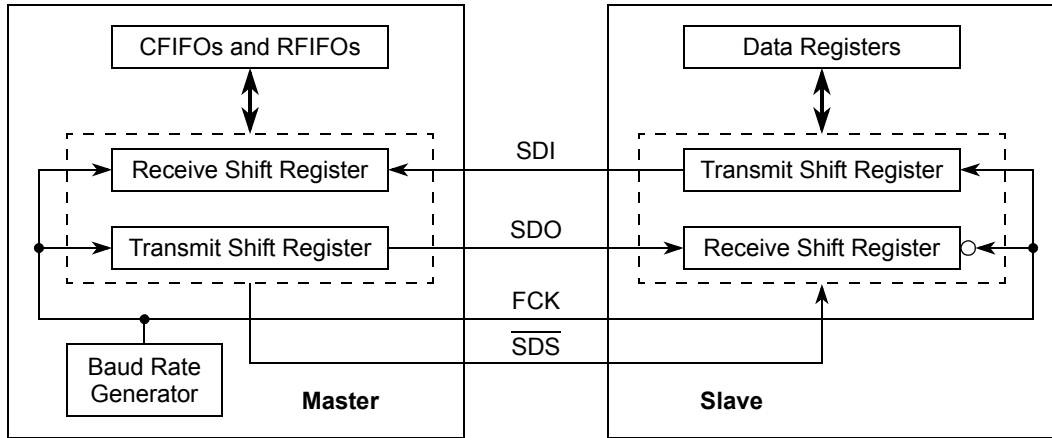


Figure 20-56. Full Duplex Pin Connection

20.4.8.1 eQADC SSI Data Transmission Protocol

Figure 20-57 shows the timing of an eQADC SSI transmission operation. The main characteristics of this protocol are the following:

- FCK is free running, it does not stop between data transmissions. FCK will be driven low:
 - When the serial interface is disabled
 - In stop/debug mode
 - Immediately after reset
- Frame size is fixed to 26 bits.
- Msb bit is always transmitted first.
- Master drives data on the positive edge of FCK and latches incoming data on the next positive edge of FCK.
- Slave drives data on the positive edge of FCK and latches incoming data on the negative edge of FCK.

Master initiates a data transmission by driving $\overline{\text{SDS}}$ low, and its msb bit on SDO on the positive edge of FCK. Once an asserted $\overline{\text{SDS}}$ is detected, the slave shifts its data out, one bit at a time, on every FCK positive edge. Both the master and the slave drive new data on the serial lines on every FCK positive edge. This process continues until all the initial 26-bits in the master shift register are moved into the slave shift register. t_{DT} is the delay between two consecutive serial transmissions, time during which $\overline{\text{SDS}}$ is negated. When ready to start of the next transmission, the slave must drive the msb bit of the message on every positive edge of FCK regardless of the state of the $\overline{\text{SDS}}$ signal. On the next positive edge, the second bit of the message is conditionally driven according to if an asserted $\overline{\text{SDS}}$ was detected by the slave on the preceding FCK negative edge. This is an important requisite since the $\overline{\text{SDS}}$ and the FCK are not

synchronous. The $\overline{\text{SDS}}$ signal is not generated by FCK, rather both are generated by the system clock, so that it is not guaranteed that FCK edges will precede $\overline{\text{SDS}}$ edges. While $\overline{\text{SDS}}$ is negated, the slave continuously drives its msb bit on every positive edge of FCK until it detects an asserted $\overline{\text{SDS}}$ on the immediately next FCK negative edge. See [Figure 20-58](#) for three situations showing how the slave should behave according to when $\overline{\text{SDS}}$ is asserted.

NOTE

On the master, the FCK is not used as a clock. Although, the eQADC SSI behavior is described in terms of the FCK positive and negative edges, all eQADC SSI related signals (SDI, SDS, SDO, and FCK) are synchronized by the system clock on the master side. There are no restrictions regarding the use of the FCK as a clock on the slave device.

20.4.8.1.1 Abort Feature

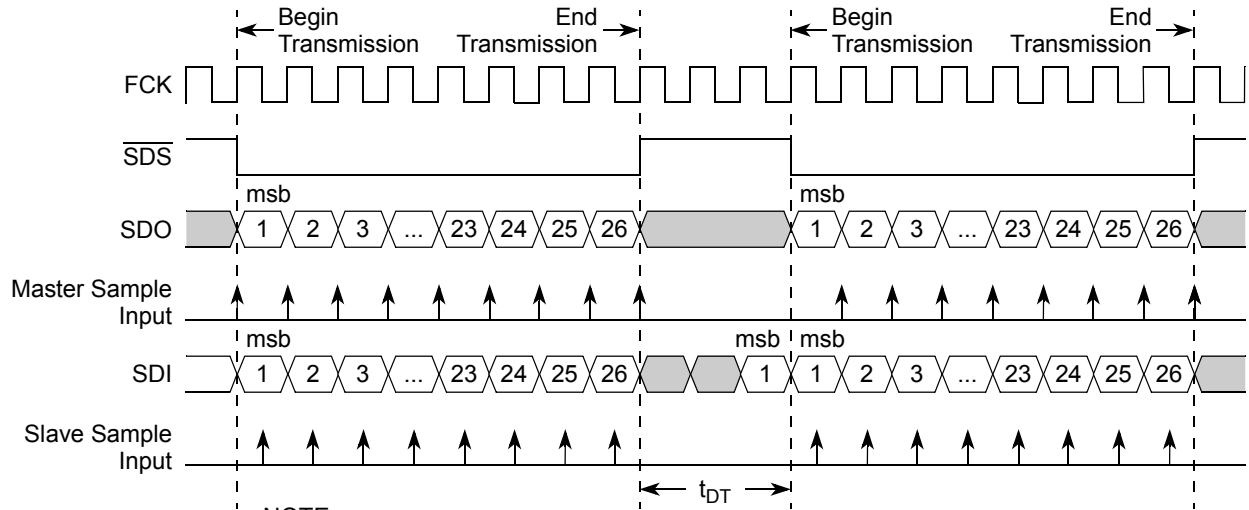
The master indicates it is aborting the current transfer by negating $\overline{\text{SDS}}$ before the whole data frame has been shifted out, that is the 26th bit of data being transferred has not been shifted out. The eQADC ignores the incompletely received message. The eQADC re-sends the aborted message whenever the corresponding CFIFO becomes again the highest priority CFIFO with commands bound for an external command buffer that is not full. Refer to [Section 20.4.3.2, “CFIFO Prioritization and Command Transfer,”](#) for more information on aborts and CFIFO priority.

20.4.8.2 Baud Clock Generation

As shown in [Figure 20-55](#), the baud clock generator divides the system clock to produce the baud clock. The EQADC_SSICR[BR] field (see [Section 20.3.2.12, “eQADC SSI Control Register \(EQADC_SSICR\)”](#)) selects the system clock divide factor as in [Table 20-21](#).¹

$$\text{BaudClockFrequency} = \frac{\text{SystemClockFrequency(MHz)}}{\text{SystemClockDivideFactor}}$$

1. Maximum FCK frequency is highly dependable on track delays, master pad delays, and slave pad delays.



NOTE:
 t_{MDT} = Minimum t_{DT} is programmable and defined in Section 18.3.2.12, 'eQADC SSI Control Register (EQADC_SSI CR).'

Figure 20-57. Synchronous Serial Interface Protocol Timing

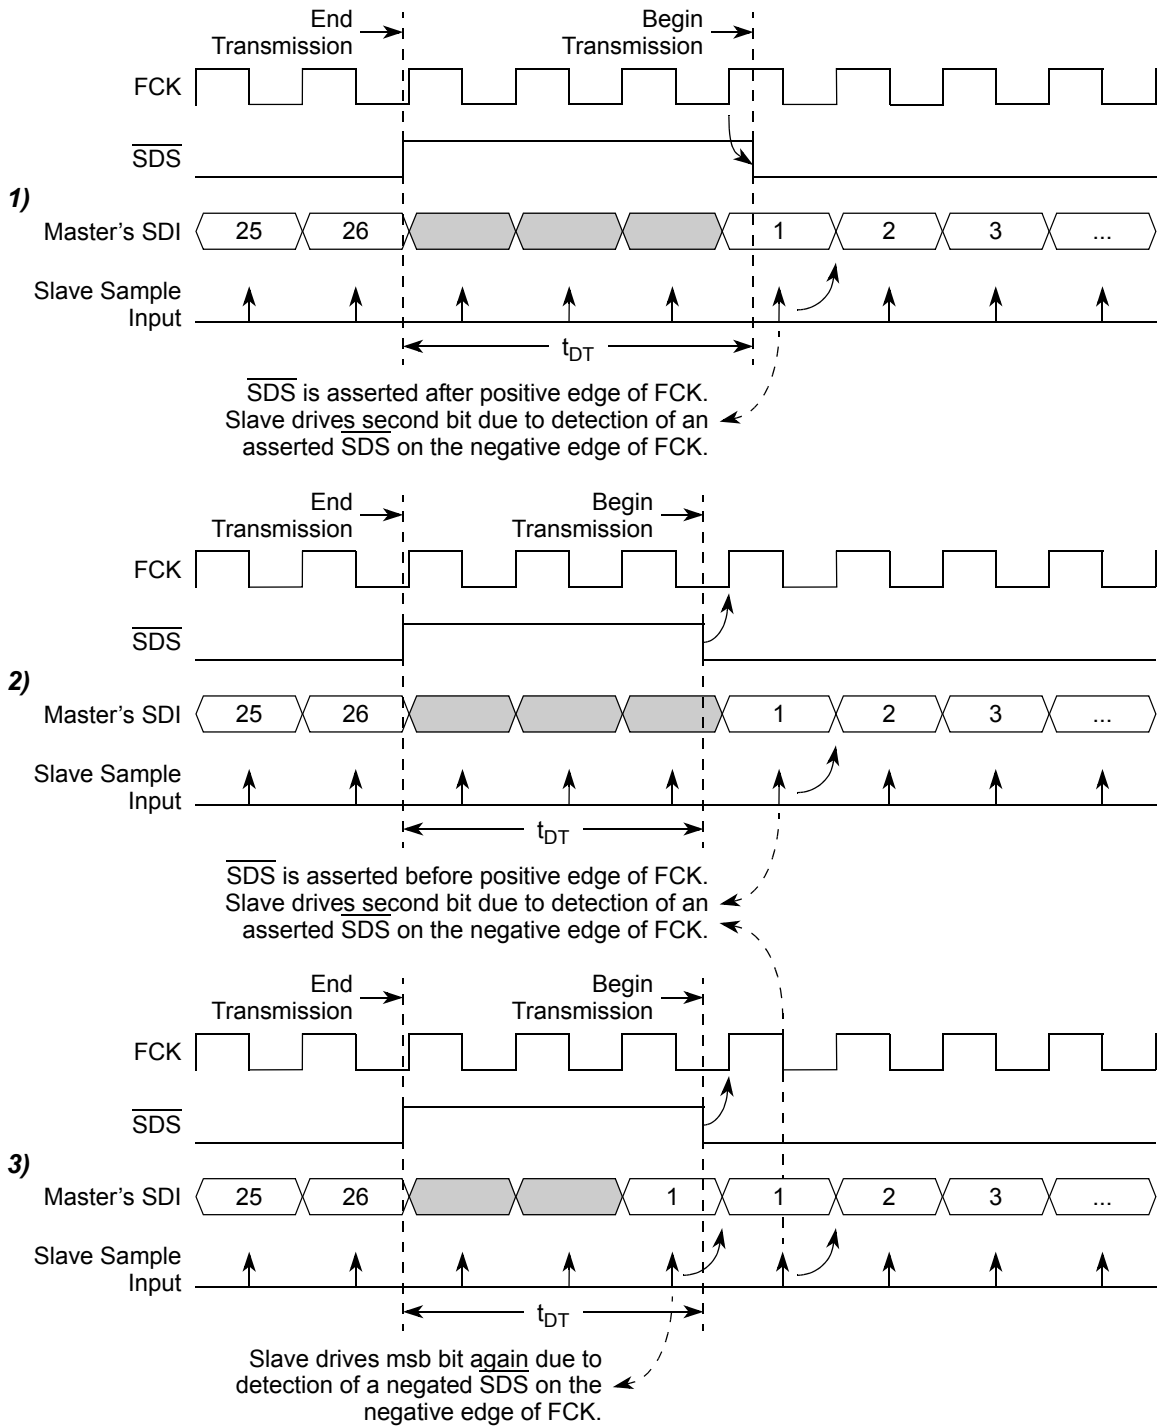


Figure 20-58. Slave Driving the msb and Consecutive Bits in a Data Transmission

20.4.9 Analog Submodule

20.4.9.1 Reference Bypass

The reference bypass capacitor (REFBYPC) signal requires a 100 nF capacitor connected to VRL to filter noise on the internal reference used by the ADC.




Figure 20-59. Reference Bypass Circuit

20.4.9.2 Analog-to-Digital Converter (ADC)

20.4.9.2.1 ADC Architecture

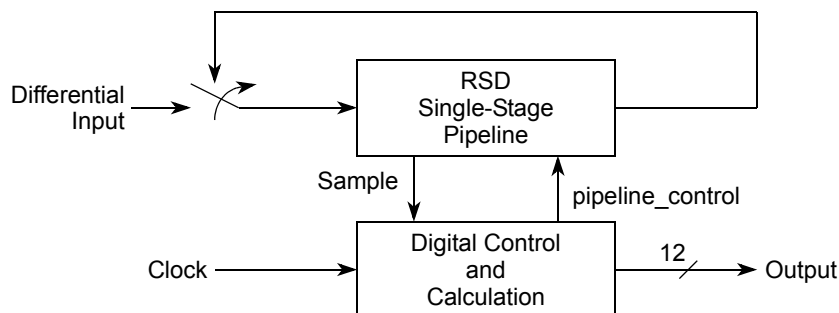


Figure 20-60. RSD ADC Block Diagram

The redundant signed digit (RSD) cyclic ADC consists of two main portions, the analog RSD stage, and the digital control and calculation module, as shown in [Figure 20-60](#). To begin an analog-to-digital conversion, a differential input is passed into the analog RSD stage. The signal is passed through the RSD stage, and then from the RSD stage output, back to its input to be passed again. To complete a 12-bit conversion, the signal must pass through the RSD stage 12 times. Each time an input signal is read into the RSD stage, a digital sample is taken by the digital control/calculation module. The digital control/calculation module uses this sample to tell the analog module how to condition the signal. The digital module also saves each successive sample and adds them according to the RSD algorithm at the end of the entire conversion cycle.

20.4.9.2.2 RSD Overview

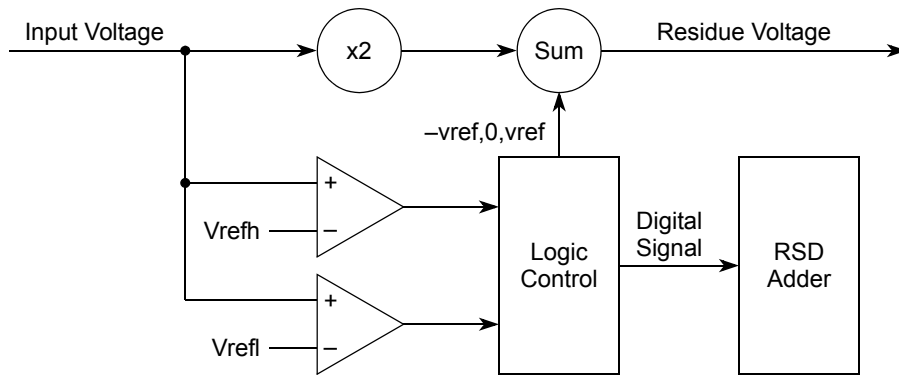


Figure 20-61. RSD Stage Block Diagram

On each pass through the RSD stage, the input signal will be multiplied by exactly two, and summed with either $-v_{ref}$, 0, or v_{ref} , depending on the logic control. The logic control will determine $-v_{ref}$, 0, or v_{ref} depending on the two comparator inputs. As the logic control sets the summing operation, it also sends a digital value to the RSD adder. Each time an analog signal passes through the RSD single-stage, a digital value is collected by the RSD adder. At the end of an entire AD conversion cycle, the RSD adder uses these collected values to calculate the 12-bit digital output.

Figure 20-62 shows the transfer function for the RSD stage. Note how the digital value (AB) is dependent on the two comparator inputs.

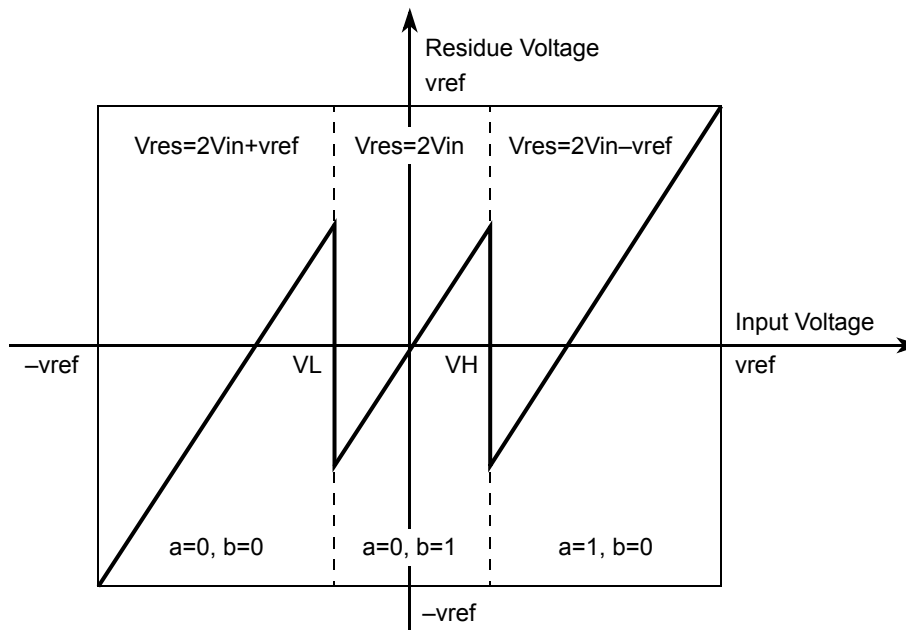


Figure 20-62. RSD Stage Transfer Function

In each pass through the RSD stage, the residue will be sent back to be the new input, and the digital signals, a and b, will be stored. For the 12-bit ADC, the input signal is sampled during the input phase, and after each of the 12 passes through the RSD stage. Thus, 13 total a and b values are collected. Upon

collecting all these values, they will be added according to the RSD algorithm to create the 12-bit digital representation of the original analog input. The bits are added in the following manner:

20.4.9.2.3 RSD Adder

The array, s1 to s12, will be the digital output of the RSD ADC with s1 being the msb and s12 being the lsb (least significant bit).

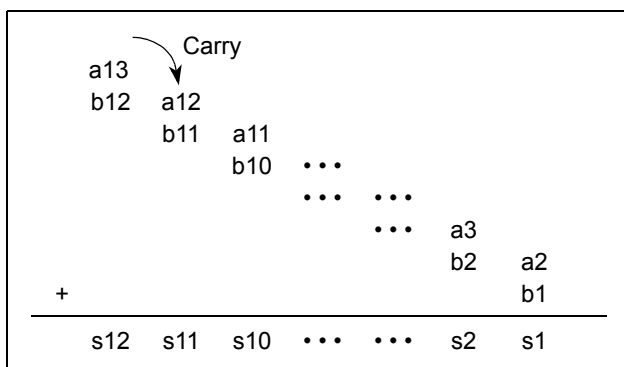


Figure 20-63. RSD Adder

20.5 Initialization/Application Information

20.5.1 Multiple Queues Control Setup Example

This section provides an example of how to configure multiple user command queues. [Table 20-56](#) describes how each queue can be used for a different application. Also documented in this section are general guidelines on how to initialize the on-chip ADCs and the external device, and how to configure the command queues and the eQADC.

Table 20-56. Example Applications of Each Command Queue

Command Queue Number	Queue Type	Running Speed	Number of Contiguous Conversions	Example
0	Very fast burst time-based queue	every 2 μ s for 200 μ s; pause for 300 μ s and then repeat	2	Injector current profiling
1	Fast hardware-triggered queue	every 900 μ s	3	Current sensing of PWM controlled actuators
2	Fast repetitive time-based queue	every 2 ms	8	Throttle position
3	Software-triggered queue	every 3.9 ms	3	Command triggered by software strategy

Table 20-56. Example Applications of Each Command Queue (continued)

Command Queue Number	Queue Type	Running Speed	Number of Contiguous Conversions	Example
4	Repetitive angle-based queue	every 625 us	7	Airflow read every 30 degrees at 8000 RPM
5	Slow repetitive time-based queue	every 100 ms	10	Temperature sensors

20.5.1.1 Initialization of On-Chip ADCs/External Device

The following steps provide an example of configuring the eQADC to initialize the on-chip ADCs and the external device. In this example, commands will be sent through CFIFO0.

1. Load all required configuration commands in the RAM in such way that they form a queue; this data structure will be referred below as Queue0. [Figure 20-64](#) shows an example of a command queue able to configure the on-chip ADCs and external device at the same time.
2. Configure [Section 20.3.2.2](#), “eQADC Null Message Send Format Register (EQADC_NMSFR).”
3. Configure [Section 20.3.2.12](#), “eQADC SSI Control Register (EQADC_SSICR),” to communicate with the external device.
4. Enable the eQADC SSI by programming the ESSIE field the [Section 20.3.2.1](#), “eQADC Module Configuration Register (EQADC_MCR).”
 - a) Write 0b10 to ESSIE field to enable the eQADC SSI. FCK is free running but serial transmissions are not started.
 - b) Wait until the external device becomes stable after reset.
 - c) Write 0b11 to ESSIE field to enable the eQADC SSI to start serial transmissions.
5. Configure the eDMA to transfer data from Queue0 to CFIFO0 in the eQADC.
6. Configure [Section 20.3.2.7](#), “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn).”
 - a) Set CFFS0 to configure the eQADC to generate an eDMA request to load commands from Queue0 to the CFIFO0.
 - b) Set CFFE0 to enable the eQADC to generate an eDMA request to transfer commands from Queue0 to CFIFO0; Command transfers from the RAM to the CFIFO0 will start immediately.
 - c) Set EOQIE0 to enable the eQADC to generate an interrupt after transferring all of the commands of Queue0 through CFIFO0.
7. Configure [Section 20.3.2.6](#), “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn).”
 - a) Write 0b0001 to the MODE0 field in eQADC_CFCR0 to program CFIFO0 for software single-scan mode.
 - b) Write 1 to SSE0 to assert SSS0 and trigger CFIFO0.
8. Because CFIFO0 is in single-scan software mode and it is also the highest priority CFIFO, the eQADC starts to transfer configuration commands to the on-chip ADCs and to the external device.

9. When all of the configuration commands have been transferred, EQADC_FISR_n[CF0] (see Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 (EQADC_FISR_n)”) will be set. The eQADC generates a end of queue interrupt. The initialization procedure is complete.

Command Queue in System Memory	
0x0	Configuration Command to ADC0—Ex: Write ADC0_CR
0x1	Configuration Command to ADC0—Ex: Write ADC_TSCR
0x2	Configuration Command to ADC1—Ex: Write ADC1_CR
0x3	Configuration Command to ADC2—Ex: Write to external device configuration register

Figure 20-64. Example of a Command Queue Configuring the On-Chip ADCs/External Device

20.5.1.2 Configuring eQADC for Applications

This section provides an example based on the applications in Table 20-56. The example describes how to configure multiple command queues to be used for those applications and provides a step-by-step procedure to configure the eQADC and the associated command queue structures. In the example, the “Fast hardware-triggered command queue,” described on the second row of Table 20-56, will have its commands transferred to ADC1; the conversion commands will be executed by ADC1. The generated results will be returned to RFIFO3 before being transferred to the result queues in the RAM by the eDMA.

NOTE

There is no fixed relationship between CFIFOs and RFIFOs with the same number. The results of commands being transferred through CFIFO1 can be returned to any RFIFO, regardless of its number. The destination of a result is determined by the MESSAGE_TAG field of the command that requested the result. See Section 20.4.1.2, “Message Format in eQADC,” for details.

Step One: Set up the command queues and result queues.

1. Load the RAM with configuration and conversion commands. Table 20-57 is an example of how command queue 1 commands should be set.
 - a) Each trigger event will cause four commands to be executed. When the eQADC detects the pause bit asserted, it will wait for another trigger to restart transferring commands from the CFIFO.
 - b) At the end of the command queue, the “EOQ” bit is asserted as shown in Table 20-57.
 - c) Results will be returned to RFIFO3 as specified in the MESSAGE_TAG field of commands.
2. Reserve memory space for storing results.

Table 20-57. Example of Command Queue Commands¹

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
	EOQ	PAUSE	RESERVED	ABORT_ST	EB (0b1)	BN	CAL	MESSAGE TAG	ADC COMMAND																							
CMD1	0	0	0	0	0	1	0	0b0011	Conversion Command																							
CMD2	0	0	0	0	0	1	0	0b0011	Conversion Command																							
CMD3	0	0	0	0	0	1	0	0b0011	Conversion Command																							
CMD4	0	1	0	0	0	1	0	0b0011 ²	Configure peripheral device for next conversion sequence																							
CMD5	0	0	0	0	0	1	0	0b0011	Conversion Command																							
CMD6	0	0	0	0	0	1	0	0b0011	Conversion Command																							
CMD7	0	0	0	0	0	1	0	0b0011	Conversion Command																							
CMD8	0	1	0	0	0	1	0	0b0011 ²	Configure peripheral device for next conversion sequence																							
⋮									etc.....																							
CMDEOQ	1	0	0	0	0	1	0	0b0011	EOQ Message																							

CFIFO Header
ADC Command

¹ Fields LST, TSR, FMT, and CHANNEL_NUMBER are not shown for clarity. See Section , “Conversion Command Message Format for On-Chip ADC Operation,” for details.

² MESSAGE_TAG field is only defined for read configuration commands.

Step Two: Configure the eDMA to handle data transfers between the command/result queues in RAM and the CFIFOs/RFIFOs in the eQADC.

1. For transferring, set the source address of the eDMA TCD_n to point to the start address of command queue 1. Set the destination address of the eDMA to point to EQADC_CFPR1. Refer to Section 20.3.2.4, “eQADC CFIFO Push Registers 0–5 (EQADC_CFPRn).”
2. For receiving, set the source address of the eDMA TCD_n to point to EQADC_RFPR3. Refer to Section 20.3.2.5, “eQADC Result FIFO Pop Registers 0–5 (EQADC_RFPRn).” Set the destination address of the eDMA to point to the starting address of result queue 1.

Step Three: Configure the eQADC control registers.

3. Configure Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 (EQADC_IDCRn).”
 - a) Set EOQIE1 to enable the End of Queue Interrupt request.
 - b) Set CFFS1 and RFDS3 to configure the eQADC to generate eDMA requests to push commands into CFIFO1 and to pop result data from RFIF03.
 - c) Set CFINV1 to invalidate the contents of CFIFO1.
 - d) Set RFDE3 and CFFE1 to enable the eQADC to generate eDMA requests. Command transfers from the RAM to the CFIFO1 will start immediately.

- e) Set RFOIE3 to indicate if RFIFO3 overflows.
 - f) Set CFUIE1 to indicate if CFIFO1 underflows.
4. Configure MODE1 to continuous-scan rising edge external trigger mode in [Section 20.3.2.6](#), “eQADC CFIFO Control Registers 0–5 (EQADC_CFCRn).”

Step Four: Command transfer to ADCs and result data reception.

When an external rising edge event occurs for CFIFO1, the eQADC automatically will begin transferring commands from CFIFO1 when it becomes the highest priority CFIFO trying to send commands to ADC1. The received results will be placed in RFIFO3 and then moved to result queue 1 by the eDMA.

20.5.2 EQADC/eDMA Controller Interface

This section provides an overview of the EQADC/eDMA interface and general guidelines about how the eDMA should be configured in order for it to correctly transfer data between the queues in system memory and the EQADC FIFOs.

20.5.2.1 Command Queue/CFIFO Transfers

In transfers involving command queues and CFIFOs, the eDMA moves data from a queued source to a single destination as shown in [Figure 20-65](#). The location of the data to be moved is indicated by the source address, and the final destination for that data, by the destination address. The eDMA has transfer control descriptors (TCDs) containing these addresses and other parameters used in the control of data transfers (See [Section 9.2.2.16](#), “[Transfer Control Descriptor \(TCD\)](#),” for more information). For every eDMA request issued by the EQADC, the eDMA must be configured to transfer a single command (32-bit data) from the command queue, pointed to by the source address, to the CFIFO push register, pointed to by the destination address. After the service of an eDMA request is completed, the source address has to be updated to point to the next valid command. The destination address remains unchanged. When the last command of a queue is transferred one of the following actions is recommended. Refer to [Chapter 9](#), “[Enhanced Direct Memory Access \(eDMA\)](#)” for details about how this functionality is supported.

- The corresponding eDMA channel should be disabled. This might be desirable for CFIFOs in single scan mode.
- The source address should be updated to pointed to a valid command which can be the first command in the queue that has just been transferred (cyclic queue), or the first command of any other command queue. This is desirable for CFIFOs in continuous scan mode, or in some cases, for CFIFOs in single scan mode.

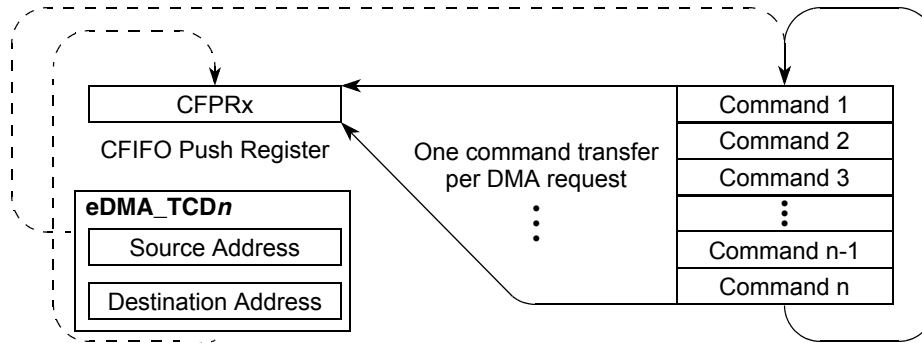


Figure 20-65. Command Queue/CFIFO Interface

20.5.2.2 Receive Queue/RFIFO Transfers

In transfers involving receive queues and RFIFOs, the eDMA controller moves data from a single source to a queue destination as shown in Figure 20-66. The location of the data to be moved is indicated by the source address, and the final destination for that data, by the destination address. For every eDMA request issued by the EQADC, the eDMA controller has to be configured to transfer a single result (16-bit data), pointed to by the source address, from the RFIFO pop register to the receive queue, pointed to by the destination address. After the service of an eDMA request is completed, the destination address has to be updated to point to the location where the next 16-bit result will be stored. The source address remains unchanged. When the last expected result is written to the receive queue, one of the following actions is recommended. Refer to Chapter 9, “Enhanced Direct Memory Access (eDMA)” for details about how this functionality is supported.

- The corresponding eDMA channel should be disabled.
- The destination address should be updated pointed to the next location where new coming results are stored, which can be the first entry of the current receive queue (cyclic queue), or the beginning of a new receive queue.

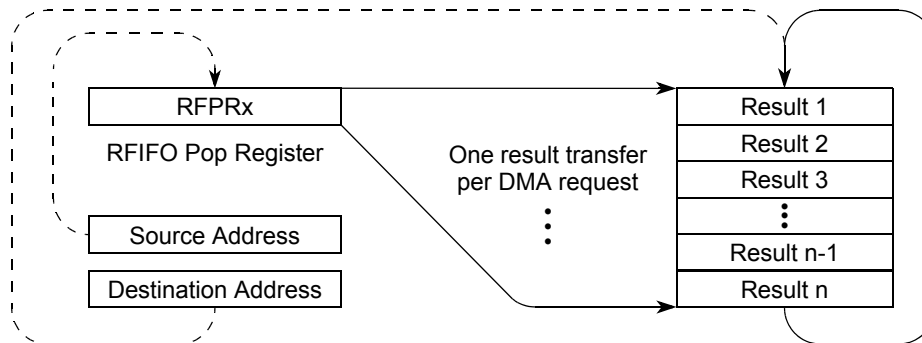


Figure 20-66. Receive Queue/RFIFO Interface

20.5.3 Sending Immediate Command Setup Example

In the eQADC, there is no immediate command register for sending a command immediately after writing to that register. However, a CFIFO can be configured to perform the same function as an immediate

command register. The following steps illustrate how to configure CFIFO5 as an immediate command CFIFO. This eliminates the use of the eDMA. The results will be returned to RFIFO5.

1. Configure the [Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 \(EQADC_IDCRn\).”](#)
 - a) Clear CFIFO fill enable5 (CFFE5 = 0) in EQADC_IDCR5.
 - b) Clear CFIFO underflow interrupt enable5 (CFUIE5 = 0) in EQADC_IDCR2.
 - c) Clear RFDS5 to configure the eQADC to generate interrupt requests to pop result data from RFIFO5.
 - d) Set RFIFO drain enable5 (RFDE5 = 1) in EQADC_IDCR5.
2. Configure the [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCRn\).”](#)
 - a) Write 1 to CFINV5 in EQADC_CFCR5. This will invalidate the contents of CFIFO5.
 - a) Set MODE5 to continuous-scan software trigger mode in EQADC_CFCR5.
3. To transfer a command, write it to the eQADC CFIFO push register 5 (EQADC_CFPR5) with message tag = 0b0101. Refer to [Section 20.3.2.4, “eQADC CFIFO Push Registers 0–5 \(EQADC_CFPRn\).”](#)
4. Up to 4 commands can be queued in CFIFO5. Check the CFCTR5 status in EQADC_FISR5 before pushing another command to avoid overflowing the CFIFO. Refer to [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISRn\).”](#)
5. When the eQADC receives a conversion result for RFIFO5, it generates an interrupt request. RFIFO pop register 5 (EQADC_RFPR5) can be popped to read the result. Refer to [Section 20.3.2.5, “eQADC Result FIFO Pop Registers 0–5 \(EQADC_RFPRn\).”](#)

20.5.4 Modifying Queues

More command queues may be needed than the six supported by the eQADC. These additional command queues can be supported by interrupting command transfers from a configured CFIFO, even if it is triggered and transferring, modifying the corresponding command queue in the RAM or associating another command queue to it, and restarting the CFIFO. More details on disabling a CFIFO are described in [Section 20.4.3.5.1, “Disabled Mode.”](#)

1. Determine the resumption conditions when later resuming the scan of the command queue at the point before it was modified.
 - a) Change EQADC_CFCRn[MODEn] (see [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCRn\)”](#)) to disabled. Refer to [Section 20.4.3.5.1, “Disabled Mode,”](#) for a description of what happens when MODEn is changed to disabled.
 - b) Poll EQADC_CFSR[CFSn] until it becomes IDLE (see [Section 20.3.2.11, “eQADC CFIFO Status Register \(EQADC_CFSR\)”](#)).
 - c) Read and save EQADC_CFTCRn[TC_CFn] (see [Section 20.3.2.9, “eQADC CFIFO Transfer Counter Registers 0–5 \(EQADC_CFTCRn\)”](#)) for later resuming the scan of the queue. The TC_CFn provides the point of resumption.
 - d) Since all result data may not have being stored in the appropriate RFIFO at the time MODEn is changed to disable, wait for all expected results to be stored in the RFIFO/result queue before

reconfiguring the eDMA to work with the modified result queue. The number of results that must return can be estimated from the TC_CF n value obtained above.

2. Disable the eDMA from responding to the eDMA request generated by EQADC_FISR n [CFFF n] and EQADC_FISR n [RFDF n] (see [Section 20.3.2.8, “eQADC FIFO and Interrupt Status Registers 0–5 \(EQADC_FISR \$n\$ \)”](#)).
3. Write “0x0000” to the TC_CF n field.
4. Load the new configuration and conversion commands into RAM. Configure the eDMA to support the new command/result queue, but do not configure it yet to respond to eDMA requests from CFIFO n /RFIFO n .
5. If necessary, modify the EQADC_IDCR n registers (see [Section 20.3.2.7, “eQADC Interrupt and eDMA Control Registers 0–5 \(EQADC_IDCR \$n\$ \)”](#)) to suit the modified command queue.
6. Write 1 to EQADC_CFCR n [CFINV n] (see [Section 20.3.2.6, “eQADC CFIFO Control Registers 0–5 \(EQADC_CFCR \$n\$ \)”](#)) to invalidate the entries of CFIFO n .
7. Configure the eDMA to respond to eDMA requests generated by CFFF n and RFDF n .
8. Change MODE n to the modified CFIFO operation mode. Write 1 to SSE n to trigger CFIFO n if MODE n is software trigger.

20.5.5 Command Queue and Result Queue Usage

[Figure 20-67](#) is an example of command queue and result queue usage. It shows the command queue 0 commands requesting results that will be stored in result queue 0 and result queue 1, and command queue 1 commands requesting results that will be stored only in result queue 1. Some command messages request data to be returned from the on-chip ADC/external device, but some only configure them and do not request returning data. When a command queue contains both write and read commands like command queue 0, the command queue and result queue entries will not be aligned, in [Figure 20-67](#), the result for the second command of command queue 0 is the first entry of result queue 0. The figure also shows that command queue and result queue entries can also become unaligned even if all commands in a command queue request data as command queue 1. Command queue 1 entries became unaligned to result queue 1 entries because a result requested by the fourth command queue 0 command was sent to result queue 1. This happens because the system can be configured so that several command queues can have results sent to a single result queue.

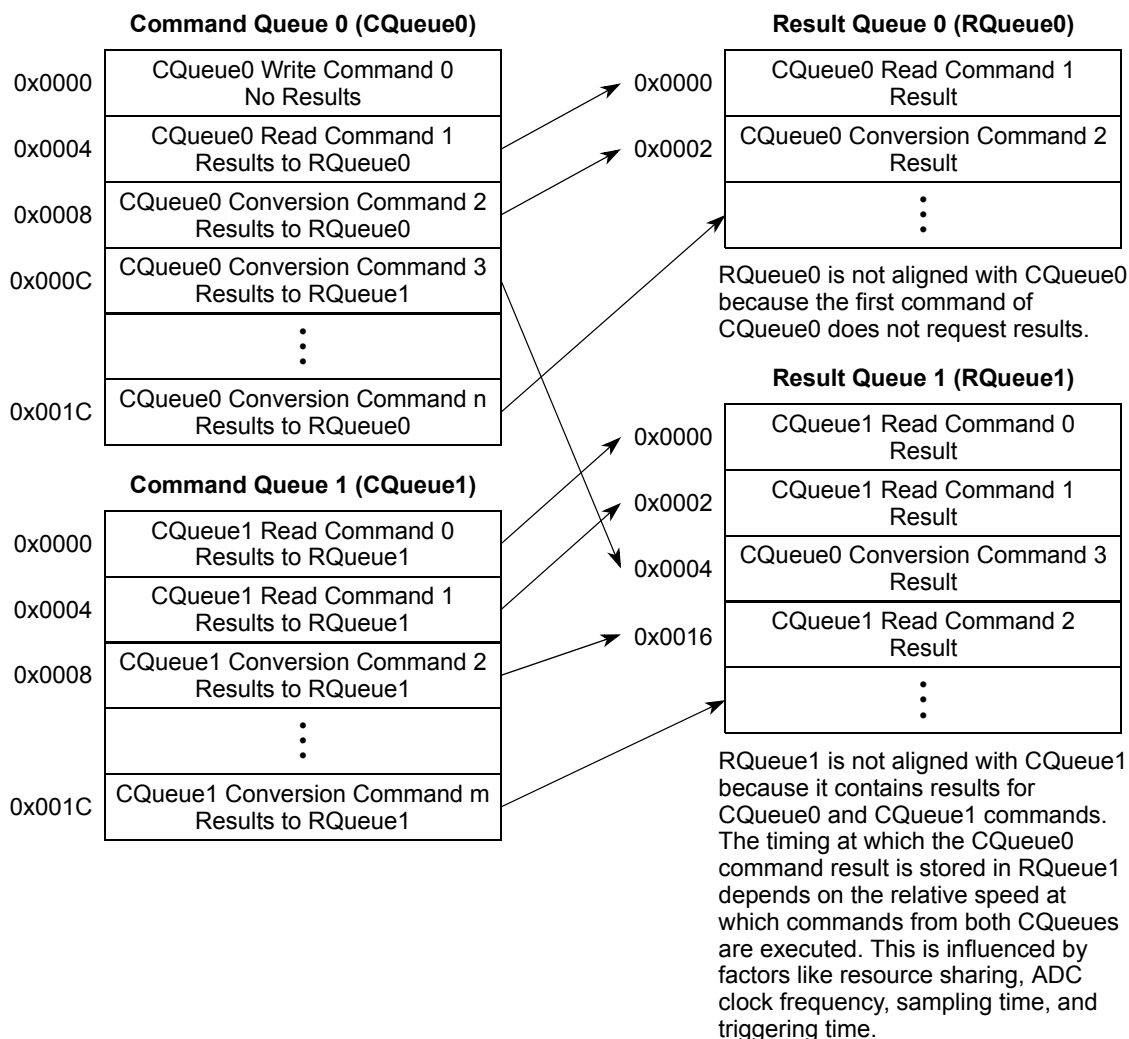


Figure 20-67. eQADC Command and Result Queues

20.5.6 ADC Result Calibration

The ADC result calibration process consists of two steps: determining the gain and offset calibration constants, and calibrating the raw results generated by the on-chip ADCs by solving the following equation discussed in [Section 20.4.5.4.1, “Calibration Overview.”](#)

$$CAL_RES = GCC * RAW_RES + OCC + 2; \tag{Eqn. 20-1}$$

The calibration constants GCC and OCC can be calculated from [Equation 20-1](#) provided that two pairs of expected (CAL_RES) and measured (RAW_RES) result values are available for two different input voltages. Most likely calibration points to be used are 25% VREF¹ and 75% VREF since they are far apart but not too close to the end points of the full input voltage range. This allows for calculations of more representative calibration constants. The eQADC provides these voltages via channel numbers 43 and 44.

1. VREF = V_{RH} - V_{RL}

The raw, uncalibrated results for these input voltages are obtained by converting these channels with conversion commands that have the CAL bit negated.

The transfer equations for when sampling these reference voltages are:

$$\text{CAL_RES75\%VREF} = \text{GCC} * \text{RAW_RES75\%VREF} + \text{OCC} + 2; \quad \text{Eqn. 20-2}$$

$$\text{CAL_RES25\%VREF} = \text{GCC} * \text{RAW_RES25\%VREF} + \text{OCC} + 2; \quad \text{Eqn. 20-3}$$

Thus;

$$\text{GCC} = (\text{CAL_RES75\%VREF} - \text{CAL_RES25\%VREF}) / (\text{RAW_RES75\%VREF} - \text{RAW_RES25\%VREF}); \quad \text{Eqn. 20-4}$$

$$\text{OCC} = \text{CAL_RES75\%VREF} - \text{GCC} * \text{RAW_RES75\%VREF} - 2; \quad \text{Eqn. 20-5}$$

or

$$\text{OCC} = \text{CAL_RES25\%VREF} - \text{GCC} * \text{RAW_RES25\%VREF} - 2; \quad \text{Eqn. 20-6}$$

After being calculated, the GCC and OCC values must be written to ADC0_GCCR and ADC1_GCCR registers (see [Section 20.3.3.4, “ADCn Gain Calibration Constant Registers \(ADC0_GCCR and ADC1_GCCR\)”](#)) and the ADC0_OCCR and ADC1_OCCR registers (see [Section 20.3.3.5, “ADCn Offset Calibration Constant Registers \(ADC0_OCCR and ADC1_OCCR\)”](#)) using write configuration commands.

The eQADC will automatically calibrate the results, according to [Equation 20-1](#), of every conversion command that has its CAL bit asserted using the GCC and OCC values stored in the ADC calibration registers.

20.5.6.1 MAC Configuration Procedure

The following steps illustrate how to configure the calibration hardware, that is, determining the values of the gain and offset calibration constants, and the writing these constants to the calibration registers. This procedure should be performed for both ADC0 and ADC1.

1. Convert channel 44 with a command that has its CAL bit negated and obtain the raw, uncalibrated result for 25%VREF (RAW_RES25%VREF).
2. Convert channel 43 with a command that has its CAL bit negated and obtain the raw, uncalibrated result for 75%VREF (RAW_RES75%VREF).
3. Because the expected values for the conversion of these voltages are known (CAL_RES25%VREF and CAL_RES75%VREF), GCC and OCC values can be calculated from [Equation 20-4](#) and [Equation 20-5](#) using these values, and the results determined in steps 1 and 2.
4. Reformat GCC and OCC to the proper data formats as specified in [Section 20.4.5.4.2, “MAC Unit and Operand Data Format.”](#) GCC is an unsigned 15-bit fixed point value and OCC is a signed 14-bit value.

- Write the GCC value to ADCn gain calibration registers (see Section 20.3.3.4, “ADCn Gain Calibration Constant Registers (ADC0_GCCR and ADC1_GCCR)”) and the OCC value to ADCn offset calibration constant registers (see Section 20.3.3.5, “ADCn Offset Calibration Constant Registers (ADC0_OCCR and ADC1_OCCR)”) using write configuration commands.

20.5.6.2 Example Calculation of Calibration Constants

The raw results obtained when sampling reference voltages 25%VREF and 75%VREF were, respectively, 3798 and 11592. The results that should have been obtained from the conversion of these reference voltages are, respectively, 4096 and 12288. Therefore, using Equation 20-4 and Equation 20-5, the gain and offset calibration constants are:

$$GCC = (12288 - 4096) / (11592 - 3798) = 1.05106492 \rightarrow 1.05102539^1 = 0x4344$$

$$OCC = 12288 - 1.05106492 * 11592 - 2 = 102.06 \rightarrow 102 = 0x0066$$

Table 20-58 shows, for this particular case, examples of how the result values change according to GCC and OCC when result calibration is executed (CAL=1) and when it is not (CAL=0).

Table 20-58. Calibration Example

Input Voltage	Raw result (CAL=0)		Calibrated result (CAL=1)	
	Hexadecimal	Decimal	Hexadecimal	Decimal
25% VREF	0x0ED6	3798	0x1000	4095.794
75% VREF	0x2D48	11592	0x3000	12287.486

20.5.6.3 Quantization Error Reduction During Calibration

Figure 20-68 shows how the ADC transfer curve changes due to the addition of two to the MAC output during the calibration - see MAC output equation in Section 20.4.5.4, “ADC Calibration Feature.” The maximum absolute quantization error is reduced by half leading to an increase in accuracy.

1. This calculation is rounded down due to binary approximation.

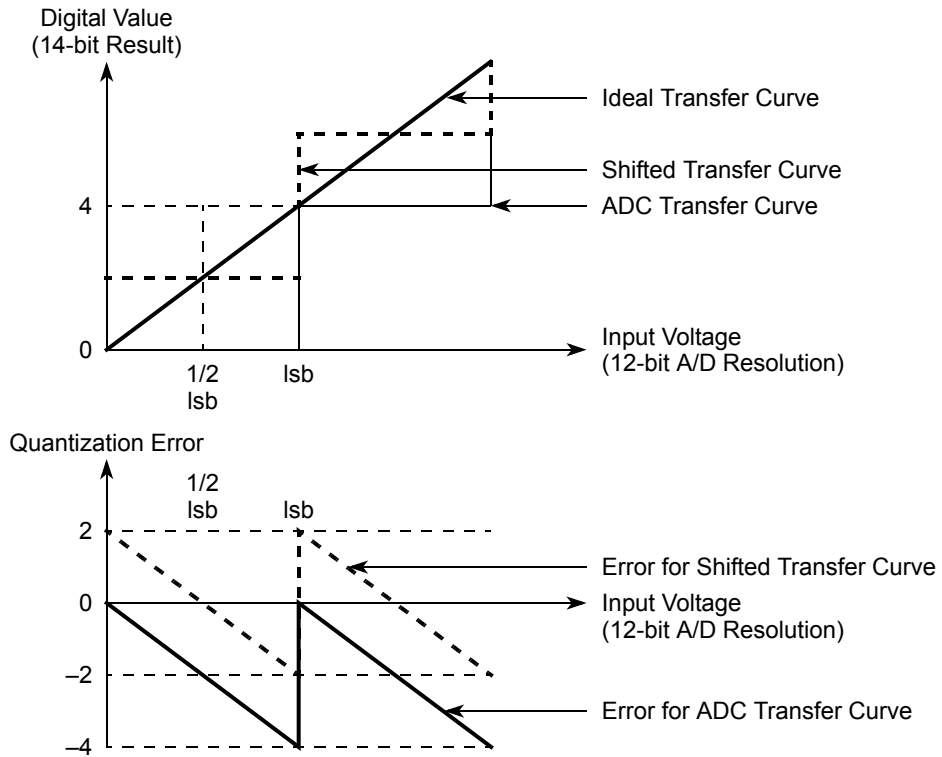


Figure 20-68. Quantization Error Reduction During Calibration

20.5.7 eQADC versus QADC

This section describes how the eQADC upgrades the QADC functionality. The section also provides a comparison between the eQADC and QADC in terms of their functionality. This section targets users familiar with terminology in QADC. [Figure 20-69](#) is an overview of a QADC. [Figure 20-70](#) is an overview of the eQADC system.

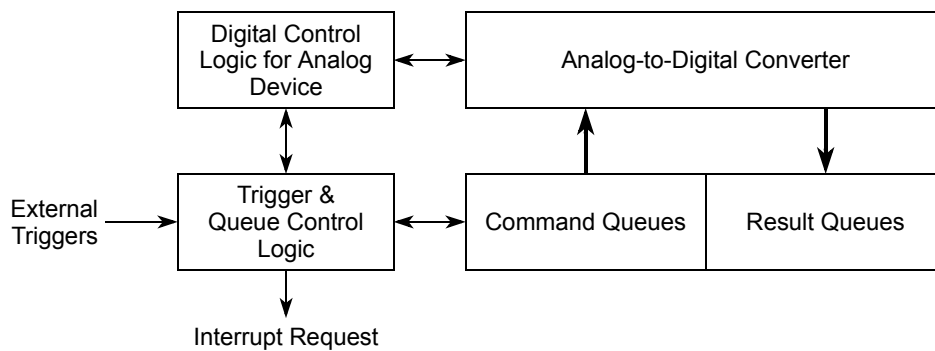


Figure 20-69. QADC Overview

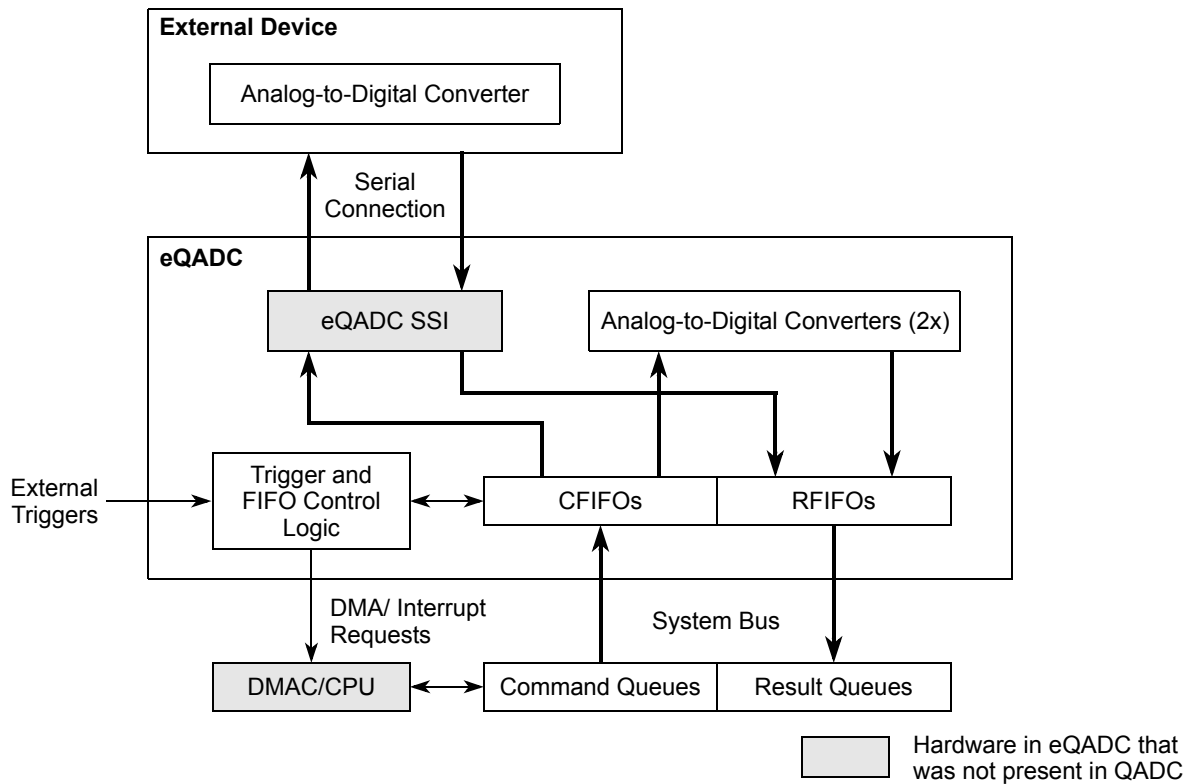


Figure 20-70. eQADC System Overview

The eQADC system consists of four parts: queues in system memory, the eQADC, on-chip ADCs, and an external device. As compared with the QADC, the eQADC system requires two pieces of extra hardware.

1. An eDMA or an MCU is required to move data between the eQADC’s FIFOs and queues in the system memory.
2. A serial interface [eQADC synchronous serial interface (SSI)] is implemented to transmit and receive data between the eQADC and the external device.

Because there are only FIFOs inside the eQADC, much of the terminology or use of the register names, register contents, and signals of the eQADC involve FIFO instead of queue. These register names, register contents, and signals are functionally equivalent to the queue counterparts in the QADC. [Table 20-59](#) lists how the eQADC register, register contents, and signals are related to QADC.

Table 20-59. Terminology Comparison between QADC and eQADC

QADC Terminology	eQADC Terminology	Function
CCW	Command Message	In the QADC, the hardware only executes conversion command words. In the eQADC, not all commands are conversion commands; some are configuration commands.
Queue Trigger	CFIFO Trigger	In the QADC, a trigger event is required to start the execution of a queue. In the eQADC, a trigger event is required to start command transfers from a CFIFO. When a CFIFO is triggered and transferring, commands are continuously moved from command queues to CFIFOs. Thus, the trigger event initiates the “execution of a queue” indirectly.
Command Word Pointer Queue n (CWPQ n)	Counter Value of Commands Transferred from Command FIFOn (TC_CF n)	In the QADC, CWPQ n allows the last executed command on queue n to be determined. In the eQADC, the TC_CF n value allows the last transferred command on command queue n to be determined.
Queue Pause Bit (P)	CFIFO Pause Bit	In the QADC, detecting a pause bit in the CCW will pause the queue execution. In the eQADC, detecting a pause bit in the command will pause command transfers from a CFIFO.
Queue Operation Mode (MQ n)	CFIFO Operation Mode (MODE n)	The eQADC supports all queue operation modes in the QADC except operation modes related to a periodic timer. A timer elsewhere in the system can provide the same functionality if it is connected to ETRIG n .
Queue Status (QS)	CFIFO Status (CFS n)	In the QADC, the queue status is read to check whether a queue is idle, active, paused, suspended, or trigger pending. In the eQADC, the CFIFO status is read to check whether a queue is IDLE, WAITING FOR TRIGGER (idle or paused in QADC), or triggered (suspended or trigger pending in QADC).

The eQADC and QADC also have similar procedures for the configuration or execution of applications. [Table 20-60](#) shows the steps required for the QADC versus the steps required for the eQADC system.

Table 20-60. Usage Comparison between QADC and eQADC System

Procedure	QADC	eQADC System
Analog Control Configuration	Configure analog device by writing to the QADCs.	Program configuration commands into command queues.
Prepare Scan Sequence	Program scan commands into command queues.	Program scan commands into command queues.
Queue Control Configuration	Write to the QADC control registers.	Write to the eQADC control registers.
Data Transferred between Queues and Buffers	Not Required.	Program the eDMA or the CPU to handle the data transfer.

Table 20-60. Usage Comparison between QADC and eQADC System (continued)

Procedure	QADC	eQADC System
Serial Interface Configuration	Not Required.	Write to the eQADC SSI registers.
Queue Execution	Require software or external trigger events to start queue execution.	Require software or external trigger events to start command transfers from a CFIFO.

20.6 Revision History

Table 61. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 21

Deserial Serial Peripheral Interface (DSPI)

21.1 Introduction

This chapter describes the deserial serial peripheral interface (DSPI), which provides a synchronous serial bus for communication between the MCU and an external peripheral device.

Microcontroller chips in the MPC55xx family implement different DSPI modules. Some implement DSPI A, B, C, and D, and others implement only B, C, and D, for example. The “x” appendage in signal names signifies the module to which the signal applies. Thus PCS_x[0] specifies that the PCS signal applies to module A, B, etc.

21.1.1 Block Diagram

A block diagram of the DSPI is shown in [Figure 21-1](#).

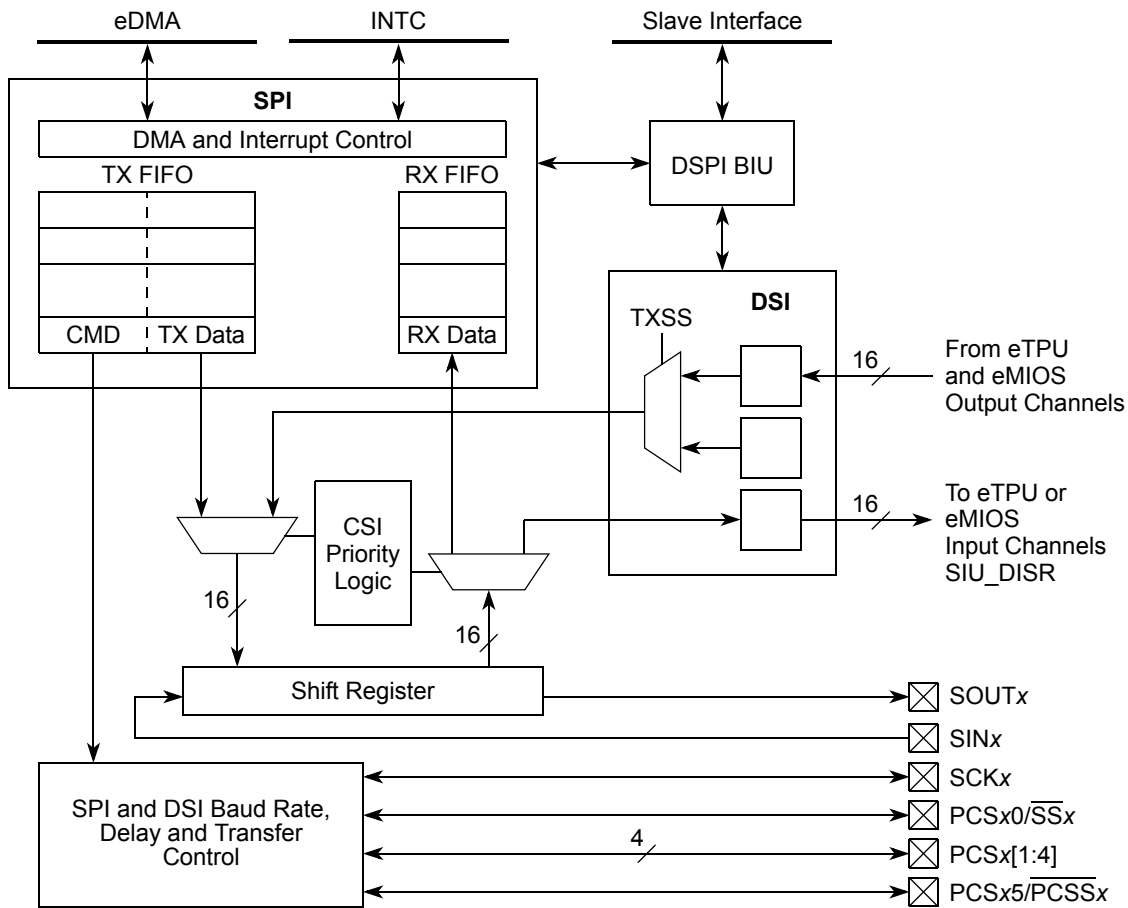


Figure 21-1. DSPI Block Diagram

21.1.2 Overview

The DSPI supports pin count reduction through serialization and deserialization of eTPU channels, eMIOS channels, and memory-mapped registers. Incoming serial data may be used to trigger external interrupt requests through DSPI deserialized output connections to the SIU. The channels and register content are transmitted using an SPI protocol. There are three identical DSPI modules (DSPI_B, DSPI_C, and DSPI_D) on the device. The DSPI has three configurations:

- Serial peripheral interface (SPI) configuration where the DSPI operates as an SPI with support for queues.

- Deserial serial interface (DSI) configuration where the DSPI serializes eTPU and eMIOS output channels and deserializes the received data by placing the data on the eTPU and eMIOS input channels and as inputs to the external interrupt request submodule of the SIU.
- Combined serial interface (CSI) configuration where the DSPI operates in both SPI and DSI configurations interleaving DSI frames with SPI frames, giving priority to SPI frames.

For queued operations the SPI queues reside in internal SRAM which is external to the DSPI. Data transfers between the queues and the DSPI FIFOs are accomplished through the use of the eDMA controller or through host software. Figure 21-2 shows a DSPI with external queues in internal SRAM.

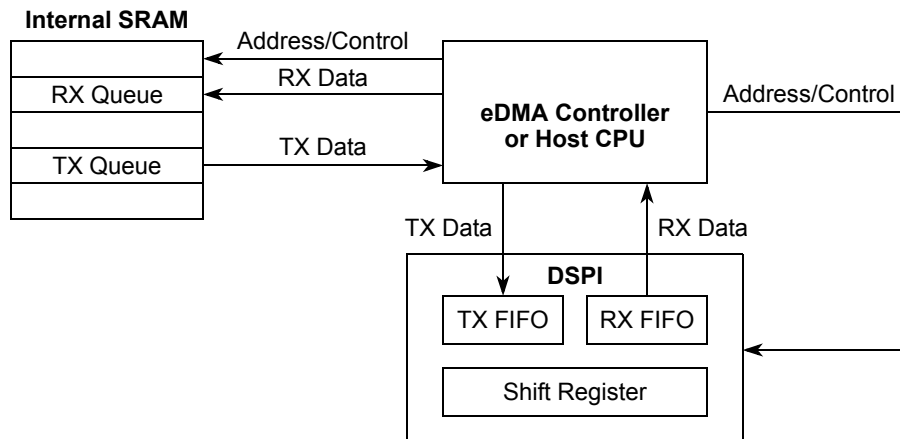


Figure 21-2. DSPI with Queues and eDMA

21.1.3 Features

The DSPI supports these SPI features:

- Full-duplex, three-wire synchronous transfers
- Master and slave mode
- Buffered transmit and receive operation using the TX and RX FIFOs, with depths of four entries
- Visibility into TX and RX FIFOs for ease of debugging
- FIFO bypass mode for low-latency updates to SPI queues
- Programmable transfer attributes on a per-frame basis
 - Eight clock and transfer attribute registers
 - Serial clock with programmable polarity and phase
 - Programmable delays
 - PCS to SCK delay
 - SCK to PCS delay
 - Delay between frames
 - Programmable serial frame size of 4 to 16 bits, expandable with software control
 - Continuously held chip select capability
- Six peripheral chip selects, expandable to 64 with external demultiplexer

- Deglitching support for up to 32 peripheral chip selects with external demultiplexer
- Two DMA conditions for SPI queues residing in RAM or Flash
 - TX FIFO is not full (TFFF)
 - RX FIFO is not empty (RFDF)
- Six interrupt conditions:
 - End of queue reached (EOQF)
 - TX FIFO is not full (TFFF)
 - Transfer of current frame complete (TCF)
 - RX FIFO is not empty (RFDF)
 - FIFO overrun (attempt to transmit with an empty TX FIFO or serial frame received while RX FIFO is full) (RFOF)
 - FIFO under flow (slave only and SPI mode, the slave is asked to transfer data when the TX FIFO is empty) (TFUF)
- Modified SPI transfer formats for communication with slower peripheral devices
- Supports all functional modes from QSPI subblock of QSMCM (MPC500 family)
- Continuous serial communications clock (SCK)

When configured for DSI or CSI operation, the DSPI supports pin reduction through serialization and deserialization.

- Serialized data sources
 - eTPU_A and eMIOS output channels
 - Memory-mapped register in the DSPI
- Deserialized data destinations
 - eTPU_A and eMIOS input channels
 - SIU external interrupt request inputs
 - Memory-mapped register in the DSPI
- Transfer initiation conditions
 - Continuous
 - Edge sensitive hardware trigger
 - Change in data
- Support for parallel and serial chaining of DSPI modules
- Pin serialization/deserialization with interleaved SPI frames for control and diagnostics

21.1.4 Modes of Operation

The DSPI has four modes of operation. These modes can be divided into two categories; module-specific modes such as master, slave, and module disable modes, and a second category that is an MCU-specific mode: debug mode.

The module-specific modes are entered by host software writing to a register. The MCU-specific mode is controlled by signals external to the DSPI. The MCU-specific mode is a mode that the entire device may enter, in parallel to the DSPI being in one of its module-specific modes.

21.1.4.1 Master Mode

Master mode allows the DSPI to initiate and control serial communication. In this mode the SCK, PCS n and SOUT signals are controlled by the DSPI and configured as outputs. For more information, see [Section 21.4.1.1, “Master Mode.”](#)

21.1.4.2 Slave Mode

Slave mode allows the DSPI to communicate with SPI/DSI bus masters. In this mode the DSPI responds to externally controlled serial transfers. The DSPI cannot initiate serial transfers in slave mode. In slave mode, the SCK signal and the PCS $x0/\overline{SS}$ signal are configured as inputs and provided by a bus master. PCS $x0/\overline{SS}$ must be configured as input and pulled high. If the internal pull up is being used then the appropriate bits in the relevant SIU_PCR must be set (SIU_PCR [WPE=1], [WPS=1]). For more information, see [Section 21.4.1.2, “Slave Mode.”](#)

21.1.4.3 Module Disable Mode

The module disable mode is used for MCU power management. The clock to the non-memory mapped logic in the DSPI is stopped while in module disable mode. The DSPI enters the module disable mode when the MDIS bit in DSPI x _MCR is set. For more information, see [Section 21.4.1.3, “Module Disable Mode.”](#)

21.1.4.4 Debug Mode

Debug mode is used for system development and debugging. If the device enters debug mode while the FRZ bit in the DSPI x _MCR is set, the DSPI halts operation on the next frame boundary. If the device enters debug mode while the FRZ bit is negated, the DSPI behavior is unaffected and remains dictated by the module-specific mode and configuration of the DSPI. For more information, see [Section 21.4.1.4, “Debug Mode.”](#)

21.2 External Signal Description

21.2.1 Signal Overview

[Table 21-1](#) lists off-chip DSPI signals.

Table 21-1. Signal Properties

Name	I/O Type	Function	
		Master Mode	Slave Mode
PCSx0/ \overline{SS}	Output / Input	Peripheral chip select 0	Slave select
PCSx[1:3]	Output	Peripheral chip select 1–3	Unused ¹
PCSx4/ \overline{MTRIG}	Output	Peripheral chip select 4	Master Trigger
PCSx5/ \overline{PCSS}	Output	Peripheral chip select 5 / Peripheral chip select strobe	Unused ¹
SINx	Input	Serial data in	Serial data in
SOUTx	Output	Serial data out	Serial data out
SCKx	Output / Input	Serial clock (output)	Serial clock (input)

¹ In the SIU the user can select alternate pin functions for the device.

21.2.2 Signal Names and Descriptions

21.2.2.1 Peripheral Chip Select / Slave Select (PCSx[0] / \overline{SS})

In master mode, the PCSx[0] signal is a peripheral chip select output that selects the slave device to which the current transmission is intended.

In slave mode, the \overline{SS} signal is a slave select input signal that allows an SPI master to select the DSPI as the target for transmission. PCSx[0]/ \overline{SS} must be configured as input and pulled high. If the internal pull up is being used then the appropriate bits in the relevant SIU_PCR must be set (SIU_PCR [WPE=1], [WPS=1]).

The IBE and OBE bits in the corresponding SIU_PCR need to be set appropriately for all PCSx0 pins when the DSPI chip select/slave select primary function is selected for that pin. When the pin is to be used in DSPI master mode as a chip select output, then the OBE bit should be set. When the pin is to be used in DSPI slave mode as a slave select input, then the IBE bit should be set. See [Section 6.3.1.12, “Pad Configuration Registers \(SIU_PCR\),”](#) for more information.

21.2.2.2 Peripheral Chip Selects 1–3 (PCSx[1:3])

PCSx[1:3] are peripheral chip select output signals in master mode. In slave mode these signals are not used.

21.2.2.3 Peripheral Chip Select 4 / Master Trigger (PCSx[4] / \overline{MTRIG})

PCSx4 is a peripheral chip select output signal in master mode. In slave mode this signal is a master trigger.

21.2.2.4 Peripheral Chip Select 5 / Peripheral Chip Select Strobe (PCSx[5] / $\overline{\text{PCSS}}$)

PCSx[5] is a peripheral chip select output signal. When the DSPI is in master mode and PCSSE bit in the DSPIx_MCR is negated, this signal is used to select which slave device the current transfer is intended for.

$\overline{\text{PCSS}}$ provides a strobe signal that can be used with an external logic device for deglitching of the PCS signals. When the DSPI is in master mode and the PCSSE bit in the DSPIx_MCR is set, the $\overline{\text{PCSS}}$ provides the appropriate timing for the decoding of the PCSx[0:4] signals which prevents glitches from occurring.

PCSx[5] / $\overline{\text{PCSS}}$ is not used in slave mode.

21.2.2.5 Serial Input (SINx)

SINx is a serial data input signal.

21.2.2.6 Serial Output (SOUTx)

SOUTx is a serial data output signal.

21.2.2.7 Serial Clock (SCKx)

SCKx is a serial communication clock signal. In master mode, the DSPI generates the SCK. In slave mode, SCKx is an input from an external bus master.

21.3 Memory Map and Register Definition

21.3.1 Memory Map

Table 21-2 shows the DSPI memory map.

Table 21-2. DSPI Detailed Memory Map

Address	Register Name	Register Description	Size (bits)
Base: 0xFFFF9_4000 (DSPI B) 0xFFFF9_8000 (DSPI C) 0xFFFF9_C000 (DSPI D)	DSPIx_MCR	DSPI module configuration register	32
Base + 0x4	—	Reserved	—
Base + 0x8	DSPIx_TCR	DSPI transfer count register	32
Base + 0xC	DSPIx_CTAR0	DSPI clock and transfer attributes register 0	32
Base + 0x10	DSPIx_CTAR1	DSPI clock and transfer attributes register 1	32
Base + 0x14	DSPIx_CTAR2	DSPI clock and transfer attributes register 2	32
Base + 0x18	DSPIx_CTAR3	DSPI clock and transfer attributes register 3	32
Base + 0x1C	DSPIx_CTAR4	DSPI clock and transfer attributes register 4	32
Base + 0x20	DSPIx_CTAR5	DSPI clock and transfer attributes register 5	32

Table 21-2. DSPI Detailed Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x24	DSPIx_CTAR6	DSPI clock and transfer attributes register 6	32
Base + 0x28	DSPIx_CTAR7	DSPI clock and transfer attributes register 7	32
Base + 0x2C	DSPIx_SR	DSPI status register	32
Base + 0x30	DSPIx_RSER	DSPI DMA/interrupt request select and enable register	32
Base + 0x34	DSPIx_PUSHR	DSPI push TX FIFO register	32
Base + 0x38	DSPIx_POPR	DSPI pop RX FIFO register	32
Base + 0x3C	DSPIx_TXFR0	DSPI transmit FIFO register 0	32
Base + 0x40	DSPIx_TXFR1	DSPI transmit FIFO register 1	32
Base + 0x44	DSPIx_TXFR2	DSPI transmit FIFO register 2	32
Base + 0x48	DSPIx_TXFR3	DSPI transmit FIFO register 3	32
Base + 0x4C– Base + 0x78	—	Reserved	—
Base + 0x7C	DSPIx_RXFR0	DSPI receive FIFO register 0	32
Base + 0x80	DSPIx_RXFR1	DSPI receive FIFO register 1	32
Base + 0x84	DSPIx_RXFR2	DSPI receive FIFO register 2	32
Base + 0x88	DSPIx_RXFR3	DSPI receive FIFO register 3	32
Base + 0x8C– Base + 0xB8	—	Reserved	—
Base + 0xBC	DSPIx_DSICR	DSPI DSI configuration register	32
Base + 0xC0	DSPIx_SDR	DSPI DSI serialization data register	32
Base + 0xC4	DSPIx_AS DR	DSPI DSI alternate serialization data register	32
Base + 0xC8	DSPIx_COMPR	DSPI DSI transmit comparison register	32
Base + 0xCC	DSPIx_DDR	DSPI DSI deserialization data register	32

21.3.2 Register Descriptions

21.3.2.1 DSPI Module Configuration Register (DSPIx_MCR)

The DSPIx_MCR contains bits which configure various attributes associated with DSPI operation. The HALT and MDIS bits can be changed at any time but will only take effect on the next frame boundary. Only the HALT and MDIS bits in the DSPIx_MCR may be changed while the DSPI is running.

Address: Base + 0x0

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	MSTR	CONT_SCKE	DCONF		FRZ	MTFE	PCSSE	ROOE	0	0	PCSI S5	PCSI S4	PCSI S3	PCSI S2	PCSI S1	PCSI S0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	MDIS	DIS_TXF	DIS_RXF	CLR_TXF	CLR_RXF	SMPL_PT		0	0	0	0	0	0	0	HALT
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Figure 21-3. DSPI Module Configuration Register (DSPIx_MCR)

Table 21-3. DSPIx_MCR Field Descriptions

Field	Description										
0 MSTR	Master/slave mode select. Configures the DSPI for either master mode or slave mode. 0 DSPI is in slave mode 1 DSPI is in master mode										
1 CONT_SCKE	Continuous SCK enable. Enables the serial communication clock (SCK) to run continuously. See Section 21.4.8, “Continuous Serial Communications Clock,” for details. 0 Continuous SCK disabled 1 Continuous SCK enabled										
2–3 DCONF [0:1]	DSPI configuration. Selects between the three different configurations of the DSPI. The table below lists the DCONF values for the various configurations. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>DCONF</th> <th>Configuration</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>SPI</td> </tr> <tr> <td>01</td> <td>DSI</td> </tr> <tr> <td>10</td> <td>CSI</td> </tr> <tr> <td>11</td> <td>Reserved</td> </tr> </tbody> </table>	DCONF	Configuration	00	SPI	01	DSI	10	CSI	11	Reserved
DCONF	Configuration										
00	SPI										
01	DSI										
10	CSI										
11	Reserved										
4 FRZ	Freeze. Enables the DSPI transfers to be stopped on the next frame boundary when the device enters debug mode. 0 Do not halt serial transfers 1 Halt serial transfers										
5 MTFE	Modified timing format enable. Enables a modified transfer format to be used. See Section 21.4.7.4, “Modified SPI/DSI Transfer Format (MTFE = 1, CPHA = 1),” for more information. 0 Modified SPI transfer format disabled 1 Modified SPI transfer format enabled										
6 PCSSE	Peripheral chip select strobe enable. Enables the PCSx5/ $\overline{\text{PCSS}}$ to operate as an PCS strobe output signal. See Section 21.4.6.5, “Peripheral Chip Select Strobe Enable (PCSS),” for more information. 0 PCSx5/ $\overline{\text{PCSS}}$ is used as the Peripheral chip select 5 signal 1 PCSx5/ $\overline{\text{PCSS}}$ is used as an active-low PCS strobe signal										

Table 21-3. DSPIx_MCR Field Descriptions (continued)

Field	Description
7 ROOE	Receive FIFO overflow overwrite enable. Enables an RX FIFO overflow condition to either ignore the incoming serial data or to overwrite existing data. If the RX FIFO is full and new data is received, the data from the transfer that generated the overflow is either ignored or shifted in to the shift register. If the ROOE bit is asserted, the incoming data is shifted in to the shift register. If the ROOE bit is negated, the incoming data is ignored. See Section 21.4.9.6, “Receive FIFO Overflow Interrupt Request (RFOF),” for more information. 0 Incoming data is ignored 1 Incoming data is shifted in to the shift register
8–9	Reserved, but implemented. These bits are writable, but have no effect.
10–15 PCSI $\overline{S}n$	Peripheral chip select inactive state. Determines the inactive state of the PCS xn signal. PCS $x0/\overline{SS}$ must be configured as inactive high for slave mode operation. 0 The inactive state of PCS xn is low 1 The inactive state of PCS xn is high
16	Reserved.
17 MDIS	Module disable. Allows the clock to be stopped to the non-memory mapped logic in the DSPI effectively putting the DSPI in a software controlled power-saving state. See Section 21.4.10, “Power Saving Features for more information.” The reset value of the MDIS bit is parameterized, with a default reset value of 0. 0 Enable DSPI clocks 1 Allow external logic to disable DSPI clocks
18 DIS_TX	Disable transmit FIFO. Provides a mechanism to disable the TX FIFO. When the TX FIFO is disabled, the transmit part of the DSPI operates as a simplified double-buffered SPI. See Section 21.4.3.3, “FIFO Disable Operation for details.” 0 TX FIFO is enabled 1 TX FIFO is disabled
19 DIS_RXF	Disable receive FIFO. Provides a mechanism to disable the RX FIFO. When the RX FIFO is disabled, the receive part of the DSPI operates as a simplified double-buffered SPI. See Section 21.4.3.3, “FIFO Disable Operation for details.” 0 RX FIFO is enabled 1 RX FIFO is disabled
20 CLR_TX	Clear TX FIFO. Flushes the TX FIFO. Writing a 1 to CLR_TXF clears the TX FIFO counter. The CLR_TXF bit is always read as zero. 0 Do not clear the TX FIFO counter 1 Clear the TX FIFO counter
21 CLR_RXF	Clear RX FIFO. Flushes the RX FIFO. Writing a 1 to CLR_RXF clears the RX counter. The CLR_RXF bit is always read as zero. 0 Do not clear the RX FIFO counter 1 Clear the RX FIFO counter

Table 21-3. DSPIx_MCR Field Descriptions (continued)

Field	Description										
22–23 SMPL_PT [0:1]	<p>Sample point. Allows the host software to select when the DSPI master samples SIN in modified transfer format. Figure 21-34 shows where the master can sample the SIN pin. The table below lists the various delayed sample points.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>SMPL_PT</th> <th>Number of system clock cycles between odd-numbered edge of SCKx and sampling of SINx.</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>0</td> </tr> <tr> <td>01</td> <td>1</td> </tr> <tr> <td>10</td> <td>2</td> </tr> <tr> <td>11</td> <td>Reserved</td> </tr> </tbody> </table>	SMPL_PT	Number of system clock cycles between odd-numbered edge of SCKx and sampling of SINx.	00	0	01	1	10	2	11	Reserved
SMPL_PT	Number of system clock cycles between odd-numbered edge of SCKx and sampling of SINx.										
00	0										
01	1										
10	2										
11	Reserved										
24–30	Reserved.										
31 HALT	<p>Halt. Provides a mechanism for software to start and stop DSPI transfers. See Section 21.4.2, “Start and Stop of DSPI Transfers,” for details on the operation of this bit.</p> <p>0 Start transfers 1 Stop transfers</p>										

21.3.2.2 DSPI Transfer Count Register (DSPIx_TCR)

The DSPIx_TCR contains a counter that indicates the number of SPI transfers made. The transfer counter is intended to assist in queue management. The user must not write to the DSPIx_TCR while the DSPI is running.

Address: Base + 0x8

Access: Read/Write

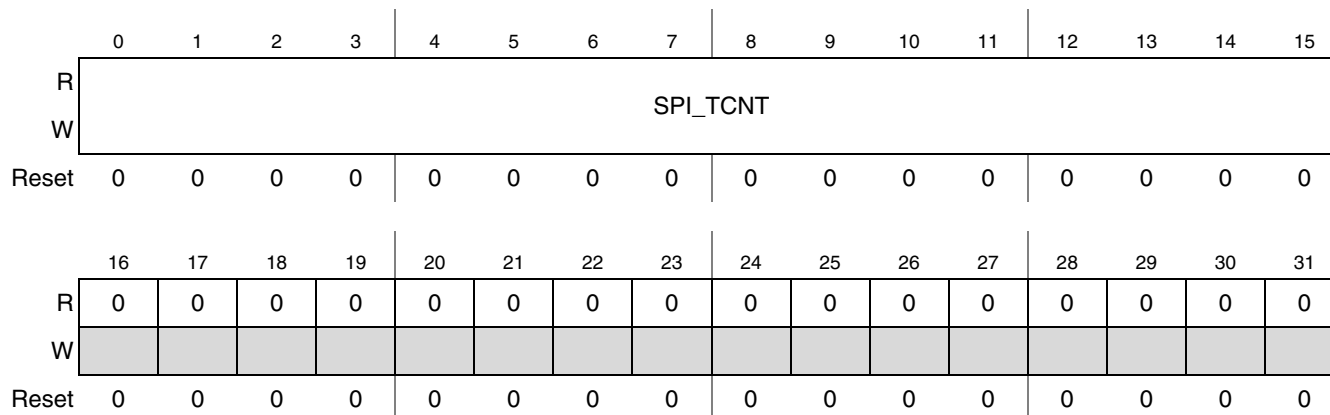


Figure 21-4. DSPI Transfer Count Register (DSPIx_TCR)

Table 21-4. DSPIx_TCR Field Descriptions

Field	Description
0–15 SPI_TCNT [0:15]	SPI transfer counter. Counts the number of SPI transfers the DSPI makes. The SPI_TCNT field is incremented every time the last bit of an SPI frame is transmitted. A value written to SPI_TCNT presets the counter to that value. SPI_TCNT is reset to zero at the beginning of the frame when the CTCNT field is set in the executing SPI command. The transfer counter ‘wraps around,’ incrementing the counter past 65535 resets the counter to zero.
16–31	Reserved.

21.3.2.3 DSPI Clock and Transfer Attributes Registers 0–7 (DSPIx_CTARn)

The DSPI modules each contain eight clock and transfer attribute registers (DSPIx_CTARn) which are used to define different transfer attribute configurations. Each DSPIx_CTAR controls:

- Frame size
- Baud rate and transfer delay values
- Clock phase
- Clock polarity
- MSB/LSB first

DSPIx_CTARs support compatibility with the QSPI module in the MPC5xx family of MCUs. See [Section 21.5.4, “MPC5xx QSPI Compatibility with the DSPI,”](#) for a discussion on DSPI/QSPI compatibility. At the initiation of an SPI or DSI transfer, control logic selects the DSPIx_CTAR that contains the transfer’s attributes. The user must not write to the DSPIx_CTARs while the DSPI is running.

In master mode, the DSPIx_CTARn registers define combinations of transfer attributes such as frame size, clock phase and polarity, data bit ordering, baud rate, and various delays. In slave mode, a subset of the bit fields in the DSPIx_CTAR0 and DSPIx_CTAR1 registers are used to set the slave transfer attributes. See the individual bit descriptions for details on which bits are used in slave modes.

When the DSPI is configured as an SPI master, the CTAS field in the command portion of the TX FIFO entry selects which of the DSPIx_CTAR registers is used on a per-frame basis. When the DSPI is configured as an SPI bus slave, the DSPIx_CTAR0 register is used.

When the DSPI is configured as a DSI master, the DSICTAS field in the DSPI DSI configuration register (DSPIx_DSICR) selects which of the DSPIx_CTAR register is used. For more information on the DSPIx_DSICR see [Section 21.3.2.10, “DSPI DSI Configuration Register \(DSPIx_DSICR\).”](#) When the DSPI is configured as a DSI bus slave, the DSPIx_CTAR1 register is used.

In CSI configuration, the transfer attributes are selected based on whether the current frame is SPI data or DSI data. SPI transfers in CSI configuration follow the protocol described for SPI configuration, and DSI transfers in CSI configuration follow the protocol described for DSI configuration. CSI configuration is only valid in conjunction with master mode. See [Section 21.4.5, “Combined Serial Interface \(CSI\) Configuration”](#) for more details.

Address:

Access: Read/Write

- Base + 0xC (DSPIx_CTAR0)
- Base + 0x10 (DSPIx_CTAR1)
- Base + 0x14 (DSPIx_CTAR2)
- Base + 0x18 (DSPIx_CTAR3)
- Base + 0x1C (DSPIx_CTAR4)
- Base + 0x20 (DSPIx_CTAR5)
- Base + 0x24 (DSPIx_CTAR6)
- Base + 0x28 (DSPIx_CTAR7)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15			
R																			
W																			
Reset																			
	0	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0			
	DBR				FMSZ				CPOL	CPHA	LSB FE	PCSSCK		PASC		PDT		PBR	

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R																
W																
Reset																
	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	CSSCK				ASC				DT				BR			

Figure 21-5. DSPI Clock and Transfer Attributes Registers 0–7 (DSPIx_CTARn)

Table 21-5. DSPIx_CTARn Field Description

Field	Description																																								
0 DBR	<p>Double baud rate. The DBR bit doubles the effective baud rate of the serial communications clock (SCK). This field is only used in master mode. It effectively halves the baud rate division ratio supporting faster frequencies and odd division ratios for the serial communications clock (SCK). When the DBR bit is set, the duty cycle of the serial communications clock (SCK) depends on the value in the baud rate prescaler and the clock phase bit as listed below. See the BR field below and Section 21.4.6.1, “Baud Rate Generator” for details on how to compute the baud rate. If the overall baud rate is divide by two or divide by three of the system clock then the continuous SCK enable or the modified timing format enable bits must not be set.</p> <p>0 The baud rate is computed normally with a 50/50 duty cycle 1 Baud rate is doubled with the duty cycle depending on the baud rate prescaler</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>DBR</th> <th>CPHA</th> <th>PBR</th> <th>SCK Duty Cycle</th> </tr> </thead> <tbody> <tr><td>0</td><td>any</td><td>any</td><td>50/50</td></tr> <tr><td>1</td><td>0</td><td>00</td><td>50/50</td></tr> <tr><td>1</td><td>0</td><td>01</td><td>33/66</td></tr> <tr><td>1</td><td>0</td><td>10</td><td>40/60</td></tr> <tr><td>1</td><td>0</td><td>11</td><td>43/57</td></tr> <tr><td>1</td><td>1</td><td>00</td><td>50/50</td></tr> <tr><td>1</td><td>1</td><td>01</td><td>66/33</td></tr> <tr><td>1</td><td>1</td><td>10</td><td>60/40</td></tr> <tr><td>1</td><td>1</td><td>11</td><td>57/43</td></tr> </tbody> </table>	DBR	CPHA	PBR	SCK Duty Cycle	0	any	any	50/50	1	0	00	50/50	1	0	01	33/66	1	0	10	40/60	1	0	11	43/57	1	1	00	50/50	1	1	01	66/33	1	1	10	60/40	1	1	11	57/43
DBR	CPHA	PBR	SCK Duty Cycle																																						
0	any	any	50/50																																						
1	0	00	50/50																																						
1	0	01	33/66																																						
1	0	10	40/60																																						
1	0	11	43/57																																						
1	1	00	50/50																																						
1	1	01	66/33																																						
1	1	10	60/40																																						
1	1	11	57/43																																						
1–4 FMSZ [0:3]	<p>FMSZ. Selects the number of bits transferred per frame. The FMSZ field is used in master mode and slave mode. The table below lists the frame sizes.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>FMSZ</th> <th>Framesize</th> <th>FMSZ</th> <th>Framesize</th> </tr> </thead> <tbody> <tr><td>0000</td><td>Reserved</td><td>1000</td><td>9</td></tr> <tr><td>0001</td><td>Reserved</td><td>1001</td><td>10</td></tr> <tr><td>0010</td><td>Reserved</td><td>1010</td><td>11</td></tr> <tr><td>0011</td><td>4</td><td>1011</td><td>12</td></tr> <tr><td>0100</td><td>5</td><td>1100</td><td>13</td></tr> <tr><td>0101</td><td>6</td><td>1101</td><td>14</td></tr> <tr><td>0110</td><td>7</td><td>1110</td><td>15</td></tr> <tr><td>0111</td><td>8</td><td>1111</td><td>16</td></tr> </tbody> </table>	FMSZ	Framesize	FMSZ	Framesize	0000	Reserved	1000	9	0001	Reserved	1001	10	0010	Reserved	1010	11	0011	4	1011	12	0100	5	1100	13	0101	6	1101	14	0110	7	1110	15	0111	8	1111	16				
FMSZ	Framesize	FMSZ	Framesize																																						
0000	Reserved	1000	9																																						
0001	Reserved	1001	10																																						
0010	Reserved	1010	11																																						
0011	4	1011	12																																						
0100	5	1100	13																																						
0101	6	1101	14																																						
0110	7	1110	15																																						
0111	8	1111	16																																						

Table 21-5. DSPI_x_CTAR_n Field Description (continued)

Field	Description										
5 CPOL	<p>Clock polarity. Selects the inactive state of the serial communications clock (SCK_x). This bit is used in both master and slave mode. For successful communication between serial devices, the devices must have identical clock polarities. When the continuous selection format is selected (CONT = 1 or DCONT = 1), switching between clock polarities without stopping the DSPI can cause errors in the transfer due to the peripheral device interpreting the switch of clock polarity as a valid clock edge. For more information on continuous selection format, refer to Section 21.4.7.5, “Continuous Selection Format.”</p> <p>0 The inactive state value of SCK_x is low 1 The inactive state value of SCK_x is high</p>										
6 CPHA	<p>Clock phase. Selects which edge of SCK_x causes data to change and which edge causes data to be captured. This bit is used in both master and slave mode. For successful communication between serial devices, the devices must have identical clock phase settings.</p> <p>0 Data is captured on the leading edge of SCK_x and changed on the following edge 1 Data is changed on the leading edge of SCK_x and captured on the following edge</p>										
7 LSBFE	<p>LSB first enable. Selects if the LSB or MSB of the frame is transferred first. This bit is only used in master mode.</p> <p>0 Data is transferred MSB first 1 Data is transferred LSB first</p>										
8–9 PCSSCK [0:1]	<p>PCS_x to SCK_x delay prescaler. Selects the prescaler value for the delay between assertion of PCS_x and the first edge of the SCK_x. This field is only used in master mode. The table below lists the prescaler values. The description for bitfield CSSCK in Table 21-5 details how to compute the PCS to SCK delay.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>PCSSCK</th> <th>PCS_x to SCK_x Delay Prescaler Value</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>1</td> </tr> <tr> <td>01</td> <td>3</td> </tr> <tr> <td>10</td> <td>5</td> </tr> <tr> <td>11</td> <td>7</td> </tr> </tbody> </table>	PCSSCK	PCS _x to SCK _x Delay Prescaler Value	00	1	01	3	10	5	11	7
PCSSCK	PCS _x to SCK _x Delay Prescaler Value										
00	1										
01	3										
10	5										
11	7										
10–11 PASC [0:1]	<p>After SCK_x delay prescaler. Selects the prescaler value for the delay between the last edge of SCK_x and the negation of PCS_x. This field is only used in master mode. The table below lists the prescaler values. The description for bitfield ASC in Table 21-5 details how to compute the after SCK_x delay.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>PASC</th> <th>After SCK_x Delay Prescaler Value</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>1</td> </tr> <tr> <td>01</td> <td>3</td> </tr> <tr> <td>10</td> <td>5</td> </tr> <tr> <td>11</td> <td>7</td> </tr> </tbody> </table>	PASC	After SCK _x Delay Prescaler Value	00	1	01	3	10	5	11	7
PASC	After SCK _x Delay Prescaler Value										
00	1										
01	3										
10	5										
11	7										

Table 21-5. DSPIx_CTARn Field Description (continued)

Field	Description										
12–13 PDT [0:1]	<p>Delay after transfer prescaler. The PDT field selects the prescaler value for the delay between the negation of the PCSx signal at the end of a frame and the assertion of PCSx at the beginning of the next frame. The PDT field is only used in master mode. The table below lists the prescaler values. The description for bitfield DT in Table 21-5 details how to compute the delay after transfer.</p> <table border="1" data-bbox="646 426 1084 703"> <thead> <tr> <th>PDT</th> <th>Delay after Transfer Prescaler Value</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>1</td> </tr> <tr> <td>01</td> <td>3</td> </tr> <tr> <td>10</td> <td>5</td> </tr> <tr> <td>11</td> <td>7</td> </tr> </tbody> </table>	PDT	Delay after Transfer Prescaler Value	00	1	01	3	10	5	11	7
PDT	Delay after Transfer Prescaler Value										
00	1										
01	3										
10	5										
11	7										
14–15 PBR [0:1]	<p>Baud rate prescaler. Selects the prescaler value for the baud rate. This field is only used in master mode. The baud rate is the frequency of the serial communications clock (SCKx). The system clock is divided by the prescaler value before the baud rate selection takes place. The baud rate prescaler values are listed in the table below. The description for Section 21.4.6.1, “Baud Rate Generator” details how to compute the baud rate.</p> <table border="1" data-bbox="686 877 1052 1155"> <thead> <tr> <th>PBR</th> <th>Baud Rate Prescaler Value</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>2</td> </tr> <tr> <td>01</td> <td>3</td> </tr> <tr> <td>10</td> <td>5</td> </tr> <tr> <td>11</td> <td>7</td> </tr> </tbody> </table>	PBR	Baud Rate Prescaler Value	00	2	01	3	10	5	11	7
PBR	Baud Rate Prescaler Value										
00	2										
01	3										
10	5										
11	7										

Table 21-5. DSPIx_CTARn Field Description (continued)

Field	Description																																				
16–19 CSSCK [0:3]	<p>PCSx to SCKx delay scaler. Selects the scaler value for the PCSx to SCKx delay. This field is only used in master mode. The PCSx to SCKx delay is the delay between the assertion of PCSx and the first edge of the SCKx. The table below lists the scaler values.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">CSSCK</th> <th style="text-align: center;">PCS to SCK Delay Scaler Value</th> <th style="text-align: center;">CSSCK</th> <th style="text-align: center;">PCS to SCK Delay Scaler Value</th> </tr> </thead> <tbody> <tr><td style="text-align: center;">0000</td><td style="text-align: center;">2</td><td style="text-align: center;">1000</td><td style="text-align: center;">512</td></tr> <tr><td style="text-align: center;">0001</td><td style="text-align: center;">4</td><td style="text-align: center;">1001</td><td style="text-align: center;">1024</td></tr> <tr><td style="text-align: center;">0010</td><td style="text-align: center;">8</td><td style="text-align: center;">1010</td><td style="text-align: center;">2048</td></tr> <tr><td style="text-align: center;">0011</td><td style="text-align: center;">16</td><td style="text-align: center;">1011</td><td style="text-align: center;">4096</td></tr> <tr><td style="text-align: center;">0100</td><td style="text-align: center;">32</td><td style="text-align: center;">1100</td><td style="text-align: center;">8192</td></tr> <tr><td style="text-align: center;">0101</td><td style="text-align: center;">64</td><td style="text-align: center;">1101</td><td style="text-align: center;">16384</td></tr> <tr><td style="text-align: center;">0110</td><td style="text-align: center;">128</td><td style="text-align: center;">1110</td><td style="text-align: center;">32768</td></tr> <tr><td style="text-align: center;">0111</td><td style="text-align: center;">256</td><td style="text-align: center;">1111</td><td style="text-align: center;">65536</td></tr> </tbody> </table> <p>The PCSx to SCKx delay is a multiple of the system clock period and it is computed according to the following equation:</p> $t_{CSC} = \frac{1}{f_{SYS}} \times PCSSCK \text{ Prescaler value} \times CSSCK \text{ Scaler value}$ <p>Note: See Section 21.4.6.2, “PCS to SCK Delay (tCSC),” for more details.</p>	CSSCK	PCS to SCK Delay Scaler Value	CSSCK	PCS to SCK Delay Scaler Value	0000	2	1000	512	0001	4	1001	1024	0010	8	1010	2048	0011	16	1011	4096	0100	32	1100	8192	0101	64	1101	16384	0110	128	1110	32768	0111	256	1111	65536
CSSCK	PCS to SCK Delay Scaler Value	CSSCK	PCS to SCK Delay Scaler Value																																		
0000	2	1000	512																																		
0001	4	1001	1024																																		
0010	8	1010	2048																																		
0011	16	1011	4096																																		
0100	32	1100	8192																																		
0101	64	1101	16384																																		
0110	128	1110	32768																																		
0111	256	1111	65536																																		

Table 21-5. DSPIx_CTARn Field Description (continued)

Field	Description																																				
20-23 ASC[0:3]	<p>After SCKx delay scaler. Selects the scaler value for the After SCKx delay. This field is only used in master mode. The after SCKx delay is the delay between the last edge of SCKx and the negation of PCSx. The table below lists the scaler values.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">ASC</th> <th style="text-align: center;">After SCK Delay Scaler Value</th> <th style="text-align: center;">ASC</th> <th style="text-align: center;">After SCK Delay Scaler Value</th> </tr> </thead> <tbody> <tr><td style="text-align: center;">0000</td><td style="text-align: center;">2</td><td style="text-align: center;">1000</td><td style="text-align: center;">512</td></tr> <tr><td style="text-align: center;">0001</td><td style="text-align: center;">4</td><td style="text-align: center;">1001</td><td style="text-align: center;">1024</td></tr> <tr><td style="text-align: center;">0010</td><td style="text-align: center;">8</td><td style="text-align: center;">1010</td><td style="text-align: center;">2048</td></tr> <tr><td style="text-align: center;">0011</td><td style="text-align: center;">16</td><td style="text-align: center;">1011</td><td style="text-align: center;">4096</td></tr> <tr><td style="text-align: center;">0100</td><td style="text-align: center;">32</td><td style="text-align: center;">1100</td><td style="text-align: center;">8192</td></tr> <tr><td style="text-align: center;">0101</td><td style="text-align: center;">64</td><td style="text-align: center;">1101</td><td style="text-align: center;">16384</td></tr> <tr><td style="text-align: center;">0110</td><td style="text-align: center;">128</td><td style="text-align: center;">1110</td><td style="text-align: center;">32768</td></tr> <tr><td style="text-align: center;">0111</td><td style="text-align: center;">256</td><td style="text-align: center;">1111</td><td style="text-align: center;">65536</td></tr> </tbody> </table> <p>The after SCKx delay is a multiple of the system clock period, and it is computed according to the following equation:</p> $t_{ASC} = \frac{1}{f_{SYS}} \times \text{PASC Prescaler value} \times \text{ASC Scaler value}$ <p>Note: See Section 21.4.6.3, "After SCK Delay (tASC)," for more details.</p>	ASC	After SCK Delay Scaler Value	ASC	After SCK Delay Scaler Value	0000	2	1000	512	0001	4	1001	1024	0010	8	1010	2048	0011	16	1011	4096	0100	32	1100	8192	0101	64	1101	16384	0110	128	1110	32768	0111	256	1111	65536
ASC	After SCK Delay Scaler Value	ASC	After SCK Delay Scaler Value																																		
0000	2	1000	512																																		
0001	4	1001	1024																																		
0010	8	1010	2048																																		
0011	16	1011	4096																																		
0100	32	1100	8192																																		
0101	64	1101	16384																																		
0110	128	1110	32768																																		
0111	256	1111	65536																																		

Table 21-5. DSPIx_CTARn Field Description (continued)

Field	Description																																				
24–27 DT[0:3]	<p>Delay after transfer scaler. The DT field selects the delay after transfer scaler. This field is only used in master mode. The delay after transfer is the time between the negation of the PCSx signal at the end of a frame and the assertion of PCSx at the beginning of the next frame. The table below lists the scaler values.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th style="text-align: center;">DT</th> <th style="text-align: center;">Delay after Transfer Scaler Value</th> <th style="text-align: center;">DT</th> <th style="text-align: center;">Delay after Transfer Scaler Value</th> </tr> </thead> <tbody> <tr><td style="text-align: center;">0000</td><td style="text-align: center;">2</td><td style="text-align: center;">1000</td><td style="text-align: center;">512</td></tr> <tr><td style="text-align: center;">0001</td><td style="text-align: center;">4</td><td style="text-align: center;">1001</td><td style="text-align: center;">1024</td></tr> <tr><td style="text-align: center;">0010</td><td style="text-align: center;">8</td><td style="text-align: center;">1010</td><td style="text-align: center;">2048</td></tr> <tr><td style="text-align: center;">0011</td><td style="text-align: center;">16</td><td style="text-align: center;">1011</td><td style="text-align: center;">4096</td></tr> <tr><td style="text-align: center;">0100</td><td style="text-align: center;">32</td><td style="text-align: center;">1100</td><td style="text-align: center;">8192</td></tr> <tr><td style="text-align: center;">0101</td><td style="text-align: center;">64</td><td style="text-align: center;">1101</td><td style="text-align: center;">16384</td></tr> <tr><td style="text-align: center;">0110</td><td style="text-align: center;">128</td><td style="text-align: center;">1110</td><td style="text-align: center;">32768</td></tr> <tr><td style="text-align: center;">0111</td><td style="text-align: center;">256</td><td style="text-align: center;">1111</td><td style="text-align: center;">65536</td></tr> </tbody> </table> <p>The delay after transfer is a multiple of the system clock period and it is computed according to the following equation:</p> $t_{DT} = \frac{1}{f_{SYS}} \times \text{PDT Prescaler value} \times \text{DT Scaler value}$ <p>Note: See Section 21.4.6.4, “Delay after Transfer (tDT),” for more details</p>	DT	Delay after Transfer Scaler Value	DT	Delay after Transfer Scaler Value	0000	2	1000	512	0001	4	1001	1024	0010	8	1010	2048	0011	16	1011	4096	0100	32	1100	8192	0101	64	1101	16384	0110	128	1110	32768	0111	256	1111	65536
DT	Delay after Transfer Scaler Value	DT	Delay after Transfer Scaler Value																																		
0000	2	1000	512																																		
0001	4	1001	1024																																		
0010	8	1010	2048																																		
0011	16	1011	4096																																		
0100	32	1100	8192																																		
0101	64	1101	16384																																		
0110	128	1110	32768																																		
0111	256	1111	65536																																		

Table 21-5. DSPIx_CTARn Field Description (continued)

Field	Description																																				
28–31 BR[0:3]	<p>Baud rate scaler. Selects the scaler value for the baud rate. This field is only used in master mode. The pre-scaled system clock is divided by the baud rate scaler to generate the frequency of the SCK. The table below lists the baud rate scaler values.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>BR</th> <th>Baud Rate Scaler Value</th> <th>BR</th> <th>Baud Rate Scaler Value</th> </tr> </thead> <tbody> <tr><td>0000</td><td>2</td><td>1000</td><td>256</td></tr> <tr><td>0001</td><td>4</td><td>1001</td><td>512</td></tr> <tr><td>0010</td><td>6</td><td>1010</td><td>1024</td></tr> <tr><td>0011</td><td>8</td><td>1011</td><td>2048</td></tr> <tr><td>0100</td><td>16</td><td>1100</td><td>4096</td></tr> <tr><td>0101</td><td>32</td><td>1101</td><td>8192</td></tr> <tr><td>0110</td><td>64</td><td>1110</td><td>16384</td></tr> <tr><td>0111</td><td>128</td><td>1111</td><td>32768</td></tr> </tbody> </table> <p>The baud rate is computed according to the following equation:</p> $\text{SCK baud rate} = \frac{f_{\text{SYS}}}{\text{PBRPrescalerValue}} \times \frac{1 + \text{DBR}}{\text{BRScalerValue}}$ <p>Note: See Section 21.4.6.1, “Baud Rate Generator,” for more details.</p>	BR	Baud Rate Scaler Value	BR	Baud Rate Scaler Value	0000	2	1000	256	0001	4	1001	512	0010	6	1010	1024	0011	8	1011	2048	0100	16	1100	4096	0101	32	1101	8192	0110	64	1110	16384	0111	128	1111	32768
BR	Baud Rate Scaler Value	BR	Baud Rate Scaler Value																																		
0000	2	1000	256																																		
0001	4	1001	512																																		
0010	6	1010	1024																																		
0011	8	1011	2048																																		
0100	16	1100	4096																																		
0101	32	1101	8192																																		
0110	64	1110	16384																																		
0111	128	1111	32768																																		

21.3.2.4 DSPI Status Register (DSPIx_SR)

The DSPIx_SR contains status and flag bits. The bits reflect the status of the DSPI and indicate the occurrence of events that can generate interrupt or DMA requests. Software can clear flag bits in the DSPIx_SR by writing a 1 to it. Writing a 0 to a flag bit has no effect.

Address: Base + 0x2C

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	TCF	TXRXS	0	EOQF	TFUF	0	TFFF	0	0	0	0	0	RFOF	0	RFDF	0
W	w1c			w1c	w1c		w1c						w1c		w1c	
Reset	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	TXCTR				TXNXTPTR				RXCTR				POPNXTPTR			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-6. DSPI Status Register (DSPIx_SR)

Table 21-6. DSPIx_SR Field Descriptions

Field	Description
0 TCF	Transfer complete flag. Indicates that all bits in a frame have been shifted out. The TCF bit is set after the last incoming databit is sampled, but before the tASC delay starts. Refer to Section 21.4.7.1, “Classic SPI Transfer Format (CPHA = 0)” for details. The TCF bit is cleared by writing 1 to it. 0 Transfer not complete 1 Transfer complete
1 TXRXS	TX and RX status. Reflects the status of the DSPI. See Section 21.4.2, “Start and Stop of DSPI Transfers” for information on what causes this bit to be negated or asserted. 0 TX and RX operations are disabled (DSPI is in STOPPED state) 1 TX and RX operations are enabled (DSPI is in RUNNING state)
2	Reserved.
3 EOQF	End of queue flag. Indicates that transmission in progress is the last entry in a queue. The EOQF bit is set when the TX FIFO entry has the EOQ bit set in the command halfword and after the last incoming databit is sampled, but before the tASC delay starts. Refer to Section 21.4.7.1, “Classic SPI Transfer Format (CPHA = 0)” for details. The EOQF bit is cleared by writing 1 to it. When the EOQF bit is set, the TXRXS bit is automatically cleared. 0 EOQ is not set in the executing command 1 EOQ bit is set in the executing SPI command Note: EOQF does not function in slave mode.
4 TFUF	Transmit FIFO underflow flag. Indicates that an underflow condition in the TX FIFO has occurred. The transmit underflow condition is detected only for DSPI modules operating in slave mode and SPI configuration. The TFUF bit is set when the TX FIFO of a DSPI operating in SPI slave mode is empty, and a transfer is initiated by an external SPI master. The TFUF bit is cleared by writing 1 to it. 0 TX FIFO underflow has not occurred 1 TX FIFO underflow has occurred
5	Reserved.
6 TFFF	Transmit FIFO fill flag: indicates that the TX FIFO can be filled. Provides a method for the DSPI to request more entries to be added to the TX FIFO. The TFFF bit is set while the TX FIFO is not full. The TFFF bit can be cleared by writing 1 to it or by an acknowledgement from the eDMA controller when the TX FIFO is full. 0 TX FIFO is full 1 TX FIFO is not full
7–11	Reserved.
12 RFOF	Receive FIFO overflow flag. Indicates that an overflow condition in the RX FIFO has occurred. The bit is set when the RX FIFO and shift register are full and a transfer is initiated. The bit is cleared by writing 1 to it. 0 RX FIFO overflow has not occurred 1 RX FIFO overflow has occurred
13	Reserved.
14 RFDF	Receive FIFO drain flag: indicates that the RX FIFO can be drained. Provides a method for the DSPI to request that entries be removed from the RX FIFO. The bit is set while the RX FIFO is not empty. The RFDF bit can be cleared by writing 1 to it or by an acknowledgement from the eDMA controller when the RX FIFO is empty. 0 RX FIFO is empty 1 RX FIFO is not empty Note: In the interrupt service routine, RFDF must be cleared only after the DSPIx_POPR register is read.
15	Reserved.

Table 21-6. DSPIx_SR Field Descriptions (continued)

Field	Description
16–19 TXCTR [0:3]	TX FIFO counter. Indicates the number of valid entries in the TX FIFO. The TXCTR is incremented every time the DSPI_PUSHHR is written. The TXCTR is decremented every time an SPI command is executed and the SPI data is transferred to the shift register.
20–23 TXNXT PTR [0:3]	Transmit next pointer. Indicates which TX FIFO Entry will be transmitted during the next transfer. The TXNXTPTR field is updated every time SPI data is transferred from the TX FIFO to the shift register. See Section 21.4.3.4, “Transmit First In First Out (TX FIFO) Buffering Mechanism” for more details.
24–27 RXCTR [0:3]	RX FIFO counter. Indicates the number of entries in the RX FIFO. The RXCTR is decremented every time the DSPI_POPPR is read. The RXCTR is incremented after the last incoming databit is sampled, but before the tASC delay starts. Refer to Section 21.4.7.1, “Classic SPI Transfer Format (CPHA = 0)” for details.
28–31 POPNTX PTR [0:3]	Pop next pointer. Contains a pointer to the RX FIFO entry that will be returned when the DSPIx_POPPR is read. The POPNXTPTR is updated when the DSPIx_POPPR is read. See Section 21.4.3.5, “Receive First In First Out (RX FIFO) Buffering Mechanism” for more details.

21.3.2.5 DSPI DMA/Interrupt Request Select and Enable Register (DSPIx_RSER)

The DSPIx_RSER serves two purposes. It enables flag bits in the DSPIx_SR to generate DMA requests or interrupt requests. The DSPIx_RSER also selects the type of request to be generated. See the individual bit descriptions for information on the types of requests the bits support. The user must not write to the DSPIx_RSER while the DSPI is running.

Address: Base + 0x30

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	TCF_RE	0	0	EOQF_RE	TFUF_RE	0	TFFF_RE	TFFF_DIPS	0	0	0	0	RFOF_RE	0	RFDF_RE	RFDF_DIPS
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-7. DSPI DMA/Interrupt Request Select and Enable Register (DSPIx_RSER)

Table 21-7. DSPIx_RSER Field Descriptions

Field	Description
0 TCF_RE	Transmission complete request enable. Enables TCF flag in the DSPIx_SR to generate an interrupt request. 0 TCF interrupt requests are disabled 1 TCF interrupt requests are enabled
1–2	Reserved.

Table 21-7. DSPIx_RSER Field Descriptions (continued)

Field	Description
3 EOQF_ RE	DSPI finished request enable. Enables the EOQF flag in the DSPIx_SR to generate an interrupt request. 0 EOQF interrupt requests are disabled 1 EOQF interrupt requests are enabled
4 TFUF_ RE	Transmit FIFO underflow request enable. The TFUF_RE bit enables the TFUF flag in the DSPIx_SR to generate an interrupt request. 0 TFUF interrupt requests are disabled 1 TFUF interrupt requests are enabled
5	Reserved.
6 TFFF_ RE	Transmit FIFO fill request enable. Enables the TFFF flag in the DSPIx_SR to generate a request. The TFFF_DIRS bit selects between generating an interrupt request or a DMA requests. 0 TFFF interrupt requests or DMA requests are disabled 1 TFFF interrupt requests or DMA requests are enabled
7 TFFF_ DIRS	Transmit FIFO fill DMA or interrupt request select. Selects between generating a DMA request or an interrupt request. When the TFFF flag bit in the DSPIx_SR is set, and the TFFF_RE bit in the DSPIx_RSER is set, this bit selects between generating an interrupt request or a DMA request. 0 Interrupt request will be generated 1 DMA request will be generated
8–11	Reserved.
12 RFOF_ RE	Receive FIFO overflow request enable. Enables the RFOF flag in the DSPIx_SR to generate an interrupt requests. 0 RFOF interrupt requests are disabled 1 RFOF interrupt requests are enabled
13	Reserved.
14 RFDF_ RE	Receive FIFO drain request enable. Enables the RFDF flag in the DSPIx_SR to generate a request. The RFDF_DIRS bit selects between generating an interrupt request or a DMA request. 0 RFDF interrupt requests or DMA requests are disabled 1 RFDF interrupt requests or DMA requests are enabled
15 RFDF_ DIRS	Receive FIFO drain DMA or interrupt request select. Selects between generating a DMA request or an interrupt request. When the RFDF flag bit in the DSPIx_SR is set, and the RFDF_RE bit in the DSPIx_RSER is set, the RFDF_DIRS bit selects between generating an interrupt request or a DMA request. 0 Interrupt request will be generated 1 DMA request will be generated
16–31	Reserved.

21.3.2.6 DSPI PUSH TX FIFO Register (DSPIx_PUSHR)

The DSPIx_PUSHR provides a means to write to the TX FIFO. Data written to this register is transferred to the TX FIFO. See [Section 21.4.3.4, “Transmit First In First Out \(TX FIFO\) Buffering Mechanism,”](#) for more information. Write accesses of 8- or 16-bits to the DSPIx_PUSHR will transfer 32 bits to the TX FIFO.

NOTE

Only the TXDATA field is used for DSPI slaves.

Deserial Serial Peripheral Interface (DSPI)

Address: Base + 0x34

Access: Read/Write

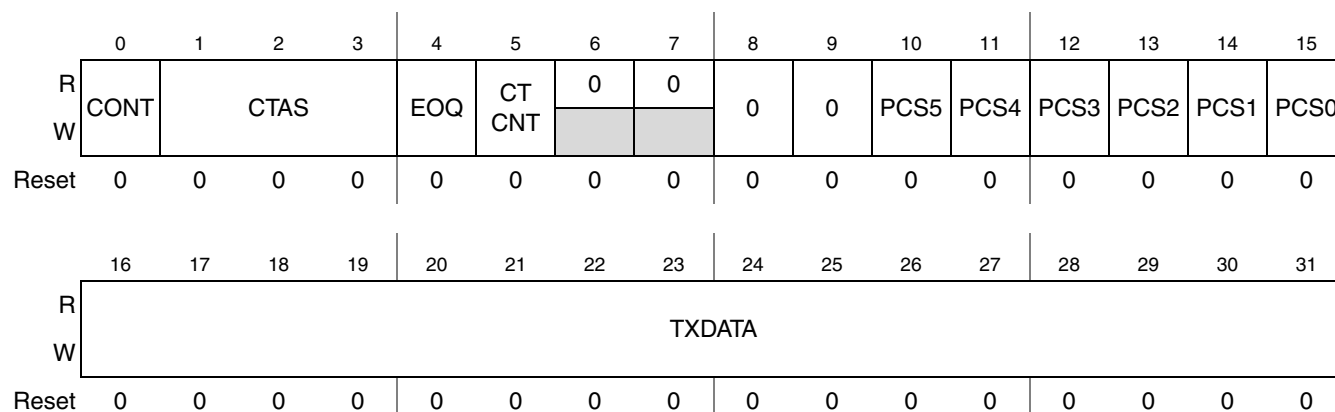


Figure 21-8. DSPI PUSH TX FIFO Register (DSPIx_PUSHR)

Table 21-8. DSPIx_PUSHR Field Descriptions

Field	Description																		
0 CONT	<p>Continuous peripheral chip select enable. Selects a continuous selection format. The bit is used in SPI master mode. The bit enables the selected PCS signals to remain asserted between transfers. See Section 21.4.7.5, “Continuous Selection Format,” for more information.</p> <p>0 Return peripheral chip select signals to their inactive state between transfers 1 Keep peripheral chip select signals asserted between transfers</p>																		
1–3 CTAS [0:2]	<p>Clock and transfer attributes select. Selects which of the DSPIx_CTARs is used to set the transfer attributes for the associated SPI frame. In SPI slave mode DSPIx_CTAR0 is used. The table below shows how the CTAS values map to the DSPIx_CTARs. There are eight DSPIx_CTARs in this device’s DSPI implementation.</p> <p>Note: The field is only used in SPI master mode.</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>CTAS</th> <th>Use Clock and Transfer Attributes from</th> </tr> </thead> <tbody> <tr><td>000</td><td>DSPIx_CTAR0</td></tr> <tr><td>001</td><td>DSPIx_CTAR1</td></tr> <tr><td>010</td><td>DSPIx_CTAR2</td></tr> <tr><td>011</td><td>DSPIx_CTAR3</td></tr> <tr><td>100</td><td>DSPIx_CTAR4</td></tr> <tr><td>101</td><td>DSPIx_CTAR5</td></tr> <tr><td>110</td><td>DSPIx_CTAR6</td></tr> <tr><td>111</td><td>DSPIx_CTAR7</td></tr> </tbody> </table>	CTAS	Use Clock and Transfer Attributes from	000	DSPIx_CTAR0	001	DSPIx_CTAR1	010	DSPIx_CTAR2	011	DSPIx_CTAR3	100	DSPIx_CTAR4	101	DSPIx_CTAR5	110	DSPIx_CTAR6	111	DSPIx_CTAR7
CTAS	Use Clock and Transfer Attributes from																		
000	DSPIx_CTAR0																		
001	DSPIx_CTAR1																		
010	DSPIx_CTAR2																		
011	DSPIx_CTAR3																		
100	DSPIx_CTAR4																		
101	DSPIx_CTAR5																		
110	DSPIx_CTAR6																		
111	DSPIx_CTAR7																		
4 EOQ	<p>End of queue. Provides a means for host software to signal to the DSPI that the current SPI transfer is the last in a queue. At the end of the transfer the EOQF bit in the DSPIx_SR is set.</p> <p>0 The SPI data is not the last data to transfer 1 The SPI data is the last data to transfer</p> <p>Note: This bitfield is used only in SPI master mode</p>																		

Table 21-8. DSPIx_PUSHR Field Descriptions (continued)

Field	Description
5 CTCNT	Clear SPI_TCNT. Provides a means for host software to clear the SPI transfer counter. The CTCNT bit clears the SPI_TCNT field in the DSPIx_TCR. The SPI_TCNT field is cleared before transmission of the current SPI frame begins. 0 Do not clear SPI_TCNT field in the DSPIx_TCR 1 Clear SPI_TCNT field in the DSPIx_TCR Note: This bitfield is used only in SPI master mode
6–7	Reserved.
8–9	Reserved, but implemented. These bits are writable, but have no effect.
10–15 PCS n	Peripheral chip select n . Selects which PCS x signals will be asserted for the transfer. 0 Negate the PCS n signal 1 Assert the PCS n signal Note: This bitfield is only used in SPI master mode
16–31 TXDATA [0:15]	Transmit data. Holds SPI data to be transferred according to the associated SPI command. Note: TXDATA is used in slave mode.

21.3.2.7 DSPI POP RX FIFO Register (DSPIx_POPR)

The DSPIx_POPR provides a means to read the RX FIFO. See [Section 21.4.3.5, “Receive First In First Out \(RX FIFO\) Buffering Mechanism”](#) for a description of the RX FIFO operations. Eight or sixteen bit read accesses to the DSPIx_POPR will read from the RX FIFO and update the counter and pointer.

NOTE

The DSPIx_POPR must not be read speculatively. For future compatibility, the TLB (MMU table) entry covering the DSPIx_POPR must be configured to be guarded.

Address: Base + 0x38

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	RXDATA															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-9. DSPI POP RX FIFO Register (DSPIx_POPR)

Table 21-9. DSPIx_POPR Field Descriptions

Field	Description
0–15	Reserved, should be cleared.
16–31 RXDATA [0:15]	Received data. The RXDATA field contains the SPI data from the RX FIFO entry pointed to by the pop next data pointer (POPNEXTPTR).

21.3.2.8 DSPI Transmit FIFO Registers 0–3 (DSPIx_TXFRn)

The DSPIx_TXFRn registers provide visibility into the TX FIFO for debugging purposes. Each register is an entry in the TX FIFO. The registers are read-only and cannot be modified. Reading the DSPIx_TXFRn registers does not alter the state of the TX FIFO. The MCU uses four registers to implement the TX FIFO, that is DSPIx_TXFR0–DSPIx_TXFR3 are used.

Address:

Access: Read

Base + 0x3C (DSPIx_TXFR0)

Base + 0x40 (DSPIx_TXFR1)

Base + 0x44 (DSPIx_TXFR2)

Base + 0x48 (DSPIx_TXFR3)

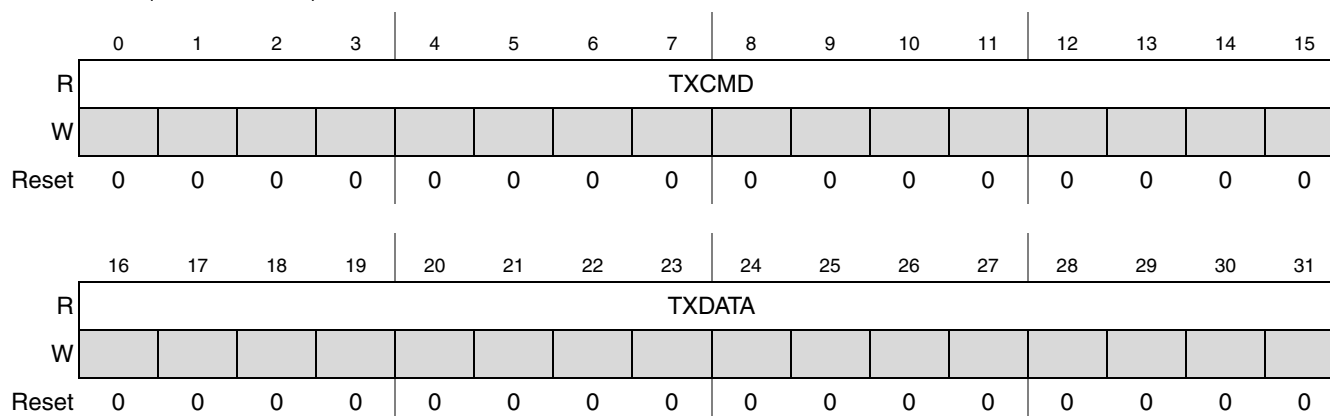


Figure 21-10. DSPI Transmit FIFO Register 0–3 (DSPIx_TXFRn)

Table 21-10. DSPIx_TXFRn Field Descriptions

Field	Description
0–15 TXCMD [0:15]	Transmit command. Contains the command that sets the transfer attributes for the SPI data. See Section 21.3.2.6, “DSPI PUSH TX FIFO Register (DSPIx_PUSHR),” for details on the command field.
16–31 TXDATA [0:15]	Transmit data. Contains the SPI data to be shifted out.

21.3.2.9 DSPI Receive FIFO Registers 0–3 (DSPIx_RXFRn)

The DSPIx_RXFRn registers provide visibility into the RX FIFO for debugging purposes. Each register is an entry in the RX FIFO. The DSPIx_RXFR registers are read-only. Reading the DSPIx_RXFRn registers

does not alter the state of the RX FIFO. The device uses four registers to implement the RX FIFO, that is DSPIx_RXFR0–DSPIx_RXFR3 are used.

Address: Access: Read

Base + 0x7C (DSPIx_RXFR0)

Base + 0x80 (DSPIx_RXFR1)

Base + 0x84 (DSPIx_RXFR2)

Base + 0x88 (DSPIx_RXFR3)

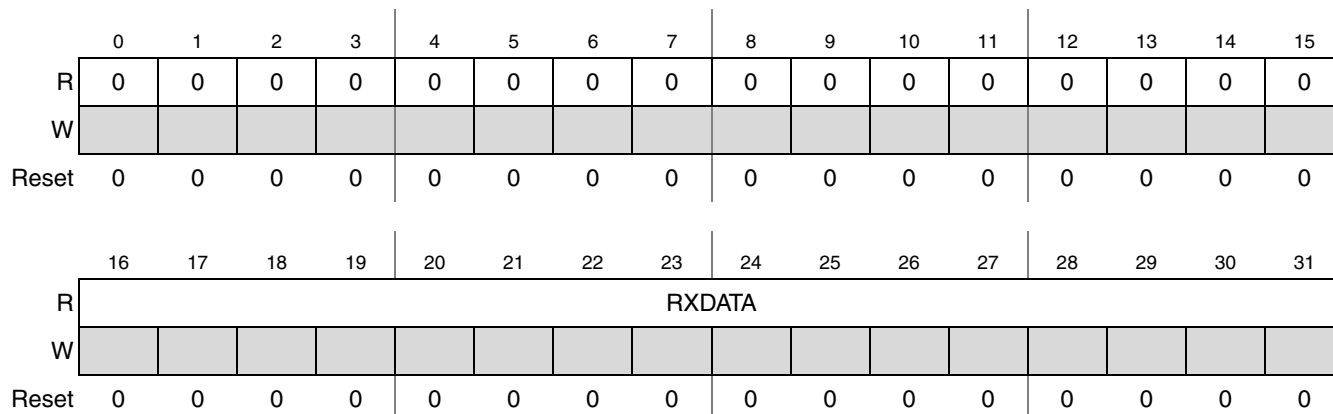


Figure 21-11. DSPI Receive FIFO Registers 0–3 (DSPIx_RXFRn)

Table 21-11. DSPIx_RXFRn Field Description

Field	Description
0–15	Reserved, should be cleared.
16–31 RXDATA [15:0]	Receive data. Contains the received SPI data.

21.3.2.10 DSPI DSI Configuration Register (DSPIx_DSICR)

The DSPIx_DSICR selects various attributes associated with DSI and CSI configurations. The user must not write to the DSPIx_DSICR while the DSPI is running.

Deserial Serial Peripheral Interface (DSPI)

Address: Base + 0xBC

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R		0	MTOCNT						0	0	0	0	TXSS	TPOL	TRRE	CID
W	MTOE															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	DCO	DSICTAS			0	0	0	0	0	0	DPCS	DPCS	DPCS	DPCS	DPCS	DPCS
W	NT										5	4	3	2	1	0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-12. DSPI DSI Configuration Register (DSPIx_DSICR)

Table 21-12. DSPIx_DSICR Field Descriptions

Field	Description
0 MTOE	Multiple transfer operation enable. Enables multiple DSPIs to be connected in a parallel or serial configuration. See Section 21.4.4.7, “Multiple Transfer Operation (MTO),” for more information. 0 Multiple transfer operation disabled 1 Multiple transfer operation enabled
1	Reserved.
2–7 MTOCNT [0:5]	Multiple transfer operation count. Selects number of bits to be shifted out during a transfer in multiple transfer operation. The field sets the number of SCK cycles that the bus master will generate to complete the transfer. The number of SCK cycles used will be one more than the value in the MTOCNT field. The number of SCK cycles defined by MTOCNT must be equal to or greater than the frame size.
8–11	Reserved.
12 TXSS	Transmit data source select. Selects the source of data to be serialized. The source can be either data from host software written to the DSPI DSI alternate serialization data register (DSPIx_ASDR), or parallel output pin states latched into the DSPI DSI serialization data register (DSPIx_SDR). 0 Source of serialized data is the DSPIx_SDR 1 Source of serialized data is the DSPIx_ASDR
13 TPOL	Trigger polarity. Selects the active edge of the internal hardware trigger input signal (<i>ht</i>). The bit selects which edge will initiate a transfer in the DSI configuration. See Section 21.4.4.5, “DSI Transfer Initiation Control,” for more information. 0 Falling edge will initiate a transfer 1 Rising edge will initiate a transfer
14 TRRE	Trigger reception enable. Enables the DSPI to initiate a transfer when an external trigger signal is received. The bit is only valid in DSI configuration. See Section 21.4.4.5, “DSI Transfer Initiation Control,” for more information. 0 Trigger signal reception disabled 1 Trigger signal reception enabled
15 CID	Change in data transfer enable. Enables a change in serialization data to initiate a transfer. The bit is used in master mode in DSI and CSI configurations to control when to initiate transfers. When the CID bit is set, serialization is initiated when the current DSI data differs from the previous DSI data shifted out. The DSPIx_COMPR is compared with the DSPIx_SDR or DSPIx_ASDR to detect a change in data. Refer to Section 21.4.4.5, “DSI Transfer Initiation Control,” for more information. 0 Change in data transfer operation disabled 1 Change in data transfer operation enabled

Table 21-12. DSPIx_DSICR Field Descriptions (continued)

Field	Description																		
16 DCONT	DSI continuous peripheral chip select enable. Enables the PCSx signals to remain asserted between transfers. The DCONT bit only affects the PCS signals in DSI master mode. See Section 21.4.7.5, “Continuous Selection Format,” for details. 0 Return peripheral chip select signals to their inactive state after transfer is complete 1 Keep peripheral chip select signals asserted after transfer is complete																		
17–19 DSICTAS [0:2]	DSI clock and transfer attributes select. The DSICTAS field selects which of the DSPIx_CTARs is used to provide transfer attributes in DSI configuration. The DSICTAS field is used in DSI master mode. In DSI slave mode, the DSPIx_CTAR1 is always selected. The table below shows how the DSICTAS values map to the DSPIx_CTARs. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>DSICTAS</th> <th>DSI Clock and Transfer Attributes Controlled by</th> </tr> </thead> <tbody> <tr><td>000</td><td>DSPIx_CTAR0</td></tr> <tr><td>001</td><td>DSPIx_CTAR1</td></tr> <tr><td>010</td><td>DSPIx_CTAR2</td></tr> <tr><td>011</td><td>DSPIx_CTAR3</td></tr> <tr><td>100</td><td>DSPIx_CTAR4</td></tr> <tr><td>101</td><td>DSPIx_CTAR5</td></tr> <tr><td>110</td><td>DSPIx_CTAR6</td></tr> <tr><td>111</td><td>DSPIx_CTAR7</td></tr> </tbody> </table>	DSICTAS	DSI Clock and Transfer Attributes Controlled by	000	DSPIx_CTAR0	001	DSPIx_CTAR1	010	DSPIx_CTAR2	011	DSPIx_CTAR3	100	DSPIx_CTAR4	101	DSPIx_CTAR5	110	DSPIx_CTAR6	111	DSPIx_CTAR7
DSICTAS	DSI Clock and Transfer Attributes Controlled by																		
000	DSPIx_CTAR0																		
001	DSPIx_CTAR1																		
010	DSPIx_CTAR2																		
011	DSPIx_CTAR3																		
100	DSPIx_CTAR4																		
101	DSPIx_CTAR5																		
110	DSPIx_CTAR6																		
111	DSPIx_CTAR7																		
20–23	Reserved.																		
24–25	Reserved, but implemented. These bits are writable, but have no effect.																		
26–31 DPCS _n	DSI peripheral chip select <i>n</i> . The DPCS bits select which of the PCSx signals to assert during a DSI transfer. The DPCS bits only control the assertions of the PCSx signals in DSI master mode. 0 Negate PCS _n 1 Assert PCS _n																		

21.3.2.11 DSPI DSI Serialization Data Register (DSPIx_SDR)

The DSPIx_SDR contains the signal states of the parallel input signals from the eTPU or the eMIOS. The pin states of the parallel input signals are latched into the DSPIx_SDR on the rising edge of every system clock. The DSPIx_SDR is read-only. When the TXSS bit in the DSPIx_DSICR is negated, the data in the DSPIx_SDR is the source of the serialized data.

Deserial Serial Peripheral Interface (DSPI)

Address: Base + 0xC0

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	SER_DATA [15:0]															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-13. DSPI DSI Serialization Data Register (DSPIx_SDR)

Table 21-13. DSPIx_SDR Field Description

Bits	Description
0–15	Reserved.
16–31 SER_DATA [15:0]	Serialized data. The SER_DATA field contains the signal states of the parallel input signals. SER_DATA [15:0] maps to DSPI serialization inputs IN[15:0]. Refer to Section 21.4.4.6, “DSPI Connections to eTPU_A, EMIOs and SIU.”

21.3.2.12 DSPI DSI Alternate Serialization Data Register (DSPIx_ASDR)

The DSPIx_ASDR provides a means for host software to write the data to be serialized. When the TXSS bit in the DSPIx_DSICR is set, the data in the DSPIx_ASDR is the source of the serialized data. Writes to the DSPIx_ASDR take effect on the next frame boundary.

Address: Base + 0xC4

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	ASER_DATA															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-14. DSPI DSI Alternate Serialization Data Register (DSPIx_ASDR)

Table 21-14. DSPIx_ASDR Field Description

Field	Description
0–15	Reserved.
16–31 ASER_ DATA [0:15]	Alternate serialized data. The ASER_DATA field holds the alternate data to be serialized.

21.3.2.13 DSPI DSI Transmit Comparison Register (DSPIx_COMPR)

The DSPIx_COMPR holds a copy of the last transmitted DSI data. The DSPIx_COMPR is read-only. DSI data is transferred to this register as it is loaded into the TX shift register.

Address: Base + 0xC8

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	COMP_DATA															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-15. DSPI DSI Transmit Comparison Register (DSPIx_COMPR)
Table 21-15. DSPIx_COMPR Field Description

Field	Description
0–15	Reserved.
16–31 COMP_ DATA [0:15]	Compare data. The COMP_DATA field holds the last serialized DSI data.

21.3.2.14 DSPI DSI Deserialization Data Register (DSPIx_DDR)

The DSPIx_DDR holds the signal states for the parallel output signals. The DSPIx_DDR is read-only and it is memory mapped so that host software can read the incoming DSI frames.

Address: Base + 0xCC

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	DESER_DATA															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 21-16. DSPI Deserialization Data Register (DSPIx_DDR)

Table 21-16. DSPIx_DDR Field Description

Field	Description
0–15	Reserved.
16–31 DESER DATA	Deserialized data. Holds deserialized data which is presented as signal states to the parallel output signals.

21.4 Functional Description

The DSPI supports full-duplex, synchronous serial communications between the MCU and peripheral devices. The DSPI can also be used to reduce the number of pins required for I/O by serializing and deserializing up to 16 parallel input/output signals from the eTPU and eMIOS. All communications are through an SPI-like protocol.

The DSPI has three configurations:

- Serial peripheral interface (SPI) configuration in which the DSPI operates as a basic SPI or a queued SPI.
- Deserial serial interface (DSI) configuration where the DSPI serializes eTPU and eMIOS output channels and deserializes the received data by placing it on the eTPU and eMIOS input channels and as inputs to the External Interrupt Request subblock of the SIU.
- Combined serial interface (CSI) configuration where the DSPI operates in both SPI and DSI configurations interleaving DSI frames with SPI frames, giving priority to SPI frames.

The DCONF field in the DSPIx_MCR register determines the DSPI configuration. See [Table 21-3](#) for the DSPI configuration values.

The DSPIx_CTAR0–DSPIx_CTAR7 registers hold clock and transfer attributes. The manner in which a CTAR is selected depends on the DSPI configuration (SPI, DSI, or CSI). The SPI configuration can select which CTAR to use on a frame by frame basis by setting the CTAS field in the DSPIx_PUSHHR. The DSI configuration statically selects which CTAR to use. In CSI configuration, priority logic determines if SPI data or DSI data is transferred. The type of data transferred (whether DSI or SPI) dictates which CTAR the

CSI configuration will use. See [Section 21.3.2.3, “DSPI Clock and Transfer Attributes Registers 0–7 \(DSPIx_CTARn\),”](#) for information on DSPIx_CTAR fields.

The 16-bit shift register in the master and the 16-bit shift register in the slave are linked by the SOUTx and SINx signals to form a distributed 32-bit register. When a data transfer operation is performed, data is serially shifted a pre-determined number of bit positions. Because the registers are linked, data is exchanged between the master and the slave; the data that was in the master’s shift register is now in the shift register of the slave, and vice versa. At the end of a transfer, the TCF bit in the DSPIx_SR is set to indicate a completed transfer. [Figure 21-17](#) illustrates how master and slave data is exchanged.

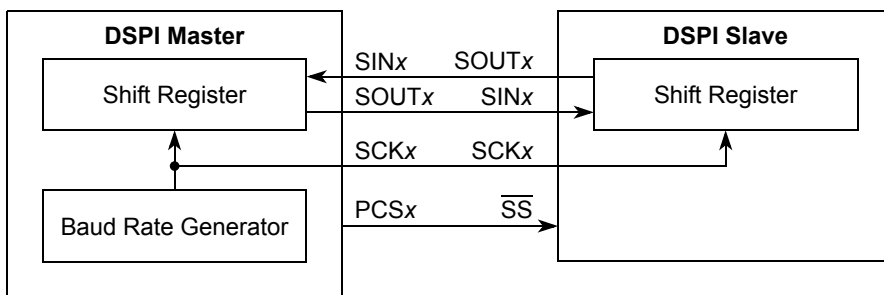


Figure 21-17. SPI and DSI Serial Protocol Overview

The DSPI has six peripheral chip select (PCSx) signals that are be used to select which of the slaves to communicate with.

Transfer protocols and timing properties are shared by the three DSPI configurations; these properties are described independently of the configuration in [Section 21.4.7, “Transfer Formats.”](#) The transfer rate and delay settings are described in section [Section 21.4.6, “DSPI Baud Rate and Clock Delay Generation.”](#)

See [Section 21.4.10, “Power Saving Features”](#) for information on the power-saving features of the DSPI.

21.4.1 Modes of Operation

The DSPI modules have four available distinct modes:

- Master mode
- Slave mode
- Module disable mode
- Debug mode

Master, slave, and module disable modes are module-specific modes while debug mode is a device-specific mode.

The module-specific modes are determined by bits in the DSPIx_MCR. Debug mode is a mode that the entire device can enter in parallel with the DSPI being configured in one of its module-specific modes.

21.4.1.1 Master Mode

In master mode the DSPI can initiate communications with peripheral devices. The DSPI operates as bus master when the MSTR bit in the DSPIx_MCR is set. The serial communications clock (SCK) is controlled by the master DSPI. All three DSPI configurations are valid in master mode.

In SPI configuration, master mode transfer attributes are controlled by the SPI command in the current TX FIFO entry. The CTAS field in the SPI command selects which of the eight DSPIx_CTARs will be used to set the transfer attributes. Transfer attribute control is on a frame by frame basis. See [Section 21.4.3, “Serial Peripheral Interface \(SPI\) Configuration”](#) for more details.

In DSI configuration, master mode transfer attributes are controlled by the DSPIx_DSCIR. A detailed description of the DSPIx_DSCIR is located in [Section 21.3.2.10, “DSPI DSI Configuration Register \(DSPIx_DSICR\)”](#). The DSISCTAS field in the DSPIx_DSICR selects which of the DSPIx_CTARs will be used to set the transfer attributes. Transfer attributes are set up during initialization and must not be changed between frames. See [Section 21.4.4, “Deserial Serial Interface \(DSI\) Configuration,”](#) for more details.

The CSI configuration is only available in master mode. In CSI configuration, the DSI data is transferred using DSI configuration transfer attributes and SPI data is transferred using the SPI configuration transfer attributes. In order for the bus slave to distinguish between DSI and SPI frames, the transfer attributes for the two types of frames must utilize different peripheral chip select signals. See [Section 21.4.5, “Combined Serial Interface \(CSI\) Configuration,”](#) for details.

21.4.1.2 Slave Mode

In slave mode the DSPI responds to transfers initiated by an SPI master. The DSPI operates as bus slave when the MSTR bit in the DSPIx_MCR is negated. The DSPI slave is selected by a bus master by having the slave's \overline{SS} asserted. In slave mode the SCK is provided by the bus master. All transfer attributes are controlled by the bus master but clock polarity, clock phase and numbers of bits to transfer must still be configured in the DSPI slave for proper communications.

The SPI and DSI configurations are valid in slave mode. CSI configuration is not available in slave mode. In SPI slave mode the slave transfer attributes are set in the DSPIx_CTAR0. In DSI slave mode the slave transfer attributes are set in the DSPIx_CTAR1. In slave mode, for both SPI and DSI configurations, data is transferred MSB first. The LSBFE field of the associated CTAR is ignored.

21.4.1.3 Module Disable Mode

The module disable mode is used for MCU power management. The clock to the non-memory mapped logic in the DSPI is stopped while in module disable mode. The DSPI enters the module disable mode when the MDIS bit in DSPIx_MCR is set. See [Section 21.4.10, “Power Saving Features,”](#) for more details on the module disable mode.

21.4.1.4 Debug Mode

The debug mode is used for system development and debugging. If the MCU enters debug mode while the FRZ bit in the DSPIx_MCR is set, the DSPI stops all serial transfers and enters a stopped state. If the MCU

enters debug mode while the FRZ bit is negated, the DSPI behavior is unaffected and remains dictated by the module-specific mode and configuration of the DSPI. The DSPI enters debug mode when a debug request is asserted by an external controller. See [Figure 21-18](#) for a state diagram.

21.4.2 Start and Stop of DSPI Transfers

The DSPI has two operating states; STOPPED and RUNNING. The states are independent of DSPI configuration. The default state of the DSPI is STOPPED. In the STOPPED state no serial transfers are initiated in master mode and no transfers are responded to in slave mode. The STOPPED state is also a safe state for writing the various configuration registers of the DSPI without causing undetermined results. The TXRXS bit in the DSPIx_SR is negated in this state. In the RUNNING state, serial transfers take place. The TXRXS bit in the DSPIx_SR is asserted in the RUNNING state. [Figure 21-18](#) shows a state diagram of the start and stop mechanism. The transitions are described in [Table 21-17](#).

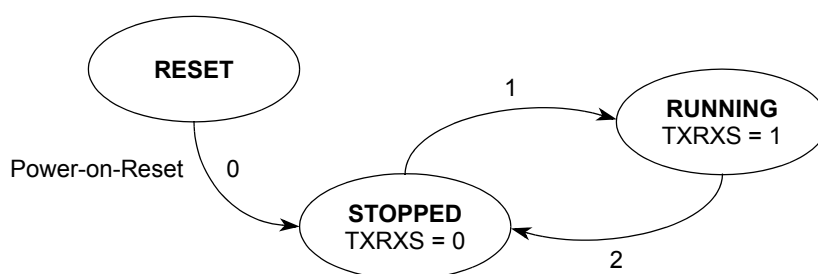


Figure 21-18. DSPI Start and Stop State Diagram

Table 21-17. State Transitions for Start and Stop of DSPI Transfers

Transition #	Current State	Next State	Description
0	RESET	STOPPED	Generic power-on-reset transition
1	STOPPED	RUNNING	The DSPI is started (DSPI transitions to RUNNING) when all of the following conditions are true: <ul style="list-style-type: none"> • EOQF bit is clear • Debug mode is unselected or the FRZ bit is clear • HALT bit is clear
2	RUNNING	STOPPED	The DSPI stops (transitions from RUNNING to STOPPED) after the current frame for any one of the following conditions: <ul style="list-style-type: none"> • EOQF bit is set • Debug mode is selected and the FRZ bit is set • HALT bit is set

State transitions from RUNNING to STOPPED occur on the next frame boundary if a transfer is in progress, or on the next system clock cycle if no transfers are in progress.

21.4.3 Serial Peripheral Interface (SPI) Configuration

The SPI configuration transfers data serially using a shift register and a selection of programmable transfer attributes. The DSPI is in SPI configuration when the DCONF field in the DSPIx_MCR is 0b00. The SPI frames can be from 4 to 16 bits long. The data to be transmitted can come from queues stored in RAM

external to the DSPI. Host software or an eDMA controller can transfer the SPI data from the queues to a first-in first-out (FIFO) buffer. The received data is stored in entries in the receive FIFO (RX FIFO) buffer. Host software or an eDMA controller transfers the received data from the RX FIFO to memory external to the DSPI. The FIFO buffer operations are described in [Section 21.4.3.4, “Transmit First In First Out \(TX FIFO\) Buffering Mechanism,”](#) and [Section 21.4.3.5, “Receive First In First Out \(RX FIFO\) Buffering Mechanism.”](#) The interrupt and DMA request conditions are described in [Section 21.4.9, “Interrupts/DMA Requests.”](#)

The SPI configuration supports two module-specific modes; master mode and slave mode. The FIFO operations are similar for the master mode and slave mode. The main difference is that in master mode the DSPI initiates and controls the transfer according to the fields in the SPI command field of the TX FIFO entry. In slave mode the DSPI only responds to transfers initiated by a bus master external to the DSPI and the SPI command field of the TX FIFO entry is ignored.

21.4.3.1 SPI Master Mode

In SPI master mode the DSPI initiates the serial transfers by controlling the serial communications clock (SCK_x) and the peripheral chip select (PCS_x) signals. The SPI command field in the executing TX FIFO entry determines which CTARs will be used to set the transfer attributes and which PCS_x signal to assert. The command field also contains various bits that help with queue management and transfer protocol. See [Section 21.3.2.6, “DSPI PUSH TX FIFO Register \(DSPI_x_PUSHR\),”](#) for details on the SPI command fields. The data field in the executing TX FIFO entry is loaded into the shift register and shifted out on the serial out (SOUT_x) pin. In SPI master mode, each SPI frame to be transmitted has a command associated with it allowing for transfer attribute control on a frame by frame basis.

21.4.3.2 SPI Slave Mode

In SPI slave mode the DSPI responds to transfers initiated by an SPI bus master. The DSPI does not initiate transfers. Certain transfer attributes such as clock polarity, clock phase and frame size must be set for successful communication with an SPI master. The SPI slave mode transfer attributes are set in the DSPI_x_CTAR0.

21.4.3.3 FIFO Disable Operation

The FIFO disable mechanisms allow SPI transfers without using the TX FIFO or RX FIFO. The DSPI operates as a double-buffered simplified SPI when the FIFOs are disabled. The TX and RX FIFOs are disabled separately. The TX FIFO is disabled by writing a 1 to the DIS_TXF bit in the DSPI_x_MCR. The RX FIFO is disabled by writing a 1 to the DIS_RXF bit in the DSPI_x_MCR.

The FIFO disable mechanisms are transparent to the user and to host software; transmit data and commands are written to the DSPI_x_PUSHR and received data is read from the DSPI_x_POPR. When the TX FIFO is disabled, the TFFF, TFUF, and TXCTR fields in DSPI_x_SR behave as if there is a one-entry FIFO but the contents of the DSPI_x_TXFRs and TXNXTPTR are undefined. When the RX FIFO is disabled, the RFDF, RFOF, and RXCTR fields in the DSPI_x_SR behave as if there is a one-entry FIFO but the contents of the DSPI_x_RXFRs and POPNXTPTR are undefined.

The TX and RX FIFOs should be disabled only if the application's operating mode requires the FIFO to be disabled. A FIFO must be disabled before it is accessed. Failure to disable a FIFO prior to a first FIFO access is not supported, and may result in incorrect results.

21.4.3.4 Transmit First In First Out (TX FIFO) Buffering Mechanism

The TX FIFO functions as a buffer of SPI data and SPI commands for transmission. The TX FIFO holds four entries, each consisting of a command field and a data field. SPI commands and data are added to the TX FIFO by writing to the DSPI push TX FIFO register (DSPIx_PUSHR). For more information on DSPIx_PUSHR, refer to [Section 21.3.2.6, “DSPI PUSH TX FIFO Register \(DSPIx_PUSHR\).”](#) TX FIFO entries can only be removed from the TX FIFO by being shifted out or by flushing the TX FIFO.

The TX FIFO counter field (TXCTR) in the DSPI status register (DSPIx_SR) indicates the number of valid entries in the TX FIFO. The TXCTR is updated every time the DSPI_PUSHR is written or SPI data is transferred into the shift register from the TX FIFO. For more information on DSPIx_SR, refer to [Section 21.3.2.4, “DSPI Status Register \(DSPIx_SR\).”](#)

The TXNXTPTR field indicates which TX FIFO entry will be transmitted during the next transfer. The TXNXTPTR contains the positive offset from DSPIx_TXFR0 in number of 32-bit registers. For example, TXNXTPTR equal to two means that the DSPIx_TXFR2 contains the SPI data and command for the next transfer. The TXNXTPTR field is incremented every time SPI data is transferred from the TX FIFO to the shift register.

21.4.3.4.1 Filling the TX FIFO

Host software or the eDMA controller can add (push) entries to the TX FIFO by writing to the DSPIx_PUSHR. When the TX FIFO is not full, the TX FIFO fill flag (TFFF) in the DSPIx_SR is set. The TFFF bit is cleared when the TX FIFO is full and the eDMA controller indicates that a write to DSPIx_PUSHR is complete or alternatively by host software writing a 1 to the TFFF in the DSPIx_SR. The TFFF can generate a DMA request or an interrupt request. See [Section 21.4.9.2, “Transmit FIFO Fill Interrupt or DMA Request \(TFFF\),”](#) for details.

The DSPI ignores attempts to push data to a full TX FIFO; that is, the state of the TX FIFO is unchanged. No error condition is indicated.

21.4.3.4.2 Draining the TX FIFO

The TX FIFO entries are removed (drained) by shifting SPI data out through the shift register. Entries are transferred from the TX FIFO to the shift register and shifted out as long as there are valid entries in the TX FIFO. Every time an entry is transferred from the TX FIFO to the shift register, the TX FIFO counter is decremented by one. At the end of a transfer, the TCF bit in the DSPIx_SR is set to indicate the completion of a transfer. The TX FIFO is flushed by writing a 1 to the CLR_TXF bit in DSPIx_MCR.

If an external SPI bus master initiates a transfer with a DSPI slave while the slave's DSPI TX FIFO is empty, the transmit FIFO underflow flag (TFUF) in the slave's DSPIx_SR is set. See [Section 21.4.9.4, “Transmit FIFO Underflow Interrupt Request \(TFUF\),”](#) for details.

21.4.3.5 Receive First In First Out (RX FIFO) Buffering Mechanism

The RX FIFO functions as a buffer for data received on the SIN pin. The RX FIFO holds four received SPI data frames. SPI data is added to the RX FIFO at the completion of a transfer when the received data in the shift register is transferred into the RX FIFO. SPI data is removed (popped) from the RX FIFO by reading the DSPIx_POPR register. RX FIFO entries can only be removed from the RX FIFO by reading the DSPIx_POPR or by flushing the RX FIFO. For more information on the DSPIx_POPR, refer to [Section 21.3.2.7, “DSPI POP RX FIFO Register \(DSPIx_POPR\).”](#)

The RX FIFO counter field (RXCTR) in the DSPI status register (DSPIx_SR) indicates the number of valid entries in the RX FIFO. The RXCTR is updated every time the DSPI_POPR is read or SPI data is copied from the shift register to the RX FIFO.

The POPNXTPTR field in the DSPIx_SR points to the RX FIFO entry that is returned when the DSPIx_POPR is read. The POPNXTPTR contains the positive, 32-bit word offset from DSPIx_RXFR0. For example, POPNXTPTR equal to two means that the DSPIx_RXFR2 contains the received SPI data that will be returned when DSPIx_POPR is read. The POPNXTPTR field is incremented every time the DSPIx_POPR is read. POPNXTPTR rolls over every four frames on the MCU.

21.4.3.5.1 Filling the RX FIFO

The RX FIFO is filled with the received SPI data from the shift register. While the RX FIFO is not full, SPI frames from the shift register are transferred to the RX FIFO. Every time an SPI frame is transferred to the RX FIFO the RX FIFO counter is incremented by one.

If the RX FIFO and shift register are full and a transfer is initiated, the RFOF bit in the DSPIx_SR is asserted indicating an overflow condition. Depending on the state of the ROOE bit in the DSPIx_MCR, the data from the transfer that generated the overflow is either ignored or shifted in to the shift register. If the ROOE bit is asserted, the incoming data is shifted in to the shift register. If the ROOE bit is negated, the incoming data is ignored.

21.4.3.5.2 Draining the RX FIFO

Host software or the eDMA can remove (pop) entries from the RX FIFO by reading the DSPIx_POPR. For more information on DSPIx_POPR, refer to [Section 21.3.2.7, “DSPI POP RX FIFO Register \(DSPIx_POPR\).”](#) A read of the DSPIx_POPR decrements the RX FIFO counter by one. Attempts to pop data from an empty RX FIFO are ignored, the RX FIFO counter remains unchanged. The data returned from reading an empty RX FIFO is undetermined.

When the RX FIFO is not empty, the RX FIFO drain flag (RFDF) in the DSPIx_SR is set. The RFDF bit is cleared when the RX_FIFO is empty and the eDMA controller indicates that a read from DSPIx_POPR is complete; alternatively the RFDF bit can be cleared by the host writing a 1 to it.

21.4.4 Deserial Serial Interface (DSI) Configuration

The DSI configuration supports pin count reduction by serializing parallel input signals or register bits and shifting them out in an SPI-like protocol. The timing and transfer protocol is described in [Section 21.4.7, “Transfer Formats.”](#) The received serial frames are converted to a parallel form (deserialized) and placed on the parallel output signals or in a register. The various features of the DSI configuration are set in the

DSPIx_DSICR. For more information on the DSPIx_DSICR, refer to [Section 21.3.2.10, “DSPI DSI Configuration Register \(DSPIx_DSICR\).”](#) The DSPI is in DSI configuration when the DCONF field in the DSPIx_MCR is 0b01.

The DSI frames can be from 4 to 16 bits long. With multiple transfer operation (MTO), the DSPI supports serial chaining of DSPI modules within the MCU to create DSI frames consisting of concatenated bits from multiple DSPIs. The DSPI also supports parallel chaining allowing several DSPIs and off-chip SPI devices to share the same serial communications clock (SCK) and peripheral chip select (PCS) signals. See [Section 21.4.4.7, “Multiple Transfer Operation \(MTO\),”](#) for details on the serial and parallel chaining support.

21.4.4.1 DSI Master Mode

In DSI master mode the DSPI initiates and controls the DSI transfers. The DSI master has four different conditions that can initiate a transfer:

- Continuous
- Change in data
- Trigger signal
- Trigger signal combined with a change in data

The four transfer initiation conditions are described in [Section 21.4.4.5, “DSI Transfer Initiation Control.”](#) Transfer attributes are set during initialization. The DSICTAS field in the DSPIx_DSICR determines which of the DSPIx_CTARs will control the transfer attributes.

21.4.4.2 DSI Slave Mode

In DSI slave mode the DSPI responds to transfers initiated by an SPI or DSI bus master. In this mode the DSPI does not initiate DSI transfers. Certain transfer attributes such as clock polarity and phase must be set for successful communication with a DSI master. The DSI slave mode transfer attributes are set in the DSPIx_CTAR1.

If the CID bit in the DSPIx_DSICR is set and the data in the DSPIx_COMPR differs from the selected source of the serialized data, the slave DSPI will assert the $\overline{\text{MTRIG}}$ signal. If the slave's internal hardware trigger signal is asserted and the TRRE is set, the slave DSPI asserts $\overline{\text{MTRIG}}$. These features are included to support chaining of several DSPI. Details about the $\overline{\text{MTRIG}}$ signal are found in [Section 21.4.4.7, “Multiple Transfer Operation \(MTO\).”](#)

21.4.4.3 DSI Serialization

In the DSI configuration, 4 to 16 bits can be serialized using two different sources. The TXSS bit in the DSPIx_DSICR selects between the DSPIx_SDR and DSPIx_ASDR as the source of serialized data. See [Section 21.3.2.11, “DSPI DSI Serialization Data Register \(DSPIx_SDR\),”](#) and [Section 21.3.2.12, “DSPI DSI Alternate Serialization Data Register \(DSPIx_ASDR\),”](#) for more details. The DSPIx_SDR holds the latest parallel input signal values which is sampled at every rising edge of the system clock. The DSPIx_ASDR is written by host software and used as an alternate source of serialized data.

A copy of the last DSI frame shifted out of the shift register is stored in the DSPIx_COMPR. This register provides added visibility for debugging and it serves as a reference for transfer initiation control.

Figure 21-19 shows the DSI serialization logic. Section 21.3.2.13, “DSPI DSI Transmit Comparison Register (DSPIx_COMPR),” contains details on the DSPIx_COMPR.

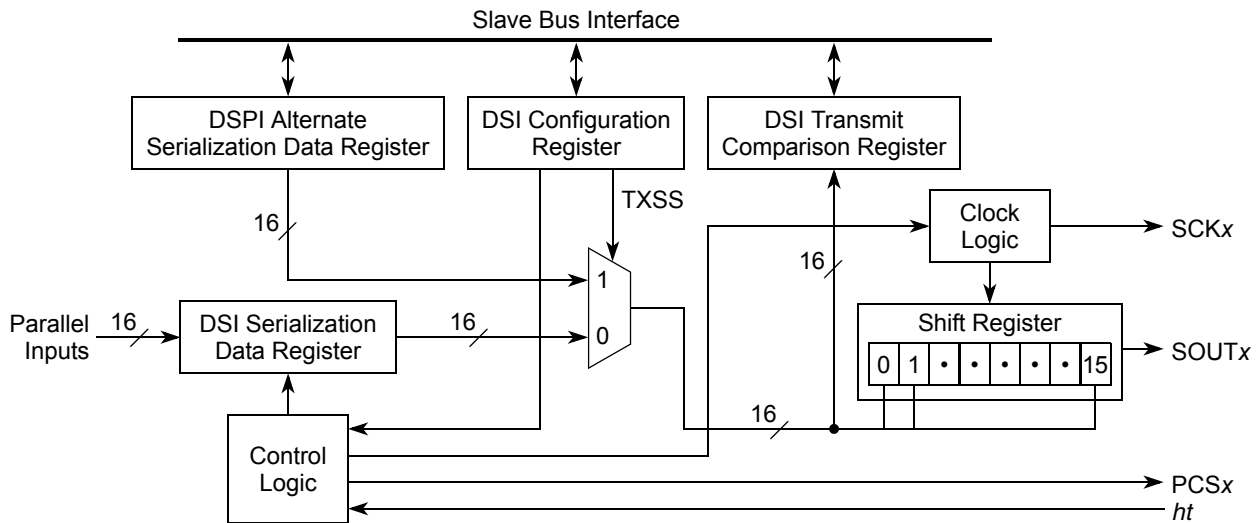


Figure 21-19. DSI Serialization Diagram

21.4.4.4 DSI Deserialization

When all bits in a DSI frame have been shifted in, the frame is copied to the DSPIx_DDR. This register presents the deserialized data as parallel output signal values. The DSPIx_DDR is memory mapped to allow host software to read the deserialized data directly. Figure 21-20 shows the DSI deserialization logic. for more information on the DSPIx_DDR, refer to Section 21.3.2.14, “DSPI DSI Deserialization Data Register (DSPIx_DDR).”

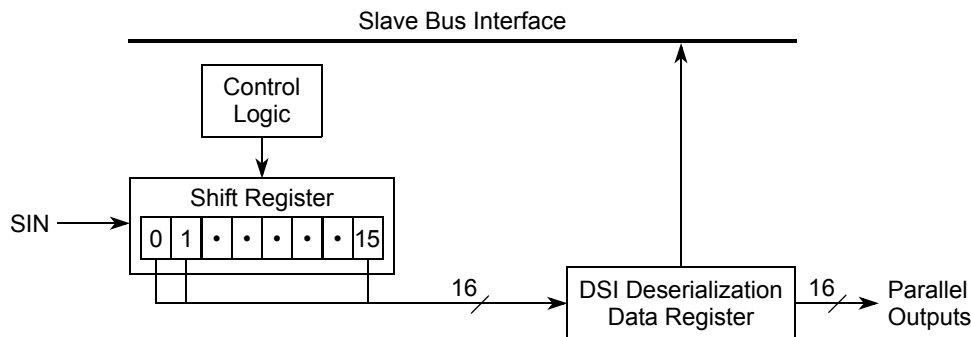


Figure 21-20. DSI Deserialization Diagram

21.4.4.5 DSI Transfer Initiation Control

Data transfers for a master DSPI in DSI configuration are initiated by a condition. When chaining DSPIs, the master and all slaves must be configured for the transfer initiation. The transfer initiation conditions are selected by the TRRE and CID bits in the DSPIx_DSICR. Table 21-18 lists the four transfer initiation conditions.

Table 21-18. DSI Data Transfer Initiation Control

DSPI _x _DSICR Bits		
TRRE	CID	Type of Transfer Initiation Control
0	0	Continuous
0	1	Change in Data
1	0	Triggered
1	1	Triggered or Change in Data

21.4.4.5.1 Continuous Control

For continuous control, the initiation of a transfer is based on the baud rate at which data is transferred between the DSPI and the external device. The baud rate is set in the DSPI_x_CTAR selected by the DSICTAS field in the DSPI_x_DSICR. A new DSI frame shifts out when the previous transfer cycle has completed and the delay after transfer (t_{DT}) has elapsed.

21.4.4.5.2 Change In Data Control

For change in data control, a transfer is initiated when the data to be serialized has changed since the transfer of the last DSI frame. A copy of the previously transferred DSI data is stored in the DSPI_x_COMPR. When the data in the DSPI_x_SDR or the DSPI_x_ASDR is different from the data in the DSPI_x_COMPR, a new DSI frame is transmitted. The TXSS bit in the DSPI_x_DSICR selects which register the DSPI_x_COMPR is compared to. The \overline{MTRIG} output signal is asserted every time a change in data is detected.

21.4.4.5.3 Triggered Control

For triggered control, initiation of a transfer is controlled by the internal hardware trigger signal (*ht*). The TPOL bit in the DSPI_x_DSICR selects the active edge of *ht*. For *ht* to have any affect, the TRRE bit in the DSPI_x_DSICR must be set.

21.4.4.5.4 Triggered or Change In Data Control

For triggered or change in data control, initiation of a transfer is controlled by the *ht* signal or by the detection of a change in data to be serialized.

21.4.4.6 DSPI Connections to eTPU_A, EMIOS and SIU

The three DSPI blocks connect to the input and output channels of the eTPUs and the EMIOS. The MCU connects to eTPU_A, EMIOS, and SIU. Some of the DSPI outputs connect to the external interrupt input multiplexing subblock in the SIU. See [Section 6.4.3, “External Interrupt,”](#) and [Section 6.3.1.17, “Pad Configuration Registers 23 - 25 \(SIU_PCR23 - SIU_PCR25\),”](#) for details on how the DSPI deserialized outputs can be used to trigger external interrupt requests and [Section 19.3.2.1, “Output and Input Channel Signals,”](#) for a discussion on eTPU connections.

21.4.4.6.1 DSPI_B Connectivity

The DSPI_B connects to the EMIOS, eTPU_A, and SIU as shown in Figure 21-21.

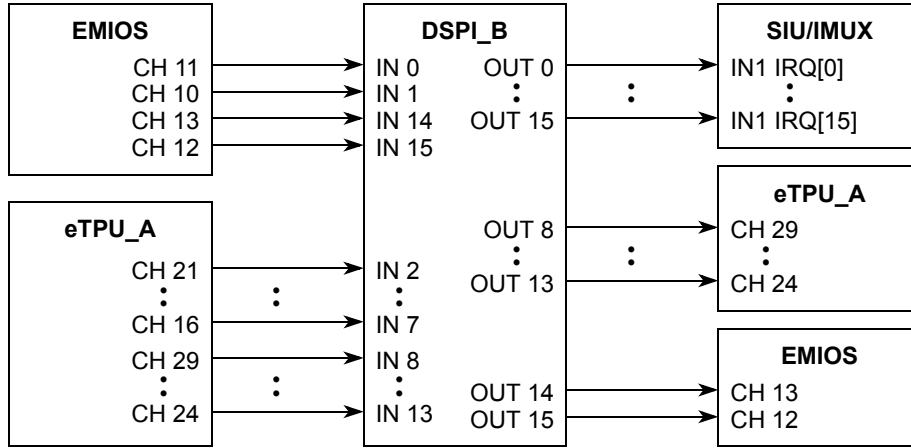


Figure 21-21. DSPI_B Connectivity

Table 21-19 lists the DSPI_B connections.

This table applies to devices that have eTPU.

Table 21-19. DSPI_B Connectivity Table

Connected to:	DSPI_B IN[n]	DSPI_B OUT[n]	Connected to:
EMIOS Output Channel 11	0	0	Input 1 on IMUX for External IRQ[0]
EMIOS Output Channel 10	1	1	Input 1 on IMUX for External IRQ[1]
eTPU_A Output Channel 21	2	2	Input 1 on IMUX for External IRQ[2]
eTPU_A Output Channel 20	3	3	Input 1 on IMUX for External IRQ[3]
eTPU_A Output Channel 19	4	4	Input 1 on IMUX for External IRQ[4]
eTPU_A Output Channel 18	5	5	Input 1 on IMUX for External IRQ[5]
eTPU_A Output Channel 17	6	6	Input 1 on IMUX for External IRQ[6]
eTPU_A Output Channel 16	7	7	Input 1 on IMUX for External IRQ[7]
eTPU_A Output Channel 29	8	8	eTPU_A Input Channel 29, Input 1 on IMUX for External IRQ[8]
eTPU_A Output Channel 28	9	9	eTPU_A Input Channel 28, Input 1 on IMUX for External IRQ[9]
eTPU_A Output Channel 27	10	10	eTPU_A Input Channel 27, Input 1 on IMUX for External IRQ[10]
eTPU_A Output Channel 26	11	11	eTPU_A Input Channel 26, Input 1 on IMUX for External IRQ[11]

Table 21-19. DSPI_B Connectivity Table (continued)

Connected to:	DSPI_B IN[n]	DSPI_B OUT[n]	Connected to:
eTPU_A Output Channel 25	12	12	eTPU_A Input Channel 25, Input 1 on IMUX for External IRQ[12]
eTPU_A Output Channel 24	13	13	eTPU_A Input Channel 24, Input 1 on IMUX for External IRQ[13]
EMIOS Output Channel 13	14	14	EMIOS Input Channel 13, Input 1 on IMUX for External IRQ[14]
EMIOS Output Channel 12	15	15	EMIOS Input Channel 12, Input 1 on IMUX for External IRQ[15]

21.4.4.6.2 DSPI_C Connectivity

The DSPI_C connects to eTPU_A and the SIU as shown in Figure 21-22.

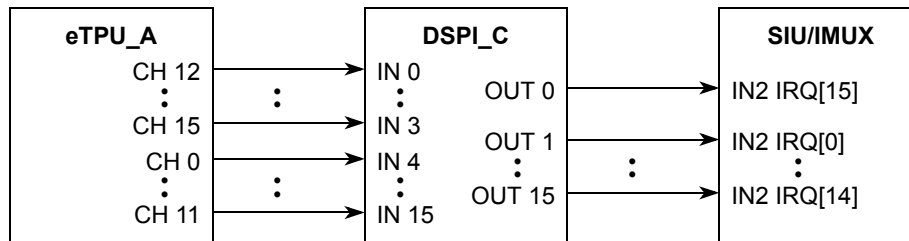

Figure 21-22. DSPI_C Connectivity

Table 21-20 lists the DSPI_C connections.

Table 21-20. DSPI_C Connectivity Table

eTPU Channel	DSPI_C IN[n]	DSPI_C OUT[n]	Connected to:
eTPU_A Output Channel 12	0	0	Input 2 on IMUX for External IRQ[15]
eTPU_A Output Channel 13	1	1	Input 2 on IMUX for External IRQ[0]
eTPU_A Output Channel 14	2	2	Input 2 on IMUX for External IRQ[1]
eTPU_A Output Channel 15	3	3	Input 2 on IMUX for External IRQ[2]
eTPU_A Output Channel 0	4	4	Input 2 on IMUX for External IRQ[3]
eTPU_A Output Channel 1	5	5	Input 2 on IMUX for External IRQ[4]
eTPU_A Output Channel 2	6	6	Input 2 on IMUX for External IRQ[5]
eTPU_A Output Channel 3	7	7	Input 2 on IMUX for External IRQ[6]
eTPU_A Output Channel 4	8	8	Input 2 on IMUX for External IRQ[7]
eTPU_A Output Channel 5	9	9	Input 2 on IMUX for External IRQ[8]
eTPU_A Output Channel 6	10	10	Input 2 on IMUX for External IRQ[9]
eTPU_A Output Channel 7	11	11	Input 2 on IMUX for External IRQ[10]

Table 21-20. DSPI_C Connectivity Table (continued)

eTPU Channel	DSPI_C IN[n]	DSPI_C OUT[n]	Connected to:
eTPU_A Output Channel 8	12	12	Input 2 on IMUX for External IRQ[11]
eTPU_A Output Channel 9	13	13	Input 2 on IMUX for External IRQ[12]
eTPU_A Output Channel 10	14	14	Input 2 on IMUX for External IRQ[13]
eTPU_A Output Channel 11	15	15	Input 2 on IMUX for External IRQ[14]

21.4.4.6.3 DSPI_D Connectivity [This only applies to devices with DSPI D]

The DSPI_D connects to the eTPU_A, EMIOS and SIU as shown in [Figure 21-23](#).

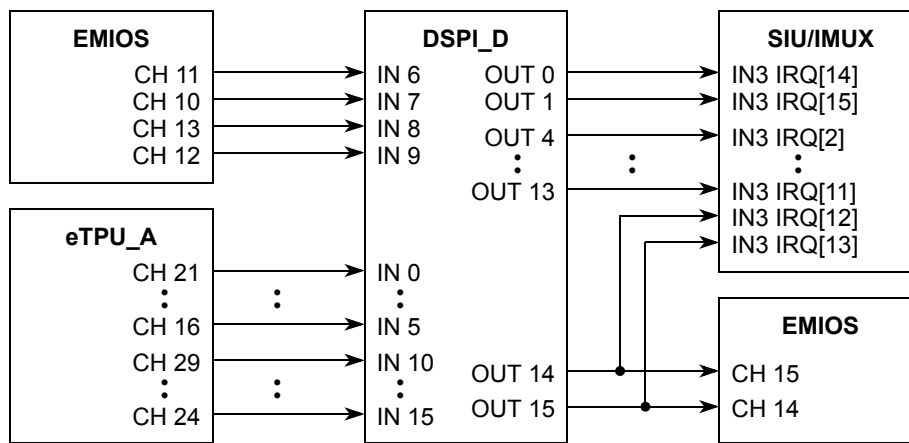


Figure 21-23. DSPI_D Connectivity

[Table 21-21](#) lists the DSPI_D connections.

Table 21-21. DSPI_D Connectivity Table

Connected to:	DSPI_D IN[n]	DSPI_D OUT[n]	Connected to:
eTPU_A Output Channel 21	0	0	Input 3 on IMUX for External IRQ[14]
eTPU_A Output Channel 20	1	1	Input 3 on IMUX for External IRQ[15]
eTPU_A Output Channel 19	2	2	N/C
eTPU_A Output Channel 18	3	3	N/C
eTPU_A Output Channel 17	4	4	Input 3 on IMUX for External IRQ[2]
eTPU_A Output Channel 16	5	5	Input 3 on IMUX for External IRQ[3]
EMIOS Output Channel 11	6	6	Input 3 on IMUX for External IRQ[4]
EMIOS Output Channel 10	7	7	Input 3 on IMUX for External IRQ[5]
EMIOS Output Channel 13	8	8	Input 3 on IMUX for External IRQ[6]

Table 21-21. DSPI_D Connectivity Table (continued)

Connected to:	DSPI_D IN[n]	DSPI_D OUT[n]	Connected to:
EMIOS Output Channel 12	9	9	Input 3 on IMUX for External IRQ[7]
eTPU_A Output Channel 29	10	10	Input 3 on IMUX for External IRQ[8]
eTPU_A Output Channel 28	11	11	Input 3 on IMUX for External IRQ[9]
eTPU_A Output Channel 27	12	12	Input 3 on IMUX for External IRQ[10]
eTPU_A Output Channel 26	13	13	Input 3 on IMUX for External IRQ[11]
eTPU_A Output Channel 25	14	14	EMIOS Input Channel 15, Input 3 on IMUX for External IRQ[12]
eTPU_A Output Channel 24	15	15	EMIOS Input Channel 14, Input 3 on IMUX for External IRQ[13]

21.4.4.7 Multiple Transfer Operation (MTO)

In DSI configuration the MTO feature allows for multiple DSPIs within the MCU to be chained together in a parallel or serial configuration. The parallel chaining allows multiple DSPIs internal to the MCU and multiple SPI devices external to the MCU to share SCK and PCS signals thereby saving pins. The serial chaining allows bits from multiple DSPIs to be concatenated into a single DSI frame. MTO is enabled by setting the MTOE bit in the DSPIx_DSICR.

In parallel and serial chaining there is one bus master and multiple bus slaves. The bus master initiates and controls the transfers, but the DSPI slaves generate trigger signals for the bus DSPI master when an internal condition in the slave warrants a transfer. The DSPI slaves also propagate triggers from other slaves to the master. When a DSPI slave detects a trigger signal on its *ht* input, the slave generates a trigger signal on the $\overline{\text{MTRIG}}$ output.

The SIU_DISR must be configured to use serial or parallel chaining.

21.4.4.7.1 Internal Muxing/SIU Support for Serial and Parallel Chaining

To support MTO, each DSPI in the device has multiplexers on the SINx, SSx, SCKx, and *ht* inputs. The internal multiplexers are controlled by registers in the SIU block. Refer to [Section 6.4.5.3, “Multiplexed Inputs for DSPI Multiple Transfer Operation.”](#)

[Figure 21-24](#) shows DSPI_B and the multiplexers in the IMUX subblock of the SIU. The SOUTx, $\overline{\text{MTRIG}}$, SCKx and PCSx0 outputs from the other two DSPIs connect to the multiplexers on the DSPI_B inputs. DSPI_B, DSPI_C and DSPI_D have similar multiplexers on their inputs.

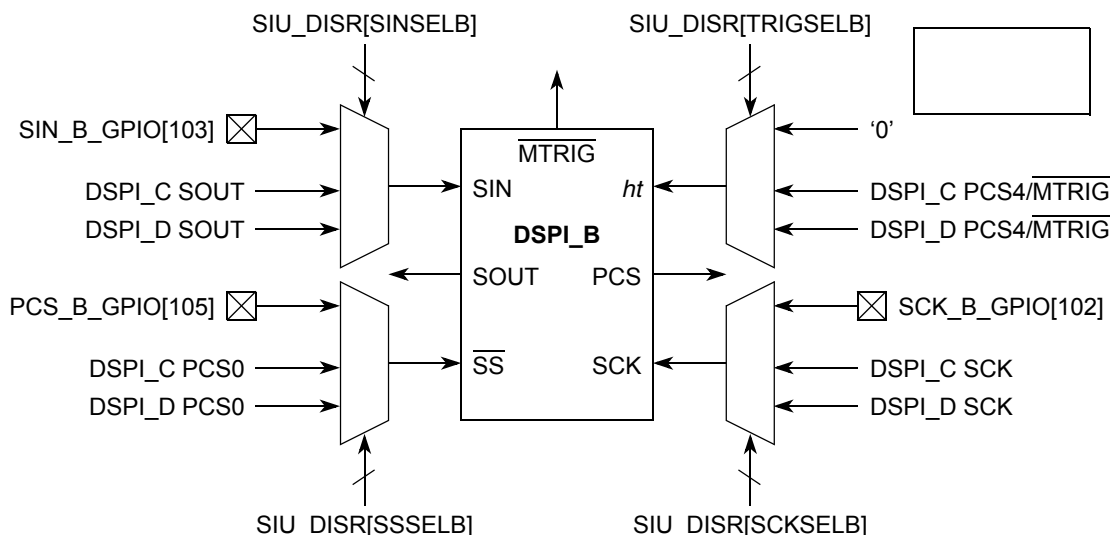


Figure 21-24. DSPI Input Select Muxes

The source for the SIN_x input of a DSPI can be a pin or the $SOUT_x$ of any of the other two DSPIs. The source for the \overline{SS}_x input of a DSPI can be a pin or the PCS_x0 signal from any of the other DSPIs. The source for the SCK_x input of a DSPI can be a pin or the SCK_x output of any of the other DSPIs. The source for the hardware trigger (ht) input can be the \overline{MTRIG} signal from any of the other DSPIs. The DSPI input select register (SIU_DSR) selects the source for each DSPI SIN_x , \overline{SS}_x , SCK_x , and ht signal individually.

21.4.4.7.2 Parallel Chaining

Parallel chaining allows the PCS_x and SCK_x signals from a master DSPI to be shared by internal slave DSPIs and external slave SPI devices. Signal sharing reduces DSPI pin utilization. An example of a parallel chain is shown in [Figure 21-25](#).

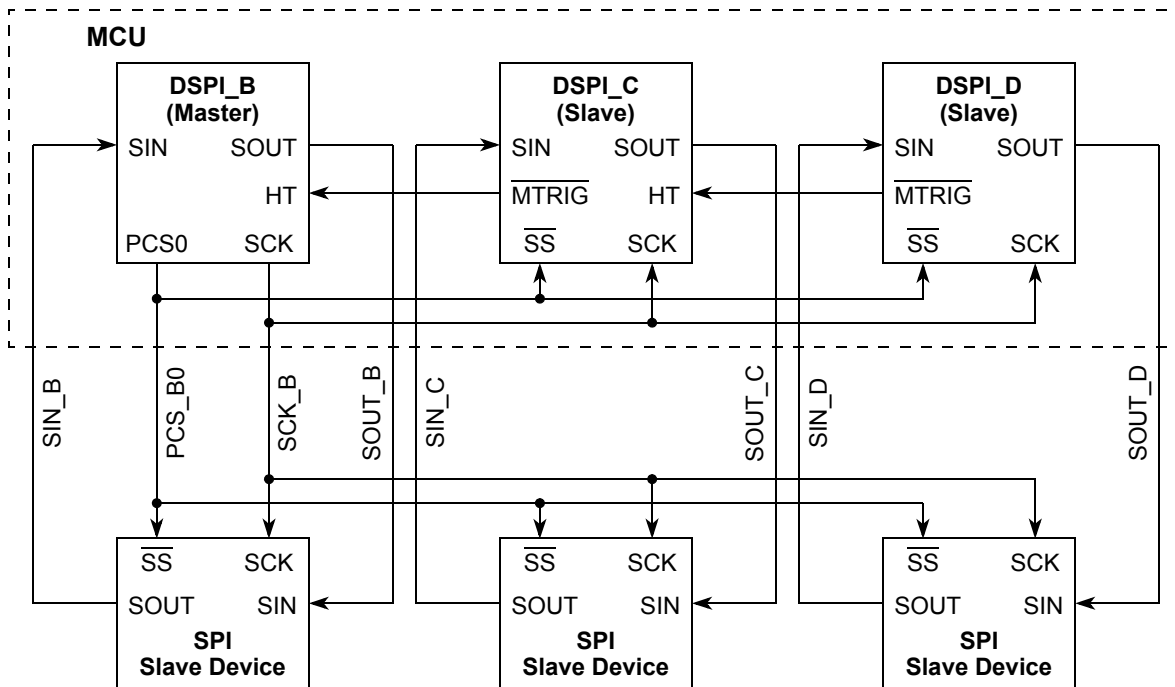


Figure 21-25. Example of Parallel Chaining of DSPIs

In the parallel chaining example, the SOUT_x and SIN_x of the DSPIs connect to separate external SPI devices. All internal and external SPI modules share PCS_x and SCK_x signals. DSPI_B controls and initiates all transfers, but the DSPI slaves each have a trigger output signal MTRIG that indicates to DSPI_B that a trigger condition has occurred in the DSPI slaves.

When the slave DSPI has a change in data to be serialized, it asserts the MTRIG signal that propagates to DSPI_B which initiates the transfer.

The MTOCNT field in the DSPI_x_DSICR must be written with the number of bits to be transferred. In parallel chaining the number written to MTOCNT must match the FMSZ field in the selected DSPI_x_CTAR.

21.4.4.7.3 Serial Chaining

Serial chaining allows transfers of DSI frames consisting of concatenated bits from multiple DSPIs. The concatenated frames can be from 8 to 64 bits long. Figure 21-26 shows an example of how the modules can be connected.

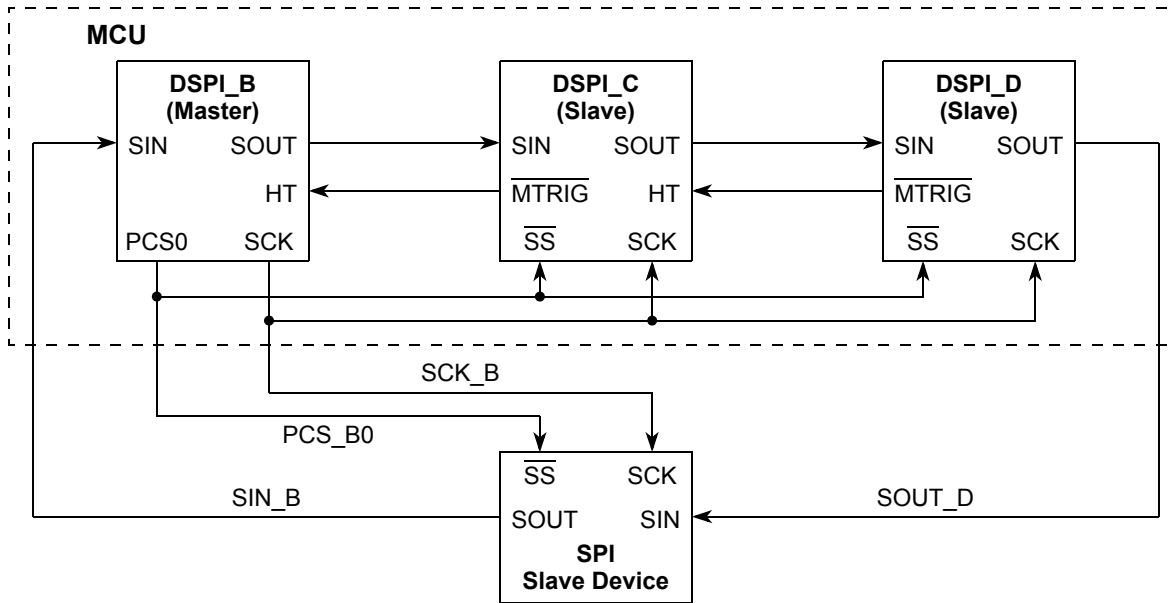


Figure 21-26. Example of Serial Chaining of DSPIs

In the MCU (master), the SOUT of DSPI_B is connected to the SIN of DSPI_C (slave). The SOUT of the DSPI_C (slave) is connected to the SIN input of the DSPI_D and so on (slave). The SOUT of the last on-chip DSPI slave is connected to the SIN of the external SPI slave. The SOUT of the external SPI slave is connected to the SIN of DSPI_B master.

The DSPI_B master controls and initiates all transfers, but the slave DSPIs use the trigger output signal $\overline{\text{MTRIG}}$ to indicate to the DSPI_B master that a trigger condition has occurred. When an on-chip DSPI slave has a change in data to be serialized it can assert the $\overline{\text{MTRIG}}$ signal to the DSPI master which initiates the transfer. When a DSPI slave has its *ht* signal asserted it will assert its $\overline{\text{MTRIG}}$ signal thereby propagating trigger signals from other DSPI slaves to the DSPI master.

The MTOCNT field in the DSPIx_DSICR must be written with the total number of bits to be transferred. The MTOCNT field must equal the sum of all FMSZ fields in the selected DSPIx_CTARs for the DSPI master and all DSPI slaves. For example if one 16-bit DSI frame is created by concatenating 8 bits from the DSPI master, and 4 bits from each of the DSPI slaves in Figure 21-26, the DSPI master's frame size must be set to eight in the FMSZ field, and the DSPI slaves' frame size must be set to four. The largest DSI frame supported by the MTOCNT field is 48 bits. Any number of DSPIs can be connected together to concatenate DSI frames, as long as each DSPI transfers a minimum of 4 bits and a maximum of 16 bits and the total size of the concatenated frame is less than or equal to 48 bits long.

21.4.5 Combined Serial Interface (CSI) Configuration

In master mode, the CSI configuration of the DSPI is used to support SPI and DSI functions on a frame by frame basis. CSI configuration allows interleaving of DSI data frames from the parallel input signals (from the eTPU or eMIOS) with SPI commands and data from the TX FIFO. The data returned from the bus slave is either used to drive the parallel output signals (to the eTPU or eMIOS) or is stored in the RX FIFO. CSI configuration allows serialized data and configuration or diagnostic data to be transferred to a slave device using only one serial link. The DSPI is in CSI configuration when the DCONF field in the DSPIx_MCR

is 0b10. Figure 21-27 shows an example of how a DSPI can be used with a deserializing peripheral that supports SPI control for control and diagnostic frames.

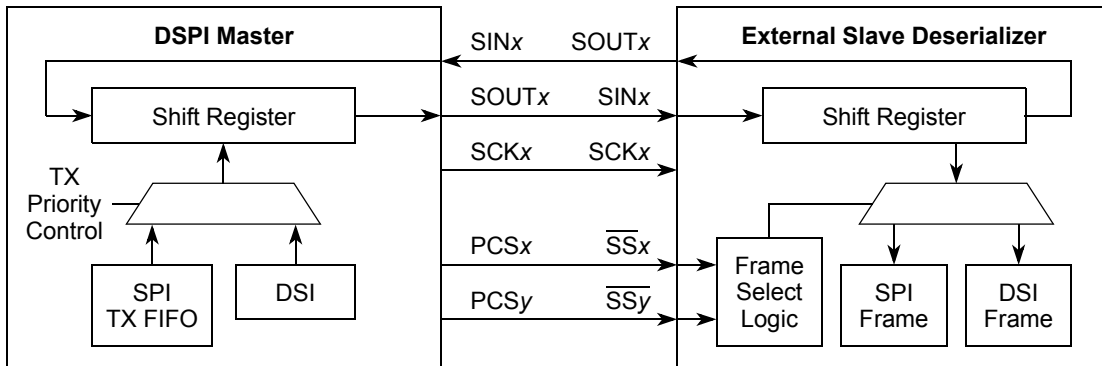


Figure 21-27. Example of System using DSPI in CSI Configuration

In CSI configuration the DSPI transfers DSI data based on Section 21.4.4.5, “DSI Transfer Initiation Control.” When there are SPI commands in the TX FIFO, the SPI data has priority over the DSI frames. When the TX FIFO is empty, DSI transfer resumes.

Two peripheral chip select signals indicate whether DSI data or SPI data is transmitted. The user must configure the DSPI so that the two CTARs associated with DSI data and SPI data assert different peripheral chip select signals denoted in the figure as PCSx and PCSy. The CSI configuration is only supported in master mode.

Data returned from the external slave while a DSI frame is transferred is placed on the parallel output signals. Data returned from the external slave while an SPI frame is transferred is moved to the RX FIFO. The TX FIFO and RX FIFO are fully functional in CSI mode.

21.4.5.1 CSI Serialization

Serialization in the CSI configuration is similar to serialization in DSI configuration. The transfer attributes for SPI frames are determined by the DSPIx_CTAR selected by the CTAS field in the SPI command halfword. The transfer attributes for the DSI frames are determined by the DSPIx_CTAR selected by the DSICTAS field in the DSPIx_DSICR. Figure 21-28 shows the CSI serialization logic.

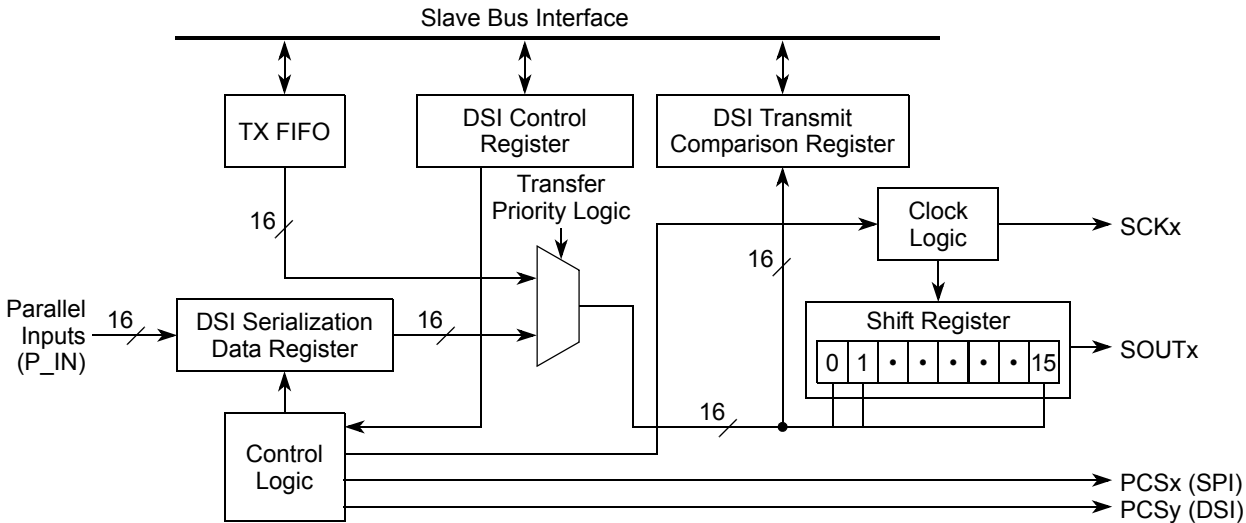


Figure 21-28. CSI Serialization Diagram

The parallel inputs signal states are latched into the DSPIx_SDR on the rising edge of every system clock and serialized based on the transfer initiation control settings in the DSPIx_DSICR. For more information on the DSPIx_SDR, refer to [Section 21.3.2.11, “DSPI DSI Serialization Data Register \(DSPIx_SDR\).”](#) SPI frames written to the TX FIFO have priority over DSI data from the DSPIx_SDR and are transferred at the next frame boundary. A copy of the most recently transferred DSI frame is stored in the DSPIx_COMPR. The transfer priority logic selects the source of the serialized data and asserts the appropriate CS signal.

21.4.5.2 CSI Deserialization

The deserialized frames in CSI configuration go into the DSPIx_SDR or the RX FIFO based on the transfer priority logic. When DSI frames are transferred the returned frames are deserialized and latched into the DSPIx_DDR. When SPI frames are transferred the returned frames are deserialized and written to the RX FIFO. [Figure 21-29](#) shows the CSI deserialization logic.

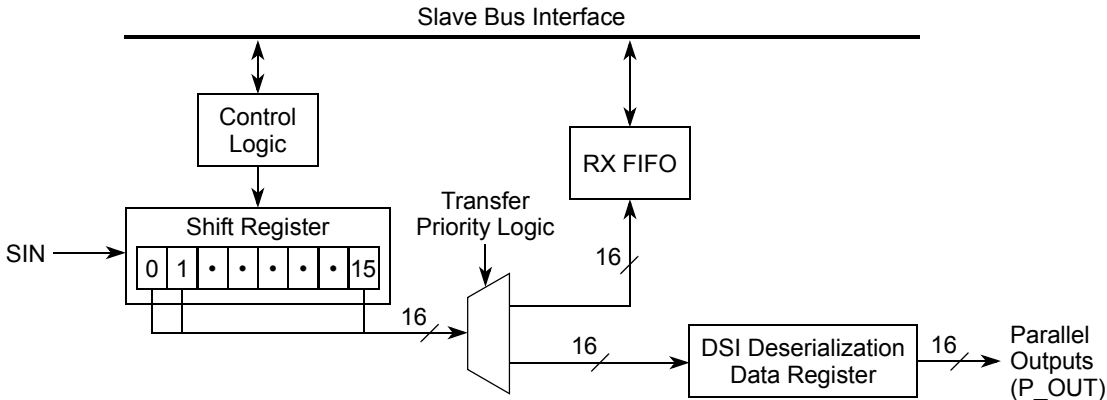


Figure 21-29. CSI Deserialization Diagram

21.4.6 DSPI Baud Rate and Clock Delay Generation

The SCK_x frequency and the delay values for serial transfer are generated by dividing the system clock frequency by a prescaler and a scaler with the option of doubling the baud rate. Figure 21-30 shows conceptually how the SCK signal is generated.




Figure 21-30. Communications Clock Prescalers and Scalers

21.4.6.1 Baud Rate Generator

The baud rate is the frequency of the serial communication clock (SCK_x). The system clock is divided by a baud rate prescaler (defined by DSPI_x_CTAR[PBR]) and baud rate scaler (defined by DSPI_x_CTAR[BR]) to produce SCK_x with the possibility of doubling the baud rate. The DBR, PBR, and BR fields in the DSPI_x_CTARs select the frequency of SCK_x using the following formula:

$$\text{SCK baud rate} = \frac{f_{\text{SYS}}}{\text{PBRPrescalerValue}} \times \frac{1 + \text{DBR}}{\text{BRScalerValue}}$$

Table 21-22 shows an example of a computed baud rate.

Table 21-22. Baud Rate Computation Example

f _{SYS}	PBR	Prescaler Value	BR	Scaler Value	DBR Value	Baud Rate
100 MHz	0b00	2	0b0000	2	0	25 Mb/s
20 MHz	0b00	2	0b0000	2	1	10 Mb/s

21.4.6.2 PCS to SCK Delay (t_{CSC})

The PCS_x to SCK_x delay is the length of time from assertion of the PCS_x signal to the first SCK_x edge. See Figure 21-32 for an illustration of the PCS_x to SCK_x delay. The PCSSCK and CSSCK fields in the DSPI_x_CTAR_n registers select the PCS_x to SCK_x delay, and the relationship is expressed by the following formula:

$$t_{\text{CSC}} = \frac{1}{f_{\text{SYS}}} \times \text{PCSSCK} \times \text{CSSCK}$$

Table 21-23 shows an example of the computed PCS to SCK delay.

Table 21-23. PCS to SCK Delay Computation Example

PCSSCK	Prescaler Value	CSSCK	Scaler Value	f _{SYS}	PCS to SCK Delay
0b01	3	0b0100	32	100 MHz	0.96 μs

21.4.6.3 After SCK Delay (t_{ASC})

The after SCK x delay is the length of time between the last edge of SCK x and the negation of PCS x . See [Figure 21-32](#) and [Figure 21-33](#) for illustrations of the after SCK x delay. The PASC and ASC fields in the DSPI x_CTARn registers select the after SCK delay. The relationship between these variables is given in the following formula:

$$t_{ASC} = \frac{1}{f_{SYS}} \times PASC \times ASC$$

[Table 21-24](#) shows an example of the computed after SCK delay.

Table 21-24. After SCK Delay Computation Example

PASC	Prescaler Value	ASC	Scaler Value	Fsys	After SCK Delay
0b01	3	0b0100	32	100 MHz	0.96 us

21.4.6.4 Delay after Transfer (t_{DT})

The delay after transfer is the length of time between negation of the PCS x signal for a frame and the assertion of the PCS x signal for the next frame. See [Figure 21-32](#) for an illustration of the delay after transfer. The PDT and DT fields in the DSPI x_CTARn registers select the delay after transfer. The following formula expresses the PDT/DT/delay after transfer relationship:

$$t_{DT} = \frac{1}{f_{SYS}} \times PDT \times DT$$

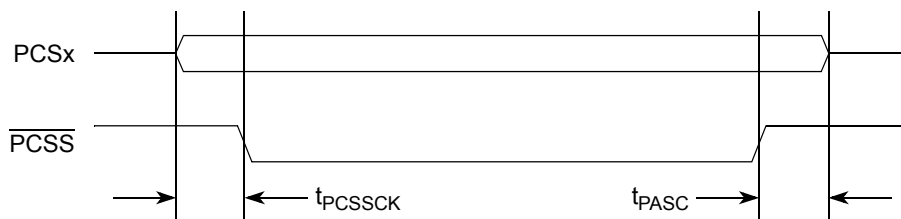
[Table 21-25](#) shows an example of the computed delay after transfer.

Table 21-25. Delay after Transfer Computation Example

PDT	Prescaler Value	DT	Scaler Value	f _{SYS}	Delay after Transfer
0b01	3	0b1110	32768	100 MHz	0.98 ms

21.4.6.5 Peripheral Chip Select Strobe Enable (\overline{PCSS})

The \overline{PCSS} signal provides a delay to allow the PCS x signals to settle after transitioning thereby avoiding glitches. When the DSPI is in master mode and PCSSE bit is set in the DSPI x_MCR , \overline{PCSS} provides a signal for an external demultiplexer to decode the PCS x [0:4] signals into as many as 32 glitch-free PCS x signals. [Figure 21-31](#) shows the timing of the \overline{PCSS} signal relative to PCS signals.


Figure 21-31. Peripheral Chip Select Strobe Timing

The delay between the assertion of the PCS_x signals and the assertion of $\overline{\text{PCSS}}$ is selected by the PCSSCK field in the DSPI_x_CTAR based on the following formula:

$$t_{\text{PCSSCK}} = \frac{1}{f_{\text{SYS}}} \times \text{PCSSCK}$$

At the end of the transfer the delay between $\overline{\text{PCSS}}$ negation and PCS_x negation is selected by the PASC field in the DSPI_x_CTAR based on the following formula:

$$t_{\text{PASC}} = \frac{1}{f_{\text{SYS}}} \times \text{PASC}$$

Table 21-26 shows an example of the computed t_{PCSSCK} delay.

Table 21-26. Peripheral Chip Select Strobe Assert Computation Example

PCSSCK	Prescaler	f _{SYS}	Delay before Transfer
0b11	7	100 MHz	70.0 ns

Table 21-27 shows an example of the computed the t_{PASC} delay

Table 21-27. Peripheral Chip Select Strobe Negate Computation Example

PASC	Prescaler	f _{SYS}	Delay after Transfer
0b11	7	100 MHz	70.0 ns

21.4.7 Transfer Formats

The SPI serial communication is controlled by the serial communications clock (SCK_x) signal and the PCS_x signals. The SCK_x signal provided by the master device synchronizes shifting and sampling of the data by the SIN_x and SOUT_x pins. The PCS_x signals serve as enable signals for the slave devices.

When the DSPI is the bus master, the CPOL and CPHA bits in the DSPI clock and transfer attributes registers (DSPI_x_CTAR_n) select the polarity and phase of the serial clock, SCK_x. The polarity bit selects the idle state of the SCK_x. The clock phase bit selects if the data on SOUT_x is valid before or on the first SCK_x edge.

When the DSPI is the bus slave, CPOL and CPHA bits in the DSPI_x_CTAR₀ (SPI slave mode) or DSPI_x_CTAR₁ (DSI slave mode) select the polarity and phase of the serial clock. Even though the bus

slave does not control the SCK signal, clock polarity, clock phase and number of bits to transfer must be identical for the master device and the slave device to ensure proper transmission.

The DSPI supports four different transfer formats:

- Classic SPI with CPHA = 0
- Classic SPI with CPHA = 1
- Modified transfer format with CPHA = 0
- Modified transfer format with CPHA = 1

A modified transfer format is supported to allow for high-speed communication with peripherals that require longer setup times. The DSPI can sample the incoming data later than halfway through the cycle to give the peripheral more setup time. The MTFE bit in the DSPIx_MCR selects between classic SPI format and modified transfer format. The classic SPI formats are described in [Section 21.4.7.1, “Classic SPI Transfer Format \(CPHA = 0\)”](#) and [Section 21.4.7.2, “Classic SPI Transfer Format \(CPHA = 1\)”](#). The modified transfer formats are described in [Section 21.4.7.3, “Modified SPI/DSI Transfer Format \(MTFE = 1, CPHA = 0\)”](#) and [Section 21.4.7.4, “Modified SPI/DSI Transfer Format \(MTFE = 1, CPHA = 1\)”](#).

In the SPI and DSI configurations, the DSPI provides the option of keeping the PCS signals asserted between frames. See [Section 21.4.7.5, “Continuous Selection Format”](#) for details.

21.4.7.1 Classic SPI Transfer Format (CPHA = 0)

The transfer format shown in [Figure 21-32](#) is used to communicate with peripheral SPI slave devices where the first data bit is available on the first clock edge. In this format, the master and slave sample their SINx pins on the odd-numbered SCKx edges and change the data on their SOUTx pins on the even-numbered SCKx edges.

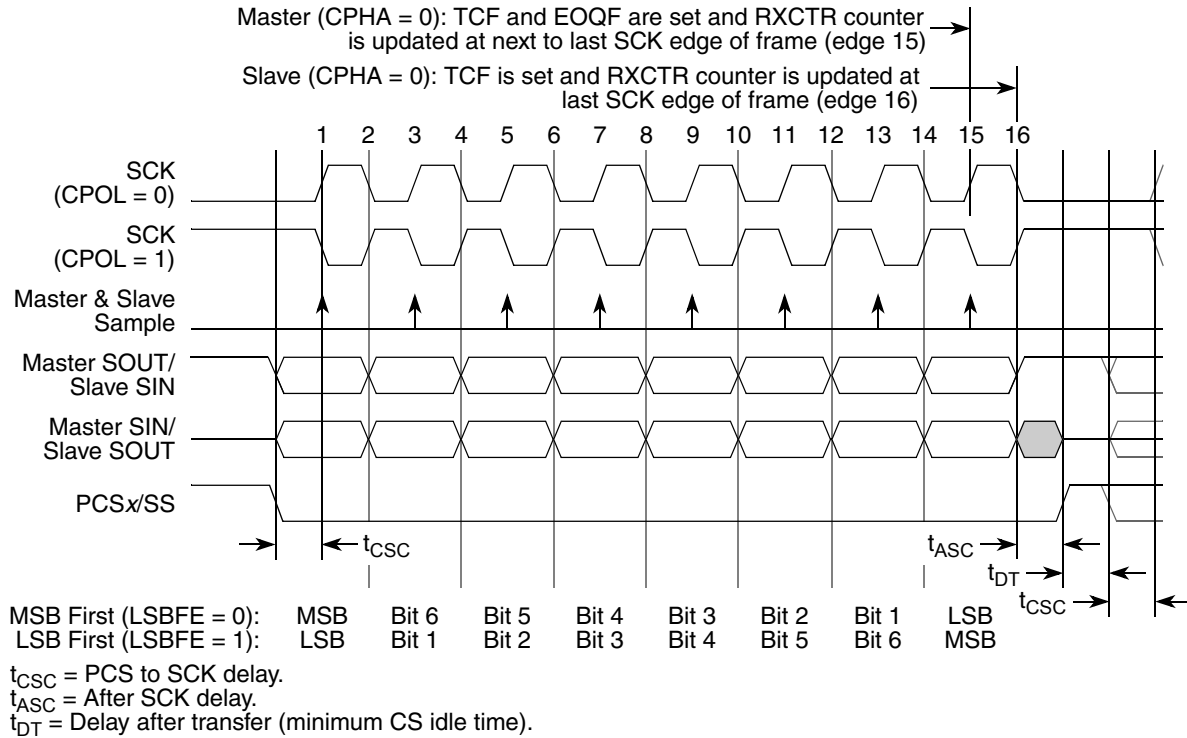


Figure 21-32. DSPI Transfer Timing Diagram (MTFE = 0, CPHA = 0, FMSZ = 8)

The master initiates the transfer by placing its first data bit on the SOUT_x pin and asserting the appropriate peripheral chip select signals to the slave device. The slave responds by placing its first data bit on its SOUT_x pin. After the t_{CSC} delay has elapsed, the master outputs the first edge of SCK_x. This is the edge used by the master and slave devices to sample the first input data bit on their serial data input signals. At the second edge of the SCK_x the master and slave devices place their second data bit on their serial data output signals. For the rest of the frame the master and the slave sample their SIN_x pins on the odd-numbered clock edges and changes the data on their SOUT_x pins on the even-numbered clock edges. After the last clock edge occurs a delay of t_{ASC} is inserted before the master negates the PCS signals. A delay of t_{DT} is inserted before a new frame transfer can be initiated by the master.

For the CPHA = 0 condition of the master, TCF and EOQF are set and the RXCTR counter is updated at the next to last serial clock edge of the frame (edge 15) of Figure 21-32.

For the CPHA=0 condition of the slave, TCF is set and the RXCTR counter is updated at the last serial clock edge of the frame (edge 16) of Figure 21-32.

21.4.7.2 Classic SPI Transfer Format (CPHA = 1)

This transfer format shown in Figure 21-33 is used to communicate with peripheral SPI slave devices that require the first SCK_x edge before the first data bit becomes available on the slave SOUT pin. In this format the master and slave devices change the data on their SOUT_x pins on the odd-numbered SCK_x edges and sample the data on their SIN_x pins on the even-numbered SCK_x edges.

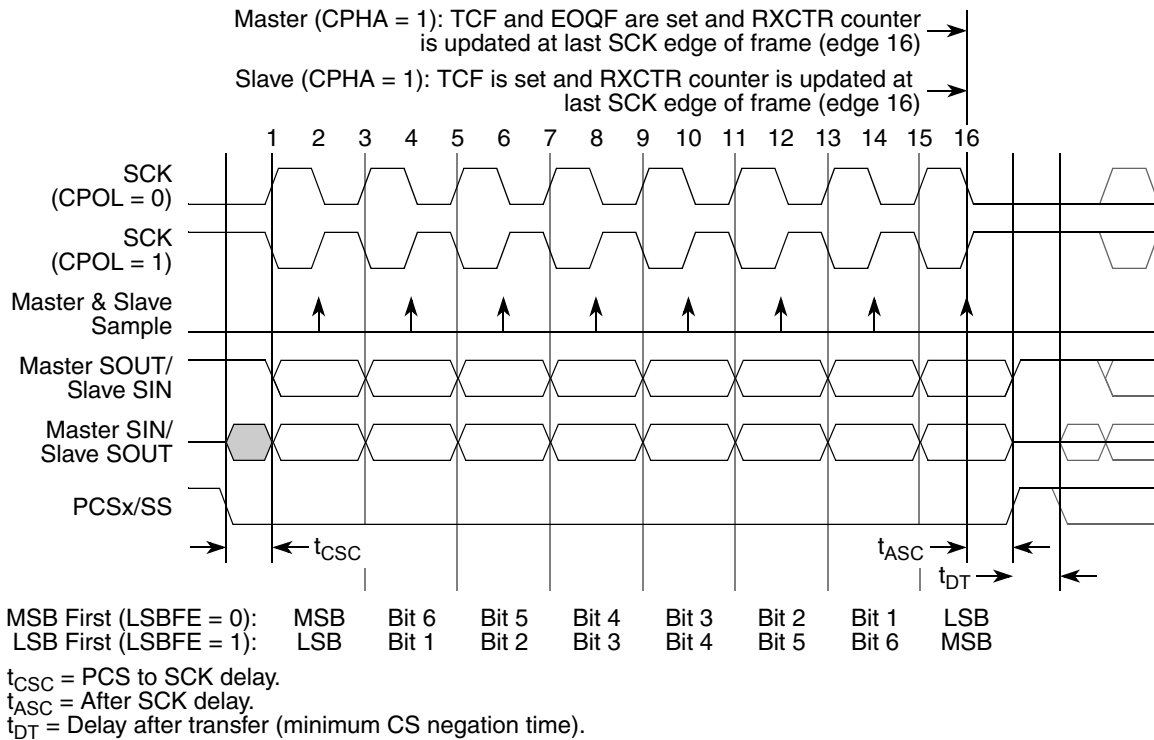


Figure 21-33. DSPI Transfer Timing Diagram (MTFE = 0, CPHA = 1, FMSZ = 8)

The master initiates the transfer by asserting the PCSx signal to the slave. After the t_{CSC} delay has elapsed, the master generates the first SCKx edge and at the same time places valid data on the master SOUTx pin. The slave responds to the first SCKx edge by placing its first data bit on its slave SOUTx pin.

At the second edge of the SCKx the master and slave sample their SINx pins. For the rest of the frame the master and the slave change the data on their SOUTx pins on the odd-numbered clock edges and sample their SINx pins on the even-numbered clock edges. After the last clock edge occurs a delay of t_{ASC} is inserted before the master negates the PCSx signal. A delay of t_{DT} is inserted before a new frame transfer can be initiated by the master.

For CPHA=1 the master EOQF and TCF and slave TCF are set at the last serial clock edge (edge 16) of Figure 21-33. For CPHA=1 the master and slave RXCTR counters are updated on the same clock edge.

21.4.7.3 Modified SPI/DSI Transfer Format (MTFE = 1, CPHA = 0)

In this modified transfer format both the master and the slave sample later in the SCK period than in classic SPI mode to allow for delays in device pads and board traces. These delays become a more significant fraction of the SCK period as the SCK period decreases with increasing baud rates.

NOTE

For correct operation of the modified transfer format, the user must thoroughly analyze the SPI link timing budget.

The master and the slave place data on the SOUTx pins at the assertion of the PCSx signal. After the PCSx to SCKx delay has elapsed the first SCKx edge is generated. The slave samples the master SOUTx signal

on every odd numbered SCK_x edge. The slave also places new data on the slave SOUT_x on every odd numbered clock edge.

The master places its second data bit on the SOUT_x line one system clock after odd numbered SCK_x edge. The point where the master samples the slave SOUT_x is selected by writing to the SMPL_PT field in the DSPI_x_MCR. Table 21-28 lists the number of system clock cycles between the active edge of SCK_x and the master sample point for different values of the SMPL_PT bit field. The master sample point can be delayed by one or two system clock cycles.

Table 21-28. Delayed Master Sample Point

SMPL_PT	Number of System Clock Cycles between Odd-numbered Edge of SCK and Sampling of SIN
00	0
01	1
10	2
11	Reserved

Figure 21-34 shows the modified transfer format for CPHA = 0. Only the condition where CPOL = 0 is illustrated. The delayed master sample points are indicated with a lighter shaded arrow.

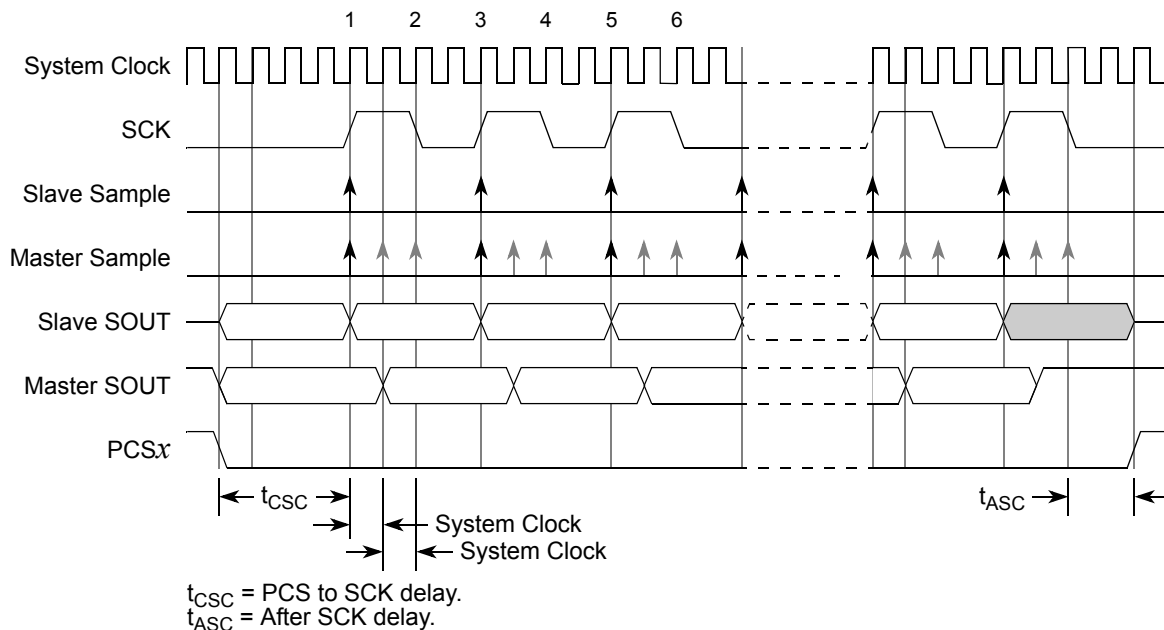


Figure 21-34. DSPI Modified Transfer Format (MTFE = 1, CPHA = 0, F_{sck} = F_{sys}/4)

21.4.7.4 Modified SPI/DSI Transfer Format (MTFE = 1, CPHA = 1)

Figure 21-35 shows the modified transfer format for CPHA = 1. Only the condition where CPOL = 0 is described. At the start of a transfer the DSPI asserts the PCS signal to the slave device. After the PCS to SCK delay has elapsed the master and the slave put data on their SOUT pins at the first edge of SCK. The slave samples the master SOUT signal on the even numbered edges of SCK. The master samples the slave

SOUT signal on the odd numbered SCK edges starting with the 3rd SCK edge. The slave samples the last bit on the last edge of the SCK. The master samples the last slave SOUT bit one half SCK cycle after the last edge of SCK. No clock edge will be visible on the master SCK pin during the sampling of the last bit. The SCK to PCS delay must be greater or equal to half of the SCK period.

NOTE

For correct operation of the modified transfer format, the user must thoroughly analyze the SPI link timing budget.

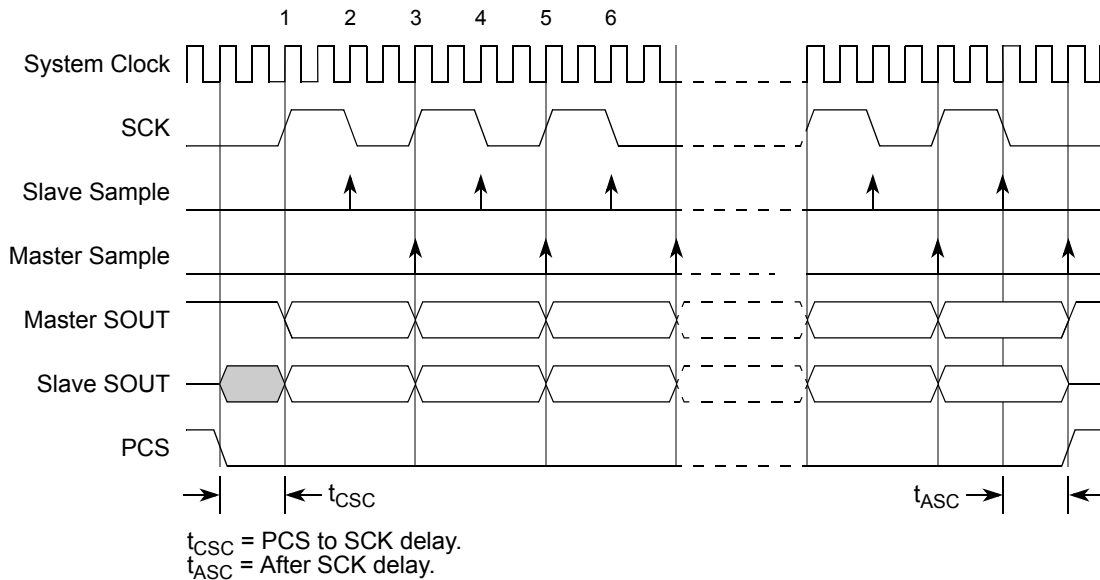


Figure 21-35. DSPI Modified Transfer Format (MTFE = 1, CPHA = 1, F_{sck} = F_{sys}/4)

21.4.7.5 Continuous Selection Format

Some peripherals must be deselected between every transfer. Other peripherals must remain selected between several sequential serial transfers. The continuous selection format provides the flexibility to handle both cases. The continuous selection format is enabled for the SPI configuration by setting the CONT bit in the SPI command. Continuous selection is enabled for the DSI configuration by setting the DCONT bit in the DSPIx_DSICR. The behavior of the PCS signals in the two configurations is identical so only SPI configuration will be described.

When the CONT bit = 0, the DSPI drives the asserted chip select signals to their idle states in between frames. The idle states of the chip select signals are selected by the PCSIS field in the DSPIx_MCR. [Figure 21-36](#) shows the timing diagram for two four-bit transfers with CPHA = 1 and CONT = 0.

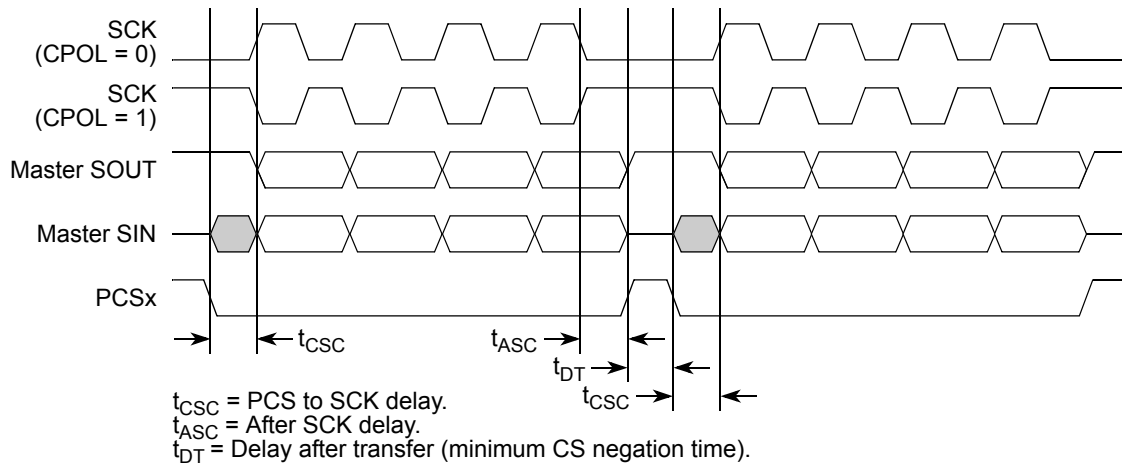


Figure 21-36. Example of Non-Continuous Format (CPHA=1, CONT=0)

When the $CONT = 1$ and the PCS signal for the next transfer is the same as for the current transfer, the PCS signal remains asserted for the duration of the two transfers. The delay between transfers (t_{DT}) is not inserted between the transfers. Figure 21-37 shows the timing diagram for two four-bit transfers with $CPHA = 1$ and $CONT = 1$.

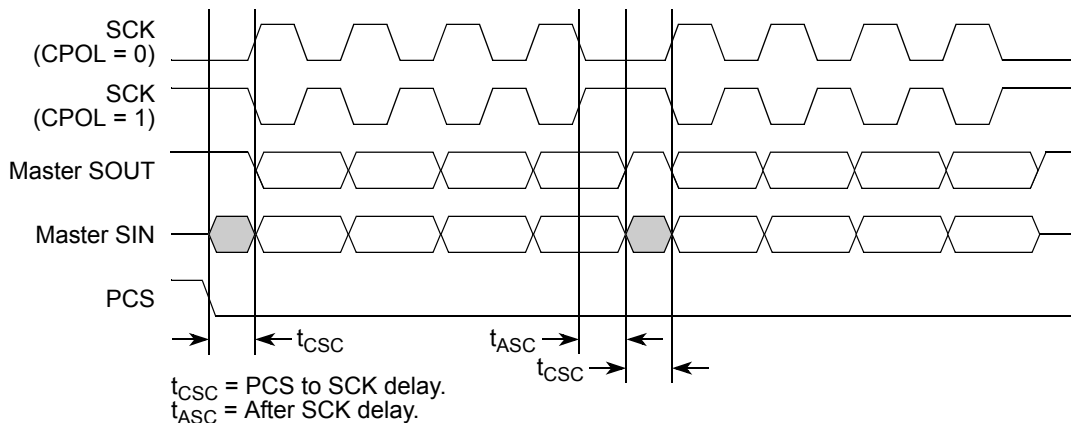


Figure 21-37. Example of Continuous Transfer (CPHA = 1, CONT = 1)

In Figure 21-37, note that the period length at the start of the next transfer is the sum of t_{ASC} and t_{CSC} ; i.e., it does not include a half-clock period. The default settings for these provide a total of four system clocks. In many situations, t_{ASC} and t_{CSC} must be increased if a full half-clock period is required.

Switching CTARs between frames while using continuous selection can cause errors in the transfer. The PCS signal must be negated before CTAR is switched.

When the $CONT$ bit = 1 and the PCS signals for the next transfer are different from the present transfer, the PCS signals behave as if the $CONT$ bit was not set.

21.4.7.6 Clock Polarity Switching between DSPI Transfers

If it is desired to switch polarity between non-continuous DSPI frames, the edge generated by the change in the idle state of the clock occurs one system clock before the assertion of the chip select for the next frame. In Figure 21-38, time ‘A’ shows the one clock interval. Time ‘B’ is user programmable from a minimum of 2 system clocks. Refer to Section 21.3.2.3, “DSPI Clock and Transfer Attributes Registers 0–7 (DSPIx_CTARn).”

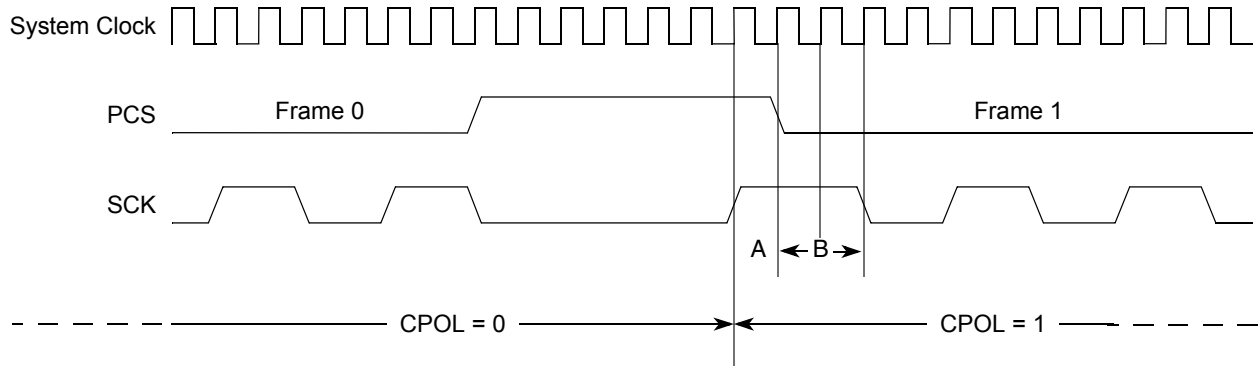


Figure 21-38. Polarity Switching between Frames

21.4.8 Continuous Serial Communications Clock

The DSPI provides the option of generating a continuous SCK signal for slave peripherals that require a continuous clock.

Continuous SCK is enabled by setting the CONT_SCKE bit in the DSPIx_MCR. Continuous SCK is valid in all configurations.

Continuous SCK is only supported for CPHA = 1. Setting CPHA = 0 will be ignored if the CONT_SCKE bit is set. Continuous SCK is supported for modified transfer format.

Clock and transfer attributes for the continuous SCK mode are set according to the following rules:

- When the DSPI is in SPI configuration, CTAR0 shall be used initially. At the start of each SPI frame transfer, the CTAR specified by the CTAS for the frame shall be used.
- When the DSPI is in DSI configuration, the CTAR specified by the DSICTAS field shall be used at all times.
- When the DSPI is in CSI configuration, the CTAR selected by the DSICTAS field shall be used initially. At the start of an SPI frame transfer, the CTAR specified by the CTAS value for the frame shall be used. At the start of a DSI frame transfer, the CTAR specified by the DSICTAS field shall be used.
- In all configurations, the currently selected CTAR shall remain in use until the start of a frame with a different CTAR specified, or the continuous SCK mode is terminated.

It is recommended that the baud rate is the same for all transfers made while using the continuous SCK. Switching clock polarity between frames while using continuous SCK can cause errors in the transfer. Continuous SCK operation is not guaranteed if the DSPI is put into module disable mode.

Enabling continuous SCK disables the PCS to SCK delay and the After SCK delay. The delay after transfer is fixed at one SCK cycle. [Figure 21-39](#) shows timing diagram for continuous SCK format with continuous selection disabled.

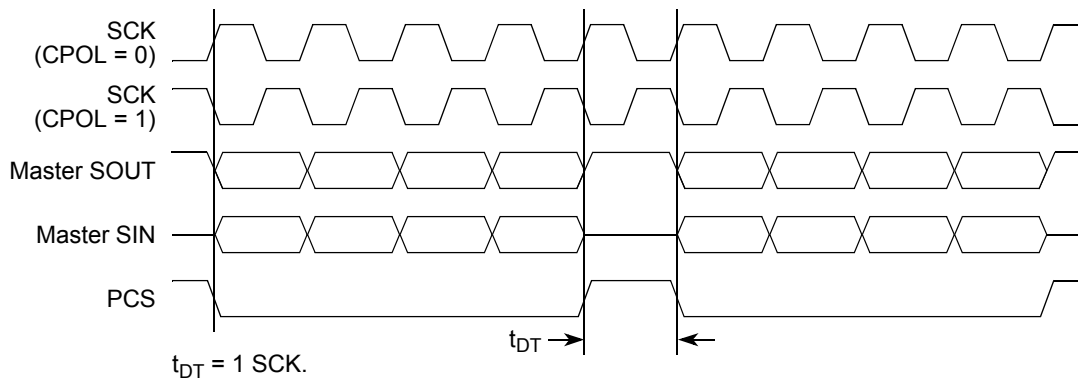


Figure 21-39. Continuous SCK Timing Diagram (CONT= 0)

If the CONT bit in the TX FIFO entry is set or the DCONT in the DSPLx_DSICR is set, PCS remains asserted between the transfers when the PCS signal for the next transfer is the same as for the current transfer. [Figure 21-40](#) shows timing diagram for continuous SCK format with continuous selection enabled.

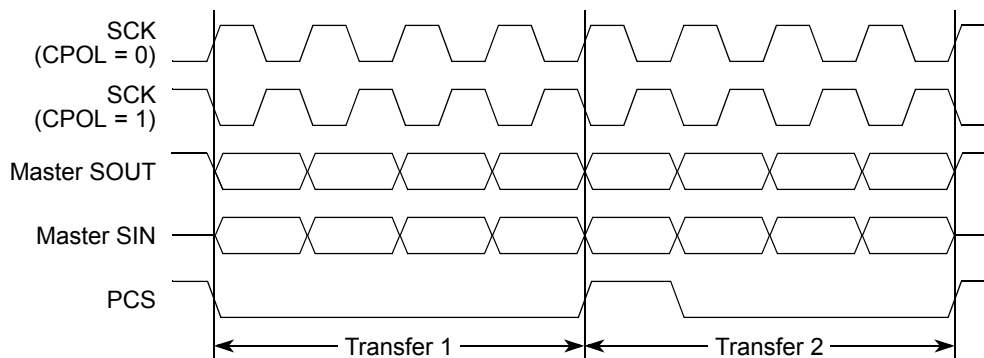


Figure 21-40. Continuous SCK Timing Diagram (CONT=1)

21.4.9 Interrupts/DMA Requests

The DSPI has five conditions which can only generate interrupt requests and two conditions that can generate interrupt or DMA request. [Table 21-29](#) lists the six conditions.

Table 21-29. Interrupt and DMA Request Conditions

Condition	Flag	Interrupt	DMA
End of transfer queue has been reached (EOQ)	EOQF	X	
TX FIFO is not full	TFFF	X	X
Current frame transfer is complete	TCF	X	
TX FIFO underflow has occurred	TFUF	X	

Table 21-29. Interrupt and DMA Request Conditions (continued)

Condition	Flag	Interrupt	DMA
RX FIFO is not empty	RFDF	X	X
RX FIFO overflow has occurred	RFOF	X	
A FIFO overrun has occurred ¹	TFUF OR RFOF	X	

¹ The FIFO Overrun condition is created by OR-ing the TFUF and RFOF flags together.

Each condition has a flag bit and a request enable bit. The flag bits are described in the [Section 21.3.2.4, “DSPI Status Register \(DSPIx_SR\)”](#) and the request enable bits are described in the [Section 21.3.2.5, “DSPI DMA/Interrupt Request Select and Enable Register \(DSPIx_RSER\).”](#) The TX FIFO fill flag (TFFF) and RX FIFO drain flag (RFDF) generate interrupt requests or DMA requests depending on the TFFF_DIRS and RFDF_DIRS bits in the DSPIx_RSER.

21.4.9.1 End of Queue Interrupt Request (EOQF)

The end of queue request indicates that the end of a transmit queue is reached. The end of queue request is generated when the EOQ bit in the executing SPI command is asserted and the EOQF_RE bit in the DSPIx_RSER is asserted. See the EOQ bit description in [Section 21.3.2.4, “DSPI Status Register \(DSPIx_SR\).”](#) Refer to [Figure 21-32](#) and [Figure 21-33](#) that illustrate when EOQF is set.

21.4.9.2 Transmit FIFO Fill Interrupt or DMA Request (TFFF)

The transmit FIFO fill request indicates that the TX FIFO is not full. The transmit FIFO fill request is generated when the number of entries in the TX FIFO is less than the maximum number of possible entries, and the TFFF_RE bit in the DSPIx_RSER is asserted. The TFFF_DIRS bit in the DSPIx_RSER selects whether a DMA request or an interrupt request is generated.

21.4.9.3 Transfer Complete Interrupt Request (TCF)

The transfer complete request indicates the end of the transfer of a serial frame. The transfer complete request is generated at the end of each frame transfer when the TCF_RE bit is set in the DSPIx_RSER. See the TCF bit description in [Section 21.3.2.4, “DSPI Status Register \(DSPIx_SR\).”](#) Refer to [Figure 21-32](#) and [Figure 21-33](#) that illustrate when TCF is set.

21.4.9.4 Transmit FIFO Underflow Interrupt Request (TFUF)

The transmit FIFO underflow request indicates that an underflow condition in the TX FIFO has occurred. The transmit underflow condition is detected only for DSPI modules operating in slave mode and SPI configuration. The TFUF bit is set when the TX FIFO of a DSPI operating in slave mode and SPI configuration is empty, and a transfer is initiated from an external SPI master. If the TFUF bit is set while the TFUF_RE bit in the DSPIx_RSER is asserted, an interrupt request is generated.

21.4.9.5 Receive FIFO Drain Interrupt or DMA Request (RFDF)

The receive FIFO drain request indicates that the RX FIFO is not empty. The receive FIFO drain request is generated when the number of entries in the RX FIFO is not zero, and the RFDF_RE bit in the DSPIx_RSER is asserted. The RFDF_DIRS bit in the DSPIx_RSER selects whether a DMA request or an interrupt request is generated.

21.4.9.6 Receive FIFO Overflow Interrupt Request (RFOF)

The receive FIFO overflow request indicates that an overflow condition in the RX FIFO has occurred. A receive FIFO overflow request is generated when RX FIFO and shift register are full and a transfer is initiated. The RFOF_RE bit in the DSPIx_RSER must be set for the interrupt request to be generated.

Depending on the state of the ROOE bit in the DSPIx_MCR, the data from the transfer that generated the overflow is either ignored or shifted in to the shift register. If the ROOE bit is set, the incoming data is shifted in to the shift register. If the ROOE bit is negated, the incoming data is ignored.

21.4.9.7 FIFO Overrun Request (TFUF) or (RFOF)

The FIFO overrun request indicates that at least one of the FIFOs in the DSPI has exceeded its capacity. The FIFO overrun request is generated by logically OR'ing together the RX FIFO overflow and TX FIFO underflow signals.

21.4.10 Power Saving Features

The DSPI supports two power-saving strategies:

- Module disable mode—clock gating of non-memory mapped logic
- Clock gating of slave interface signals and clock to memory-mapped logic

21.4.10.1 Module Disable Mode

Module disable mode is a module-specific mode that the DSPI can enter to save power. Host software can initiate the module disable mode by writing a 1 to the MDIS bit in the DSPIx_MCR. In module disable mode, the DSPI is in a dormant state, but the memory mapped registers are still accessible. Certain read or write operations have a different affect when the DSPI is in the module disable mode. Reading the RX FIFO pop register will not change the state of the RX FIFO. Likewise, writing to the TX FIFO push register will not change the state of the TX FIFO. Clearing either of the FIFOs will not have any affect in the module disable mode. Changes to the DIS_TXF and DIS_RXF fields of the DSPIx_MCR will not have any affect in the module disable mode. In the module disable mode, all status bits and register flags in the DSPI will return the correct values when read, but writing to them will have no affect. Writing to the DSPIx_TCR during module disable mode will not have any affect. Interrupt and DMA request signals cannot be cleared while in the module disable mode.

21.4.10.2 Slave Interface Signal Gating

The DSPI's module enable signal is used to gate slave interface signals such as address, byte enable, read/write and data. This prevents toggling slave interface signals from consuming power unless the DSPI is accessed.

21.5 Initialization/Application Information

21.5.1 How to Change Queues

DSPI queues are not part of the DSPI module, but the DSPI includes features in support of queue management. Queues are primarily supported in SPI configuration. This section presents an example of how to change queues for the DSPI.

1. The last command word from a queue is executed. The EOQ bit in the command word is set to indicate to the DSPI that this is the last entry in the queue.
2. At the end of the transfer, corresponding to the command word with EOQ set is sampled, the EOQ flag (EOQF) in the DSPIx_SR is set.
3. The setting of the EOQF flag will disable both serial transmission, and serial reception of data, putting the DSPI in the STOPPED state. The TXRXS bit is negated to indicate the STOPPED state.
4. The eDMA will continue to fill TX FIFO until it is full or step 5 occurs.
5. Disable DSPI DMA transfers by disabling the DMA enable request for the DMA channel assigned to TX FIFO and RX FIFO. This is done by clearing the corresponding DMA enable request bits in the eDMA controller.
6. Ensure all received data in RX FIFO has been transferred to memory receive queue by reading the RXCNT in DSPIx_SR or by checking RFDF in the DSPIx_SR after each read operation of the DSPIx_POPR.
7. Modify DMA descriptor of TX and RX channels for "new" queues.
8. Flush TX FIFO by writing a 1 to the CLR_TXF bit in the DSPIx_MCR, Flush RX FIFO by writing a 1 to the CLR_RXF bit in the DSPIx_MCR.
9. Clear transfer count either by setting CTCNT bit in the command word of the first entry in the new queue or via CPU writing directly to SPI_TCNT field in the DSPIx_TCR.
10. Enable DMA channel by enabling the DMA enable request for the DMA channel assigned to the DSPI TX FIFO, and RX FIFO by setting the corresponding DMA set enable request bit.
11. Enable serial transmission and serial reception of data by clearing the EOQF bit.

21.5.2 Baud Rate Settings

Table 21-30 shows the baud rate that is generated based on the combination of the baud rate prescaler PBR and the baud rate scaler BR in the DSPIx_CTARs. The values calculated assume a 100 MHz system frequency.

Table 21-30. Baud Rate Values

		Baud Rate Divider Prescaler Values (DSPI_CTAR[PBR])			
		2	3	5	7
Baud Rate Scaler Values (DSPI_CTAR[BR])	2	25.0MHz	16.7MHz	10.0MHz	7.14MHz
	4	12.5MHz	8.33MHz	5.00MHz	3.57MHz
	6	8.33MHz	5.56MHz	3.33MHz	2.38MHz
	8	6.25MHz	4.17MHz	2.50MHz	1.79MHz
	16	3.12MHz	2.08MHz	1.25MHz	893kHz
	32	1.56MHz	1.04MHz	625kHz	446kHz
	64	781kHz	521kHz	312kHz	223kHz
	128	391kHz	260kHz	156kHz	112kHz
	256	195kHz	130kHz	78.1kHz	55.8kHz
	512	97.7kHz	65.1kHz	39.1kHz	27.9kHz
	1024	48.8kHz	32.6kHz	19.5kHz	14.0kHz
	2048	24.4kHz	16.3kHz	9.77kHz	6.98kHz
	4096	12.2kHz	8.14kHz	4.88kHz	3.49kHz
	8192	6.10kHz	4.07kHz	2.44kHz	1.74kHz
	16384	3.05kHz	2.04kHz	1.22kHz	872Hz
	32768	1.53kHz	1.02kHz	610Hz	436Hz

21.5.3 Delay Settings

Table 21-31 shows the values for the delay after transfer (t_{DT}) and CS to SCK delay (t_{CSC}) that can be generated based on the prescaler values and the scaler values set in the DSPIx_CTARs. The values calculated assume a 100 MHz system frequency.

Table 21-31. Delay Values

		Delay Prescaler Values (DSPI_CTAR[PBR])			
		1	3	5	7
Delay Scaler Values (DSPI_CTAR[DT])	2	20.0 ns	60.0 ns	100.0 ns	140.0 ns
	4	40.0 ns	120.0 ns	200.0 ns	280.0 ns
	8	80.0 ns	240.0 ns	400.0 ns	560.0 ns
	16	160.0 ns	480.0 ns	800.0 ns	1.1 μ s
	32	320.0 ns	960.0 ns	1.6 μ s	2.2 μ s
	64	640.0 ns	1.9 μ s	3.2 μ s	4.5 μ s
	128	1.3 μ s	3.8 μ s	6.4 μ s	9.0 μ s
	256	2.6 μ s	7.7 μ s	12.8 μ s	17.9 μ s
	512	5.1 μ s	15.4 μ s	25.6 μ s	35.8 μ s
	1024	10.2 μ s	30.7 μ s	51.2 μ s	71.7 μ s
	2048	20.5 μ s	61.4 μ s	102.4 μ s	143.4 μ s
	4096	41.0 μ s	122.9 μ s	204.8 μ s	286.7 μ s
	8192	81.9 μ s	245.8 μ s	409.6 μ s	573.4 μ s
	16384	163.8 μ s	491.5 μ s	819.2 μ s	1.1 ms
	32768	327.7 μ s	983.0 μ s	1.6 ms	2.3 ms
65536	655.4 μ s	2.0 ms	3.3 ms	4.6 ms	

21.5.4 MPC5xx QSPI Compatibility with the DSPI

Table 21-32 shows the translation of commands written to the TX FIFO command halfword with commands written to the command RAM of the MPC5xx family QSPI. The table illustrates how to configure the DSPIx_CTARs to match the default cases for the possible combinations of the MPC5xx family control bits in its command RAM. The defaults for the MPC5xx family are based on a system clock of 40MHz. All delay variables below will generate the same delay, or as close as possible, from the DSPI 100MHz system clock that an MPC5xx family part would generate from its 40MHz system clock. For other system clock frequencies, the customer can recompute the values using the information presented in Section 21.5.3, “Delay Settings.”

For BITSE = 0 --> 8 bits per transfer

For DT = 0 --> 0.425 μ s delay: For this value, the closest value in the DSPI is 0.480 μ s

For DSCK = 0 --> 1/2 SCK period: For this value, the value for the DSPI is 20ns


Table 21-32. MPC5xx QSPI Compatibility with the DSPI

MPC5xx Family Control Bits DSPI Corresponding Control Bits						Corresponding DSPIx_CTARx Register Configuration					
BITSE	CTAS[0]	DT	CTAS[1]	DSCK	CTAS[2]	DSPIx_CTARx	FMSZ	PDT	DT	PCSSCK	CSSCK
0		0		0		0	0111	10	0011	00	0000
0		0		1		1	0111	10	0011	User	User
0		1		0		2	0111	User ¹	User	00	0000
0		1		1		3	0111	User	User	User	User
1		0		0		4	User	10	0011	00	0000
1		0		1		5	User	10	0011	User	User
1		1		0		6	User	User	User	00	0000
1		1		1		7	User	User	User	User	User

¹ Selected by user

21.5.5 Calculation of FIFO Pointer Addresses

The user has complete visibility of the TX and RX FIFO contents through the FIFO registers, and valid entries can be identified through a memory mapped pointer and a memory mapped counter for each FIFO. The pointer to the first-in entry in each FIFO is memory mapped. For the TX FIFO the first-in pointer is the transmit next pointer (TXNXTPTR). For the RX FIFO the first-in pointer is the pop next pointer (POPNXTPTR). [Figure 21-41](#) illustrates the concept of first-in and last-in FIFO entries along with the FIFO counter. The TX FIFO is chosen for the illustration, but the concepts carry over to the RX FIFO. See [Section 21.4.3.4, “Transmit First In First Out \(TX FIFO\) Buffering Mechanism,”](#) and [Section 21.4.3.5, “Receive First In First Out \(RX FIFO\) Buffering Mechanism,”](#) for details on the FIFO operation.

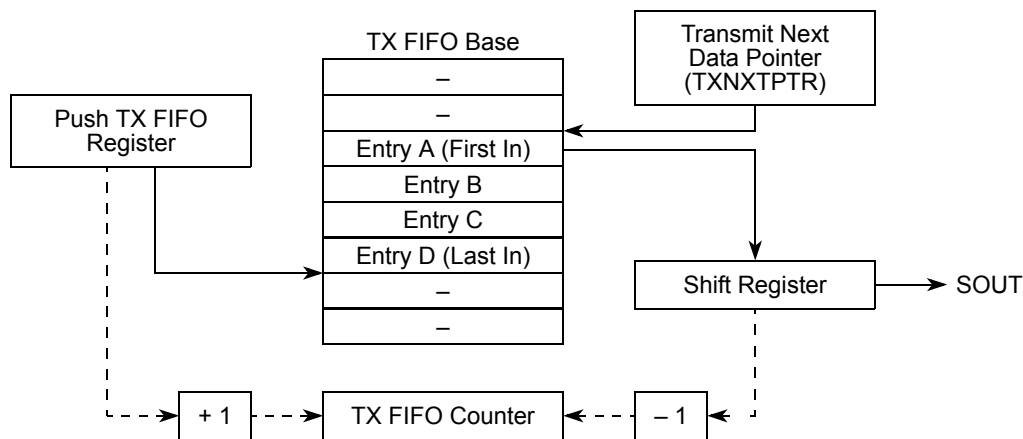
Figure 21-41. TX FIFO Pointers and Counter

21.5.5.1 Address Calculation for the First-in Entry and Last-in Entry in the TX FIFO

The memory address of the first-in entry in the TX FIFO is computed by the following equation:

$$\text{First-in entry address} = \text{TXFIFO base} + 4 (\text{TXNXTPTR})$$

The memory address of the last-in entry in the TX FIFO is computed by the following equation:

$$\text{Last-in entry address} = \text{TX FIFO base} + 4 * [(\text{TXCTR} + \text{TXNXTPTR} - 1) \text{ modulo TX FIFO depth}]$$

where:

TX FIFO base: base address of TX FIFO

TXCTR: TX FIFO counter

TXNXTPTR: transmit next pointer

TX FIFO depth: transmit FIFO depth, implementation specific

21.5.5.2 Address Calculation for the First-in Entry and Last-in Entry in the RX FIFO

The memory address of the first-in entry in the RX FIFO is computed by the following equation:

$$\text{First-in entry address} = \text{TX FIFO base} + 4 * (\text{POPNXTPTR})$$

The memory address of the last-in entry in the RX FIFO is computed by the following equation:

$$\text{Last-in entry address} = \text{RX FIFO base} + 4 * [(\text{RXCTR} + \text{POPNXTPTR} - 1) \text{ modulo RX FIFO depth}]$$

RX FIFO base: base address of RX FIFO

RXCTR: RX FIFO counter

POPNXTPTR: pop next pointer

RX FIFO depth: Receive FIFO depth, implementation specific

21.6 Document Revision History

Table 21-33. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 22

Enhanced Serial Communication Interface (eSCI)

22.1 Introduction

This section gives an overview of the eSCI module, and presents a block diagram, its features and its modes of operation.

22.1.1 Block Diagram

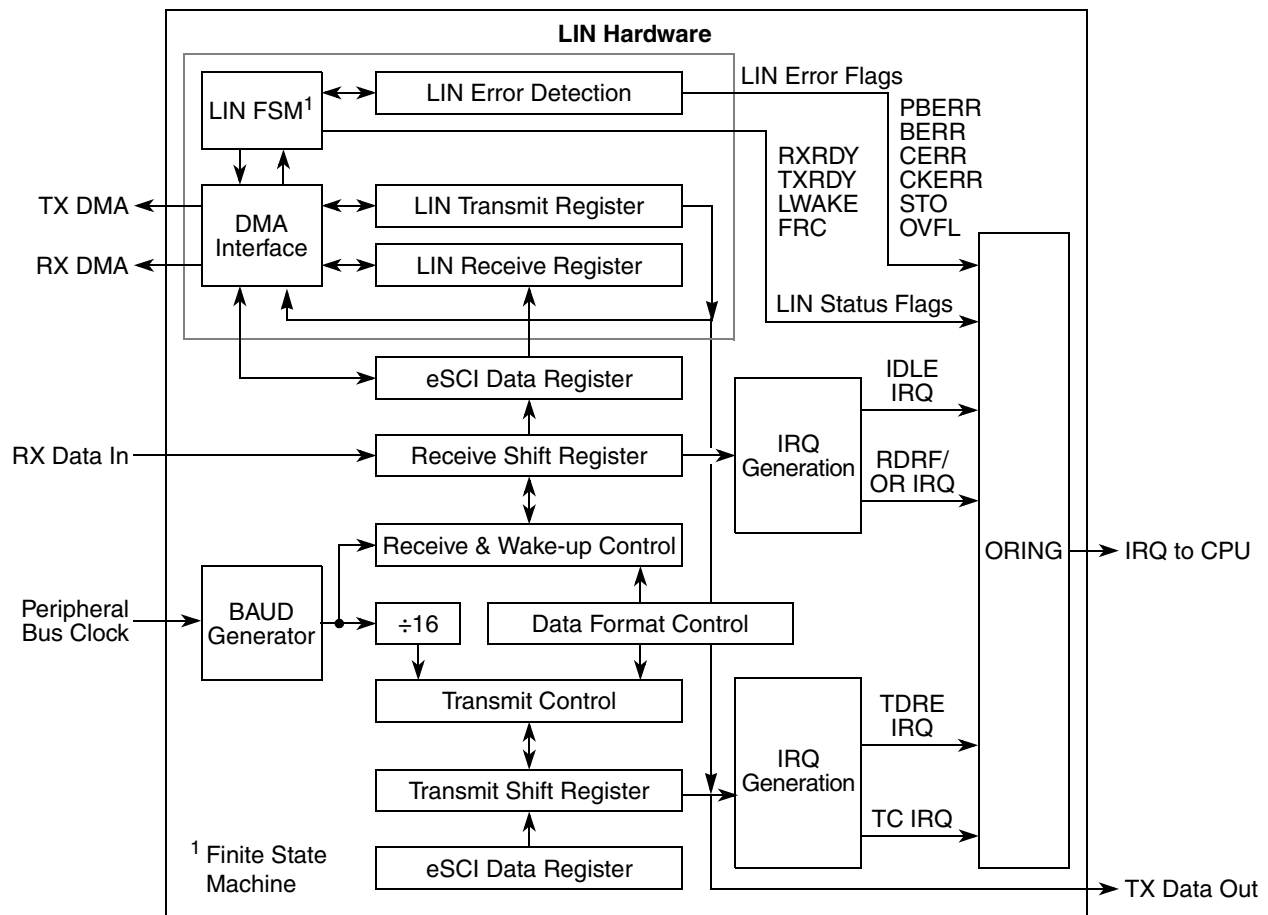


Figure 22-1. eSCI Block Diagram

22.1.2 Overview

The eSCI allows asynchronous serial communications with peripheral devices and other CPUs. The eSCI has special features which allow the eSCI to operate as a LIN bus master, complying with the LIN 2.0 specification.

Each of the eSCI modules can be independently disabled by writing to the module disable (MDIS) bit in the module's control register 2 (ESCIx_CR2). Disabling the module turns off the clock to the module, although some of the module registers may be accessed by the core via the slave bus. The MDIS bit is intended to be used when the module is not required in the application.

22.1.3 Features

The eSCI includes these distinctive features:

- Full-duplex operation
- Standard mark/space non-return-to-zero (NRZ) format
- Configurable baud rate
- Programmable 8-bit or 9-bit data format
- LIN master node support
- Configurable CRC detection for LIN
- Separately enabled transmitter and receiver
- Programmable transmitter output parity
- Two receiver wake-up methods:
 - Idle line wake-up
 - Address mark wake-up
- Interrupt-driven operation
- Receiver framing error detection
- Hardware parity checking
- 1/16 bit-time noise detection
- Two-channel DMA interface

22.1.4 Modes of Operation

The eSCI functions the same in normal, special, and emulation modes. It has a low-power module disable mode.

22.2 External Signal Description

This section provides a description of all module signals external to the MCU.

22.2.1 Overview

Each eSCI module has two I/O signals connected to the external MCU pins. These signals are summarized in [Table 22-1](#) and described in more detail in the following sections.

Table 22-1. eSCI Signals

Signal Name ¹	I/O	Description
RXD _x	I	eSCI Receive
TXD _x	O	eSCI Transmit

¹ x indicates eSCI module A or B

22.2.2 Detailed Signal Description

22.2.2.1 SCI Transmit (TXDA, TXDB)

This pin serves as transmit data output of eSCI.

22.2.2.2 SCI Receive Pin (RXDA, RXDB)

This pin serves as receive data input of the eSCI.

22.3 Memory Map and Register Definition

22.3.1 Overview

This section provides a detailed description of all memory and registers.

22.3.2 Module Memory Map

The memory map for the eSCI module is given below in [Table 22-2](#). The address offset is listed for each register. The total address for each register is the sum of the base address for the eSCI module (ESCI_x_base) and the address offset for each register. There are **two** eSCI modules on this device: the base is 0xFFFFB_0000 for eSCIA and 0xFFFFB_4000 for eSCIB.

Table 22-2. Module Memory Map

Address	Register Name	Register Description	Size (bits)
Base 0xFFFFB_0000 (A) 0xFFFFB_4000 (B)	ESCI _x _CR1	eSCI control register 1	32
Base + 0x04	ESCI _x _CR2	eSCI control register 2	16
Base + 0x06	ESCI _x _DR	eSCI data register	16

Table 22-2. Module Memory Map (continued)

Address	Register Name	Register Description	Size (bits)
Base + 0x08	ESCIx_SR	eSCI status register	32
Base + 0x0C	ESCIx_LCR	LIN control register	32
Base + 0x10	ESCIx_LTR	LIN transmit register	32
Base + 0x14	ESCIx_LRR	LIN receive register	32
Base + 0x18	ESCIx_LPR	LIN cyclic redundancy check polynomial register	32

22.3.3 Register Descriptions

This section consists of register descriptions in address order. Each description includes a standard register diagram with an associated figure number. Details of register bit and field function follow the register diagrams, in bit order.

22.3.3.1 eSCI Control Register 1 (ESCIx_CR1)

Address: Base + 0x0

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	SBR	SBR	SBR	SBR	SBR	SBR	SBR	SBR	SBR	SBR	SBR	SBR	SBR
W				0	1	2	3	4	5	6	7	8	9	10	11	12
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	LOOPS	0	RSRC	M	WAKE	ILT	PE	PT	TIE	TCIE	RIE	ILIE	TE	RE	RWU	SBK
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-2. eSCI Control Register 1 (ESCIx_CR1)

Table 22-3. ESCIx_CR1 Field Descriptions

Field	Description
0–2	Reserved.
3–15 SBR _n	<p>SCI baud rate. Used by the counter to determine the baud rate of the eSCI. The formula for calculating the baud rate is:</p> $\text{SCI baud rate} = \frac{\text{eSCI system clock}}{16 \times \text{BR}}$ <p>where BR is the content of the eSCI control register 1 (ESCIx_CR1), bits SBR0–SBR12. SBR0–SBR12 can contain a value from 1 to 8191. Also refer to the ESCIx_LCR[WU] bit description on page 22-12.</p>

Table 22-3. ESCIx_CR1 Field Descriptions (continued)

Field	Description												
16 LOOPS	Loop select. Enables loop operation. In loop operation, the RXD pin is disconnected from the eSCI and the transmitter output is internally connected to the receiver input. Both the transmitter and the receiver must be enabled to use the loop function. 0 Normal operation enabled, loop operation disabled 1 Loop operation enabled Note: The receiver input is determined by the RSRC bit.												
17	Reserved.												
18 RSRC	Receiver source. When LOOPS = 1, the RSRC bit determines the source for the receiver shift register input. 0 Receiver input internally connected to transmitter output 1 Receiver input connected externally to transmitter The table below shows how LOOPS and RSRC determine the loop function of the eSCI. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>LOOPS</th> <th>RSRC</th> <th>Function</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>x</td> <td>Normal operation</td> </tr> <tr> <td>1</td> <td>0</td> <td>Loop mode with RXD input internally connected to TXD output</td> </tr> <tr> <td>1</td> <td>1</td> <td>Single-wire mode with RXD input connected to TXD</td> </tr> </tbody> </table>	LOOPS	RSRC	Function	0	x	Normal operation	1	0	Loop mode with RXD input internally connected to TXD output	1	1	Single-wire mode with RXD input connected to TXD
LOOPS	RSRC	Function											
0	x	Normal operation											
1	0	Loop mode with RXD input internally connected to TXD output											
1	1	Single-wire mode with RXD input connected to TXD											
19 M	Data format mode. Determines whether data characters are 8 or 9 bits long. 0 1 start bit, 8 data bits, 1 stop bit 1 1 start bit, 9 data bits, 1 stop bit												
20 WAKE	Wake-up condition. Determines which condition wakes up the eSCI: a logic 1 (address mark) in the most significant bit position of a received data character or an idle condition on the RXD. 0 Idle line wake-up 1 Address mark wake-up Note: This is not a wake-up out of a power-save mode, it refers solely to the receiver standby mode.												
21 ILT	Idle line type. Determines when the receiver starts counting logic 1s as idle character bits. The counting begins either after the start bit or after the stop bit. If the count begins after the start bit, then a string of logic 1s preceding the stop bit may cause false recognition of an idle character. Beginning the count after the stop bit avoids false idle character recognition, but requires properly synchronized transmissions. 0 Idle character bit count begins after start bit 1 Idle character bit count begins after stop bit												
22 PE	Parity enable. Enables the parity function. When enabled, the parity function inserts a parity bit in the most significant bit position of the transmitted word. During reception, the received parity bit will be verified in the most significant bit position. The received parity bit will not be masked out. 0 Parity function disabled 1 Parity function enabled												
23 PT	Parity type. Determines whether the eSCI generates and checks for even parity or odd parity. With even parity, an even number of 1s clears the parity bit and an odd number of 1s sets the parity bit. With odd parity, an odd number of 1s clears the parity bit and an even number of 1s sets the parity bit. 0 Even parity 1 Odd parity												
24 TIE	Transmitter interrupt enable. Enables the transmit data register empty flag ESCIx_SR[TDRE] to generate interrupt requests. The interrupt is suppressed in TX DMA mode. 0 TDRE interrupt requests disabled 1 TDRE interrupt requests enabled												

Table 22-3. ESCIx_CR1 Field Descriptions (continued)

Field	Description
25 TCIE	Transmission complete interrupt enable. Enables the transmission complete flag ESCIx_SR[TC] to generate interrupt requests. The interrupt is suppressed in TX DMA mode. 0 TC interrupt requests disabled 1 TC interrupt requests enabled
26 RIE	Receiver full interrupt enable. Enables the receive data register full flag ESCIx_SR[RDRF] and the overrun flag ESCIx_SR[OR] to generate interrupt requests. The interrupt is suppressed in RX DMA mode. 0 RDRF and OR interrupt requests disabled 1 RDRF and OR interrupt requests enabled
27 ILIE	Idle line interrupt enable. Enables the idle line flag ESCIx_SR[IDLE] to generate interrupt requests. 0 IDLE interrupt requests disabled 1 IDLE interrupt requests enabled
28 TE	Transmitter enable. Enables the eSCI transmitter and configures the TXD pin as being controlled by the eSCI. The TE bit can be used to queue an idle preamble. 0 Transmitter disabled 1 Transmitter enabled
29 RE	Receiver enable. Enables the eSCI receiver. 0 Receiver disabled 1 Receiver enabled
30 RWU	Receiver wake-up. Standby state. 0 Normal operation. 1 RWU enables the wake-up function and inhibits further receiver interrupt requests. Normally, hardware wakes the receiver by automatically clearing RWU.
31 SBK	Send break. Toggling SBK sends one break character (see the description of ESCIx_CR2[BRK13] for break character length). Toggling implies clearing the SBK bit before the break character has finished transmitting. As long as SBK is set, the transmitter continues to send complete break characters. 0 No break characters 1 Transmit break characters

NOTES

After reset, the baud rate generator is disabled until the TE bit or the RE bit is set for the first time.

The baud rate generator is disabled when $SBR0-SBR12 = 0x0$.

Normally the baud rate should be written with a single write. If 8-bit writes are used, writing to ESCIx_CR1[0–7] has no effect without writing to ESCIx_CR1[8–15], since writing to ESCIx_CR1[0–7] puts the data in a temporary location until ESCIx_CR1[8–15] is written to.

During reception, when parity is enabled, the received parity bit will appear in the data register.

22.3.3.2 eSCI Control Register 2 (ESCIx_CR2)

NOTE

DMA requests are negated when in module disable mode.

Address: Base + 0x4

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	MDIS	FBR	BSTP	IEB ERR	RX DMA	TX DMA	BRK 13	0	BESM 13	SB STP	0	0	ORIE	NFIE	FEIE	PFIE
W																
Reset	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-3. eSCI Control Register 2 (ESCIx_CR2)

Table 22-4. ESCIx_CR2 Field Description

Field	Description															
0 MDIS	Module disable. By default the module is enabled, but can be disabled by writing a 1 to this bit. DMA requests are negated if the device is in module disable mode. 0 Module enabled 1 Module disabled															
1 FBR	Fast bit error detection. Handles bit error detection on a per bit basis. If this is not enabled, bit errors will be detected on a per byte basis.															
2 BSTP	Bit error/physical bus error stop. Causes DMA TX requests to be suppressed, as long as the bit error and physical bus error flags are not cleared. This stops further DMA writes, which would otherwise cause data bytes to be interpreted as LIN header information.															
3 IEBERR	Enable bit error interrupt. Generates an interrupt, when a LIN bit error is detected. For a list of interrupt enables and flags, see Table 22-21 .															
4 RXDMA	Activate RX DMA channel. If this bit is enabled and the eSCI has received data, it will raise a DMA RX request.															
5 TXDMA	Activate TX DMA channel. Whenever the eSCI is able to transmit data, it will raise a DMA TX request.															
6 BRK13	Break transmit character length. Determines whether the transmit break character is 10/11 or 13/14 bits long. The detection of a framing error is not affected by this bit. <p style="text-align: center;">Break Length:</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td></td> <td></td> <td colspan="2">ESCIx_CR1[M]</td> </tr> <tr> <td></td> <td></td> <td>0</td> <td>1</td> </tr> <tr> <td rowspan="2">BRK13</td> <td>0</td> <td>10</td> <td>11</td> </tr> <tr> <td>1</td> <td>13</td> <td>14</td> </tr> </table> 0 Break Character is 10 or 11 bits long 1 Break character is 13 or 14 bits long Note: LIN 2.0 now requires that a break character is always 13 bits long, so this bit should always be set to 1. The eSCI will work with BRK13=0, but it will violate LIN 2.0.			ESCIx_CR1[M]				0	1	BRK13	0	10	11	1	13	14
		ESCIx_CR1[M]														
		0	1													
BRK13	0	10	11													
	1	13	14													
7	Reserved. This bit is readable/writable, but has no effect on the operation of the eSCI module.															
8 BESM13	Bit error sample mode, bit 13. Determines when to sample the incoming bit in order to detect a bit error. (This is only relevant when FBR is set.) 0 Sample at RT clock 9 1 Sample at RT clock 13 (see Section 22.4.5.3, "Data Sampling")															

Table 22-4. ESCI_x_CR2 Field Description (continued)

Field	Description
9 SBSTP	SCI bit error stop. Stops the SCI when a bit error is asserted. This allows to stop driving the LIN bus quickly after a bit error has been detected. 0 Byte is completely transmitted 1 Byte is partially transmitted
10–11	Reserved.
12 ORIE	Overrun error interrupt enable. Generates an interrupt, when a frame error is detected. For a list of interrupt enables and flags, see Table 22-21 .
13 NFIE	Noise flag interrupt enable. Generates an interrupt, when noise flag is set. For a list of interrupt enables and flags, see Table 22-21 .
14 FEIE	Frame error interrupt enable. Generates an interrupt, when a frame error is detected. For a list of interrupt enables and flags, see Table 22-21 .
15 PFIE	Parity flag interrupt enable. Generates an interrupt, when parity flag is set. For a list of interrupt enables and flags, see Table 22-21 .

22.3.3.3 eSCI Data Register (ESCI_x_DR)

Address: Base + 0x6

Access: Read/Write

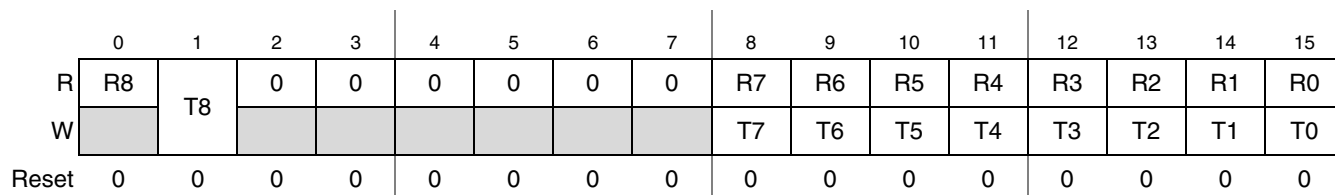


Figure 22-4. eSCI Data Register (ESCI_x_DR)

Table 22-5. ESCI_x_DR Field Description

Field	Description
0 R8	Received bit 8. R8 is the ninth data bit received when the eSCI is configured for 9-bit data format (M = 1).
1 T8	Transmit bit 8. T8 is the ninth data bit transmitted when the eSCI is configured for 9-bit data format (M = 1). Note: If the value of T8 is the same as in the previous transmission, T8 does not have to be rewritten. The same value is transmitted until T8 is rewritten.
2–7	Reserved.
8–15 R7–R0 T7–T0	Received bits/transmit bits 7–0 for 9-bit or 8-bit formats. Bits 7–0 from SCI communication may be read from ESCI _x _DR[8–15] (provided that SCI communication was successful). Writing to ESCI _x _DR [8–15] provides bits 7–0 for SCI transmission.

NOTES

In 8-bit data format, only bits 8–15 of ESCI_x_DR need to be accessed.

When transmitting in 9-bit data format and using 8-bit write instructions, write first to ESCIx_DR[0–7], then ESCIx_DR[8–15]. For 9-bit transmissions, a single write may also be used.

ESCIx_DR should not be used in LIN mode, writes to this register are blocked in LIN mode.

Even if parity generation/checking is enabled via ESCIx_CR[PE], the parity bit will not be masked out.

22.3.3.4 eSCI Status Register (ESCIx_SR)

The ESCIx_SR indicates the current status. The status flags can be polled, and some can also be used to generate interrupts. All bits in ESCIx_SR except for RAF are cleared by writing 1 to them.

Address: Base + 0x8

Access: Read/Write to clear

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	TDRE	TC	RDRF	IDLE	OR	NF	FE	PF	0	0	0	BERR	0	0	0	RAF
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c				w1c				
Reset	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	RX RDY	TX RDY	LWAKE	STO	PB ERR	CERR	CK ERR	FRC	0	0	0	0	0	0	0	OVFL
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c								w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-5. eSCI Status Register (ESCIx_SR)

Table 22-6. ESCIx_SR Field Descriptions

Field	Description
0 TDRE	<p>Transmit data register empty flag. TDRE is set when the transmit shift register receives a byte from the eSCI data register. When TDRE is 1, the data register (ESCIx_DR) is empty and can receive a new value to transmit. Clear TDRE by writing 1 to it.</p> <p>0 eSCI has not transferred data to the transmit shift register since the last time software cleared TDRE 1 Byte transferred to transmit shift register; transmit data register empty</p>
1 TC	<p>Transmit complete flag. TC is set low when there is a transmission in progress or when a preamble or break character is loaded. TC is set high when the TDRE flag is set and no data, preamble, or break character is being transmitted. When TC is set, the TXD out signal becomes idle (logic 1).</p> <p>After the device is switched on (by clearing the MDIS bit, see Section 22.3.3.2, “eSCI Control Register 2 (ESCIx_CR2)”, a preamble is transmitted; if no byte is written to the SCI data register then the completion of the preamble can be monitored using the TC flag. Clear TC by writing 1 to it.</p> <p>0 Transmission in progress 1 No transmission in progress. Indicates that TXD out is idle.</p>

Table 22-6. ESCI_x_SR Field Descriptions (continued)

Field	Description
2 RDRF	Receive data register full flag. RDRF is set when the data in the receive shift register transfers to the eSCI data register. Clear RDRF by writing 1 to it. 0 eSCI has not transferred data to the receive data register since last time software cleared RDRF 1 Received data available in eSCI data register
3 IDLE	Idle line flag. IDLE is set when 10 consecutive logic 1s (if M = 0) or 11 consecutive logic 1s (if M = 1) appear on the receiver input. Once the IDLE flag is cleared, a valid frame must again set the RDRF flag before an idle condition can set the IDLE flag. Clear IDLE by writing 1 to it. 0 Receiver input is either active now or has never become active since the IDLE flag was last cleared 1 Receiver input has become idle Note: When the receiver wake-up bit (RWU) is set, an idle line condition does not set the IDLE flag.
4 OR	Overrun flag. OR is set when software fails to read the eSCI data register before the receive shift register receives the next frame. The OR bit is set immediately after the stop bit has been completely received for the second frame. The data in the shift register is lost, but the data already in the eSCI data registers is not affected. Clear OR by writing 1 to it. 0 No overrun 1 Overrun
5 NF	Noise flag. NF is set when the eSCI detects noise on the receiver input. NF bit is set during the same cycle as the RDRF flag but does not get set in the case of an overrun. Clear NF by writing 1 to it. 0 No noise 1 Noise
6 FE	Framing error flag. FE is set when a logic 0 is accepted as the stop bit. FE bit is set during the same cycle as the RDRF flag but does not get set in the case of an overrun. Clear FE by writing 1 to it. 0 No framing error 1 Framing error
7 PF	Parity error flag. PF is set when the parity enable bit, PE, is set and the parity of the received data does not match its parity bit. Clear PE by writing 1 to it. 0 No parity error 1 Parity error
8–10	Reserved, should be cleared.
11 BERR	Bit error. Indicates a bit on the bus did not match the transmitted bit. If FBR = 0, checking happens after a complete byte has been transmitted and received again. If FBR = 1, checking happens bit by bit. This bit is only used for LIN mode. BERR is also set if an unrequested byte is received (i.e. a byte that is not part of an RX frame) that is not recognized as a wake-up flag. (Because the data on the RX line does not match the idle state that was assigned to the TX line.) Clear BERR by writing 1 to it. A bit error causes the LIN finite state machine (FSM) to reset unless ESCI _x _LCR[LDBG] is set.
12–14	Reserved.
15 RAF	Receiver active flag. RAF is set when the receiver detects a logic 0 during the RT1 time period of the start bit search. RAF is cleared when the receiver detects an idle character. 0 No reception in progress. 1 Reception in progress.
16 RXRDY	The eSCI has received LIN data. This bit is set when the ESCI _x _LCR receives a byte. Clear RXRDY by writing it with 1.
17 TXRDY	The LIN FSM can accept another write to ESCI _x _LTR. This bit is set when the ESCI _x _LTR register becomes free. Clear TXRDY by writing it with 1.

Table 22-6. ESCIx_SR Field Descriptions (continued)

Field	Description
18 LWAKE	Received LIN wake-up signal. A LIN slave has sent a wake-up signal on the bus. When this signal is detected, the LIN FSM will reset. If the setup of a frame had already started, it therefore must be repeated. LWAKE will also be set if ESCI receives a LIN 2.0 wake-up signal (in which the baud rate is lower than 32K baud). See the WU bit.
19 STO	Slave time out. Represents a NO_RESPONSE_ERROR. This is set if a slave does not complete a frame within the specified maximum frame length. For LIN 1.3 the following formula is used: $TFRAME_MAX = (10 \times NDATA + 44) \times 1.4$
20 PBERR	Physical bus error. No valid message can be generated on the bus. This is set if, after the start of a byte transmission, the input remains unchanged for 31 cycles. This will reset the LIN FSM.
21 CERR	CRC error. The CRC pattern received with an extended frame was not correct. 0 No error 1 CRC error
22 CKERR	Checksum error. Checksum error on a received frame.
23 FRC	Frame complete. LIN frame completely transmitted. All LIN data bytes received.
24–30	Reserved.
31 OVFL	ESCIx_LRR overflow. The LIN receive register has not been read before a new data byte, CRC, or checksum byte has been received from the LIN bus. Set when the condition is detected, and cleared by writing 1 to it.

22.3.3.5 LIN Control Register (ESCIx_LCR)

ESCIx_LCR can be written only when there are no ongoing transmissions.

Address: Base + 0xC

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	LRES	0	WUD	WUD	LDBG	DSF	PRTY	LIN	RXIE	TXIE	WUIE	STIE	PBIE	CIE	CKIE	FCIE
W		WU	0	1												
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	OFIE	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-6. LIN Control Register (ESCIx_LCR)

Table 22-7. ESCIx_LCR Field Descriptions

Field	Description															
0 LRES	LIN resynchronize. Causes the LIN protocol engine to return to start state. This happens automatically after bit errors, but software may force a return to start state manually via this bit. The bit first must be set then cleared, so that the protocol engine is operational again.															
1 WU	LIN bus wake-up. Generates a wake-up signal on the LIN bus. This must be set before a transmission, if the bus is in sleep mode. This bit will auto-clear, so a read from this bit will always return 0. According to LIN 2.0, generating a valid wake-up character requires programming the SCI baud rate to a range of 32K baud down to 1.6K baud.															
2–3 WUD [0:1]	Wake-up delimiter time. Determines how long the LIN engine waits after generating a wake-up signal, before starting a new frame. The eSCI will not set ESCIx_SR[TXRDY] before this time expires. Note that in addition to this delimiter time, the CPU and the eSCI will require some setup time to start a new transmission and typically there is an additional bit time delay. The table below shows how the values for WUD0 and WUD1 affect the delimiter time. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>WUD0</th> <th>WUD1</th> <th>Bit Times</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>4</td> </tr> <tr> <td>0</td> <td>1</td> <td>8</td> </tr> <tr> <td>1</td> <td>0</td> <td>32</td> </tr> <tr> <td>1</td> <td>1</td> <td>64</td> </tr> </tbody> </table>	WUD0	WUD1	Bit Times	0	0	4	0	1	8	1	0	32	1	1	64
WUD0	WUD1	Bit Times														
0	0	4														
0	1	8														
1	0	32														
1	1	64														
4 LDBG	LIN debug mode. Prevents the LIN FSM from automatically resetting, after an exception (bit error, physical bus error, wake-up flag) has been received. This is for debug purposes only.															
5 DSF	Double stop flags. When a bit error has been detected, this will add an additional stop flag to the byte in which the error occurred.															
6 PRTY	Activating parity generation. Generate the two parity bits in the LIN header.															
7 LIN	LIN mode. Switch device into LIN mode. 0 LIN disabled 1 LIN enabled															
8 RXIE	LIN RXREG ready interrupt enable. Generates an Interrupt when new data is available in the LIN RXREG. For a list of interrupt enables and flags, see Table 22-21 .															
9 TXIE	LIN TXREG ready interrupt enable. Generates an Interrupt when new data can be written to the LIN TXREG. For a list of interrupt enables and flags, see Table 22-21 .															
10 WUIE	RX wake-up interrupt enable. Generates an Interrupt when a wake-up flag from a LIN slave has been received. For a list of interrupt enables and flags, see Table 22-21 .															
11 STIE	Slave timeout error interrupt enable. Generates an Interrupt when the slave response is too slow. For a list of interrupt enables and flags, see Table 22-21 .															
12 PBIE	Physical bus error interrupt enable. Generates an Interrupt when no valid message can be generated on the bus. For a list of interrupt enables and flags, see Table 22-21 .															
13 CIE	CRC error interrupt enable. Generates an Interrupt when a CRC error on a received extended frame is detected. For a list of interrupt enables and flags, see Table 22-21 .															
14 CKIE	Checksum error interrupt enable. Generates an Interrupt on a detected checksum error. For a list of interrupt enables and flags, see Table 22-21 .															

Table 22-7. ESCI_x_LCR Field Descriptions (continued)

Field	Description
15 FCIE	Frame complete interrupt enable. Generates an Interrupt after complete transmission of a TX frame, or after the last byte of an RX frame is received. (The complete frame includes all header, data, CRC and checksum bytes as applicable.) For a list of interrupt enables and flags, see Table 22-21 .
16–22	Reserved.
23 OFIE	Overflow interrupt enable. Generates an Interrupt when a data byte in the ESCI _x _LRR has not been read before the next data byte is received. For a list of interrupt enables and flags, see Table 22-21 .
24–31	Reserved.

22.3.3.6 LIN Transmit Register (ESCI_x_LTR)

ESCI_x_LTR can be written to only when TXRDY is set. The first byte written to the register selects the transmit address, the second byte determines the frame length, the third and fourth byte set various frame options and determine the timeout counter. Header parity will be automatically generated if the ESCI_x_LCR[PRTY] bit is set. For TX frames, the fourth byte (bits T7–T0) is skipped, since the timeout function does not apply. All following bytes are data bytes for the frame. CRC and checksum bytes will be automatically appended when the appropriate options are selected.

When a bit error is detected, an interrupt is set and the transmission aborted. The register can only be written again once the interrupt is cleared. Afterwards a new frame starts, and the first byte needs to contain a header again.

Additionally it is possible to flush the ESCI_x_LTR by setting the ESCI_x_LCR[LRES] bit.

NOTE

Not all values written to the ESCI_x_LTR will generate valid LIN frames.
The values are determined according to the LIN specification.

Address: Base + 0x10

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R									0	0	0	0	0	0	0	0
W	P1/ L7/ HDCHK/ T7/ D7	P0/ L6/ CSUM/ T6/ D6	ID5/ L5/ CRC/ T5/ D5	ID4/ L4/ TX/ T4/ D4	ID3/ L3/ T11/ T3/ D3	ID2/ L2/ T10/ T2/ D2	ID1/ L1/ T9/ T1/ D1	ID0/ L0/ T8/ T0/ D0								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-7. LIN Transmit Register (ESCI_x_LTR)

Enhanced Serial Communication Interface (eSCI)

Address: eSCI x Base + 0x0010

Access: Write

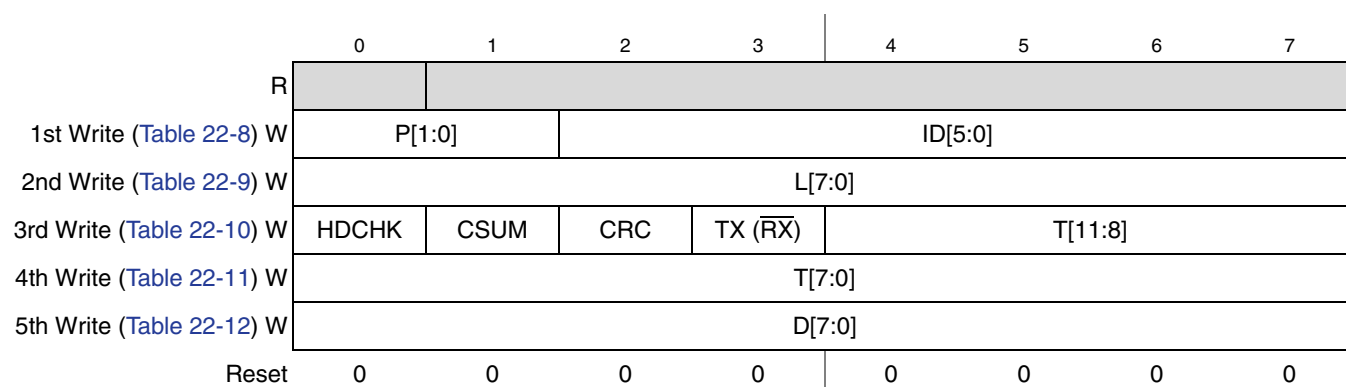


Figure 22-8. LIN Transmit Register (ESCIx_LTR) Alternate Diagram

Table 22-8. ESCI_x_LTR First Byte Field Description

Field	Description															
0–1 P _n	Parity bit <i>n</i> . When parity generation is enabled (ESCI _x _LCR[PRTY] = 1), the parity bits are generated automatically. Otherwise they must be provided in this field.															
2–7 ID _n ¹	Header bit <i>n</i> . The LIN address, for LIN 1.x standard frames the length bits must be set appropriately (see the table below), extended frames are recognized by their specific patterns. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>ID5</th> <th>ID4</th> <th>data bytes</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0</td> <td>2</td> </tr> <tr> <td>0</td> <td>1</td> <td>2</td> </tr> <tr> <td>1</td> <td>0</td> <td>4</td> </tr> <tr> <td>1</td> <td>1</td> <td>8</td> </tr> </tbody> </table>	ID5	ID4	data bytes	0	0	2	0	1	2	1	0	4	1	1	8
ID5	ID4	data bytes														
0	0	2														
0	1	2														
1	0	4														
1	1	8														
8–31	Reserved.															

¹ The values 3C, 3D, 3E and 3F of the ID-field (ID0-5) indicate command and extended frames. Refer to LIN Specification Package Revision 2.0.

Table 22-9. ESCI_x_LTR Second Byte Field Descriptions

Field	Description
0–7 L _n	Length bit <i>n</i> . Defines the length of the frame (0 to 255 data bytes). This information is needed by the LIN state machine in order to insert the checksum or CRC pattern as required. LIN 1.x slaves will only accept frames with 2, 4, or 8 data bytes.
8–31	Reserved.

Table 22-10. ESCIx_LTR Third Byte Field Descriptions

Field	Description
0 HDCHK	Header checksum enable. Include the header fields into the mod 256 checksum of the standard frames.
1 CSUM	Checksum enable. Append a checksum byte to the end of a TX frame. Verify the checksum byte of an RX frame.
2 CRC	CRC enable. Append two CRC bytes to the end of a TX frame. Verify the two CRC bytes of an RX frame are correct. If both CSUM and CRC bits are set, the LIN FSM will first append the CRC bytes, then the checksum byte, and will expect them in this order, as well. If HDCHK is set, the CRC calculation will include header and data bytes, otherwise just the data bytes. CRC bytes are not part of the LIN standard; they are normal data bytes and belong to a higher-level protocol.
3 TX	Transmit direction. Indicates a TX frame; that is, the eSCI will transmit data to a slave. Otherwise, an RX frame is assumed, and the eSCI only transmits the header. The data bytes are received from the slave. 0 RX frame 1 TX frame
4–7 T_n	Timeout bit n . Sets the counter to determine a NO_RESPONSE_ERROR, if the frame is a read access to a LIN slave. Following LIN standard rev 1.3, the value $(10 \times N_{DATA} + 45) \times 1.4$ is recommended. For transmissions, this counter has to be set to 0. The timeout bits 7–0 will not be written on a TX frame. For TX frames, the fourth byte written to the LIN transmit register (ESCIx_LTR) is the first data byte, for RX frames it contains timeout bits 7–0. The time is specified in multiples of bit times. The timeout period starts with the transmission of the LIN break character.
8–31	Reserved.

Table 22-11. ESCIx_LTR Rx Frame Fourth Byte Field Descriptions

Field	Description
0–7 T_n	Timeout bit n . Sets the counter to determine a NO_RESPONSE_ERROR, if the frame is a read access to a LIN slave. Following LIN standard rev 1.3, the value $(10 \times N_{DATA} + 45) \times 1.4$ is recommended. For transmissions, this counter has to be set to 0. The timeout bits 7–0 will not be written on a TX frame. For TX frames, the fourth byte written to the LIN transmit register (ESCIx_LTR) is the first data byte. For RX frames, it contains timeout bits 7–0. The time is specified in multiples of bit times. The timeout period starts with the transmission of the LIN break character.
8–31	Reserved.

**Table 22-12. ESCIx_LTR Tx Frame Fourth+ Byte/
Rx Frame Fifth+ Byte Field Description**

Field	Description
0–7 D_n	Data bits for transmission.
8–31	Reserved.

22.3.3.7 LIN Receive Register (ESCIx_LRR)

ESCIx_LRR can be ready only when ESCIx_SR[RXRDY] is set.

NOTE

Application software must ensure that ESCIx_LRR be read before new data or checksum bytes or CRCs are received from the LIN bus.

Address: Base + 0x14

Access: Read

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	D7	D6	D5	D4	D3	D2	D1	D0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-9. LIN Receive Register (ESCIx_LRR)

Table 22-13. ESCIx_LRR Field Descriptions

Field	Description
0–7 Dn	Data bit <i>n</i> . Provides received data bytes from RX frames. Data is only valid when the ESCIx_SR[RXRDY] flag is set. CRC and checksum information will not be available in the ESCIx_LRR unless they are treated as data. It is possible to treat CRC and checksum bytes as data by deactivating the CSUM respectively CRC control bits in the ESCIx_LTR; however, then CRC and CSUM checking has to be performed by software. Data bytes must be read from the ESCIx_LRR (by CPU or DMA) before any new bytes (including CRC or checksum) are received from the LIN bus otherwise the data byte is lost and OVFL is set. Note: The data must be collected and the LIN frame finished (including CRC and checksum if applicable) before a wake-up character can be sent.
8–31	Reserved.

22.3.3.8 LIN CRC Polynomial Register (ESCIx_LPR)

ESCIx_LPRn can be written when there are no ongoing transmissions.

Address: Base + 0x18

Access: Read/Write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	P15	P14	P13	P12	P11	P10	P9	P8	P7	P6	P5	P4	P3	P2	P1	P0
W																
Reset	1	1	0	0	0	1	0	1	1	0	0	1	1	0	0	1

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 22-10. LIN CRC Polynomial Register (ESCIx_LPR)

Table 22-14. ESCIx_LPR Field Description

Field	Description
0–15 P _n	Polynomial bit x ⁿ . Bits P15–P0 are used to define the LIN polynomial - standard is x ¹⁵ + x ¹⁴ + x ¹⁰ + x ⁸ + x ⁷ + x ⁴ + x ³ + 1 (the polynomial used for the CAN protocol).
16–31	Reserved.

22.4 Functional Description

22.4.1 Overview

This section provides a complete functional description of the eSCI module, detailing the operation of the design from the end user perspective in a number of subsections.

Figure 22-11 shows the structure of the eSCI module. The eSCI allows full duplex, asynchronous, NRZ serial communication between the CPU and remote devices, including other CPUs. The eSCI transmitter and receiver operate independently, although they use the same baud rate generator. The CPU monitors the status of the eSCI, writes the data to be transmitted, and processes received data.

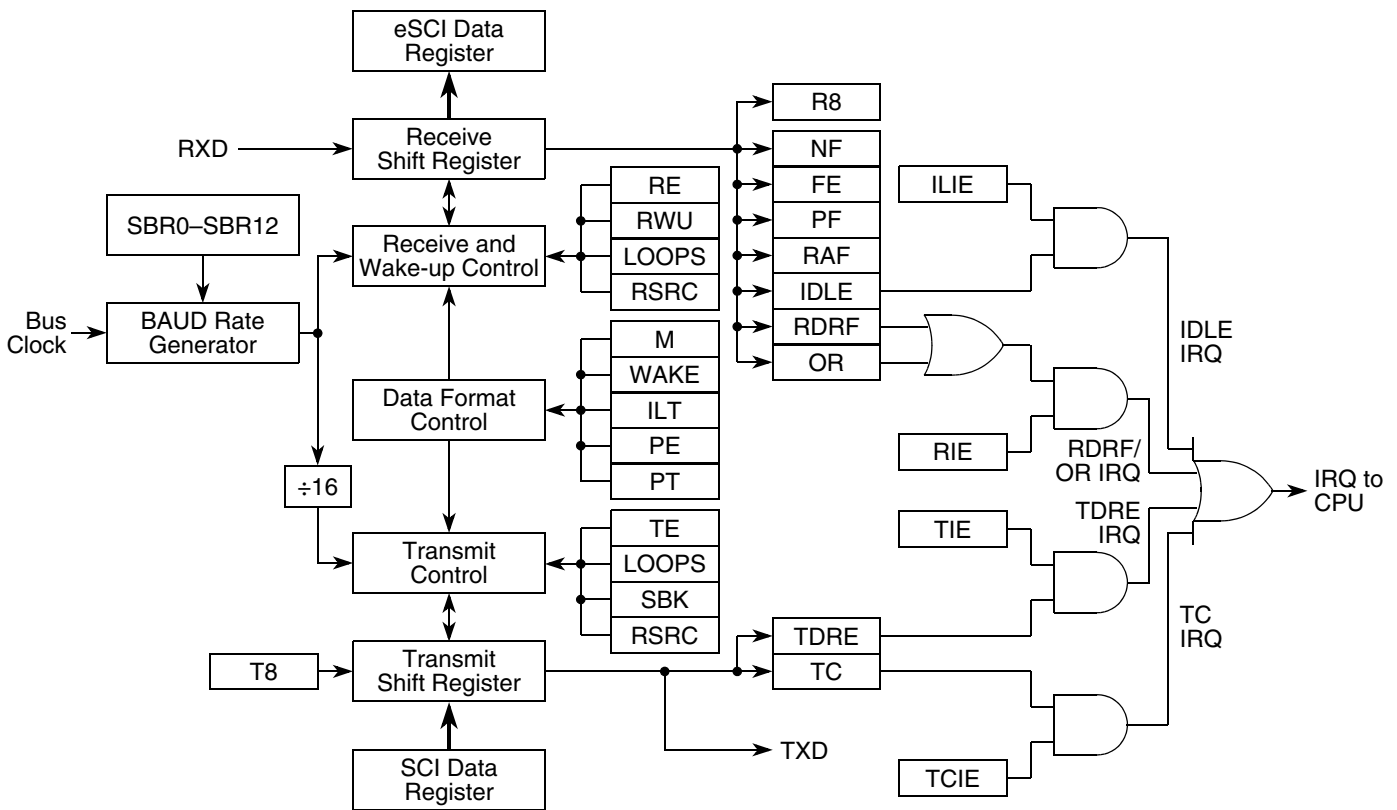


Figure 22-11. eSCI Operation Block Diagram

22.4.2 Data Format

The eSCI uses the standard NRZ mark/space data format. Each data character is contained in a frame that includes a start bit, eight or nine data bits, and a stop bit. Clearing the M bit in eSCI control register 1 configures the eSCI for 8-bit data characters. A frame with eight data bits has a total of 10 bits. Setting the M bit configures the eSCI for 9-bit data characters. A frame with nine data bits has a total of 11 bits.

When the eSCI is configured for 9-bit data characters, the ninth data bit is the T8 bit in the eSCI data register (ESCIx_DR). It remains unchanged after transmission and can be used repeatedly without rewriting it. A frame with nine data bits has a total of 11 bits.

The two different data formats are illustrated in Figure 22-12. Table 22-15 and Table 22-16 show the number of each type of bit in 8-bit data format and 9-bit data format, respectively.

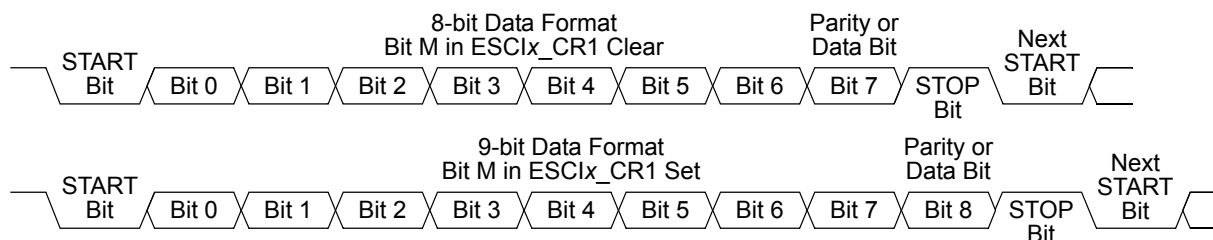


Figure 22-12. eSCI Data Formats

Table 22-15. Example of 8-bit Data Formats

Start Bit	Data Bits	Address Bits	Parity Bits	Stop Bit
1	8	0	0	1
1	7	0	1	1
1	7	1 ¹	0	1

¹The address bit identifies the frame as an address character. See Section 22.4.5.6, “Receiver Wake-up.”

Table 22-16. Example of 9-Bit Data Formats

Start Bit	Data Bits	Address Bits	Parity Bits	Stop Bit
1	9	0	0	1
1	8	0	1	1
1	8	1 ¹	0	1

¹The address bit identifies the frame as an address character. See Section 22.4.5.6, “Receiver Wake-up.”

22.4.3 Baud Rate Generation

A 13-bit modulus counter in the baud rate generator derives the baud rate for both the receiver and the transmitter. The value, 1 to 8191, written to the SBR0–SBR12 bits determines the system clock divider.

The SBR bits are in the eSCI control register 1 (ESCIx_CR1). The baud rate clock is synchronized with the system clock and drives the receiver. The baud rate clock divided by 16 drives the transmitter. The receiver has an acquisition rate of 16 samples per bit time.

Baud rate generation is subject to one source of error:

- Integer division of the system clock may not give the exact target frequency.

Table 22-17 lists some examples of achieving target baud rates with a system clock frequency of 128 MHz.

$$\text{SCI baud rate} = \frac{\text{System clock}}{16 \times \text{ESCIx_CR1[SBR]}}$$

Table 22-17. Baud Rates (Example: System Clock = 128 Mhz)

Bits SBR[0:12]	Receiver Clock (Hz)	Transmitter Clock (Hz)	Target Baud Rate	Error (%)
0x0023	3,657,143	228,571	230,400	-0.79
0x0045	1,855,072	115,942	115,200	+0.64
0x008B	920,863	57,554	57,600	-0.01
0x00D0	615,385	38,462	38,400	+0.16
0x01A1	306,954	19,185	19,200	-0.08
0x022C	230,216	14,388	14,400	-0.08
0x0341	153,661	9,604	9600	+0.04
0x0683	76,785	4,799	4800	-0.02
0x0D05	38,404	2,400.2	2400	+0.01
0x1A0A	19,202	1,200.1	1200	+0.01

22.4.4 Transmitter

Figure 22-13 illustrates the features of the eSCI transmitter.

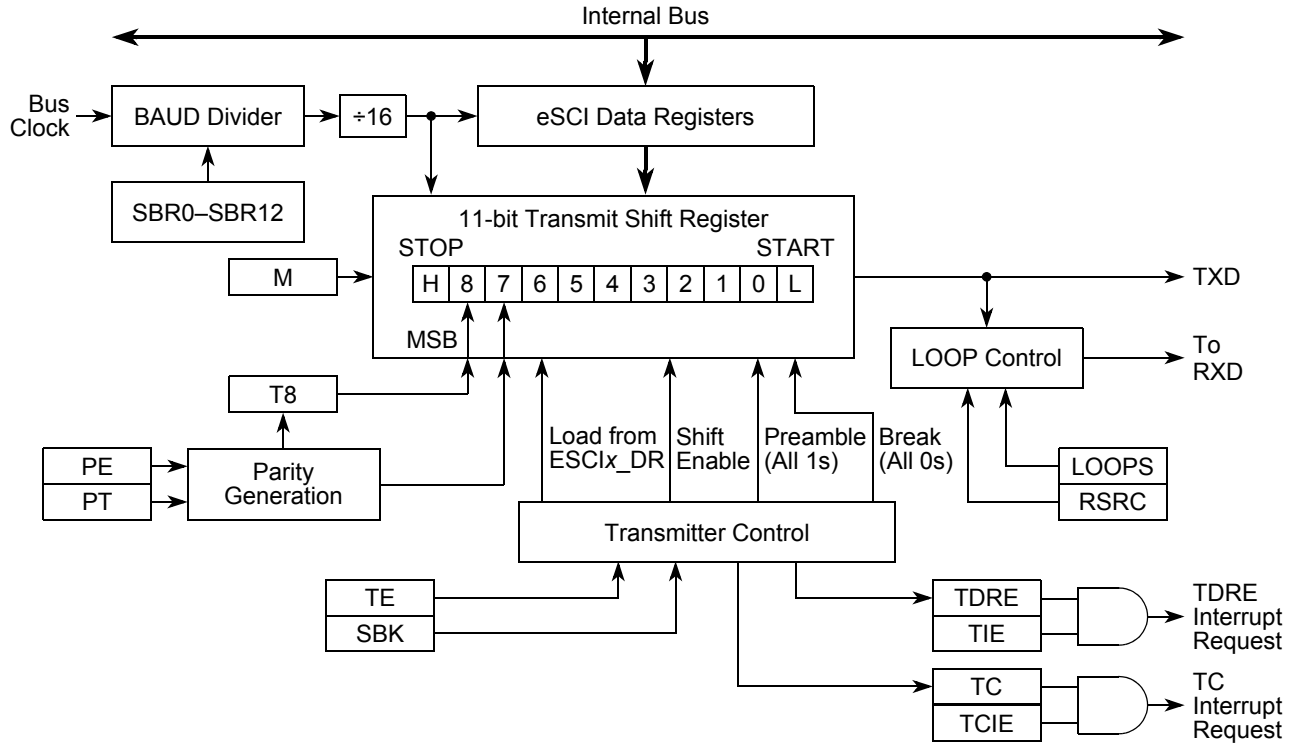


Figure 22-13. eSCI Transmitter Block Diagram

22.4.4.1 Transmitter Character Length

The eSCI transmitter can accommodate either 8-bit or 9-bit data characters. The state of the M bit in eSCI control register 1 (ESCIx_CR1) determines the length of data characters. When transmitting 9-bit data, bit T8 in the eSCI data register (ESCIx_DR) is the ninth bit (bit 8).

22.4.4.2 Character Transmission

To transmit data, the MCU writes the data bits to the eSCI data register (ESCIx_DR), which in turn are transferred to the transmit shift register. The transmit shift register then shifts a frame out through the TXD signal, after it has prefaced them with a start bit and appended them with a stop bit. The eSCI data register (ESCIx_DR) is the buffer (write-only during transmit) between the internal data bus and the transmit shift register.

The eSCI also sets a flag, the transmit data register empty flag (TDRE), every time it transfers data from the buffer (ESCIx_DR) to the transmit shift register. The transmit driver routine may respond to this flag by writing another byte to the transmitter buffer (ESCIx_DR), while the shift register is still shifting out the first byte.

To initiate an eSCI transmission:

1. Configure the eSCI:
 - a) Turn on the module by clearing ESCIx_CR2[MDIS] if this bit is set.
 - b) Select a baud rate. Write this value to the eSCI control register 1 (ESCIx_CR1) to start the baud rate generator. Remember that the baud rate generator is disabled when the ESCIx_CR1[SBR] field is zero. When using 8-bit writes, writes to the ESCIx_CR1[0–7] have no effect without also writing to ESCIx_CR1[8–15].
 - c) Write to ESCIx_CR1 to configure word length, parity, and other configuration bits (LOOPS, RSRC, M, WAKE, ILT, PE, PT).
 - d) Enable the transmitter, interrupts, receive, and wake-up as required, by writing to the ESCIx_CR1 register bits (TIE, TCIE, RIE, ILIE, TE, RE, RWU, SBK). A preamble or idle character will now be shifted out of the transmitter shift register.

NOTE

A single 32-bit write to ESCI_CR1 may be used in place of steps b–d above.

2. Transmit procedure for each byte:
 - a) Poll the TDRE flag by reading the ESCIx_SR or responding to the TDRE interrupt. Keep in mind that the TDRE bit resets to 1.
 - b) If the TDRE flag is set, software should then clear it, followed by writing the data to be transmitted to ESCIx_DR, where the ninth bit is written to the T8 bit in ESCIx_DR if the eSCI is in 9-bit data format.
3. Repeat step 2 for each subsequent transmission.

NOTE

The TDRE flag is set when the shift register is loaded with the next data to be transmitted from ESCIx_DR, which occurs approximately half-way through the stop bit of the previous frame. Specifically, this transfer occurs 9/16ths of a bit time AFTER the start of the stop bit of the previous frame.

Toggling the TE bit from 0 to 1 automatically loads the transmit shift register with a preamble of 10 logic 1s (if M = 0) or 11 logic 1s (if M = 1). After the preamble shifts out, control logic transfers the data from the eSCI data register into the transmit shift register. A logic 0 start bit automatically goes into the least significant bit position of the transmit shift register. A logic 1 stop bit goes into the most significant bit position.

The eSCI hardware supports odd or even parity. When parity is enabled, the most significant bit (Msb) of the data character is the parity bit.

The transmit data register empty flag, TDRE, in the eSCI status register (ESCIx_SR) becomes set when the eSCI data register transfers a byte to the transmit shift register. The TDRE flag indicates that the eSCI data register can accept new data from the internal data bus. If the transmit interrupt enable bit, TIE, in eSCI control register 1 (ESCIx_CR1) is also set, the TDRE flag generates a transmitter interrupt request.

When the transmit shift register is not transmitting a frame, the TXD output goes to the idle condition, logic 1. If at any time software clears the TE bit in eSCI control register 1 (ESCIx_CR1), the transmitter enable signal goes low and the TXD output goes idle.

If software clears TE while a transmission is in progress (ESCIx_CR1[TC] = 0), the frame in the transmit shift register continues to shift out. To avoid accidentally cutting off the last frame in a message, always wait for TDRE to go high after the last frame before clearing TE.

To separate messages with preambles with minimum idle line time, use the following sequence between messages:

1. Write the last byte of the first message to ESCIx_DR.
2. Wait for the TDRE flag to go high, indicating the transfer of the last frame to the transmit shift register.
3. Queue a preamble by clearing and then setting the TE bit.
4. Write the first byte of the second message to ESCIx_DR.

22.4.4.3 Break Characters

Setting the break bit, SBK, in eSCI control register 1 (ESCIx_CR1) loads the transmit shift register with a break character. A break character contains all logic 0s and has no start, stop, or parity bit. Break character length depends on the M bit in the eSCI control register 1 (ESCIx_CR1) and on the BRK13 bit in the eSCI control register 2 (ESCIx_CR2). As long as SBK is set, the transmitter logic continuously loads break characters into the transmit shift register. After software clears the SBK bit, the shift register finishes transmitting the last break character and then transmits at least one logic 1. The automatic logic 1 at the end of a break character guarantees the recognition of the start bit of the next frame.

NOTE

LIN 2.0 now requires that a break character is always 13 bits long, so the BRK13 bit should always be set to 1. The eSCI will work with BRK13=0, but it will violate LIN 2.0.

The eSCI recognizes a break character when a start bit is followed by eight or nine logic 0 data bits and a logic 0 where the stop bit should be. Receiving a break character has the following effects on eSCI registers:

- Sets the framing error flag, FE.
- Sets the receive data register full flag, RDRF.
- Clears the eSCI data register (ESCIx_DR).
- May set the overrun flag, OR, noise flag, NF, parity error flag, PF, or the receiver active flag, RAF. For more details, see [Section 22.3.3.4, “eSCI Status Register \(ESCIx_SR\).”](#)

22.4.4.4 Idle Characters

An idle character contains all logic 1s and has no start, stop, or parity bit. Idle character length depends on the M bit in eSCI control register 1 (ESCIx_CR1). The preamble is a synchronizing idle character that begins the first transmission initiated after toggling the TE bit from 0 to 1.

If the TE bit is cleared during a transmission, the TXD output becomes idle after completion of the transmission in progress. Clearing and then setting the TE bit during a transmission queues an idle character to be sent after the frame currently being transmitted.

NOTE

When queuing an idle character, return the TE bit to logic 1 before the stop bit of the current frame shifts out through the TXD output. Setting the TE bit after the stop bit shifts out through the TXD output causes data previously written to the eSCI data register to be lost. Toggle the TE bit for a queued idle character while the TDRE flag is set and immediately before writing the next byte to the eSCI data register.

22.4.4.5 Fast Bit Error Detection in LIN Mode

Fast bit error detection has been designed to allow flagging of LIN bit errors while they occur, rather than flagging them after a byte transmission has completed. In order to use this feature, it is assumed a physical interface connects to the LIN bus as shown in [Figure 22-14](#).

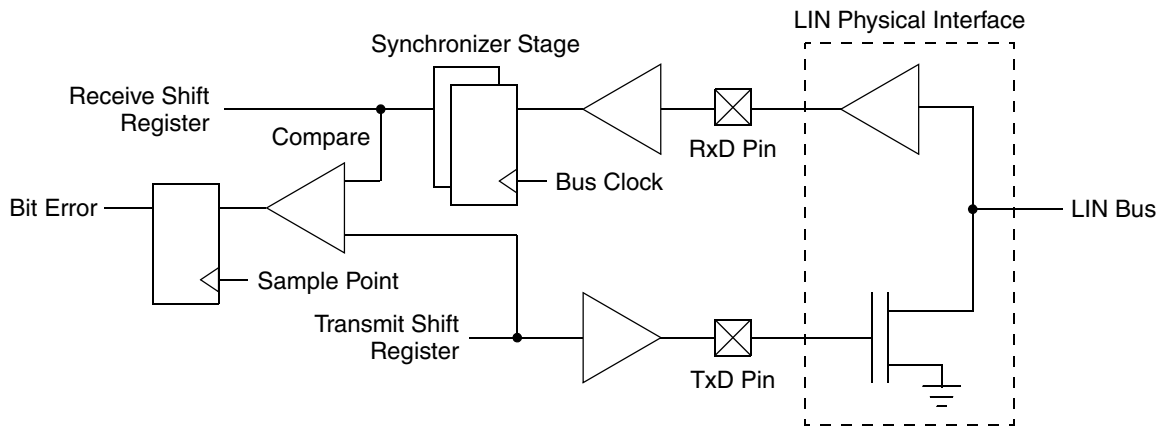


Figure 22-14. Fast Bit Error Detection on a LIN Bus

If fast bit error detection is enabled ($FBR = 1$), the eSCI will compare the transmitted and the received data stream when the transmitter is active (not idle). Once a mismatch between the transmitted data and the received data is detected the following actions are performed:

- The LIN frame is aborted (provided $LDBG=0$).
- The bit error flag BERR will be set.
- If SBSTP is 0, the remainder of the byte will be transmitted normally.
- If SBSTP is 1, the remaining bits in the byte after the error bit are transmitted as 1s (idle).

To adjust to different bus loads the sample point at which the incoming bit is compared to the one which was transmitted can be selected with the BESM13 bit (see [Figure 22-15](#)). If set, the comparison will be performed at RT clock 13, otherwise at RT clock 9 (also see [Section 22.4.5.3, “Data Sampling.”](#)).

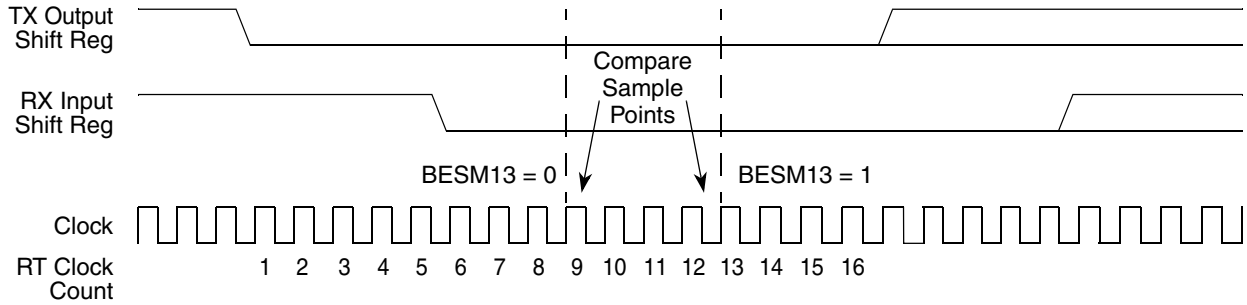


Figure 22-15. Fast Bit Error Detection Timing Diagram

22.4.5 Receiver

Figure 22-16 illustrates the eSCI receiver.

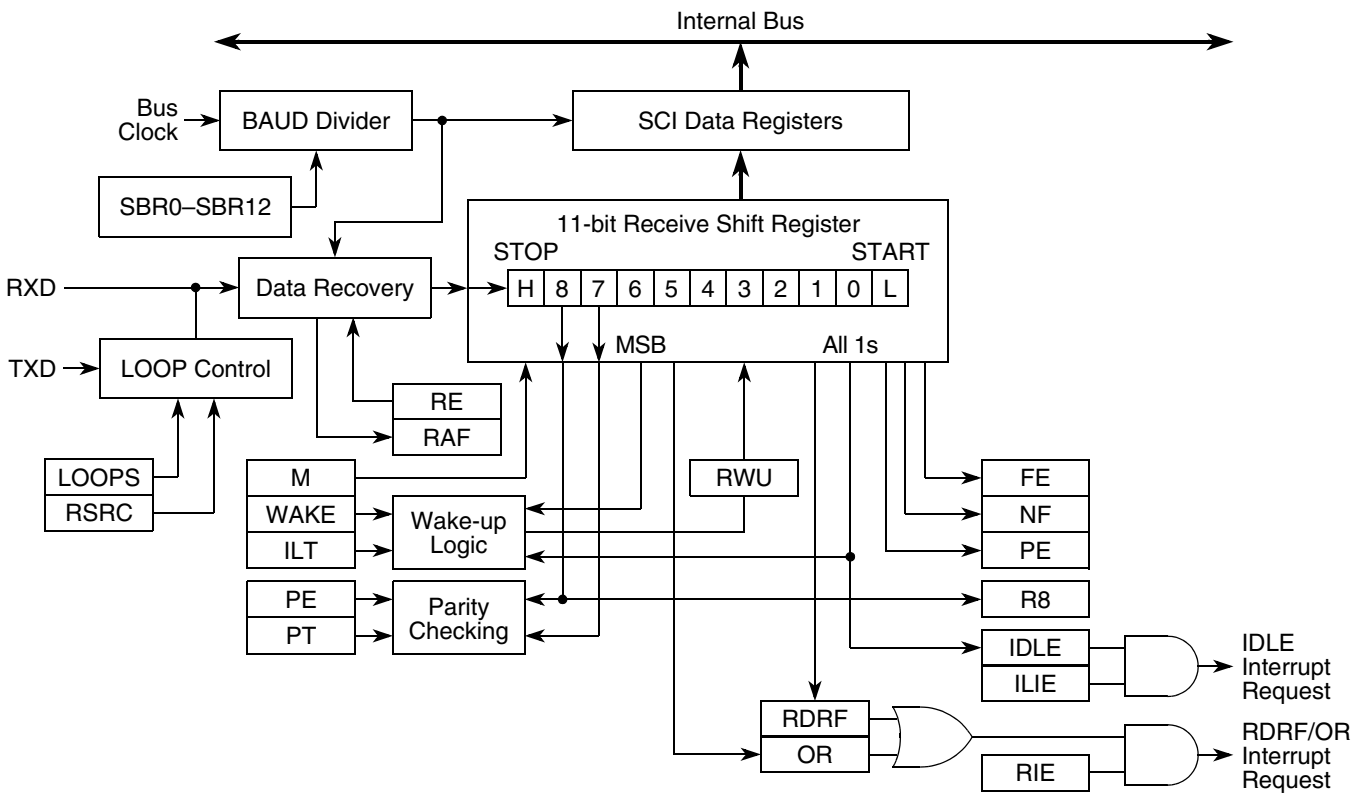


Figure 22-16. eSCI Receiver Block Diagram

22.4.5.1 Receiver Character Length

The eSCI receiver can accommodate either 8-bit or 9-bit data characters. The state of the M bit in eSCI control register 1 (ESCIx_CR1) determines the length of data characters. When receiving 9-bit data, bit R8 in the eSCI data register (ESCIx_DR) is the ninth bit (bit 8).

22.4.5.2 Character Reception

During an eSCI reception, the receive shift register shifts a frame in from the RXD input signal. The eSCI data register is the buffer (read-only during receive) between the internal data bus and the receive shift register.

After a complete frame shifts into the receive shift register, the data portion of the frame transfers to the eSCI data register. The receive data register full flag, RDRF, in eSCI status register (ESCIx_SR) is then set, indicating that the received byte can be read. If the receive interrupt enable bit, RIE, in eSCI control register 1 (ESCIx_CR1) is also set, the RDRF flag generates an RDRF interrupt request.

22.4.5.3 Data Sampling

The receiver uses a sampling clock to sample the RXD input signal at the 16 times the baud-rate frequency. This sampling clock is called the RT clock. To adjust for baud rate mismatch, the RT clock (see Figure 22-17) is re-synchronized:

- After every start bit.
- After the receiver detects a data bit change from logic 1 to logic 0. This data bit change is detected when a majority of data samples return a valid logic 1 and a majority of the next data samples return a valid logic 0. Data samples are taken at RT8, RT9, and RT10, as shown in Figure 22-17.

To locate the start bit, eSCI data recovery logic performs an asynchronous search for a logic 0 preceded by three logic 1s. When the falling edge of a possible start bit occurs, the RT clock begins to count to 16.

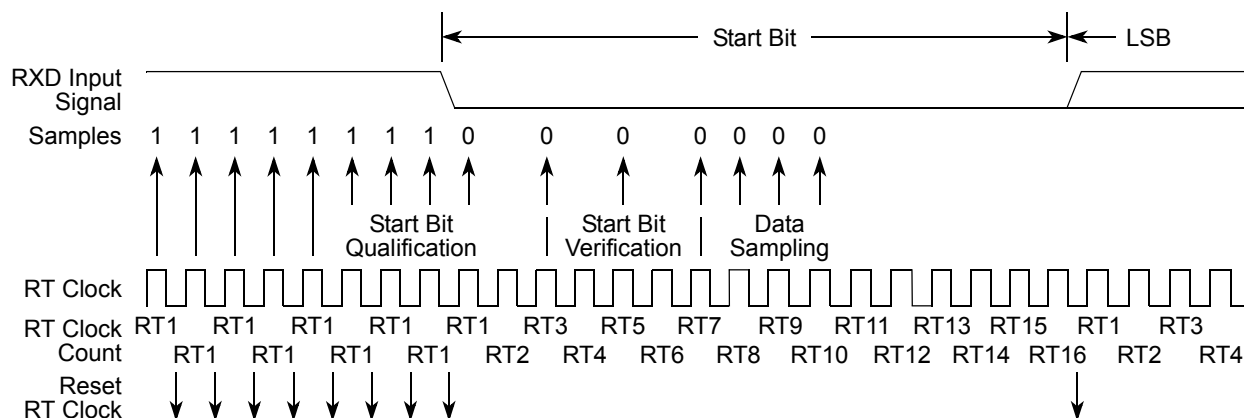


Figure 22-17. Receiver Data Sampling

To verify the start bit and to detect noise, the eSCI data recovery logic takes samples at RT3, RT5, and RT7. Table 22-18 summarizes the results of the start bit verification samples.

Table 22-18. Start Bit Verification

RT3, RT5, and RT7 Samples	Start Bit Verification	Noise Flag
000	Yes	0
001	Yes	1
010	Yes	1

Table 22-18. Start Bit Verification (continued)

RT3, RT5, and RT7 Samples	Start Bit Verification	Noise Flag
011	No	0
100	Yes	1
101	No	0
110	No	0
111	No	0

If start bit verification is not successful, the RT clock is reset and a new search for a start bit begins.

To determine the value of a data bit and to detect noise, eSCI recovery logic takes samples at RT8, RT9, and RT10. [Table 22-19](#) summarizes the results of the data bit samples.

Table 22-19. Data Bit Recovery

RT8, RT9, and RT10 Samples	Data Bit Determination	Noise Flag
000	0	0
001	0	1
010	0	1
011	1	1
100	0	1
101	1	1
110	1	1
111	1	0

NOTE

The RT8, RT9, and RT10 samples do not affect start bit verification. If any or all of the RT8, RT9, and RT10 start bit samples are logic 1s following a successful start bit verification, the noise flag (NF) is set.

To verify a stop bit and to detect noise, recovery logic takes samples at RT8, RT9, and RT10. [Table 22-20](#) summarizes the results of the stop bit samples.


Table 22-20. Stop Bit Recovery

RT8, RT9, and RT10 Samples	Framing Error Flag	Noise Flag
000	1	0
001	1	1
010	1	1
011	0	1
100	1	1
101	0	1

Table 22-20. Stop Bit Recovery (continued)

RT8, RT9, and RT10 Samples	Framing Error Flag	Noise Flag
110	0	1
111	0	0

In [Figure 22-18](#) the verification samples RT3 and RT5 determine that the first low detected was noise and not the beginning of a start bit. The RT clock is reset and the start bit search begins again. The noise flag is not set because the noise occurred before the start bit was found.

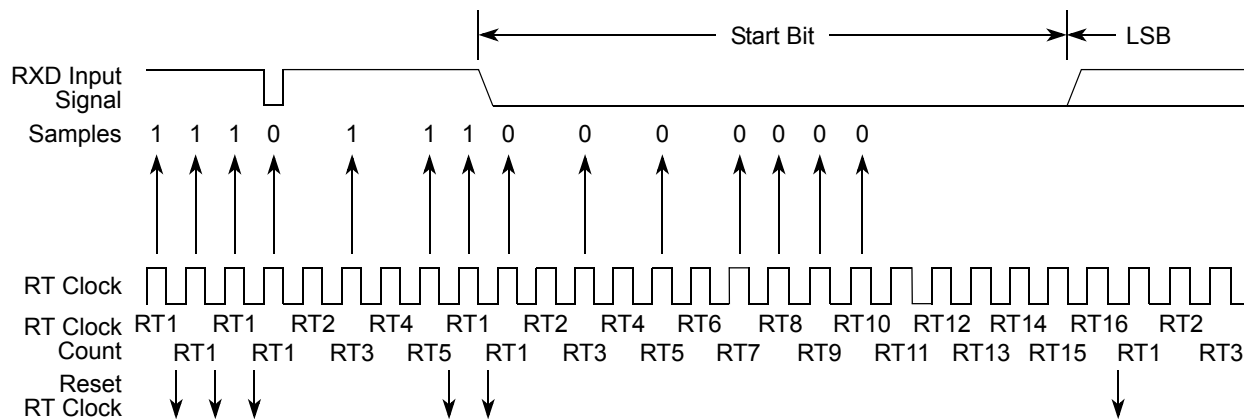
Figure 22-18. Start Bit Search Example

22.4.5.4 Framing Errors

If the data recovery logic sets the framing error flag, ESCIx_SR[FE], it does not detect a logic 1 where the stop bit should be in an incoming frame. A break character also sets the FE flag because a break character has no stop bit. The FE flag is set at the same time that the RDRF flag is set.

22.4.5.5 Baud Rate Tolerance

A transmitting device may be operating at a baud rate below or above the receiver baud rate. Accumulated bit time misalignment can cause one of the three stop bit data samples (RT8, RT9, and RT10) to fall outside the actual stop bit. A noise error will occur if the RT8, RT9, and RT10 samples are not all the same logical values. A framing error will occur if the receiver clock is misaligned in such a way that the majority of the RT8, RT9, and RT10 stop bit samples are a logic zero.

As the receiver samples an incoming frame and re-synchronizes the RT clock on any valid falling edge within the frame. Re-synchronization within frames will correct a misalignment between transmitter bit times and receiver bit times.

22.4.5.5.1 Slow Data Tolerance

Figure 22-19 shows how much a slow received frame can be misaligned without causing a noise error or a framing error. The slow stop bit begins at RT8 instead of RT1 but arrives in time for the stop bit data samples at RT8, RT9, and RT10.

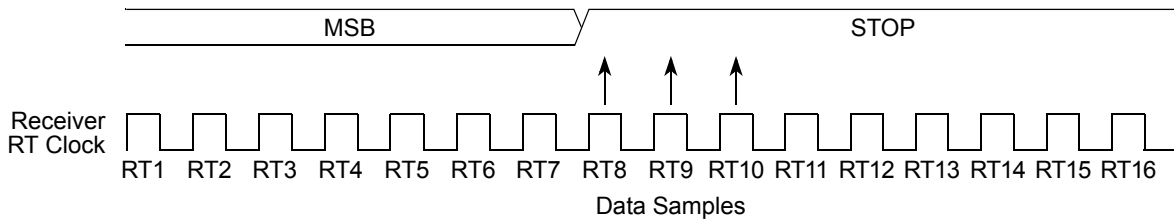


Figure 22-19. Slow Data

For an 8-bit data character, data sampling of the stop bit takes the receiver RT clock 151 clock cycles, as is shown below:

$$9 \text{ bit times} \times 16 \text{ RT cycles} + 7 \text{ RT cycles} = 151 \text{ RT cycles}$$

With the misaligned character shown in Figure 22-19, the receiver counts 151 RT cycles at the point when the count of the transmitting device is 9 bit times x 16 RT cycles = 144 RT cycles.

The maximum percent difference between the receiver count and the transmitter count of a slow 8-bit data character with no errors is 4.63%, as is shown below:

$$\frac{151 - 144}{151} \times 100 = 4.63\%$$

For a 9-bit data character, data sampling of the stop bit takes the receiver 167 RT cycles, as is shown below:

$$10 \text{ bit times} \times 16 \text{ RT cycles} + 7 \text{ RT cycles} = 167 \text{ RT cycles}$$


With the misaligned character shown in Figure 22-19, the receiver counts 167 RT cycles at the point when the count of the transmitting device is 10 bit times x 16 RT cycles = 160 RT cycles.

The maximum percent difference between the receiver count and the transmitter count of a slow 9-bit character with no errors is 4.19%, as is shown below:

$$\frac{167 - 160}{167} \times 100 = 4.19\%$$

22.4.5.5.2 Fast Data Tolerance

Figure 22-20 shows how much a fast received frame can be misaligned. The fast stop bit ends at RT10 instead of RT16 but is still sampled at RT8, RT9, and RT10.

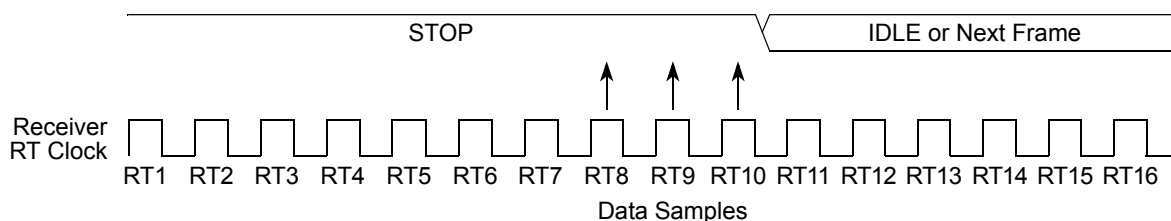
Figure 22-20. Fast Data

For an 8-bit data character, data sampling of the stop bit takes the receiver 154 RT cycles, as is shown below:

$$9 \text{ bit times} \times 16 \text{ RT cycles} + 10 \text{ RT cycles} = 154 \text{ RT cycles}$$

With the misaligned character shown in [Figure 22-20](#), the receiver counts 154 RT cycles at the point when the count of the transmitting device is 10 bit times \times 16 RT cycles = 160 RT cycles.

The maximum percent difference between the receiver count and the transmitter count of a fast 8-bit character with no errors is 3.40%, as is shown below:

$$\frac{160 - 154}{160} \times 100 = 3.40\%$$

For a 9-bit data character, data sampling of the stop bit takes the receiver 170 RT cycles, as shown below:

$$10 \text{ bit times} \times 16 \text{ RT cycles} + 10 \text{ RT cycles} = 170 \text{ RT cycles}$$

With the misaligned character shown in [Figure 22-20](#), the receiver counts 170 RT cycles at the point when the count of the transmitting device is 11 bit times \times 16 RT cycles = 176 RT cycles.

The maximum percent difference between the receiver count and the transmitter count of a fast 9-bit character with no errors is 3.40%, as is shown below:

$$\frac{176 - 170}{176} \times 100 = 3.40\%$$

22.4.5.6 Receiver Wake-up

The receiver can be put into a standby state, which enables the eSCI to ignore transmissions intended only for other receivers in multiple-receiver systems. Setting the receiver wake-up bit, `ESCIx_CR1[RWU]`, in eSCI control register 1 (`ESCIx_CR1`) puts the receiver into standby state during which receiver interrupts are disabled. The eSCI will still load the received data into the `ESCIx_DR`, but it will not set the receive data register full, `RDRF`, flag.

The transmitting device can address messages to selected receivers by including addressing information (address bits) in the initial frame or frames of each message. See [Section 22.4.2, “Data Format,”](#) for an example of address bits.

The WAKE bit in eSCI control register 1 (ESCIx_CR1) determines how the eSCI is brought out of the standby state to process an incoming message. The WAKE bit enables either idle line wake-up or address mark wake-up.

22.4.5.6.1 Idle Input Line Wake-up (WAKE = 0)

Using the receiver idle input line wake-up method allows an idle condition on the RXD signal clears the ESCIx_CR1[RWU] bit and wakes up the eSCI. The initial frame or frames of every message contain addressing information. All receivers evaluate the addressing information, and receivers for which the message is addressed process the frames that follow. Any receiver for which a message is not addressed can set its RWU bit and return to the standby state. The RWU bit remains set and the receiver remains on standby until another idle character appears on the RXD signal.

Idle line wake-up requires that messages be separated by at least one idle character and that no message contains idle characters.

The idle character that wakes a receiver does not set the receiver idle bit, ESCIx_SR[IDLE], or the receive data register full flag, RDRF.

The idle line type bit, ESCIx_CR1[ILT], determines whether the receiver begins counting logic 1s as idle character bits after the start bit or after the stop bit.

22.4.5.6.2 Address Mark Wake-up (WAKE = 1)

Using the address mark wake-up method allows a logic 1 in the most significant bit (msb) position of a frame to clear the RWU bit and wake-up the eSCI. The logic 1 in the msb position marks a frame as an address frame that contains addressing information. All receivers evaluate the addressing information, and the receivers for which the message is addressed process the frames that follow. Any receiver for which a message is not addressed can set its RWU bit and return to the standby state. The RWU bit remains set and the receiver remains on standby until another address frame appears on the RXD signal.

The logic 1 msb of an address frame clears the receiver's RWU bit before the stop bit is received and sets the RDRF flag.

Address mark wake-up allows messages to contain idle characters but requires that the msb be reserved for use in address frames.

NOTE

With the WAKE bit clear, setting the RWU bit after the RXD signal has been idle can cause the receiver to wake-up immediately.

22.4.6 Single-Wire Operation

Normally, the eSCI uses two pins for transmitting and receiving. In single-wire operation, the RXD pin is disconnected from the eSCI. The eSCI uses the TXD pin for both receiving and transmitting.

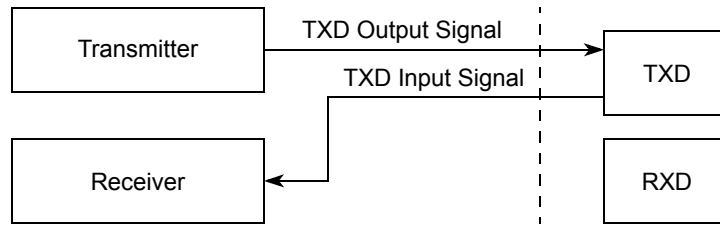


Figure 22-21. Single-Wire Operation (LOOPS = 1, RSRC = 1)

Enable single-wire operation by setting the LOOPS bit and the receiver source bit, RSRC, in eSCI control register 1 (ESCIx_CR1). Setting the LOOPS bit disables the path from the RXD signal to the receiver. Setting the RSRC bit connects the receiver input to the output of the TXD pin driver.

During reception, both the transmitter and receiver must be enabled ($TE = 1$ and $RE = 1$). The SIU_PCR89[PA] and SIU_PCR91[PA] bits must be set to select the TXD function for the relevant eSCI module, and the TXD pin should be set for open drain operation (SIU_PCR nn [ODE] = 1). Weak pull-up may optionally be enabled if the external transmitting device is also open drain. See [Section 6.3.1.12, “Pad Configuration Registers \(SIU_PCR\).”](#)

During transmission, the transmitter must be enabled ($TE=1$); the receiver may be enabled or disabled. If the receiver is enabled ($RE=1$), transmissions will be echoed back on the receiver. Set or clear open drain output enable depending on desired operation.

22.4.7 Loop Operation

In loop operation the transmitter output goes to the receiver input. The RXD signal is disconnected from the eSCI.

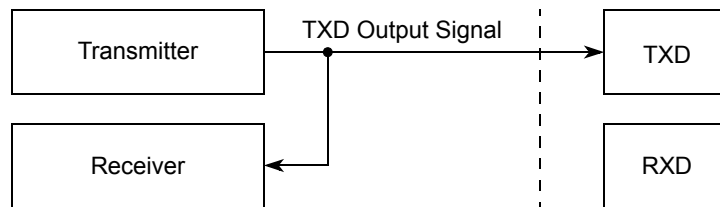


Figure 22-22. Loop Operation (LOOPS = 1, RSRC = 0)

Enable loop operation by setting the LOOPS bit and clearing the RSRC bit in eSCI control register 1 (ESCIx_CR1). Setting the LOOPS bit disables the path from the RXD signal to the receiver. Clearing the RSRC bit connects the transmitter output to the receiver input. Both the transmitter and receiver must be enabled ($TE = 1$ and $RE = 1$).

22.4.8 Modes of Operation

22.4.8.1 Run Mode

This is the normal mode of operation.

NOTE

The eSCI does not support a freeze mode. If the device is being operated in debug mode, the eSCI will continue to shift data if the e200z6 core asserts a freeze.

22.4.8.2 Disabling the eSCI

The module disable bit (ESCIx_CR2[MDIS]) in the eSCI control register 2 can be used to turn off the eSCI. This will save power by stopping the eSCI core from being clocked. By default the eSCI is enabled (ESCIx_CR2[MDIS]=0).

22.4.9 Interrupt Operation

22.4.9.1 Interrupt Sources

There are several interrupt sources that can generate an eSCI interrupt to the CPU. They are listed with details and descriptions in [Table 22-21](#).

Table 22-21. eSCI Interrupt Flags, Sources, Mask Bits, and Descriptions

Interrupt Source	Flag	Source	Local Enable	Description
Transmitter	TDRE	ESCIx_SR[0]	TIE	Indicates that a byte was transferred from ESCIx_DR to the transmit shift register.
Transmitter	TC	ESCIx_SR[1]	TCIE	Indicates that a transmit is complete.
Receiver	RDRF	ESCIx_SR[2]	RIE	Indicates that received data is available in the eSCI data register.
Receiver	IDLE	ESCIx_SR[3]	ILIE	Indicates that receiver input has become idle.
Receiver	OR	ESCIx_SR[4]	ORIE	Indicates that an overrun condition has occurred.
Receiver	NF	ESCIx_SR[5]	NFIE	Detect noise error on receiver input.
Receiver	FE	ESCIx_SR[6]	FEIE	Framing error has occurred.
Receiver	PF	ESCIx_SR[7]	PFIE	Parity of received data does not match parity bit; parity error has occurred.
LIN	BERR	ESCIx_SR[11]	IEBERR	Detected a bit error, only valid in LIN mode.
LIN	RXRDY	ESCIx_SR[16]	RXIE	Indicates LIN hardware has received a data byte.
LIN	TXRDY	ESCIx_SR[17]	TXIE	Indicates LIN hardware can accept a control or data byte.

Table 22-21. eSCI Interrupt Flags, Sources, Mask Bits, and Descriptions (continued)

Interrupt Source	Flag	Source	Local Enable	Description
LIN	LWAKE	ESCIx_SR[18]	WUIE	A wake-up character has been received from a LIN frame.
LIN	STO	ESCIx_SR[19]	STIE	The response of the slave has been too slow (slave timeout).
LIN	PBERR	ESCIx_SR[20]	PBIE	Physical bus error detected.
LIN	CERR	ESCIx_SR[21]	CIE	CRC error detected.
LIN	CKERR	ESCIx_SR[22]	CKIE	Checksum error detected.
LIN	FRC	ESCIx_SR[23]	FCIE	LIN frame completed.
LIN	OVFL	ESCIx_SR[31]	OFIE	ESCIx_LRR overflow.

The eSCI only originates interrupt requests. The following sections describe how the eSCI generates a request and how the MCU acknowledges that request. The eSCI only has a single interrupt line (eSCI interrupt signal, active high operation) and all the following interrupts, when generated, are ORed together and issued through that port.

22.4.9.2 Interrupt Flags

22.4.9.2.1 TDRE Description

The transmit data register empty (TDRE) interrupt is set high by the eSCI when the transmit shift register receives data, 8 or 9 bits, from the eSCI data register, ESCIx_DR. A TDRE interrupt indicates that the transmit data register (ESCIx_DR) is empty and that a new data can be written to the ESCIx_DR for transmission. The TDRE bit is cleared by writing a one to the TDRE bit location in the ESCIx_SR.

22.4.9.2.2 TC Description

The transmit complete (TC) interrupt is set by the eSCI when a transmission has completed. A TC interrupt indicates that there is no transmission in progress. TC is set high when the TDRE flag is set and no data, preamble, or break character is being transmitted. When TC is set, the TXD pin becomes idle (logic 1). The TC bit is cleared by writing a one to the TC bit location in the ESCIx_SR.

22.4.9.2.3 RDRF Description

The receive data register full (RDRF) interrupt is set when the data in the receive shift register transfers to the eSCI data register. An RDRF interrupt indicates that the received data has been transferred to the eSCI data register and that the received data can now be read by the MCU. The RDRF bit is cleared by writing a one to the RDRF bit location in the ESCIx_SR.

22.4.9.2.4 OR Description

The overrun (OR) interrupt is set when software fails to read the eSCI data register before the receive shift register receives the next frame. The newly acquired data in the shift register is lost in this case, but the

data already in the eSCI data registers is not affected. The OR bit is cleared by writing a one to the OR bit location in the ESCIx_SR.

22.4.9.2.5 IDLE Description

The idle line (IDLE) interrupt is set when 10 consecutive logic 1s (if M = 0) or 11 consecutive logic 1s (if M = 1) appear on the receiver input. Once the IDLE is cleared, a valid frame must again set the RDRF flag before an idle condition can set the IDLE flag. The IDLE bit is cleared by writing a one to the IDLE bit location in the ESCIx_SR.

22.4.9.2.6 PF Description

The interrupt is set when the parity of the received data is not correct. PF is cleared by writing it with 1.

22.4.9.2.7 FE Description

The interrupt is set when the stop bit is read as a 0; which violates the SCI protocol. FE is cleared by writing it with 1.

22.4.9.2.8 NF Description

The NF interrupt is set when the eSCI detects noise on the receiver input.

22.4.9.2.9 BERR Description

While the eSCI is in LIN mode, the bit error (BERR) flag is set when one or more bits in the last transmitted byte is not read back with the same value. The BERR flag is cleared by writing a 1 to the bit. A bit error will cause the LIN FSM to reset. The BERR flag is cleared by writing a 1 to the bit.

22.4.9.2.10 RXRDY Description

While in LIN mode, the receiver ready (RXRDY) flag is set when the eSCI receives a valid data byte in an RX frame. RXRDY will not be set for bytes which the receiver obtains by reading back the data which the LIN finite state machine (FSM) has sent out. The RXRDY flag is cleared by writing a 1 to the bit.

22.4.9.2.11 TXRDY Description

While in LIN mode, the transmitter ready (TXRDY) flag is set when the eSCI can accept a control or data byte. The TXRDY flag is cleared by writing a 1 to the bit.

22.4.9.2.12 LWAKE Description

The LIN wake-up (LWAKE) flag is set when the LIN hardware receives a wake-up character sent by one of the LIN slaves. This occurs only when the LIN bus is in sleep mode. The LWAKE flag is cleared by writing a 1 to the bit.

22.4.9.2.13 STO Description

The slave timeout (STO) flag is set during an RX frame when the LIN slave has not transmitted all requested data bytes before the specified timeout period. The STO flag is cleared by writing a 1 to the bit.

22.4.9.2.14 PBERR Description

If the RXD input remains stuck at a fixed value for 15 cycles after a transmission has started, the LIN hardware sets the physical bus error (PBERR) flag. The PBERR flag is cleared by writing a 1 to the bit.

22.4.9.2.15 CERR Description

If an RX frame has the CRC checking flag set and the two CRC bytes do not match the calculated CRC pattern, the CRC error (CERR) flag is set. The CERR flag is cleared by writing a 1 to the bit.

22.4.9.2.16 CKERR Description

If an RX frame has the checksum checking flag set and the last byte does not match the calculated checksum, the checksum error (CKERR) flag is set. The CKERR flag is cleared by writing a 1 to the bit.

22.4.9.2.17 FRC Description

The frame complete (FRC) flag is set after the last byte of a TX frame is sent out, or after the last byte of an RX frame is received. The FRC flag is cleared by writing a 1 to the bit.

NOTE

The last byte of a TX frame being sent or an RX frame being received indicates that the checksum comparison has taken place.

NOTE

The FRC flag is used to indicate to the CPU that the next frame can be set up. However, it should be noted that it might be set before the DMA controller has transferred the last byte from the eSCI to system memory. The FRC flag should not be used if the intention is to process data. Instead, the appropriate interrupt of the DMA controller should be used.

22.4.9.2.18 OVFL Description

The overflow (OVFL) flag is set when a byte is received in the ESCIx_LRR before the previous byte is read. Since the system is responsible for reading the register before the next byte arrives, this condition indicates a problem with CPU load. The OVFL flag is cleared by writing a 1 to the bit.

22.4.10 Using the LIN Hardware

The eSCI provides special support for the LIN protocol. It can be used to automate most tasks of a LIN master. In conjunction with the DMA interface it is possible to transmit entire frames (or sequences of frames) and receive data from LIN slaves without any CPU intervention. There is no special support for LIN slave mode. If required, LIN slave mode may be implemented in software.

A LIN frame consists of a break character (10 or 13 bits), a sync field, an ID field, n data fields (n could be 0) and a checksum field. The data and checksum bytes are either provided by the LIN master (TX frame) or by the LIN slave (RX frame). The header fields will always be generated by the LIN master.



Figure 22-23. Typical LIN frame

The LIN hardware is highly configurable. This configurability allows the eSCI’s LIN hardware to generate frames for LIN slaves from all revisions of the LIN standard. The settings are adjusted according to the capabilities of the slave device.

In order to activate the LIN hardware, the LIN mode bit in the ESCIx_LCR needs to be set. Other settings, such as double stop flags after bit errors and automatic parity bit generation, are also available for use in LIN mode.

The eSCI settings must be made according to the LIN specification. The eSCI must be configured for 2-wire operation (2 wires connected to the LIN transceiver) with 8 data bytes and no parity. Normally a 13-bit break is used, but the eSCI can also be configured for 10-bit breaks as required by the application.

22.4.10.1 Features of the LIN Hardware

The eSCI’s LIN hardware has several features to support different revisions of the LIN slaves. The ESCIx_LTR can be configured to include or not include header bits in the checksum on a frame by frame basis. This feature supports LIN slaves with different LIN revisions. The LIN control register allows the user to decide whether the parity bits in the ID field should be calculated automatically and whether double stop flags should be inserted after a bit error. The BRK13 bit in ESCIx_CR2 decides whether to generate 10 or 13 bit break characters.

NOTE

LIN 2.0 now requires that a break character is always 13 bits long, so the BRK13 bit should always be set to 1. The eSCI will work with BRK13=0, but it will violate LIN 2.0.

The application software can decide to turn off the checksum generation/verification on a per frame basis and handle that function on its own. The application software can also decide to let the LIN hardware append two CRC bytes (Figure 22-24). The CRC bytes are not part of the LIN standard, but could be part of the application layer, that is they would be treated as data bytes by the LIN protocol. This can be useful when very long frames are transmitted. By default the CRC polynomial used is the same polynomial as for the CAN protocol.




Figure 22-24. LIN Frame with CRC bytes

It is possible to force a resync of the LIN FSM, with the LRES bit in the LIN control register. However, under normal circumstances, the LIN hardware will automatically abort a frame after detecting a bit error.

22.4.10.2 Generating a TX Frame

The following procedure describes how a basic TX frame is generated.

The frame is controlled via the LIN transmit register (ESCIx_LTR). Initially, the application software will need to check the TXRDY bit (either using an interrupt, the TX DMA interface, or by polling the LIN status register). If TXRDY is set, the register is writable. Before each write, TXRDY must be checked (though this step is performed automatically in DMA mode). The first write to the ESCIx_LTR must contain the LIN ID field. The next write to ESCIx_LTR specifies the length of the frame (0 to 255 Bytes). The third write to ESCIx_LTR contains the control byte (frame direction, checksum/CRC settings). Note that timeout bits are not included in TX frames, since they only refer to LIN slaves. The three previously mentioned writes to the ESCIx_LTR specify the LIN frame data. Once the LIN frame data is specified, the eSCI LIN hardware starts to generate a LIN frame.

First, the eSCI transmits a break field. The sync field is transmitted next. The third field is the ID field. After these three fields have been broadcast, the ESCIx_LTR accepts data bytes; the LIN hardware transmits these data bytes as soon as they are available and can be sent out. After the last step the LIN hardware automatically appends the checksum field.

It is possible to set up a DMA channel to handle all the tasks required to send a TX frame. (See [Figure 22-25](#) for more information.) For this operation, the TX DMA channel must be activated by setting the ESCIx_CR2[TXDMA] bit. The control information for the LIN frame (ID, message length, TX/RX type, timeout, etc.) and the data bytes are stored at an appropriate memory location. The DMA controller is then set up to transfer this block of memory to a location (the ESCIx_LTR). After transmission is complete, either the DMA controller or the LIN hardware can generate an interrupt to the CPU.

NOTE

In contrast to the standard software implementation where each byte transmission requires several interrupts, the DMA controller and eSCI handle communication, bit error and physical bus error checking, checksum, and CRC generation (checking on the RX side).

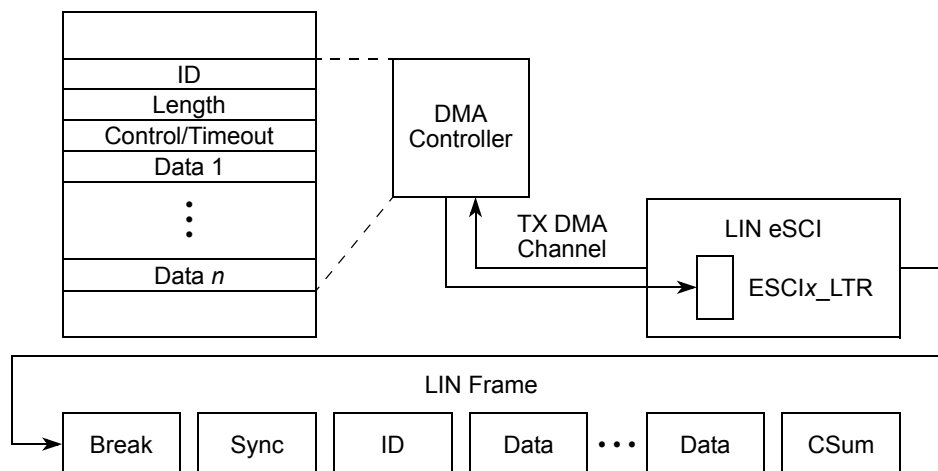


Figure 22-25. DMA Transfer of a TX frame

22.4.10.3 Generating an RX Frame

For RX frames the header information is provided by the LIN master. The data, CRC and checksum bytes (as enabled) are provided by the LIN slave. The LIN master verifies CRC and checksum bytes transmitted by the slave.

For an RX frame, control information must be written to the ESCIx_LTR in the same manner as for the TX frames. Additionally the timeout bits, which define the time to complete the entire frame, must be written. Then the ESCIx_SR[RXRDY] bit must be checked (either with an interrupt, RX DMA interface, or by polling) to detect incoming data bytes. The checksum byte normally does not appear in the ESCIx_LRR, instead the LIN hardware will verify the checksum and issue an interrupt, if the checksum value is not correct.

Two DMA channels can be used when executing an RX frame: one to transfer the header/control information from a memory location to the ESCIx_LTR, and one to transfer the incoming data bytes from the ESCIx_LRR to a table in memory. See Figure 22-26 for more information. After the last byte from the RX frame has been stored, the DMA controller can indicate completion to the CPU.

NOTE

It is also possible to setup a whole sequence of RX and TX frames, and generate a single event at the end of that sequence.

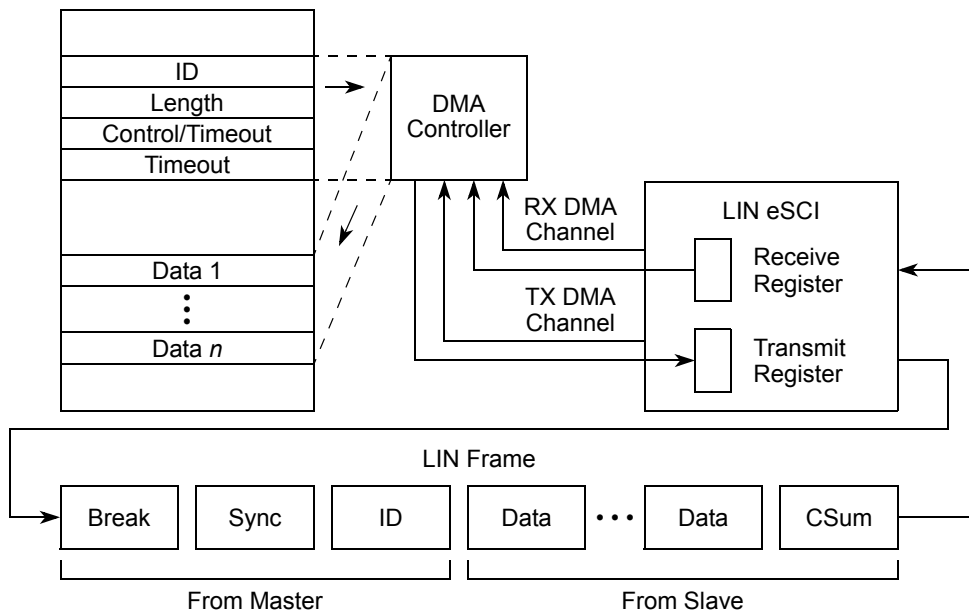


Figure 22-26. DMA Transfer of an RX frame

22.4.10.4 LIN Error Handling

The LIN hardware can detect several error conditions of the LIN protocol. LIN hardware will receive every byte that was transmitted, and compare it with the intended values. If there is a mismatch, a bit error is issued, and the LIN FSM will return to its start state.

For an RX frame the LIN hardware can detect a slave timeout error. The exact slave timeout error value can be set via the timeout bits in the `ESCIx_LTR`. If the frame is not complete within the number of clock cycles specified in the register, the LIN FSM will return to its start state, and the STO interrupt is issued.

The LIN protocol supports a sleep mode. After 25,000 bus cycles of inactivity the bus is assumed to be in sleep mode. Normally entering sleep mode can be avoided, if the LIN master is regularly creating some bus activity. Otherwise the timeout state needs to be detected by the application software, for example by setting a timer.

Both LIN masters and LIN slaves can cause the bus to exit sleep mode by sending a break signal. The LIN hardware will generate such a break, when WU bit in the LIN control register is written. After transmitting this break the LIN hardware will not send out data (that is not raise the TXRDY flag) before the wake-up delimiter period has expired. This period can be selected by setting the WUD bits in the LIN control register.

Break signals sent by a LIN slave are received by the LIN hardware, and so indicated by setting the WAKE flag in the LIN status register.

A physical bus error (LIN bus is permanently stuck at a fixed value) will set several error flags. If the input is permanently low, the eSCI will set the framing error (FE) flag in the eSCI status register. If the RXD input remains stuck at a fixed value for 15 cycles, after a transmission has started, the LIN hardware will set the PBERR flag in the LIN status register. In addition a bit error may be generated.

22.4.10.5 LIN Setup

Since the eSCI is for general-purpose use, some of the settings are not applicable for LIN operation. The following setup applies for most applications, regardless of which kind of LIN slave is addressed:

- a) The module is enabled by writing the `ESCIx_CR2[MDIS]` bit to 0.
- b) Both transmitter and receiver are enabled (`ESCIx_CR1[TE] = 1`, `ESCIx_CR1[RE] = 1`).
- c) The data format bit `ESCIx_CR1[M]`, is set to 0 (8 data bits), and the parity is disabled (`PE = 0`).
- d) `ESCIx_CR1[TIE]`, `ESCIx_CR1[TCIE]`, `ESCIx_CR1[RIE]` interrupt enable bits should be inactive. Instead, the LIN interrupts should be used.
- e) Switch eSCI to LIN mode (`ESCIx_LCR[LIN] = 1`).
- f) The LIN standard requires that the break character always be 13 bits long (`ESCIx_CR2[BRK13] = 1`). The eSCI will work with `BRK13=0`, but it will violate LIN 2.0.
- g) Normally, bit errors should cause the LIN FSM to reset, stop driving the bus immediately, and stop further DMA requests until the BERR flag has been cleared. Set `ESCIx_LCR[LDBG] = 0`, `ESCIx_CR2[SBSTP] = 1`, and `ESCIx_CR2[BSTP] = 1` to accomplish these functions.
- h) Fast bit error detection provides superior error checking, so `ESCIx_CR2[FBR]` should be set; normally it will be used with `ESCIx_CR2[BESM13] = 1`.

Enhanced Serial Communication Interface (eSCI)

- i) If available, a pulldown should be enabled on the RX input. (Thus if the transceiver fails, the RX pin will not float).
- j) The error indicators NF, FE, BERR, STO, PBERR, CERR, CKERR, and OVFL should be enabled.
- k) Initially a wake-up character may need to be transmitted on the LIN bus, so that the LIN slaves activate.

Other settings like baud rate, length of break character etc., depend on the LIN slaves to which the eSCI is connected.

22.5 Document Revision History

Table 22. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 23

FlexCAN2 Controller Area Network

23.1 Introduction

The device MCU contains five controller area network (FlexCAN2) modules. Each FlexCAN2 module is a communication controller implementing the CAN protocol according to CAN Specification version 2.0B and ISO Standard 11898. Each FlexCAN2 module contains a 1024-byte embedded memory, capable of storing up to 64 message buffers (MBs). The respective functions are described in subsequent sections.

Each FlexCAN module contains two embedded memories, one a 1056-byte embedded memory, capable of storing 64 Message Buffers (MB), the other for storing RX individual mask registers.

This FlexCAN2 version implements individual mask registers and a reception queue thereby allowing queuing of received frames before requiring interrupt processing. Also included is a feature for disabling self-reception of TX frames.

23.1.1 Block Diagram

A general block diagram is shown in [Figure 23-1](#), which describes the main submodules implemented in the FlexCAN2 module, including an embedded RAM for up to 64 message buffers.

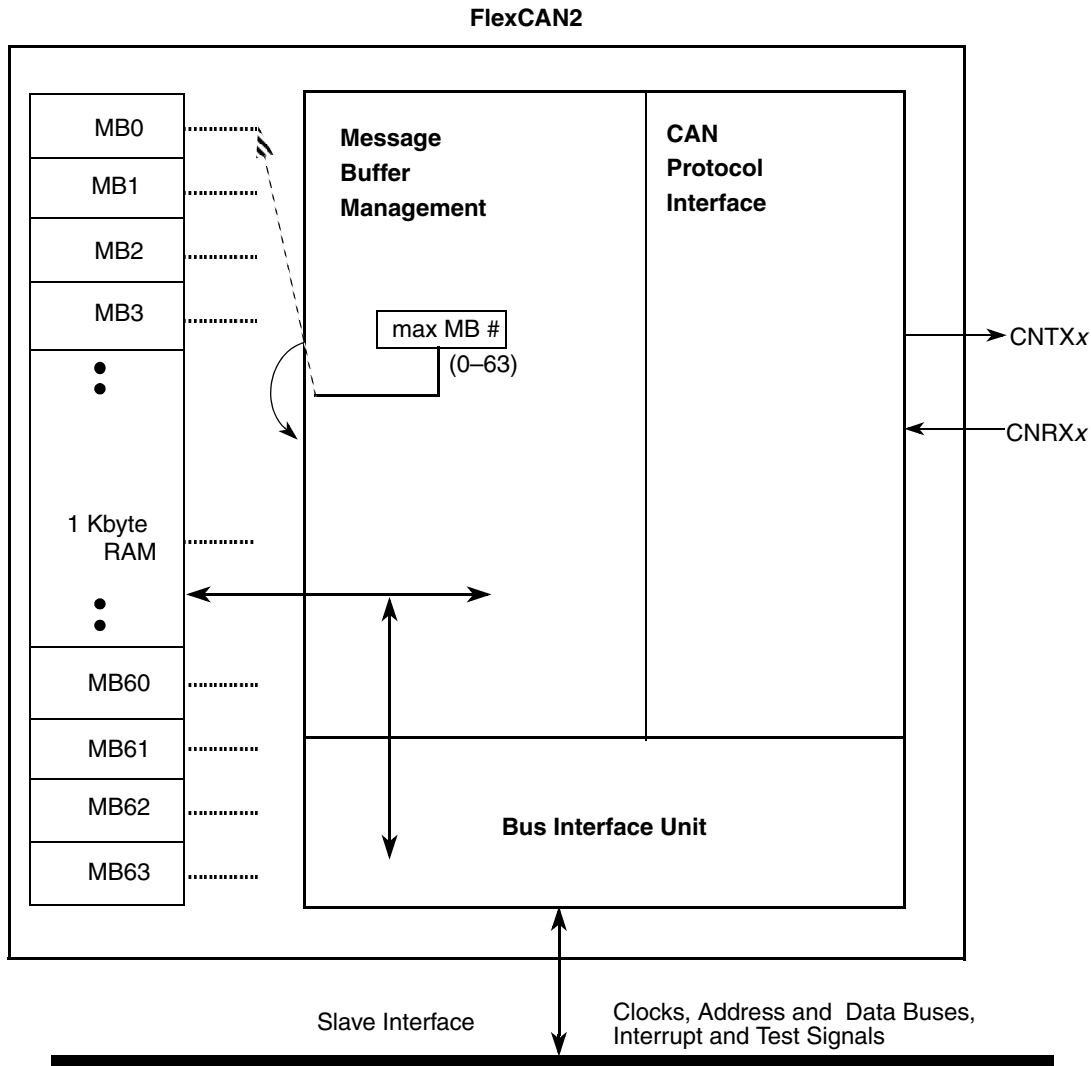


Figure 23-1. FlexCAN2 Block Diagram

23.1.2 Overview

The CAN protocol was designed primarily, but not exclusively, to be used as a vehicle serial data bus, meeting the specific requirements of this field: real-time processing, reliable operation in the EMI environment of a vehicle, cost-effectiveness and required bandwidth. The FlexCAN2 module is a full implementation of the CAN protocol specification, Version 2.0 B, which supports both standard and extended message frames. Sixty-four message buffers (MBs) are stored in an embedded 1024-byte RAM dedicated to the FlexCAN2 module.

The CAN protocol interface (CPI) manages the serial communication on the CAN bus, requesting RAM access for receiving and transmitting message frames, validating received messages and performing error handling. The message buffer management (MBM) handles message buffer selection for reception and transmission, taking care of arbitration and ID matching algorithms. The bus interface unit (BIU) controls

the access to and from the internal interface bus, in order to establish connection to the CPU and to any other modules. Clocks, address and data buses, interrupt outputs and test signals are accessed through the bus interface unit.

23.1.3 Features

The FlexCAN2 module includes these distinctive features:

- Based on and includes all existing features of the Freescale TouCAN module
- Reception queue available by setting more than one RX message buffer with the same ID
- Programmable for either global (compatible with previous versions) or individual receive ID masking
- Maskable self-reception by setting MCR[SRXDIS]
- Full implementation of the CAN protocol specification, version 2.0B
 - Standard data and remote frames
 - Extended data and remote frames
 - Data length of 0 to 8 bytes
 - Programmable bit rate up to 1 Mb/sec
- Content-related addressing
- 64 flexible message buffers of 0 to 8 bytes data length
- Each MB configurable as RX or TX, all supporting standard and extended messages
-
- Includes 1024 bytes of RAM used for message buffer storage
- Programmable clock source to the CAN protocol interface, either system clock or oscillator clock
- Listen-only mode capability
- Programmable loop-back mode supporting self-test operation
-
- Programmable transmit-first scheme: lowest ID or lowest buffer number
- Time stamp based on 16-bit free-running timer
- Global network time, synchronized by a specific message
- Maskable interrupts
- Independent of the transmission medium (an external transceiver is assumed)
- Multi master concept
- High immunity to EMI
- Short latency time due to an arbitration scheme for high-priority messages

23.1.4 Modes of Operation

The device supports four FlexCAN functional modes: normal, freeze, listen-only and loop-back. One low power mode, module disabled, is supported.

23.1.4.1 Normal Mode

In normal mode, the module operates receiving and/or transmitting message frames, errors are handled normally and all the CAN protocol functions are enabled. In this device, there is no distinction between user and supervisor modes.

23.1.4.2 Freeze Mode

Freeze mode is entered when the FRZ bit in the module configuration register (CAN_x_MCR) is asserted while the HALT bit in the CAN_x_MCR is set or debug mode is requested by the NPC. In freeze mode no transmission or reception of frames is done, and synchronization with the CAN bus is lost. See [Section 23.4.6.1, “Freeze Mode,”](#) for more information.

23.1.4.3 Listen-Only Mode

The module enters this mode when the LOM bit in the CAN_x_CR is asserted. In this mode, FlexCAN operates in a CAN error passive mode, freezing all error counters and receiving messages without sending acknowledgments.

23.1.4.4 Loop-Back Mode

The module enters this mode when the LPB bit in the CAN_x_CR is asserted. In this mode, FlexCAN performs an internal loop back that can be used for self test operation. The bit stream output of the transmitter is internally fed back to the receiver input. The CAN receive input pin (CNRX_x) is ignored and the transmit output (CNTX_x) goes to the recessive state (logic 1). FlexCAN behaves as it normally does when transmitting, and treats its own transmitted message as a message received from a remote node. In this mode, FlexCAN ignores the bit sent during the ACK slot in the CAN frame acknowledge field to ensure proper reception of its own message. Both transmit and receive interrupts are generated.

23.1.4.5 Module Disabled Mode

This low power mode is entered when the MDIS bit in the CAN_MCR is asserted. When disabled, the module shuts down the clocks to the CAN protocol interface and message buffer management submodules. Exit from this mode is done by negating the CAN_MCR[MDIS] bit. See [Section 23.4.6.2, “Module Disabled Mode,”](#) for more information.

23.2 External Signal Description

23.2.1 Overview

The FlexCAN2 module has two I/O signals connected to the external MCU pins. These signals are summarized in [Table 23-1](#) and described in more detail in the next sub-sections.

Table 23-1. FlexCAN2 Signals

Signal Name ¹	Direction	Description
CNRX _x	I	CAN receive
CNTX _x	O	CAN transmit

¹ x indicates FlexCAN2 module A, B, C, D, or E.

23.2.2 Detailed Signal Description

23.2.2.1 CNRX_x

This pin is the receive pin to the CAN bus transceiver. The dominant state is represented by logic level 0. The recessive state is represented by logic level 1.

23.2.2.2 CNTX_x

This pin is the transmit pin to the CAN bus transceiver. The dominant state is represented by logic level 0. The recessive state is represented by logic level 1.

23.3 Memory Map/Register Definition

This section describes the registers and data structures in the FlexCAN2 module. The addresses presented here are relative to the base address of the module.

The address space occupied by FlexCAN2 is continuous: 128 bytes for registers starting at the module base address, extra space for MB storage, and 1024 bytes for 64 MBs.

23.3.1 Memory Map

The complete memory map for a FlexCAN2 module with its 64 MBs is shown in [Table 23-2](#). Except for the base addresses, the five FlexCAN2 modules have identical memory maps. Each individual register is identified by its complete name and the corresponding mnemonic.

Table 23-2. Module Memory Map

Address	Register Name	Register Description	Size (bits)
Base = 0xFFFC_0000 (FlexCAN A) Base = 0xFFFC_4000 (FlexCAN B) Base = 0xFFFC_8000 (FlexCAN C) Base = 0xFFFC_C000 (FlexCAN D) Base = 0xFFFD_0000 (FlexCAN E)	CAN _x _MCR	Module configuration register	32
Base + 0x0004	CAN _x _CR	Control register	32
Base + 0x0008	CAN _x _TIMER	Free running timer	32
Base + 0x000C	—	Reserved	—
Base + 0x0010	CAN _x _RXGMASK	RX global mask	32
Base + 0x0014	CAN _x _RX14MASK	RX buffer 14 mask	32

Table 23-2. Module Memory Map (continued)

Base + 0x0018	CANx_RX15MASK	RX buffer 15 mask	32
Base + 0x001C	CANx_ECR	Error counter register	32
Base + 0x0020	CANx_ESR	Error and status register	32
Base + 0x0024	CANx_IMRH	Interrupt masks high register	32
Base + 0x0028	CANx_IMRL	Interrupt masks low register	32
Base + 0x002C	CANx_IFRH	Interrupt flags high register	32
Base + 0x0030	CANx_IFRL	Interrupt flags low register	32
Base + 0x0034– Base + 0x005F	—	Reserved	—
Base + 0x0060– Base + 0x007F	—	Reserved	—
Base + 0x0080– Base + 0x017F	MB0–MB15	Message buffers 0–15	128 bits per MB
Base + 0x0180– Base + 0x027F	MB16–MB31	Message buffers 16–31	128 bits per MB
Base + 0x0280– Base + 0x047F	MB32–MB63	Message buffers 32–63	128 bits per MB
Base + 0x0880 - Base + 0x08BF	CANx_RXIMR0 – CANx_RXIMR15	RX individual mask register 0–15	32
Base + 0x08C0 - Base + 0x08FF	CANx_RXIMR16 – CANx_RXIMR31	RX individual mask register 16–31	32
Base + 0x0900 - Base + 0x097F	CANx_RXIMR32 – CANx_RXIMR63	RX individual mask register 32–63	32

The FlexCAN2 module stores CAN messages for transmission and reception using a message buffer structure. Each individual MB is formed by 16 bytes mapped in memory as described in [Table 23-3](#). The FlexCAN2 module can manage up to 64 message buffers. [Table 23-3](#) shows a standard/extended message buffer (MB0) memory map, using 16 bytes (0x80–0x8F) total space.

Table 23-3. Message Buffer MB0 Memory Mapping

Address Offset	MB Field
0x80	Control and Status (C/S)
0x84	Identifier Field
0x88–0x8F	Data fields 0–7 (1 byte each)

NOTE

Reading the C/S word of a message buffer (the first word of each MB) will lock it, preventing it from receiving further messages until it is unlocked either by reading another MB or by reading the timer.

23.3.2 Message Buffer Structure

The message buffer structure used by the FlexCAN2 module is represented in [Figure 23-2](#). Both extended and standard frames (29-bit identifier and 11-bit identifier, respectively) used in the CAN specification (version 2.0 Part B) are represented.

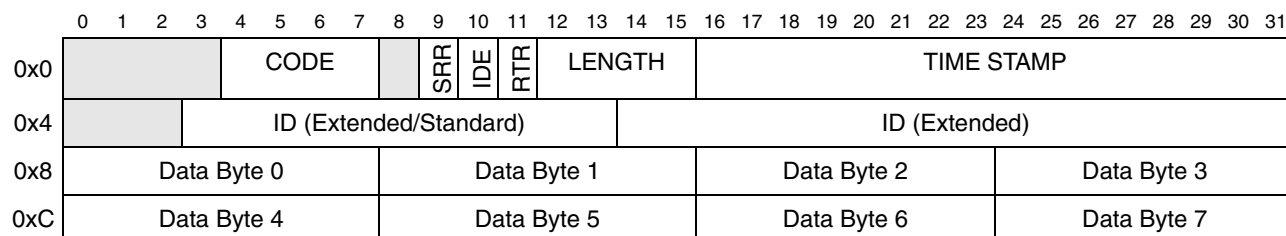


Figure 23-2. Message Buffer Structure

Table 23-4. Message Buffer Field Descriptions

Name	Description
CODE	Message buffer code. This 4-bit field can be accessed (read or write) by the CPU and by the FlexCAN2 module itself, as part of the message buffer matching and arbitration process. The encoding is shown in Table 23-5 and Table 23-6 . See Section 23.4, “Functional Description,” for additional information.
SRR	Substitute remote request. Fixed recessive bit, used only in extended format. It must be set to ‘1’ by the user for transmission (TX Buffers) and will be stored with the value received on the CAN bus for RX receiving buffers. It can be received as either recessive or dominant. If FlexCAN2 receives this bit as dominant, then it is interpreted as arbitration loss. 0 Dominant is not a valid value for transmission in extended format frames 1 Recessive value is compulsory for transmission in extended format frames
IDE	ID extended bit. This bit identifies whether the frame format is standard or extended. 0 Frame format is standard 1 Frame format is extended
RTR	Remote transmission request. This bit is used for requesting transmissions of a data frame. If FlexCAN2 transmits this bit as ‘1’ (recessive) and receives it as ‘0’ (dominant), it is interpreted as arbitration loss. If this bit is transmitted as ‘0’ (dominant), then if it is received as ‘1’ (recessive), the FlexCAN2 module treats it as bit error. If the value received matches the value transmitted, it is considered as a successful bit transmission. 0 Indicates the current MB has a data frame to be transmitted 1 Indicates the current MB has a remote frame to be transmitted
LENGTH	Length of data in bytes. This 4-bit field is the length (in bytes) of the RX or TX data, which is located in offset 0x8 through 0xF of the MB space (see Figure 23-2). In reception, this field is written by the FlexCAN2 module, copied from the DLC (data length code) field of the received frame. In transmission, this field is written by the CPU and corresponds to the DLC field value of the frame to be transmitted. When RTR = 1, the Frame to be transmitted is a remote frame and does not include the data field, regardless of the length field.
TIME STAMP	Free-running counter time stamp. This 16-bit field is a copy of the free-running timer, captured for Tx and Rx frames at the time when the beginning of the Identifier field appears on the CAN bus.

Table 23-4. Message Buffer Field Descriptions (continued)

Name	Description
ID	Frame identifier. In standard frame format, only the 11 most significant bits (28 to 18) are used for frame identification in both receive and transmit cases. The 18 least significant bits are ignored. In extended frame format, all bits are used for frame identification in both receive and transmit cases.
DATA	Data field. Up to eight bytes can be used for a data frame. For RX frames, the data is stored as it is received from the CAN bus. For TX frames, the CPU prepares the data field to be transmitted within the frame.

Table 23-5. Message Buffer Code for RX Buffers

RX Code before RX New Frame	Description	RX Code after RX New Frame	Comment
0000	NOT ACTIVE: MB is not active.	—	MB does not participate in the matching process.
0100	EMPTY: MB is active and empty.	0010	MB participates in the matching process. When a frame is received successfully, the code is automatically updated to FULL.
0010	FULL: MB is full.	0010	The act of reading the C/S word followed by unlocking the MB does not make the code return to EMPTY. It remains FULL. If a new frame is written to the MB after the C/S word was read and the MB was unlocked, the code still remains FULL.
		0110	If the MB is FULL and a new frame is overwritten to this MB before the CPU had time to read it, the code is automatically updated to OVERRUN. Refer to Section 23.4.3.1, “Matching Process for details about overrun behavior.
0110	OVERRUN: A frame was overwritten into a full buffer.	0010	If the code indicates OVERRUN but the CPU reads the C/S word and then unlocks the MB, when a new frame is written to the MB the code returns to FULL.
		0110	If the code already indicates OVERRUN, and yet another new frame must be written, the MB will be overwritten again, and the code will remain OVERRUN. Refer to Section 23.4.3.1, “Matching Process for details about overrun behavior.
0XY1 ¹	BUSY: FlexCAN is updating the contents of the MB. The CPU must not access the MB.	0010	An EMPTY buffer was written with a new frame (XY was 01).
		0110	A FULL/OVERRUN buffer was overwritten (XY was 11).

¹ Note that for TX MBs (see [Table 23-6](#)), the BUSY bit should be ignored upon read.

Table 23-6. Message Buffer Code for TX Buffers

RTR	Initial TX Code	Code after Successful Transmission	Description
X	1000	—	INACTIVE: MB does not participate in the arbitration process.
0	1100	1000	Transmit data frame unconditionally once. After transmission, the MB automatically returns to the INACTIVE state.
1	1100	0100	Transmit remote frame unconditionally once. After transmission, the MB automatically becomes and RX MB with the same ID.
0	1010	1010	Transmit a data frame whenever a remote request frame with the same ID is received. This MB participates simultaneously in both the matching and arbitration processes. The matching process compares the ID of the incoming remote request frame with the ID of the MB. If a match occurs this MB is allowed to participate in the current arbitration process and the CODE field is automatically updated to '1110' to allow the MB to participate in future arbitration runs. When the frame is eventually transmitted successfully, the Code automatically returns to '1010' to restart the process again.
0	1110	1010	the MBM as a result of match to a remote request frame. The data frame will be transmitted unconditionally once and then the code will automatically return to '1010'. The CPU can also write this code with the same effect.

23.3.3 Register Descriptions

The FlexCAN2 registers are described in this section. Note that there are separate, identical FlexCAN2 modules. Each register in the following sections is denoted with an 'x' that represents the specified module.

23.3.3.1 Module Configuration Register (CANx_MCR)

CANx_MCR defines global system configurations, such as the module operation mode and maximum message buffer configuration. Most of the fields in this register can be accessed at any time, except the MAXMB field, which should only be changed while the module is in freeze mode.

Address: Base + 0x0000

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	MDIS	FRZ	0	HALT	NOTRDY	0	SOFTTRST	FRZACK	1	0	WRN EN	MDISACK	0	0	SRX DIS	MBFEN
W																
Reset	0	1	0	1	1	0	0	1	1	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	0	0	0	0	0	0	0	0	0	0	MAXMB					
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1

Figure 23-3. Module Configuration Register (CANx_MCR)

Table 23-7. CANx_MCR Field Descriptions

Field	Description
0 MDIS	Module disable. Controls whether FlexCAN2 is enabled or not. When disabled, FlexCAN2 shuts down the clock to the CAN protocol interface and message buffer management submodules. This is the only bit in CANx_MCR not affected by soft reset. See Section 23.4.6.2, “Module Disabled Mode,” for more information. 0 Enable the FlexCAN2 module 1 Disable the FlexCAN2 module
1 FRZ	Freeze enable. Specifies the FlexCAN2 behavior when the HALT bit in the CANx_MCR is set or when debug mode is requested at MCU level. When FRZ is asserted, FlexCAN2 is enabled to enter freeze mode. Negation of this bit field causes FlexCAN2 to exit from freeze mode. 0 Not enabled to enter freeze mode 1 Enabled to enter freeze mode
2	Reserved.
3 HALT	Halt FlexCAN. Assertion of this bit puts the FlexCAN2 module into freeze mode if FRZ is asserted. The CPU should clear it after initializing the message buffers and CANx_CR. If FRZ is set, no reception or transmission is performed by FlexCAN2 before this bit is cleared. While in freeze mode, the CPU has write access to the CANx_ECR, that is otherwise read-only. Freeze mode cannot be entered while FlexCAN2 is disabled. See Section 23.4.6.1, “Freeze Mode,” for more information. 0 No freeze mode request. 1 Enters freeze mode if the FRZ bit is asserted.
4 NOTRDY	FlexCAN2 not ready. Indicates that FlexCAN2 is either disabled or in freeze mode. It is negated once FlexCAN2 has exited these modes. 0 FlexCAN2 module is either in normal mode, listen-only mode or loop-back mode 1 FlexCAN2 module is either disabled or freeze mode
5	Reserved.
6 SOFTRST	Soft reset. When asserted, FlexCAN2 resets its internal state machines and some of the memory-mapped registers. The following registers are affected by soft reset: <ul style="list-style-type: none"> • CANx_MCR (except the MDIS bit), • CANx_TIMER, • CANx_ECR, • CANx_ESR, • CANx_IMRL, • CANx_IMRH, • CANx_IFRL, • CANx_IFRH. Configuration registers that control the interface to the CAN bus are not affected by soft reset. The following registers are unaffected: <ul style="list-style-type: none"> • CANx_CR • CANx_RXGMASK • CANx_RX14MASK • CANx_RX15MASK • all Message buffers The SOFTRST bit can be asserted directly by the CPU when it writes to the CANx_MCR, but it is also asserted when global soft reset is requested at MCU level. Because soft reset is synchronous and has to follow a request/acknowledge procedure across clock domains, it may take some time to fully propagate its effect. The SOFTRST bit remains asserted while reset is pending, and is automatically negated when reset completes. Therefore, software can poll this bit to know when the soft reset has completed. 0 No reset request 1 Resets values in registers indicated above.

Table 23-7. CANx_MCR Field Descriptions (continued)

Field	Description
7 FRZACK	Freeze mode acknowledge. Indicates that FlexCAN2 is in freeze mode and its prescaler is stopped. The freeze mode request cannot be granted until current transmission and reception processes have finished. Therefore the software can poll the FRZACK bit to know when FlexCAN2 has actually entered freeze mode. If freeze mode request is negated, then this bit is negated once the FlexCAN2 prescaler is running again. If freeze mode is requested while FlexCAN2 is disabled, then the FRZACK bit will only be set when the low power mode is exited. See Section 23.4.6.1, “Freeze Mode,” for more information. 0 FlexCAN2 not in freeze mode, prescaler running 1 FlexCAN2 in freeze mode, prescaler stopped
8–9	Reserved.
10 WRNEN	Warning interrupt enable. When asserted, this bit enables the generation of the TWRNINT and RWRNINT flags in the Error and Status Register. If WRNEN is negated, the TWRNINT and RWRNINT flags will always be 0, independent of the values of the error counters, and no warning interrupt will ever be generated. 1 = TWRNINT and RWRNINT bits are set when the respective error counter transition from <96 to ≥ 96. 0 = TWRNINT and RWRNINT bits are zero, independent of the values in the error counters.
11 MDISACK	Low power mode acknowledge. Indicates whether FlexCAN2 is disabled. This cannot be performed until all current transmission and reception processes have finished, so the CPU can poll the MDISACK bit to know when FlexCAN2 has actually been disabled. See Section 23.4.6.2, “Module Disabled Mode,” for more information. 0 FlexCAN2 not disabled 1 FlexCAN2 is disabled
12-13	Reserved.
14 SRXDIS	This bit defines whether FlexCAN is allowed to receive frames transmitted by itself. If this bit is asserted, frames transmitted by the module will not be stored in any MB, regardless if the MB is programmed with an ID that matches the transmitted frame, and no interrupt flag or interrupt signal will be generated due to the frame reception. 1 = Self reception disabled 0 = Self reception enabled
15 MBFEN	Message buffer filter enable. This bit provides the capability of enabling either individual masking of every message buffer, or global masking of message buffers. By negating MBFEN, the global masking capability is enabled in which FlexCAN uses the Rx ID masking scheme of RXGMASK, RX14MASK and RX15MASK. In this scheme, MB14 and MB15 have individual masks and the others share the global mask. The scheme does not provide a reception queue; i.e. a received message will always fill the first matching buffer, setting the CODE field to overrun if the buffer contained an unread message. Refer to Section 23.3.3.4, “RX Mask Registers” for more information. This global masking scheme is compatible with previous FlexCAN versions and at reset MBFEN is negated so that existing software retains compatibility. By asserting MBFEN, individual Rx ID masking and the reception queue features are enabled. In this scheme, individual receive mask registers (RXIM[0-63]) are provided for each MB. Upon receiving a message, FlexCAN will look in the reception queue for the first empty matching MB. Refer to Section 23.3.3.5, “RX Individual Mask Registers (CANx_RXIMR0 – CANx_RXIMR63)” and Section 23.4.3.2, “Reception Queue” for more information. 0 Individual RX masking and reception queue features are disabled (thus the device is compatible with previous FlexCAN versions, i.e. one global mask register is used). 1 Individual RX masking and reception queue features are enabled.

Table 23-7. CANx_MCR Field Descriptions (continued)

Field	Description
16-25	Reserved.
26–31 MAXMB[0:5]	<p>Maximum number of message buffers. This 6-bit field defines the maximum number of message buffers of the FlexCAN2 module. The reset value (0x0F) is equivalent to 16 MB configuration. This field should be changed only while the module is in freeze mode.</p> <p style="text-align: center;">Maximum MBs in use = MAXMB + 1</p> <p>Note: MAXMB has to be programmed with a value smaller or equal to the number of available message buffers, otherwise FlexCAN2 will not transmit or receive frames.</p>

23.3.3.2 Control Register (CANx_CR)

CANx_CR is defined for specific FlexCAN2 control features related to the CAN bus, such as bit-rate, programmable sampling point within an RX bit, loop-back mode, listen-only mode, bus off recovery behavior, and interrupt enabling (for example, bus-off, error). It also determines the division factor for the clock prescaler. Most of the fields in this register should only be changed while the module is disabled or in freeze mode. Exceptions are the BOFFMSK, ERRMSK, and BOFFREC bits, which can be accessed at any time. Note that CANx_CR is unaffected by soft reset (which occurs when CAN_MCR[SOFTRST] is asserted).

Address: Base + 0x0004

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	PRESDIV								RJW	PSEG1			PSEG2			
W																
Reset ¹	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BOFF	ERR	CLK_	LPB	TWRN	RWRN	0	0	SMP	BOFF	TSYN	LBUF	LOM	PROPSEG		
W	MSK	MSK	SRC		MSK	MSK				REC						
Reset ¹	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

¹ CANx_CR is unaffected by soft reset (which occurs when CAN_MCR[SOFTRST] is asserted).

Figure 23-4. Control Register (CANx_CR)

Table 23-8. CANx_CR Field Descriptions

Bits	Description
0–7 PRESDIV[0:7]	<p>Prescaler division factor. Defines the ratio between the CPI clock frequency and the serial clock (SCK) frequency. The SCK period defines the time quantum of the CAN protocol. For the reset value, the SCK frequency is equal to the CPI clock frequency. The maximum value of this register is 0xFF, that gives a minimum SCK frequency equal to the CPI clock frequency divided by 256. For more information, refer to Section 23.4.5.4, “Protocol Timing.”</p> $\text{S-clock frequency} = \frac{\text{CPI clock frequency}}{\text{PRESDIV} + 1}$
8–9 RJW[0:1]	<p>Resync jump width. Defines the maximum number of time quanta¹ that a bit time can be changed by one re-synchronization. The valid programmable values are 0–3.</p> $\text{Resync Jump Width} = \text{RJW} + 1$
10–12 PSEG1[0:2]	<p>Phase segment 1. Defines the length of phase buffer segment 1 in the bit time. The valid programmable values are 0–7.</p> $\text{Phase Buffer Segment 1} = (\text{PSEG1} + 1) \times \text{Time Quanta}$
13–15 PSEG2[0:2]	<p>Phase segment 2. Defines the length of phase buffer segment 2 in the bit time. The valid programmable values are 1–7.</p> $\text{Phase Buffer Segment 2} = (\text{PSEG2} + 1) \times \text{Time Quanta}$
16 BOFFMSK	<p>Bus off mask. Provides a mask for the bus off interrupt.</p> <p>0 Bus off interrupt disabled 1 Bus off interrupt enabled</p>
17 ERRMSK	<p>Error mask. Provides a mask for the error interrupt.</p> <p>0 Error interrupt disabled 1 Error interrupt enabled</p>
18 CLK_SRC	<p>CAN engine clock source. Selects the clock source to the CAN Protocol Interface (CPI) to be either the system clock (driven by the PLL) or the crystal oscillator clock. The selected clock is the one fed to the prescaler to generate the serial clock (SCK). In order to guarantee reliable operation, this bit should only be changed while the module is disabled.</p> <p>0 = The CAN engine clock source is the oscillator clock 1 = The CAN engine clock source is the system clock</p>
19 LPB	<p>Loop back. Configures FlexCAN2 to operate in loop-back mode. See Section 23.1.4, “Modes of Operation” for information about this operating mode.</p> <p>0 Loop back disabled 1 Loop back enabled</p>
20 TWRNMSK	<p>This bit provides a mask for the TX Warning Interrupt associated with the TWRNINT flag in the Error and Status Register. This bit has no effect if the WRNEN bit in CANx_MCR is negated and it is read as zero when WRNEN is negated.</p> <p>1 = Tx Warning Interrupt enabled 0 = Tx Warning Interrupt disabled</p>
21 RWRNMSK	<p>This bit provides a mask for the RX Warning Interrupt associated with the RWRNINT flag in the Error and Status Register. This bit has no effect if the WRNEN bit in CANx_MCR is negated and it is read as zero when WRNEN is negated.</p> <p>1 = Rx Warning Interrupt enabled 0 = Rx Warning Interrupt disabled</p>

Table 23-8. CANx_CR Field Descriptions

Bits	Description
22–23	Reserved.
24 SMP	Sampling mode. Defines the sampling mode of each bit in the receiving messages (RX). 0 Just one sample is used to determine the RX bit value 1 Three samples are used to determine the value of the received bit: the regular one (sample point) and 2 preceding samples, a majority rule is used
25 BOFFREC	Bus off recovery mode. Defines how FlexCAN2 recovers from bus off state. If this bit is negated, automatic recovering from bus off state occurs according to the CAN Specification 2.0B. If the bit is asserted, automatic recovering from bus off is disabled and the module remains in bus off state until the bit is negated by the user. If the negation occurs before 128 sequences of 11 recessive bits are detected on the CAN bus, then bus off recovery happens as if the BOFFREC bit had never been asserted. If the negation occurs after 128 sequences of 11 recessive bits occurred, then FlexCAN2 will re-synchronize to the bus by waiting for 11 recessive bits before joining the bus. After negation, the BOFFREC bit can be re-asserted again during bus off, but it will only be effective the next time the module enters bus off. If BOFFREC was negated when the module entered bus off, asserting it during bus off will not be effective for the current bus off recovery. 0 Automatic recovering from bus off state enabled, according to CAN Spec 2.0 part B 1 Automatic recovering from bus off state disabled
26 TSYN	Timer sync mode. Enables a mechanism that resets the free-running timer each time a message is received in message buffer 0. This feature provides means to synchronize multiple FlexCAN2 stations with a special SYNC message (that is, global network time). 0 Timer sync feature disabled 1 Timer sync feature enabled Note: There is a possibility of 4–5 ticks count skew between the different FlexCAN2 stations that would operate in this mode.
27 LBUF	Lowest buffer transmitted first. This bit defines the ordering mechanism for message buffer transmission. 0 Buffer with lowest ID is transmitted first 1 Lowest number buffer is transmitted first
28 LOM	Listen-only mode. Configures FlexCAN2 to operate in listen-only mode. In this mode, the FlexCAN2 module receives messages without giving any acknowledge. It is not possible to transmit any message in this mode. 0 FlexCAN2 module is in normal active operation, listen only mode is deactivated 1 FlexCAN2 module is in listen only mode operation
29–31 PROPSEG [0:2]	Propagation segment. Defines the length of the propagation segment in the bit time. The valid programmable values are 0–7. $\text{Propagation Segment Time} = (\text{PROPSEG} + 1) \times \text{Time Quanta}$ $\text{Time Quantum} = \text{one S clock period}$

¹ One time quantum is equal to the S clock period.

23.3.3.3 Free Running Timer (CANx_TIMER)

CANx_TIMER represents a 16-bit free running counter that can be read and written by the CPU. The timer starts from 0x0000 after Reset, counts linearly to 0xFFFF, and wraps around.

The timer is clocked by the FlexCAN2 bit-clock (which defines the baud rate on the CAN bus). During a message transmission/reception, it increments by one for each bit that is received or transmitted. When there is no message on the bus, it counts using the previously programmed baud rate. During freeze mode, the timer is not incremented.

The timer value is captured at the beginning of the identifier field of any frame on the CAN bus. This captured value is written into the TIME STAMP entry in a message buffer after a successful reception or transmission of a message.

Writing to the timer is an indirect operation. The data is first written to an auxiliary register and then an internal request/acknowledge procedure across clock domains is executed. All this is transparent to the user, except for the fact that the data will take some time to be actually written to the register. If desired, software can poll the register to discover when the data was actually written.

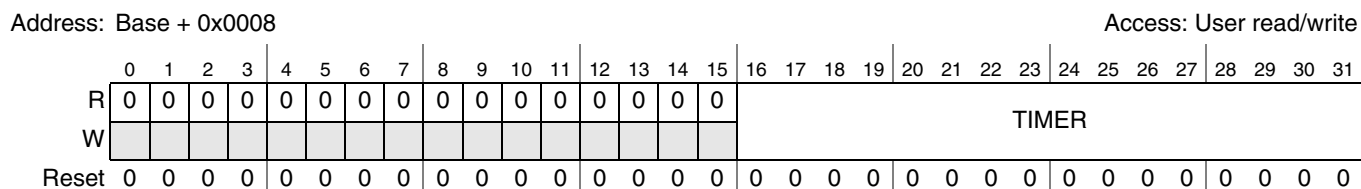


Figure 23-5. Free Running Timer (CANx_TIMER)

23.3.3.4 RX Mask Registers

By negating the CANx_MCR[MBFEN] bit, the CANx_RXGMASK, CANx_RX14MASK, and CANx_RX15MASK registers are used as acceptance masks for received frame IDs. Three masks are defined: a global mask, used for RX buffers 0–13 and 16–63, and two extra masks dedicated for buffers 14 and 15. The meaning of each mask bit is the following:

- Mask bit = 0: the corresponding incoming ID bit is “don’t care.”
- Mask bit = 1: the corresponding ID bit is checked against the incoming ID bit, to see if a match exists.

Note that these masks are used both for standard and extended ID formats. The value of mask registers should not be changed while in normal operation. Locked frames which had matched a MB through a mask may be transferred into the MB (upon release) but may no longer match. [Table 23-9](#) shows some examples of ID masking for standard and extended message buffers.

Table 23-9. Mask Examples for Standard/Extended Message Buffers

	Base ID ID28.....ID18	IDE	Extended ID ID17.....ID0	Match
MB2 ID	1 1 1 1 1 1 1 1 0 0 0	0		
MB3 ID	1 1 1 1 1 1 1 1 0 0 0	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	
MB4 ID	0 0 0 0 0 0 1 1 1 1 1	0		
MB5 ID	0 0 0 0 0 0 1 1 1 0 1	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	
MB14 ID	1 1 1 1 1 1 1 1 0 0 0	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	
RX Global Mask	1 1 1 1 1 1 1 1 1 1 0		1 1 1 1 1 1 1 0 0 0 0 0 0 0 0 0 1	
RX Msg in ¹	1 1 1 1 1 1 1 1 0 0 1	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	3
RX Msg in ²	1 1 1 1 1 1 1 1 0 0 1	0		2
RX Msg in ³	1 1 1 1 1 1 1 1 0 0 1	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 0	
RX Msg in ⁴	0 1 1 1 1 1 1 1 0 0 0	0		

Table 23-9. Mask Examples for Standard/Extended Message Buffers (continued)


	Base ID ID28.....ID18	IDE	Extended ID ID17.....ID0	Match
RX Msg in ⁵	0 1 1 1 1 1 1 1 0 0 0	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	14
RX 14 Mask	0 1 1 1 1 1 1 1 1 1 1		1 1 1 1 1 1 1 0 0 0 0 0 0 0 0 0 0 0	
RX Msg in ⁶	1 0 1 1 1 1 1 1 0 0 0	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	
RX Msg in ⁷	0 1 1 1 1 1 1 1 0 0 0	1	0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1	14

- ¹ Match for Extended Format (MB3).
- ² Match for Standard Format. (MB2).
- ³ Mismatch for MB3 because of ID0.
- ⁴ Mismatch for MB2 because of ID28.
- ⁵ Mismatch for MB3 because of ID28, Match for MB14 (uses RX14MASK).
- ⁶ Mismatch for MB14 because of ID27 (uses RX14MASK).
- ⁷ Match for MB14 (uses RX14MASK).

23.3.3.4.1 RX Global Mask (CANx_RXGMASK)

The RX global mask bits are applied to all RX identifiers excluding RX buffers 14–15, that have their specific RX mask registers. Access to this register is unrestricted. Note that CANx_RXGMASK is unaffected by soft reset (which occurs when CAN_MCR[SOFTRST] is asserted).

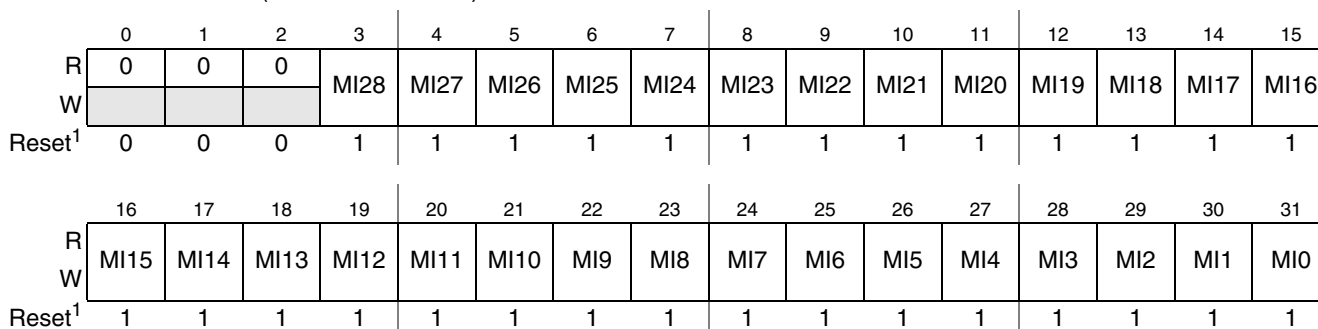Address: Base + 0x0010 (CANx_RXGMASK) Access: User read/write
 Base + 0x0014 (CANx_RX14MASK)
 Base + 0x0018 (CANx_RX15MASK)



¹ CANx_RXGMASK is unaffected by soft reset (which occurs when CAN_MCR[SOFTRST] is asserted).

Figure 23-6. RX Global Mask Register (CANx_RXGMASK)

Table 23-10. CANx_RXGMASK Field Descriptions

Field	Description
0–2	Reserved, should be cleared.
3–13 MI _n	Standard ID mask bits. These bits are the same mask bits for the standard and extended formats.
14–31 MI _n	Extended ID mask bits. These bits are used to mask comparison only in extended format.

23.3.3.4.2 RX 14 Mask (CANx_RX14MASK)

The CANx_RX14MASK register has the same structure as the RX global mask register and is used to mask message buffer 14. Access to this register is unrestricted. Note that CANx_RX14MASK is unaffected by soft reset (which occurs when CAN_MCR[SOFTRST] is asserted).

- Address offset: 0x14
- Reset value: 0x1FFF_FFFF

23.3.3.4.3 RX 15 Mask (CANx_RX15MASK)

The CANx_RX15MASK register has the same structure as the RX global mask register and is used to mask message buffer 15. Access to this register is unrestricted. Note that CANx_RX15MASK is unaffected by soft reset (which occurs when CAN_MCR[SOFTRST] is asserted).

- Address offset: 0x18
- Reset value: 0x1FFF_FFFF

23.3.3.5 RX Individual Mask Registers (CANx_RXIMR0 – CANx_RXIMR63)

By asserting the CANx_MCR[MBFEN] bit, the CANx_RXIMR[0-63] registers are used as acceptance masks for received frame IDs, in both standard and extended ID formats. One mask register is provided for each message buffer for individual ID masking per message buffer. The meaning of each mask bit is the following:

- Mask bit = 0: The corresponding incoming ID bit is a “don’t care.”
- Mask bit = 1: The corresponding ID bit is checked against the incoming ID bit, to see if a match exists.

The Individual Rx Mask Registers are implemented in RAM, so they are not affected by reset and must be explicitly initialized prior to any reception. Furthermore, they can only be accessed by the CPU while the module is in freeze mode. Out of freeze mode, write accesses are blocked and read accesses will return all 0s. Furthermore, if the MBFEN bit in the MCR register is negated, any read or write operation to these RXIMR_n registers results in access error.

Address: Base + 0x0880 – 097F

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	0	0	0	MI28	MI27	MI26	MI25	MI24	MI23	MI22	MI21	MI20	MI19	MI18	MI17	MI16
W																
Reset	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	MI15	MI14	MI13	MI12	MI11	MI10	MI9	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	MI0
W																
Reset	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U

Figure 23-7. RX Individual Mask Registers (CANx_RXIMR0 – CANx_RXIMR63)

Table 23-11. CANx_RXIMR0 – CANx_RXIMR63 Field Descriptions

Field	Description
0–2	Reserved.
3–13 MI28–MI18	Standard ID mask bits. These bits are the same mask bits for the standard and extended formats.
14–31 MI17–MI0	Extended ID mask bits. These bits are used to mask comparison only in extended format.

23.3.3.6 Error Counter Register (CANx_ECR)

CANx_ECR has two 8-bit fields reflecting the value of two FlexCAN2 error counters: the transmit error counter (TXECTR field) and receive error counter (RXECTR field). The rules for increasing and decreasing these counters are described in the CAN protocol and are completely implemented in the FlexCAN2 module. Both counters are read only except in freeze mode, where they can be written by the CPU.

Writing to the CANx_ECR while in freeze mode is an indirect operation. The data is first written to an auxiliary register and then an internal request/acknowledge procedure across clock domains is executed. All this is transparent to the user, except for the fact that the data will take some time to be actually written to the register. If desired, software can poll the register to discover when the data was actually written.

FlexCAN2 responds to any bus state as described in the protocol: transmitting, for example, an ‘error active’ or ‘error passive’ flag, delaying its transmission start time (‘error passive’), and avoiding any influence on the bus when in the bus off state. The following are the basic rules for FlexCAN2 bus state transitions:

- If the value of TXECTR or RXECTR increases to be greater than or equal to 128, the FLTCONF field in the CANx_ESR is updated to reflect the ‘error passive’ state.
- If the FlexCAN2 state is ‘error passive,’ and either TXECTR or RXECTR decrements to a value less than or equal to 127 while the other already satisfies this condition, the FLTCONF field in the CANx_ESR is updated to reflect the ‘error active’ state.
- If the value of TXECTR increases to be greater than 255, the FLTCONF field in the CANx_ESR is updated to reflect the bus off state, and an interrupt may be issued. The value of TXECTR is then reset to zero.
- If FlexCAN2 is in the bus off state, then TXECTR is cascaded together with another internal counter to count the 128th occurrences of 11 consecutive recessive bits on the bus. Hence, TXECTR is reset to zero and counts in a manner where the internal counter counts 11 such bits and then wraps around while incrementing the TXECTR. When TXECTR reaches the value of 128, the FLTCONF field in CANx_ESR is updated to be ‘error active’ and both error counters are reset to zero. At any instance of dominant bit following a stream of less than 11 consecutive recessive bits, the internal counter resets itself to zero without affecting the TXECTR value.
- If during system start-up, only one node is operating, then its TXECTR increases in each message it is trying to transmit, as a result of acknowledge errors (indicated by the ACKERR bit in CANx_ESR). After the transition to the ‘error passive’ state, the TXECTR does not increment anymore by acknowledge errors. Therefore the device never goes to the bus off state.

- If the RXECTR increases to a value greater than 127, it is not incremented further, even if more errors are detected while being a receiver. At the next successful message reception, the counter is set to a value between 119 and 127 to resume to ‘error active’ state.

Address: Base + 0x001C Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	RXECTR								TXECTR							
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0																
W																																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0								0							

Figure 23-8. Error Counter Register (CANx_ECR)

23.3.3.7 Error and Status Register (CANx_ESR)

CANx_ESR reflects various error conditions, some general status of the device, and it is the source of two interrupts to the CPU. The reported error conditions (bits 16–21) are those that occurred since the last time the CPU read this register. The CPU read action clears BIT1ERR, BIT0ERR, ACKERR, CRCERR, FRMERR, and STFERR. TXWRN, RXWRN, IDLE, TXRX, FLTCONF, BOFFINT, and ERRINT are status bits.

Most bits in this register are read-only, except BOFFINT, ERRINT, TWRNINT, and RWRNINT which are interrupt flags that can be cleared by writing 1 to them (writing 0 has no effect). See [Section 23.4.7, “Interrupts,”](#) for more details.

NOTE

A read clears BIT1ERR, BIT0ERR, ACKERR, CRCERR, FRMERR, and STFERR, therefore these bits must not be read speculatively. For future compatibility, the TLB entry covering the CANx_ESR must be configured to be guarded.

Address: Base + 0x0020 Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15								
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	TWRN INT	RWRN INT								
W															w1c	w1c								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0								

	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BIT1 ERR	BIT0 ERR	ACK ERR	CRC ERR	FRM ERR	STF ERR	TX WRN	RX WRN	IDLE	TXRX	FLTCONF	0	BOFF INT	ERR INT	0	
W													w1c	w1c		
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

Figure 23-9. Error and Status Register (CANx_ESR)

Table 23-12. CANx_ESR Field Descriptions

Field	Description
0–13	Reserved.
14 TWRNINT	If the WRNEN bit in CANx_MCR is asserted, the TWRNINT bit is set when the TXWRN flag transitions from 0 to 1, meaning that the TX error counter reached 96. If the corresponding mask bit in the Control Register (TWRNMSK) is set, an interrupt is generated to the CPU. This bit is cleared by writing to 1. Writing 0 has no effect. 0 No such occurrence 1 TXECTR ≥ 96
15 RWRNINT	If the WRNEN bit in CANx_MCR is asserted, the RWRNINT bit is set when the RXWRN flag transitions from 0 to 1, meaning that the RX error counter reached 96. If the corresponding mask bit in the Control Register (RWRNMSK) is set, an interrupt is generated to the CPU. This bit is cleared by writing to 1. Writing 0 has no effect. 0 No such occurrence 1 RXECTR ≥ 96
16 BIT1ERR	Bit 1 error. Indicates when an inconsistency occurs between the transmitted and the received message in a bit. A read clears BIT1ERR. 0 No such occurrence 1 At least one bit sent as recessive is received as dominant Note: This bit is not set by a transmitter in case of arbitration field or ACK slot, or in case of a node sending a passive error flag that detects dominant bits.
17 BIT0ERR	Bit 0 error. Indicates when an inconsistency occurs between the transmitted and the received message in a bit. A read clears BIT0ERR. 0 No such occurrence 1 At least one bit sent as dominant is received as recessive
18 ACKERR	Acknowledge error. Indicates that an acknowledge error has been detected by the transmitter node; that is, a dominant bit has not been detected during the ACK SLOT. A read clears ACKERR. 0 No such occurrence 1 An ACK error occurred since last read of this register
19 CRCERR	Cyclic redundancy code error. Indicates that a CRC error has been detected by the receiver node; that is, the calculated CRC is different from the received. A read clears CRCERR. 0 No such occurrence 1 A CRC error occurred since last read of this register.
20 FRMERR	Form error. Indicates that a form error has been detected by the receiver node; that is, a fixed-form bit field contains at least one illegal bit. A read clears FRMERR. 0 No such occurrence 1 A form error occurred since last read of this register
21 STFERR	Stuffing error. Indicates that a stuffing error has been detected. A read clears STFERR. 0 No such occurrence. 1 A stuffing error occurred since last read of this register.
22 TXWRN	TX error counter. This status bit indicates that repetitive errors are occurring during message transmission. 0 No such occurrence 1 TXECTR ≥ 96
23 RXWRN	RX error counter. This status bit indicates when repetitive errors are occurring during messages reception. 0 No such occurrence 1 RXECTR ≥ 96

Table 23-12. CANx_ESR Field Descriptions (continued)

Field	Description
24 IDLE	CAN bus IDLE state. This status bit indicates when CAN bus is in IDLE state. 0 No such occurrence 1 CAN bus is now IDLE
25 TXRX	Current FlexCAN2 status (transmitting/receiving). This status bit indicates if FlexCAN2 is transmitting or receiving a message when the CAN bus is not in IDLE state. This bit has no meaning when IDLE is asserted. 0 FlexCAN2 is receiving a message (IDLE = 0) 1 FlexCAN2 is transmitting a message (IDLE = 0)
26–27 FLTCONF[0:1]	Fault confinement state. This status bit indicates the confinement state of the FlexCAN2 module. If the LOM bit in the CANx_CR is asserted, the FLTCONF field will indicate “Error Passive”. Since the CANx_CR is not affected by soft reset, the FLTCONF field will not be affected by soft reset if the LOM bit is asserted. 00 Error active 01 Error passive 1X Bus off
28	Reserved.
29 BOFFINT	Bus off interrupt. This status bit is set when FlexCAN2 is in the bus off state. If CANx_CR[BOFFMSK] is set, an interrupt is generated to the CPU. This bit is cleared by writing it to 1. Writing 0 has no effect. 0 No such occurrence 1 FlexCAN2 module is in ‘Bus Off’ state
30 ERRINT	Error interrupt. This status bit indicates that at least one of the error bits (bits 16-21) is set. If CANx_CR[ERRMSK] is set, an interrupt is generated to the CPU. This bit is cleared by writing it to 1. Writing 0 has no effect. 0 No such occurrence 1 Indicates setting of any error bit in the CANx_ESR
31	Reserved.

23.3.3.8 Interrupt Masks High Register (ICANx_IMRH)

CANx_IMRH allows any number of a range of 32 message buffer interrupts to be enabled or disabled. It contains one interrupt mask bit per buffer, enabling the CPU to determine which buffer generates an interrupt after a successful transmission or reception (that is, when the corresponding IFRH bit is set).

Address: Base + 0x0024

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF
W	63M	62M	61M	60M	59M	58M	57M	56M	55M	54M	53M	52M	51M	50M	49M	48M
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF
W	47M	46M	45M	44M	43M	42M	41M	40M	39M	38M	37M	36M	35M	34M	33M	32M
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 23-10. Interrupt Masks High Register (CANx_IMRH)

Table 23-13. CANx_IMRH Field Descriptions

Field	Description
0–31 BUF n M	Message buffer n mask. Enables or disables the respective FlexCAN2 message buffer (MB63 to MB32) Interrupt. 0 The corresponding buffer Interrupt is disabled 1 The corresponding buffer Interrupt is enabled Note: Setting or clearing a bit in the IMRH register can assert or negate an interrupt request, respectively.

23.3.3.9 Interrupt Masks Low Register (CANx_IMRL)

CANx_IMRL allows enabling or disabling any number of a range of 32 message buffer interrupts. It contains one interrupt mask bit per buffer, enabling the CPU to determine which buffer generates an interrupt after a successful transmission or reception (that is, when the corresponding IFRH bit is set).

Address: Base + 0x0028

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF
W	31M	30M	29M	28M	27M	26M	25M	24M	23M	22M	21M	20M	19M	18M	17M	16M
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF	BUF
W	15M	14M	13M	12M	11M	10M	09M	08M	07M	06M	05M	04M	03M	02M	01M	00M
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 23-11. Interrupt Masks Low Register (CANx_IMRL)

Table 23-14. CANx_IMRL Field Descriptions

Field	Description
0–31 BUF n M	Message buffer n mask. Enables or disables the respective FlexCAN2 message buffer (MB31 to MB0) Interrupt. 0 The corresponding buffer Interrupt is disabled 1 The corresponding buffer Interrupt is enabled Note: Setting or clearing a bit in the IMRL register can assert or negate an interrupt request, respectively.

23.3.3.10 Interrupt Flags High Register (CANx_IFRH)

CANx_IFRH defines the flags for 32 message buffer interrupts. It contains one interrupt flag bit per buffer. Each successful transmission or reception sets the corresponding IFRH bit. If the corresponding IMRH bit is set, an interrupt will be generated. The interrupt flag may be cleared by writing it to 1. Writing 0 has no effect.

Address: Base + 0x002C

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	BUF 63I	BUF 62I	BUF 61I	BUF 60I	BUF 59I	BUF 58I	BUF 57I	BUF 56I	BUF 55I	BUF 54I	BUF 53I	BUF 52I	BUF 51I	BUF 50I	BUF 49I	BUF 48I
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BUF 47I	BUF 46I	BUF 45I	BUF 44I	BUF 43I	BUF 42I	BUF 41I	BUF 40I	BUF 39I	BUF 38I	BUF 37I	BUF 36I	BUF 35I	BUF 34I	BUF 33I	BUF 32I
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 23-12. Interrupt Flags High Register (CANx_IFRH)

Table 23-15. CANx_IFRH Field Descriptions

Field	Description
0–31 BUF <i>n</i>	<p>Message buffer <i>n</i> interrupt. Each bit represents the respective FlexCAN2 message buffer (MB63–MB32) interrupt. Write 1 to clear.</p> <p>0 No such occurrence</p> <p>1 The corresponding buffer has successfully completed transmission or reception.</p>

23.3.3.11 Interrupt Flags Low Register (CANx_IFRL)

CANx_IFRL defines the flags for 32 message buffer interrupts. It contains one interrupt flag bit per buffer. Each successful transmission or reception sets the corresponding IFRL bit. If the corresponding IMRL bit is set, an interrupt will be generated. The interrupt flag may be cleared by writing it to 1. Writing 0 has no effect.

Address: Base + 0x0030

Access: User read/write

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
R	BUF 31I	BUF 30I	BUF 29I	BUF 28I	BUF 27I	BUF 26I	BUF 25	BUF 24I	BUF 23I	BUF 22I	BUF 21I	BUF 20I	BUF 19I	BUF 18I	BUF 17I	BUF 16I
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
R	BUF 15I	BUF 14I	BUF 13I	BUF 12I	BUF 11I	BUF 10I	BUF 09I	BUF 08I	BUF 07I	BUF 06I	BUF 05I	BUF 04I	BUF 03I	BUF 02I	BUF 01I	BUF 00I
W	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c	w1c
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 23-13. Interrupt Flags Low Register (CANx_IFRL)

Table 23-16. CANx_IFRL Field Descriptions

Field	Description
0–31 BUF n	Message buffer n interrupt. Each bit represents the respective FlexCAN2 message buffer (MB31 to MB0) interrupt. Write 1 to clear. 0 No such occurrence 1 The corresponding buffer has successfully completed transmission or reception.

23.4 Functional Description

23.4.1 Overview

The FlexCAN2 module is a CAN protocol engine with a very flexible message buffer configuration scheme. The module can have up to 64 message buffers, any of which can be assigned as either a TX buffer or an RX buffer. Each message buffer has an assigned interrupt flag to indicate successful completion of transmission or reception.

23.4.2 Transmit Process

The CPU prepares a message buffer for transmission by executing the following steps:

- Write the CODE field of the control and status word to keep the TX MB inactive (code = 1000).
- Write the ID word.
- Write the DATA bytes.
- Write the LENGTH, CONTROL, and CODE fields of the control and status word to activate the TX MB.

The first and last steps are mandatory.

23.4.2.1 Arbitration Process

This process selects which will be the next MB to be transmitted. All MBs programmed as transmit buffers will be scanned to find the lowest ID¹ or the lowest MB number, depending on the LBUF bit in the CAN x _CR. The selected MB will be transferred to an internal serial message buffer (SMB), which is not user accessible, and then transmitted.

The arbitration process is triggered in the following events:

- During the CRC field of the CAN frame
- During the error delimiter field of the CAN frame
- During Intermission, if the winner MB defined in a previous arbitration was deactivated, or if there was no MB to transmit, but the CPU wrote to the C/S word of any MB after the previous arbitration finished
- When MBM is in idle or bus off state and the CPU writes to the C/S word of any MB

1. Actually, if LBUF is negated, the arbitration considers not only the ID, but also the RTR and IDE bits placed inside the ID at the same positions they are transmitted in the CAN frame.

- Upon leaving freeze mode

When the arbitration is over, and there is a winner MB for transmission, the frame is transferred to the SMB for transmission. This is called ‘move out.’ After move out, the CAN transmit machine will start to transmit the frame according to the CAN protocol rules. FlexCAN2 transmits up to eight data bytes, even if the data length code (DLC) value is bigger.

At the end of a successful transmission, the value of the free running timer at the beginning of the identifier field is written into the TIME STAMP field in the MB, the CODE field in the control and status word of the MB is updated, a status flag is set in CANx_IFRL or CANx_IFRH, and an MB interrupt is generated if allowed by the corresponding interrupt mask register bit.

23.4.3 Receive Process

The CPU prepares a message buffer for frame reception by executing the following steps:

- Write the CODE field of the control and status word to keep the RX MB as INACTIVE (CODE = 0000).
- Write the ID word.
- Write the CODE field of the control and status word to mark the MB as EMPTY.

The first and last steps are mandatory.

23.4.3.1 Matching Process

The matching process compares the IDs of all active RX message buffers to newly received RX MBs, so that, if a match occurs, a newly received frame is transferred (moved in) to the first (that is, lowest entry) matching MB when the reception queue feature is disabled. Only MBs marked as EMPTY, FULL, or OVERRUN will participate in the internal matching process at the CRC frame field, which takes place every time the receiver receives an error free frame.

The value of the free running timer is written into the TIME STAMP field in the MB. The ID field, the DATA field (8 bytes at most), and the LENGTH field are stored, the CODE field is updated, and a status flag is set in CANx_IFRL or CANx_IFRH, and an interrupt is generated if the corresponding interrupt mask is enabled in CANx_IMRL/H.

The CPU should read an RX frame from its MB in the following way:

- Control and status word (mandatory, activates internal lock for this buffer)
- ID (optional, needed only if a mask was used)
- DATA field words
- Free running timer (optional, releases internal lock)

Reading the free running timer is not mandatory. If not executed, the MB remains locked, unless the CPU starts reading another MB. Note that only a single MB is locked at a time. The only mandatory CPU read operation is of the control and status word, to assure data coherency. If the BUSY bit is set in the CODE field, then the CPU should defer the access to the MB until this bit is negated.

The CPU should synchronize to frame reception by the status flag bit for the specific MB in one of the CANx_IFRH and CANx_IFRL registers and not by the control and status word code field of that MB. Polling the CODE field does not work because once a frame was received and the CPU services the MB (by reading the C/S word followed by unlocking the MB), the CODE field will not return to EMPTY. It will remain FULL, as explained in [Table 23-5](#). If the CPU tries to work around this behavior by writing to the C/S word to force an EMPTY code after reading the MB, the MB is actually deactivated from any currently ongoing matching process. As a result, a newly received frame matching the ID of that MB may be lost. In summary: never do polling by reading directly the C/S word of the MBs. Instead, read the CANx_IFRH and CANx_IFRL registers.

Note that the received ID field is always stored in the matching MB, thus the contents of the ID field in a MB can change if the match was due to mask.

23.4.3.2 Reception Queue

A queue of received messages can be implemented that allows the CPU more time for servicing MBs. By programming more than one MB with the same ID, received messages will be queued into the MBs. Matching to a range of IDs is possible by using ID acceptance masks that mask individual MBs. During the matching algorithm, if a mask bit is asserted, then the corresponding ID bit is compared. If the mask bit is negated, the corresponding ID bit is a don't care.

Suppose, for example, that the second and fifth MBs in an array have the same ID, and FlexCAN starts receiving messages with that ID. When FlexCAN receives the first message, the matching algorithm matches it to MB number 2. The code of this MB is EMPTY, so the message is stored there. When the second message arrives, the matching algorithm will find MB number 2 again, but it is not free to receive¹, so it will keep looking and find MB number 5 and store the message there. If yet another message with the same ID arrives, the matching algorithm perceives that there are no matching MBs that are free to receive so it decides to overwrite the last matched MB, which is number 5. In doing so, it sets the Code field of the MB to indicate OVERRUN.

In this manner, a reception queue is built, with messages temporally ordered by the CPU's reading of each MB's time stamp field. This functionality is set by asserting the CANx_MCR[MBFEN] bit. Note that the RXIMR_n registers are implemented in RAM, so they are not initialized out of reset. Also, they can only be programmed if the MBFEN bit is asserted and while the module is in freeze mode.

FlexCAN also supports an alternate masking scheme with only three mask registers (CANx_RXGMASK, CANx_RX14MASK, and CANx_RX15MASK) for backwards compatibility. This alternate masking scheme is enabled when CANx_MCR[MBFEN] is negated. Refer to [Section 23.3.3.4, "RX Mask Registers."](#)

23.4.3.3 Self Received Frames

FlexCAN2 receives frames transmitted by itself if there exists an RX matching MB, but only if an ACK is generated by an external node or if loop-back mode is enabled. Note also that FlexCAN does receive frames transmitted by itself if there exists an RX matching MB, provided the MCR[SRXDIS] bit is not asserted. If SRXDIS is asserted, FlexCAN will not store frames transmitted by itself in any MB, even if it

1. If, however, the CPU has read the MB2 data and released it before the next matching process at the CRC frame, then, even if the MB2 RX code is FULL, the MB2 is free to receive and the message will be stored in MB2 rather than in MB5.

contains a matching MB, and no interrupt flag or interrupt signal will be generated due to the frame reception.

23.4.4 Message Buffer Handling

In order to maintain data coherency and FlexCAN2 proper operation, the CPU must obey the rules described in [Section 23.4.2, “Transmit Process,”](#) and [Section 23.4.3, “Receive Process.”](#) Any form of CPU accessing a MB structure within FlexCAN2 other than those specified can cause FlexCAN2 to behave in an unpredictable way.

Deactivation of a message buffer is a CPU action that causes that MB to be excluded from FlexCAN2 transmit or receive processes during the current match/arbitration round. Any CPU write access to a control and status word of the MB structure deactivates that MB, excluding it from the current RX/TX process. However, deactivation is not permanent. The MB that was deactivated during the current match/arbitration round will be available for transmission or reception in the next round.

The purpose of deactivation is data coherency. The match/arbitration process scans the MBs to decide which MB to transmit or receive. If the CPU updates the MB in the middle of a match or arbitration process, the data of that MB may no longer be coherent, therefore that MB is deactivated.

Match and arbitration are one-pass processes. After scanning all MBs, a winner is determined. If MBs are changed after they are scanned, no re-evaluation is done to determine a new match/winner; and a frame may be lost because the matched MB may have been deactivated. If two RX MBs have a matching ID to a received frame, then it is not guaranteed reception if the user deactivated the matching MB after FlexCAN2 has scanned the second.

23.4.4.1 Notes on TX Message Buffer Deactivation

There is a point in time until which the deactivation of a TX MB causes it not to be transmitted (end of move out). After this point, it is transmitted but no interrupt is issued and the CODE field is not updated.

If a TX MB containing the lowest ID (or lowest buffer if LBUF is set) is deactivated after FlexCAN2 has scanned it while in arbitration process, then FlexCAN2 can transmit a MB with ID that may not be the lowest at the time.

23.4.4.2 Notes on RX Message Buffer Deactivation

If the deactivation occurs during move in, the move operation is aborted and no interrupt is issued, but the MB contains mixed data from two different frames.

In case the CPU writes data into RX MB data words while it is being moved in, the move operation is aborted and no interrupt will be issued, but the control/status word may be changed to reflect FULL or OVRN. This action should be avoided.

23.4.4.3 Data Coherency Mechanisms

The FlexCAN2 module has a mechanism to assure data coherency in both receive and transmit processes. The mechanism includes a lock status for MBs and two internal storage areas, called serial message buffers (SMB), to buffer frame transfers within FlexCAN. The details of the mechanism are the following:

- CPU reading a control and status word of an MB triggers a lock for that MB; that is, a new RX frame which matches this MB, cannot be written into this MB.
- In order to release a locked MB, the CPU should either lock another MB (by reading its control and status word), or globally release any locked MB (by reading the free-running timer).
- If the CPU reads a RX MB while it is being transferred into (from) SMB, then the BUSY bit is set in the CODE field of the control and status word. In order to assure data coherency, the CPU should wait until this BUSY bit is negated before further reading from that MB. Note that in this case such MB is not locked.
- If the CPU deactivates a locked RX MB, then its lock status is negated, but no data is transferred into that MB.

The following bullets apply only if: the reception queue is disabled, if there are no other matching buffers in the reception queue, or for the last available queue element when all others are not free to receive (the last queue element will be overwritten in the same manner described here for a single MB in non-queue mode). If the reception queue is enabled, the state machine searches for the next matching message buffer.

- If while a MB is locked, an RX frame with a matching ID is received, then it cannot be stored within that MB and it remains in the SMB. There is no indication in the CANx_ESR of that situation.
- If while a MB is locked, two or more RX frames with matching ID are received, then the last received one is kept within the SMB, while all preceding ones are lost. There is no indication that the preceding ones were lost in the CANx_ESR.
- If a locked MB is released, and there exists a matching frame within the SMB, this frame is then transferred to the matching MB.

23.4.5 CAN Protocol Related Features

23.4.5.1 Remote Frames

A remote frame is a special kind of frame. The user can program a MB to be a request remote frame by writing the MB as transmit with the RTR bit set to 1. After the remote request frame is transmitted successfully, the MB becomes a receive message buffer, with the same ID as before.

When a remote request frame is received by FlexCAN, its ID is compared to the IDs of the transmit message buffers with the CODE field '1010'. If there is a matching ID, then this MB frame will be transmitted. Note that if the matching MB has the RTR bit set, then FlexCAN2 will transmit a remote frame as a response.

A received remote request frame is not stored in a receive buffer. It is only used to trigger a transmission of a frame in response. The mask registers are not used in remote frame matching, and all ID bits (except RTR) of the incoming received frame should match.

In the case that a remote request frame was received and matched a MB, this message buffer immediately enters the internal arbitration process, but is considered as normal TX MB, with no higher priority. The data length of this frame is independent of the DLC field in the remote frame that initiated its transmission.

23.4.5.2 Overload Frames

FlexCAN2 will transmit overload frames due to detection of following conditions on CAN bus:

- Detection of a dominant bit in the first/second bit of intermission
- Detection of a dominant bit at the 7th bit (last) of end of frame field (RX frames)
- Detection of a dominant bit at the 8th bit (last) of error frame delimiter or overload frame delimiter

23.4.5.3 Time Stamp

The value of the free running timer is sampled at the beginning of the identifier field on the CAN bus, and is stored at the end of ‘move in’ in the TIME STAMP field, providing network behavior with respect to time.

Note that the free running timer can be reset upon a specific frame reception, enabling network time synchronization. Refer to TSYN description in [Section 23.3.3.2, “Control Register \(CANx_CR\).”](#)

23.4.5.4 Protocol Timing

The clock source to the CAN protocol interface (CPI) can be either the system clock or a direct feed from the oscillator pin EXTAL. The clock source is selected by the CLK_SRC bit in the CAN_CR. The clock is fed to the prescaler to generate the serial clock (SCK).

The FlexCAN2 module supports a variety of means to setup bit timing parameters that are required by the CAN protocol. The CANx_CR has various fields used to control bit timing parameters: PRES DIV, PROPSEG, PSEG1, PSEG2 and RJW. See [Section 23.3.3.2, “Control Register \(CANx_CR\).”](#)

The PRES DIV field controls a prescaler that generates the serial clock (SCK), whose period defines the ‘time quantum’ used to compose the CAN waveform. A time quantum is the atomic unit of time handled by FlexCAN.

$$f_{Tq} = \frac{f_{CANCLK}}{\text{Prescaler Value}}$$

A bit time is subdivided into three segments¹ (reference [Figure 23-14](#) and [Table 23-17](#)):

- SYNCSEG: This segment has a fixed length of one time quantum. Signal edges are expected to happen within this section.
- Time segment 1: This segment includes the propagation segment and the phase segment 1 of the CAN standard. It can be programmed by setting the PROPSEG and the PSEG1 fields of the CTRL register so that their sum (plus 2) is in the range of 4 to 16 time quanta.

1. For further explanation of the underlying concepts please refer to ISO/DIS 11519–1, Section 10.3. Reference also the Bosch CAN 2.0A/B protocol specification dated September 1991 for bit timing.

- Time segment 2: This segment represents the phase segment 2 of the CAN standard. It can be programmed by setting the PSEG2 field of the CTRL register (plus 1) to be 2 to 8 time quanta long.

$$\text{Bit Rate} = \frac{f_{Tq}}{\text{(Number of Time Quanta)}}$$

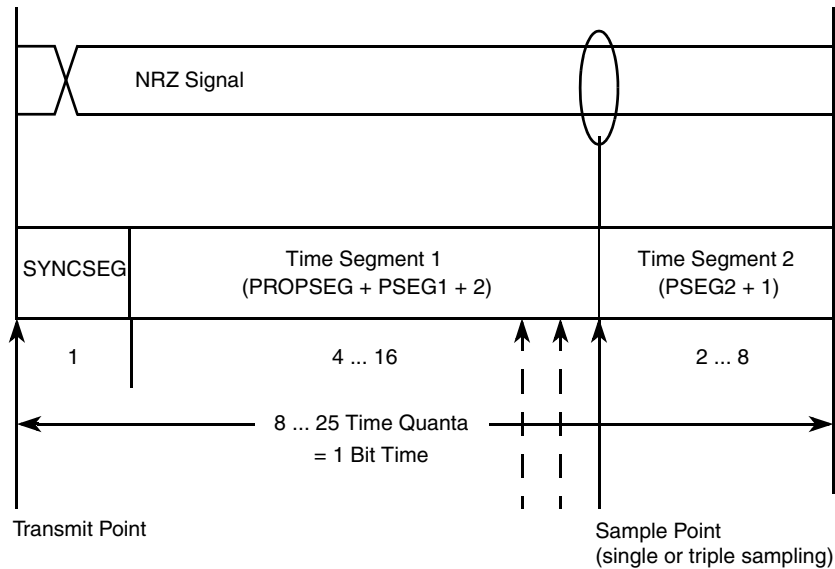


Figure 23-14. Segments within the Bit Time

Table 23-17. Time Segment Syntax

Syntax	Description
SYNCSEG	System expects transitions to occur on the bus during this period.
Transmit Point	A node in transmit mode transfers a new value to the CAN bus at this point.
Sample Point	A node in receive mode samples the bus at this point. If the three samples per bit option is selected, then this point marks the position of the third sample.

Table 23-18 gives an overview of the CAN compliant segment settings and the related parameter values.

NOTE

It is the user’s responsibility to ensure the bit time settings are in compliance with the CAN standard.

Table 23-18. CAN Standard Compliant Bit Time Segment Settings

Time Segment 1	Time Segment 2	Resynchronization Jump Width
5 .. 10	2	1 .. 2
4 .. 11	3	1 .. 3

Table 23-18. CAN Standard Compliant Bit Time Segment Settings (continued)

Time Segment 1	Time Segment 2	Resynchronization Jump Width
5 .. 12	4	1 .. 4
6 .. 13	5	1 .. 4
7 .. 14	6	1 .. 4
8 .. 15	7	1 .. 4
9 .. 16	8	1 .. 4

23.4.5.5 Arbitration and Matching Timing

During normal transmission or reception of frames, the arbitration, match, move in and move out processes are executed during certain time windows inside the CAN frame, as shown in Figure 23-15. When doing matching and arbitration, FlexCAN2 needs to scan the whole message buffer memory during the available time slot. In order to have sufficient time to do that, the following restrictions must be observed:

- A valid CAN bit timing must be programmed, as indicated in Figure 23-15.
- The system clock frequency cannot be smaller than the oscillator clock frequency, i.e. the PLL cannot be programmed to divide down the oscillator clock.
- There must be a minimum ratio of 16 between the system clock frequency and the CAN bit rate.

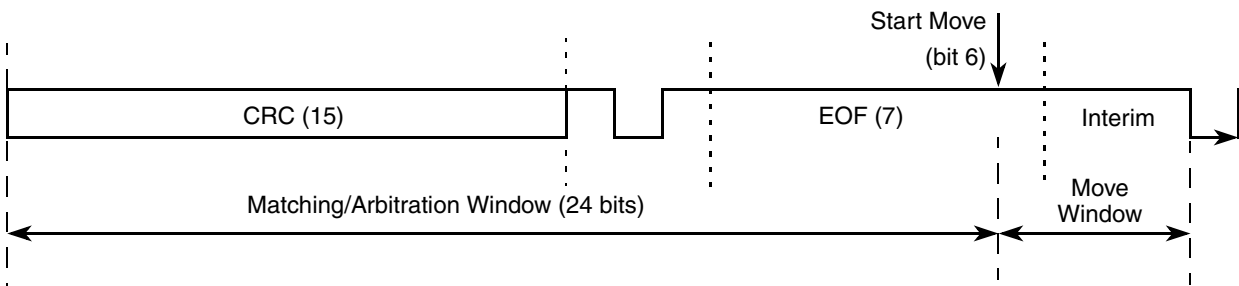


Figure 23-15. Arbitration, Match and Move Time Windows

23.4.6 Modes of Operation Details

23.4.6.1 Freeze Mode

This mode is entered by asserting the HALT bit in the CAN_x_MCR or when the MCU is put into debug mode. In both cases it is also necessary that the FRZ bit is asserted in the CAN_x_MCR. When freeze mode is requested during transmission or reception, FlexCAN2 does the following:

- Waits to be in either intermission, passive error, bus off or idle state
- Waits for all internal activities like move in or move out to finish
- Ignores the RX input pin and drives the TX pin as recessive

- Stops the prescaler, thus halting all CAN protocol activities
- Grants write access to the CAN_x_ECR, which is read-only in other modes
- Sets the NOTRDY and FRZACK bits in CAN_x_MCR

After requesting freeze mode, the user must wait for the FRZACK bit to be asserted in CAN_x_MCR before executing any other action, otherwise FlexCAN2 can operate in an unpredictable way. In freeze mode, all memory mapped registers are accessible; CAN_x_RXIMR_n registers can be programmed only if the MBFEN bit is asserted.

Exiting freeze mode is done in one of the following ways:

- CPU negates the FRZ bit in the CAN_x_MCR.
- The MCU exits debug mode and/or the HALT bit is negated.

Once out of freeze mode, FlexCAN2 tries to re-synchronize to the CAN bus by waiting for 11 consecutive recessive bits.

23.4.6.2 Module Disabled Mode

This low power mode is entered when the CAN_x_MCR[MDIS] bit is asserted. If the module is disabled during freeze mode, it shuts down the clocks to the CPI and MBM sub-modules, sets the CAN_x_MCR[MDISACK] bit and negates the CAN_x_MCR[FRZACK] bit. If the module is disabled during transmission or reception, FlexCAN2 does the following:

- Waits to be in either idle or bus off state, or else waits for the third bit of intermission and then checks it to be recessive
- Waits for all internal activities like move in or move out to finish
- Ignores its RX input pin and drives its TX pin as recessive
- Shuts down the clocks to the CPI and MBM sub-modules
- Sets the NOTRDY and MDISACK bits in CAN_x_MCR

The bus interface unit continues to operate, enabling the CPU to access memory mapped registers except the free running timer, the CAN_x_ECR and the message buffers, which cannot be accessed when the module is disabled. Exiting from this mode is done by negating the CAN_x_MCR[MDIS] bit, which will resume the clocks and negate the CAN_x_MCR[MDISACK] bit.

23.4.7 Interrupts

The module can generate interrupts from 20 interrupt sources (16 interrupts due to message buffers, one interrupt due to an error condition, two interrupts for the OR'd MB16–MB31 and MB32–63, and one interrupt for one of the following: a bus off condition, a transmit warning, or a receive warning).

Each of the 64 message buffers can be an interrupt source, if its corresponding CAN_x_IMRH or CAN_x_IMRL bit is set. There is no distinction between TX and RX interrupts for a particular buffer, under the assumption that the buffer is initialized for either transmission or reception. Each of the buffers has assigned a flag bit in the CAN_x_IFRH or CAN_x_IFRL registers. The bit is set when the corresponding buffer completes a successful transmission/reception and is cleared when the CPU writes it to 1.

A combined interrupt for each of two MB groups, MB16–MB31 and MB32–MB63, is also generated by an OR of all the interrupt sources from the associated MBs. This interrupt gets generated when any of the MBs generates an interrupt. In this case the CPU must read the CANx_IFRH and CANx_IFRL registers to determine which MB caused the interrupt.

The other two interrupt sources (bus off/transmit warning/receive warning and error) generate interrupts like the MB interrupt sources, and can be read from CANx_ESR. The bus off/transmit warning/receive warning and error interrupt mask bits are located in the CANx_CR.

23.4.8 Bus Interface

The CPU access to FlexCAN2 registers are subject to the following rules:

- Read and write access to unimplemented or reserved address space also results in access error. Any access to unimplemented MB locations results in access error.
- For a FlexCAN2 configuration that uses less than the total number of MBs and MAXMB is set accordingly, the remaining MB and RX mask register spaces can be used as general-purpose RAM space. Byte, word and long word accesses are allowed to the unused MB space.

NOTE

Unused MB space must not be used as general purpose RAM while FlexCAN is transmitting and receiving CAN frames.

23.5 Initialization/Application Information

This section provides instructions for initializing the FlexCAN2 module.

23.5.1 FlexCAN2 Initialization Sequence

The FlexCAN2 module can be reset in three ways:

- MCU-level hard reset, which resets all memory mapped registers asynchronously
- MCU-level soft reset, which resets some of the memory mapped registers synchronously (refer to [Table 23-2](#) to see what registers are affected by soft reset)
- SOFTRST bit in CANx_MCR, which has the same effect as the MCU level soft reset

Soft reset is synchronous and has to follow an internal request/acknowledge procedure across clock domains. Therefore, it may take some time to fully propagate its effects. The SOFTRST bit remains asserted while soft reset is pending, so software can poll this bit to know when the reset has completed.

After the module is enabled (CANx_MCR[MDIS] bit negated), FlexCAN2 should be put into freeze mode before doing any configuration. In freeze mode, FlexCAN2 is un-synchronized to the CAN bus, the HALT and FRZ bits in CANx_MCR are set, the internal state machines are disabled and the FRZACK and NOTRDY bits in the CANx_MCR are set. The CNTX pin is in recessive state and FlexCAN2 does not initiate frame transmission nor receives any frames from the CAN bus. Note that the message buffer contents are not affected by reset, so they are not automatically initialized.

For any configuration change/initialization, it is required that FlexCAN2 is put into freeze mode (see [Section 23.4.6.1, “Freeze Mode](#)). The following is a generic initialization sequence applicable for the FlexCAN2 module:

- Initialize CANx_CR.
 - Determine bit timing parameters: PROPSEG, PSEG1, PSEG2, RJW.
 - Determine the bit rate by programming the PRESDIV field.
 - Determine internal arbitration mode (LBUF bit).
- Initialize message buffers.
 - The control and status word of all message buffers may be written either as active or inactive.
 - Other entries in each message buffer should be initialized as required.
- Initialize CANx_MCR bits MBFEN, SRXDIS, and WRNEN.
- The initialization of FlexCAN registers for either global or individual acceptance masking depends on the configuration of MBFEN:
 - If MBFEN is negated, initialize CANx_RXGMASK, CANx_RX14MASK, and CANx_RX15MASK registers for acceptance mask.
 - If MBFEN is asserted, initialize CANx_RXIMR[0-63] for individual acceptance masking.
- Set required mask bits in CANx_IMRH and CANx_IMRL registers (for all MBs interrupts), and in CANx_CR (for bus off and error interrupts).
- Negate the CANx_MCR[HALT] bit.

Starting with this last event, FlexCAN2 attempts to synchronize with the CAN bus.

23.5.2 FlexCAN2 Addressing and RAM Size

There are 1024 bytes of RAM for a maximum of 64 message buffers. The user can program the maximum number of message buffers (MBs) using the MAXMB field in the CANx_MCR. For this 1024-byte RAM configuration, MAXMB can be any number from 0–63.

23.6 Document Revision History

Table 23-19. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 24


Voltage Regulator Controller (VRC) and POR Module

24.1 Introduction

The voltage regulator controller (VRC) and POR module contains circuitry to control regulation of the external 1.5-V supply used by the device. It also contains power-on reset (POR) circuits for the 1.5-V supply, V_{DDSYN} and the V_{DDE} supply that powers the \overline{RESET} pad.

24.1.1 Block Diagram

The block diagram of the VRC and POR module is shown in Figure 24-1. The diagram represents the various submodules as implemented on the device.

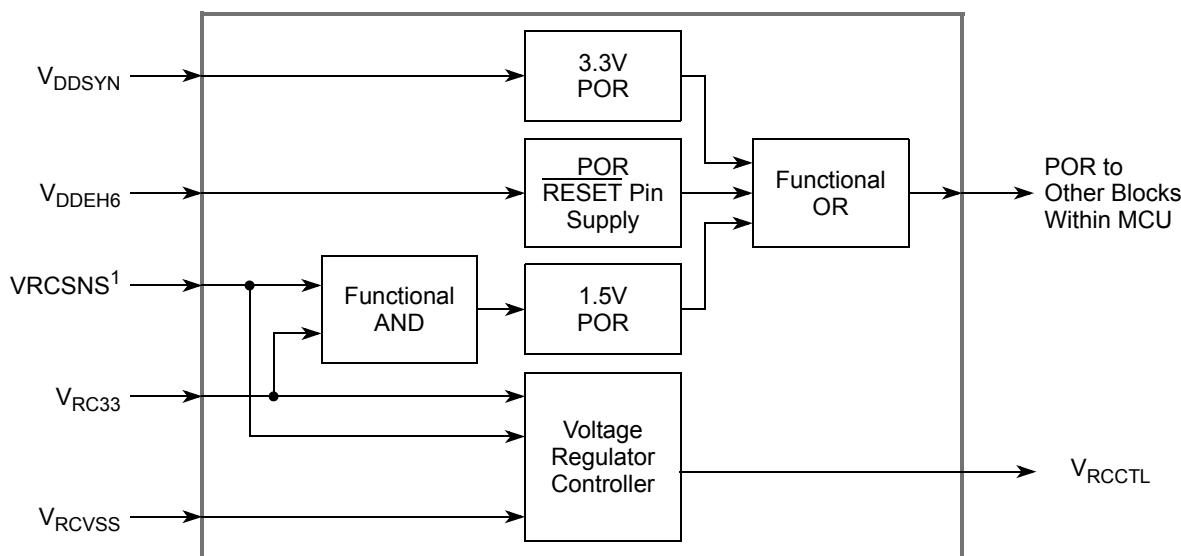

¹This is not a package pin

Figure 24-1. Voltage Regulator Controller and POR Blocks

24.2 External Signal Description

Table 24-1 provides an overview of VRC signals.

Table 24-1. Voltage Regulator Controller and POR Block External Signals

Signal	Type	Signal Level	Description
V_{RC33}	Supply pin	3.3V	Regulator supply input
V_{DDSYN}	Supply pin	3.3V	FMPLL supply input
V_{DDEH6}	Supply pin	3.3/5.0V	\overline{RESET} pin supply input
V_{RCVSS}	Supply pin	0V	Regulator supply ground
V_{RCSNS}	1.5-V Sense	1.5V	1.5-V Sense used by VRC. Pad connected to V_{DD} plane in package—not a package ball.
V_{RCCTL}	Current output	—	Regulator control output

24.2.1 Detailed Signal Description

The following paragraphs provide descriptions of signals coming into and going out of the VRC and POR modules.

24.2.1.1 V_{RC33}

3.3V VRC supply input.

24.2.1.2 V_{DDSYN}

3.3V supply input for FMPLL.

24.2.1.3 V_{DDEH6}

Power supply input for padding segment that contains the \overline{RESET} pad.

24.2.1.4 V_{RCVSS}

3.3V VRC ground supply.

24.2.1.5 V_{RCSNS}

1.5V sense from external 1.5-V supply output of NPN transistor. This input is monitored by the VRC to determine current value for V_{RCCTL} . V_{RCSNS} is a pad on the die that is connected to a V_{DD} plane inside the package. It is not a package ball.

24.2.1.6 V_{RCCTL}

The V_{RCCTL} sources base current to the external bypass transistor. The V_{RCCTL} signal is used with internal and external transistors to provide V_{DD} , which is the MCU's 1.5V power supply.

24.2.1.7 V_{DD}

Internal 1.5V supply input.

24.3 Memory Map/Register Definition

The VRC and POR module has no memory-mapped registers.

24.4 Functional Description

The VRC portion of the module contains a voltage regulator controller, and the POR portion contains circuits to monitor the voltage levels of the 1.5V and V_{DDSYN} supplies as well as circuits to monitor the supply that powers the \overline{RESET} pad. The PORs indicate whether each monitored supply is above a specified voltage threshold. These PORs are used to ensure that the device is correctly powered up during a power-on reset. POR will hold the device in reset when any of the monitored supplies are below the specified minimum voltage.

24.4.1 Voltage Regulator Controller

The VRC circuit provides a control current that can be used with an external NPN transistor and an external resistor to provide the 1.5V V_{DD} supply. The control current is output on the V_{RCCTL} pin. The voltage regulator controller begins to turn the pass transistor on slowly while the 3.3V POR still is asserted. The pass transistor will be completely turned on when the 3.3V POR negates.

NOTE

The voltage regulator controller will keep the 1.5V supply in regulation as long as V_{RC33} is in regulation. If more protection is desired, the customer may also supply an external 1.5V low voltage reset circuit.

If the on chip voltage regulator controller is not used, an external 1.5V power supply must be used. To avoid a power sequencing requirement when an external power supply is used, external 3.3V must power V_{RC33} while the V_{RCCTL} pad is unconnected. In this case the internal 1.5V POR will remain enabled. If V_{RC33} is not powered, the device is subject to power sequencing requirements for the 1.5V and 3.3V or \overline{RESET} power supplies (See [Section 24.5.3, “Power Sequencing”](#)). This is necessary to ensure that the 1.5V power supply is high enough for internal logic to operate properly during power-up.

24.4.2 POR Circuits

The individual POR circuits will assert whenever the supply they are monitoring is below a specified threshold. The entire device will be in power-on reset if any of these supplies are below the values specified in the *MPC5567 Microcontroller Data Sheet*.

Power-on reset will assert as soon as possible after the voltage level of the POR power supplies begins to rise. Each POR will negate before its power supply rises into its specified range. Power-on reset will

remain asserted until all of the POR supplies have risen above the maximum POR threshold. Each POR will assert after its power supply drops below its specified range. The behavior for each POR during power sequencing is shown in Figure 24-2.

Before the 3.3V POR circuit asserts when ramping up or after it negates when ramping down, the device can exit POR but still be in system reset. In this case, MDO[0] will be driving high. Also in this case, no clocks will be toggling. If the 3.3V POR circuit is asserted, the device will behave as if in POR even if the 1.5V and $\overline{\text{RESET}}$ power POR circuits have not yet asserted when ramping up or have negated when ramping down.

NOTE

The PORs for each power supply are not intended to indicate that the power supply has dropped below the specified voltage range for the device. The user must monitor the power supplies externally and assert $\overline{\text{RESET}}$ to provide this precision of monitoring.

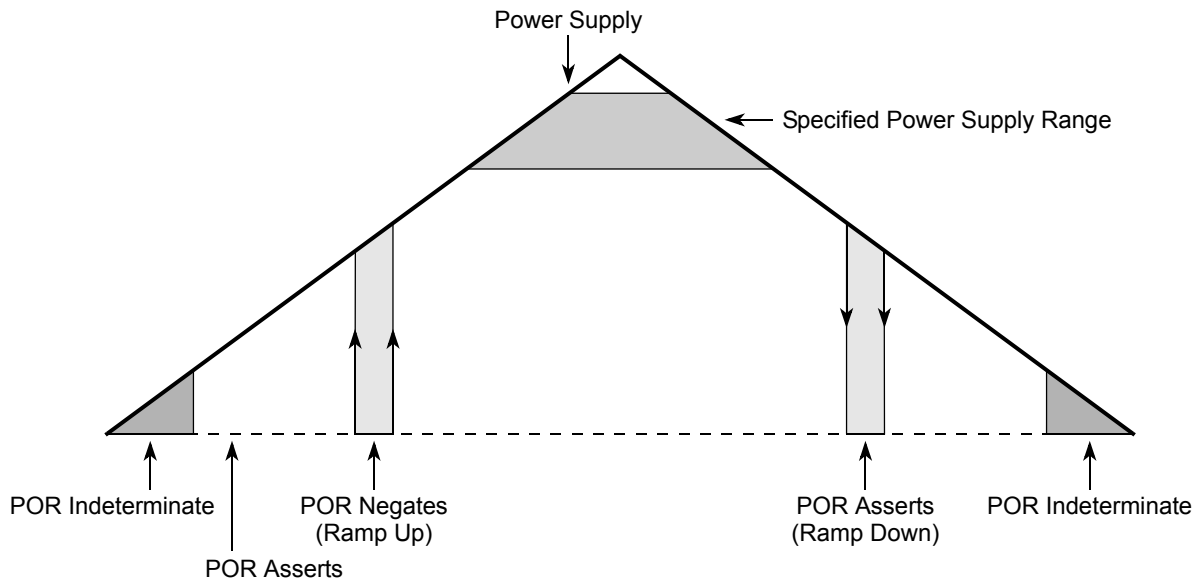


Figure 24-2. Regions POR is Asserted

24.4.2.1 1.5V POR Circuit

The 1.5V POR circuit monitors the voltage on the V_{RCSNS} pad. The 1.5V POR will function if the V_{RC33} pad is powered. If the user does not power V_{RC33} to the specified voltage, the 1.5V POR will be disabled and the user must follow the specified power sequence.

24.4.2.2 3.3V POR Circuit

The 3.3V POR circuit is used to ensure that V_{DDSYN} is high enough that the FMPLL will begin to operate properly.

24.4.2.3 $\overline{\text{RESET}}$ Power POR Circuit

The $\overline{\text{RESET}}$ power POR circuit, which monitors the power supply that is powering the $\overline{\text{RESET}}$ pin, is used to ensure that the supply that powers the $\overline{\text{RESET}}$ pin is high enough that the state of the input will propagate reliably. The power supply monitored by this POR can go as high as 5.5V.

24.5 Initialization/Application Information

24.5.1 Voltage Regulator Example

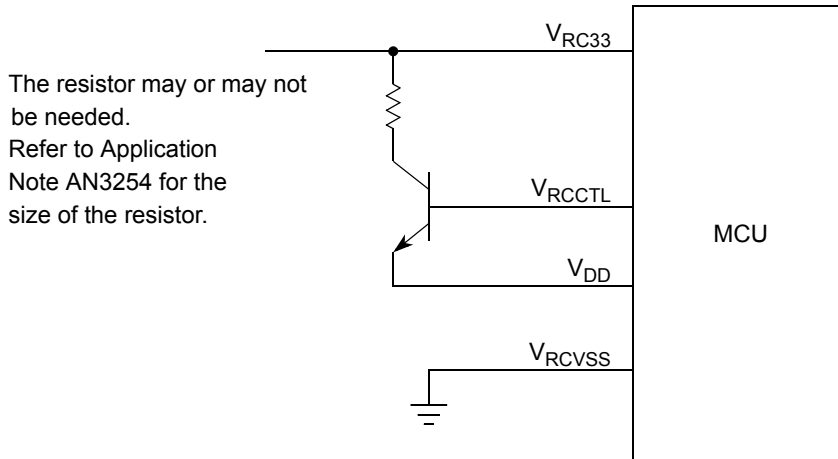


Figure 24-3. Voltage Regulator Controller Hookup

NOTE

The figure above should not be used as an application board design reference. The resistor may or may not be needed. See Application Note AN3524.

24.5.2 Recommended Power Transistors

Freescale recommends the use of the following NPN transistors with the on-chip Voltage Regulator Controller: ON Semiconductor™ NJD2873 and Phillips Semiconductor™ BCP68.

Refer to the *MPC5567 Microcontroller Data Sheet* for information on recommended operating characteristics.

24.5.3 Power Sequencing

Power sequencing between the 1.5V power supply and V_{DDSYN} or the $\overline{\text{RESET}}$ power supplies is required if the user provides an external 1.5V power supply and ties V_{RC33} to ground. To avoid this power sequencing requirement, the user should power up V_{RC33} within the specified operating range, even if not using the on chip voltage regulator controller. Refer to [Section 24.5.3.1, “Power-Up Sequence If VRC33 Grounded”](#) and [Section 24.5.3.2, “Power-Down Sequence If VRC33 Grounded.”](#)

Another power sequencing requirement is that V_{DD33} must be of sufficient voltage before POR negates so that the values on certain pins are treated as 1s when POR does negate. Refer to [Section 24.5.3.3, “Input Value of Pins During POR Dependent on VDD33.”](#)

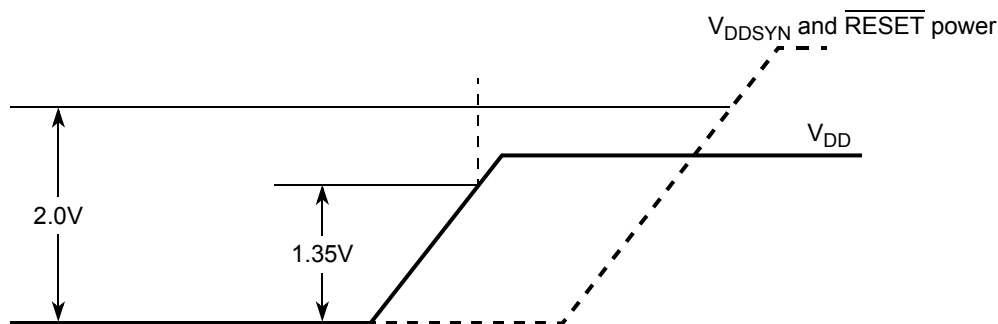
Although there is no power sequencing required between V_{RC33} and V_{DDSYN} , during power up, in order for the VRC staged turn-on to operate within specification, V_{RC33} must not lead V_{DDSYN} by more than 600 mV or lag by more than 100 mV. Higher spikes in the emitter current of the pass transistor will occur if V_{RC33} leads or lags V_{DDSYN} by more than those amounts. The value of that higher spike in current depends on the board power supply circuitry and the amount of board level capacitance.

When powering down, V_{RC33} and V_{DDSYN} do not have a delta requirement to each other because the bypass capacitors internal and external to the SoC already are charged.

When not powering up or down, V_{RC33} and V_{DDSYN} do not have a delta requirement to each other for the VRC to operate within specification.

24.5.3.1 Power-Up Sequence If V_{RC33} Grounded

In this case, the 1.5V V_{DD} supply must rise to 1.35V before the 3.3V V_{DDSYN} and the \overline{RESET} power supplies rise above 2.0V. This is to insure that digital logic in the PLL on the 1.5V supply will not begin to operate below the specified operation range lower limit of 1.35V. Since the internal 1.5V POR is disabled, the internal 3.3V POR or the \overline{RESET} power POR must be depended on to hold the device in reset. Since they may negate as low as 2.0V, it is necessary for V_{DD} to be within spec before the 3.3V POR and the \overline{RESET} power POR negate.



NOTE: V_{DD} must reach 1.35V before V_{DDSYN} and \overline{RESET} reach 2.0V.

Figure 24-4. Power-Up Sequence, V_{RC33} Grounded

24.5.3.2 Power-Down Sequence If V_{RC33} Grounded

In this case, the only requirement is that if V_{DD} falls below its operating range, V_{DDSYN} or the \overline{RESET} power must fall below 2.0V before V_{DD} is allowed to rise back into its operating range. This is to insure that digital 1.5V logic that is only reset by POR, which may have been affected by the 1.5V supply falling below spec, will be reset properly.

24.5.3.3 Input Value of Pins During POR Dependent on V_{DD33}

In order to avoid accidentally selecting the bypass clock because $PLLCFG[0:1]$ and \overline{RSTCFG} were not treated as 1s when POR negates (refer to Section 24.5.3.4, “Pin Values after Negation of POR”), V_{DD33} must not lag V_{DDSYN} and the \overline{RESET} pin power when powering the device by more than the $VDD33_LAG$ specification in Table 5 of the *MPC5567 Microcontroller Data Sheet*. V_{DD33} individually can lag either V_{DDSYN} or the \overline{RESET} pin power by more than the $VDD33_LAG$ specification. The $VDD33_LAG$ specification applies regardless of whether V_{RC33} is powered. The $VDD33_LAG$ specification only applies during power up. V_{DD33} has no lead or lag requirements when powering down.

24.5.3.4 Pin Values after Negation of POR

Depending on the final PLL mode required, the $PLLCFG[0:1]$ and \overline{RSTCFG} pins must have the values shown in Table 24-2 after POR negates. See application note AN2613, “MPC5554 Minimum Board Configuration” for one example of the external configuration circuit.

Table 24-2. Values after POR Negation

Final PLL Mode	\overline{RSTCFG}	$PLLCFG0$	$PLLCFG1$
Crystal Reference (Using \overline{RSTCFG} to select Crystal Reference as the default)	1	—	—
Crystal Reference (Using \overline{RSTCFG} to <i>not</i> select Crystal Reference as the default)	—	1	—
External Reference	0	1	1
Dual-Controller	—	1	—

NOTE

After POR negates, \overline{RSTCFG} and $PLLCFG[0:1]$ can be changed to their final value, but must avoid switching through the 0, 0, 0 state on these pins.

24.6 Document Revision History

Table 24-3. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release



Chapter 25

IEEE 1149.1 Test Access Port Controller (JTAGC)

25.1 Introduction

The JTAG port of the device consists of four inputs and one output. These pins include JTAG compliance select (JCOMP), test data input (TDI), test data output (TDO), test mode select (TMS), and test clock input (TCK). TDI, TDO, TMS, and TCK are compliant with the IEEE 1149.1-2001 standard and are shared with the NDI through the test access port (TAP) interface.

25.1.1 Block Diagram

Figure 25-1 is a block diagram of the JTAG Controller (JTAGC).

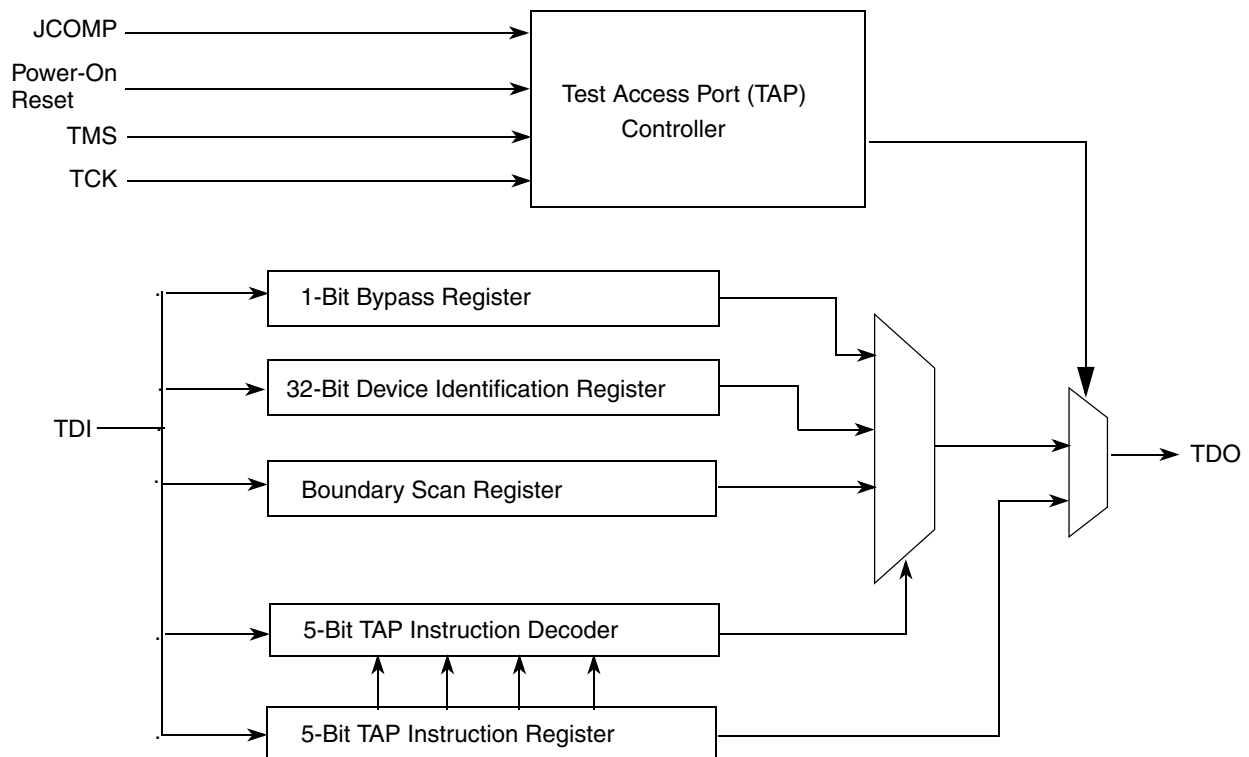


Figure 25-1. JTAG Controller Block Diagram

25.1.2 Overview

The JTAGC provides the means to test chip functionality and connectivity while remaining transparent to system logic when not in test mode. Testing is performed via a boundary scan technique, as defined in the IEEE 1149.1-2001 standard. In addition, instructions can be executed that allow the Test Access Port (TAP) to be shared with other modules on the MCU. All data input to and output from the JTAGC is communicated in serial format.

25.1.3 Features

The JTAGC is compliant with the IEEE 1149.1-2001 standard, and supports the following features:

- IEEE 1149.1-2001 Test Access Port (TAP) interface.
- 4 pins (TDI, TMS, TCK, and TDO), See [Section 25.2, “External Signal Description.”](#)
- A JCOMP input that provides the ability to share the TAP.
- A 5-bit instruction register that supports several IEEE 1149.1-2001 defined instructions, as well as several public and private MCU specific instructions.
- Four test data registers: a bypass register, a boundary scan register, and a device identification register. The size of the boundary scan register is 556 bits.
- A TAP controller state machine that controls the operation of the data registers, instruction register and associated circuitry.

25.1.4 Modes of Operation

The JTAGC uses JCOMP and a power-on reset indication as its primary reset signals. Several IEEE 1149.1-2001 defined test modes are supported, as well as a bypass mode.

25.1.4.1 Reset

The JTAGC is placed in reset when the TAP controller state machine is in the TEST-LOGIC-RESET state. The TEST-LOGIC-RESET state is entered upon the assertion of the power-on reset signal, negation of JCOMP, or through TAP controller state machine transitions controlled by TMS. Asserting power-on reset or negating JCOMP results in asynchronous entry into the reset state. While in reset, the following actions occur:

- The TAP controller is forced into the test-logic-reset state, thereby disabling the test logic and allowing normal operation of the on-chip system logic to continue unhindered.
- The instruction register is loaded with the IDCODE instruction.

In addition, execution of certain instructions can result in assertion of the internal system reset. These instructions include EXTEST, CLAMP, and HIGHZ.

25.1.4.2 IEEE 1149.1-2001 Defined Test Modes

The JTAGC supports several IEEE 1149.1-2001 defined test modes. The test mode is selected by loading the appropriate instruction into the instruction register while the JTAGC is enabled. Supported test instructions include EXTEST, HIGHZ, CLAMP, SAMPLE and SAMPLE/PRELOAD. Each instruction

defines the set of data registers that may operate and interact with the on-chip system logic while the instruction is current. Only one test data register path is enabled to shift data between TDI and TDO for each instruction.

The boundary scan register is enabled for serial access between TDI and TDO when the EXTEST, SAMPLE or SAMPLE/PRELOAD instructions are active. The single-bit bypass register shift stage is enabled for serial access between TDI and TDO when the HIGHZ, CLAMP or reserved instructions are active. The functionality of each test mode is explained in more detail in [Section 25.4.4, “JTAGC Instructions.”](#)

25.1.4.3 Bypass Mode

When no test operation is required, the BYPASS instruction can be loaded to place the JTAGC into bypass mode. While in bypass mode, the single-bit bypass shift register is used to provide a minimum-length serial path to shift data between TDI and TDO.

25.1.4.4 TAP Sharing Mode

There are four selectable auxiliary TAP controllers that share the TAP with the JTAGC. Selectable TAP controllers include the Nexus port controller (NPC), e200 OnCE, eTPU Nexus, and eDMA Nexus. The instructions required to grant ownership of the TAP to the auxiliary TAP controllers are ACCESS_AUX_TAP_NPC, ACCESS_AUX_TAP_ONCE, ACCESS_AUX_TAP_eTPU, ACCESS_AUX_TAP_DMA, and ACCESS_AUX_TAP_NXFR. Instruction opcodes for each instruction are shown in [Table 25-3](#).

When the access instruction for an auxiliary TAP is loaded, control of the JTAG pins is transferred to the selected TAP controller. Any data input via TDI and TMS is passed to the selected TAP controller, and any TDO output from the selected TAP controller is sent back to the JTAGC to be output on the pins. The JTAGC regains control of the JTAG port during the UPDATE-DR state if the PAUSE-DR state was entered. Auxiliary TAP controllers are held in RUN-TEST/IDLE while they are inactive.

For more information on the TAP controllers see [Chapter 26, “Nexus Development Interface.”](#)

25.2 External Signal Description

The JTAGC consists of five signals that connect to off-chip development tools and allow access to test support functions. The JTAGC signals are outlined below.

Table 25-1. JTAG Signal Properties

Name	I/O	Function	Reset State	Pull ¹
TCK	I	Test Clock	—	Down
TDI	I	Test Data In	—	Up
TDO	O	Test Data Out	High Z ²	Down ²
TMS	I	Test Mode Select	—	Up
JCOMP	I	JTAG Compliancy	—	Down

¹ The pull is not implemented in this module. Pull-up/pull-down devices are implemented in the pads.

² TDO output buffer enable is negated when JTAGC is not in the Shift-IR or Shift-DR states. A weak pull-down may be implemented on TDO.

25.3 Memory Map/Register Definition

This section provides a detailed description of the JTAGC registers accessible through the TAP interface, including data registers and the instruction register. Individual bit-level descriptions and reset states of each register are included. These registers are not memory-mapped and can only be accessed through the TAP.

25.3.1 Instruction Register

The JTAGC uses a 5-bit instruction register as shown in [Figure 25-2](#). The instruction register allows instructions to be loaded into the module to select the test to be performed or the test data register to be accessed or both. Instructions are shifted in through TDI while the TAP controller is in the Shift-IR state, and latched on the falling edge of TCK in the Update-IR state. The latched instruction value can only be changed in the Update-IR and Test-Logic-Reset TAP controller states. Synchronous entry into the test-logic-reset state results in the IDCODE instruction being loaded on the falling edge of TCK. Asynchronous entry into the test-logic-reset state results in asynchronous loading of the IDCODE instruction. During the capture-IR TAP controller state, the instruction shift register is loaded with the value 0b10101, making this value the register's read value when the TAP controller is sequenced into the Shift-IR state.

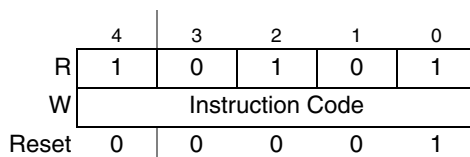


Figure 25-2. 5-Bit Instruction Register

25.3.2 Bypass Register

The bypass register is a single-bit shift register path selected for serial data transfer between TDI and TDO when the BYPASS, CLAMP, HIGHZ or reserve instructions are active. After entry into the capture-DR state, the single-bit shift register is set to a logic 0. Therefore, the first bit shifted out after selecting the bypass register is always a logic 0.

25.3.3 Device Identification Register

The device identification register, shown in [Figure 25-3](#), allows the part revision number, design center, part identification number, and manufacturer identity code to be determined through the TAP. The device identification register is selected for serial data transfer between TDI and TDO when the IDCODE instruction is active. Entry into the capture-DR state while the device identification register is selected loads the IDCODE into the shift register to be shifted out on TDO in the Shift-DR state. No action occurs in the update-DR state.

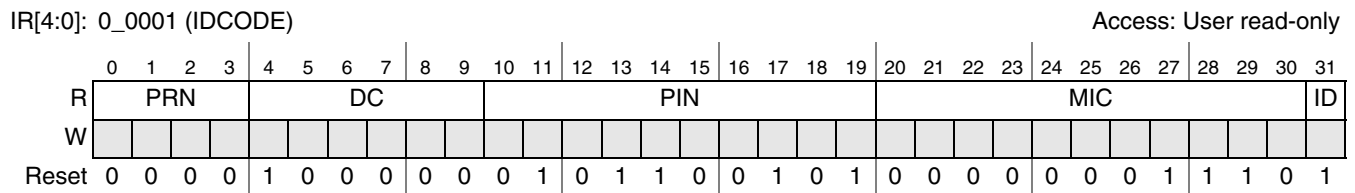


Figure 25-3. Device Identification Register

Table 25-2. Device Identification Register Field Descriptions

Field	Description
0–3 PRN	Part revision number. Contains the revision number of the device. This field changes with each revision of the device or module.
4–9 DC	Design center. Indicates the Freescale design center. For the MPC5567 this value is 0x20.
10–19 PIN	Part identification number. Contains the part number of the device. For the MPC5567, this value is 0x165.
20–30 MIC	Manufacturer identity code. Contains the reduced Joint Electron Device Engineering Council (JEDEC) ID for Freescale, 0xE.
31 ID	IDCODE register ID. Identifies this register as the device identification register and not the bypass register. Always set to 1.

25.3.4 Boundary Scan Register

The boundary scan register is connected between TDI and TDO when the EXTEST, SAMPLE or SAMPLE/PRELOAD instructions are active. It is used to capture input pin data, force fixed values on output pins, and select a logic value and direction for bidirectional pins. Each bit of the boundary scan register represents a separate boundary scan register cell, as described in the IEEE 1149.1-2001 standard and discussed in [Section 25.4.5, “Boundary Scan.”](#) The size of the boundary scan register is 556 bits.

25.4 Functional Description

25.4.1 JTAGC Reset Configuration

While in reset, the TAP controller is forced into the test-logic-reset state, thus disabling the test logic and allowing normal operation of the on-chip system logic. In addition, the instruction register is loaded with the IDCODE instruction.

25.4.2 IEEE 1149.1-2001 (JTAG) Test Access Port

The JTAGC uses the IEEE 1149.1-2001 TAP for accessing registers. This port can be shared with other TAP controllers on the MCU. Ownership of the port is determined by the value of the JCOMP signal and the currently loaded instruction. For more detail on TAP sharing via JTAGC instructions refer to [Section 25.4.4.2, “ACCESS_AUX_TAP_x Instructions.”](#)


Data is shifted between TDI and TDO through the selected register starting with the least significant bit, as illustrated in [Figure 25-4](#). This applies for the instruction register, test data registers, and the bypass register.



Figure 25-4. Shifting Data Through a Register

25.4.3 TAP Controller State Machine

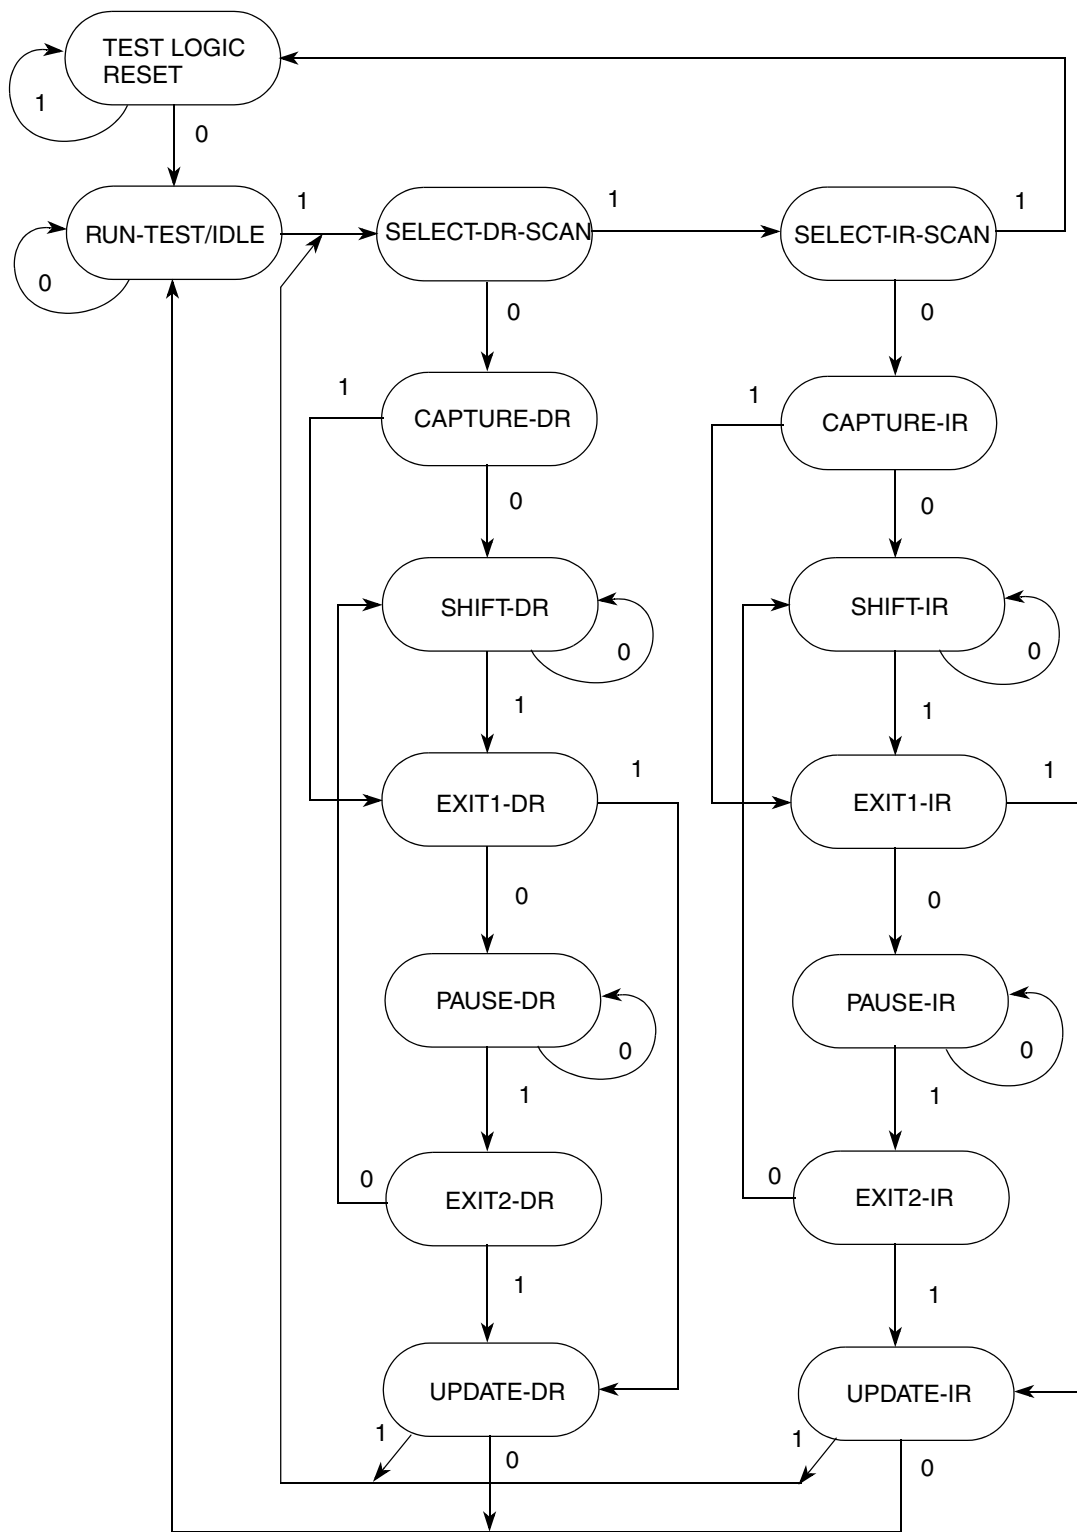The TAP controller is a synchronous state machine that interprets the sequence of logical values on the TMS pin. [Figure 25-5](#) shows the machine’s states. The value shown next to each state is the value of the TMS signal sampled on the rising edge of the TCK signal. As [Figure 25-5](#) shows, holding TMS at logic 1 while clocking TCK through a sufficient number of rising edges also causes the state machine to enter the test-logic-reset state.



NOTE: The value shown adjacent to each state transition in this figure represents the value of TMS at the time of a rising edge of TCK.

Figure 25-5. IEEE 1149.1-2001 TAP Controller Finite State Machine

25.4.3.1 Enabling the TAP Controller

The JTAGC TAP controller is enabled by setting JCOMP to a logic 1 value.

25.4.3.2 Selecting an IEEE 1149.1-2001 Register

Access to the JTAGC data registers is achieved by loading the instruction register with any of the JTAGC instructions while the JTAGC is enabled. Instructions are shifted in via the select-IR-scan path and loaded in the update-IR state. At this point, all data register access is performed via the select-DR-scan path.

The select-DR-scan path is used to read or write the register data by shifting in the data (lsb first) during the shift-DR state. When reading a register, the register value is loaded into the IEEE 1149.1-2001 shifter during the capture-DR state. When writing a register, the value is loaded from the IEEE 1149.1-2001 shifter to the register during the update-DR state. When reading a register, there is no requirement to shift out the entire register contents. Shifting may be terminated once the required number of bits have been acquired.

25.4.4 JTAGC Instructions

The JTAGC implements the IEEE 1149.1-2001 defined instructions listed in [Table 25-3](#). This section gives an overview of each instruction, refer to the IEEE 1149.1-2001 standard for more details.

Table 25-3. JTAG Instructions

Instruction	Code[4:0]	Instruction Summary
IDCODE	00001	Selects device identification register for shift
SAMPLE/PRELOAD	00010	Selects boundary scan register for shifting, sampling, and preloading without disturbing functional operation
SAMPLE	00011	Selects boundary scan register for shifting and sampling without disturbing functional operation
EXTEST	00100	Selects boundary scan register while applying preloaded values to output pins and asserting functional reset
HIGHZ	01001	Selects bypass register while three-stating all output pins and asserting functional reset
CLAMP	01100	Selects bypass register while applying preloaded values to output pins and asserting functional reset
ACCESS_AUX_TAP_NPC	10000	Grants the Nexus port controller (NPC) ownership of the TAP
ACCESS_AUX_TAP_ONCE	10001	Grants the Nexus e200z6 core interface (NZ6C3) ownership of the TAP
ACCESS_AUX_TAP_eTPU	10010	Grants the Nexus dual-eTPU development interface (NDEDI) ownership of the TAP
ACCESS_AUX_TAP_DMA	10011	Grants the Nexus crossbar DMA interface (NXDM) ownership of the TAP
ACCESS_AUX_TAP_NXFR	10100	Enables access to the FlexRay Nexus TAP controller
BYPASS	11111	Selects bypass register for data operations

Table 25-3. JTAG Instructions (continued)

Instruction	Code[4:0]	Instruction Summary
Factory Debug Reserved ¹	00101, 00110, 01010	Intended for factory debug only
Reserved ²	All Other Codes	Decoded to select bypass register

¹ Intended for factory debug, and not customer use

² Freescale reserves the right to change the decoding of reserved instruction codes in the future

25.4.4.1 BYPASS Instruction

BYPASS selects the bypass register, creating a single-bit shift register path between TDI and TDO. BYPASS enhances test efficiency by reducing the overall shift path when no test operation of the MCU is required. This allows more rapid movement of test data to and from other components on a board that are required to perform test functions. While the BYPASS instruction is active the system logic operates normally.

25.4.4.2 ACCESS_AUX_TAP_x Instructions

The ACCESS_AUX_TAP_x instructions allow the Nexus modules on the MCU to take control of the TAP. When this instruction is loaded, control of the TAP pins is transferred to the selected auxiliary TAP controller. Any data input via TDI and TMS is passed to the selected TAP controller, and any TDO output from the selected TAP controller is sent back to the JTAGC to be output on the pins. The JTAGC regains control of the JTAG port during the UPDATE-DR state if the PAUSE-DR state was entered. Auxiliary TAP controllers are held in RUN-TEST/IDLE while they are inactive.

25.4.4.3 CLAMP Instruction

CLAMP allows the state of signals driven from MCU pins to be determined from the boundary scan register while the bypass register is selected as the serial path between TDI and TDO. CLAMP enhances test efficiency by reducing the overall shift path to a single bit (the bypass register) while conducting an EXTEST type of instruction through the boundary scan register. CLAMP also asserts the internal system reset for the MCU to force a predictable internal state.

25.4.4.4 EXTEST — External Test Instruction

EXTEST selects the boundary scan register as the shift path between TDI and TDO. It allows testing of off-chip circuitry and board-level interconnections by driving preloaded data contained in the boundary scan register onto the system output pins. Typically, the preloaded data is loaded into the boundary scan register using the SAMPLE/PRELOAD instruction before the selection of EXTEST. EXTEST asserts the internal system reset for the MCU to force a predictable internal state while performing external boundary scan operations.

25.4.4.5 HIGHZ Instruction

HIGHZ selects the bypass register as the shift path between TDI and TDO. While HIGHZ is active, all output drivers are placed in an inactive drive state (for example, high impedance). HIGHZ also asserts the internal system reset for the MCU to force a predictable internal state.

25.4.4.6 IDCODE Instruction

IDCODE selects the 32-bit device identification register as the shift path between TDI and TDO. This instruction allows interrogation of the MCU to determine its version number and other part identification data. IDCODE is the instruction placed into the instruction register when the JTAGC is reset.

25.4.4.7 SAMPLE Instruction

The SAMPLE instruction obtains a sample of the system data and control signals present at the MCU input pins and just before the boundary scan register cells at the output pins. This sampling occurs on the rising edge of TCK in the capture-DR state when the SAMPLE instruction is active. The sampled data is viewed by shifting it through the boundary scan register to the TDO output during the Shift-DR state. There is no defined action in the update-DR state. Both the data capture and the shift operation are transparent to system operation.

25.4.4.8 SAMPLE/PRELOAD Instruction

The SAMPLE/PRELOAD instruction has two functions:

- First, the SAMPLE portion of the instruction obtains a sample of the system data and control signals present at the MCU input pins and just before the boundary scan register cells at the output pins. This sampling occurs on the rising edge of TCK in the capture-DR state when the SAMPLE/PRELOAD instruction is active. The sampled data is viewed by shifting it through the boundary scan register to the TDO output during the shift-DR state. Both the data capture and the shift operation are transparent to system operation.
- Secondly, the PRELOAD portion of the instruction initializes the boundary scan register cells before selecting the EXTEST or CLAMP instructions to perform boundary scan tests. This is achieved by shifting in initialization data to the boundary scan register during the shift-DR state. The initialization data is transferred to the parallel outputs of the boundary scan register cells on the falling edge of TCK in the update-DR state. The data is applied to the external output pins by the EXTEST or CLAMP instruction. System operation is not affected.

25.4.5 Boundary Scan

The boundary scan technique allows signals at component boundaries to be controlled and observed through the shift-register stage associated with each pad. Each stage is part of a larger boundary scan register cell, and cells for each pad are interconnected serially to form a shift-register chain around the border of the design. The boundary scan register consists of this shift-register chain, and is connected between TDI and TDO when the EXTEST, SAMPLE, or SAMPLE/PRELOAD instructions are loaded. The shift-register chain contains a serial input and serial output, as well as clock and control signals.

25.5 Initialization/Application Information

The test logic is a static logic design, and TCK can be stopped in either a high or low state without loss of data. However, the system clock is not synchronized to TCK internally. Any mixed operation using both the test logic and the system functional logic requires external synchronization.

To initialize the JTAGC module and enable access to registers, the following sequence is required:

1. Set the JCOMP signal to logic 1, thereby enabling the JTAGC TAP controller.
2. Load the appropriate instruction for the test or action to be performed.

25.6 Document Revision History

Table 25-4. Revision History

Revision	Location(s)	Substantive Change(s)
Rev. 1	Throughout.	01/07: First public release

Chapter 26

Nexus Development Interface

26.1 Introduction

The device microcontroller contains multiple Nexus clients that communicate over a single IEEE®-ISTO 5001™-2003 Nexus class 3 combined JTAG IEEE® 1149.1/auxiliary out interface. Combined, all of the Nexus clients are referred to as the Nexus development interface (NDI). Class 3 Nexus allows for program, data, and ownership trace of the microcontroller execution without access to the external data and address buses.

This chapter is organized in the following manner:

- The chapter opens with sections that provide a high level view of the Nexus development interface: [Section 26.1, “Introduction”](#) through [Section 26.8, “NPC Initialization/Application Information.”](#)

The remainder of the chapter contains sections that discuss the remaining three modules of the Nexus development interface:


- Nexus single-eTPU development interface (NSEDI). The device has one eTPU engine. Refer to [Section 26.9, “Nexus Single eTPU Development Interface \(NSEDI\)”](#) and the *eTPU Reference Manual* for information about the NSEDI.
- Nexus e200z6 core interface (NZ6C3). In this chapter, the NZ6C3 interface is discussed in [Section 26.10, “e200z6 Class 3 Nexus Module \(NZ6C3\)”](#) through [Section 26.11, “NZ6C3 Memory Map/Register Definition.”](#)
- Nexus crossbar eDMA interface (NXDM) and Nexus FlexRay interface (NXFR). Refer to [Section 26.12, “Nexus Crossbar eDMA Interface \(NXDM\) and Nexus Crossbar FlexRay Interface \(NXFR\)”](#)

Communication to the NDI is handled via the auxiliary port and the JTAG port.

- The auxiliary port is comprised of 9 or 17 output pins and 1 input pin. The output pins include 1 message clock out (MCKO) pin, 4 or 12 message data out (MDO) pins, 2 message start/end out (MSEO) pins, 1 ready (RDY) pin, and 1 event out (EVTO) pin. Event in (EVTI) is the only input pin for the auxiliary port.
- The JTAG port consists of four inputs and one output. These pins include JTAG compliance select (JCOMP), test data input (TDI), test data output (TDO), test mode select (TMS), and test clock input (TCK). TDI, TDO, TMS, and TCK are compliant with the IEEE® 1149.1-2001 standard and are shared with the NDI through the test access port (TAP) interface. JCOMP along with power-on reset and the TAP state machine are used to control reset for the NDI module. Ownership of the TAP is achieved by loading the appropriate enable instruction for the desired Nexus client in the JTAG controller (JTAGC) when JCOMP is asserted. See [Table 26-4](#) for the JTAGC opcodes to access the different Nexus clients.

26.1.1 Block Diagram

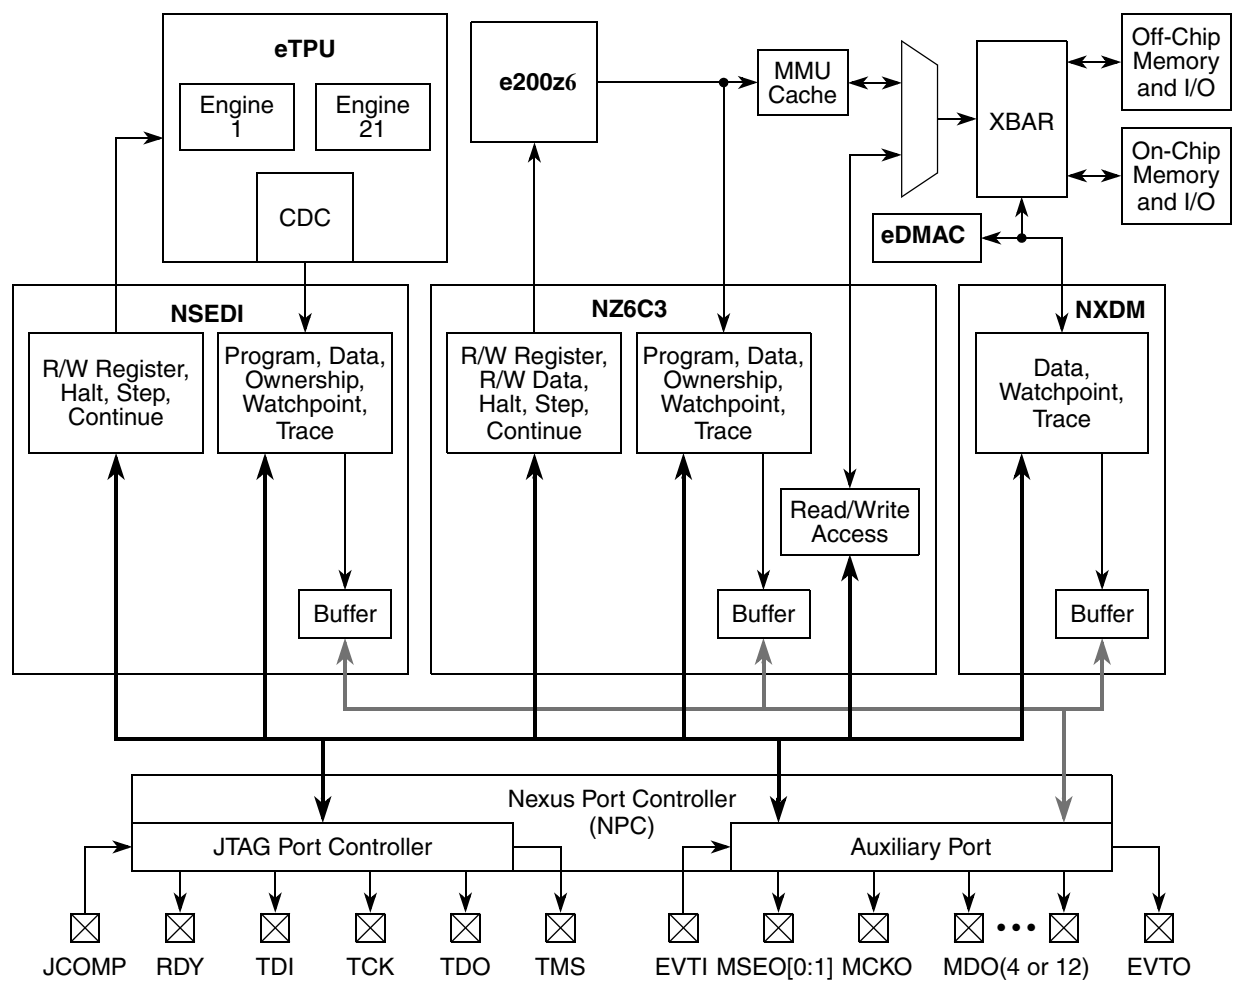Figure 26-1 shows a general block diagram of the NDI components.



¹ Some MPC55xx devices have one eTPU engine, others have two engines.

Figure 26-1. NDI General Block Diagram

26.1.2 Features

The NDI module is compliant with the IEEE-ISTO 5001-2003 standard. The following features are implemented:

- 15- or 23-bit full duplex pin interface for medium and high visibility throughput
 - One of two modes selected by register configuration: full port mode (FPM) and reduced port mode (RPM). FPM comprises 12 MDO pins, and RPM comprises 4 MDO pins.
 - Auxiliary output port
 - 1 MCKO (message clock out) pin
 - 4 or 12 MDO (message data out) pins
 - 2 $\overline{\text{MSEO}}$ (message start/end out) pins
 - 1 $\overline{\text{RDY}}$ (ready) pin
 - 1 $\overline{\text{EVTO}}$ (event out) pin
 - Auxiliary input port uses one $\overline{\text{EVTI}}$ (event in) pin
 - 5 pin JTAG port (JCOMP, TDI, TDO, TMS, and TCK)
- Host processor (e200z6) development support features (NZ6C3)
 - IEEE-ISTO 5001-2003 standard class 3 compliant.
 - Data trace via data write messaging (DWM) and data read messaging (DRM). This allows the development tool to trace reads and/or writes to selected internal memory resources.
 - Ownership trace via ownership trace messaging (OTM). OTM facilitates ownership trace by providing visibility of which process ID or operating system task is activated. An ownership trace message is transmitted when a new process/task is activated, allowing development tools to trace ownership flow.
 - Program trace via branch trace messaging (BTM). Branch trace messaging displays program flow discontinuities (direct branches, indirect branches, exceptions, etc.), allowing the development tool to interpolate what transpires between the discontinuities. Thus, static code can be traced.
 - Watchpoint messaging (WPM) via the auxiliary port.
 - Watchpoint trigger enable of program and/or data trace messaging.
 - Data tracing of instruction fetches via private opcodes.
 - Subset of PowerPC Book E software debug facilities with OnCE block (Nexus class 1 features).
- eDMA development support features (NXDM)
 - Data trace via data write messaging (DWM) and data read messaging (DRM). This allows the development tool to trace DMA generated reads and/or writes to selected address ranges in the device's memory map.
 - Watchpoint messaging (WPM) via the auxiliary port.
 - Watchpoint trigger enable/disable of data trace messaging.

- FlexRay development support features (NXFR)
 - FlexRay Nexus trace via data write messaging (DWM) and data read messaging (DRM). This allows the development tool to trace FlexRay generated reads and/or writes to selected address ranges in the device's memory map.
 - Watchpoint messaging (WPM) via the auxiliary port.
 - Watchpoint trigger enable/disable of data trace messaging.
- eTPU development support features (NSEDI)
 - IEEE-ISTO 5001-2002 standard Class 3 compliant for the eTPU engine.
 - Data trace via data write messaging and data read messaging. This allows the development tool to trace reads and writes to selected shared parameter RAM (SPRAM) address ranges. Four data trace windows are shared in between the two eTPU engines.
 - Ownership trace via ownership trace messaging (OTM). OTM facilitates ownership trace by providing visibility of which channel is being serviced. An ownership trace message is transmitted to indicate when a new channel service request is scheduled, allowing the development tools to trace task flow. A special OTM is sent when the engine enters in idle state, meaning that all requests were serviced and no new requests are yet scheduled.
 - Program trace via branch trace messaging. BTM displays program flow discontinuities (start, jumps, return, etc.), allowing the development tool to interpolate what transpires between the discontinuities. Thus static code can be traced. The branch trace messaging method uses the branch/predicate method to reduce the number of generated messages.
 - Watchpoint messaging via the auxiliary port. WPM provides visibility of the occurrence of the eTPU's watchpoints and breakpoints.
 - Nexus based breakpoint/watchpoint configuration and single step support.
- Run-time access to the on-chip memory map via the Nexus read/write access protocol. This feature supports accesses for run-time internal visibility, calibration variable acquisition, calibration constant tuning, and external rapid prototyping for powertrain automotive development systems.
- All features are independently configurable and controllable via the IEEE® 1149.1 I/O port.
- The NDI block reset is controlled with JCOMP, power-on reset, and the TAP state machine. These sources are independent of system reset.
- System clock locked status indication via MDO0 following power-on reset.

26.1.3 Modes of Operation

The NDI block is in reset when the TAP controller state machine is in the TEST-LOGIC-RESET state. The TEST-LOGIC-RESET state is entered on the assertion of the power-on reset signal, negation of JCOMP, or through state machine transitions controlled by TMS. Assertion of JCOMP allows the NDI to move out of the reset state, and is a prerequisite to grant Nexus clients control of the TAP. Ownership of the TAP is achieved by loading the appropriate enable instruction for the desired Nexus client in the JTAGC controller (JTAGC) block when JCOMP is asserted.

Following negation of power-on reset, the NPC remains in reset until the system clock achieves lock. In PLL bypass mode, the NDI can transition out of the reset state immediately following negation of power-on reset. Refer to [Section 26.4.5, “System Clock Locked Indication”](#) for more details.

26.1.3.1 Nexus Reset Mode

In Nexus reset mode, the following actions occur:

- Register values default back to their reset values.
- The message queues are marked as empty.
- The auxiliary output port pins are negated if the NDI controls the pads.
- The TDO output buffer is disabled if the NDI has control of the TAP.
- The TDI, TMS, and TCK inputs are ignored.
- The NDI block indicates to the MCU that it is not using the auxiliary output port. This indication can be used to three-state the output pins or use them for another function.

26.1.3.2 Full-Port Mode

In full-port mode, all the available MDO pins are used to transmit messages. All trace features are enabled or can be enabled by writing the configuration registers via the JTAG port. The number of MDO pins available is 12.

26.1.3.3 Reduced-Port Mode

In reduced-port mode, a subset of the available MDO pins are used to transmit messages. All trace features are enabled or can be enabled by writing the configuration registers via the JTAG port. The number of MDO pins available is 4. Unused MDO (MDO[11:4]) pins can be used as GPIO. Details on GPIO functionality configuration can be found in [Chapter 6, “System Integration Unit \(SIU\).”](#)

26.1.3.4 Disabled-Port Mode

In disabled-port mode, message transmission is disabled. Any debug feature that generates messages can not be used. The primary features available are class 1 features and read/write access.

26.1.3.5 Censored Mode

When the device is in censored mode, reading the contents of internal flash externally is not allowed. To prevent Nexus modules from violating censorship, the NPC is held in reset when in censored mode, asynchronously holding all other Nexus modules in reset as well. This prevents Nexus read/write to memory mapped resources and the transmission of Nexus trace messages. Refer to [Table 13-17](#) for information on Nexus port enabling and disabling regarding censorship.

26.2 External Signal Description

The auxiliary and JTAG pin interfaces provide for the transmission of messages from Nexus modules to the external development tools and for access to Nexus client registers. The auxiliary/JTAG pin definitions are outlined in [Table 26-1](#).

Table 26-1. Signal Properties

Name	Port	Function	Reset State
$\overline{\text{EVTO}}$	Auxiliary	Event Out pin	Negated
$\overline{\text{EVTI}}$	Auxiliary	Event In pin	Pulled Up
MCKO	Auxiliary	Message Clock Out pin (from NPC)	Enabled
MDO[3:0] or MDO[11:0]	Auxiliary	Message Data Out pins	Driven Low ¹
$\overline{\text{MSEO}}[1:0]$	Auxiliary	Message Start/End Out pins	Negated
$\overline{\text{RDY}}$	Auxiliary	Ready Out pin	Negated
JCOMP	JTAG	JTAG Compliancy and TAP Sharing Control	Pulled Down
TCK	JTAG	Test Clock Input	Pulled Up
TDI	JTAG	Test Data Input	Pulled Up
TDO	JTAG	Test Data Output	Pulled Up
TMS	JTAG	Test Mode Select Input	Pulled Up

¹ Following a power-on reset, MDO0 remains asserted until power-on reset is exited and the system clock achieves lock.

26.2.1 Detailed Signal Descriptions

This section describes each of the signals listed in [Table 26-1](#) in more detail.

26.2.1.1 Event Out ($\overline{\text{EVTO}}$)

$\overline{\text{EVTO}}$ is an output pin that is asserted upon breakpoint occurrence to provide breakpoint status indication or to signify that an event has occurred. The $\overline{\text{EVTO}}$ output of the NPC is generated based on the values of the individual $\overline{\text{EVTO}}$ signals from all Nexus modules that implement the signal.

26.2.1.2 Event In ($\overline{\text{EVTI}}$)

$\overline{\text{EVTI}}$ is used to initiate program and data trace synchronization messages or to generate a breakpoint. $\overline{\text{EVTI}}$ is edge-sensitive for synchronization and breakpoint generation.

26.2.1.3 Message Data Out (MDO[3:0/11:0])

Message data out (MDO) are output pins used for uploading OTM, BTM, DTM, and other messages to the development tool. The development tool should sample MDO on the rising edge of MCKO. The width of the MDO bus used is determined by the Nexus PCR[FPM] configuration.

Following a power-on reset, MDO0 remains asserted until power-on reset is exited and the system clock achieves lock.

26.2.1.4 Message Start/End Out ($\overline{\text{MSEO}}[1:0]$)

$\overline{\text{MSEO}}[1:0]$ are output pins that indicates when a message on the MDO pins has started, when a variable length packet has ended, or when the message has ended. The development tool should sample the $\overline{\text{MSEO}}$ pins on the rising edge of MCKO.

26.2.1.5 Ready ($\overline{\text{RDY}}$)

$\overline{\text{RDY}}$ is an output pin that indicates when a device is ready for the next access.

26.2.1.6 JTAG Compliancy (JCOMP)

The JCOMP signal enables or disables the TAP controller. The TAP controller is enabled when JCOMP asserted, otherwise the TAP controller remains in reset.

26.2.1.7 Test Data Output (TDO)

The TDO pin transmits serial output for instructions and data. TDO is tri-stateable and is actively driven in the SHIFT-IR and SHIFT-DR controller states. TDO is updated on the falling edge of TCK and sampled by the development tool on the rising edge of TCK.

26.2.1.8 Test Clock Input (TCK)

The TCK pin is used to synchronize the test logic and control register access through the JTAG port.

26.2.1.9 Test Data Input (TDI)

The TDI pin receives serial test instruction and data. TDI is sampled on the rising edge of TCK.

26.2.1.10 Test Mode Select (TMS)

The TMS pin is used to sequence the IEEE® 1149.1-2001 TAP controller state machine. TMS is sampled on the rising edge of TCK.

26.3 Memory Map

The NDI block contains no memory mapped registers. Nexus registers are accessed by the development tool via the JTAG port using a register index and a client select value. The client select is controlled by loading the correct access instruction into the JTAG controller; refer to [Table 26-4](#). OnCE registers are accessed by loading the appropriate value in the RS[0:6] field of the OnCE command register (OCMD) via the JTAG port.

Table 26-2 shows the NDI registers by Client Source ID and Index values.

Table 26-2. NDI Registers

Client Source ID	Index	Register
e200z6 Control/Status Registers¹		
0b0000	2	e200z6 Development Control1 (NZ6C3_DC1)
0b0000	3	e200z6 Development Control2 (NZ6C3_DC2)
0b0000	4	e200z6 Development Status (NZ6C3_DS)
0b0000	6	e200z6 User Base Address (NZ6C3_UBA)
0b0000	7	Read/Write Access Control/Status (NZ6C3_RWCS)
0b0000	9	Read/Write Access Address (NZ6C3_RWA)
0b0000	10	Read/Write Access Data (NZ6C3_RWD)
0b0000	11	e200z6 Watchpoint Trigger (NZ6C3_WT)
0b0000	13	e200z6 Data Trace Control (NZ6C3_DTC)
0b0000	14	e200z6 Data Trace Start Address 0 (NZ6C3_DTSA1)
0b0000	15	e200z6 Data Trace Start Address 1 (NZ6C3_DTSA2)
0b0000	18	e200z6 Data Trace End Address 0 (NZ6C3_DTEA1)
0b0000	19	e200z6 Data Trace End Address 1 (NZ6C3_DTEA2)
eDMA_1 Control/Status Registers		
0b0001	2	eDMA 1 Development Control (NXDM_DC)
0b0001	11	eDMA 1 Watchpoint Trigger (NXDM_WT)
0b0001	13	eDMA 1 Data Trace Control (NXDM_DTC)
0b0001	14	eDMA 1 Data Trace Start Address 0 (NXDM_DTSA1)
0b0001	15	eDMA 1 Data Trace Start Address 1 (NXDM_DTSA2)
0b0001	18	eDMA 1 Data Trace End Address 0 (NXDM_DTEA1)
0b0001	19	eDMA 1 Data Trace End Address 1 (NXDM_DTEA2)
0b0001	22	eDMA 1 Breakpoint/Watchpoint Control 1 (NXDM_BWC1)
0b0001	23	eDMA 1 Breakpoint/Watchpoint Control 2 (NXDM_BWC2)
0b0001	30	eDMA 1 Breakpoint/Watchpoint Address 1 (NXDM_BWA1)
0b0001	31	eDMA 1 Breakpoint/Watchpoint Address 2 (NXDM_BWA2)
FlexRay Control/Status Registers		
0b0110	2	FlexRay Development Control (FR_AHB_DC)
0b0110	11	FlexRay Watchpoint Trigger (FR_AHB_WT)
0b0110	13	FlexRay Data Trace Control (FR_AHB_DTC)

Table 26-2. NDI Registers (continued)

Client Source ID	Index	Register
0b0110	14	FlexRay Data Trace Start Address 0 (FR_AHB_DTSA1)
0b0110	15	FlexRay Data Trace Start Address 1 (FR_AHB_DTSA2)
0b0110	18	FlexRay Data Trace End Address 0 (FR_AHB_DTEA1)
0b0110	19	FlexRay Data Trace End Address 1 (FR_AHB_DTEA2)
0b0110	22	FlexRay Breakpoint/Watchpoint Control 1 (FR_AHB_BWC1)
0b0110	23	FlexRay Breakpoint/Watchpoint Control 2 (FR_AHB_BWC2)
0b0110	30	FlexRay Breakpoint/Watchpoint Address 1 (FR_AHB_BWA1)
0b0110	31	FlexRay Breakpoint/Watchpoint Address 2 (FR_AHB_BWA2)
eTPU 1 Control/Status Registers		
0b0010	0	Device ID (DID)
0b0010	2	eTPU1 Development Control (NDI_eTPU1_DC)
0b0010	4	eTPU1 Development Status (NSED1_eTPU1_DS)
0b0010	6	eTPU1 User Base Address (NSED1_UBA)
0b0000	7	Read/Write Access Control/Status (RWCS)
0b0000	9	Read/Write Access Address (RWA)
0b0000	10	Read/Write Access Data (RWD)
0b0010	11	eTPU1 Watchpoint Trigger (NDI_eTPU1_WT)
0b0010	13	eTPU1 Data Trace Control (NDI_eTPU1_DTC)
0b0010	22	eTPU1 Breakpoint/Watchpoint Control 1 (NSED1_eTPU1_BWC1)
0b0010	23	eTPU1 Breakpoint/Watchpoint Control 2 (NSED1_eTPU1_BWC2)
0b0010	24	eTPU1 Breakpoint/Watchpoint Control 3 (NSED1_eTPU1_BWC3)
0b0010	30	eTPU1 Breakpoint/Watchpoint Address 1 (NSED1_eTPU1_BWA1)
0b0010	31	eTPU1 Breakpoint/Watchpoint Address 2 (NSED1_eTPU1_BWA2)
0b0010	38	eTPU1 Breakpoint/Watchpoint Data 1 (NSED1_eTPU1_BWD1)
0b0010	39	eTPU1 Breakpoint/Watchpoint Data 1 (NSED1_eTPU1_BWD2)
0b0010	64	eTPU1 Program Trace Channel Enable (NDI_eTPU1_PTCE)
0b0010	69	eTPU1 Microinstruction Debug Register (NSED1_eTPU1_INST)
0b0010	70	eTPU1 Microprogram Counter Debug Register (NSED1_eTPU1_MPC)
0b0010	71	eTPU1 Channel Flag Status Register (NSED1_eTPU1_CFSR)

¹ These e200z6 registers are described in the *e200z6 PowerPC™ Core Reference Manual*.

Table 26-3 shows the OnCE register addressing.

Table 26-3. e200z6 OnCE Register Addressing

OCMD, RS[0:6]	Register Selected
000 0000 - 000 0001	Reserved
000 0010	JTAG DID (read-only)
000 0011 - 000 1111	Reserved
001 0000	CPU Scan Register (CPUSCR)
001 0001	No Register Selected (Bypass)
001 0010	OnCE Control Register (OCR)
001 0011 - 001 1111	Reserved
010 0000	Instruction Address Compare 1 (IAC1)
010 0001	Instruction Address Compare 2 (IAC2)
010 0010	Instruction Address Compare 3 (IAC3)
010 0011	Instruction Address Compare 4 (IAC4)
010 0100	Data Address Compare 1 (DAC1)
010 0101	Data Address Compare 2 (DAC2)
010 0110 - 010 1011	Reserved
010 1100	Debug Counter Register (DBCNT)
010 1101	Debug PCFIFO (PCFIFO) (read-only)
010 1110 - 010 1111	Reserved
011 0000	Debug Status Register (DBSR)
011 0001	Debug Control Register 0 (DBCR0)
011 0010	Debug Control Register 1 (DBCR1)
011 0011	Debug Control Register 2 (DBCR2)
011 0100	Debug Control Register 3 (DBCR3)
011 0101 - 101 1111	Reserved (do not access)
111 0000 - 111 1011	General Purpose Register Selects [0:11]
111 1100	Nexus3-Access
111 1101	LSRL Select
111 1110	Enable_OnCE (and Bypass)
111 1111	Bypass

26.4 NDI Functional Description

26.4.1 Enabling Nexus Clients for TAP Access

Once the NDI is out of the reset state, the loading of a specific instruction in the JTAG controller (JTAGC) block is required to grant the NDI ownership of the TAP. Each Nexus client has its own JTAGC instruction opcode for ownership of the TAP, granting that client the means to read/write its registers. The JTAGC instruction opcode for each Nexus client is shown in [Table 26-4](#). Once the JTAGC opcode for a client has been loaded, the client is enabled by loading its NEXUS-ENABLE instruction. The NEXUS-ENABLE instruction opcode for each Nexus client is listed in [Table 26-5](#). Opcodes for all other instructions supported by Nexus clients can be found in the relevant sections of this chapter.

Table 26-4. JTAG Client Select Instructions

JTAGC Instruction	Opcode	Description
ACCESS_AUX_TAP_NPC	10000	Enables access to the NPC TAP controller
ACCESS_AUX_TAP_ONCE	10001	Enables access to the e200z6 OnCE TAP controller
ACCESS_AUX_TAP_eTPU	10010	Enables access to the eTPU Nexus TAP controller
ACCESS_AUX_TAP_DMA	10011	Enables access to the eDMA Nexus TAP controller
ACCESS_AUX_TAP_NXFR	10100	Enables access to the FlexRay Nexus TAP controller

Table 26-5. Nexus Client JTAG Instructions

Instruction	Description	Opcode
NPC JTAG Instruction Opcodes		
NEXUS_ENABLE	Opcode for NPC Nexus Enable instruction (4-bits)	0x0
BYPASS	Opcode for the NPC BYPASS instruction (4-bits)	0xF
e200z6 OnCE JTAG Instruction Opcodes ¹		
NEXUS3_ACCESS	Opcode for e200z6 OnCE Nexus Enable instruction (10-bits)	0x7C
BYPASS	Opcode for the e200z6 OnCE BYPASS instruction (10-bits)	0x7F
NSEDI JTAG Instruction Opcodes		
NEXUS_ENABLE	Opcode for NSEDI Nexus Enable instruction (4-bits)	0x0
BYPASS	Opcode for the NSEDI BYPASS instruction (4-bits)	0xF
eDMA Nexus JTAG Instruction Opcodes		
NEXUS_ACCESS	Opcode for eDMA Nexus Enable instruction (4-bits)	0x0
BYPASS	Opcode for the eDMA Nexus BYPASS instruction (4-bits)	0xF
FlexRay Nexus JTAG Instruction Opcodes		
NEXUS_ACCESS	Opcode for FlexRay Nexus Enable instruction (4-bits)	0x0
BYPASS	Opcode for the FlexRay Nexus BYPASS instruction (4-bits)	0xF

¹ Refer to the e200z6 Reference Manual for a complete list of available OnCE instructions.

26.4.2 Configuring the NDI for Nexus Messaging

The NDI is placed in disabled mode upon exit of power-on reset. If message transmission via the auxiliary port is desired, a write to the port configuration register (PCR) located in the NPC is then required to enable the NDI and select the mode of operation. Asserting MCKO_EN in the PCR places the NDI in enabled mode and enables MCKO. The frequency of MCKO is selected by writing the MCKO_DIV field. Asserting or negating the FPM bit selects full-port or reduced-port mode, respectively. When writing to the PCR, the PCR lsb must be written to a logic 0. Setting the lsb of the PCR enables factory debug mode and prevents the transmission of Nexus messages.

Figure 26-6 describes the NDI configuration options.

Table 26-6. NDI Configuration Options

JCOMP Asserted	MCKO_EN bit of the Port Configuration Register	FPM bit of the Port Configuration Register	Configuration
No	X	X	Reset
Yes	0	X	Disabled
Yes	1	1	Full-Port Mode
Yes	1	0	Reduced-Port Mode

26.4.3 Programmable MCKO Frequency

MCKO is an output clock to the development tools used for the timing of $\overline{\text{MSEO}}$ and MDO pin functions. MCKO is derived from the system clock, and its frequency is determined by the value of the MCKO_DIV field in the port configuration register (PCR) located in the NPC. Possible operating frequencies include one-half, one-quarter, and one-eighth system clock speed.

Figure 26-7 shows the MCKO_DIV encodings. In this table, SYS_CLK represents the system clock frequency. The default value selected if a reserved encoding is programmed is SYS_CLK/2.

Table 26-7. MCKO_DIV Values

MCKO_DIV[2:0]	MCKO Frequency
0b000	SYS_CLK
0b001	SYS_CLK/2
0b010	Reserved
0b011	SYS_CLK/4
0b100	Reserved
0b101	Reserved

Table 26-7. MCKO_DIV Values

MCKO_DIV[2:0]	MCKO Frequency
0b110	Reserved
0b111	SYS_CLK/8

26.4.4 Nexus Messaging

Most of the messages transmitted by the NDI include a SRC field. This field is used to identify which source generated the message. Figure 26-8 shows the values used for the SRC field by the different clients on the device. These 4-bit values are specific to the device. The same values are used for the client select values written to the client select control register.

Table 26-8. SRC Packet Encodings

SRC[3:0]	Client
0b0000	e200z6
0b0001	eDMA
0b0010	eTPU1 (ENGINE1_SRC)
0b0011	eTPU2 (ENGINE2_SRC)
0b0100	eTPU CDC ¹ (CDC_SRC)
0b0101	FlexRay
0b1111	Reserved

¹ CDC is the eTPU Coherent Dual-Parameter Controller. Refer to the *eTPU Reference Manual* for more information.

26.4.5 System Clock Locked Indication

Following a power-on reset, the lsb of the auxiliary output port pins (MDO0) can be monitored to provide the lock status of the system clock. MDO0 is driven to a logic 1 until the system clock achieves lock after exiting power-on reset. Once the system clock is locked, MDO0 is negated and tools may begin Nexus configuration. Loss of lock conditions that occur subsequent to the exit of power-on reset and the initial lock of the system clock do not cause a Nexus reset, and therefore do not result in MDO0 driven high.

26.5 Nexus Port Controller (NPC)

The Nexus port controller (NPC) is that part of the NDI that controls access and arbitration of the device's internal Nexus modules. The NPC contains the port configuration register (PCR) and the device identification register (DID). The contents of the NPC DID are the same as the JTAGC device identification register.

26.5.1 Overview

The device incorporates multiple modules that require development support. Each of these modules implements a development interface based on the IEEE-ISTO 5001-2001 standard and must share the input and output ports that interface with the development tool. The NPC controls the usage of these ports in a manner that allows the individual modules to share the ports, while appearing to the development tool as a single module.

26.5.2 Features

The NPC performs the following functions:

- Controls arbitration for ownership of the Nexus auxiliary output port
- Nexus device identification register and messaging
- Generates MCKO enable and frequency division control signals
- Controls sharing of \overline{EVTO}
- Control of the device-wide debug mode
- Generates asynchronous reset signal for Nexus modules based on JCOMP input, censorship status, and power-on reset status
- System clock locked status indication via MDO0 during Nexus reset
- Provides Nexus support for censorship mode

26.6 Memory Map/Register Definition

This section provides a detailed description of the NPC registers accessible to the end user. Individual bit-level descriptions and reset states of the registers are included.

26.6.1 Memory Map

Table 26-9 shows the NPC registers by index values. The registers are not memory-mapped and can only be accessed via the TAP. The NPC does not implement the client select control register because the value does not matter when accessing the registers. Note that the bypass register (refer to Section 26.6.2.1, “Bypass Register”) and instruction register (refer to Section 26.6.2.2, “Instruction Register”) have no index values. These registers are not accessed in the same manner as Nexus client registers.

Table 26-9. NPC Memory Map

Index	Register Name	Register Description	Size (bits)
0	DID	Device ID register	32
127	PCR	Port configuration register	32

26.6.2 Register Descriptions

This section consists of NPC register descriptions. Additional information regarding references to the TAP controller state may be found in Section 25.4.3, “TAP Controller State Machine.”

26.6.2.1 Bypass Register

The bypass register is a single-bit shift register path selected for serial data transfer between TDI and TDO when the BYPASS instruction or any unimplemented instructions are active. After entry into the Capture-DR state, the single-bit shift register is set to a logic 0. Therefore, the first bit shifted out after selecting the bypass register is always a logic 0.

26.6.2.2 Instruction Register

The NPC uses a 4-bit instruction register as shown in Figure 26-2. The instruction register is accessed via the SELECT_IR_SCAN path of the tap controller state machine, and allows instructions to be loaded into the module to enable the NPC for register access (NEXUS_ENABLE) or select the bypass register as the shift path from TDI to TDO (BYPASS or unimplemented instructions).

Instructions are shifted in through TDI while the TAP controller is in the Shift-IR state, and latched on the falling edge of TCK in the Update-IR state. The latched instruction value can only be changed in the Update-IR and test-logic-reset TAP controller states. Synchronous entry into the test-logic-reset state results in synchronous loading of the BYPASS instruction. Asynchronous entry into the test-logic-reset state results in asynchronous loading of the BYPASS instruction. During the Capture-IR TAP controller state, the instruction register is loaded with the value of the previously executed instruction, making this value the register's read value when the TAP controller is sequenced into the Shift-IR state.

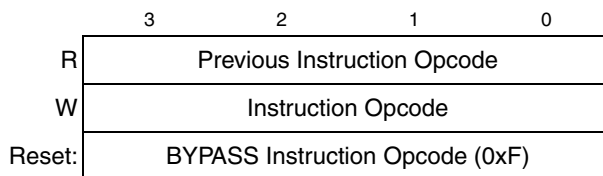


Figure 26-2. 4-Bit Instruction Register

26.6.2.3 Nexus Device ID Register (DID)

The NPC device identification register, shown in Figure 26-3, allows the part revision number, design center, part identification number, and manufacturer identity code of the part to be determined through the auxiliary output port.

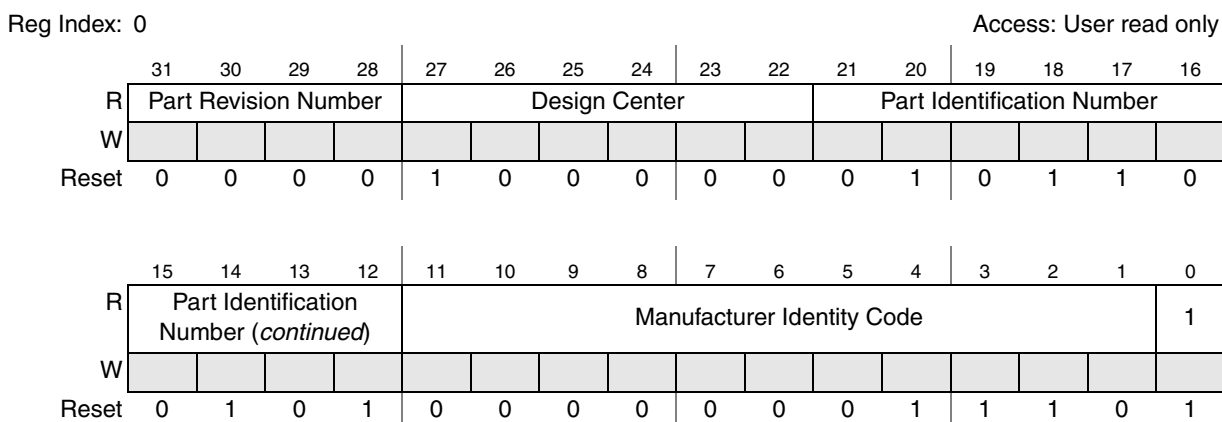


Figure 26-3. Nexus Device ID Register (DID)

Table 26-10. DID Register Field Descriptions

Field	Description
31–28 PRN	Part revision number. Contains the revision number of the part. This field changes with each revision of the device or module.
27–22 DC	Design center. Indicates the Freescale design center. This value is 0x20.
21–12 PIN	Part identification number. Contains the part number of the device. The PIN for the MPC5567 is 0x165.
11–1 MIC	Manufacturer identity code. Contains the reduced Joint Electron Device Engineering Council (JEDEC) ID for Freescale, 0xE.
0	Fixed per JTAG 1149.1 Always set to 1.

26.6.2.4 Port Configuration Register (PCR)

The PCR, shown in Figure 26-4, is used to select the NPC mode of operation, enable MCKO and select the MCKO frequency, and enable or disable MCKO gating. This register should be configured as soon as the NPC is enabled.

NOTE

The mode (MCKO_GT) or clock division (MCKO_DIV) bits must not be modified after MCKO has been enabled. Changing the mode or clock division while MCKO is enabled can produce unpredictable results.

Reg Index: 127

Access: User read/write

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	FPM	MCKO_GT	MCKO_EN	MCKO_DIV			0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																PSTAT
W																_EN
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 26-4. Port Configuration Register (PCR)

Table 26-11. PCR Field Descriptions

Field	Description																		
31 FPM	Full port mode. Determines if the auxiliary output port uses the full MDO port or a reduced MDO port to transmit messages. 0 The subset of MDO[3:0] pins are used to transmit messages. 1 All MDO[11:0] pins are used to transmit messages. Section 6.3.1.44, “Pad Configuration Register 75 - 82 (SIU_PCR75 - SIU_PCR82),” shows how GPIO is enabled or disabled by the FPM setting.																		
30 MCKO_GT	MCKO clock gating control. Enables or disables MCKO clock gating. If clock gating is enabled, the MCKO clock is gated when the NPC is in enabled mode but not actively transmitting messages on the auxiliary output port. When clock gating is disabled, MCKO is allowed to run even if no auxiliary output port messages are being transmitted. 0 MCKO gating is disabled. 1 MCKO gating is enabled.																		
29 MCKO_EN	MCKO enable. Enables the MCKO clock. When enabled, the frequency of MCKO is determined by the MCKO_DIV field. 0 MCKO clock is driven to zero. 1 MCKO clock is enabled.																		
28–26 MCKO_DIV [2:0]	MCKO division factor. Determines the frequency of MCKO relative to the system clock frequency when MCKO_EN is asserted. The table below shows the meaning of MCKO_DIV values. In this table, SYS_CLK represents the system clock frequency. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>MCKO_DIV[2:0]</th> <th>MCKO Frequency</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>SYS_CLK</td> </tr> <tr> <td>1</td> <td>SYS_CLK/2</td> </tr> <tr> <td>2</td> <td>Reserved</td> </tr> <tr> <td>3</td> <td>SYS_CLK/4</td> </tr> <tr> <td>4</td> <td>Reserved</td> </tr> <tr> <td>5</td> <td>Reserved</td> </tr> <tr> <td>6</td> <td>Reserved</td> </tr> <tr> <td>7</td> <td>SYS_CLK/8</td> </tr> </tbody> </table>	MCKO_DIV[2:0]	MCKO Frequency	0	SYS_CLK	1	SYS_CLK/2	2	Reserved	3	SYS_CLK/4	4	Reserved	5	Reserved	6	Reserved	7	SYS_CLK/8
MCKO_DIV[2:0]	MCKO Frequency																		
0	SYS_CLK																		
1	SYS_CLK/2																		
2	Reserved																		
3	SYS_CLK/4																		
4	Reserved																		
5	Reserved																		
6	Reserved																		
7	SYS_CLK/8																		
25–1	Reserved.																		
0 PSTAT_EN	Processor status mode enable. Enables processor status (PSTAT) mode. In PSTAT mode, all auxiliary output port MDO pins are used to transmit processor status information, and Nexus messaging is unavailable. 0 PSTAT mode disabled 1 PSTAT mode enabled Note: PSTAT mode is intended for factory processor debug only. The PSTAT_EN bit should be written to disable PSTAT mode by the customer. No Nexus messages are transmitted under any circumstances when PSTAT mode is enabled																		

26.7 NPC Functional Description

26.7.1 NPC Reset Configuration

The NPC is placed in disabled mode upon exit of reset. If message transmission via the auxiliary port is desired, a write to the PCR is then required to enable the NPC and select the mode of operation. Asserting

MCKO_EN places the NPC in enabled mode and enables MCKO. The frequency of MCKO is selected by writing the MCKO_DIV field. Asserting or negating the FPM bit selects full-port or reduced-port mode, respectively.

Table 26-12 describes the NPC reset configuration options.

Table 26-12. NPC Reset Configuration Options

JCOMP Asserted?	PCR[MCKO_EN]	PCR[FPM]	Configuration
No	X	X	Reset
Yes	0	X	Disabled
Yes	1	1	Full-Port Mode
Yes	1	0	Reduced-Port Mode

26.7.2 Auxiliary Output Port

The auxiliary output port is shared by each of the Nexus modules on the device. The NPC communicates with each of the individual modules and arbitrates for access to the port. Additional information about the auxiliary port is found in [Section 26.2, “External Signal Description.”](#)

26.7.2.1 Output Message Protocol

The protocol for transmitting messages via the auxiliary port is accomplished with the $\overline{\text{MSEO}}$ functions. The $\overline{\text{MSEO}}$ pins are used to signal the end of variable-length packets and the end of messages. They are not required to indicate the end of fixed-length packets. MDO and $\overline{\text{MSEO}}$ are sampled on the rising edge of MCKO.

[Figure 26-5](#) illustrates the state diagram for $\overline{\text{MSEO}}$ transfers. All transitions not included in the figure are reserved, and must not be used.

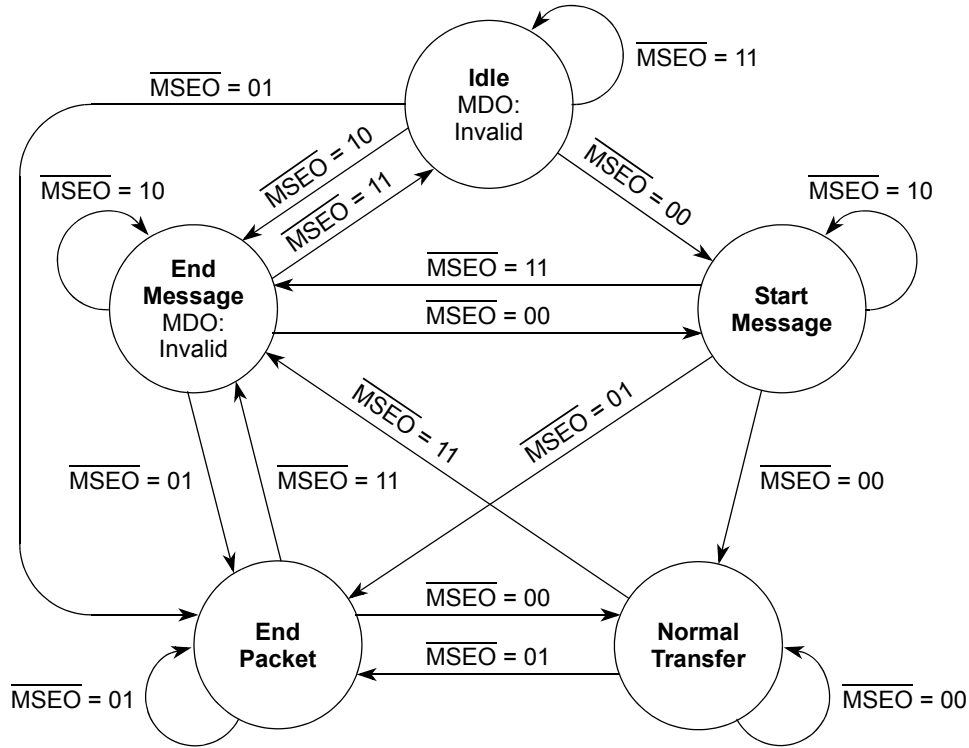


Figure 26-5. $\overline{\text{MSEO}}$ Transfers

26.7.2.2 Output Messages

In addition to sending out messages generated in other Nexus modules, the NPC can also output the device ID message contained in the device ID register on the MDO pins. The device ID message can also be sent out serially through TDO.

Table 26-13 describes the device ID message that the NPC can transmit on the auxiliary port. The TCODE is the first packet transmitted.

Table 26-13. NPC Output Messages

Message Name	Min. Packet Size (bits)	Max Packet Size (bits)	Packet Type	Packet Name	Packet Description
Device ID Message	6	6	Fixed	TCODE	Value = 1
	32	32	Fixed	ID	DID register contents

Figure 26-6 shows the various message formats that the pin interface formatter has to encounter.

Figure 26-6. Message Field Sizes

Message	TCODE	Field #1	Field #2	Field #3	Field #4	Field #5	Min. Size ¹ (bits)	Max Size ² (bits)
Device ID Message	1	Fixed = 32	NA	NA	NA	NA	38	38

¹ Minimum information size. The actual number of bits transmitted depends on the number of MDO pins

² Maximum information size. The actual number of bits transmitted depends on the number of MDO pins

The double edges in [Figure 26-6](#) indicate the starts and ends of messages. Fields without shaded areas between them are grouped into super-fields and can be transmitted together without end-of-packet indications between them.

26.7.2.2.1 Rules of Messages

The rules of messages include the following:

- A variable-sized field within a message must end on a port boundary. (Port boundaries depend on the number of MDO pins active with the current reset configuration.)
- A variable-sized field may start within a port boundary only when following a fixed-length field.
- Super-fields must end on a port boundary.
- When a variable-length field is sized such that it does not end on a port boundary, it is necessary to extend and zero fill the remaining bits after the highest order bit so that it can end on a port boundary.
- Multiple fixed-length packets may start and/or end on a single clock.
- When any packet follows a variable-length packet, it must start on a port boundary.
- The field containing the TCODE number is always transferred out first, followed by subsequent fields of information.
- Within a field, the lowest significant bits are shifted out first. [Figure 26-7](#) shows the transmission sequence of a message that is made up of a TCODE followed by three fields.

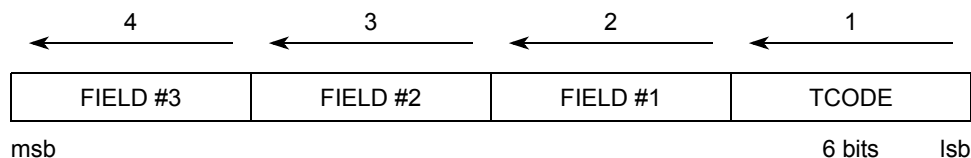


Figure 26-7. Transmission Sequence of Messages

26.7.2.3 IEEE® 1149.1-2001 (JTAG) TAP

The NPC uses the IEEE® 1149.1-2001 TAP for accessing registers. Each of the individual Nexus modules on the device implements a TAP controller for accessing its registers as well. TAP signals include TCK, TDI, TMS, and TDO. Detailed information about the TAP controller state machine may be found in [Section 25.4.3, “TAP Controller State Machine.”](#)

The IEEE® 1149.1-2001 specification may be ordered for further detail on electrical and pin protocol compliance requirements.

The NPC implements a Nexus controller state machine that transitions based on the state of the IEEE® 1149.1-2001 state machine shown in [Figure 26-5](#). The Nexus controller state machine is defined by the IEEE-ISTO 5001-2003 standard. It is shown in [Figure 26-9](#).

The instructions implemented by the NPC TAP controller are listed in [Table 26-14](#). The value of the NEXUS-ENABLE instruction is 0b0000. Each unimplemented instruction acts like the BYPASS instruction. The size of the NPC instruction register is 4-bits.

Table 26-14. Implemented Instructions

Instruction Name	Private/Public	Opcode	Description
NEXUS-ENABLE	Public	0x0	Activate Nexus controller state machine to read and write NPC registers.
BYPASS	Private	0xF	NPC BYPASS instruction. Also the value loaded into the NPC IR upon exit of reset.

Data is shifted between TDI and TDO starting with the least significant bit as illustrated in [Figure 26-8](#). This applies for the instruction register and all Nexus tool-mapped registers.



Figure 26-8. Shifting Data Into a Register

26.7.2.3.1 Enabling the NPC TAP Controller

Assertion of the power-on reset signal, entry into censored mode, or negating JCOMP resets the NPC TAP controller. When not in power-on reset or censored mode, the NPC TAP controller is enabled by asserting JCOMP and loading the ACCESS_AUX_TAP_NPC instruction in the JTAGC. Loading the NEXUS-ENABLE instruction then grants access to NPC registers.

26.7.2.3.2 Retrieving Device IDCODE

The Nexus TAP controller does not implement the IDCODE instruction. However, the device identification message can be output by the NPC through the auxiliary output port or shifted out serially by accessing the NPC device ID register through the TAP. If the NPC is enabled, transmission of the device identification message on the auxiliary output port MDO pins occurs immediately after a write to the PCR. Transmission of the device identification message serially through TDO is achieved by performing a read of the register contents as described in [Section 26.7.2.3.4, “Selecting a Nexus Client Register.”](#)

26.7.2.3.3 Loading NEXUS-ENABLE Instruction

Access to the NPC registers is enabled by loading the NPC NEXUS-ENABLE instruction when NPC has ownership of the TAP. This instruction is shifted in via the SELECT-IR-SCAN path and loaded in the UPDATE-IR state. At this point, the Nexus controller state machine, shown in [Figure 26-9](#), transitions to

the REG_SELECT state. The Nexus controller has three states: idle, register select, and data access. Table 26-15 illustrates the IEEE® 1149.1 sequence to load the NEXUS-ENABLE instruction.

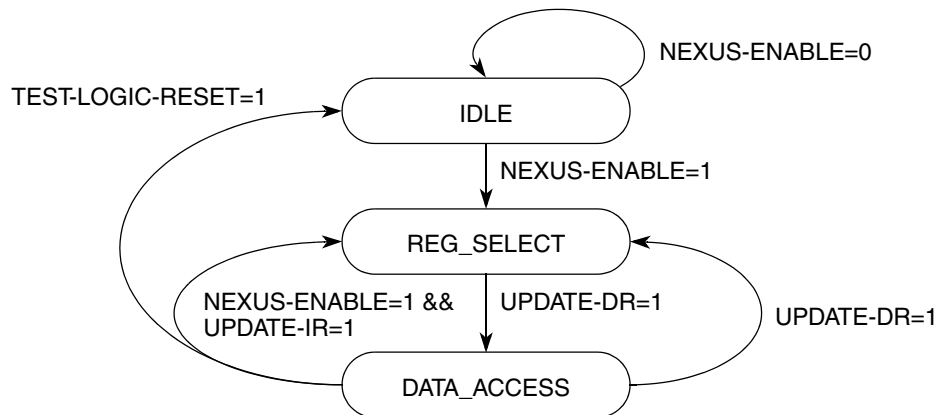


Figure 26-9. NEXUS Controller State Machine

Table 26-15. Loading NEXUS-ENABLE Instruction

Clock	TDI	TMS	IEEE® 1149.1 State	Nexus State	Description
0	—	0	RUN-TEST/IDLE	IDLE	IEEE 1149.1-2001 TAP controller in idle state
1	—	1	SELECT-DR-SCAN	IDLE	Transitional state
2	—	1	SELECT-IR-SCAN	IDLE	Transitional state
3	—	0	CAPTURE-IR	IDLE	Internal shifter loaded with current instruction
4	—	0	SHIFT-IR	IDLE	TDO becomes active, and the IEEE® 1149.1-2001 shifter is ready. Shift in all but the last bit of the NEXUS_ENABLE instruction.
5-7	0	0	3 TCKS in SHIFT-IR	IDLE	
8	0	1	EXIT1-IR	IDLE	Last bit of instruction shifted in
9	—	1	UPDATE-IR	IDLE	NEXUS-ENABLE loaded into instruction register
10	—	0	RUN-TEST/IDLE	REG_SELECT	Ready to be read/write Nexus registers

26.7.2.3.4 Selecting a Nexus Client Register

When the NEXUS-ENABLE instruction is decoded by the TAP controller, the input port allows development tool access to all Nexus registers. Each register has a 7-bit address index.

All register access is performed via the SELECT-DR-SCAN path of the IEEE® 1149.1–2001 TAP controller state machine. The Nexus controller defaults to the REG_SELECT state when enabled. Accessing a register requires two passes through the SELECT-DR-SCAN path: one pass to select the register and the second pass to read/write the register.

The first pass through the SELECT-DR-SCAN path is used to enter an 8-bit Nexus command consisting of a read/write control bit in the lsb followed by a 7-bit register address index, as illustrated in Figure 26-10. The read/write control bit is set to 1 for writes and 0 for reads.




Figure 26-10. IEEE® 1149.1 Controller Command Input

The second pass through the SELECT-DR-SCAN path is used to read or write the register data by shifting in the data (lsb first) during the SHIFT-DR state. When reading a register, the register value is loaded into the IEEE® 1149.1-2001 shifter during the CAPTURE-DR state. When writing a register, the value is loaded from the IEEE® 1149.1-2001 shifter to the register during the UPDATE-DR state. When reading a register, there is no requirement to shift out the entire register contents. Shifting may be terminated once the required number of bits have been acquired.

Table 26-16 illustrates a sequence that writes a 32-bit value to a register.

Table 26-16. Write to a 32-Bit Nexus Client Register

Clock	TMS	IEEE 1149.1 State	Nexus State	Description
0	0	RUN-TEST/IDLE	REG_SELECT	IEEE 1149.1-2001 TAP controller in idle state
1	1	SELECT-DR-SCAN	REG_SELECT	First pass through SELECT-DR-SCAN path
2	0	CAPTURE-DR	REG_SELECT	Internal shifter loaded with current value of controller command input.
3	0	SHIFT-DR	REG_SELECT	TDO becomes active, and write bit and 6 bits of register index shifted in.
7 TCKs				
11	1	EXIT1-DR	REG_SELECT	Last bit of register index shifted into TDI
12	1	UPDATE-DR	REG_SELECT	Controller decodes and selects register
13	1	SELECT-DR-SCAN	DATA_ACCESS	Second pass through SELECT-DR-SCAN path
14	0	CAPTURE-DR	DATA_ACCESS	Internal shifter loaded with current value of register
15	0	SHIFT-DR	DATA_ACCESS	TDO becomes active, and outputs current value of register while new value is shifted in through TDI
31 TCKs				
47	1	EXIT1-DR	DATA_ACCESS	Last bit of current value shifted out TDO. Last bit of new value shifted in TDI.
48	1	UPDATE-DR	DATA_ACCESS	Value written to register
49	0	RUN-TEST/IDLE	REG_SELECT	Controller returned to idle state. It could also return to SELECT-DR-SCAN to write another register.

26.7.2.4 Nexus Auxiliary Port Sharing

Each of the Nexus modules on the MCU implements a request/grant scheme to arbitrate for control of the Nexus auxiliary port when Nexus data is ready to be transmitted.

All modules arbitrating for the port are given fixed priority levels relative to each other. If multiple modules have the same request level, this priority level is used as a tie-breaker. To avoid monopolization of the port, the module given the highest priority level alternates following each grant. Immediately out of

reset the order of priority, from highest to lowest, is: NPC, NZ6C3, NSEDI, NXDM and NXFR. This arbitration mechanism is controlled internally and is not programmable by tools or the user.

26.7.2.5 Nexus JTAG Port Sharing

Each of the individual Nexus modules on the device implements a TAP controller for accessing its registers. When JCOMP is asserted, only the module whose ACCESS_AUX_TAP instruction is loaded has control of the TAP (See Section 25.4.4, “JTAGC Instructions”). This allows the interface to all of these individual TAP controllers to appear to be a single port from outside the device. Once a Nexus module has ownership of the TAP, that module acts like a single-bit shift register, or bypass register, if no register is selected as the shift path.

26.7.2.6 MCKO

MCKO is an output clock to the development tools used for the timing of $\overline{\text{MSEO}}$ and MDO pin functions. MCKO is derived from the system clock and its frequency is determined by the value of the MCKO_DIV[2:0] field in the PCR. Possible operating frequencies include one-half, one-quarter, and one-eighth system clock speed. MCKO is enabled by setting the MCKO_EN bit in the PCR.

The NPC also controls dynamic MCKO clock gating when in full- or reduced-port modes. The setting of the MCKO_GT bit inside the PCR determines whether or not MCKO gating control is enabled. The MCKO_GT bit resets to a logic 0. In this state gating of MCKO is disabled. To enable gating of MCKO, the MCKO_GT bit in the PCR is written to a logic 1. When MCKO gating is enabled, MCKO is driven to a logic 0 if the auxiliary port is enabled but not transmitting messages and there are no pending messages from Nexus clients.

26.7.2.7 $\overline{\text{EVTO}}$ Sharing

The NPC controls sharing of the $\overline{\text{EVTO}}$ output between all Nexus clients that produce an $\overline{\text{EVTO}}$ signal. $\overline{\text{EVTO}}$ is driven for one MCKO period whenever any module drives its $\overline{\text{EVTO}}$. When there is no active MCKO, such as in disabled mode, the NPC assumes an MCKO frequency of one-half system clock speed when driving $\overline{\text{EVTO}}$. $\overline{\text{EVTO}}$ sharing is active as long as the NPC is not in reset.

26.7.2.8 Nexus Reset Control

The JCOMP input that is used as the primary reset signal for the NPC is also used by the NPC to generate a single-bit reset signal for other Nexus modules. If JCOMP is negated, an internal reset signal is asserted, indicating that all Nexus modules should be held in reset. This internal reset signal is also asserted during a power-on reset, or if nex_disable is asserted (SIU_CCR[DISNEX]), indicating the device is in censored mode. This single bit reset signal functions much like the IEEE® 1149.1-2001 defined TRST signal and allows JCOMP reset information to be provided to the Nexus modules without each module having to sense the JCOMP signal directly or monitor the status of censored mode.

26.8 NPC Initialization/Application Information

26.8.1 Accessing NPC Tool-Mapped Registers

To initialize the TAP for NPC register accesses, the following sequence is required:

1. Enable the NPC TAP controller. This is achieved by asserting JCOMP and loading the ACCESS_AUX_TAP_NPC instruction in the JTAGC.
2. Load the TAP controller with the NEXUS-ENABLE instruction.

To write control data to NPC tool-mapped registers, the following sequence is required:

1. Write the 7-bit register index and set the write bit to select the register with a pass through the SELECT-DR-SCAN path in the TAP controller state machine.
2. Write the register value with a second pass through the SELECT-DR-SCAN path. Note that the prior value of this register is shifted out during the write.

To read status and control data from NPC tool-mapped registers, the following sequence is required:

1. Write the 7-bit register index and clear the write bit to select register with a pass through SELECT-DR-SCAN path in the TAP controller state machine.
2. Read the register value with a second pass through the SELECT-DR-SCAN path. Data shifted in is ignored.

See the IEEE®-ISTO 5001-2003 standard for more detail.

26.9 Nexus Single eTPU Development Interface (NSEDI)

The enhanced timing processor unit (eTPU) has its own Nexus class 3 interface, the Nexus single eTPU development interface (NSEDI). The single eTPU engine and a coherent dual parameter controller (CDC) appear as two separate Nexus clients. Refer to the *Enhanced Time Processor Unit Reference Manual* for more information about the NSEDI module.

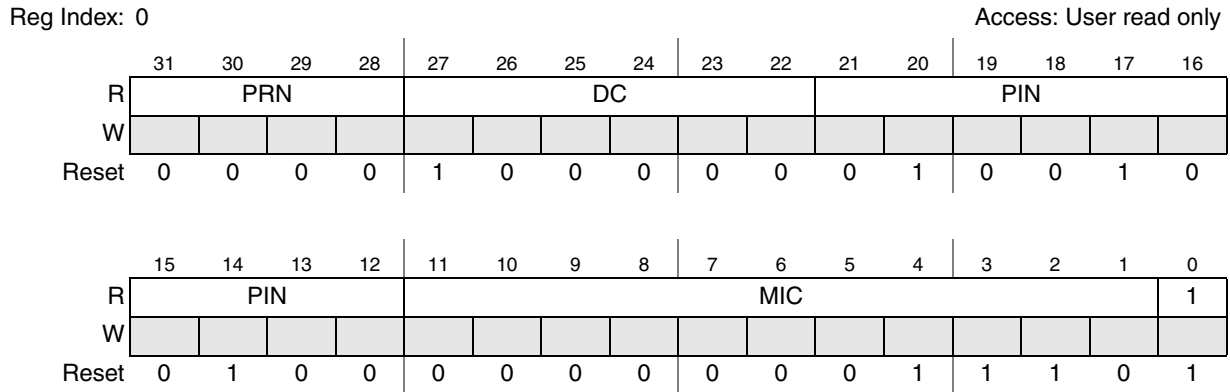


Figure 26-11. NSEDI Device ID Register (DID)

Table 26-17. NSEDI DID Register Field Descriptions

Field	Description
31–28 PRN	Part revision number. Contains the revision number of the part. This field changes with each revision of the device or module.
27–22 DC	Design center. Indicates the Freescale design center. This value is 0x20.
21–12 PIN	Part identification number. Contains the part number of the device. The PIN for the MPC5567 is 0x124. .
11–1 MIC	Manufacturer identity code. Contains the reduced Joint Electron Device Engineering Council (JEDEC) ID for Freescale, 0xE.
0	Fixed per JTAG 1149.1 1 Always set

26.10 e200z6 Class 3 Nexus Module (NZ6C3)

The NZ6C3 module provides real-time development capabilities for the device core in compliance with the IEEE®-ISTO Nexus 5001-2003 standard. This module provides development support capabilities without requiring the use of address and data pins for internal visibility.

26.10.1 Introduction

This section defines the auxiliary pin functions, transfer protocols and standard development features of the NZ6C3 module. The development features supported are Program trace, data trace, watchpoint messaging, ownership trace, and read/write access via the JTAG interface.

NOTE

Throughout this section references are made to the auxiliary port and its specific signals, such as MCKO, MSEO[0:1], MDO[11:0] and others. In actual use, the device NPC module arbitrates the access of the single auxiliary port. To simplify the description of the function of the NZ6C3 module, the interaction of the NPC is omitted and the behavior described as if the module has its own dedicated auxiliary port. The auxiliary port is fully described in [Section 26.2, “External Signal Description.”](#)

26.10.2 Block Diagram

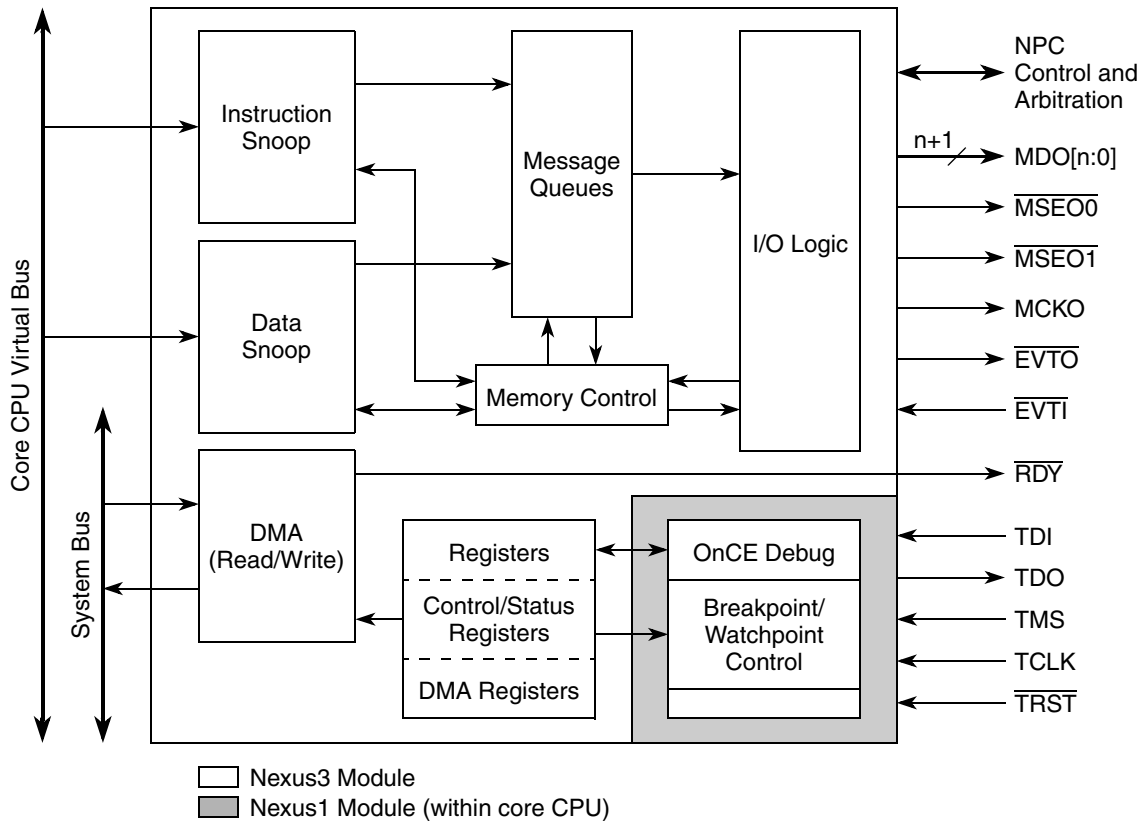


Figure 26-12. e200z6 Nexus3 Functional Block Diagram

26.10.3 Overview

[Table 26-18](#) contains a set of terms and definitions associated with the NZ6C3 module.

Table 26-18. Terms and Definitions

Term	Description
IEEE®-ISTO 5001	Consortium and standard for real-time embedded system design. World wide Web documentation at http://www.ieee-isto.org/Nexus5001
Auxiliary Port	Refers to Nexus auxiliary port. Used as auxiliary port to the IEEE® 1149.1 JTAG interface.
Branch Trace Messaging (BTM)	Visibility of addresses for taken branches and exceptions, and the number of sequential instructions executed between each taken branch.
Client	A functional block on an embedded processor which requires development visibility and controllability. Examples are a central processing unit (CPU) or an intelligent peripheral.
Data Read Message (DRM)	External visibility of data reads to memory-mapped resources.
Data Write Message (DWM)	External visibility of data writes to memory-mapped resources.
Data Trace Messaging (DTM)	External visibility of how data flows through the embedded system. This may include DRM and/or DWM.
JTAG Compliant	Device complying to IEEE® 1149.1 JTAG standard
JTAG IR & DR Sequence	JTAG instruction register (IR) scan to load an opcode value for selecting a development register. The JTAG IR corresponds to the OnCE command register (OCMD). The selected development register is then accessed via a JTAG data register (DR) scan.
Nexus1	The e200z6 (OnCE) debug module. This module integrated with each e200z6 processor provides all static (core halted) debug functionality. This module is compliant with Class1 of the IEEE®-ISTO 5001 standard.
Ownership Trace Message (OTM)	Visibility of process/function that is currently executing.
Public Messages	Messages on the auxiliary pins for accomplishing common visibility and controllability requirements
Standard	The phrase 'according to the standard' is used to indicate according to the IEEE®-ISTO 5001 standard.
Transfer Code (TCODE)	Message header that identifies the number and/or size of packets to be transferred, and how to interpret each of the packets.
Watchpoint	A data or instruction breakpoint which does not cause the processor to halt. Instead, a pin is used to signal that the condition occurred. A watchpoint message is also generated.

26.10.4 Features

The NZ6C3 module is compliant with Class 3 of the IEEE®-ISTO 5001-2003 standard. The following features are implemented:

- Program trace via branch trace messaging (BTM). Branch trace messaging displays program flow discontinuities (direct and indirect branches, exceptions, etc.), allowing the development tool to interpolate what transpires between the discontinuities. Thus static code may be traced.

- Data trace via data write messaging (DWM) and data read messaging (DRM). This provides the capability for the development tool to trace reads and/or writes to selected internal memory resources.
- Ownership trace via ownership trace messaging (OTM). OTM facilitates ownership trace by providing visibility of which process ID or operating system task is activated. An ownership trace message is transmitted when a new process/task is activated, allowing the development tool to trace ownership flow.
- Run-time access to embedded processor registers and memory map via the JTAG port. This allows for enhanced download/upload capabilities.
- Watchpoint messaging via the auxiliary pins.
- Watchpoint trigger enable of program and/or data trace messaging.
- Higher speed data input/output via the auxiliary port.
- Registers for program trace, data trace, ownership trace and watchpoint trigger.
- All features controllable and configurable via the JTAG port.

26.10.5 Enabling Nexus3 Operation

The Nexus module is enabled by loading a single instruction (`ACCESS_AUX_TAP_ONCE`, as shown in [Table 26-4](#)) into the JTAGC instruction register (IR), and then loading the corresponding OnCE OCMD register with the `NEXUS3_ACCESS` instruction (refer to [Table 26-5](#)). For the e200z6 Class 3 Nexus module, the OCMD value is `0b00_0111_1100`. Once enabled, the module will be ready to accept control input via the JTAG pins. See [Section 26.4.1, “Enabling Nexus Clients for TAP Access”](#) for more information.

The Nexus module is disabled when the JTAG state machine reaches the test-logic-reset state. This state can be reached by the assertion of the JCOMP pin or by cycling through the state machine using the TMS pin. The Nexus module will also be disabled if a power-on-reset (POR) event occurs. If the Nexus3 module is disabled, no trace output will be provided, and the module will disable (drive inactive) auxiliary port output pins MDO[n:0], MSEO[1:0], MCKO. Nexus registers will not be available for reads or writes.

26.10.6 TCODEs Supported by NZ6C3

The Nexus3 pins allow for flexible transfer operations via public messages. A TCODE defines the transfer format, the number and/or size of the packets to be transferred, and the purpose of each packet. The IEEE®-ISTO 5001-2003 standard defines a set of public messages. The NZ6C3 module supports the public TCODEs seen in [Table 26-19](#). Each message contains multiple packets transmitted in the order shown in the table.

Table 26-19. Public TCODEs Supported by NZ6C3

Message Name	Packet Size (bits)		Packet Name	Packet Type	Packet Description
	Min	Max			
Debug Status	6	6	TCODE	Fixed	TCODE number = 0 (0x00)
	4	4	SRC	Fixed	source processor identifier
	8	8	STATUS	Fixed	Debug status register (DS[31:24])
Ownership Trace Message	6	6	TCODE	Fixed	TCODE number = 2 (0x02)
	4	4	SRC	Fixed	source processor identifier
	32	32	PROCESS	Fixed	Task/Process ID tag
Program Trace - Direct Branch Message ¹	6	6	TCODE	Fixed	TCODE number = 3 (0x03)
	4	4	SRC	Fixed	source processor identifier
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
Program Trace - Indirect Branch Message ¹	6	6	TCODE	Fixed	TCODE number = 4 (0x04)
	4	4	SRC	Fixed	source processor identifier
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
	1	32	U-ADDR	Variable	unique part of target address for taken branches/exceptions
Data Trace - Data Write Message	6	6	TCODE	Fixed	TCODE number = 5 (0x05)
	4	4	SRC	Fixed	source processor identifier
	3	3	DSIZ	Fixed	data size (Refer to Table 26-23)
	1	32	U-ADDR	Variable	unique portion of the data write address
	1	64	DATA	Variable	data write values (see Section 26.11.13, "Data Trace," for details)
Data Trace - Data Read Message	6	6	TCODE	Fixed	TCODE number = 6 (0x06)
	4	4	SRC	Fixed	source processor identifier
	3	3	DSIZ	Fixed	data size (Refer to Table 26-23)
	1	32	U-ADDR	Variable	unique portion of the data read address
	1	64	DATA	Variable	data read values (see Section 26.11.13, "Data Trace," for details)
Error Message	6	6	TCODE	Fixed	TCODE number = 8 (0x08)
	4	4	SRC	Fixed	source processor identifier
	5	5	ECODE	Fixed	error code

Table 26-19. Public TCODEs Supported by NZ6C3 (continued)

Message Name	Packet Size (bits)		Packet Name	Packet Type	Packet Description
	Min	Max			
Program Trace - Direct Branch Message w/ Sync ¹	6	6	TCODE	Fixed	TCODE number = 11 (0x0B)
	4	4	SRC	Fixed	source processor identifier
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
	1	32	F-ADDR	Variable	full target address (leading zeros truncated)
Program Trace - Indirect Branch Message w/ Sync ¹	6	6	TCODE	Fixed	TCODE number = 12 (0x0C)
	4	4	SRC	Fixed	source processor identifier
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
	1	32	F-ADDR	Variable	full target address (leading zeros truncated)
Data Trace - Data Write Message w/ Sync	6	6	TCODE	Fixed	TCODE number = 13 (0x0D)
	4	4	SRC	Fixed	source processor identifier
	3	3	DSZ	Fixed	data size (Refer to Table 26-23)
	1	32	F-ADDR	Variable	full access address (leading zeros truncated)
	1	64	DATA	Variable	data write values (see Section 26.11.13, "Data Trace," for details)
Data Trace - Data Read Message w/ Sync	6	6	TCODE	Fixed	TCODE number = 14 (0x0E)
	4	4	SRC	Fixed	source processor identifier
	3	3	DSZ	Fixed	data size (Refer to Table 26-23)
	1	32	F-ADDR	Variable	full access address (leading zeros truncated)
	1	64	DATA	Variable	data read values (see Section 26.11.13, "Data Trace," for details)
Watchpoint Message	6	6	TCODE	Fixed	TCODE number = 15 (0x0F)
	4	4	SRC	Fixed	source processor identifier
	4	4	WPHIT	Fixed	# indicating watchpoint sources
Resource Full Message	6	6	TCODE	Fixed	TCODE number = 27 (0x1B)
	4	4	SRC	Fixed	source processor identifier
	4	4	RCODE	Fixed	resource code (Refer to RCODE values in Table 26-22) - indicates which resource is the cause of this message
	1	32	RDATA	Variable	branch / predicate instruction history (see Section 26.11.12.1, "Branch Trace Messaging (BTM)")

Table 26-19. Public TCODEs Supported by NZ6C3 (continued)

Message Name	Packet Size (bits)		Packet Name	Packet Type	Packet Description
	Min	Max			
Program Trace - Indirect Branch History Message	6	6	TCODE	Fixed	TCODE number = 28 (0x1C) (see footnote 1 below)
	4	4	SRC	Fixed	source processor identifier
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
	1	32	U-ADDR	Variable	unique part of target address for taken branches/exceptions
	1	32	HIST	Variable	branch / predicate instruction history (see Section 26.11.12.1, "Branch Trace Messaging (BTM)")
Program Trace - Indirect Branch History Message w/ Sync	6	6	TCODE	Fixed	TCODE number = 29 (0x1D) (see footnote 1 below)
	4	4	SRC	Fixed	source processor identifier
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
	1	32	F-ADDR	Variable	full target address (leading zero (0) truncated)
	1	32	HIST	Variable	branch / predicate instruction history (see Section 26.11.12.1, "Branch Trace Messaging (BTM)")
Program Trace - Program Correlation Message	6	6	TCODE	Fixed	TCODE number = 33 (0x21)
	4	4	SRC	Fixed	source processor identifier
	4	4	EVCODE	Fixed	event correlated w/ program flow (Refer to Table 26-22)
	1	8	I-CNT	Variable	# sequential instructions executed since last taken branch
	1	32	HIST	Variable	branch / predicate instruction history (see Section 26.11.12.1, "Branch Trace Messaging (BTM)")

¹ The user can select between the two types of program trace. The advantages for each are discussed in [Section 26.11.12.1, "Branch Trace Messaging \(BTM\)"](#). If the branch history method is selected, the shaded TCODES above will not be messaged out.

[Table 26-20](#) shows the error code encodings used when reporting an error via the Nexus3 Error Message.

Table 26-20. Error Code Encoding (TCODE = 8)

Error Code (ECODE)	Description
00000	Ownership trace overrun
00001	Program trace overrun
00010	Data trace overrun
00011	Read/write access error
00101	Invalid access opcode (Nexus register unimplemented)

Table 26-20. Error Code Encoding (TCODE = 8) (continued)

Error Code (ECODE)	Description
00110	Watchpoint overrun
00111	(Program trace or data trace) and ownership trace overrun
01000	(Program trace or data trace or ownership trace) and watchpoint overrun
01001–0111	Reserved
11000	BTM lost due to collision w/ higher priority message
11001–11111	Reserved

Table 26-21 shows the encodings used for resource codes for certain messages.

Table 26-21. RCODE values (TCODE = 27)

Resource Code (RCODE)	Description	Resource Data (RDATA)
0000	Program Trace Instruction Counter overflow (reached 255 and was reset)	0xFF
0001	Program Trace, Branch / Predicate Instruction History. This type of packet is terminated by a stop bit set to 1 after the last history bit.	Branch History. This type of packet is terminated by a stop bit set to a 1 after the last history bit.

Table 26-22 shows the event code encodings used for certain messages.

Table 26-22. Event Code Encoding (TCODE = 33)

Event Code	Description
0000	Entry into Debug Mode
0001	Entry into Low Power Mode (CPU only) ¹
0010–0011	Reserved for future functionality
0100	Disabling Program Trace
0101–1101	Reserved for future functionality
1110	Entry into a VLE page from a non-VLE page
1111	Entry into a non-VLE page from a VLE page

¹ The device enters Low Power Mode when the Nexus stall mode is enabled (NZ6C3_DC1[OVC]=0b011) and a trace message is in danger of overflowing the Nexus queue.

Table 26-23 shows the data trace size encodings used for certain messages.

Table 26-23. Data Trace Size Encodings (TCODE = 5, 6, 13, 14)

DTM Size Encoding	Transfer Size
000	Byte
001	Half-word (2 bytes)
010	Word (4 bytes)
011	Double-word (8 bytes)
100	String (3 bytes)
101–111	Reserved

26.11 NZ6C3 Memory Map/Register Definition

This section describes the NZ6C3 programmer’s model. NZ6C3 registers are accessed using the JTAG/OnCE port in compliance with IEEE® 1149.1. See [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE”](#) for details on NZ6C3 register access.

NOTE

NZ6C3 registers and output signals are numbered using bit 0 as the least significant bit. This bit ordering is consistent with the ordering defined by the IEEE®-ISTO 5001 standard.

Table 26-24 details the register map for the NZ6C3 module.

Table 26-24. NZ6C3 Memory Map

Access Opcode	Register Name	Register Description	Read Address	Write Address
0x1	CSC	Client select control ¹	0x02	—
See NPC	PCR	Port configuration register ¹	—	—
0x2	DC1	Development control 1	0x04	0x05
0x3	DC2	Development control 2	0x06	0x07
0x4	DS	Development status	0x08	—
0x7	RWCS	Read/write access control/status	0x0E	0x0F
0x9	RWA	Read/write access address	0x12	0x13
0xA	RWD	Read/write access data	0x14	0x15
0xB	WT	Watchpoint trigger	0x16	0x17
0xD	DTC	Data trace control	0x1A	0x1B
0xE	DTSA1	Data trace start address 1	0x1C	0x1D
0xF	DTSA2	Data trace start address 2	0x1E	0x1F
0x12	DTEA1	Data trace end address 1	0x24	0x25

Table 26-24. NZ6C3 Memory Map (continued)

Access Opcode	Register Name	Register Description	Read Address	Write Address
0x13	DTEA2	Data trace end address 2	0x26	0x27
0x14 -> 0x3F	—	Reserved	0x28->0x7E	0x29->0x7F

¹ The CSC and PCR registers are shown in this table as part of the Nexus programmer’s model. They are only present at the top level Nexus3 controller (NPC), not in the NZ6C3 module. The device’s CSC register is readable through Nexus3, but the PCR is shown for reference only.

26.11.1 Development Control Register 1, 2 (DC1, DC2)

The development control registers are used to control the basic development features of the NZ6C3 module. Development control register 1 is shown in Figure 26-13 and its fields are described in Table 26-25.

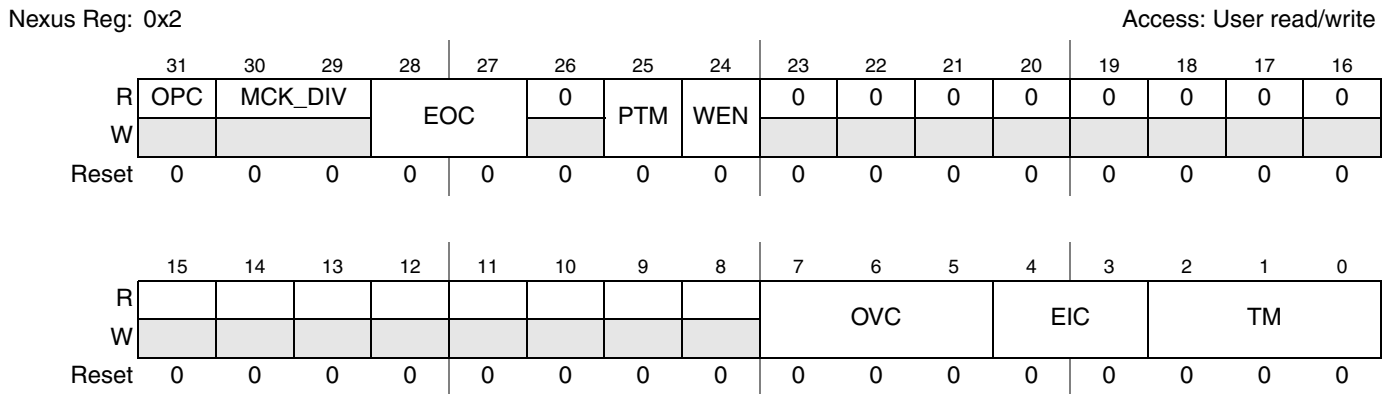


Figure 26-13. Development Control Register 1 (DC1)

Table 26-25. DC1 Field Descriptions

Field	Description
31 OPC ¹	Output port mode control. 0 Reduced-port mode configuration (4 MDO pins) 1 Full-port mode configuration (12 MDO pins)
30–29 MCK_DIV [1:0] ¹	MCKO clock divide ratio (see note below). 00 MCKO is 1x processor clock freq. 01 MCKO is 1/2x processor clock freq. 10 MCKO is 1/4x processor clock freq. 11 MCKO is 1/8x processor clock freq.
28–27 EOC[1:0]	$\overline{EVT0}$ control. 00 $\overline{EVT0}$ upon occurrence of watchpoints (configured in DC2) 01 $\overline{EVT0}$ upon entry into debug mode 10 $\overline{EVT0}$ upon timestamping event 11 Reserved
26	Reserved.

Table 26-25. DC1 Field Descriptions (continued)

Field	Description
25 PTM	Program trace method. 0 Program trace uses traditional branch messages 1 Program trace uses branch history messages
24 WEN	Watchpoint trace enable. 0 Watchpoint Messaging disabled 1 Watchpoint Messaging enabled
23–8	Reserved.
7–5 OVC[2:0]	Overrun control. 000 Generate overrun messages 001–010 Reserved 011 Delay processor for BTM / DTM / OTM overruns 1XX Reserved
4–3 EIC[1:0]	EVTI control. 00 EVTI is used for synchronization (program trace/ data trace) 01 EVTI is used for debug request 1X Reserved
2–0 TM[2:0]	Trace mode. Any or all of the TM bits may set, enabling one or more traces. 000 No trace 1XX Program trace enabled X1X Data trace enabled XX1 Ownership trace enabled

¹ The output port mode control bit (OPC) and MCKO divide bits (MCK_DIV) are shown for clarity. These functions are controlled globally by the NPC port control register (PCR). These bits are writable in the PCR but have no effect.

Development control register 2 is shown in [Figure 26-14](#) and its fields are described in [Table 26-26](#).

Nexus Reg: 0x3

Access: User read/write

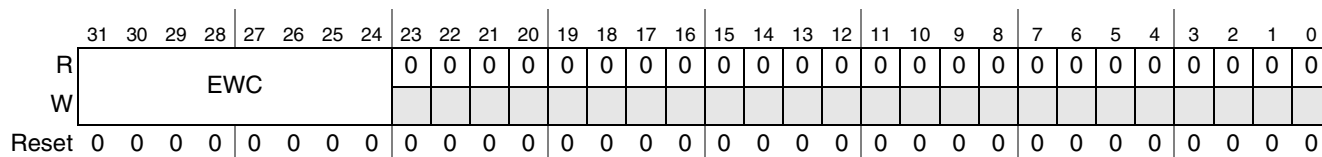


Figure 26-14. Development Control Register 2 (DC2)

Table 26-26. DC2 Field Descriptions

Field	Description
31–24 EWC[7:0]	<p>$\overline{EVT0}$ watchpoint configuration. Any or all of the bits in EWC may be set to configure the $\overline{EVT0}$ watchpoint.</p> <p>00000000 No Watchpoints trigger $\overline{EVT0}$</p> <p>1XXXXXXX Watchpoint #0 (IAC1 from Nexus1) triggers $\overline{EVT0}$</p> <p>X1XXXXXX Watchpoint #1 (IAC2 from Nexus1) triggers $\overline{EVT0}$</p> <p>XX1XXXXX Watchpoint #2 (IAC3 from Nexus1) triggers $\overline{EVT0}$</p> <p>XXX1XXXX Watchpoint #3 (IAC4 from Nexus1) triggers $\overline{EVT0}$</p> <p>XXXX1XXX Watchpoint #4 (DAC1 from Nexus1) triggers $\overline{EVT0}$</p> <p>XXXXX1XX Watchpoint #5 (DAC2 from Nexus1) triggers $\overline{EVT0}$</p> <p>XXXXXX1X Watchpoint #6 (DCNT1 from Nexus1) triggers $\overline{EVT0}$</p> <p>XXXXXXX1 Watchpoint #7 (DCNT2 from Nexus1) triggers $\overline{EVT0}$</p>
23–0	Reserved.

NOTE

The EOC bits in DC1 must be programmed to trigger $\overline{EVT0}$ on watchpoint occurrence for the EWC bits to have any effect.

26.11.2 Development Status Register (DS)

The development status register is used to report system debug status. When debug mode is entered or exited, or an e200z6-defined low power mode is entered, a debug status message is transmitted with DS[31:24]. The external tool can read this register at any time.

Nexus Reg: 0x4

Access: User read only

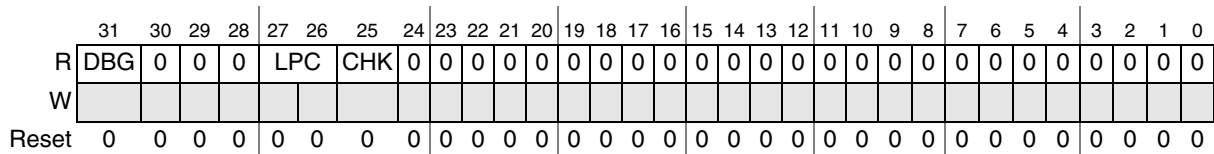


Figure 26-15. Development Status Register (DS)

Table 26-27. DS Field Descriptions

Field	Description
31–28 DBG	<p>e200z6 CPU debug mode status.</p> <p>0 CPU not in debug mode</p> <p>1 CPU in debug mode</p>
27–26 LPC[1:0]	<p>e200z6 CPU low power mode status.</p> <p>00 Normal (run) mode</p> <p>01 CPU in halted state</p> <p>10 CPU in stopped state</p> <p>11 Reserved</p>

Table 26-27. DS Field Descriptions (continued)

Field	Description
25 CHK	e200z6 CPU checkstop status. 0 CPU not in checkstop state 1 CPU in checkstop state
24–0	Reserved.

26.11.3 Read/Write Access Control/Status (RWCS)

The read write access control/status register provides control for read/write access. Read/write access provides DMA-like access to memory-mapped resources on the system bus either while the processor is halted, or during runtime. The RWCS register also provides read/write access status information as shown in [Table 26-29](#).

Nexus Reg: 0x7

Access: User read/write

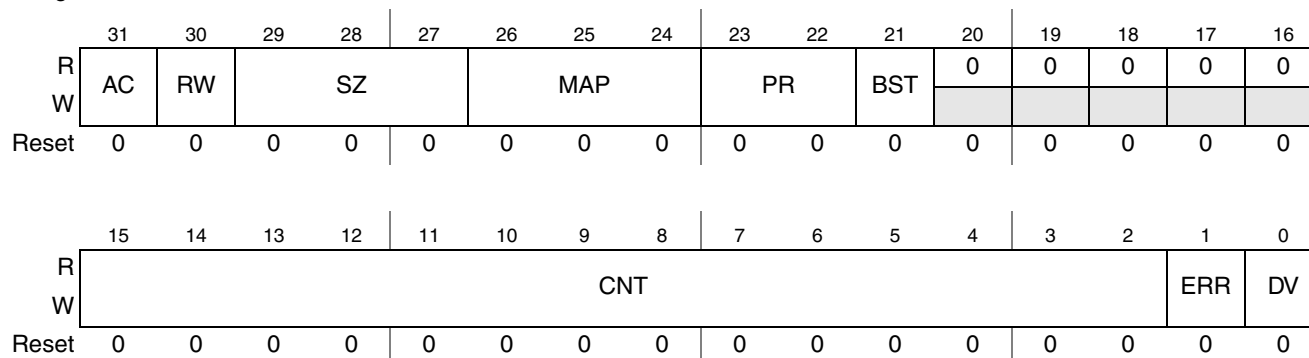


Figure 26-16. Read/Write Access Control/Status Register (RWCS)

Table 26-28. RWCS Field Description

Field	Description
31 AC	Access control. 0 End access 1 Start access
30 RW	Read/write select. 0 Read access 1 Write access
29–27 SZ[2:0]	Word size. 000 8-bit (byte) 001 6-bit (half-word) 010 32-bit (word) 011 64-bit (double-word - only in burst mode) 100–111 Reserved (default to word)
26–24 MAP[2:0]	MAP select. 000 Primary memory map 001-111 Reserved

Table 26-28. RWCS Field Description (continued)

Field	Description
23–22 PR[1:0]	Read/write access priority. 00 Lowest access priority 01 Reserved (default to lowest priority) 10 Reserved (default to lowest priority) 11 Highest access priority
21 BST	Burst control. 0 Module accesses are single bus cycle at a time. 1 Module accesses are performed as burst operation.
20–16	Reserved.
15–2 CNT[13:0]	Access control count. Number of accesses of word size SZ
1 ERR	Read/write access error. See Table 26-29 .
0 DV	Read/write access data valid. See Table 26-29 .

[Table 26-29](#) details the status bit encodings.

Table 26-29. Read/Write Access Status Bit Encoding

Read Action	Write Action	ERR	DV
Read access has not completed	Write access completed without error	0	0
Read access error has occurred	Write access error has occurred	1	0
Read access completed without error	Write access has not completed	0	1
Not allowed	Not allowed	1	1

26.11.4 Read/Write Access Address (RWA)

The read/write access address register provides the system bus address to be accessed when initiating a read or a write access.

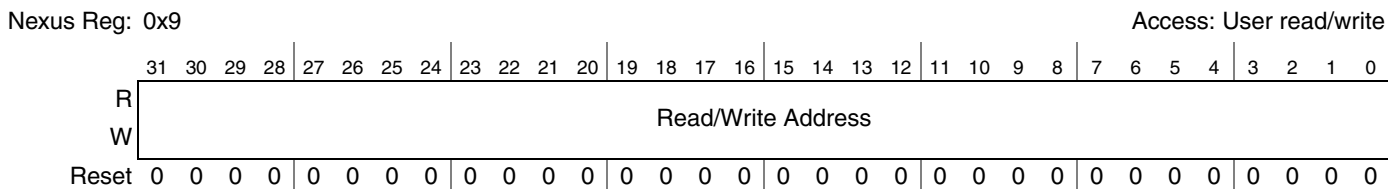


Figure 26-17. Read/Write Access Address Register (RWA)

26.11.5 Read/Write Access Data (RWD)

The read/write access data register provides the data to/from system bus memory-mapped locations when initiating a read or a write access.

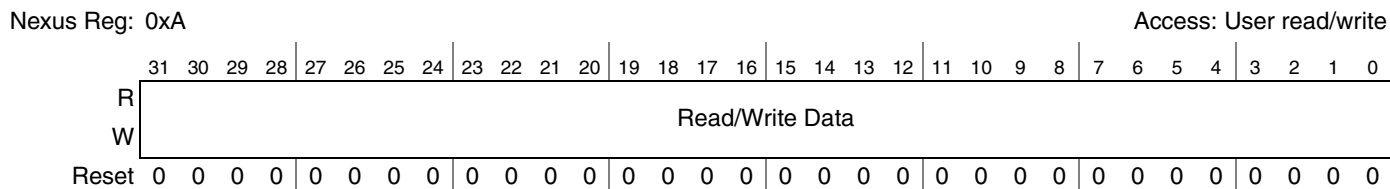


Figure 26-18. Read/Write Access Data Register (RWD)

26.11.6 Watchpoint Trigger Register (WT)

The watchpoint trigger register allows the watchpoints defined within the e200z6 Nexus1 logic to trigger actions. These watchpoints can control program and/or data trace enable and disable. The WT bits can be used to produce an address related ‘window’ for triggering trace messages.

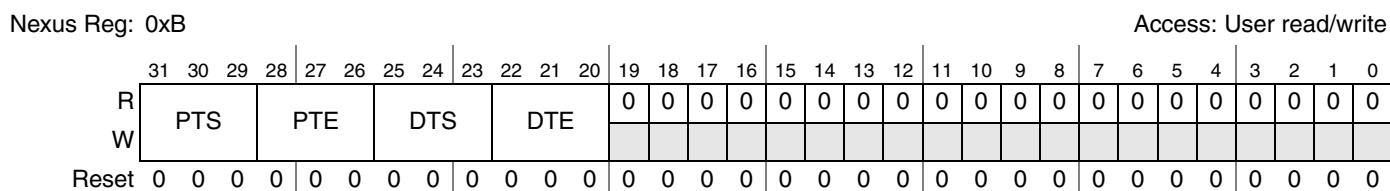


Figure 26-19. Watchpoint Trigger Register (WT)

Table 26-30 details the watchpoint trigger register fields.

Table 26-30. WT Field Descriptions

Field	Description
31–29 PTS[2:0]	Program trace start control. 000 Trigger disabled 001 Use watchpoint #0 (IAC1 from Nexus1) 010 Use watchpoint #1 (IAC2 from Nexus1) 011 Use watchpoint #2 (IAC3 from Nexus1) 100 Use watchpoint #3 (IAC4 from Nexus1) 101 Use watchpoint #4 (DAC1 from Nexus1) 110 Use watchpoint #5 (DAC2 from Nexus1) 111 Use watchpoint #6 or #7 (DCNT1 or DCNT2 from Nexus1)
28–26 PTE[2:0]	Program trace end control. 000 Trigger disabled 001 Use watchpoint #0 (IAC1 from Nexus1) 010 Use watchpoint #1 (IAC2 from Nexus1) 011 Use watchpoint #2 (IAC3 from Nexus1) 100 Use watchpoint #3 (IAC4 from Nexus1) 101 Use watchpoint #4 (DAC1 from Nexus1) 110 Use watchpoint #5 (DAC2 from Nexus1) 111 Use watchpoint #6 or #7 (DCNT1 or DCNT2 from Nexus1)

Table 26-30. WT Field Descriptions (continued)

Field	Description
25–23 DTS[2:0]	Data trace start control. 000 Trigger disabled 001 Use watchpoint #0 (IAC1 from Nexus1) 010 Use watchpoint #1 (IAC2 from Nexus1) 011 Use watchpoint #2 (IAC3 from Nexus1) 100 Use watchpoint #3 (IAC4 from Nexus1) 101 Use watchpoint #4 (DAC1 from Nexus1) 110 Use watchpoint #5 (DAC2 from Nexus1) 111 Use watchpoint #6 or #7 (DCNT1 or DCNT2 from Nexus1)
22–20 DTE[2:0]	Data trace end control. 000 Trigger disabled 001 Use watchpoint #0 (IAC1 from Nexus1) 010 Use watchpoint #1 (IAC2 from Nexus1) 011 Use watchpoint #2 (IAC3 from Nexus1) 100 Use watchpoint #3 (IAC4 from Nexus1) 101 Use watchpoint #4 (DAC1 from Nexus1) 110 Use watchpoint #5 (DAC2 from Nexus1) 111 Use watchpoint #6 or #7 (DCNT1 or DCNT2 from Nexus1)
19–0	Reserved.

NOTE

The WT bits will only control program/data trace if the TM bits in the development control register 1 (DC1) have not already been set to enable program and data trace, respectively.

26.11.7 Data Trace Control Register (DTC)

The data trace control register controls whether DTM messages are restricted to reads, writes, or both for a user programmable address range. There are two data trace channels controlled by the DTC for the Nexus3 module. Each channel can also be programmed to trace data accesses or instruction accesses.

Nexus Reg: 0xD

Access: User read/write

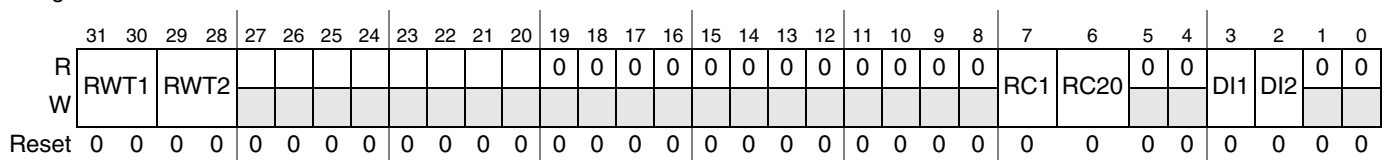


Figure 26-20. Data Trace Control Register (DTC)

Table 26-31 details the data trace control register fields.

Table 26-31. DTC Field Description

Field	Description
31–30 RWT1[1:0]	Read/write trace 1. 00 No trace enabled X1 Enable data read trace 1X Enable data write trace
29–28 RWT2[1:0]	Read/write trace 2. 00 No trace enabled X1 Enable data read trace 1X Enable data write trace
27–8	Reserved.
7 RC1	Range control 1. 0 Condition trace on address within range 1 Condition trace on address outside of range
6 RC2	Range control 2 0 Condition trace on address within range 1 Condition trace on address outside of range
5–4	Reserved.
3 DI1	Data access/instruction access trace 1. 0 Condition trace on data accesses 1 Condition trace on instruction accesses
2 DI2	Data access/instruction access trace 2 0 Condition trace on data accesses 1 Condition trace on instruction accesses
1–0	Reserved.

26.11.8 Data Trace Start Address Registers 1 and 2 (DTSA_n)

The data trace start address registers define the start addresses for each trace channel.

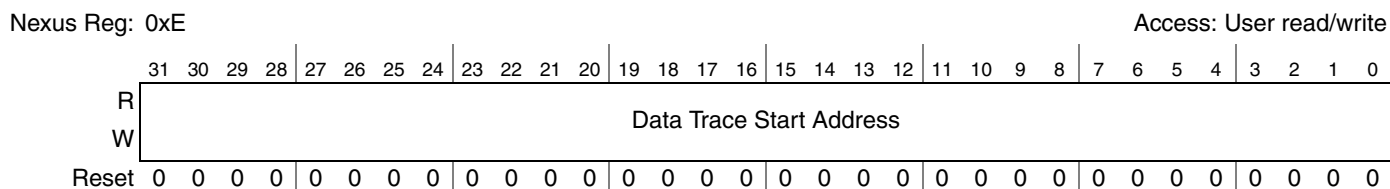


Figure 26-21. Data Trace Start Address Register 1 (DTSA1)

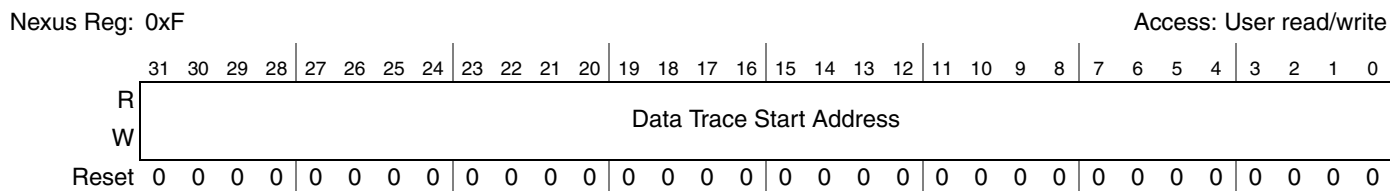


Figure 26-22. Data Trace Start Address Register 2 (DTSA2)

26.11.9 Data Trace End Address Registers 1 and 2 (DTEAn)

The data trace end address registers define the end addresses for each trace channel.

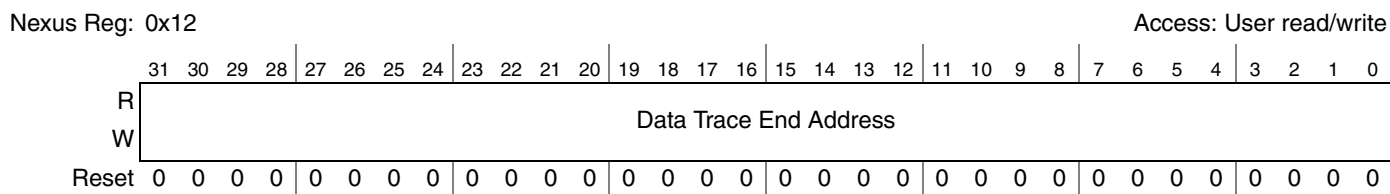


Figure 26-23. Data Trace End Address Register 1 (DTEA1)

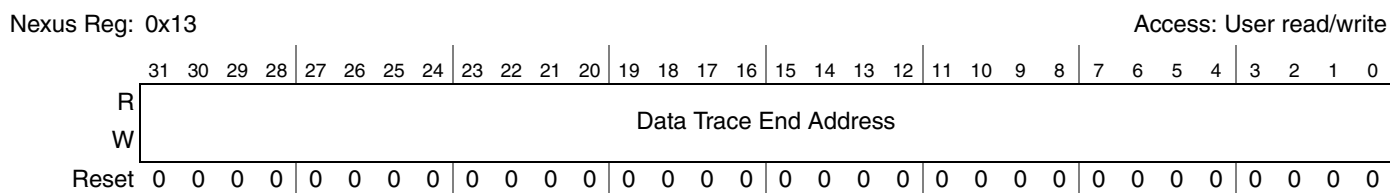


Figure 26-24. Data Trace End Address Register 2 (DTEA2)

Table 26-32 illustrates the range that will be selected for data trace for various cases of DTSA being less than, greater than, or equal to DTEA.

Table 26-32. Data Trace—Address Range Options

Programmed Values	Range Control Bit Value	Range Selected
DTSA < DTEA	0	DTSA -> <- DTEA
DTSA < DTEA	1	<- DTSA DTEA ->
DTSA > DTEA	N/A	Invalid range—no trace
DTSA = DTEA	N/A	Invalid range—no trace

NOTE

DTSA must be less than DTEA in order to guarantee correct data write/read traces. Data trace ranges are exclusive of the DTSA and DTEA addresses.

26.11.10 NZ6C3 Register Access via JTAG / OnCE

Access to Nexus3 register resources is enabled by loading a single instruction (ACCESS_AUX_TAP_ONCE) into the JTAGC instruction register (IR), and then loading the corresponding OnCE OCMD register with the NEXUS3_ACCESS instruction (refer to Table 26-5). For the NZ6C3 module, the OCMD value is 0b00_0111_1100.

Once the ACCESS_AUX_TAP_ONCE instruction has been loaded, the JTAG/OnCE port allows tool/target communications with all Nexus3 registers according to the register map in Table 26-24.

Reading/writing of a NZ6C3 register then requires two (2) passes through the data-scan (DR) path of the JTAG state machine (see 26.11.17).

1. The first pass through the DR selects the NZ6C3 register to be accessed by providing an index (see [Table 26-24](#)), and the direction (read/write). This is achieved by loading an 8-bit value into the JTAG data register (DR). This register has the following format:



Nexus Register Index:	Selected from values in Table 26-24
Read/Write (R/W):	0 Read 1 Write

2. The second pass through the DR then shifts the data in or out of the JTAG port, lsb first.
 - a) During a read access, data is latched from the selected Nexus register when the JTAG state machine passes through the capture-DR state.
 - b) During a write access, data is latched into the selected Nexus register when the JTAG state machine passes through the update-DR state.

26.11.11 Ownership Trace

This section details the ownership trace features of the NZ6C3 module.

26.11.11.1 Overview

Ownership trace provides a macroscopic view, such as task flow reconstruction, when debugging software written in a high level (or object-oriented) language. It offers the highest level of abstraction for tracking operating system software execution. This is especially useful when the developer is not interested in debugging at lower levels.

26.11.11.2 Ownership Trace Messaging (OTM)

Ownership trace information is messaged via the auxiliary port using an ownership trace message (OTM). The e200z6 processor contains a PowerPC Book E defined process ID register within the CPU.

The process ID register is updated by the operating system software to provide task/process ID information. The contents of this register are replicated on the pins of the processor and connected to Nexus. The process ID register value can be accessed using the **mfsprr/mtsprr** instructions. Please refer to the *e200z6 PowerPC™ Core Reference Manual* for more details on the process ID register.

There is one condition which will cause an ownership trace message: When new information is updated in the OTR register or process ID register by the e200z6 processor, the data is latched within Nexus, and is messaged out via the auxiliary port, allowing development tools to trace ownership flow.

Ownership trace information is messaged out in the following format:

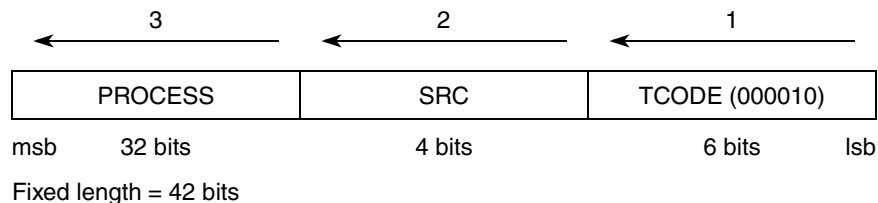


Figure 26-25. Ownership Trace Message Format

26.11.11.3 OTM Error Messages

An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard incoming messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied.

If only an OTM message attempts to enter the queue while it is being emptied, the error message will incorporate the OTM only error encoding (00000). If both OTM and either BTM or DTM messages attempt to enter the queue, the error message will incorporate the OTM and (program or data) trace error encoding (00111). If a watchpoint also attempts to be queued while the FIFO is being emptied, then the error message will incorporate error encoding (01000).

NOTE

The OVC bits within the DC1 register can be set to delay the CPU in order to alleviate (but not eliminate) potential overrun situations.

Error information is messaged out in the following format (see [Table 26-20](#))

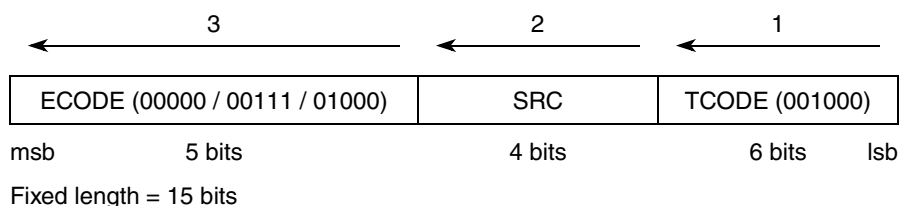


Figure 26-26. Error Message Format

26.11.11.4 OTM Flow

Ownership trace messages are generated when the operating system writes to the e200z6 process ID register or the memory mapped ownership trace register.

The following flow describes the OTM process:

1. The process ID register is a system control register. It is internal to the e200z6 processor and can be accessed by using PPC instructions **mtspr** and **mfspr**. The contents of this register are replicated on the pins of the processor and connected to Nexus.

2. OTR/process ID register reads do not cause ownership trace messages to be transmitted by the NZ6C3 module.
3. If the periodic OTM message counter expires (after 255 queued messages without an OTM), an OTM is sent using the latched data from the previous OTM or process ID register write.

26.11.12 Program Trace

This section details the program trace mechanism supported by NZ6C3 for the e200z6 processor. Program trace is implemented via branch trace messaging (BTM) as per the Class 3 IEEE®-ISTO 5001-2003 standard definition. Branch trace messaging for e200z6 processors is accomplished by snooping the e200z6 virtual address bus (between the CPU and MMU), attribute signals, and CPU status.

26.11.12.1 Branch Trace Messaging (BTM)

Traditional branch trace messaging facilitates program trace by providing the following types of information:

- Messaging for taken direct branches includes how many sequential instructions were executed since the last taken branch or exception. Direct (or indirect) branches not taken are counted as sequential instructions.
- Messaging for taken indirect branches and exceptions includes how many sequential instructions were executed since the last taken branch or exception and the unique portion of the branch target address or exception vector address.

Branch history messaging facilitates program trace by providing the following information:

- Messaging for taken indirect branches and exceptions includes how many sequential instructions were executed since the last predicate instruction, taken indirect branch, or exception, the unique portion of the branch target address or exception vector address, as well as a branch/predicate instruction history field. Each bit in the history field represents a direct branch or predicated instruction where a value of one (1) indicates taken, and a value of zero (0) indicates not taken. Certain instructions (**evsel**) generate a pair of predicate bits which are both reported as consecutive bits in the history field.

26.11.12.1.1 e200z6 Indirect Branch Message Instructions (PowerPC Book E)

Table 26-33 shows the types of instructions and events which cause indirect branch messages or branch history messages to be encoded.

Table 26-33. Indirect Branch Message Sources

Source of Indirect Branch Message	Instructions
Taken branch relative to a register value	bcctr, bcctrl, bclr, bclrl
System Call / Trap exceptions taken	sc, tw, twi
Return from interrupts / exceptions	rfi, rfci, rfdi

26.11.12.1.2 e200z6 Direct Branch Message Instructions (PowerPC Book E)

Table 26-34 shows the types of instructions which will cause direct branch messages or will toggle a bit in the instruction history buffer to be messaged out in a resource full message or branch history message.

Table 26-34. Direct Branch Message Sources

Source of Direct Branch Message	Instructions
Taken direct branch instructions	b, ba, bl, bla, bc, bca, bcl, bcla
Instruction Synchronize	isync

26.11.12.1.3 BTM Using Branch History Messages

Traditional BTM messaging can accurately track the number of sequential instructions between branches, but cannot accurately indicate which instructions were conditionally executed, and which were not.

Branch history messaging solves this problem by providing a predicated instruction history field in each indirect branch message. Each bit in the history represents a predicated instruction or direct branch. A value of one (1) indicates the conditional instruction was executed or the direct branch was taken. A value of zero (0) indicates the conditional instruction was not executed or the direct branch was not taken. Certain instructions (**evsel**) generate a pair of predicate bits which are both reported as consecutive bits in the history field.

Branch history messages solve predicated instruction tracking and save bandwidth since only indirect branches cause messages to be queued.

26.11.12.1.4 BTM Using Traditional Program Trace Messages

Based on the PTM bit in the DC register (DC[PTM]), program tracing can utilize either branch history messages (DC[PTM] = 1) or traditional direct/indirect branch messages (DC[PTM] = 0).

Branch history will save bandwidth and keep consistency between methods of program trace, yet may lose temporal order between BTM messages and other types of messages. Since direct branches are not messaged, but are instead included in the history field of the indirect branch history message, other types of messages may enter the FIFO between branch history messages. The development tool cannot determine the ordering of “events” that occurred with respect to direct branches simply by the order in which messages are sent out.

Traditional BTM messages maintain their temporal ordering because each event that can cause a message to be queued will enter the FIFO in the order it occurred and will be messaged out maintaining that order.

26.11.12.2 BTM Message Formats

The e200z6 Nexus3 module supports three types of traditional BTM messages—direct, indirect, and synchronization messages. It supports two types of branch history BTM messages—indirect branch history, and indirect branch history with synchronization messages. Debug status messages and error messages are also supported.

26.11.12.2.1 Indirect Branch Messages (History)

Indirect branches include all taken branches whose destination is determined at run time, interrupts and exceptions. If DC[PTM] is set, indirect branch information is messaged out in the following format:

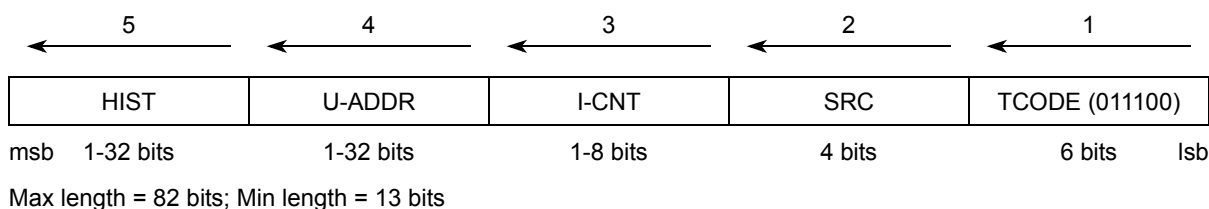


Figure 26-27. Indirect Branch Message (History) Format

26.11.12.2.2 Indirect Branch Messages (Traditional)

If DC[PTM] is cleared, indirect branch information is messaged out in the following format:

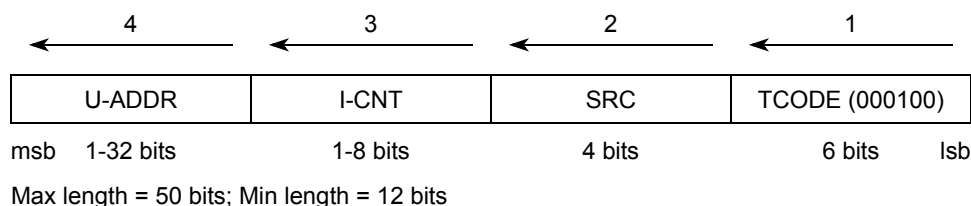


Figure 26-28. Indirect Branch Message Format

26.11.12.2.3 Direct Branch Messages (Traditional)

Direct branches (conditional or unconditional) are all taken branches whose destination is fixed in the instruction opcode. Direct branch information is messaged out in the following format:

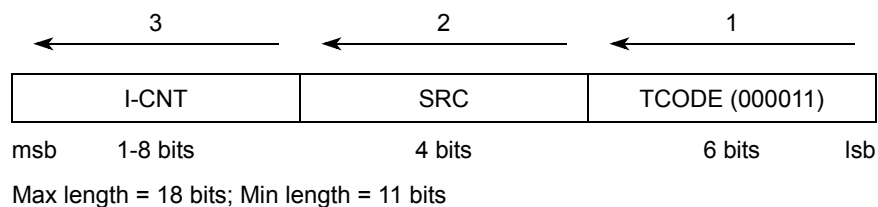


Figure 26-29. Direct Branch Message Format

NOTE

When DC[PTM] is set, direct branch messages will not be transmitted. Instead, each direct branch or predicated instruction will toggle a bit in the history buffer.

26.11.12.2.4 Resource Full Messages

The resource full message is used in conjunction with the branch history messages. The resource full message is generated when the internal branch/predicate history buffer is full, or if the BTM Instruction

sequence counter (I-CNT) overflows. If synchronization is needed at the time this message is generated, the synchronization is delayed until the next branch trace message that is not a resource full message.

The current value of the history buffer is transmitted as part of the resource full message. This information can be concatenated by the tool with the branch/predicate history information from subsequent messages to obtain the complete branch history for a message. The internal history value is reset by this message, and the I-CNT value is reset as a result of a bit being added to the history buffer.

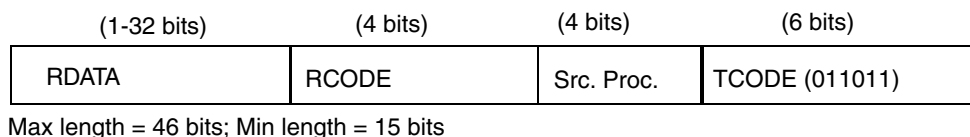


Figure 26-30. Resource Full Message Format

26.11.12.2.5 Debug Status Messages

NOTE

Debug Status Messages (DSMs) are enabled if the Nexus module is enabled.

Debug status messages report low power mode and debug status. Entering/exiting debug mode as well as entering a low power mode will trigger a debug status message. Debug status information is sent out in the following format:

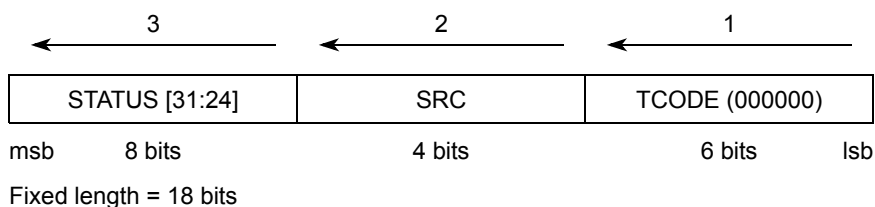


Figure 26-31. Debug Status Message Format

26.11.12.2.6 Program Correlation Messages

Program correlation messages are used to correlate events to the program flow that may not be associated with the instruction stream. In order to maintain accurate instruction tracing information when entering debug mode or a CPU low power mode (where tracing may be disabled), this message is sent upon entry into one of these two modes and includes the instruction count and branch history. Program correlation is messaged out in the following format:

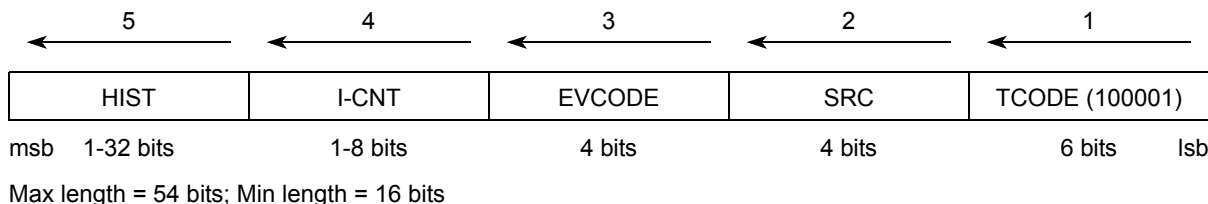


Figure 26-32. Program Correlation Message Format

26.11.12.2.7 BTM Overflow Error Messages

An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard incoming messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied.

If only a program trace message attempts to enter the queue while it is being emptied, the error message will incorporate the program trace only error encoding (00001). If both OTM and program trace messages attempt to enter the queue, the error message will incorporate the OTM and program trace error encoding (00111). If a watchpoint also attempts to be queued while the FIFO is being emptied, then the error message will incorporate error encoding (01000).

NOTE

The OVC bits within the DC1 register can be set to delay the CPU in order to alleviate (but not eliminate) potential overrun situations.

Error information is messaged out in the following format

:

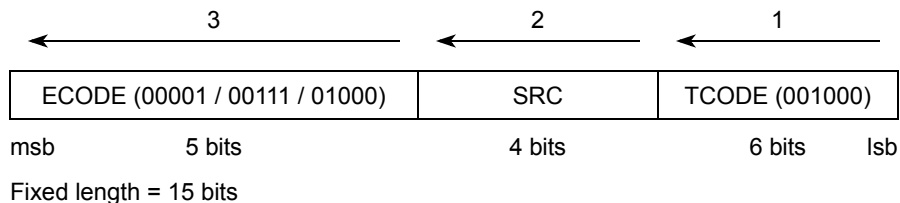


Figure 26-33. Error Message Format

26.11.12.2.8 Program Trace Synchronization Messages

A program trace direct/indirect branch with sync message is messaged via the auxiliary port (provided program trace is enabled) for the following conditions (see [Table 26-35](#)):

- Initial program trace message upon the first direct/indirect branch after exit from system reset or whenever program trace is enabled
- Upon direct/indirect branch after returning from a CPU low power state
- Upon direct/indirect branch after returning from debug mode
- Upon direct/indirect branch after occurrence of queue overrun (can be caused by any trace message), provided program trace is enabled
- Upon direct/indirect branch after the periodic program trace counter has expired indicating 255 *without-sync* program trace messages have occurred since the last *with-sync* message occurred
- Upon direct/indirect branch after assertion of the event in (EVTI) pin if the EIC bits within the DC1 register have enabled this feature
- Upon direct/indirect branch after the sequential instruction counter has expired indicating 255 instructions have occurred between branches
- Upon direct/indirect branch after a BTM message was lost due to an attempted access to a secure memory location.

- Upon direct/indirect branch after a BTM message was lost due to a collision entering the FIFO between the BTM message and either a watchpoint message or an ownership trace message

If the NZ6C3 module is enabled at reset, a EVTI assertion initiates a program trace direct/indirect branch with sync message (if program trace is enabled) upon the first direct/indirect branch. The format for program trace direct/indirect branch with sync messages is as follows:

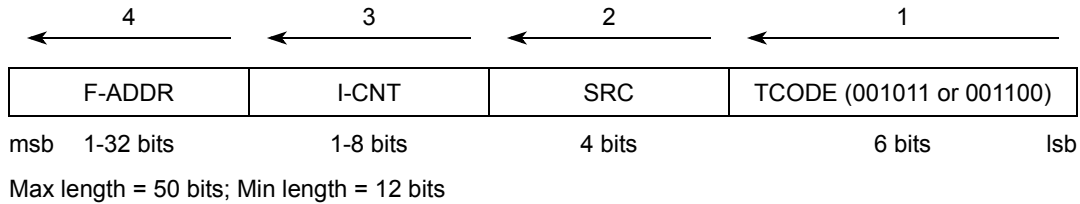


Figure 26-34. Direct/Indirect Branch with Sync Message Format

The formats for program trace direct/indirect branch with sync. messages and indirect branch history with sync. messages are as follows

:

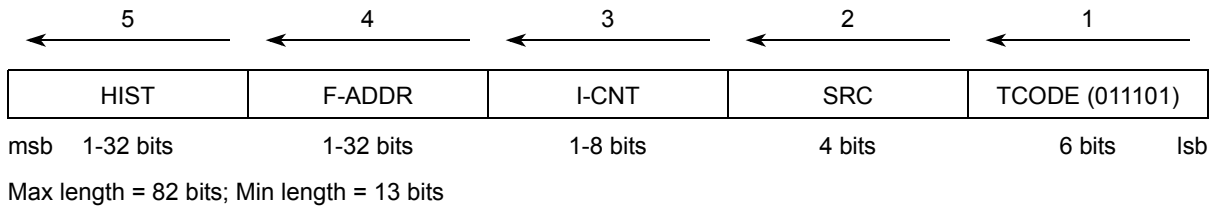


Figure 26-35. Indirect Branch History with Sync. Message Format

Exception conditions that result in program trace synchronization are summarized in [Table 26-35](#).

Table 26-35. Program Trace Exception Summary

Exception Condition	Exception Handling
System Reset Negation	At the negation of JTAG reset (JCOMP), queue pointers, counters, state machines, and registers within the NZ6C3 module are reset. Upon the first branch out of system reset (if program trace is enabled), the first program trace message is a direct/indirect branch with sync. message.
Program Trace Enabled	The first program trace message (after program trace has been enabled) is a synchronization message.
Exit from Low Power/Debug	Upon exit from a low power mode or debug mode the next direct/indirect branch will be converted to a direct/indirect branch with sync. message.
Queue Overrun	An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied. The next BTM message in the queue will be a direct/indirect branch with sync. message.
Periodic Program Trace Sync.	A forced synchronization occurs periodically after 255 program trace messages have been queued. A direct/indirect branch with sync. message is queued. The periodic program trace message counter then resets.

Table 26-35. Program Trace Exception Summary (continued)

Exception Condition	Exception Handling
Event In	If the Nexus module is enabled, an EVTI assertion initiates a direct/indirect branch with sync. message upon the next direct/indirect branch (if program trace is enabled and the EIC bits of the DC1 register have enabled this feature).
Sequential Instruction Count Overflow	When the sequential instruction counter reaches its maximum count (up to 255 sequential instructions may be executed), a forced synchronization occurs. The sequential counter then resets. A program trace direct/indirect branch with sync.message is queued upon execution of the next branch.
Attempted Access to Secure Memory	For devices which implement security, any attempted branch to secure memory locations will temporarily disable program trace & cause the corresponding BTM to be lost. The following direct/indirect branch will queue a direct/indirect branch with sync. message. The count value within this message will be inaccurate since the re-enable of program trace is not necessarily aligned on an instruction boundary.
Collision Priority	All messages have the following priority: WPM -> OTM -> BTM -> DTM. A BTM message which attempts to enter the queue at the same time as a watchpoint message or ownership trace message will be lost. An error message will be sent indicating the BTM was lost. The following direct/indirect branch will queue a direct/indirect branch with sync. message. The count value within this message will reflect the number of sequential instructions executed after the last successful BTM Message was generated. This count will include the branch which did not generate a message due to the collision.

26.11.12.3 BTM Operation

26.11.12.3.1 Enabling Program Trace

Both types of branch trace messaging can be enabled in one of two ways:

- Setting the TM field of the DC1 register to enable program trace (DC1[TM])
- Using the PTS field of the WT register to enable program trace on watchpoint hits (e200z6 watchpoints are configured within the CPU)

26.11.12.3.2 Relative Addressing

The relative address feature is compliant with the IEEE[®]-ISTO 5001-2003 standard recommendations, and is designed to reduce the number of bits transmitted for addresses of indirect branch messages.

The address transmitted is relative to the target address of the instruction which triggered the previous indirect branch (or sync) message. It is generated by XOR'ing the new address with the previous address, and then using only the results up to the most significant 1 in the result. To recreate this address, an XOR of the (most-significant 0-padded) message address with the previously decoded address gives the current address.

Previous address (A1) = 0x0003FC01, New address (A2) = 0x0003F365

```

Message Generation:

A1 = 0000 0000 0000 0011 1111 1100 0000 0001
A2 = 0000 0000 0000 0011 1111 0011 0110 0101

A1 ⊕ A2 = 0000 0000 0000 0000 0000|1111 0110 0100|

Address Message (M1) = 1111 0110 0100

Address Re-creation:

A1 ⊕ M1 = A2
A1 = 0000 0000 0000 0011 1111 1100 0000 0001
M1 = 0000 0000 0000 0000 0000 1111 0110 0100
-----
A2 = 0000 0000 0000 0011 1111 0011 0110 0101
    
```

Figure 26-36. Relative Address Generation and Re-creation

26.11.12.3.3 Branch/Predicate Instruction History (HIST)

If DC[PTM] is set, BTM messaging will use the branch history format. The branch history (HIST) packet in these messages provides a history of direct branch execution used for reconstructing the program flow. This packet is implemented as a left-shifting shift register. The register is always pre-loaded with a value of one (1). This bit acts as a stop bit so that the development tools can determine which bit is the end of the history information. The pre-loaded bit itself is not part of the history, but is transmitted with the packet.

A value of one (1) is shifted into the history buffer on a taken branch (condition or unconditional) and on any instruction whose predicate condition executed as true. A value of zero (0) is shifted into the history buffer on any instruction whose predicate condition executed as false as well as on branches not taken. This will include indirect as well as direct branches not taken. For the **evsel** instruction, two bits are shifted in, corresponding to the low element (shifted in first) and the high element (shifted in second) conditions.

26.11.12.3.4 Sequential Instruction Count (I-CNT)

The I-CNT packet, is present in all BTM messages. For traditional branch messages, I-CNT represents the number of sequential instructions, or non-taken branches in between direct/indirect branch messages.

For branch history messages, I-CNT represents the number of instructions executed since the last taken/non-taken direct branch, last taken indirect branch or exception. Not taken indirect branches are considered sequential instructions and cause the instruction count to increment. I-CNT also represents the number of instructions executed since the last predicate instruction.

The sequential instruction counter overflows when its value reaches 255. The next BTM message will be converted to a synchronization type message.

26.11.12.3.5 Program Trace Queuing

NZ6C3 implements a message queue. Messages that enter the queue are transmitted via the auxiliary pins in the order in which they are queued.

NOTE

If multiple trace messages need to be queued at the same time, Watchpoint Messages will have the highest priority (WPM → OTM → BTM → DTM).

26.11.12.4 Program Trace Timing Diagrams

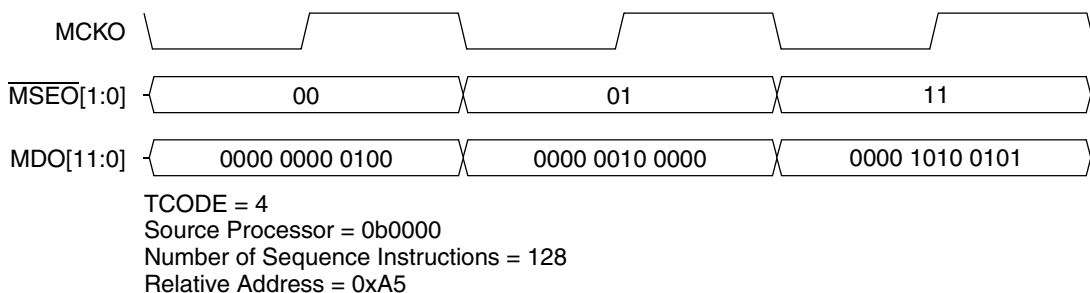


Figure 26-37. Program Trace (MDO = 12)—Indirect Branch Message (Traditional)

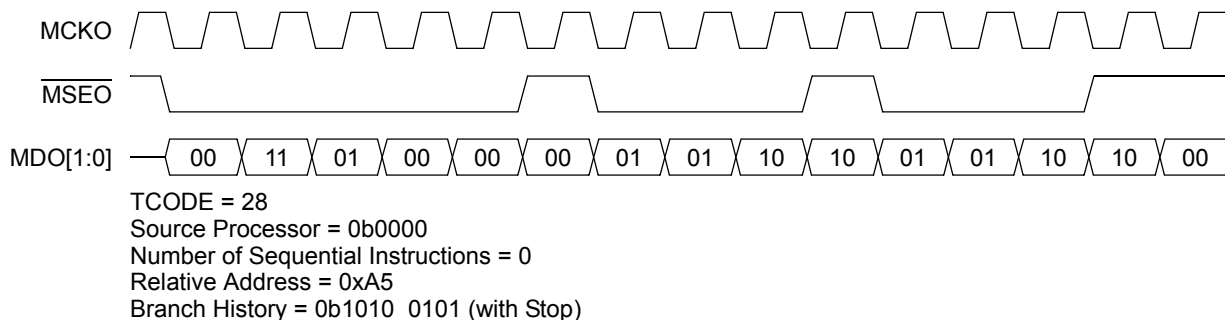


Figure 26-38. Program Trace (MDO = 2)—Indirect Branch Message (History)

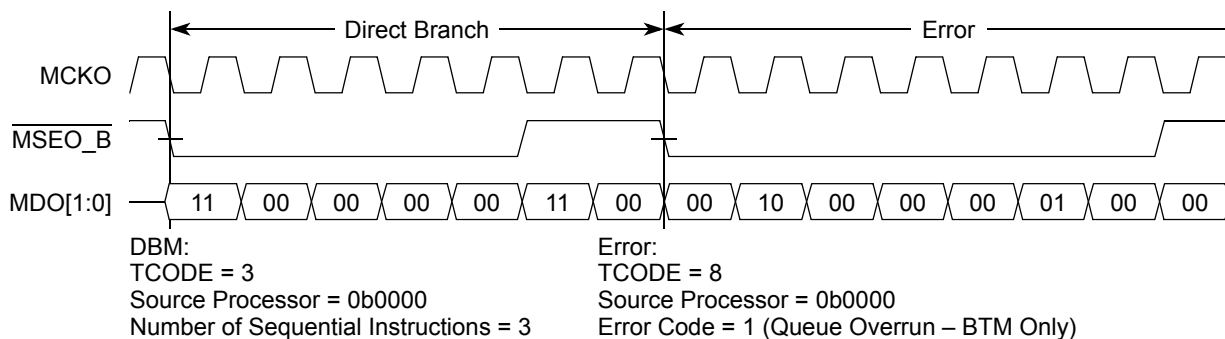


Figure 26-39. Program Trace—Direct Branch (Traditional) and Error Messages

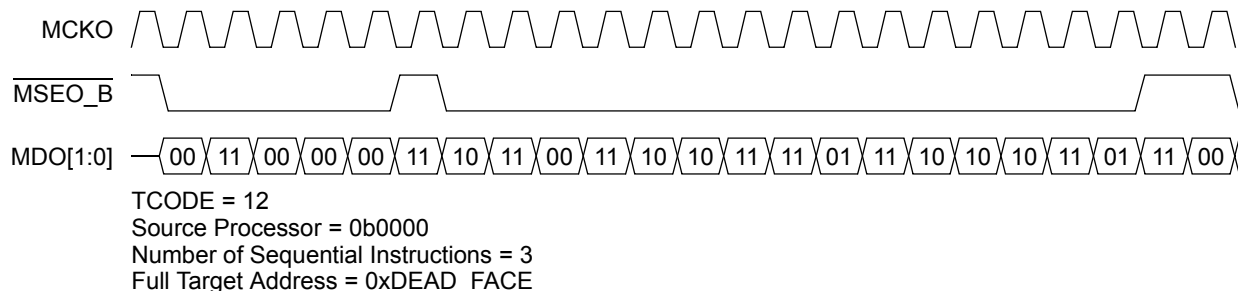


Figure 26-40. Program Trace—Indirect Branch with Sync. Message

26.11.13 Data Trace

This section deals with the data trace mechanism supported by the NZ6C3 module. Data trace is implemented via data write messaging (DWM) and data read messaging (DRM), as per the IEEE®-ISTO 5001-2003 standard.

26.11.13.1 Data Trace Messaging (DTM)

Data trace messaging for e200z6 is accomplished by snooping the e200z6 virtual data bus (between the CPU and MMU), and storing the information for qualifying accesses (based on enabled features and matching target addresses). The NZ6C3 module traces all data access that meet the selected range and attributes.

NOTE

Data trace is only performed on the e200z6 virtual data bus. This allows for data visibility for the incorporated data cache. Only e200z6 CPU initiated accesses will be traced. No DMA accesses to the NXDM system bus will be traced.

Data trace messaging can be enabled in one of two ways:

- Setting the TM field of the DC1 register to enable data trace (DC1[TM]).
- Using WT[DTS] to enable data trace on watchpoint hits (e200z6 watchpoints are configured within the Nexus1 module)

26.11.13.2 DTM Message Formats

The Nexus3 module supports five types of DTM messages: data write, data read, data write synchronization, data read synchronization and error messages.

26.11.13.2.1 Data Write Messages

The data write message contains the data write value and the address of the write access, relative to the previous data trace message. Data write message information is messaged out in the following format:

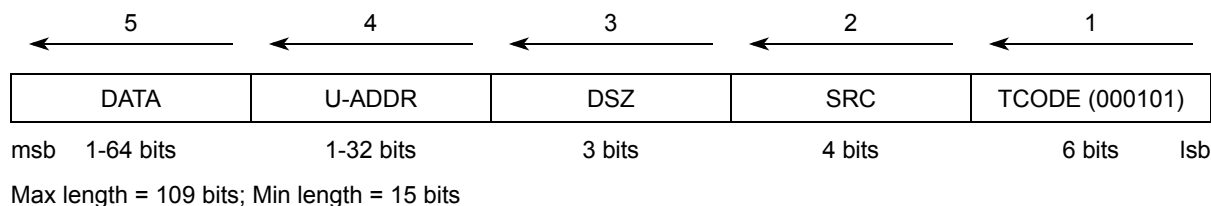


Figure 26-41. Data Write Message Format

26.11.13.2.2 Data Read Messages

The data read message contains the data read value and the address of the read access, relative to the previous data trace message. Data read message information is messaged out in the following format:

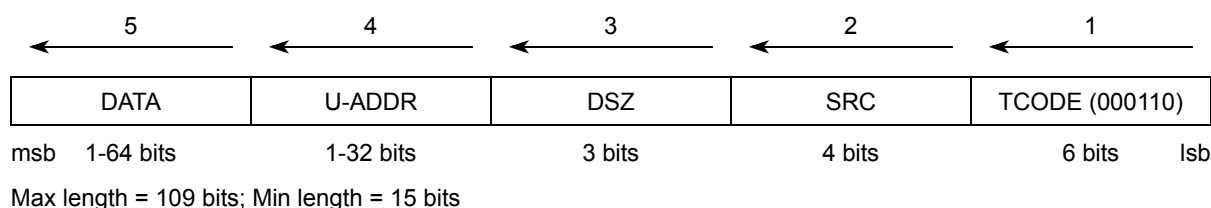


Figure 26-42. Data Read Message Format

NOTE

For the e200z6 based CPU, the double-word encoding (data size = 0b000) will indicate a double-word access and will be sent out as a single data trace message with a single 64-bit data value.

26.11.13.2.3 DTM Overflow Error Messages

An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard incoming messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied.

If only a data trace message attempts to enter the queue while it is being emptied, the error message will incorporate the data trace only error encoding (00010). If both OTM and data trace messages attempt to enter the queue, the error message will incorporate the OTM and data trace error encoding (00111). If a watchpoint also attempts to be queued while the FIFO is being emptied, then the error message will incorporate error encoding (01000).

NOTE

The OVC bits within the DC1 register can be set to delay the CPU in order to alleviate (but not eliminate) potential overrun situations.

Error information is messaged out in the following format:

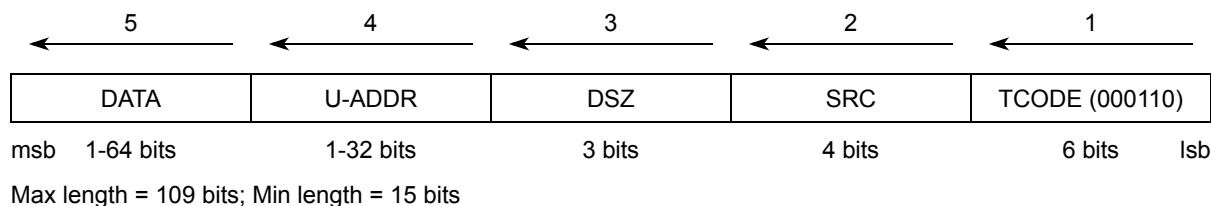


Figure 26-43. Error Message Format

26.11.13.2.4 Data Trace Synchronization Messages

A data trace write/read with sync. message is messaged via the auxiliary port (provided data trace is enabled) for the following conditions (see [Table 26-36](#)):

- Initial data trace message after exit from system reset or whenever data trace is enabled
- Upon exiting debug mode
- After occurrence of queue overrun (can be caused by any trace message), provided data trace is enabled
- After the periodic data trace counter has expired indicating 255 *without-sync* data trace messages have occurred since the last *with-sync* message occurred
- Upon assertion of the event in (EVTI) pin, the first data trace message will be a synchronization message if the EIC bits of the DC1 register have enabled this feature
- Upon data trace write/read after the previous DTM message was lost due to an attempted access to a secure memory location
- Upon data trace write/read after the previous DTM message was lost due to a collision entering the FIFO between the DTM message and any of the following: watchpoint message, ownership trace message, or branch trace message

Data trace synchronization messages provide the full address (without leading zeros) and insure that development tools fully synchronize with data trace regularly. Synchronization messages provide a reference address for subsequent data messages, in which only the unique portion of the data trace address is transmitted. The format for data trace write/read with sync. messages is as follows:

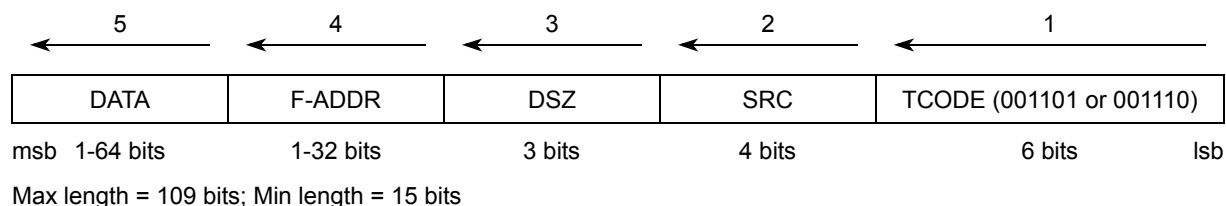


Figure 26-44. Data Write/Read with Sync. Message Format

Exception conditions that result in data trace synchronization are summarized in [Table 26-36](#).

Table 26-36. Data Trace Exception Summary

Exception Condition	Exception Handling
System Reset Negation	At the negation of JTAG reset (JCOMP), queue pointers, counters, state machines, and registers within the NZ6C3 module are reset. If data trace is enabled, the first data trace message is a data write/read with sync. message.
Data Trace Enabled	The first data trace message (after data trace has been enabled) is a synchronization message.
Exit from Low Power/Debug	Upon exit from a low power mode or debug mode the next data trace message will be converted to a data write/read with sync. message.
Queue Overrun	An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied. The next DTM message in the queue will be a data write/read with sync. message.
Periodic Data Trace Sync.	A forced synchronization occurs periodically after 255 data trace messages have been queued. A data write/read with sync. message is queued. The periodic data trace message counter then resets.
Event In	If the Nexus module is enabled, a EVTI assertion initiates a data trace write/read with sync. message upon the next data write/read (if data trace is enabled and the EIC bits of the DC1 register have enabled this feature).
Attempted Access to Secure Memory	For devices which implement security, any attempted read or write to secure memory locations will temporarily disable data trace & cause the corresponding DTM to be lost. A subsequent read/write will queue a data trace read/write with sync. message.
Collision Priority	All messages have the following priority: WPM → OTM → BTM → DTM. A DTM message which attempts to enter the queue at the same time as a watchpoint message or ownership trace message or branch trace message will be lost. A subsequent read/write will queue a data trace read/write with sync. message.

26.11.13.3 DTM Operation

26.11.13.3.1 DTM Queueing

NZ6C3 implements a message queue for DTM messages. Messages that enter the queue are transmitted via the auxiliary pins in the order in which they are queued.

NOTE

If multiple trace messages need to be queued at the same time, watchpoint messages will have the highest priority (WPM → OTM → BTM → DTM).

26.11.13.3.2 Relative Addressing

The relative address feature is compliant with the IEEE®-ISTO 5001-2003 standard recommendations, and is designed to reduce the number of bits transmitted for addresses of data trace messages. Refer to [Section 26.11.12.3.2, “Relative Addressing](#) for details.

26.11.13.3.3 Data Trace Windowing

Data write/read messages are enabled via the RWT1(2) field in the data trace control register (DTC) for each DTM channel. Data trace windowing is achieved via the address range defined by the DTEA and DTSA registers and by the RC1(2) field in the DTC. All e200z6 initiated read/write accesses which fall inside or outside these address ranges, as programmed, are candidates to be traced.

26.11.13.3.4 Data Access/Instruction Access Data Tracing

The Nexus3 module is capable of tracing both instruction access data or data access data. Each trace window can be configured for either type of data trace by setting the DI1(2) field within the data trace control register for each DTM channel.

26.11.13.3.5 e200z6 Bus Cycle Special Cases

Table 26-37. e200z6 Bus Cycle Cases

Special Case	Action
e200z6 bus cycle aborted	Cycle ignored
e200z6 bus cycle with data error (\overline{TEA})	Data Trace Message discarded
e200z6 bus cycle completed without error	Cycle captured & transmitted
e200z6 bus cycle initiated by NZ6C3	Cycle ignored
e200z6 bus cycle is an instruction fetch	Cycle ignored
e200z6 bus cycle accesses misaligned data (across 64-bit boundary)—both 1st & 2nd transactions within data trace range	1st & 2nd cycle captured & 2 DTM's transmitted (see Note)
e200z6 bus cycle accesses misaligned data (across 64-bit boundary)—1st transaction within data trace range; 2nd transaction out of data trace range	1st cycle captured and transmitted; 2nd cycle ignored
e200z6 bus cycle accesses misaligned data (across 64-bit boundary)—1st transaction out of data trace range; 2nd transaction within data trace range	1st cycle ignored; 2nd cycle capture and transmitted

NOTE

For misaligned accesses (crossing 64-bit boundary), the access is broken into two accesses. If both accesses are within the data trace range, two DTMs will be sent: one with a size encoding indicating the size of the original access (that is, word), and one with a size encoding for the portion which crossed the boundary (that is, 3-byte).

NOTE

An STM to the cache's store buffer within the data trace range will initiate a DTM message. If the corresponding memory access causes an error, a checkstop condition will occur. The debug/development tool should use this indication to invalidate the previous DTM.

26.11.13.4 Data Trace Timing Diagrams (8 MDO Configuration)

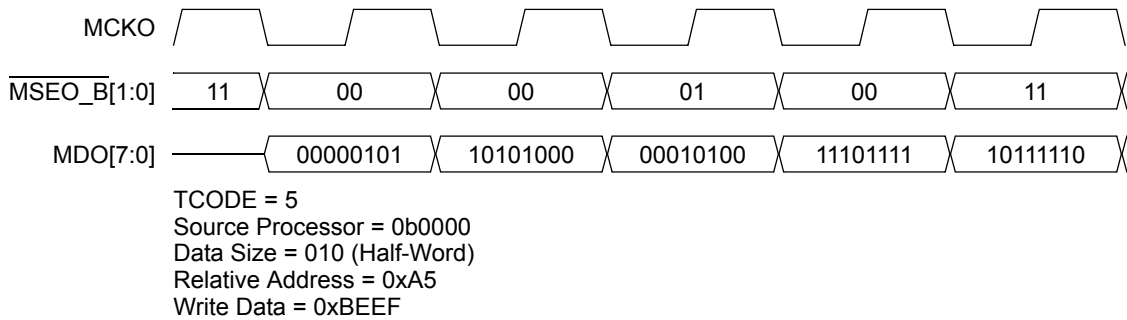


Figure 26-45. Data Trace—Data Write Message

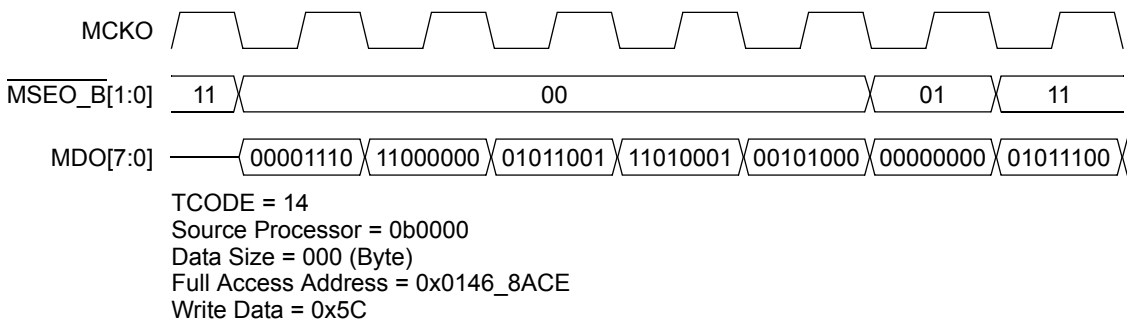


Figure 26-46. Data Trace—Data Read with Sync Message

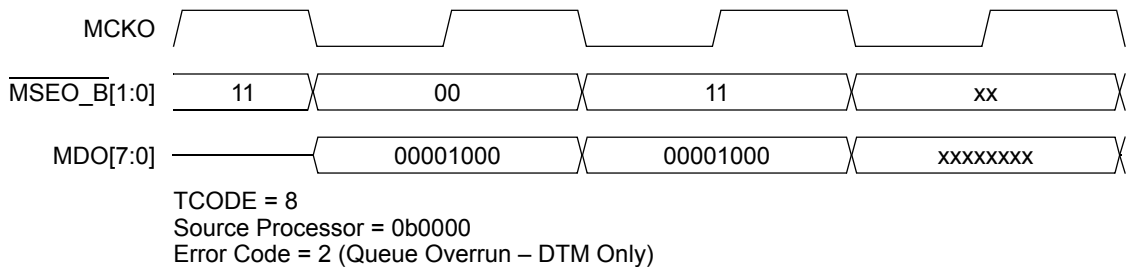


Figure 26-47. Error Message (Data Trace only encoded)

26.11.14 Watchpoint Support

This section details the watchpoint features of the NZ6C3 module.

26.11.14.1 Overview

The NZ6C3 module provides watchpoint messaging via the auxiliary pins, as defined by the IEEE®-ISTO 5001-2003 standard.

NZ6C3 is not compliant with Class4 breakpoint/watchpoint requirements defined in the standard. The breakpoint/watchpoint control register is not implemented.

26.11.14.2 Watchpoint Messaging

Enabling watchpoint messaging is done by setting the watchpoint enable bit in the DC1 register. Setting the individual watchpoint sources is supported through the e200z6 Nexus1 module. The e200z6 Nexus1 module is capable of setting multiple address and/or data watchpoints. Please refer to the e200z6 Core Reference Manual for more information on watchpoint initialization.

When these watchpoints occur, a watchpoint event signal from the Nexus1 module causes a message to be sent to the queue to be messaged out. This message includes the watchpoint number indicating which watchpoint caused the message.

The occurrence of any of the e200z6 defined watchpoints can be programmed to assert the event out $\overline{\text{EVTO}}$ pin for one (1) period of the output clock (MCKO).

Watchpoint information is messaged out in the following format

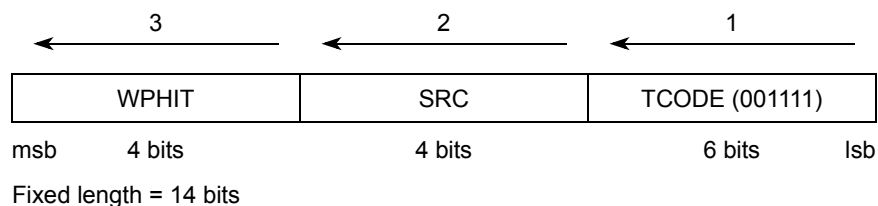


Figure 26-48. Watchpoint Message Format.

Table 26-38. Watchpoint Source Encoding

Watchpoint Source (8 bits)	Watchpoint Description
00000001	e200z6 Watchpoint #0 (IAC1 from Nexus1)
00000010	e200z6 Watchpoint #1 (IAC2 from Nexus1)
00000100	e200z6 Watchpoint #2 (IAC3 from Nexus1)
00001000	e200z6 Watchpoint #3 (IAC4 from Nexus1)
00010000	e200z6 Watchpoint #4 (DAC1 from Nexus1)
00100000	e200z6 Watchpoint #5 (DAC2 from Nexus1)
01000000	e200z6 Watchpoint #6 (DCNT1 from Nexus1)
10000000	e200z6 Watchpoint #7 (DCNT2 from Nexus1)

26.11.14.3 Watchpoint Error Message

An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied.

If only a watchpoint message attempts to enter the queue while it is being emptied, the error message will incorporate the watchpoint only error encoding (00110). If an OTM and/or program trace and/or data trace

message also attempts to enter the queue while it is being emptied, the error message will incorporate error encoding (01000).

NOTE

The OVC bits within the DC1 register can be set to delay the CPU in order to alleviate (but not eliminate) potential overrun situations.

Error information is messaged out in the following format (see Table 26-20)

:

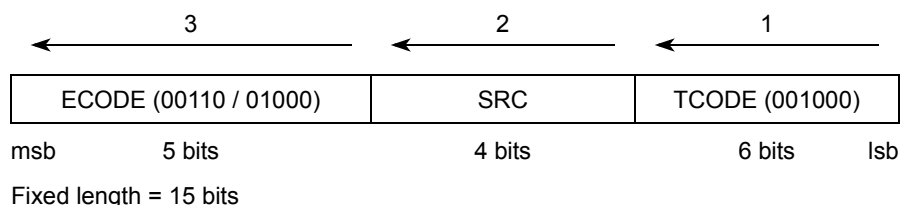


Figure 26-49. Error Message Format

26.11.14.4 Watchpoint Timing Diagram (2 MDO/1 MSEO Configuration)

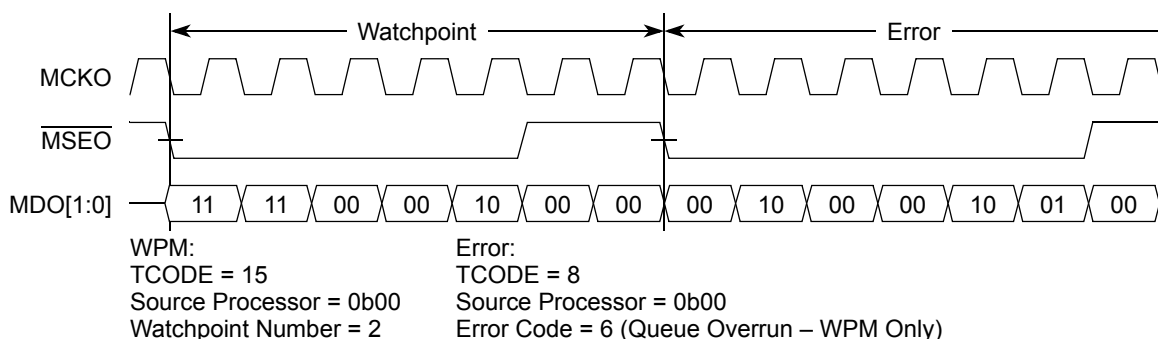


Figure 26-50. Watchpoint Message & Watchpoint Error Message

26.11.15 NZ6C3 Read/Write Access to Memory-Mapped Resources

The read/write access feature allows access to memory-mapped resources via the JTAG/OnCE port. The read/write mechanism supports single as well as block reads and writes to e200z6 system bus resources.

The NZ6C3 module is capable of accessing resources on the e200z6 system bus, with multiple configurable priority levels. Memory-mapped registers and other non-cached memory can be accessed via the standard memory map settings.

All accesses are setup and initiated by the read/write access control/status register (RWCS), as well as the read/write access address (RWA) and read/write access data registers (RWD).

Using the read/write access registers (RWCS/RWA/RWD), memory-mapped e200z6 system bus resources can be accessed through NZ6C3. The following subsections describe the steps which are required to access memory-mapped resources.

NOTE

Read/write access can only access memory mapped resources when system reset is de-asserted.

Misaligned accesses are NOT supported in the e200z6 Nexus3 module.

26.11.15.1 Single Write Access

1. Initialize the read/write access address register (RWA) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE”](#) using the Nexus register index of 0x9 (see [Table 26-24](#)). Configure as follows:
 - Write Address -> 0xnwnnnnnn (write address)
2. Initialize the read/write access control/status register (RWCS) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus Register Index of 0x7(see [Table 26-24](#)). Configure the bits as follows:
 - Access Control RWCS[AC] -> 0b1 (to indicate start access)
 - Map Select RWCS[MAP] -> 0b000 (primary memory map)
 - Access Priority RWCS[PR] -> 0b00 (lowest priority)
 - Read/Write RWCS[RW] -> 0b1 (write access)
 - Word Size RWCS[SZ] -> 0b0xx (32-bit, 16-bit, 8-bit)
 - Access Count RWCS[CNT] -> 0x0000 or 0x0001 (single access)

NOTE

Access count RWCS[CNT] of 0x0000 or 0x0001 will perform a single access.

3. Initialize the read/write access data register (RWD) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus register index of 0xA (see [Table 26-24](#)). Configure as follows:
 - Write Data -> 0xnwnnnnnn (write data)
4. The NZ6C3 module will then arbitrate for the system bus and transfer the data value from the data buffer RWD register to the memory mapped address in the read/write access address register (RWA). When the access has completed without error (ERR=1'b0), NZ6C3 asserts the RDY pin and clears the DV bit in the RWCS register. This indicates that the device is ready for the next access.

NOTE

Only the RDY pin as well as the DV and ERR bits within the RWCS provide read/write access status to the external development tool.

26.11.15.2 Block Write Access (Non-Burst Mode)

1. For a non-burst block write access, follow Steps 1, 2, and 3 outlined in [Section 26.11.15.1, “Single Write Access](#) to initialize the registers,” but using a value greater than one (0x1) for the RWCS[CNT] field.

2. The NZ6C3 module will then arbitrate for the system bus and transfer the first data value from the RWD register to the memory mapped address in the read/write access address register (RWA). When the transfer has completed without error (ERR = 0), the address from the RWA register is incremented to the next word size (specified in the SZ field) and the number from the CNT field is decremented. Nexus will then assert the RDY pin. This indicates that the device is ready for the next access.
3. Repeat step 3 in [Section 26.11.15.1, “Single Write Access”](#) until the internal CNT value is zero (0). When this occurs, the DV bit within the RWCS will be cleared to indicate the end of the block write access.

26.11.15.3 Block Write Access (Burst Mode)

1. For a burst block write access, follow Steps 1 and 2 outlined in [Section 26.11.15.1, “Single Write Access”](#) to initialize the registers, using a value of four (double-words) for the CNT field and a RWCS[SZ] field indicating 64-bit access.
2. Initialize the burst data buffer (read/write access data register) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus register Index of 0xA (see [Table 26-24](#)).
3. Repeat step 2 until all double-word values are written to the buffer.

NOTE

The data values must be shifted in 32-bits at a time lsb first (that is, double-word write = two word writes to the RWD).

4. The Nexus module will then arbitrate for the system bus and transfer the burst data values from the data buffer to the system bus beginning from the memory mapped address in the read/write access address register (RWA). For each access within the burst, the address from the RWA register is incremented to the next double-word size (specified in the SZ field) modulo the length of the burst, and the number from the CNT field is decremented.
5. When the entire burst transfer has completed without error (ERR = 0), NZ6C3 will then assert the RDY pin, and the DV bit within the RWCS will be cleared to indicate the end of the block write access.

NOTE

The actual RWA value as well as the CNT field within the RWCS are not changed when executing a block write access (burst or non-burst). The original values can be read by the external development tool at any time.

26.11.15.4 Single Read Access

1. Initialize the read/write access address register (RWA) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus register index of 0x9 (see [Table 26-24](#)). Configure as follows:
 - Read Address → 0xnwnnnnnn (read address)

2. Initialize the read/write access control/status register (RWCS) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus register index of 0x7 (see [Table 26-24](#)). Configure the bits as follows:
 - Access Control RWCS[AC] → 0b1 (to indicate start access)
 - Map Select RWCS[MAP] → 0b000 (primary memory map)
 - Access Priority RWCS[PR] → 0b00 (lowest priority)
 - Read/Write RWCS[RW] → 0b0 (read access)
 - Word Size RWCS[SZ] → 0b0xx (32-bit, 16-bit, 8-bit)
 - Access Count RWCS[CNT] → 0x0000 or 0x0001 (single access)

NOTE

Access Count (CNT) of 0x0000 or 0x0001 will perform a single access.

3. The NZ6C3 module will then arbitrate for the system bus and the read data will be transferred from the system bus to the RWD register. When the transfer is completed without error (ERR = 0), Nexus asserts the RDY pin and sets the DV bit in the RWCS register. This indicates that the device is ready for the next access.
4. The data can then be read from the read/write access data register (RWD) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus register index of 0xA (see [Table 26-24](#)).

NOTE

Only the RDY pin as well as the DV and ERR bits within the RWCS provide Read/Write Access status to the external development tool.

26.11.15.5 Block Read Access (Non-Burst Mode)

1. For a non-burst block read access, follow Steps 1 and 2 outlined in [Section 26.11.15.4, “Single Read Access”](#) to initialize the registers, but using a value greater than one (0x1) for the CNT field in the RWCS register.
2. The NZ6C3 module will then arbitrate for the system bus and the read data will be transferred from the system bus to the RWD register. When the transfer has completed without error (ERR=0b0), the address from the RWA register is incremented to the next word size (specified in the SZ field) and the number from the CNT field is decremented. Nexus will then assert the RDY pin. This indicates that the device is ready for the next access.
3. The data can then be read from the read/write access data register (RWD) through the access method outlined in [Section 26.11.10, “NZ6C3 Register Access via JTAG / OnCE,”](#) using the Nexus register index of 0xA (see [Table 26-24](#)).
4. Repeat steps 3 and 4 in [Section 26.11.15.4, “Single Read Access”](#) until the CNT value is zero (0). When this occurs, the DV bit within the RWCS is set to indicate the end of the block read access.

26.11.15.6 Block Read Access (Burst Mode)

5. For a burst block read access, follow Steps 1 and 2 outlined in [Section 26.11.15.4](#), “Single Read Access” to initialize the registers, using a value of four (double-words) for the CNT field and an RWCS[SZ] field indicating 64-bit access.
6. The NZ6C3 module will then arbitrate for the system bus and the burst read data will be transferred from the system bus to the data buffer (RWD register). For each access within the burst, the address from the RWA register is incremented to the next double-word (specified in the SZ field) and the number from the CNT field is decremented.
7. When the entire burst transfer has completed without error (ERR = 0), Nexus will then assert the RDY pin and the DV bit within the RWCS will be set to indicate the end of the block read access.
8. The data can then be read from the burst data buffer (read/write access data register) through the access method outlined in [Section 26.11.10](#), “NZ6C3 Register Access via JTAG / OnCE,” using the Nexus register index of 0xA (see [Table 26-24](#)).
9. Repeat step 3 until all double-word values are read from the buffer.

NOTE

The data values must be shifted out 32-bits at a time lsb first (that is, double-word read = two word reads from the RWD).

NOTE

The actual RWA value as well as the CNT field within the RWCS are not changed when executing a block read access (burst or non-burst). The original values can be read by the external development tool at any time.

26.11.15.7 Error Handling

The NZ6C3 module handles various error conditions as follows:

26.11.15.7.1 System Bus Read/Write Error

All address and data errors that occur on read/write accesses to the e200z6 system bus will return a transfer error. If this occurs:

1. The access is terminated without re-trying (AC bit is cleared).
2. The ERR bit in the RWCS register is set.
3. The error message is sent (TCODE = 8) indicating read/write error.

26.11.15.7.2 Access Termination

The following cases are defined for sequences of the read/write protocol that differ from those described in the above sections:

1. If the AC bit in the RWCS register is set to start read/write accesses and invalid values are loaded into the RWD and/or RWA, then a system bus access error may occur. This is handled as described above.

2. If a block access is in progress (all cycles not completed), and the RWCS register is written, then the original block access is terminated at the boundary of the nearest completed access.
 - a) If the RWCS is written with the AC bit set, the next read/write access will begin and the RWD can be written to/ read from.
 - b) If the RWCS is written with the AC bit cleared, the read/write access is terminated at the nearest completed access. This method can be used to break (early terminate) block accesses.

26.11.15.8 Read/Write Access Error Message

The read/write access error message is sent out when an system bus access error (read or write) has occurred.

Error information is messaged out in the following format:

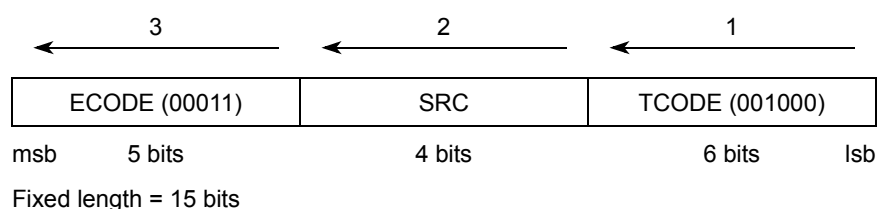


Figure 26-51. Error Message Format

26.11.16 Examples

The following are examples of program trace and data trace messages.

Table 26-39 illustrates an example indirect branch message with an 8 MDO / 2 MSEO configuration.

Note that T0 and S0 are the least significant bits where:

- Tx = TCODE number (fixed)
- Sx = Source processor (fixed)
- Ix = Number of instructions (variable)
- Ax = Unique portion of the address (variable)

Table 26-39. Indirect Branch Message Example (12 MDO / 2 MSEO)

Clock	MDO[11:0]												MSEO[1:0]		State
	11	10	9	8	7	6	5	4	3	2	1	0			
0	X	X	X	X	X	X	X	X	X	X	X	X	1	1	Idle (or end of last message)
1	I1	I0	S3	S2	S1	S0	T5	T4	T3	T2	T1	T0	0	0	Start Message
2	0	0	0	0	0	0	0	0	I5	I4	I3	I2	0	1	End Packet

Table 26-39. Indirect Branch Message Example (12 MDO / 2 MSEO) (continued)

Clock	MDO[11:0]												MSEO[1:0]		State
	11	10	9	8	7	6	5	4	3	2	1	0			
3	0	A10	A9	A8	A7	A6	A5	A4	A3	A2	A1	A0	1	1	End Packet/End Message
4	X	X	S3	S2	S1	S0	T5	T4	T3	T2	T1	T0	0	0	Start of Next Message

Table 26-40 illustrates an example of direct branch message with 12 MDO / 2 MSEO.

Note that T0 and I0 are the least significant bits where:

- Tx = TCODE number (fixed)
- Sx = Source processor (fixed)
- Ix = Number of instructions (variable)

Table 26-40. Direct Branch Message Example (12 MDO / 2 MSEO)

Clock	MDO[11:0]												MSEO[1:0]		State
	11	10	9	8	7	6	5	4	3	2	1	0			
0	X	X	X	X	X	X	X	X	X	X	X	X	1	1	Idle (or end of last message)
1	I1	I0	S3	S2	S1	S0	T5	T4	T3	T2	T1	T0	0	0	Start Message
2	0	0	0	0	0	0	0	0	0	0	I3	I2	1	1	End Packet/End Message
3	X	X	X	X	S1	S0	T5	T4	T3	T2	T1	T0	0	0	Start of Next Message

Table 26-41 an example data write message with 12 MDO / 2 MSEO configuration

Note that T0, A0, D0 are the least significant bits where:

- Tx = TCODE number (fixed)
- Sx = Source processor (fixed)
- Zx = Data size (fixed)
- Ax = Unique portion of the address (variable)
- Dx = Write data (variable - 8, 16 or 32-bit)

Table 26-41. Direct Write Message Example (12 MDO / 2 MSEO)

Clock	MDO[11:0]												MSEO[1:0]		State
	11	10	9	8	7	6	5	4	3	2	1	0			
0	X	X	X	X	X	X	X	X	X	X	X	X	1	1	Idle (or end of last message)
1	Z1	Z0	S3	S2	S1	S0	T5	T4	T3	T2	T1	T0	0	0	Start Message

Table 26-41. Direct Write Message Example (12 MDO / 2 MSEO) (continued)

Clock	MDO[11:0]												MSEO[1:0]		State
	11	10	9	8	7	6	5	4	3	2	1	0			
2	0	0	0	0	0	0	0	A3	A2	A1	A0	Z2	0	1	End Packet
3	X	X	X	X	D7	D6	D5	D4	D3	D2	D1	D0	1	1	End Packet/End Message

26.11.17 IEEE® 1149.1 (JTAG) RD/WR Sequences

This section contains example JTAG/OnCE sequences used to access resources.

26.11.17.1 JTAG Sequence for Accessing Internal Nexus Registers

Table 26-42. Accessing Internal Nexus3 Registers via JTAG/OnCE

Step #	TMS Pin	Description
1	1	IDLE → SELECT-DR_SCAN
2	0	SELECT-DR_SCAN → CAPTURE-DR (Nexus command register value loaded in shifter)
3	0	CAPTURE-DR → SHIFT-DR
4	0	(7) TCK clocks issued to shift in direction (rd/wr) bit and first 6 bits of Nexus reg. addr.
5	1	SHIFT-DR → EXIT1-DR (7th bit of Nexus reg. shifted in)
6	1	EXIT1-DR → UPDATE-DR (Nexus shifter is transferred to Nexus command register)
7	1	UPDATE-DR → SELECT-DR_SCAN
8	0	SELECT-DR_SCAN → CAPTURE-DR (Register value is transferred to Nexus shifter)
9	0	CAPTURE-DR → SHIFT-DR
10	0	(31) TCK clocks issued to transfer register value to TDO pin while shifting in TDI value
11	1	SHIFT-DR → EXIT1-DR (msb of value is shifted in/out of shifter)
12	1	EXIT1-DR → UPDATE -DR (if access is write, shifter is transferred to register)
13	0	UPDATE-DR → RUN-TEST/IDLE (transfer complete - Nexus controller to reg. select state)

26.11.17.2 JTAG Sequence for Read Access of Memory-Mapped Resources

Table 26-43. Accessing Memory-Mapped Resources (Reads)

Step #	TCLK clocks	Description
1	13	Nexus Command = write to read/write access address register (RWA)
2	37	Write RWA (initialize starting read address—data input on TDI)
3	13	Nexus Command = write to read/write control/status register (RWCS)

Table 26-43. Accessing Memory-Mapped Resources (Reads) (continued)

Step #	TCLK clocks	Description
4	37	Write RWCS (initialize read access mode and CNT value—data input on TDI)
5	—	Wait for falling edge of RDY pin
6	13	Nexus Command = read read/write access data register (RWD)
7	37	Read RWD (data output on TDO)
8	—	If CNT > 0, go back to Step #5

26.11.17.3 JTAG Sequence for Write Access of Memory-Mapped Resources

Table 26-44. Accessing Memory-Mapped Resources (Writes)

Step #	TCLK clocks	Description
1	13	Nexus Command = write to read/write access control/status register (RWCS)
2	37	Write RWCS (initialize write access mode and CNT value—data input on TDI)
3	13	Nexus Command = write to read/write address register (RWA)
4	37	Write RWA (initialize starting write address—data input on TDI)
5	13	Nexus Command = read read/write access data register (RWD)
6	37	Write RWD (data output on TDO)
7	—	Wait for falling edge of RDY pin
8	—	If CNT > 0, go back to Step #5

26.12 Nexus Crossbar eDMA Interface (NXDM) and Nexus Crossbar FlexRay Interface (NXFR)

The third module of the device NDI interface is the e200z6 eDMA Nexus module (NXDM) which is compliant with the Class 3 defined data trace feature of the IEEE®-ISTO 5001-2003 standard. The fourth module of the device NDI interface is the FlexRay module (NXFR) which is compliant with the Class 3 defined data trace feature of the IEEE®-ISTO 5001-2003 standard. The NXDM can be programmed to trace data accesses for the eDMA module on the system bus. The NXFR can be programmed to trace data accesses for the FlexRay module on the system bus. This eDMA module and FlexRay module as well as the Nexus module are components of the e200z6 platform. All output messages and register accesses are compliant with the protocol defined in the IEEE®-ISTO 5001 standard.

NOTE

Throughout this section references are made to the auxiliary port and its specific signals, such as MCKO, MSEO[1:0], MDO[12:0] and others. In actual use the device NPC module arbitrates the access of the single auxiliary port. To simplify the description of the function of the NXDM and FlexRay module, the interaction of the NPC is omitted and the behavior described as if the module has its own dedicated auxiliary port. The auxiliary port function is fully described in [Section 26.2, “External Signal Description.”](#)

26.12.1 Block Diagrams

Figure 26-52 shows a block diagram of the NXDM. The block diagram of the NXFR is the same.

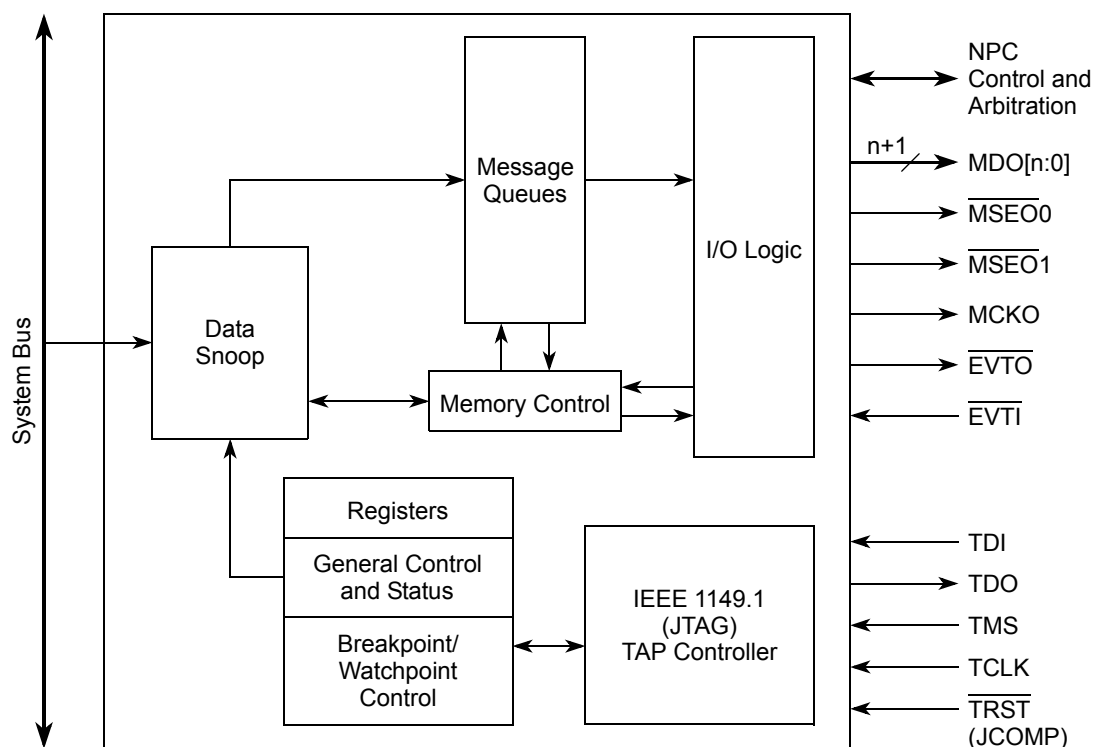


Figure 26-52. NXDM and NXFR Block Diagram

26.12.2 Features

Features include the following:

- Data trace via data write messaging (DWM) and data read messaging (DRM). This provides the capability for the development tool to trace reads and/or writes through the eDMA and FlexRay modules to (selected) internal memory resources.
- Watchpoint messaging via the auxiliary pins.
- Watchpoint trigger enable of data trace messaging (DTM).
- Registers for data trace, watchpoint generation, and watchpoint trigger.
- All features controllable and configurable via the JTAG port.
- Power management.
 - Low power design
 - Dynamic power management of FIFOs and control logic

26.13 External Signal Description

The NXDM (and NXFR) module uses the same pins and pin protocol as defined in [Section 26.2, “External Signal Description.”](#)

26.13.1 Rules for Output Messages

The NXDM (and NXFR) module observe the same rules for output messages as the NPC. See [Section 26.7.2.2.1, “Rules of Messages.”](#)

26.13.2 Auxiliary Port Arbitration

The NXDM (and NXFR) module arbitrate for the shared Nexus port. This arbitration is handled by the NPC (See [Section 26.5, “Nexus Port Controller \(NPC\)”](#)) based on prioritized requests from the NXDM, NXFR, and the other Nexus clients sharing the port.

26.14 NXDM and NXFR Programmers Model

This section describes the programmers model. Nexus registers are accessed using the JTAG port in compliance with IEEE® 1149.1. See [Chapter 25, “IEEE 1149.1 Test Access Port Controller \(JTAGC\)”](#) and [Section 26.7.2.3, “IEEE, 1149.1-2001 \(JTAG\) TAP,”](#) for details on Nexus register access.

26.14.1 NXDM and NXFR Nexus Register Map

Table 26-45. NXDM and NXFR Register Map

Nexus Register	Nexus Access Opcode	Read/Write	Read Address	Write Address
Client Select Control (CSC) ¹	0x1	R	0x02	–
Port Configuration Register (PCR) ¹	See NPC	R/W	–	–
Development Control 1 (DC1_n)	0x2	R/W	0x04	0x05
Development Control 2 (DC2_n)	0x3	R/W	0x05	0x06
Watchpoint Trigger (WT_n)	0xB	R/W	0x16	0x17
Data Trace Control (DTC_n)	0xD	R/W	0x1A	0x1B
Data Trace Start Address 1 (DTSA1_n)	0xE	R/W	0x1C	0x1D
Data Trace Start Address 2 (DTSA2_n)	0xF	R/W	0x1E	0x1F
Data Trace End Address 1 (DTEA1_n)	0x12	R/W	0x24	0x25
Data Trace End Address 2 (DTEA2_n)	0x13	R/W	0x26	0x27
Breakpoint/Watchpoint Control Register 1 (BWC1_n)	0x16	R/W	0x2C	0x2D
Breakpoint/Watchpoint Control Register 2 (BWC2_n)	0x17	R/W	0x2E	0x2F
Breakpoint/Watchpoint Address Register 1 (BWA1_n)	0x1E	R/W	0x3C	0x3D
Breakpoint/Watchpoint Address Register 2 (BWA2_n)	0x1F	R/W	0x3E	0x3F
Reserved	0x20–0x3F	–	0x40–0x7E	0x41–0x7F

¹ The CSC and PCR registers are shown in this table as part of the Nexus programmer’s model. They are only present at the top level Nexus3 controller (NPC), not in the NXDM or NXFR module. The device’s CSC register is readable through Nexus3; the PCR is shown for reference only.

26.14.2 NXDM and NXFR Registers

Detailed register definitions for the NXDM and NXFR implementation are as follows:

26.14.2.1 Development Control Registers (DC1 and DC2)

The development control registers control the basic development features of the NXDM and NXFR modules.

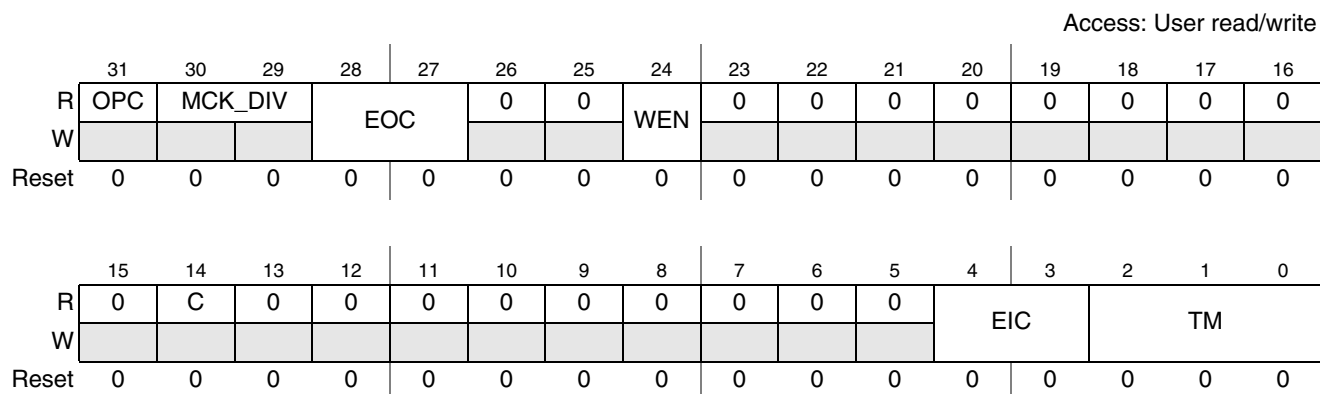


Figure 26-53. Development Control Register 1 (DC1)

Table 26-46. DC1 Field Description

Field	Description
31 OPC ¹	Output port mode control 0 Reduced port mode configuration 1 Full port mode configuration
30–29 MCK_DIV ¹	MCK_DIV - nexus message clock divide ratio 00 MCKO is 1x system bus clock freq. 01 MCKO is 1/2x system bus clock freq. 10 MCKO is 1/4x system bus clock freq. 11 MCKO is 1/8x system bus clock freq.
28–27 EOC	$\overline{\text{EVTO}}$ control 00 $\overline{\text{EVTO}}$ upon occurrence of watchpoint (internal or external) 01 $\overline{\text{EVTO}}$ upon entry into system-level debug mode (ipg_debug) 1X Reserved
26–25	Reserved, read as 0.
24 WEN	Watchpoint trace enable 0 Watchpoint messaging disabled 1 Watchpoint messaging enabled.
23–5	Reserved, read as 0.

Table 26-46. DC1 Field Description (continued)

Field	Description
4–3 EIC	$\overline{\text{EVTI}}$ control 00 $\overline{\text{EVTI}}$ for synchronization (Data Trace) 01 Reserved 10 $\overline{\text{EVTI}}$ disabled for this module 11 Reserved
2–0 TM	Trace mode 000 No Trace 1XX Reserved X1X Data trace enabled XX1 Reserved

¹ The output port mode control bit (OPC) and MCKO divide bits (MCK_DIV) are shown for clarity. These functions are controlled globally by the NPC port control register (PCR).

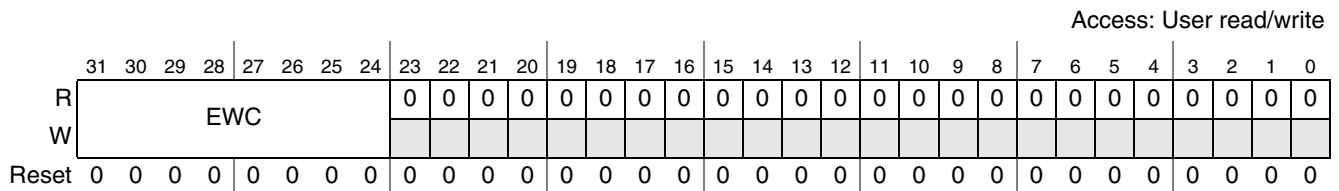


Figure 26-54. Development Control Register 2 (DC2)

Table 26-47. DC2 Field Description

Field	Description
31–24 EWC ¹	$\overline{\text{EVT0}}$ Watchpoint Configuration 00000000 = No watchpoints trigger $\overline{\text{EVT0}}$ 1XXXXXXXX = Reserved X1XXXXXXXX = Reserved XX1XXXXXX = Reserved XXX1XXXXX = Reserved XXXX1XXXX = Internal watchpoint #1 triggers $\overline{\text{EVT0}}$ XXXXX1XX = Internal watchpoint #2 triggers $\overline{\text{EVT0}}$ XXXXXX1X = Reserved XXXXXXX1 = Reserved
23–0	Reserved, read as 0.

¹ The EOC bits in DC1 must be programmed to trigger $\overline{\text{EVT0}}$ on watchpoint occurrence for the EWC bits to have any effect.

26.14.2.2 Watchpoint Trigger Register (WT)

The watchpoint trigger register allows the watchpoints defined internally to the NXDM and NXFR modules to trigger actions. These watchpoints can control data trace enable and disable. The WT bits can be used to produce an address related window for triggering trace messages.

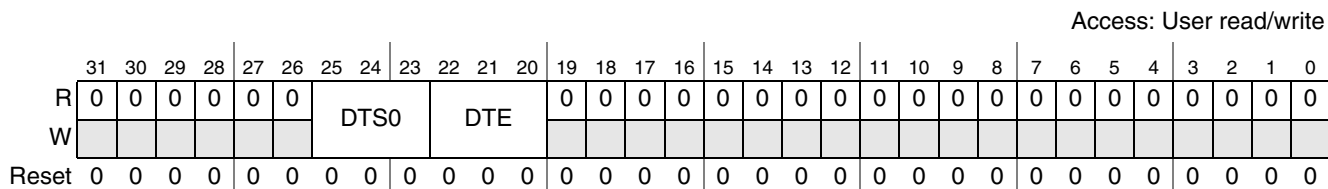


Figure 26-55. Watchpoint Trigger Register (WT)

Table 26-48. WT Field Description

Field	Description
31–26	Reserved, read as 0.
25–23 DTS	DTS - Data trace start control 000 Trigger disabled 001-100 Reserved 101 Use internal watchpoint #1 (BWA1 register) 110 Use internal watchpoint #2 (BWA2 register) 111 Reserved
22–20 DTE	DTE - Data trace end control 000 Trigger disabled 001-100 Reserved 101 Use internal watchpoint #1 (BWA1 register) 110 Use internal watchpoint #2 (BWA2 register) 111 Reserved
19–0	Reserved, read as 0.

NOTE

The WT bits will ONLY enable data trace if the tm bits within the development control register (DC) have not already been set to enable data trace.

26.14.2.3 Data Trace Control Register (DTC)

The data trace control register controls whether DTM Messages are restricted to reads, writes or both for a user programmable address range. There are two data trace channels controlled by the DTC for the NXDM and NXFR modules.

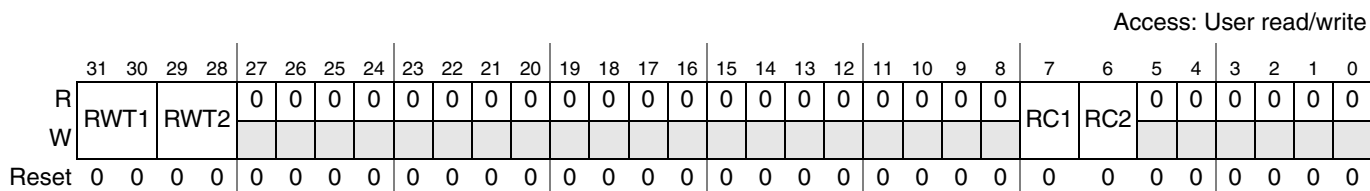


Figure 26-56. Data Trace Control Register (DTC)

Table 26-49. DTC Field Description

Bit	Description
31–30 RWT1	Read/write trace 1 00 No trace messages generated X1 Enable data read trace 1X Enable data write trace
29–28 RWT2	Read/write trace 2 00 No trace messages generated X1 Enable data read trace 1X Enable data write trace
27–8	Reserved, read as 0.
7 RC1	Range control 1 0 Condition trace on address within range (endpoints inclusive) 1 Condition trace on address outside of range (endpoints exclusive)
6 RC2	Range control 2 0 Condition trace on address within range (endpoints inclusive) 1 Condition trace on address outside of range (endpoints exclusive)
5–0	Reserved, read as 0.

26.14.2.4 Data Trace Start Address Registers 1 and 2 (DTSA1 and DTSA2)

The data trace start address registers define the start addresses for each trace channel.

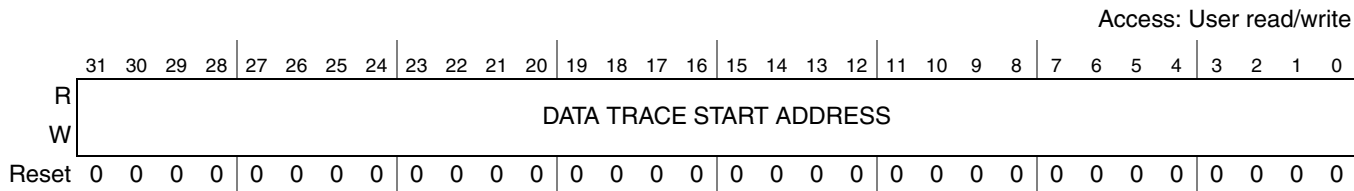


Figure 26-57. Data Trace Start Address Registers (DTSA1, DTSA2)

26.14.2.5 Data Trace End Address Registers 1 and 2 (DTEA1 and DTEA2)

The data trace end address registers define the end addresses for each trace channel.

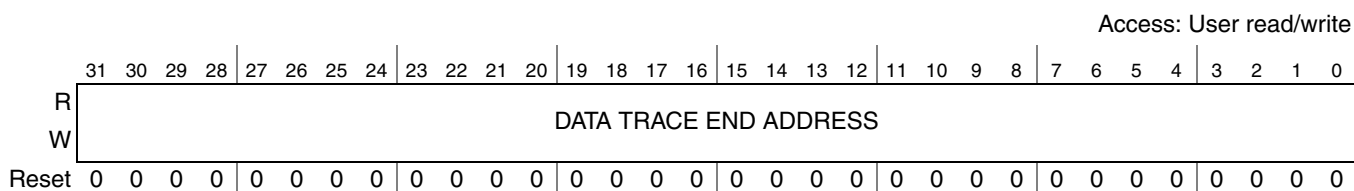


Figure 26-58. Data Trace Start Address Registers (DTEA1, DTEA2)

Table 26-50 below illustrates the range that will be selected for data trace for various cases of DTSA being less than, greater than, or equal to DTEA.

Table 26-50. Data Trace - Address Range Options

Programmed Values	Range Control Bit Value	Range Selected
DTSA < or = DTEA	0	DTSA-> <-DTEA
DTSA < or = DTEA	1	<- DTSA DTEA ->
DTSA > DTEA	N/A	Invalid range, no trace

NOTE

DTSA must be less than (or equal to) DTEA in order to guarantee correct data write/read traces. When the range control bit is 0 (internal range), accesses to DTSA and DTEA addresses will be traced. When the range control bit is 1 (external range), accesses to DTSA and DTEA will not be traced.

26.14.2.6 Breakpoint / Watchpoint Control Register 1 (BWC1)

Breakpoint/watchpoint control register 1 controls attributes for generation of NXDM and NXFR watchpoint number 1.

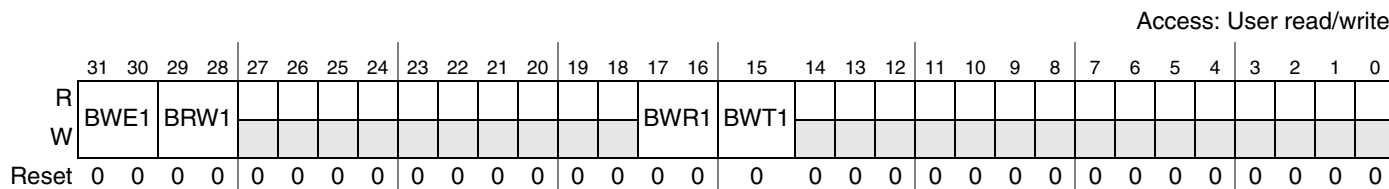


Figure 26-59. Break / Watchpoint Control Register 1 (BWC1)

Table 26-51. BWC1 Field Description

Field	Description
31–30 BWE1	Breakpoint/watchpoint #1 enable 00 Internal Nexus watchpoint #1 disabled 01-10 Reserved 11 Internal Nexus watchpoint #1 enabled
29–28 BRW1	Breakpoint/watchpoint #1 read/write select 00 Watchpoint #1 hit on read accesses 01 Watchpoint #1 hit on write accesses 10 Watchpoint #1 on read or write accesses 11 Reserved
27–18	Reserved, read as 0.
17–16 BWR1	Breakpoint/watchpoint #1 register compare 00 No register compare (same as BWC1[31:30] = 2'b00) 01 Reserved 10 Compare with BWA1 value 11 Reserved

Table 26-51. BWC1 Field Description (continued)

Field	Description
15 BWT1	Breakpoint/watchpoint #1 type 0 Reserved 1 Watchpoint #1 on data accesses
14–0	Reserved, read as 0.

26.14.2.7 Breakpoint / Watchpoint Control Register 2 (BWC2)

Breakpoint/watchpoint control register2 controls attributes for generation of NXDM and NXFR watchpoint number 2.

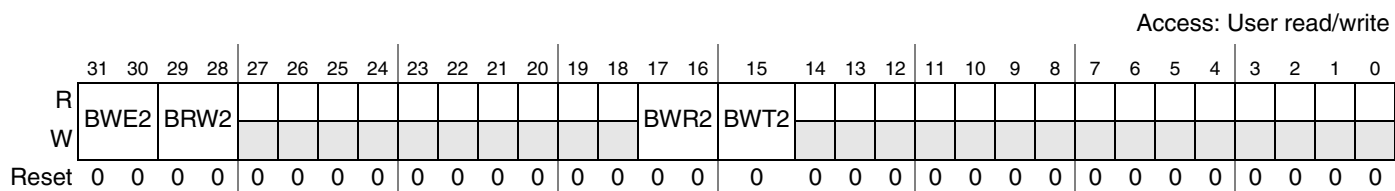


Figure 26-60. Break / Watchpoint Control Register 2 (BWC2)

Table 26-52. BWC2 Field Description

Field	Description
31–30 BWE2	Breakpoint/watchpoint #2 enable 00 Internal Nexus watchpoint #2 disabled 01–10 Reserved 11 Internal Nexus watchpoint #2 enabled
29–28 BRW2	Breakpoint/watchpoint #2 read/write select 00 Watchpoint #2 hit on read accesses 01 Watchpoint #2 hit on write accesses 10 Watchpoint #2 on read or write accesses 11 Reserved
27–18	Reserved, read as 0.
17–16 BWR2	Breakpoint/watchpoint #2 register compare 00 No register compare (same as BWC1[31:30] = 2'b00) 01 Reserved 10 Compare with BWA2 value 11 Reserved
15 BWT2	Breakpoint/watchpoint #2 Type 0 Reserved 1 Watchpoint #2 on data accesses
14–0	Reserved, read as 0.

26.14.2.8 Breakpoint/Watchpoint Address Registers 1 and 2 (BWA1 and BWA2)

The breakpoint/watchpoint address registers are compared with bus addresses in order to generate internal watchpoints.

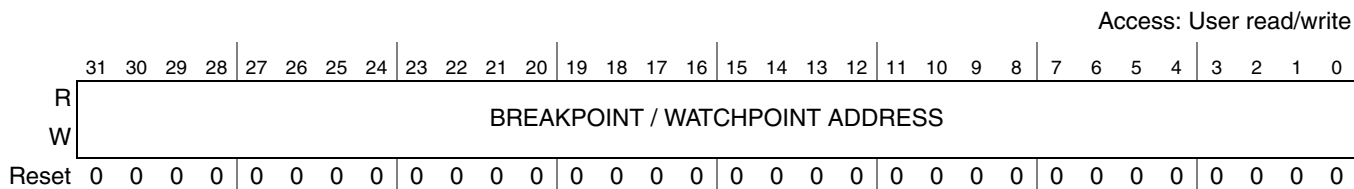


Figure 26-61. Breakpoint / Watchpoint Address Registers (BWA1, BWA2)

26.14.2.9 Unimplemented Registers

Unimplemented registers are those with client select and index value combinations other than those listed in [Table 26-45](#). For unimplemented registers, the NXDM and NXFR modules will drive TDO to zero during the “SHIFT-DR” state. It will also transmit an error message with the invalid access opcode encoding.

26.14.2.10 Programming Considerations (RESET)

If Nexus3 register configuration is to occur during system reset (as opposed to debug mode), all NXDM configuration should be completed between the negation of JCOMP and system reset de-assertion, after the JTAG DID Register has been read by the tool.

26.14.2.11 IEEE® 1149.1 (JTAG) Test Access Port

The NXDM and NXFR modules uses the IEEE® 1149.1 TAP controller for accessing Nexus resources. The JTAG signals themselves are shared by all TAP controllers on the device. Refer to [Chapter 25, “IEEE 1149.1 Test Access Port Controller \(JTAGC\),”](#) for more information on the JTAG interface.

The NXDM and NXFR modules implements a 4-bit instruction register (IR). The valid instructions and method for register access are outlined in [Section 26.7.2.3, “IEEE, 1149.1-2001 \(JTAG\) TAP.”](#)

26.14.2.11.1 NXDM and NXFR JTAG DID Register

This JTAG DID register that is included in the NXDM and NXFR modules provides key development attributes to the development tool concerning the NXDM and NXFR blocks. The register is accessed through the standard JTAG IR/DR paths. See [Chapter 24, “Voltage Regulator Controller \(VRC\) and POR Module.”](#)

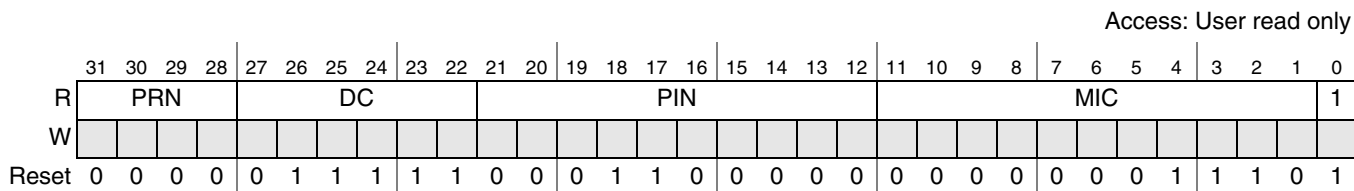


Figure 26-62. NXDM and NXFR JTAG DID Register

Table 26-53. NXDM and NXFR JTAG DID Field Descriptions

Field	Description
31–28 PRN ¹	Embedded part revision number (0x0)
27–22 DC	Freescale design center ID number (0x1F)
21–12 PIN	NXDM and NXFR module part identification number, defines the features set. (0x60)
11–1 MIC	Manufacturer identity code 0x00E Freescale
0	Fixed per JTAG 1149.1 1 Always set

¹ The revision number is initially 0 and could change in the future.

26.14.2.11.2 Enabling the NXDM and NXFR TAP Controllers

Assertion of a power-on-reset signal or assertion of the JCOMP pin resets all TAP controllers on the device. Upon exit from the test-logic-reset state, the IR value is loaded with the JTAG DID. When the NXDM or NXFR TAP is accessed, this information will help the development tool obtain information about the Nexus module it is accessing, such as version, sequence, feature set, and so forth.

26.14.2.11.3 NXDM and NXFR Register Access via JTAG

Access to Nexus register resources is enabled by loading a single instruction (NEXUS_ACCESS) into the JTAG Instruction Register (IR). This IR is part of the IEEE® 1149.1 TAP controller within the NXDM and NXFR modules. See [Section 25.4.4, “JTAGC Instructions.”](#)

Table 26-54. JTAG IR Values for ACCESS_AUX_TAP_DMA and ACCESS_AUX_TAP_NXFR

IR[3:0]	Usable for NEXUS Access?	JTAG Instruction
0x0 ¹	YES	Recommended for NEXUS access
0x1–0x7	NO	Reserved for future NXDM and NXFR use.
0x8–0xD	YES	Not currently implemented
0xE	NO	JTAG DID (NXDM and NXFR)
0xF	NO	BYPASS (NXDM and NXFR)

¹ It is recommended to use IR[3:0] = 0x0 for “ACCESS_AUX_TAP_DMA” and IR[3:0] = 0x??? for “ACCESS_AUX_TAP_NXFR.”

Once the JTAG NEXUS_ACCESS instruction has been loaded, the JTAG port allows tool/target communications with all Nexus registers according to the map in [Table 26-45](#).

Reading/writing of a Nexus register then requires two (2) passes through the data-scan (DR) path of the JTAG state machine (see [Chapter 25, “IEEE 1149.1 Test Access Port Controller \(JTAGC\)”](#)).

1. The first pass through the DR selects the Nexus register to be accessed by providing an index (see [Table 26-45](#)), and the direction (read/write). This is achieved by loading an 8-bit value into the JTAG data register (DR). This register has the following format:

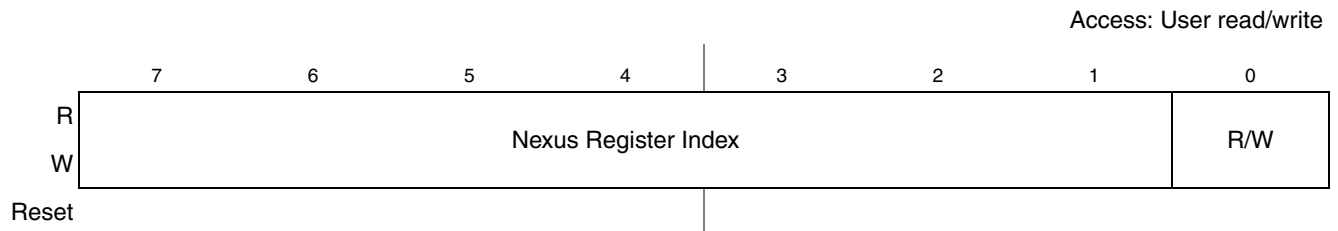


Figure 26-63. JTAG DR for NEXUS Register Access

Table 26-55. DR Read/Write Encoding

Nexus Register Index	
Read/Write (R/W)	0 Read 1 Write

2. The second pass through the DR then shifts the data in or out of the JTAG port, lsb first.
 - a) During a read access, data is latched from the selected Nexus register when the JTAG state machine passes through the capture-DR state.
 - b) During a write access, data is latched into the selected Nexus register when the JTAG state machine passes through the update-DR state.

26.14.3 Functional Description

26.14.4 Enabling NXDM and NXFR Operation

The NXDM (and NXFR) module is enabled by loading a single instruction (`ACCESS_AUX_TAP_DMA` or `ACCESS_AUX_TAP_NXFR` as shown in [Table 26-4](#)) into the JTAG instruction register (IR), and then loading the corresponding OnCE OCMD register with the `NEXUS_ACCESS` instruction (refer to [Table 26-5](#)). Once enabled, the module will be ready to accept control input via the JTAG pins.

The Nexus module is disabled when the JTAG state machine reaches the test-logic-reset state. This state can be reached by the assertion of the JCOMP pin or by cycling through the state machine using the TMS pin. The Nexus module will also be disabled if a power-on reset (POR) event occurs.

If the NXDM (and NXFR) module is disabled, no trace output will be provided, and the module will disable (drive inactive) auxiliary port output pins (`MDO[11:0]`, `MSEO[1:0]`, `MCKO`). Nexus registers will not be available for reads or writes.

26.14.5 TCODEs Supported by NXDM and NXFR

The NXDM and NXFR pins allow for flexible transfer operations via public messages. A TCODE defines the transfer format, the number and/or size of the packets to be transferred, and the purpose of each packet. The IEEE®-ISTO 5001-2003 standard defines a set of public messages. The NXDM and NXFR blocks currently support the public TCODEs seen in [Table 26-56](#).

Table 26-56. Public TCODEs Supported

Message Name	Packet Size (bits)		Packet Name	Packet Type	Packet Description
	Min	Max			
Data Trace - Data Write Message	6	6	TCODE	Fixed	TCODE number = 5
	4	4	SRC	Fixed	source processor identifier (multiple Nexus configuration)
	3	3	DSZ	Fixed	data size (refer to Table 26-58)
	1	32	U-ADDR	Variable	unique portion of the data write value
	1	64	DATA	Variable	data write value
Data Trace - Data Read Message	6	6	TCODE	Fixed	TCODE number = 6
	4	4	SRC	Fixed	source processor identifier (multiple Nexus configuration)
	3	3	DSZ	Fixed	data size (refer to Table 26-58)
	1	32	U-ADDR	Variable	unique portion of the data read value
	1	64	DATA	Variable	data read value
Error Message	6	6	TCODE	Fixed	TCODE number = 8
	4	4	SRC	Fixed	source processor identifier (multiple Nexus configuration)
	5	5	ECODE	Fixed	error code (refer to Table 26-57)
Data Trace - Data Write Message w/ Sync	6	6	TCODE	Fixed	TCODE number = 13 (0xD)
	4	4	SRC	Fixed	source processor identifier (multiple Nexus configuration)
	3	3	DSZ	Fixed	data size (refer to Table 26-58)
	1	32	F-ADDR	Variable	full access address (leading zero (0) truncated)
	1	64	DATA	Variable	data write value
Data Trace - Data Read Message w/ Sync	6	6	TCODE	Fixed	TCODE number = 14 (0xE)
	4	4	SRC	Fixed	source processor identifier (multiple Nexus configuration)
	3	3	DSZ	Fixed	data size (refer to Table 26-58)
	1	32	F-ADDR	Variable	full access address (leading zero (0) truncated)
	1	64	DATA	Variable	data read value

Table 26-56. Public TCODEs Supported (continued)

Message Name	Packet Size (bits)		Packet Name	Packet Type	Packet Description
	Min	Max			
Watchpoint Message	6	6	TCODE	Fixed	TCODE number = 15 (0xF)
	4	4	SRC	Fixed	source processor identifier (multiple Nexus configuration)
	4	4	WPHIT	Fixed	# indicating watchpoint sources

Table 26-57. Error Code (ECODE) Encoding (TCODE = 8)

Error Code (ECODE)	Description
00000	Reserved
00001	Reserved
00010	Data Trace overrun
00011	Reserved
00100	Reserved
00101	Invalid access opcode (Nexus Register unimplemented)
00110	Watchpoint overrun
00111	Reserved
01000	Data Trace and Watchpoint overrun
01001–11111	Reserved

Table 26-58. Data Trace Size (DSZ) Encodings (TCODE = 5,6,13,14)

DTM Size Encoding	Transfer Size
000	Byte
001	Halfword (2 bytes)
010	Word (4 bytes)
011	Doubleword (8 bytes)
100–111	Reserved

26.14.5.1 Data Trace

This section deals with the data trace mechanism supported by the NXDM and NXFR modules. Data trace is implemented via data write messaging (DWM) and data read messaging (DRM).

26.14.5.2 Data Trace Messaging (DTM)

NXDM and NXFR data trace messaging is accomplished by snooping the NXDM and NXFR data bus, and storing the information for qualifying accesses (based on enabled features and matching target addresses). The NXDM (and NXFR) module traces all data access that meet the selected range and attributes.

NOTE

Data trace is ONLY performed on DMA or FlexRay accesses to the system bus.

26.14.5.3 DTM Message Formats

The NXDM (and NXFR) block supports five types of DTM Messages — data write, data read, data write synchronization, data read synchronization and error messages.

26.14.5.3.1 Data Write and Data Read Messages

The data write and data read messages contain the data write/read value and the address of the write/read access, relative to the previous data trace message. Data write message and data read message information is messaged out in the following format:

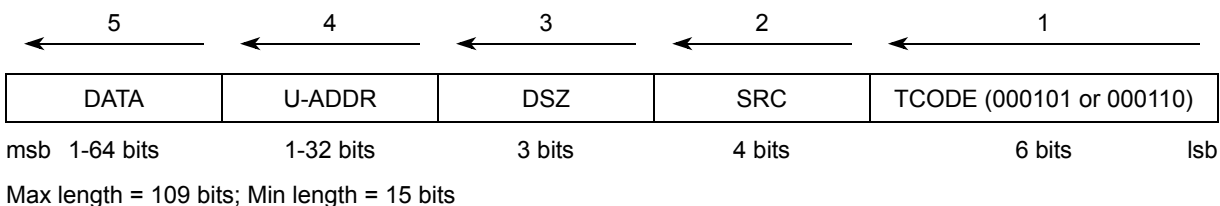


Figure 26-64. Data Write/Read Message Format

26.14.5.3.2 DTM Overflow Error Messages

An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard incoming messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied.

If only a data trace message attempts to enter the queue while it is being emptied, the error message will incorporate the data trace only error encoding (00010). If a watchpoint also attempts to be queued while the FIFO is being emptied, then the error message will incorporate error encoding (01000).

Error information is messaged out in the following format:

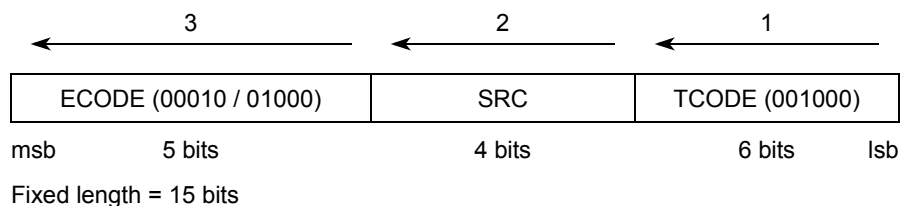


Figure 26-65. Error Message Format

26.14.5.3.3 Data Trace Synchronization Messages

A data trace write/read w/ sync. message is messaged via the auxiliary port (provided data trace is enabled) for the following conditions (see [Table 26-59](#)):

- Initial data trace message upon exit from system reset or whenever data trace is enabled will be a synchronization message.
- Upon returning from a low power state, the first data trace message will be a synchronization message.
- Upon returning from debug mode, the first data trace message will be a synchronization message.
- After occurrence of queue overrun (can be caused by any trace message), the first data trace message will be a synchronization message.
- After the periodic data trace counter has expired indicating 255 *without-sync* data trace messages have occurred since the last *with-sync* message occurred.
- Upon assertion of the Event In ($\overline{\text{EVTI}}$) pin, the first data trace message will be a synchronization message if the eic bits of the dc register have enabled this feature.
- Upon data trace write/read after the previous dtm message was lost due to an attempted access to a secure memory location.
- Upon data trace write/read after the previous dtm message was lost due to a collision entering the fifo between the dtm message and any of the following: error message, or watchpoint message.

Data trace synchronization messages provide the full address (without leading zeros) and insure that development tools fully synchronize with data trace regularly. Synchronization messages provide a reference address for subsequent DTMs, in which only the unique portion of the data trace address is transmitted. The format for data trace write/read w/ sync. messages is as follows:

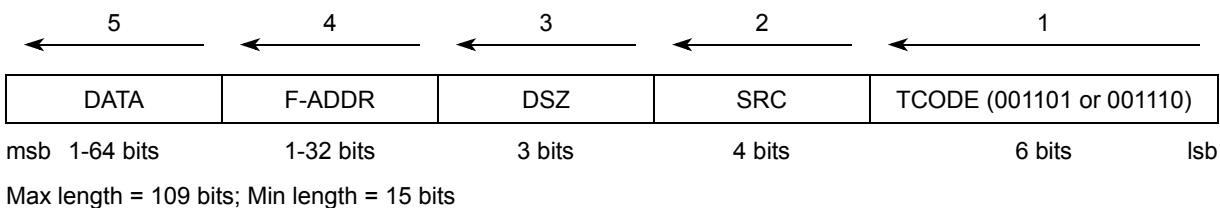


Figure 26-66. Data Write/Read w/ Sync Message Format

Exception conditions that result in data trace synchronization are summarized in [Table 26-59](#), “Data Trace Exception Summary.”

Table 26-59. Data Trace Exception Summary

Exception Condition	Exception Handling
System Reset Negation	At the negation of JTAG reset (JCOMP), queue pointers, counters, state machines, and registers within the NXDM and NXFR module are reset. If data trace is enabled, the first data trace message is a data write/read w/ sync. message.
Data Trace Enabled	The first data trace message (after data trace has been enabled) is a synchronization message.
Exit from Low Power/Debug	Upon exit from a low power mode or debug mode the next data trace message will be converted to a data write/read w/ sync. message.
Queue Overrun	An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied. The next DTM message in the queue will be a data write/read w/ sync. message.
Periodic Data Trace Synchronization	A forced synchronization occurs periodically after 255 data trace messages have been queued. A data write/read w/ sync. message is queued. The periodic data trace message counter then resets.
Event In	if the nexus module is enabled, an \overline{evti} assertion initiates a data trace write/read w/ sync. message upon the next data write/read (if data trace is enabled and the eic bits of the dc register have enabled this feature).
Attempted Access to Secure Memory	Any attempted read or write to secure memory locations will temporarily disable data trace & cause the corresponding DTM to be lost. A subsequent read/write will queue a data trace read/write w/ sync. message.
Collision Priority	All messages have the following priority: Error -> WPM -> DTM. A DTM message which attempts to enter the queue at the same time as an error message, or watchpoint message will be lost. A subsequent read/write will queue a data trace read/write w/ sync. message.

26.14.5.4 DTM Operation

26.14.5.4.1 Enabling Data Trace Messaging

Data trace messaging can be enabled in one of two ways.

- Setting the DC1[TM] field to enable data trace
- Using the WT[DTS] field to enable data trace on watchpoint hits

26.14.5.4.2 DTM Queueing

NXDM (and NXFR) implements a programmable depth queue for queuing all messages. Messages that enter the queue are transmitted via the auxiliary pins in the order in which they are queued.

NOTE

If multiple trace messages need to be queued at the same time, watchpoint messages will have the highest priority (WPM -> DTM).

26.14.5.4.3 Relative Addressing

The relative address feature is compliant with IEEE®-ISTO Nexus 5001-2003 and is designed to reduce the number of bits transmitted for addresses of data trace messages. Relative addressing is the same as described for the NZ6C3 in [Section 26.11.12.3.2, “Relative Addressing.”](#)

26.14.5.4.4 Data Trace Windowing

Data write/read messages are enabled via the RWT1(2) field in the data trace control register (DTC) for each DTM channel. Data trace windowing is achieved via the address range defined by the DTEA and DTSA registers and by the RC1(2) field in the DTC. All eDMA or FlexRay initiated read/write accesses that fall inside or outside these address ranges, as programmed, are candidates to be traced.

26.14.5.4.5 System Bus Cycle Special Cases

Table 26-60. System Bus Cycle Special Cases

Special Case	Action
System bus cycle aborted (DABORT asserted)	Cycle ignored
System bus cycle with data error	Data Trace Message discarded
System bus cycle completed without error	Cycle captured and transmitted
System bus cycle is an instruction fetch	Cycle ignored

26.14.5.5 Data Trace Timing Diagrams (8 MDO configuration)

Data trace timing for the NXDM and NXFR is the same as for the NZ6C3. See [Section 26.11.13.4, “Data Trace Timing Diagrams \(8 MDO Configuration\).”](#)

26.14.6 Watchpoint Support

The NXDM (and NXFR) module provides watchpoint messaging via the auxiliary pins, as defined by IEEE®-ISTO 5001-2003.

Watchpoint messages can be generated using the NXDM and NXFR defined internal watchpoints.

26.14.6.1 Watchpoint Messaging

Enabling watchpoint messaging is accomplished by setting the watchpoint messaging enable bit, DC1[WEN]. Using the BWC1 and BWC2 registers, two independently controlled internal watchpoints can be initialized. When a DMA or FlexRay access address matches on BWA1 or BWA2, a watchpoint message will be transmitted.

The Nexus module provides watchpoint messaging using the TCODE. When either of the two possible watchpoint sources asserts, a message will be sent to the queue to be messaged out. This message indicates the watchpoint number.

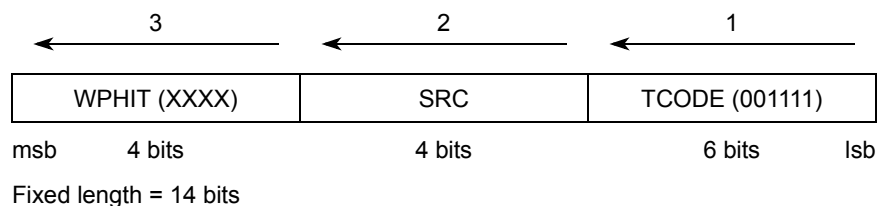


Figure 26-67. Watchpoint Message Format

Table 26-61. Watchpoint Source Description

Watchpoint Source (4 bits)	Watchpoint Description
XXX1	Reserved
XX1X	Reserved
X1XX	Internal Watchpoint #1 (BWA1 match)
1XXX	Internal Watchpoint #2 (BWA2 match)

26.14.6.2 Watchpoint Error Message

An error message occurs when a new message cannot be queued due to the message queue being full. The FIFO will discard messages until it has completely emptied the queue. Once emptied, an error message will be queued. The error encoding will indicate which types of messages attempted to be queued while the FIFO was being emptied.

If only a watchpoint message attempts to enter the queue while it is being emptied, the error message will incorporate the watchpoint only error encoding (00110). If a data trace message also attempts to enter the queue while it is being emptied, the error message will incorporate error encoding (01000).

Error information is messaged out in the following format (see [Figure 26-68](#)).

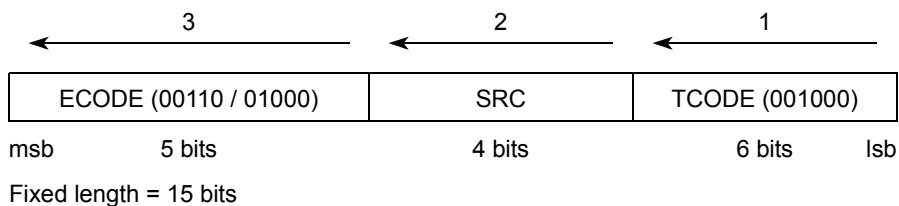


Figure 26-68. Error Message Format

26.15 Revision History

Table 26-62. Revision History Table

Rev. No.	Date	Sections	Substantial Change(s)
Rev. 1	1/19/2007	Throughout	01/07: Public release of document.



Appendix A

MPC5567 Register Map

Table A-1. Module Base Addresses

Module	Base Address	Page
Peripheral Bridge A (PBRIDGEA)	0xC3F0_0000	Page A-2
Frequency Modulated Phase-Locked Loop (FMPLL)	0xC3F8_0000	Page A-2
External Bus Interface (EBI)	0xC3F8_4000	Page A-2
Flash Module and Flash Bus Interface Unit (FLASH)	0xC3F8_8000	Page A-3
System Integration Unit (SIU)	0xC3F9_0000	Page A-3
Enhanced Modular Input/Output Subsystem (eMIOS)	0xC3FA_0000	Page A-26
Peripheral Bridge B (PBRIDGEB)	0xFFFF0_0000	Page A-31
System Bus Crossbar Switch (XBAR)	0xFFFF0_4000	Page A-32
Error Correction Status Module (ECSM)	0xFFFF4_0000	Page A-33
Enhanced Direct Memory Access (eDMA)	0xFFFF4_4000	Page A-34
Interrupt Controller (INTC)	0xFFFF4_8000	Page A-38
Fast Ethernet Controller (FEC)	0xFFFF4_C000	Page A-58
Enhanced Queued Analog-to-Digital Converter (eQADC)	0xFFFF8_0000	Page A-48
Deserial / Serial Peripheral Interface (DSPIx)	0xFFFF9_4000 (DSPI B) 0xFFFF9_8000 (DSPI C) 0xFFFF9_C000 (DSPI D)	Page A-52
Enhanced Serial Communication Interface (eSCIx)	0xFFFFB_0000 (A) 0xFFFFB_4000 (B)	Page A-54
FlexCAN2 Controller Area Network (CANx)	0xFFFFC_0000 (FlexCAN A) 0xFFFFC_4000 (FlexCAN B) 0xFFFFC_8000 (FlexCAN C) 0xFFFFC_C000 (FlexCAN D) 0xFFFFD_0000 (FlexCAN E)	Page A-54
FlexRay Module	0xFFFFE_0000	Page A-54
Boot Assist Module (BAM)	0xFFFFF_C000	Page A-58

Table A-2. MPC5567 Detailed Register Map

Register Description	Register Name	Used Size	Address	Reference
Peripheral Bridge A (PBRIDGEA)			0xC3F0_0000	Chapter 5, "Peripheral Bridge (PBRIDGE_A, PBRIDGE_B)"
Peripheral bridge A master privilege control register	PBRIDGEA_MPCR	32-bit	Base + 0x0000	
Reserved	—	—	Base + (0x0004-0x001F)	
Peripheral bridge A peripheral access control register 0	PBRIDGEA_PACR0	32-bit	Base + 0x0020	
Reserved	—	—	Base + (0x0024-0x003F)	
Peripheral bridge A off-platform peripheral access control register 0	PBRIDGEA_OPACR0	32-bit	Base + 0x0040	
Peripheral bridge A off-platform peripheral access control register 1	PBRIDGEA_OPACR1	32-bit	Base + 0x0044	
Peripheral bridge A off-platform peripheral access control register 2	PBRIDGEA_OPACR2	32-bit	Base + 0x0048	
Reserved	—	—	Base + (0x004C-0xC3F7_FFFF)	
Frequency Modulated Phase-Locked Loop (FMPLL)			0xC3F8_0000	Chapter 11, "Frequency Modulated Phase Locked Loop and System Clocks (FMPLL)"
Synthesizer control register	FMPLL_SYNCR	32-bit	Base + 0x0000	
Synthesizer status register	FMPLL_SYNSR	32-bit	Base + 0x0004	
Reserved	—	—	(Base + 0x0008)-0xC3F8_3FFF	
External Bus Interface (EBI)			0xC3F8_4000	Chapter 12, "External Bus Interface (EBI)"
Module configuration register	EBI_MCR	32-bit	Base + 0x0000	
Reserved	—	—	Base + (0x0004-0x0007)	
Transfer error status register	EBI_TESR	32-bit	Base + 0x0008	
Bus monitor control register	EBI_BMCR	32-bit	Base + 0x000C	
Base register bank 0	EBI_BR0	32-bit	Base + 0x0010	
Option register bank 0	EBI_OR0	32-bit	Base + 0x0014	
Base register bank 1	EBI_BR1	32-bit	Base + 0x0018	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Option register bank 1	EBI_OR1	32-bit	Base + 0x001C	
Base register bank 2	EBI_BR2	32-bit	Base + 0x0020	
Option register bank 2	EBI_OR2	32-bit	Base + 0x0024	
Base register bank 3	EBI_BR3	32-bit	Base + 0x0028	
Option register bank 3	EBI_OR3	32-bit	Base + 0x002C	
EBI Calibration Base Register Bank 0	EBI_CAL_BR0	32-bit	Base + 0x0040	
EBI Calibration Option Register Bank 0	EBI_CAL_OR0	32-bit	Base + 0x0044	
EBI Calibration Base Register Bank 1	EBI_CAL_BR1	32-bit	Base + 0x0048	
EBI Calibration Option Register Bank 1	EBI_CAL_OR1	32-bit	Base + 0x004C	
EBI Calibration Base Register Bank 2	EBI_CAL_BR2	32-bit	Base + 0x0050	
EBI Calibration Option Register Bank 2	EBI_CAL_OR2	32-bit	Base + 0x0054	
EBI Calibration Base Register Bank 3	EBI_CAL_BR3	32-bit	Base + 0x0058	
EBI Calibration Option Register Bank 3	EBI_CAL_OR3	32-bit	Base + 0x005C	
Flash Module and Flash Bus Interface Unit (FLASH)			0xC3F8_8000	Chapter 13, "Flash Memory"
Module configuration register	FLASH_MCR	32-bit	Base + 0x0000	
Low/mid address space block locking register	FLASH_LMLR	32-bit	Base + 0x0004	
High address space block locking register	FLASH_HLR	32-bit	Base + 0x0008	
Secondary low/mid address space block locking register	FLASH_SLMLR	32-bit	Base + 0x000C	
Low/mid address block select register	FLASH_LMSR	32-bit	Base + 0x0010	
High address space block select register	FLASH_HSR	32-bit	Base + 0x0014	
Address register	FLASH_AR	32-bit	Base + 0x0018	
Bus interface unit control register	FLASH_BIUCR	32-bit	Base + 0x001C	
Bus interface unit access protection register	FLASH_BIUAPR	32-bit	Base + 0x0020	
Reserved	—	—	(Base + 0x0024)- 0xC3F8_FFFF)	
System Integration Unit (SIU)			0xC3F9_0000	Chapter 6, "System Integration Unit (SIU)"
MCU ID Register	SIU_MIDR		Base + 0x0004	
Reserved	—	—	Base + (0x0008-0x000B)	
Reset status register	SIU_RSR		Base + 0x000C	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
System reset control register	SIU_SRCR		Base + 0x0010	
External interrupt status register	SIU_EISR		Base + 0x0014	
DMA/Interrupt request enable register	SIU_DIRER		Base + 0x0018	
DMA/Interrupt request status register	SIU_DIRSR		Base + 0x001C	
Overrun status register	SIU_OSR		Base + 0x0020	
Overrun request enable register	SIU_ORER		Base + 0x0024	
IRQ rising-edge event enable register	SIU_IREER		Base + 0x0028	
IRQ falling-edge event enable register	SIU_IFEER		Base + 0x002C	
IRQ digital filter register	SIU_IDFR		Base + 0x0030	
Reserved	—	—	Base + (0x0034-0x003F)	
Pad configuration register 0 ($\overline{CS0}$)	SIU_PCR0	16-bits	Base + 0x0040	
Pad configuration register 1 ($\overline{CS1}$)	SIU_PCR1	16-bits	Base + 0x0042	
Pad configuration register 2 ($\overline{CS2}$)	SIU_PCR2	16-bits	Base + 0x0044	
Pad configuration register 3 ($\overline{CS3}$)	SIU_PCR3	16-bits	Base + 0x0046	
Pad configuration register 4 (ADDR8)	SIU_PCR4	16-bits	Base + 0x0048	
Pad configuration register 5 (ADDR9)	SIU_PCR5	16-bits	Base + 0x004A	
Pad configuration register 6 (ADDR10)	SIU_PCR6	16-bits	Base + 0x004C	
Pad configuration register 7 (ADDR11)	SIU_PCR7	16-bits	Base + 0x004E	
Pad configuration register 8 (ADDR12)	SIU_PCR8	16-bits	Base + 0x0050	
Pad configuration register 9 (ADDR13)	SIU_PCR9	16-bits	Base + 0x0052	
Pad configuration register 10 (ADDR14)	SIU_PCR10	16-bits	Base + 0x0054	
Pad configuration register 11 (ADDR15)	SIU_PCR11	16-bits	Base + 0x0056	
Pad configuration register 12 (ADDR16)	SIU_PCR12	16-bits	Base + 0x0058	
Pad configuration register 13 (ADDR17)	SIU_PCR13	16-bits	Base + 0x005A	
Pad configuration register 14 (ADDR18)	SIU_PCR14	16-bits	Base + 0x005C	
Pad configuration register 15 (ADDR19)	SIU_PCR15	16-bits	Base + 0x005E	
Pad configuration register 16 (ADDR20)	SIU_PCR16	16-bits	Base + 0x0060	
Pad configuration register 17 (ADDR21)	SIU_PCR17	16-bits	Base + 0x0062	
Pad configuration register 18 (ADDR22)	SIU_PCR18	16-bits	Base + 0x0064	
Pad configuration register 19 (ADDR23)	SIU_PCR19	16-bits	Base + 0x0066	
Pad configuration register 20 (ADDR24)	SIU_PCR20	16-bits	Base + 0x0068	
Pad configuration register 21 (ADDR25)	SIU_PCR21	16-bits	Base + 0x006A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 22 (ADDR26)	SIU_PCR22	16-bits	Base + 0x006C	
Pad configuration register 23 (ADDR27)	SIU_PCR23	16-bits	Base + 0x006E	
Pad configuration register 24 (ADDR28)	SIU_PCR24	16-bits	Base + 0x0070	
Pad configuration register 25 (ADDR29)	SIU_PCR25	16-bits	Base + 0x0072	
Pad configuration register 26 (ADDR30)	SIU_PCR26	16-bits	Base + 0x0074	
Pad configuration register 27 (ADDR31)	SIU_PCR27	16-bits	Base + 0x0076	
Pad configuration register 28 (DATA0)	SIU_PCR28	16-bits	Base + 0x0078	
Pad configuration register 29 (DATA1)	SIU_PCR29	16-bits	Base + 0x007A	
Pad configuration register 30 (DATA2)	SIU_PCR30	16-bits	Base + 0x007C	
Pad configuration register 31 (DATA3)	SIU_PCR31	16-bits	Base + 0x007E	
Pad configuration register 32 (DATA4)	SIU_PCR32	16-bits	Base + 0x0080	
Pad configuration register 33 (DATA5)	SIU_PCR33	16-bits	Base + 0x0082	
Pad configuration register 34 (DATA6)	SIU_PCR34	16-bits	Base + 0x0084	
Pad configuration register 35 (DATA7)	SIU_PCR35	16-bits	Base + 0x0086	
Pad configuration register 36 (DATA8)	SIU_PCR36	16-bits	Base + 0x0088	
Pad configuration register 37 (DATA9)	SIU_PCR37	16-bits	Base + 0x008A	
Pad configuration register 38 (DATA10)	SIU_PCR38	16-bits	Base + 0x008C	
Pad configuration register 39 (DATA11)	SIU_PCR39	16-bits	Base + 0x008E	
Pad configuration register 40 (DATA12)	SIU_PCR40	16-bits	Base + 0x0090	
Pad configuration register 41 (DATA13)	SIU_PCR41	16-bits	Base + 0x0092	
Pad configuration register 42 (DATA14)	SIU_PCR42	16-bits	Base + 0x0094	
Pad configuration register 43 (DATA15)	SIU_PCR43	16-bits	Base + 0x0096	
Pad configuration register 44 (DATA16)	SIU_PCR44	16-bits	Base + 0x0098	
Pad configuration register 45 (DATA17)	SIU_PCR45	16-bits	Base + 0x009A	
Pad configuration register 46 (DATA18)	SIU_PCR46	16-bits	Base + 0x009C	
Pad configuration register 47 (DATA19)	SIU_PCR47	16-bits	Base + 0x009E	
Pad configuration register 48 (DATA20)	SIU_PCR48	16-bits	Base + 0x00A0	
Pad configuration register 49 (DATA21)	SIU_PCR49	16-bits	Base + 0x00A2	
Pad configuration register 50 (DATA22)	SIU_PCR50	16-bits	Base + 0x00A4	
Pad configuration register 51 (DATA23)	SIU_PCR51	16-bits	Base + 0x00A6	
Pad configuration register 52 (DATA24)	SIU_PCR52	16-bits	Base + 0x00A8	
Pad configuration register 53 (DATA25)	SIU_PCR53	16-bits	Base + 0x00AA	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 54 (DATA26)	SIU_PCR54	16-bits	Base + 0x00AC	
Pad configuration register 55 (DATA27)	SIU_PCR55	16-bits	Base + 0x00AE	
Pad configuration register 56 (DATA28)	SIU_PCR56	16-bits	Base + 0x00B0	
Pad configuration register 57 (DATA29)	SIU_PCR57	16-bits	Base + 0x00B2	
Pad configuration register 58 (DATA30)	SIU_PCR58	16-bits	Base + 0x00B4	
Pad configuration register 59 (DATA31)	SIU_PCR59	16-bits	Base + 0x00B6	
Pad configuration register 60 (TSIZ0)	SIU_PCR60	16-bits	Base + 0x00B8	
Pad configuration register 61 (TSIZ1)	SIU_PCR61	16-bits	Base + 0x00BA	
Pad configuration register 62 ($\overline{\text{RD_WR}}$)	SIU_PCR62	16-bits	Base + 0x00BC	
Pad configuration register 63 ($\overline{\text{BDIP}}$)	SIU_PCR63	16-bits	Base + 0x00BE	
Pad configuration register 64 ($\overline{\text{WE0}}$)	SIU_PCR64	16-bits	Base + 0x00C0	
Pad configuration register 65 ($\overline{\text{WE1}}$)	SIU_PCR65	16-bits	Base + 0x00C2	
Pad configuration register 66 ($\overline{\text{WE2}}$)	SIU_PCR66	16-bits	Base + 0x00C4	
Pad configuration register 67 ($\overline{\text{WE3}}$)	SIU_PCR67	16-bits	Base + 0x00C6	
Pad configuration register 68 ($\overline{\text{OE}}$)	SIU_PCR68	16-bits	Base + 0x00C8	
Pad configuration register 69 ($\overline{\text{TS}}$)	SIU_PCR69	16-bits	Base + 0x00CA	
Pad configuration register 70 ($\overline{\text{TA}}$)	SIU_PCR70	16-bits	Base + 0x00CC	
Pad configuration register 71 ($\overline{\text{TEA}}$)	SIU_PCR71	16-bits	Base + 0x00CE	
Pad configuration register 72 ($\overline{\text{BR}}$)	SIU_PCR72	16-bits	Base + 0x00D0	
Pad configuration register 73 ($\overline{\text{BG}}$)	SIU_PCR73	16-bits	Base + 0x00D2	
Pad configuration register 74 ($\overline{\text{BB}}$)	SIU_PCR74	16-bits	Base + 0x00D4	
Pad configuration register 75 (MDO4)	SIU_PCR75	16-bits	Base + 0x00D6	
Pad configuration register 76 (MDO5)	SIU_PCR76	16-bits	Base + 0x00D8	
Pad configuration register 77 (MDO6)	SIU_PCR77	16-bits	Base + 0x00DA	
Pad configuration register 78 (MDO7)	SIU_PCR78	16-bits	Base + 0x00DC	
Pad configuration register 79 (MDO8)	SIU_PCR79	16-bits	Base + 0x00DE	
Pad configuration register 80 (MDO9)	SIU_PCR80	16-bits	Base + 0x00E0	
Pad configuration register 81 (MDO10)	SIU_PCR81	16-bits	Base + 0x00E2	
Pad configuration register 82 (MDO11)	SIU_PCR82	16-bits	Base + 0x00E4	
Pad configuration register 83 (CNTXA)	SIU_PCR83	16-bits	Base + 0x00E6	
Pad configuration register 84 (CNRXA)	SIU_PCR84	16-bits	Base + 0x00E8	
Pad configuration register 85 (CNTXB)	SIU_PCR85	16-bits	Base + 0x00EA	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 86 (CNRXB)	SIU_PCR86	16-bits	Base + 0x00EC	
Pad configuration register 87 (CNTXC)	SIU_PCR87	16-bits	Base + 0x00EE	
Pad configuration register 88 (CNRXC)	SIU_PCR88	16-bits	Base + 0x00F0	
Pad configuration register 89 (TXDA)	SIU_PCR89	16-bits	Base + 0x00F2	
Pad configuration register 90 (RXDA)	SIU_PCR90	16-bits	Base + 0x00F4	
Pad configuration register 91 (TXDB)	SIU_PCR91	16-bits	Base + 0x00F6	
Pad configuration register 92 (RXDB)	SIU_PCR92	16-bits	Base + 0x00F8	
Pad configuration register 93 (SCKA)	SIU_PCR93	16-bits	Base + 0x00FA	
Pad configuration register 94 (SINA)	SIU_PCR94	16-bits	Base + 0x00FC	
Pad configuration register 95 (SOUTA)	SIU_PCR95	16-bits	Base + 0x00FE	
Pad configuration register 96 (PCSA0)	SIU_PCR96	16-bits	Base + 0x0100	
Pad configuration register 97 (PCSA1)	SIU_PCR97	16-bits	Base + 0x0102	
Pad configuration register 98 (PCSA2)	SIU_PCR98	16-bits	Base + 0x0104	
Pad configuration register 99 (PCSA3)	SIU_PCR99	16-bits	Base + 0x0106	
Pad configuration register 100 (PCSA4)	SIU_PCR100	16-bits	Base + 0x0108	
Pad configuration register 101 (PCSA6)	SIU_PCR101	16-bits	Base + 0x010A	
Pad configuration register 102 (SCKB)	SIU_PCR102	16-bits	Base + 0x010C	
Pad configuration register 103 (SINB)	SIU_PCR103	16-bits	Base + 0x010E	
Pad configuration register 104 (SOUTB)	SIU_PCR104	16-bits	Base + 0x0110	
Pad configuration register 105 (PCSB0)	SIU_PCR105	16-bits	Base + 0x0112	
Pad configuration register 106 (PCSB1)	SIU_PCR106	16-bits	Base + 0x0114	
Pad configuration register 107 (PCSB2)	SIU_PCR107	16-bits	Base + 0x0116	
Pad configuration register 108 (PCSB3)	SIU_PCR108	16-bits	Base + 0x0118	
Pad configuration register 109 (PCSB4)	SIU_PCR109	16-bits	Base + 0x011A	
Pad configuration register 110 (PCSB5)	SIU_PCR110	16-bits	Base + 0x011C	
Pad configuration register 111 (ETRIG0)	SIU_PCR9111	16-bits	Base + 0x011E	
Pad configuration register 112 (ETRIG1)	SIU_PCR112	16-bits	Base + 0x0120	
Pad configuration register 113 (TCRCLKA)	SIU_PCR113	16-bits	Base + 0x0122	
Pad configuration register 114 (ETPUA0)	SIU_PCR114	16-bits	Base + 0x0124	
Pad configuration register 115 (ETPUA1)	SIU_PCR115	16-bits	Base + 0x0126	
Pad configuration register 116 (ETPUA2)	SIU_PCR116	16-bits	Base + 0x0128	
Pad configuration register 117 (ETPUA3)	SIU_PCR117	16-bits	Base + 0x012A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 118 (ETPUA4)	SIU_PCR118	16-bits	Base + 0x012C	
Pad configuration register 119 (ETPUA5)	SIU_PCR119	16-bits	Base + 0x012E	
Pad configuration register 120 (ETPUA6)	SIU_PCR120	16-bits	Base + 0x0130	
Pad configuration register 121 (ETPUA7)	SIU_PCR121	16-bits	Base + 0x0132	
Pad configuration register 122 (ETPUA8)	SIU_PCR122	16-bits	Base + 0x0134	
Pad configuration register 123 (ETPUA9)	SIU_PCR123	16-bits	Base + 0x0136	
Pad configuration register 124 (ETPUA10)	SIU_PCR124	16-bits	Base + 0x0138	
Pad configuration register 125 (ETPUA11)	SIU_PCR125	16-bits	Base + 0x013A	
Pad configuration register 126 (ETPUA12)	SIU_PCR126	16-bits	Base + 0x013C	
Pad configuration register 127 (ETPUA13)	SIU_PCR127	16-bits	Base + 0x013E	
Pad configuration register 128 (ETPUA14)	SIU_PCR128	16-bits	Base + 0x0140	
Pad configuration register 129 (ETPUA15)	SIU_PCR129	16-bits	Base + 0x0142	
Pad configuration register 130 (ETPUA16)	SIU_PCR130	16-bits	Base + 0x0144	
Pad configuration register 131 (ETPUA17)	SIU_PCR131	16-bits	Base + 0x0146	
Pad configuration register 132 (ETPUA18)	SIU_PCR132	16-bits	Base + 0x0148	
Pad configuration register 133 (ETPUA19)	SIU_PCR133	16-bits	Base + 0x014A	
Pad configuration register 134 (ETPUA20)	SIU_PCR134	16-bits	Base + 0x014C	
Pad configuration register 135 (ETPUA21)	SIU_PCR135	16-bits	Base + 0x014E	
Pad configuration register 136 (ETPUA22)	SIU_PCR136	16-bits	Base + 0x0150	
Pad configuration register 137 (ETPUA23)	SIU_PCR137	16-bits	Base + 0x0152	
Pad configuration register 138 (ETPUA24)	SIU_PCR138	16-bits	Base + 0x0154	
Pad configuration register 139 (ETPUA25)	SIU_PCR139	16-bits	Base + 0x0156	
Pad configuration register 140 (ETPUA26)	SIU_PCR140	16-bits	Base + 0x0158	
Pad configuration register 141 (ETPUA27)	SIU_PCR141	16-bits	Base + 0x015A	
Pad configuration register 142 (ETPUA28)	SIU_PCR142	16-bits	Base + 0x015C	
Pad configuration register 143 (ETPUA29)	SIU_PCR143	16-bits	Base + 0x015E	
Pad configuration register 144 (ETPUA30)	SIU_PCR144	16-bits	Base + 0x0160	
Pad configuration register 145 (ETPUA31)	SIU_PCR145	16-bits	Base + 0x0162	
Pad configuration register 146 (TCRCLKB)	SIU_PCR146	16-bits	Base + 0x0164	
Pad configuration register 147 (ETPUB0)	SIU_PCR147	16-bits	Base + 0x0166	
Pad configuration register 148 (ETPUB1)	SIU_PCR148	16-bits	Base + 0x0168	
Pad configuration register 149 (ETPUB2)	SIU_PCR149	16-bits	Base + 0x016A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 150 (ETPUB3)	SIU_PCR150	16-bits	Base + 0x016C	
Pad configuration register 151 (ETPUB4)	SIU_PCR151	16-bits	Base + 0x016E	
Pad configuration register 152 (ETPUB5)	SIU_PCR152	16-bits	Base + 0x0170	
Pad configuration register 153 (ETPUB6)	SIU_PCR153	16-bits	Base + 0x0172	
Pad configuration register 154 (ETPUB7)	SIU_PCR154	16-bits	Base + 0x0174	
Pad configuration register 155 (ETPUB8)	SIU_PCR155	16-bits	Base + 0x0176	
Pad configuration register 156 (ETPUB9)	SIU_PCR156	16-bits	Base + 0x0178	
Pad configuration register 157 (ETPUB10)	SIU_PCR157	16-bits	Base + 0x017A	
Pad configuration register 158 (ETPUB11)	SIU_PCR158	16-bits	Base + 0x017C	
Pad configuration register 159 (ETPUB12)	SIU_PCR159	16-bits	Base + 0x017E	
Pad configuration register 160 (ETPUB13)	SIU_PCR160	16-bits	Base + 0x0180	
Pad configuration register 161 (ETPUB14)	SIU_PCR161	16-bits	Base + 0x0182	
Pad configuration register 162 (ETPUB15)	SIU_PCR162	16-bits	Base + 0x0184	
Pad configuration register 163 (ETPUB16)	SIU_PCR163	16-bits	Base + 0x0186	
Pad configuration register 164 (ETPUB17)	SIU_PCR164	16-bits	Base + 0x0188	
Pad configuration register 165 (ETPUB18)	SIU_PCR165	16-bits	Base + 0x018A	
Pad configuration register 166 (ETPUB19)	SIU_PCR166	16-bits	Base + 0x018C	
Pad configuration register 167 (ETPUB20)	SIU_PCR167	16-bits	Base + 0x018E	
Pad configuration register 168 (ETPUB21)	SIU_PCR168	16-bits	Base + 0x0190	
Pad configuration register 169 (ETPUB22)	SIU_PCR169	16-bits	Base + 0x0192	
Pad configuration register 170 (ETPUB23)	SIU_PCR170	16-bits	Base + 0x0194	
Pad configuration register 171 (ETPUB24)	SIU_PCR171	16-bits	Base + 0x0196	
Pad configuration register 172 (ETPUB25)	SIU_PCR172	16-bits	Base + 0x0198	
Pad configuration register 173 (ETPUB26)	SIU_PCR173	16-bits	Base + 0x019A	
Pad configuration register 174 (ETPUB27)	SIU_PCR174	16-bits	Base + 0x019C	
Pad configuration register 175 (ETPUB28)	SIU_PCR175	16-bits	Base + 0x019E	
Pad configuration register 176 (ETPUB29)	SIU_PCR176	16-bits	Base + 0x01A0	
Pad configuration register 177 (ETPUB30)	SIU_PCR177	16-bits	Base + 0x01A2	
Pad configuration register 178 (ETPUB31)	SIU_PCR178	16-bits	Base + 0x01A4	
Pad configuration register 179 (EMIOS0)	SIU_PCR179	16-bits	Base + 0x01A6	
Pad configuration register 180 (EMIOS1)	SIU_PCR180	16-bits	Base + 0x01A8	
Pad configuration register 181 (EMIOS2)	SIU_PCR181	16-bits	Base + 0x01AA	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 182 (EMIOS3)	SIU_PCR182	16-bits	Base + 0x01AC	
Pad configuration register 183 (EMIOS4)	SIU_PCR183	16-bits	Base + 0x01AE	
Pad configuration register 184 (EMIOS5)	SIU_PCR184	16-bits	Base + 0x01B0	
Pad configuration register 185 (EMIOS6)	SIU_PCR185	16-bits	Base + 0x01B2	
Pad configuration register 186 (EMIOS7)	SIU_PCR186	16-bits	Base + 0x01B4	
Pad configuration register 187 (EMIOS8)	SIU_PCR187	16-bits	Base + 0x01B6	
Pad configuration register 188 (EMIOS9)	SIU_PCR188	16-bits	Base + 0x01B8	
Pad configuration register 189 (EMIOS10)	SIU_PCR189	16-bits	Base + 0x01BA	
Pad configuration register 190 (EMIOS11)	SIU_PCR190	16-bits	Base + 0x01BC	
Pad configuration register 191 (EMIOS12)	SIU_PCR191	16-bits	Base + 0x01BE	
Pad configuration register 192 (EMIOS13)	SIU_PCR192	16-bits	Base + 0x01C0	
Pad configuration register 193 (EMIOS14)	SIU_PCR193	16-bits	Base + 0x01C2	
Pad configuration register 194 (EMIOS15)	SIU_PCR194	16-bits	Base + 0x01C4	
Pad configuration register 195 (EMIOS16)	SIU_PCR195	16-bits	Base + 0x01C6	
Pad configuration register 196 (EMIOS17)	SIU_PCR196	16-bits	Base + 0x01C8	
Pad configuration register 197 (EMIOS18)	SIU_PCR197	16-bits	Base + 0x01CA	
Pad configuration register 198 (EMIOS19)	SIU_PCR198	16-bits	Base + 0x01CC	
Pad configuration register 199 (EMIOS20)	SIU_PCR199	16-bits	Base + 0x01CE	
Pad configuration register 200 (EMIOS21)	SIU_PCR200	16-bits	Base + 0x01D0	
Pad configuration register 201 (EMIOS22)	SIU_PCR201	16-bits	Base + 0x01D2	
Pad configuration register 202 (EMIOS23)	SIU_PCR202	16-bits	Base + 0x01D4	
Pad configuration register 203 (GPIO203)	SIU_PCR203	16-bits	Base + 0x01D6	
Pad configuration register 204 (GPIO204)	SIU_PCR204	16-bits	Base + 0x01D8	
Pad configuration register 205 (GPIO205)	SIU_PCR205	16-bits	Base + 0x01DA	
Pad configuration register 206 (GPIO206)	SIU_PCR206	16-bits	Base + 0x01DC	
Pad configuration register 207 (GPIO207)	SIU_PCR207	16-bits	Base + 0x01DE	
Pad configuration register 208 (PLLCFG0)	SIU_PCR208	16-bits	Base + 0x01E0	
Pad configuration register 209 (PLLCFG1)	SIU_PCR209	16-bits	Base + 0x01E2	
Pad configuration register 210 (RSTCFG)	SIU_PCR210	16-bits	Base + 0x01E4	
Pad configuration register 211 (BOOTCFG0)	SIU_PCR211	16-bits	Base + 0x01E6	
Pad configuration register 212 (BOOTCFG1)	SIU_PCR212	16-bits	Base + 0x01E8	
Pad configuration register 213 (WKPCFG)	SIU_PCR213	16-bits	Base + 0x01EA	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 214 (ENGCLK)	SIU_PCR214	16-bits	Base + 0x01EC	
Pad configuration register 215 (AN12)	SIU_PCR215	16-bits	Base + 0x01EE	
Pad configuration register 216 (AN13)	SIU_PCR216	16-bits	Base + 0x01F0	
Pad configuration register 217 (AN14)	SIU_PCR217	16-bits	Base + 0x01F2	
Pad configuration register 218 (AN15)	SIU_PCR218	16-bits	Base + 0x01F4	
Pad configuration register 219 (MCKO)	SIU_PCR219	16-bits	Base + 0x01F6	
Pad configuration register 220 (MDO0)	SIU_PCR220	16-bits	Base + 0x01F8	
Pad configuration register 221 (MDO1)	SIU_PCR221	16-bits	Base + 0x01FA	
Pad configuration register 222 (MDO2)	SIU_PCR222	16-bits	Base + 0x01FC	
Pad configuration register 223 (MDO3)	SIU_PCR223	16-bits	Base + 0x01FE	
Pad configuration register 224 ($\overline{\text{MSEO0}}$)	SIU_PCR224	16-bits	Base + 0x0200	
Pad configuration register 225 ($\overline{\text{MSEO1}}$)	SIU_PCR225	16-bits	Base + 0x0202	
Pad configuration register 226 ($\overline{\text{RDY}}$)	SIU_PCR226	16-bits	Base + 0x0204	
Pad configuration register 227 ($\overline{\text{EVTO}}$)	SIU_PCR227	16-bits	Base + 0x0206	
Pad configuration register 228 (TDO)	SIU_PCR228	16-bits	Base + 0x0208	
Pad configuration register 229 (CLKOUT)	SIU_PCR229	16-bits	Base + 0x020A	
Pad configuration register 230 ($\overline{\text{RSTOUT}}$)	SIU_PCR230	16-bits	Base + 0x020C	
Reserved	—	—	Base + (0x020E-0x23F)	
Pad configuration register 256	SIU_PCR256	16-bits	Base + 0x240	
Pad configuration register 257	SIU_PCR257	16-bits	Base + 0x242	
Pad configuration register 258	SIU_PCR258	16-bits	Base + 0x244	
Pad configuration register 259	SIU_PCR259	16-bits	Base + 0x246	
Pad configuration register 260	SIU_PCR260	16-bits	Base + 0x248	
Pad configuration register 261	SIU_PCR261	16-bits	Base + 0x24A	
Pad configuration register 262	SIU_PCR262	16-bits	Base + 0x24C	
Pad configuration register 263	SIU_PCR263	16-bits	Base + 0x24E	
Pad configuration register 264	SIU_PCR264	16-bits	Base + 0x250	
Pad configuration register 265	SIU_PCR265	16-bits	Base + 0x252	
Pad configuration register 266	SIU_PCR266	16-bits	Base + 0x254	
Pad configuration register 267	SIU_PCR267	16-bits	Base + 0x256	
Pad configuration register 268	SIU_PCR268	16-bits	Base + 0x258	
Pad configuration register 269	SIU_PCR269	16-bits	Base + 0x25A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Pad configuration register 270	SIU_PCR270	16-bits	Base + 0x25C	
Pad configuration register 271	SIU_PCR271	16-bits	Base + 0x25E	
Pad configuration register 272	SIU_PCR272	16-bits	Base + 0x260	
Pad configuration register 273	SIU_PCR273	16-bits	Base + 0x262	
Pad configuration register 274	SIU_PCR274	16-bits	Base + 0x264	
Pad configuration register 275	SIU_PCR275	16-bits	Base + 0x266	
Pad configuration register 276	SIU_PCR27	16-bits	Base + 0x268	
Pad configuration register 277	SIU_PCR277	16-bits	Base + 0x26A	
Pad configuration register 278	SIU_PCR278	16-bits	Base + 0x26C	
Pad configuration register 279	SIU_PCR279	16-bits	Base + 0x26E	
Pad configuration register 280	SIU_PCR280	16-bits	Base + 0x270	
Pad configuration register 281	SIU_PCR281	16-bits	Base + 0x272	
Pad configuration register 282	SIU_PCR282	16-bits	Base + 0x274	
Pad configuration register 283	SIU_PCR283	16-bits	Base + 0x276	
Pad configuration register 284	SIU_PCR284	16-bits	Base + 0x278	
Pad configuration register 285	SIU_PCR285	16-bits	Base + 0x27A	
Pad configuration register 286	SIU_PCR286	16-bits	Base + 0x27C	
Pad configuration register 287	SIU_PCR287	16-bits	Base + 0x27E	
Pad configuration register 288	SIU_PCR288	16-bits	Base + 0x280	
Pad configuration register 289	SIU_PCR289	16-bits	Base + 0x282	
Pad configuration register 290	SIU_PCR290	16-bits	Base + 0x284	
Pad configuration register 291	SIU_PCR291	16-bits	Base + 0x286	
Pad configuration register 292	SIU_PCR292	16-bits	Base + 0x288	
Pad configuration register 293	SIU_PCR293	16-bits	Base + 0x28A	
Pad configuration register 294	SIU_PCR294	16-bits	Base + 0x28C	
Pad configuration register 295	SIU_PCR295	16-bits	Base + 0x28E	
Pad configuration register 296	SIU_PCR296	16-bits	Base + 0x290	
Pad configuration register 297	SIU_PCR297	16-bits	Base + 0x292	
Pad configuration register 298	SIU_PCR298	16-bits	Base + 0x294	
Reserved	—	—	Base + (0x020E-0x05FF)	
GPIO pin data output register 0	SIU_GPDO0	8-bits	Base + 0x0600	
GPIO pin data output register 1	SIU_GPDO1	8-bits	Base + 0x0601	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 2	SIU_GPDO2	8-bits	Base + 0x0602	
GPIO pin data output register 3	SIU_GPDO3	8-bits	Base + 0x0603	
GPIO pin data output register 4	SIU_GPDO4	8-bits	Base + 0x0604	
GPIO pin data output register 5	SIU_GPDO5	8-bits	Base + 0x0605	
GPIO pin data output register 6	SIU_GPDO6	8-bits	Base + 0x0606	
GPIO pin data output register 7	SIU_GPDO7	8-bits	Base + 0x0607	
GPIO pin data output register 8	SIU_GPDO8	8-bits	Base + 0x0608	
GPIO pin data output register 9	SIU_GPDO9	8-bits	Base + 0x0609	
GPIO pin data output register 10	SIU_GPDO10	8-bits	Base + 0x060A	
GPIO pin data output register 11	SIU_GPDO11	8-bits	Base + 0x060B	
GPIO pin data output register 12	SIU_GPDO12	8-bits	Base + 0x060C	
GPIO pin data output register 13	SIU_GPDO13	8-bits	Base + 0x060D	
GPIO pin data output register 14	SIU_GPDO14	8-bits	Base + 0x060E	
GPIO pin data output register 15	SIU_GPDO15	8-bits	Base + 0x060F	
GPIO pin data output register 16	SIU_GPDO16	8-bits	Base + 0x0610	
GPIO pin data output register 17	SIU_GPDO17	8-bits	Base + 0x0611	
GPIO pin data output register 18	SIU_GPDO18	8-bits	Base + 0x0612	
GPIO pin data output register 19	SIU_GPDO19	8-bits	Base + 0x0613	
GPIO pin data output register 20	SIU_GPDO20	8-bits	Base + 0x0614	
GPIO pin data output register 21	SIU_GPDO21	8-bits	Base + 0x0615	
GPIO pin data output register 22	SIU_GPDO22	8-bits	Base + 0x0616	
GPIO pin data output register 23	SIU_GPDO23	8-bits	Base + 0x0617	
GPIO pin data output register 24	SIU_GPDO24	8-bits	Base + 0x0618	
GPIO pin data output register 25	SIU_GPDO25	8-bits	Base + 0x0619	
GPIO pin data output register 26	SIU_GPDO26	8-bits	Base + 0x061A	
GPIO pin data output register 27	SIU_GPDO27	8-bits	Base + 0x061B	
GPIO pin data output register 28	SIU_GPDO28	8-bits	Base + 0x061C	
GPIO pin data output register 29	SIU_GPDO29	8-bits	Base + 0x061D	
GPIO pin data output register 30	SIU_GPDO30	8-bits	Base + 0x061E	
GPIO pin data output register 31	SIU_GPDO31	8-bits	Base + 0x061F	
GPIO pin data output register 32	SIU_GPDO32	8-bits	Base + 0x0620	
GPIO pin data output register 33	SIU_GPDO33	8-bits	Base + 0x0621	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 34	SIU_GPDO34	8-bits	Base + 0x0622	
GPIO pin data output register 35	SIU_GPDO35	8-bits	Base + 0x0623	
GPIO pin data output register 36	SIU_GPDO36	8-bits	Base + 0x0624	
GPIO pin data output register 37	SIU_GPDO37	8-bits	Base + 0x0625	
GPIO pin data output register 38	SIU_GPDO38	8-bits	Base + 0x0626	
GPIO pin data output register 39	SIU_GPDO39	8-bits	Base + 0x0627	
GPIO pin data output register 40	SIU_GPDO40	8-bits	Base + 0x0628	
GPIO pin data output register 41	SIU_GPDO41	8-bits	Base + 0x0629	
GPIO pin data output register 42	SIU_GPDO42	8-bits	Base + 0x062A	
GPIO pin data output register 43	SIU_GPDO43	8-bits	Base + 0x062B	
GPIO pin data output register 44	SIU_GPDO44	8-bits	Base + 0x062C	
GPIO pin data output register 45	SIU_GPDO45	8-bits	Base + 0x062D	
GPIO pin data output register 46	SIU_GPDO46	8-bits	Base + 0x062E	
GPIO pin data output register 47	SIU_GPDO47	8-bits	Base + 0x062F	
GPIO pin data output register 48	SIU_GPDO48	8-bits	Base + 0x0630	
GPIO pin data output register 49	SIU_GPDO49	8-bits	Base + 0x0631	
GPIO pin data output register 50	SIU_GPDO50	8-bits	Base + 0x0632	
GPIO pin data output register 51	SIU_GPDO51	8-bits	Base + 0x0633	
GPIO pin data output register 52	SIU_GPDO52	8-bits	Base + 0x0634	
GPIO pin data output register 53	SIU_GPDO53	8-bits	Base + 0x0635	
GPIO pin data output register 54	SIU_GPDO54	8-bits	Base + 0x0636	
GPIO pin data output register 55	SIU_GPDO55	8-bits	Base + 0x0637	
GPIO pin data output register 56	SIU_GPDO56	8-bits	Base + 0x0638	
GPIO pin data output register 57	SIU_GPDO57	8-bits	Base + 0x0639	
GPIO pin data output register 58	SIU_GPDO58	8-bits	Base + 0x063A	
GPIO pin data output register 59	SIU_GPDO59	8-bits	Base + 0x063B	
GPIO pin data output register 60	SIU_GPDO60	8-bits	Base + 0x063C	
GPIO pin data output register 61	SIU_GPDO61	8-bits	Base + 0x063D	
GPIO pin data output register 62	SIU_GPDO62	8-bits	Base + 0x063E	
GPIO pin data output register 63	SIU_GPDO63	8-bits	Base + 0x063F	
GPIO pin data output register 64	SIU_GPDO64	8-bits	Base + 0x0640	
GPIO pin data output register 65	SIU_GPDO65	8-bits	Base + 0x0641	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 66	SIU_GPDO66	8-bits	Base + 0x0642	
GPIO pin data output register 67	SIU_GPDO67	8-bits	Base + 0x0643	
GPIO pin data output register 68	SIU_GPDO68	8-bits	Base + 0x0644	
GPIO pin data output register 69	SIU_GPDO69	8-bits	Base + 0x0645	
GPIO pin data output register 70	SIU_GPDO70	8-bits	Base + 0x0646	
GPIO pin data output register 71	SIU_GPDO71	8-bits	Base + 0x0647	
GPIO pin data output register 72	SIU_GPDO72	8-bits	Base + 0x0648	
GPIO pin data output register 73	SIU_GPDO73	8-bits	Base + 0x0649	
GPIO pin data output register 74	SIU_GPDO74	8-bits	Base + 0x064A	
GPIO pin data output register 75	SIU_GPDO75	8-bits	Base + 0x064B	
GPIO pin data output register 76	SIU_GPDO76	8-bits	Base + 0x064C	
GPIO pin data output register 77	SIU_GPDO77	8-bits	Base + 0x064D	
GPIO pin data output register 78	SIU_GPDO78	8-bits	Base + 0x064E	
GPIO pin data output register 79	SIU_GPDO79	8-bits	Base + 0x064F	
GPIO pin data output register 80	SIU_GPDO80	8-bits	Base + 0x0650	
GPIO pin data output register 81	SIU_GPDO81	8-bits	Base + 0x0651	
GPIO pin data output register 82	SIU_GPDO82	8-bits	Base + 0x0652	
GPIO pin data output register 83	SIU_GPDO83	8-bits	Base + 0x0653	
GPIO pin data output register 84	SIU_GPDO84	8-bits	Base + 0x0654	
GPIO pin data output register 85	SIU_GPDO85	8-bits	Base + 0x0655	
GPIO pin data output register 86	SIU_GPDO86	8-bits	Base + 0x0656	
GPIO pin data output register 87	SIU_GPDO87	8-bits	Base + 0x0657	
GPIO pin data output register 88	SIU_GPDO88	8-bits	Base + 0x0658	
GPIO pin data output register 89	SIU_GPDO89	8-bits	Base + 0x0659	
GPIO pin data output register 90	SIU_GPDO90	8-bits	Base + 0x065A	
GPIO pin data output register 91	SIU_GPDO91	8-bits	Base + 0x065B	
GPIO pin data output register 92	SIU_GPDO92	8-bits	Base + 0x065C	
GPIO pin data output register 93	SIU_GPDO93	8-bits	Base + 0x065D	
GPIO pin data output register 94	SIU_GPDO94	8-bits	Base + 0x065E	
GPIO pin data output register 95	SIU_GPDO95	8-bits	Base + 0x065F	
GPIO pin data output register 96	SIU_GPDO96	8-bits	Base + 0x0660	
GPIO pin data output register 97	SIU_GPDO97	8-bits	Base + 0x0661	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 98	SIU_GPDO98	8-bits	Base + 0x0662	
GPIO pin data output register 99	SIU_GPDO99	8-bits	Base + 0x0663	
GPIO pin data output register 100	SIU_GPDO100	8-bits	Base + 0x0664	
GPIO pin data output register 101	SIU_GPDO101	8-bits	Base + 0x0665	
GPIO pin data output register 102	SIU_GPDO102	8-bits	Base + 0x0666	
GPIO pin data output register 103	SIU_GPDO103	8-bits	Base + 0x0667	
GPIO pin data output register 104	SIU_GPDO104	8-bits	Base + 0x0668	
GPIO pin data output register 105	SIU_GPDO105	8-bits	Base + 0x0669	
GPIO pin data output register 106	SIU_GPDO106	8-bits	Base + 0x066A	
GPIO pin data output register 107	SIU_GPDO107	8-bits	Base + 0x066B	
GPIO pin data output register 108	SIU_GPDO108	8-bits	Base + 0x066C	
GPIO pin data output register 109	SIU_GPDO109	8-bits	Base + 0x066D	
GPIO pin data output register 110	SIU_GPDO110	8-bits	Base + 0x066E	
GPIO pin data output register 111	SIU_GPDO111	8-bits	Base + 0x066F	
GPIO pin data output register 112	SIU_GPDO112	8-bits	Base + 0x0670	
GPIO pin data output register 113	SIU_GPDO113	8-bits	Base + 0x0671	
GPIO pin data output register 114	SIU_GPDO114	8-bits	Base + 0x0672	
GPIO pin data output register 115	SIU_GPDO115	8-bits	Base + 0x0673	
GPIO pin data output register 116	SIU_GPDO116	8-bits	Base + 0x0674	
GPIO pin data output register 117	SIU_GPDO117	8-bits	Base + 0x0675	
GPIO pin data output register 118	SIU_GPDO118	8-bits	Base + 0x0676	
GPIO pin data output register 119	SIU_GPDO119	8-bits	Base + 0x0677	
GPIO pin data output register 120	SIU_GPDO120	8-bits	Base + 0x0678	
GPIO pin data output register 121	SIU_GPDO121	8-bits	Base + 0x0679	
GPIO pin data output register 122	SIU_GPDO122	8-bits	Base + 0x067A	
GPIO pin data output register 123	SIU_GPDO123	8-bits	Base + 0x067B	
GPIO pin data output register 124	SIU_GPDO124	8-bits	Base + 0x067C	
GPIO pin data output register 125	SIU_GPDO125	8-bits	Base + 0x067D	
GPIO pin data output register 126	SIU_GPDO126	8-bits	Base + 0x067E	
GPIO pin data output register 127	SIU_GPDO127	8-bits	Base + 0x067F	
GPIO pin data output register 128	SIU_GPDO128	8-bits	Base + 0x0680	
GPIO pin data output register 129	SIU_GPDO129	8-bits	Base + 0x0681	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 130	SIU_GPDO130	8-bits	Base + 0x0682	
GPIO pin data output register 131	SIU_GPDO131	8-bits	Base + 0x0683	
GPIO pin data output register 132	SIU_GPDO132	8-bits	Base + 0x0684	
GPIO pin data output register 133	SIU_GPDO133	8-bits	Base + 0x0685	
GPIO pin data output register 134	SIU_GPDO134	8-bits	Base + 0x0686	
GPIO pin data output register 135	SIU_GPDO135	8-bits	Base + 0x0687	
GPIO pin data output register 136	SIU_GPDO136	8-bits	Base + 0x0688	
GPIO pin data output register 137	SIU_GPDO137	8-bits	Base + 0x0689	
GPIO pin data output register 138	SIU_GPDO138	8-bits	Base + 0x068A	
GPIO pin data output register 139	SIU_GPDO139	8-bits	Base + 0x068B	
GPIO pin data output register 140	SIU_GPDO140	8-bits	Base + 0x068C	
GPIO pin data output register 141	SIU_GPDO141	8-bits	Base + 0x068D	
GPIO pin data output register 142	SIU_GPDO142	8-bits	Base + 0x068E	
GPIO pin data output register 143	SIU_GPDO143	8-bits	Base + 0x068F	
GPIO pin data output register 144	SIU_GPDO144	8-bits	Base + 0x0690	
GPIO pin data output register 145	SIU_GPDO145	8-bits	Base + 0x0691	
GPIO pin data output register 146	SIU_GPDO146	8-bits	Base + 0x0692	
GPIO pin data output register 147	SIU_GPDO147	8-bits	Base + 0x0693	
GPIO pin data output register 148	SIU_GPDO148	8-bits	Base + 0x0694	
GPIO pin data output register 149	SIU_GPDO149	8-bits	Base + 0x0695	
GPIO pin data output register 150	SIU_GPDO150	8-bits	Base + 0x0696	
GPIO pin data output register 151	SIU_GPDO151	8-bits	Base + 0x0697	
GPIO pin data output register 152	SIU_GPDO152	8-bits	Base + 0x0698	
GPIO pin data output register 153	SIU_GPDO153	8-bits	Base + 0x0699	
GPIO pin data output register 154	SIU_GPDO154	8-bits	Base + 0x069A	
GPIO pin data output register 155	SIU_GPDO155	8-bits	Base + 0x069B	
GPIO pin data output register 156	SIU_GPDO156	8-bits	Base + 0x069C	
GPIO pin data output register 157	SIU_GPDO157	8-bits	Base + 0x069D	
GPIO pin data output register 158	SIU_GPDO158	8-bits	Base + 0x069E	
GPIO pin data output register 159	SIU_GPDO159	8-bits	Base + 0x069F	
GPIO pin data output register 160	SIU_GPDO160	8-bits	Base + 0x06A0	
GPIO pin data output register 161	SIU_GPDO161	8-bits	Base + 0x06A1	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 162	SIU_GPDO162	8-bits	Base + 0x06A2	
GPIO pin data output register 163	SIU_GPDO163	8-bits	Base + 0x06A3	
GPIO pin data output register 164	SIU_GPDO164	8-bits	Base + 0x06A4	
GPIO pin data output register 165	SIU_GPDO165	8-bits	Base + 0x06A5	
GPIO pin data output register 166	SIU_GPDO166	8-bits	Base + 0x06A6	
GPIO pin data output register 167	SIU_GPDO167	8-bits	Base + 0x06A7	
GPIO pin data output register 168	SIU_GPDO168	8-bits	Base + 0x06A8	
GPIO pin data output register 169	SIU_GPDO169	8-bits	Base + 0x06A9	
GPIO pin data output register 170	SIU_GPDO170	8-bits	Base + 0x06AA	
GPIO pin data output register 171	SIU_GPDO171	8-bits	Base + 0x06AB	
GPIO pin data output register 172	SIU_GPDO172	8-bits	Base + 0x06AC	
GPIO pin data output register 173	SIU_GPDO173	8-bits	Base + 0x06AD	
GPIO pin data output register 174	SIU_GPDO174	8-bits	Base + 0x06AE	
GPIO pin data output register 175	SIU_GPDO175	8-bits	Base + 0x06AF	
GPIO pin data output register 176	SIU_GPDO176	8-bits	Base + 0x06B0	
GPIO pin data output register 177	SIU_GPDO177	8-bits	Base + 0x06B1	
GPIO pin data output register 178	SIU_GPDO178	8-bits	Base + 0x06B2	
GPIO pin data output register 179	SIU_GPDO179	8-bits	Base + 0x06B3	
GPIO pin data output register 180	SIU_GPDO180	8-bits	Base + 0x06B4	
GPIO pin data output register 181	SIU_GPDO181	8-bits	Base + 0x06B5	
GPIO pin data output register 182	SIU_GPDO182	8-bits	Base + 0x06B6	
GPIO pin data output register 183	SIU_GPDO183	8-bits	Base + 0x06B7	
GPIO pin data output register 184	SIU_GPDO184	8-bits	Base + 0x06B8	
GPIO pin data output register 185	SIU_GPDO185	8-bits	Base + 0x06B9	
GPIO pin data output register 186	SIU_GPDO186	8-bits	Base + 0x06BA	
GPIO pin data output register 187	SIU_GPDO187	8-bits	Base + 0x06BB	
GPIO pin data output register 188	SIU_GPDO188	8-bits	Base + 0x06BC	
GPIO pin data output register 189	SIU_GPDO189	8-bits	Base + 0x06BD	
GPIO pin data output register 190	SIU_GPDO190	8-bits	Base + 0x06BE	
GPIO pin data output register 191	SIU_GPDO191	8-bits	Base + 0x06BF	
GPIO pin data output register 192	SIU_GPDO192	8-bits	Base + 0x06C0	
GPIO pin data output register 193	SIU_GPDO193	8-bits	Base + 0x06C1	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data output register 194	SIU_GPDO194	8-bits	Base + 0x06C2	
GPIO pin data output register 195	SIU_GPDO195	8-bits	Base + 0x06C3	
GPIO pin data output register 196	SIU_GPDO196	8-bits	Base + 0x06C4	
GPIO pin data output register 197	SIU_GPDO197	8-bits	Base + 0x06C5	
GPIO pin data output register 198	SIU_GPDO198	8-bits	Base + 0x06C6	
GPIO pin data output register 199	SIU_GPDO199	8-bits	Base + 0x06C7	
GPIO pin data output register 200	SIU_GPDO200	8-bits	Base + 0x06C8	
GPIO pin data output register 201	SIU_GPDO201	8-bits	Base + 0x06C9	
GPIO pin data output register 202	SIU_GPDO202	8-bits	Base + 0x06CA	
GPIO pin data output register 203	SIU_GPDO203	8-bits	Base + 0x06CB	
GPIO pin data output register 204	SIU_GPDO204	8-bits	Base + 0x06CC	
GPIO pin data output register 205	SIU_GPDO205	8-bits	Base + 0x06CD	
GPIO pin data output register 206	SIU_GPDO206	8-bits	Base + 0x06CE	
GPIO pin data output register 207	SIU_GPDO207	8-bits	Base + 0x06CF	
GPIO pin data output register 208	SIU_GPDO208	8-bits	Base + 0x06D0	
GPIO pin data output register 209	SIU_GPDO209	8-bits	Base + 0x06D1	
GPIO pin data output register 210	SIU_GPDO210	8-bits	Base + 0x06D2	
GPIO pin data output register 211	SIU_GPDO211	8-bits	Base + 0x06D3	
GPIO pin data output register 212	SIU_GPDO212	8-bits	Base + 0x06D4	
GPIO pin data output register 213	SIU_GPDO213	8-bits	Base + 0x06D5	
Reserved	—	—	Base + (0x06D6-0x07FF)	
GPIO pin data input register 0	SIU_GPDI0	8-bits	Base + 0x0800	
GPIO pin data input register 1	SIU_GPDI1	8-bits	Base + 0x0801	
GPIO pin data input register 2	SIU_GPDI2	8-bits	Base + 0x0802	
GPIO pin data input register 3	SIU_GPDI3	8-bits	Base + 0x0803	
GPIO pin data input register 4	SIU_GPDI4	8-bits	Base + 0x0804	
GPIO pin data input register 5	SIU_GPDI5	8-bits	Base + 0x0805	
GPIO pin data input register 6	SIU_GPDI6	8-bits	Base + 0x0806	
GPIO pin data input register 7	SIU_GPDI7	8-bits	Base + 0x0807	
GPIO pin data input register 8	SIU_GPDI8	8-bits	Base + 0x0808	
GPIO pin data input register 9	SIU_GPDI9	8-bits	Base + 0x0809	
GPIO pin data input register 10	SIU_GPDI10	8-bits	Base + 0x080A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 11	SIU_GPDI11	8-bits	Base + 0x080B	
GPIO pin data input register 12	SIU_GPDI12	8-bits	Base + 0x080C	
GPIO pin data input register 13	SIU_GPDI13	8-bits	Base + 0x080D	
GPIO pin data input register 14	SIU_GPDI14	8-bits	Base + 0x080E	
GPIO pin data input register 15	SIU_GPDI15	8-bits	Base + 0x080F	
GPIO pin data input register 16	SIU_GPDI16	8-bits	Base + 0x0810	
GPIO pin data input register 17	SIU_GPDI17	8-bits	Base + 0x0811	
GPIO pin data input register 18	SIU_GPDI18	8-bits	Base + 0x0812	
GPIO pin data input register 19	SIU_GPDI19	8-bits	Base + 0x0813	
GPIO pin data input register 20	SIU_GPDI20	8-bits	Base + 0x0814	
GPIO pin data input register 21	SIU_GPDI21	8-bits	Base + 0x0815	
GPIO pin data input register 22	SIU_GPDI22	8-bits	Base + 0x0816	
GPIO pin data input register 23	SIU_GPDI23	8-bits	Base + 0x0817	
GPIO pin data input register 24	SIU_GPDI24	8-bits	Base + 0x0818	
GPIO pin data input register 25	SIU_GPDI25	8-bits	Base + 0x0819	
GPIO pin data input register 26	SIU_GPDI26	8-bits	Base + 0x081A	
GPIO pin data input register 27	SIU_GPDI27	8-bits	Base + 0x081B	
GPIO pin data input register 28	SIU_GPDI28	8-bits	Base + 0x081C	
GPIO pin data input register 29	SIU_GPDI29	8-bits	Base + 0x081D	
GPIO pin data input register 30	SIU_GPDI30	8-bits	Base + 0x081E	
GPIO pin data input register 31	SIU_GPDI31	8-bits	Base + 0x081F	
GPIO pin data input register 32	SIU_GPDI32	8-bits	Base + 0x0820	
GPIO pin data input register 33	SIU_GPDI33	8-bits	Base + 0x0821	
GPIO pin data input register 34	SIU_GPDI34	8-bits	Base + 0x0822	
GPIO pin data input register 35	SIU_GPDI35	8-bits	Base + 0x0823	
GPIO pin data input register 36	SIU_GPDI36	8-bits	Base + 0x0824	
GPIO pin data input register 37	SIU_GPDI37	8-bits	Base + 0x0825	
GPIO pin data input register 38	SIU_GPDI38	8-bits	Base + 0x0826	
GPIO pin data input register 39	SIU_GPDI39	8-bits	Base + 0x0827	
GPIO pin data input register 40	SIU_GPDI40	8-bits	Base + 0x0828	
GPIO pin data input register 41	SIU_GPDI41	8-bits	Base + 0x0829	
GPIO pin data input register 42	SIU_GPDI42	8-bits	Base + 0x082A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 43	SIU_GPDI43	8-bits	Base + 0x082B	
GPIO pin data input register 44	SIU_GPDI44	8-bits	Base + 0x082C	
GPIO pin data input register 45	SIU_GPDI45	8-bits	Base + 0x082D	
GPIO pin data input register 46	SIU_GPDI46	8-bits	Base + 0x082E	
GPIO pin data input register 47	SIU_GPDI47	8-bits	Base + 0x082F	
GPIO pin data input register 48	SIU_GPDI48	8-bits	Base + 0x0830	
GPIO pin data input register 49	SIU_GPDI49	8-bits	Base + 0x0831	
GPIO pin data input register 50	SIU_GPDI50	8-bits	Base + 0x0832	
GPIO pin data input register 51	SIU_GPDI51	8-bits	Base + 0x0833	
GPIO pin data input register 52	SIU_GPDI52	8-bits	Base + 0x0834	
GPIO pin data input register 53	SIU_GPDI53	8-bits	Base + 0x0835	
GPIO pin data input register 54	SIU_GPDI54	8-bits	Base + 0x0836	
GPIO pin data input register 55	SIU_GPDI55	8-bits	Base + 0x0837	
GPIO pin data input register 56	SIU_GPDI56	8-bits	Base + 0x0838	
GPIO pin data input register 57	SIU_GPDI57	8-bits	Base + 0x0839	
GPIO pin data input register 58	SIU_GPDI58	8-bits	Base + 0x083A	
GPIO pin data input register 59	SIU_GPDI59	8-bits	Base + 0x083B	
GPIO pin data input register 60	SIU_GPDI60	8-bits	Base + 0x083C	
GPIO pin data input register 61	SIU_GPDI61	8-bits	Base + 0x083D	
GPIO pin data input register 62	SIU_GPDI62	8-bits	Base + 0x083E	
GPIO pin data input register 63	SIU_GPDI63	8-bits	Base + 0x083F	
GPIO pin data input register 64	SIU_GPDI64	8-bits	Base + 0x0840	
GPIO pin data input register 65	SIU_GPDI65	8-bits	Base + 0x0841	
GPIO pin data input register 66	SIU_GPDI66	8-bits	Base + 0x0842	
GPIO pin data input register 67	SIU_GPDI67	8-bits	Base + 0x0843	
GPIO pin data input register 68	SIU_GPDI68	8-bits	Base + 0x0844	
GPIO pin data input register 69	SIU_GPDI69	8-bits	Base + 0x0845	
GPIO pin data input register 70	SIU_GPDI70	8-bits	Base + 0x0846	
GPIO pin data input register 71	SIU_GPDI71	8-bits	Base + 0x0847	
GPIO pin data input register 72	SIU_GPDI72	8-bits	Base + 0x0848	
GPIO pin data input register 73	SIU_GPDI73	8-bits	Base + 0x0849	
GPIO pin data input register 74	SIU_GPDI74	8-bits	Base + 0x084A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 75	SIU_GPDI75	8-bits	Base + 0x084B	
GPIO pin data input register 76	SIU_GPDI76	8-bits	Base + 0x084C	
GPIO pin data input register 77	SIU_GPDI77	8-bits	Base + 0x084D	
GPIO pin data input register 78	SIU_GPDI78	8-bits	Base + 0x084E	
GPIO pin data input register 79	SIU_GPDI79	8-bits	Base + 0x084F	
GPIO pin data input register 80	SIU_GPDI80	8-bits	Base + 0x0850	
GPIO pin data input register 81	SIU_GPDI81	8-bits	Base + 0x0851	
GPIO pin data input register 82	SIU_GPDI82	8-bits	Base + 0x0852	
GPIO pin data input register 83	SIU_GPDI83	8-bits	Base + 0x0853	
GPIO pin data input register 84	SIU_GPDI84	8-bits	Base + 0x0854	
GPIO pin data input register 85	SIU_GPDI85	8-bits	Base + 0x0855	
GPIO pin data input register 86	SIU_GPDI86	8-bits	Base + 0x0856	
GPIO pin data input register 87	SIU_GPDI87	8-bits	Base + 0x0857	
GPIO pin data input register 88	SIU_GPDI88	8-bits	Base + 0x0858	
GPIO pin data input register 89	SIU_GPDI89	8-bits	Base + 0x0859	
GPIO pin data input register 90	SIU_GPDI90	8-bits	Base + 0x085A	
GPIO pin data input register 91	SIU_GPDI91	8-bits	Base + 0x085B	
GPIO pin data input register 92	SIU_GPDI92	8-bits	Base + 0x085C	
GPIO pin data input register 93	SIU_GPDI93	8-bits	Base + 0x085D	
GPIO pin data input register 94	SIU_GPDI94	8-bits	Base + 0x085E	
GPIO pin data input register 95	SIU_GPDI95	8-bits	Base + 0x085F	
GPIO pin data input register 96	SIU_GPDI96	8-bits	Base + 0x0860	
GPIO pin data input register 97	SIU_GPDI97	8-bits	Base + 0x0861	
GPIO pin data input register 98	SIU_GPDI98	8-bits	Base + 0x0862	
GPIO pin data input register 99	SIU_GPDI99	8-bits	Base + 0x0863	
GPIO pin data input register 100	SIU_GPDI100	8-bits	Base + 0x0864	
GPIO pin data input register 101	SIU_GPDI101	8-bits	Base + 0x0865	
GPIO pin data input register 102	SIU_GPDI102	8-bits	Base + 0x0866	
GPIO pin data input register 103	SIU_GPDI103	8-bits	Base + 0x0867	
GPIO pin data input register 104	SIU_GPDI104	8-bits	Base + 0x0868	
GPIO pin data input register 105	SIU_GPDI105	8-bits	Base + 0x0869	
GPIO pin data input register 106	SIU_GPDI106	8-bits	Base + 0x086A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 107	SIU_GPDI107	8-bits	Base + 0x086B	
GPIO pin data input register 108	SIU_GPDI108	8-bits	Base + 0x086C	
GPIO pin data input register 109	SIU_GPDI109	8-bits	Base + 0x086D	
GPIO pin data input register 110	SIU_GPDI110	8-bits	Base + 0x086E	
GPIO pin data input register 111	SIU_GPDI111	8-bits	Base + 0x086F	
GPIO pin data input register 112	SIU_GPDI112	8-bits	Base + 0x0870	
GPIO pin data input register 113	SIU_GPDI113	8-bits	Base + 0x0871	
GPIO pin data input register 114	SIU_GPDI114	8-bits	Base + 0x0872	
GPIO pin data input register 115	SIU_GPDI115	8-bits	Base + 0x0873	
GPIO pin data input register 116	SIU_GPDI116	8-bits	Base + 0x0874	
GPIO pin data input register 117	SIU_GPDI117	8-bits	Base + 0x0875	
GPIO pin data input register 118	SIU_GPDI118	8-bits	Base + 0x0876	
GPIO pin data input register 119	SIU_GPDI119	8-bits	Base + 0x0877	
GPIO pin data input register 120	SIU_GPDI120	8-bits	Base + 0x0878	
GPIO pin data input register 121	SIU_GPDI121	8-bits	Base + 0x0879	
GPIO pin data input register 122	SIU_GPDI122	8-bits	Base + 0x087A	
GPIO pin data input register 123	SIU_GPDI123	8-bits	Base + 0x087B	
GPIO pin data input register 124	SIU_GPDI124	8-bits	Base + 0x087C	
GPIO pin data input register 125	SIU_GPDI125	8-bits	Base + 0x087D	
GPIO pin data input register 126	SIU_GPDI126	8-bits	Base + 0x087E	
GPIO pin data input register 127	SIU_GPDI127	8-bits	Base + 0x087F	
GPIO pin data input register 128	SIU_GPDI128	8-bits	Base + 0x0880	
GPIO pin data input register 129	SIU_GPDI129	8-bits	Base + 0x0881	
GPIO pin data input register 130	SIU_GPDI130	8-bits	Base + 0x0882	
GPIO pin data input register 131	SIU_GPDI131	8-bits	Base + 0x0883	
GPIO pin data input register 132	SIU_GPDI132	8-bits	Base + 0x0884	
GPIO pin data input register 133	SIU_GPDI133	8-bits	Base + 0x0885	
GPIO pin data input register 134	SIU_GPDI134	8-bits	Base + 0x0886	
GPIO pin data input register 135	SIU_GPDI135	8-bits	Base + 0x0887	
GPIO pin data input register 136	SIU_GPDI136	8-bits	Base + 0x0888	
GPIO pin data input register 137	SIU_GPDI137	8-bits	Base + 0x0889	
GPIO pin data input register 138	SIU_GPDI138	8-bits	Base + 0x088A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 139	SIU_GPDI139	8-bits	Base + 0x088B	
GPIO pin data input register 140	SIU_GPDI140	8-bits	Base + 0x088C	
GPIO pin data input register 141	SIU_GPDI141	8-bits	Base + 0x088D	
GPIO pin data input register 142	SIU_GPDI142	8-bits	Base + 0x088E	
GPIO pin data input register 143	SIU_GPDI143	8-bits	Base + 0x088F	
GPIO pin data input register 144	SIU_GPDI144	8-bits	Base + 0x0890	
GPIO pin data input register 145	SIU_GPDI145	8-bits	Base + 0x0891	
GPIO pin data input register 146	SIU_GPDI146	8-bits	Base + 0x0892	
GPIO pin data input register 147	SIU_GPDI147	8-bits	Base + 0x0893	
GPIO pin data input register 148	SIU_GPDI148	8-bits	Base + 0x0894	
GPIO pin data input register 149	SIU_GPDI149	8-bits	Base + 0x0895	
GPIO pin data input register 150	SIU_GPDI150	8-bits	Base + 0x0896	
GPIO pin data input register 151	SIU_GPDI151	8-bits	Base + 0x0897	
GPIO pin data input register 152	SIU_GPDI152	8-bits	Base + 0x0898	
GPIO pin data input register 153	SIU_GPDI153	8-bits	Base + 0x0899	
GPIO pin data input register 154	SIU_GPDI154	8-bits	Base + 0x089A	
GPIO pin data input register 155	SIU_GPDI155	8-bits	Base + 0x089B	
GPIO pin data input register 156	SIU_GPDI156	8-bits	Base + 0x089C	
GPIO pin data input register 157	SIU_GPDI157	8-bits	Base + 0x089D	
GPIO pin data input register 158	SIU_GPDI158	8-bits	Base + 0x089E	
GPIO pin data input register 159	SIU_GPDI159	8-bits	Base + 0x089F	
GPIO pin data input register 160	SIU_GPDI160	8-bits	Base + 0x08A0	
GPIO pin data input register 161	SIU_GPDI161	8-bits	Base + 0x08A1	
GPIO pin data input register 162	SIU_GPDI162	8-bits	Base + 0x08A2	
GPIO pin data input register 163	SIU_GPDI163	8-bits	Base + 0x08A3	
GPIO pin data input register 164	SIU_GPDI164	8-bits	Base + 0x08A4	
GPIO pin data input register 165	SIU_GPDI165	8-bits	Base + 0x08A5	
GPIO pin data input register 166	SIU_GPDI166	8-bits	Base + 0x08A6	
GPIO pin data input register 167	SIU_GPDI167	8-bits	Base + 0x08A7	
GPIO pin data input register 168	SIU_GPDI168	8-bits	Base + 0x08A8	
GPIO pin data input register 169	SIU_GPDI169	8-bits	Base + 0x08A9	
GPIO pin data input register 170	SIU_GPDI170	8-bits	Base + 0x08AA	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 171	SIU_GPDI171	8-bits	Base + 0x08AB	
GPIO pin data input register 172	SIU_GPDI172	8-bits	Base + 0x08AC	
GPIO pin data input register 173	SIU_GPDI173	8-bits	Base + 0x08AD	
GPIO pin data input register 174	SIU_GPDI174	8-bits	Base + 0x08AE	
GPIO pin data input register 175	SIU_GPDI175	8-bits	Base + 0x08AF	
GPIO pin data input register 176	SIU_GPDI176	8-bits	Base + 0x08B0	
GPIO pin data input register 177	SIU_GPDI177	8-bits	Base + 0x08B1	
GPIO pin data input register 178	SIU_GPDI178	8-bits	Base + 0x08B2	
GPIO pin data input register 179	SIU_GPDI179	8-bits	Base + 0x08B3	
GPIO pin data input register 180	SIU_GPDI180	8-bits	Base + 0x08B4	
GPIO pin data input register 181	SIU_GPDI181	8-bits	Base + 0x08B5	
GPIO pin data input register 182	SIU_GPDI182	8-bits	Base + 0x08B6	
GPIO pin data input register 183	SIU_GPDI183	8-bits	Base + 0x08B7	
GPIO pin data input register 184	SIU_GPDI184	8-bits	Base + 0x08B8	
GPIO pin data input register 185	SIU_GPDI185	8-bits	Base + 0x08B9	
GPIO pin data input register 186	SIU_GPDI186	8-bits	Base + 0x08BA	
GPIO pin data input register 187	SIU_GPDI187	8-bits	Base + 0x08BB	
GPIO pin data input register 188	SIU_GPDI188	8-bits	Base + 0x08BC	
GPIO pin data input register 189	SIU_GPDI189	8-bits	Base + 0x08BD	
GPIO pin data input register 190	SIU_GPDI190	8-bits	Base + 0x08BE	
GPIO pin data input register 191	SIU_GPDI191	8-bits	Base + 0x08BF	
GPIO pin data input register 192	SIU_GPDI192	8-bits	Base + 0x08C0	
GPIO pin data input register 193	SIU_GPDI193	8-bits	Base + 0x08C1	
GPIO pin data input register 194	SIU_GPDI194	8-bits	Base + 0x08C2	
GPIO pin data input register 195	SIU_GPDI195	8-bits	Base + 0x08C3	
GPIO pin data input register 196	SIU_GPDI196	8-bits	Base + 0x08C4	
GPIO pin data input register 197	SIU_GPDI197	8-bits	Base + 0x08C5	
GPIO pin data input register 198	SIU_GPDI198	8-bits	Base + 0x08C6	
GPIO pin data input register 199	SIU_GPDI199	8-bits	Base + 0x08C7	
GPIO pin data input register 200	SIU_GPDI200	8-bits	Base + 0x08C8	
GPIO pin data input register 201	SIU_GPDI201	8-bits	Base + 0x08C9	
GPIO pin data input register 202	SIU_GPDI202	8-bits	Base + 0x08CA	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
GPIO pin data input register 203	SIU_GPDI203	8-bits	Base + 0x08CB	
GPIO pin data input register 204	SIU_GPDI204	8-bits	Base + 0x08CC	
GPIO pin data input register 205	SIU_GPDI205	8-bits	Base + 0x08CD	
GPIO pin data input register 206	SIU_GPDI206	8-bits	Base + 0x08CE	
GPIO pin data input register 207	SIU_GPDI207	8-bits	Base + 0x08CF	
GPIO pin data input register 208	SIU_GPDI208	8-bits	Base + 0x08D0	
GPIO pin data input register 209	SIU_GPDI209	8-bits	Base + 0x08D1	
GPIO pin data input register 210	SIU_GPDI210	8-bits	Base + 0x08D2	
GPIO pin data input register 211	SIU_GPDI211	8-bits	Base + 0x08D3	
GPIO pin data input register 212	SIU_GPDI212	8-bits	Base + 0x08D4	
GPIO pin data input register 213	SIU_GPDI213	8-bits	Base + 0x08D5	
Reserved	—	—	Base + (0x08D6-0x08FF)	
eQADC trigger input select register	SIU_ETISR	32-bits	Base + 0x0900	
External IRQ input select register	SIU_EISR	32-bits	Base + 0x0904	
DSPI input select register	SIU_DISR	32-bits	Base + 0x0908	
Reserved	—	—	Base + (0x090C-0x097F)	
Chip configuration register	SIU_CCR	32-bits	Base + 0x0980	
External clock control register	SIU_ECCR	32-bits	Base + 0x0984	
Compare A high register	SIU_CARH	32-bits	Base + 0x0988	
Compare A low register	SIU_CARL	32-bits	Base + 0x098C	
Compare B high register	SIU_CBRH	32-bits	Base + 0x0990	
Compare B low register	SIU_CBRL	32-bits	Base + 0x0994	
Reserved	—	—	(Base + 0x0998)- 0xC3F9_FFFF)	
Enhanced Modular Input/Output Subsystem (eMIOS)			0xC3FA_0000	Chapter 18, “Enhanced Modular Input/Output Subsystem (eMIOS)”
Module configuration register	EMIOS_MCR	32-bit	Base + 0x0000	
Global flag register	EMIOS_GFR	32-bit	Base+ 0x0004	
Output update disable register	EMIOS_OUDR	32-bit	Base + 0x0008	
Reserved	—	—	Base + (0x000C-0x001F)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Unified channel <i>n</i> , where <i>n</i> = 0-23	UC base addresses (UCn)		Base + (0x0020 * (n+1))	
Channel A data register <i>n</i>	EMIOS_CADRn	32-bit	UCnBase + 0x00	
Channel B data register <i>n</i>	EMIOS_CBDRn	32-bit	UCnBase + 0x04	
Channel counter register <i>n</i>	EMIOS_CCNTRn	32-bit	UCnBase + 0x08	
Channel control register <i>n</i>	EMIOS_CCRn	32-bit	UCnBase + 0x0C	
Channel status register <i>n</i>	EMIOS_CSRn	32-bit	UCnBase + 0x10	
Reserved	—	—	(UCnBase + 0x14)-0xC3FB_FFFF	
eTPU A engine configuration register	ETPU_ECR_A	32-bit	Base + 0x0014	
eTPU A time base configuration register	ETPU_TBCR_A	32-bit	Base + 0x0020	
eTPU A time base 1	ETPU_TB1R_A	32-bit	Base + 0x0024	
eTPU A time base 2	ETPU_TB2R_A	32-bit	Base + 0x0028	
eTPU A STAC bus interface configuration register	ETPU_REDCR_A	32-bit	Base + 0x002C	
eTPU A channel interrupt status register	ETPU_CISR_A	32-bit	Base + 0x0200	
eTPU A channel data transfer request status register	ETPU_CDTRSR_A	32-bit	Base + 0x0210	
eTPU A channel interrupt overflow status register	ETPU_CIOSR_A	32-bit	Base + 0x0220	
eTPU A channel data transfer request overflow status register	ETPU_CDTROS_A	32-bit	Base + 0x0230	
eTPU A channel interrupt enable register	ETPU_CIER_A	32-bit	Base + 0x0240	
eTPU A channel data transfer request enable register	ETPU_CDTRER_A	32-bit	Base + 0x0250	
eTPU A channel pending service status register	ETPU_CPSSR_A	32-bit	Base + 0x0280	
eTPU A channel service status register	ETPU_CSSR_A	32-bit	Base + 0x0290	
eTPU A channel 0 configuration register	ETPU_C0CR_A	32-bit	Base + 0x0400	
eTPU A channel 0 status and control register	ETPU_C0SCR_A	32-bit	Base + 0x0404	
eTPU A channel 0 host service request register	ETPU_C0HSRR_A	32-bit	Base + 0x0408	
Reserved	—	—	Base + (0x040C-0x040F)	
eTPU A channel 1 configuration register	ETPU_C1CR_A	32-bit	Base + 0x0410	
eTPU A channel 1 status and control register	ETPU_C1SCR_A	32-bit	Base + 0x0414	
eTPU A channel 1 host service request register	ETPU_C1HSRR_A	32-bit	Base + 0x0418	
Reserved	—	—	Base + (0x041C-0x041F)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
eTPU A channel 2 configuration register	ETPU_C2CR_A	32-bit	Base + 0x0420	
eTPU A channel 2 status and control register	ETPU_C2SCR_A	32-bit	Base + 0x0424	
eTPU A channel 2 host service request register	ETPU_C2HSRR_A	32-bit	Base + 0x0428	
Reserved	—	—	Base + (0x042C-0x042F)	
eTPU A channel 3 configuration register	ETPU_C3CR_A	32-bit	Base + 0x0430	
eTPU A channel 3 status and control register	ETPU_C3SCR_A	32-bit	Base + 0x0434	
eTPU A channel 3 host service request register	ETPU_C3HSRR_A	32-bit	Base + 0x0438	
Reserved	—	—	Base + (0x043C-0x043F)	
eTPU A channel 4 configuration register	ETPU_C4CR_A	32-bit	Base + 0x0440	
eTPU A channel 4 status and control register	ETPU_C4SCR_A	32-bit	Base + 0x0444	
eTPU A channel 4 host service request register	ETPU_C4HSRR_A	32-bit	Base + 0x0448	
Reserved	—	—	Base + (0x044C-0x044F)	
eTPU A channel 5 configuration register	ETPU_C5CR_A	32-bit	Base + 0x0450	
eTPU A channel 5 status and control register	ETPU_C5SCR_A	32-bit	Base + 0x0454	
eTPU A channel 5 host service request register	ETPU_C5HSRR_A	32-bit	Base + 0x0458	
Reserved	—	—	Base + (0x045C-0x045F)	
eTPU A channel 6 configuration register	ETPU_C6CR_A	32-bit	Base + 0x0460	
eTPU A channel 6 status and control register	ETPU_C6SCR_A	32-bit	Base + 0x0464	
eTPU A channel 6 host service request register	ETPU_C6HSRR_A	32-bit	Base + 0x0468	
Reserved	—	—	Base + (0x046C-0x046F)	
eTPU A channel 7 configuration register	ETPU_C7CR_A	32-bit	Base + 0x0470	
eTPU A channel 7 status and control register	ETPU_C7SCR_A	32-bit	Base + 0x0474	
eTPU A channel 7 host service request register	ETPU_C7HSRR_A	32-bit	Base + 0x0478	
Reserved	—	—	Base + (0x047C-0x047F)	
eTPU A channel 8 configuration register	ETPU_C8CR_A	32-bit	Base + 0x0480	
eTPU A channel 8 status and control register	ETPU_C8SCR_A	32-bit	Base + 0x0484	
eTPU A channel 8 host service request register	ETPU_C8HSRR_A	32-bit	Base + 0x0488	
Reserved	—	—	Base + (0x048C-0x048F)	
eTPU A channel 9 configuration register	ETPU_C9CR_A	32-bit	Base + 0x0490	
eTPU A channel 9 status and control register	ETPU_C9SCR_A	32-bit	Base + 0x0494	
eTPU A channel 9 host service request register	ETPU_C9HSRR_A	32-bit	Base + 0x0498	
Reserved	—	—	Base + (0x049C-0x049F)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
eTPU A channel 10 configuration register	ETPU_C10CR_A	32-bit	Base + 0x04A0	
eTPU A channel 10 status and control register	ETPU_C10SCR_A	32-bit	Base + 0x04A4	
eTPU A channel 10 host service request register	ETPU_C10HSRR_A	32-bit	Base + 0x04A8	
Reserved	—	—	Base + (0x04AC-0x04AF)	
eTPU A channel 11 configuration register	ETPU_C11CR_A	32-bit	Base + 0x04B0	
eTPU A channel 11 status and control register	ETPU_C11SCR_A	32-bit	Base + 0x04B4	
eTPU A channel 11 host service request register	ETPU_C11HSRR_A	32-bit	Base + 0x04B8	
Reserved	—	—	Base + (0x04BC-0x04BF)	
eTPU A channel 12 configuration register	ETPU_C12CR_A	32-bit	Base + 0x04C0	
eTPU A channel 12 status and control register	ETPU_C12SCR_A	32-bit	Base + 0x04C4	
eTPU A channel 12 host service request register	ETPU_C12HSRR_A	32-bit	Base + 0x04C8	
Reserved	—	—	Base + (0x04CC-0x04CF)	
eTPU A channel 13 configuration register	ETPU_C13CR_A	32-bit	Base + 0x04D0	
eTPU A channel 13 status and control register	ETPU_C13SCR_A	32-bit	Base + 0x04D4	
eTPU A channel 13 host service request register	ETPU_C13HSRR_A	32-bit	Base + 0x04D8	
Reserved	—	—	Base + (0x04DC-0x04DF)	
eTPU A channel 14 configuration register	ETPU_C14CR_A	32-bit	Base + 0x04E0	
eTPU A channel 14 status and control register	ETPU_C14SCR_A	32-bit	Base + 0x04E4	
eTPU A channel 14 host service request register	ETPU_C14HSRR_A	32-bit	Base + 0x04E8	
Reserved	—	—	Base + (0x04EC-0x04EF)	
eTPU A channel 15 configuration register	ETPU_C15CR_A	32-bit	Base + 0x04F0	
eTPU A channel 15 status and control register	ETPU_C15SCR_A	32-bit	Base + 0x04F4	
eTPU A channel 15 host service request register	ETPU_C15HSRR_A	32-bit	Base + 0x04F8	
Reserved	—	—	Base + (0x04FC-0x04FF)	
eTPU A channel 16 configuration register	ETPU_C16CR_A	32-bit	Base + 0x0500	
eTPU A channel 16 status and control register	ETPU_C16SCR_A	32-bit	Base + 0x0504	
eTPU A channel 16 host service request register	ETPU_C16HSRR_A	32-bit	Base + 0x0508	
Reserved	—	—	Base + (0x050C-0x050F)	
eTPU A channel 17 configuration register	ETPU_C17CR_A	32-bit	Base + 0x0510	
eTPU A channel 17 status and control register	ETPU_C17SCR_A	32-bit	Base + 0x0514	
eTPU A channel 17 host service request register	ETPU_C17HSRR_A	32-bit	Base + 0x0518	
Reserved	—	—	Base + (0x051C-0x051F)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
eTPU A channel 18 configuration register	ETPU_C18CR_A	32-bit	Base + 0x0520	
eTPU A channel 18 status and control register	ETPU_C18SCR_A	32-bit	Base + 0x0524	
eTPU A channel 18 host service request register	ETPU_C18HSRR_A	32-bit	Base + 0x0528	
Reserved	—	—	Base + (0x052C-0x052F)	
eTPU A channel 19 configuration register	ETPU_C19CR_A	32-bit	Base + 0x0530	
eTPU A channel 19 status and control register	ETPU_C19SCR_A	32-bit	Base + 0x0534	
eTPU A channel 19 host service request register	ETPU_C19HSRR_A	32-bit	Base + 0x0538	
Reserved	—	—	Base + (0x053C-0x053F)	
eTPU A channel 20 configuration register	ETPU_C20CR_A	32-bit	Base + 0x0540	
eTPU A channel 20 status and control register	ETPU_C20SCR_A	32-bit	Base + 0x0544	
eTPU A channel 20 host service request register	ETPU_C20HSRR_A	32-bit	Base + 0x0548	
Reserved	—	—	Base + (0x054C-0x054F)	
eTPU A channel 21 configuration register	ETPU_C21CR_A	32-bit	Base + 0x0550	
eTPU A channel 21 status and control register	ETPU_C21SCR_A	32-bit	Base + 0x0554	
eTPU A channel 21 host service request register	ETPU_C21HSRR_A	32-bit	Base + 0x0558	
Reserved	—	—	Base + (0x055C-0x055F)	
eTPU A channel 22 configuration register	ETPU_C22CR_A	32-bit	Base + 0x0560	
eTPU A channel 22 status and control register	ETPU_C22SCR_A	32-bit	Base + 0x0564	
eTPU A channel 22 host service request register	ETPU_C22HSRR_A	32-bit	Base + 0x0568	
Reserved	—	—	Base + (0x056C-0x056F)	
eTPU A channel 23 configuration register	ETPU_C23CR_A	32-bit	Base + 0x0570	
eTPU A channel 23 status and control register	ETPU_C23SCR_A	32-bit	Base + 0x0574	
eTPU A channel 23 host service request register	ETPU_C23HSRR_A	32-bit	Base + 0x0578	
Reserved	—	—	Base + (0x057C-0x057F)	
eTPU A channel 24 configuration register	ETPU_C24CR_A	32-bit	Base + 0x0580	
eTPU A channel 24 status and control register	ETPU_C24SCR_A	32-bit	Base + 0x0584	
eTPU A channel 24 host service request register	ETPU_C24HSRR_A	32-bit	Base + 0x0588	
Reserved	—	—	Base + (0x058C-0x058F)	
eTPU A channel 25 configuration register	ETPU_C25CR_A	32-bit	Base + 0x0590	
eTPU A channel 25 status and control register	ETPU_C25SCR_A	32-bit	Base + 0x0594	
eTPU A channel 25 host service request register	ETPU_C25HSRR_A	32-bit	Base + 0x0598	
Reserved	—	—	Base + (0x059C-0x059F)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
eTPU A channel 26 configuration register	ETPU_C26CR_A	32-bit	Base + 0x05A0	
eTPU A channel 26 status and control register	ETPU_C26SCR_A	32-bit	Base + 0x05A4	
eTPU A channel 26 host service request register	ETPU_C26HSRR_A	32-bit	Base + 0x05A8	
Reserved	—	—	Base + (0x05AC-0x05AF)	
eTPU A channel 27 configuration register	ETPU_C27CR_A	32-bit	Base + 0x05B0	
eTPU A channel 27 status and control register	ETPU_C27SCR_A	32-bit	Base + 0x05B4	
eTPU A channel 27 host service request register	ETPU_C27HSRR_A	32-bit	Base + 0x05B8	
Reserved	—	—	Base + (0x05BC-0x05BF)	
eTPU A channel 28 configuration register	ETPU_C28CR_A	32-bit	Base + 0x05C0	
eTPU A channel 28 status and control register	ETPU_C28SCR_A	32-bit	Base + 0x05C4	
eTPU A channel 28 host service request register	ETPU_C28HSRR_A	32-bit	Base + 0x05C8	
Reserved	—	—	Base + (0x05CC-0x05CF)	
eTPU A channel 29 configuration register	ETPU_C29CR_A	32-bit	Base + 0x05D0	
eTPU A channel 29 status and control register	ETPU_C29SCR_A	32-bit	Base + 0x05D4	
eTPU A channel 29 host service request register	ETPU_C29HSRR_A	32-bit	Base + 0x05D8	
Reserved	—	—	Base + (0x05DC-0x05DF)	
eTPU A channel 30 configuration register	ETPU_C30CR_A	32-bit	Base + 0x05E0	
eTPU A channel 30 status and control register	ETPU_C30SCR_A	32-bit	Base + 0x05E4	
eTPU A channel 30 host service request register	ETPU_C30HSRR_A	32-bit	Base + 0x05E8	
Reserved	—	—	Base + (0x05EC-0x05EF)	
eTPU A channel 31 configuration register	ETPU_C31CR_A	32-bit	Base + 0x05F0	
eTPU A channel 31 status and control register	ETPU_C31SCR_A	32-bit	Base + 0x05F4	
eTPU A channel 31 host service request register	ETPU_C31HSRR_A	32-bit	Base + 0x05F8	
Peripheral Bridge B (PBRIDGEB)			0xFFF0_0000	Chapter 5, "Peripheral Bridge (PBRIDGE_A, PBRIDGE_B)"
Peripheral bridge B master privilege control register	PBRIDGEB_MPCR	32-bit	Base + 0x0000	
Reserved	—	—	Base + (0x0004-0x001F)	
Peripheral bridge B peripheral access control register 0	PBRIDGEB_PACR0	32-bit	Base + 0x0020	
Reserved	—	—	Base + (0x0024-0x0027)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Peripheral bridge B peripheral access control register 2	PBRIDGEB_PACR2	32-bit	Base + 0x0028	
Reserved	—	—	Base + (0x002C-0x003F)	
Peripheral bridge B off-platform peripheral access control register 0	PBRIDGEB_OPACR0	32-bit	Base + 0x0040	
Peripheral bridge B off-platform peripheral access control register 1	PBRIDGEB_OPACR1	32-bit	Base + 0x0044	
Peripheral bridge B off-platform peripheral access control register 2	PBRIDGEB_OPACR2	32-bit	Base + 0x0048	
Peripheral bridge B off-platform peripheral access control register 3	PBRIDGEB_OPACR3	32-bit	Base + 0x004C	
Reserved	—	—	(Base + 0x0050)-0xFFFF_3FFF)	
System Bus Crossbar Switch (XBAR)			0xFFFF_4000	Chapter 7, "Crossbar Switch (XBAR)"
Master priority register 0	XBAR_MPR0	32-bit	Base + 0x0000	
Reserved	—	—	Base + (0x0004-0x000F)	
Slave general purpose control register 0	XBAR_SGPCR0	32-bit	Base + 0x0010	
Reserved	—	—	Base + (0x0014-0x00FF)	
Master priority register 1	XBAR_MPR1	32-bit	Base + 0x0100	
Reserved	—	—	Base + (0x0104-0x010F)	
Slave general purpose control register 1	XBAR_SGPCR1	32-bit	Base + 0x0110	
Reserved	—	—	Base + (0x0114-0x02FF)	
Master priority register 3	XBAR_MPR3	32-bit	Base + 0x0300	
Reserved	—	—	Base + (0x0304-0x030F)	
Slave general purpose control register 3	XBAR_SGPCR3	32-bit	Base + 0x0310	
Reserved	—	—	Base + (0x0314-0x05FF)	
Master priority register 6	XBAR_MPR6	32-bit	Base + 0x0600	
Reserved	—	—	Base + (0x0604-0x060F)	
Slave general purpose control register 6	XBAR_SGPCR6	32-bit	Base + 0x0610	
Reserved	—	—	Base + (0x0614-0x06FF)	
Master priority register 7	XBAR_MPR7	32-bit	Base + 0x0700	
Reserved	—	—	Base + (0x0704-0x070F)	
Slave general purpose control register 7	XBAR_SGPCR7	32-bit	Base + 0x0710	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Reserved	—	—	(Base + 0x0714)- 0xFFF4_3FFF)	
Error Correction Status Module (ECSM)			0xFFF4_0000	
Reserved	—	—	Base + (0x0000-0x0015)	
Software watchdog timer control register	ECSM_SWTCR ¹	16-bit	Base + 0x0016	
Reserved	—	—	Base + (0x0018-0x001A)	
Software watchdog timer service register	ECSM_SWTSR ¹	8-bit	Base + 0x001B	
Reserved	—	—	Base + (0x001C-0x001E)	
Software watchdog timer interrupt register	ECSM_SWTIR ¹	8-bit	Base + 0x001F	
Reserved	—	—	Base + (0x0020-0x0023)	
FEC Burst Optimization Master Control register	FBOMCR	32-bit	Base + 0x0024	
Reserved	—	—	Base + (0x0028-0x0042)	
ECC configuration register	ECSM_ECR	8-bit	Base + 0x0043	
Reserved	—	—	Base + (0x0044-0x0046)	
ECC status register	ECSM_ESR	8-bit	Base + 0x0047	
Reserved	—	—	Base + (0x0048-0x0049)	
ECC error generation register	ECSM_EEGR	16-bit	Base + 0x004A	
Reserved	—	—	Base + (0x004C-0x004F)	
Flash ECC address register	ECSM_FEAR	32-bit	Base + 0x0050	
Reserved	—	—	Base + (0x0054-0x0055)	
Flash ECC master number register	ECSM_FEMR	8-bit	Base + 0x0056	
Flash ECC attributes register	ECSM_FEAT	8-bit	Base + 0x0057	
Flash ECC data register high	ECSM_FEDRH	32-bit	Base + 0x0058	
Flash ECC data register low	ECSM_FEDRL	32-bit	Base + 0x005C	
RAM ECC address register	ECSM_REAR	32-bit	Base + 0x0060	
Reserved	—	—	Base + (0x0064-0x0065)	
RAM ECC master number register	ECSM_REMR	8-bit	Base + 0x0066	
RAM ECC attributes register	ECSM_REAT	8-bit	Base + 0x0067	
RAM ECC data register high	ECSM_REDRH	32-bit	Base + 0x0068	
RAM ECC data register low	ECSM_REDRL	32-bit	Base + 0x006C	
Reserved	—	—	(Base + 0x0070)- 0xFFF4_3FFF)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Enhanced Direct Memory Access (eDMA)			0xFFF4_4000	Chapter 9, "Enhanced Direct Memory Access (eDMA)"
Control register	EDMA_CR	32-bit	Base + 0x0000	
Error status register	EDMA_ESR	32-bit	Base + 0x0004	
Enable request register high	EDMA_ERQRH	32-bit	Base + 0x0008	
Enable request register low	EDMA_ERQRL	32-bit	Base + 0x000C	
Enable error interrupt register high	EDMA_EEIRH	32-bit	Base + 0x0010	
Enable error interrupt register low	EDMA_EEIRL	32-bit	Base + 0x0014	
Set enable request register	EDMA_SERQR	8-bit	Base + 0x0018	
Clear enable request register	EDMA_CERQR	8-bit	Base + 0x0019	
Set enable error interrupt register	EDMA_SEEIR	8-bit	Base + 0x001A	
Clear enable error interrupt request register	EDMA_CEEIR	8-bit	Base + 0x001B	
Clear interrupt request register	EDMA_CIRQR	8-bit	Base + 0x001C	
Clear error register	EDMA_CER	8-bit	Base + 0x001D	
Set START bit register	EDMA_SSB	8-bit	Base + 0x001E	
Clear DONE status bit register	EDMA_CDSBR	8-bit	Base + 0x001F	
Interrupt request register high	EDMA_IRQRH	32-bit	Base + 0x0020	
Interrupt request register low	EDMA_IRQRL	32-bit	Base + 0x0024	
Error register high	EDMA_ERH	32-bit	Base + 0x0028	
Error register low	EDMA_ERL	32-bit	Base + 0x002C	
Reserved	—	—	Base + (0x0030-0x00FF)	
Channel priority register 0	EDMA_CPR0	8-bit	Base + 0x0100	
Channel priority register 1	EDMA_CPR1	8-bit	Base + 0x0101	
Channel priority register 2	EDMA_CPR2	8-bit	Base + 0x0102	
Channel priority register 3	EDMA_CPR3	8-bit	Base + 0x0103	
Channel priority register 4	EDMA_CPR4	8-bit	Base + 0x0104	
Channel priority register 5	EDMA_CPR5	8-bit	Base + 0x0105	
Channel priority register 6	EDMA_CPR6	8-bit	Base + 0x0106	
Channel priority register 7	EDMA_CPR7	8-bit	Base + 0x0107	
Channel priority register 8	EDMA_CPR8	8-bit	Base + 0x0108	
Channel priority register 9	EDMA_CPR9	8-bit	Base + 0x0109	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Channel priority register 10	EDMA_CPR10	8-bit	Base + 0x010A	
Channel priority register 11	EDMA_CPR11	8-bit	Base + 0x010B	
Channel priority register 12	EDMA_CPR12	8-bit	Base + 0x010C	
Channel priority register 13	EDMA_CPR13	8-bit	Base + 0x010D	
Channel priority register 14	EDMA_CPR14	8-bit	Base + 0x010E	
Channel priority register 15	EDMA_CPR15	8-bit	Base + 0x010F	
Channel priority register 16	EDMA_CPR16	8-bit	Base + 0x0110	
Channel priority register 17	EDMA_CPR17	8-bit	Base + 0x0111	
Channel priority register 18	EDMA_CPR18	8-bit	Base + 0x0112	
Channel priority register 19	EDMA_CPR19	8-bit	Base + 0x0113	
Channel priority register 20	EDMA_CPR20	8-bit	Base + 0x0114	
Channel priority register 21	EDMA_CPR21	8-bit	Base + 0x0115	
Channel priority register 22	EDMA_CPR22	8-bit	Base + 0x0116	
Channel priority register 23	EDMA_CPR23	8-bit	Base + 0x0117	
Channel priority register 24	EDMA_CPR24	8-bit	Base + 0x0118	
Channel priority register 25	EDMA_CPR25	8-bit	Base + 0x0119	
Channel priority register 26	EDMA_CPR26	8-bit	Base + 0x011A	
Channel priority register 27	EDMA_CPR27	8-bit	Base + 0x011B	
Channel priority register 28	EDMA_CPR28	8-bit	Base + 0x011C	
Channel priority register 29	EDMA_CPR29	8-bit	Base + 0x011D	
Channel priority register 30	EDMA_CPR30	8-bit	Base + 0x011E	
Channel priority register 31	EDMA_CPR31	8-bit	Base + 0x011F	
Channel priority register 32	EDMA_CPR32	8-bit	Base + 0x0120	
Channel priority register 33	EDMA_CPR33	8-bit	Base + 0x0121	
Channel priority register 34	EDMA_CPR34	8-bit	Base + 0x0122	
Channel priority register 35	EDMA_CPR35	8-bit	Base + 0x0123	
Channel priority register 36	EDMA_CPR36	8-bit	Base + 0x0124	
Channel priority register 37	EDMA_CPR37	8-bit	Base + 0x0125	
Channel priority register 38	EDMA_CPR38	8-bit	Base + 0x0126	
Channel priority register 39	EDMA_CPR39	8-bit	Base + 0x0127	
Channel priority register 40	EDMA_CPR40	8-bit	Base + 0x0128	
Channel priority register 41	EDMA_CPR41	8-bit	Base + 0x0129	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Channel priority register 42	EDMA_CPR42	8-bit	Base + 0x012A	
Channel priority register 43	EDMA_CPR43	8-bit	Base + 0x012B	
Channel priority register 44	EDMA_CPR44	8-bit	Base + 0x012C	
Channel priority register 45	EDMA_CPR45	8-bit	Base + 0x012D	
Channel priority register 46	EDMA_CPR46	8-bit	Base + 0x012E	
Channel priority register 47	EDMA_CPR47	8-bit	Base + 0x012F	
Channel priority register 48	EDMA_CPR48	8-bit	Base + 0x0130	
Channel priority register 49	EDMA_CPR49	8-bit	Base + 0x0131	
Channel priority register 50	EDMA_CPR50	8-bit	Base + 0x0132	
Channel priority register 51	EDMA_CPR51	8-bit	Base + 0x0133	
Channel priority register 52	EDMA_CPR52	8-bit	Base + 0x0134	
Channel priority register 53	EDMA_CPR53	8-bit	Base + 0x0135	
Channel priority register 54	EDMA_CPR54	8-bit	Base + 0x0136	
Channel priority register 55	EDMA_CPR55	8-bit	Base + 0x0137	
Channel priority register 56	EDMA_CPR56	8-bit	Base + 0x0138	
Channel priority register 57	EDMA_CPR57	8-bit	Base + 0x0139	
Channel priority register 58	EDMA_CPR58	8-bit	Base + 0x013A	
Channel priority register 59	EDMA_CPR59	8-bit	Base + 0x013B	
Channel priority register 60	EDMA_CPR60	8-bit	Base + 0x013C	
Channel priority register 61	EDMA_CPR61	8-bit	Base + 0x013D	
Channel priority register 62	EDMA_CPR62	8-bit	Base + 0x013E	
Channel priority register 63	EDMA_CPR63	8-bit	Base + 0x013F	
Reserved	—	—	Base + (0x0140-0x0FFF)	
Transfer control descriptor register 0	TCD0	256-bit	Base + 0x1000	
Transfer control descriptor register 1	TCD1	256-bit	Base + 0x1020	
Transfer control descriptor register 2	TCD2	256-bit	Base + 0x1040	
Transfer control descriptor register 3	TCD3	256-bit	Base + 0x1060	
Transfer control descriptor register 4	TCD4	256-bit	Base + 0x1080	
Transfer control descriptor register 5	TCD5	256-bit	Base + 0x10A0	
Transfer control descriptor register 6	TCD6	256-bit	Base + 0x10C0	
Transfer control descriptor register 7	TCD7	256-bit	Base + 0x10E0	
Transfer control descriptor register 8	TCD8	256-bit	Base + 0x1100	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Transfer control descriptor register 9	TCD9	256-bit	Base + 0x1120	
Transfer control descriptor register 10	TCD10	256-bit	Base + 0x1140	
Transfer control descriptor register 11	TCD11	256-bit	Base + 0x1160	
Transfer control descriptor register 12	TCD12	256-bit	Base + 0x1180	
Transfer control descriptor register 13	TCD13	256-bit	Base + 0x11A0	
Transfer control descriptor register 14	TCD14	256-bit	Base + 0x11C0	
Transfer control descriptor register 15	TCD15	256-bit	Base + 0x11E0	
Transfer control descriptor register 16	TCD16	256-bit	Base + 0x1200	
Transfer control descriptor register 17	TCD17	256-bit	Base + 0x1220	
Transfer control descriptor register 18	TCD18	256-bit	Base + 0x1240	
Transfer control descriptor register 19	TCD19	256-bit	Base + 0x1260	
Transfer control descriptor register 20	TCD20	256-bit	Base + 0x1280	
Transfer control descriptor register 21	TCD21	256-bit	Base + 0x12A0	
Transfer control descriptor register 22	TCD22	256-bit	Base + 0x12C0	
Transfer control descriptor register 23	TCD23	256-bit	Base + 0x12E0	
Transfer control descriptor register 24	TCD24	256-bit	Base + 0x1300	
Transfer control descriptor register 25	TCD25	256-bit	Base + 0x1320	
Transfer control descriptor register 26	TCD26	256-bit	Base + 0x1340	
Transfer control descriptor register 27	TCD27	256-bit	Base + 0x1360	
Transfer control descriptor register 28	TCD28	256-bit	Base + 0x1380	
Transfer control descriptor register 29	TCD29	256-bit	Base + 0x13A0	
Transfer control descriptor register 30	TCD30	256-bit	Base + 0x13C0	
Transfer control descriptor register 31	TCD31	256-bit	Base + 0x13E0	
Transfer control descriptor register 32	TCD32	256-bit	Base + 0x1400	
Transfer control descriptor register 33	TCD33	256-bit	Base + 0x1420	
Transfer control descriptor register 34	TCD34	256-bit	Base + 0x1440	
Transfer control descriptor register 35	TCD35	256-bit	Base + 0x1460	
Transfer control descriptor register 36	TCD36	256-bit	Base + 0x1480	
Transfer control descriptor register 37	TCD37	256-bit	Base + 0x14A0	
Transfer control descriptor register 38	TCD38	256-bit	Base + 0x14C0	
Transfer control descriptor register 39	TCD39	256-bit	Base + 0x14E0	
Transfer control descriptor register 40	TCD40	256-bit	Base + 0x1500	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Transfer control descriptor register 41	TCD41	256-bit	Base + 0x1520	
Transfer control descriptor register 42	TCD42	256-bit	Base + 0x1540	
Transfer control descriptor register 43	TCD43	256-bit	Base + 0x1560	
Transfer control descriptor register 44	TCD44	256-bit	Base + 0x1580	
Transfer control descriptor register 45	TCD45	256-bit	Base + 0x15A0	
Transfer control descriptor register 46	TCD46	256-bit	Base + 0x15C0	
Transfer control descriptor register 47	TCD47	256-bit	Base + 0x15E0	
Transfer control descriptor register 48	TCD48	256-bit	Base + 0x1600	
Transfer control descriptor register 49	TCD49	256-bit	Base + 0x1620	
Transfer control descriptor register 50	TCD50	256-bit	Base + 0x1640	
Transfer control descriptor register 51	TCD51	256-bit	Base + 0x1660	
Transfer control descriptor register 52	TCD52	256-bit	Base + 0x1680	
Transfer control descriptor register 53	TCD53	256-bit	Base + 0x16A0	
Transfer control descriptor register 54	TCD54	256-bit	Base + 0x16C0	
Transfer control descriptor register 55	TCD55	256-bit	Base + 0x16E0	
Transfer control descriptor register 56	TCD56	256-bit	Base + 0x1700	
Transfer control descriptor register 57	TCD57	256-bit	Base + 0x1720	
Transfer control descriptor register 58	TCD58	256-bit	Base + 0x1740	
Transfer control descriptor register 59	TCD59	256-bit	Base + 0x1760	
Transfer control descriptor register 60	TCD60	256-bit	Base + 0x1780	
Transfer control descriptor register 61	TCD61	256-bit	Base + 0x17A0	
Transfer control descriptor register 62	TCD62	256-bit	Base + 0x17C0	
Transfer control descriptor register 63	TCD63	256-bit	Base + 0x17E0	
Reserved	—	—	(Base + 0x1800)- 0xFFF4_7FFF	
Interrupt Controller (INTC)			0xFFF4_8000	Chapter 10, "Interrupt Controller (INTC)"
Module configuration register	INTC_MCR	32-bit	Base + 0x0000	
Reserved	—	—	Base + (0x0004-0x0007)	
Current priority register	INTC_CPR	32-bit	Base + 0x0008	
Reserved	—	—	Base + (0x000C-0x000F)	
interrupt acknowledge register	INTC_IACKR	32-bit	Base + 0x0010	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Reserved	—	—	Base + (0x0014-0x0017)	
End of interrupt register	INTC_EOIR	32-bit	Base + 0x0018	
Reserved	—	—	Base + (0x001C-0x001F)	
Software set/clear interrupt register 0	INTC_SSCIR0	8-bit	Base + 0x0020	
Software set/clear interrupt register 1	INTC_SSCIR1	8-bit	Base + 0x0021	
Software set/clear interrupt register 2	INTC_SSCIR2	8-bit	Base + 0x0022	
Software set/clear interrupt register 3	INTC_SSCIR3	8-bit	Base + 0x0023	
Software set/clear interrupt register 4	INTC_SSCIR4	8-bit	Base + 0x0024	
Software set/clear interrupt register 5	INTC_SSCIR5	8-bit	Base + 0x0025	
Software set/clear interrupt register 6	INTC_SSCIR6	8-bit	Base + 0x0026	
Software set/clear interrupt register 7	INTC_SSCIR7	8-bit	Base + 0x0027	
Reserved	—	—	Base + (0x0028-0x003F)	
Priority select register 0	INTC_PSR0	8-bit	Base + 0x0040	
Priority select register 1	INTC_PSR1	8-bit	Base + 0x0041	
Priority select register 2	INTC_PSR2	8-bit	Base + 0x0042	
Priority select register 3	INTC_PSR3	8-bit	Base + 0x0043	
Priority select register 4	INTC_PSR4	8-bit	Base + 0x0044	
Priority select register 5	INTC_PSR5	8-bit	Base + 0x0045	
Priority select register 6	INTC_PSR6	8-bit	Base + 0x0046	
Priority select register 7	INTC_PSR7	8-bit	Base + 0x0047	
Priority select register 8	INTC_PSR8	8-bit	Base + 0x0048	
Priority select register 9	INTC_PSR9	8-bit	Base + 0x0049	
Priority select register 10	INTC_PSR10	8-bit	Base + 0x004A	
Priority select register 11	INTC_PSR11	8-bit	Base + 0x004B	
Priority select register 12	INTC_PSR12	8-bit	Base + 0x004C	
Priority select register 13	INTC_PSR13	8-bit	Base + 0x004D	
Priority select register 14	INTC_PSR14	8-bit	Base + 0x004E	
Priority select register 15	INTC_PSR15	8-bit	Base + 0x004F	
Priority select register 16	INTC_PSR16	8-bit	Base + 0x0050	
Priority select register 17	INTC_PSR17	8-bit	Base + 0x0051	
Priority select register 18	INTC_PSR18	8-bit	Base + 0x0052	
Priority select register 19	INTC_PSR19	8-bit	Base + 0x0053	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 20	INTC_PSR20	8-bit	Base + 0x0054	
Priority select register 21	INTC_PSR21	8-bit	Base + 0x0055	
Priority select register 22	INTC_PSR22	8-bit	Base + 0x0056	
Priority select register 23	INTC_PSR23	8-bit	Base + 0x0057	
Priority select register 24	INTC_PSR24	8-bit	Base + 0x0058	
Priority select register 25	INTC_PSR25	8-bit	Base + 0x0059	
Priority select register 26	INTC_PSR26	8-bit	Base + 0x005A	
Priority select register 27	INTC_PSR27	8-bit	Base + 0x005B	
Priority select register 28	INTC_PSR28	8-bit	Base + 0x005C	
Priority select register 29	INTC_PSR29	8-bit	Base + 0x005D	
Priority select register 30	INTC_PSR30	8-bit	Base + 0x005E	
Priority select register 31	INTC_PSR31	8-bit	Base + 0x005F	
Priority select register 32	INTC_PSR32	8-bit	Base + 0x0060	
Priority select register 33	INTC_PSR33	8-bit	Base + 0x0061	
Priority select register 34	INTC_PSR34	8-bit	Base + 0x0062	
Priority select register 35	INTC_PSR35	8-bit	Base + 0x0063	
Priority select register 36	INTC_PSR36	8-bit	Base + 0x0064	
Priority select register 37	INTC_PSR37	8-bit	Base + 0x0065	
Priority select register 38	INTC_PSR38	8-bit	Base + 0x0066	
Priority select register 39	INTC_PSR39	8-bit	Base + 0x0067	
Priority select register 40	INTC_PSR40	8-bit	Base + 0x0068	
Priority select register 41	INTC_PSR41	8-bit	Base + 0x0069	
Priority select register 42	INTC_PSR42	8-bit	Base + 0x006A	
Priority select register 43	INTC_PSR43	8-bit	Base + 0x006B	
Priority select register 44	INTC_PSR44	8-bit	Base + 0x006C	
Priority select register 45	INTC_PSR45	8-bit	Base + 0x006D	
Priority select register 46	INTC_PSR46	8-bit	Base + 0x006E	
Priority select register 47	INTC_PSR47	8-bit	Base + 0x006F	
Priority select register 48	INTC_PSR48	8-bit	Base + 0x0070	
Priority select register 49	INTC_PSR49	8-bit	Base + 0x0071	
Priority select register 50	INTC_PSR50	8-bit	Base + 0x0072	
Priority select register 51	INTC_PSR51	8-bit	Base + 0x0073	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 52	INTC_PSR52	8-bit	Base + 0x0074	
Priority select register 53	INTC_PSR53	8-bit	Base + 0x0075	
Priority select register 54	INTC_PSR54	8-bit	Base + 0x0076	
Priority select register 55	INTC_PSR55	8-bit	Base + 0x0077	
Priority select register 56	INTC_PSR56	8-bit	Base + 0x0078	
Priority select register 57	INTC_PSR57	8-bit	Base + 0x0079	
Priority select register 58	INTC_PSR58	8-bit	Base + 0x007A	
Priority select register 59	INTC_PSR59	8-bit	Base + 0x007B	
Priority select register 60	INTC_PSR60	8-bit	Base + 0x007C	
Priority select register 61	INTC_PSR61	8-bit	Base + 0x007D	
Priority select register 62	INTC_PSR62	8-bit	Base + 0x007E	
Priority select register 63	INTC_PSR63	8-bit	Base + 0x007F	
Priority select register 64	INTC_PSR64	8-bit	Base + 0x0080	
Priority select register 65	INTC_PSR65	8-bit	Base + 0x0081	
Priority select register 66	INTC_PSR66	8-bit	Base + 0x0082	
Priority select register 67	INTC_PSR67	8-bit	Base + 0x0083	
Priority select register 68	INTC_PSR68	8-bit	Base + 0x0084	
Priority select register 69	INTC_PSR69	8-bit	Base + 0x0085	
Priority select register 70	INTC_PSR70	8-bit	Base + 0x0086	
Priority select register 71	INTC_PSR71	8-bit	Base + 0x0087	
Priority select register 72	INTC_PSR72	8-bit	Base + 0x0088	
Priority select register 73	INTC_PSR73	8-bit	Base + 0x0089	
Priority select register 74	INTC_PSR74	8-bit	Base + 0x008A	
Priority select register 75	INTC_PSR75	8-bit	Base + 0x008B	
Priority select register 76	INTC_PSR76	8-bit	Base + 0x008C	
Priority select register 77	INTC_PSR77	8-bit	Base + 0x008D	
Priority select register 78	INTC_PSR78	8-bit	Base + 0x008E	
Priority select register 79	INTC_PSR79	8-bit	Base + 0x008F	
Priority select register 80	INTC_PSR80	8-bit	Base + 0x0090	
Priority select register 81	INTC_PSR81	8-bit	Base + 0x0091	
Priority select register 82	INTC_PSR82	8-bit	Base + 0x0092	
Priority select register 83	INTC_PSR83	8-bit	Base + 0x0093	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 84	INTC_PSR84	8-bit	Base + 0x0094	
Priority select register 85	INTC_PSR85	8-bit	Base + 0x0095	
Priority select register 86	INTC_PSR86	8-bit	Base + 0x0096	
Priority select register 87	INTC_PSR87	8-bit	Base + 0x0097	
Priority select register 88	INTC_PSR88	8-bit	Base + 0x0098	
Priority select register 89	INTC_PSR89	8-bit	Base + 0x0099	
Priority select register 90	INTC_PSR90	8-bit	Base + 0x009A	
Priority select register 91	INTC_PSR91	8-bit	Base + 0x009B	
Priority select register 92	INTC_PSR92	8-bit	Base + 0x009C	
Priority select register 93	INTC_PSR93	8-bit	Base + 0x009D	
Priority select register 94	INTC_PSR94	8-bit	Base + 0x009E	
Priority select register 95	INTC_PSR95	8-bit	Base + 0x009F	
Priority select register 96	INTC_PSR96	8-bit	Base + 0x00A0	
Priority select register 97	INTC_PSR97	8-bit	Base + 0x00A1	
Priority select register 98	INTC_PSR98	8-bit	Base + 0x00A2	
Priority select register 99	INTC_PSR99	8-bit	Base + 0x00A3	
Priority select register 100	INTC_PSR100	8-bit	Base + 0x00A4	
Priority select register 101	INTC_PSR101	8-bit	Base + 0x00A5	
Priority select register 102	INTC_PSR102	8-bit	Base + 0x00A6	
Priority select register 103	INTC_PSR103	8-bit	Base + 0x00A7	
Priority select register 104	INTC_PSR104	8-bit	Base + 0x00A8	
Priority select register 105	INTC_PSR105	8-bit	Base + 0x00A9	
Priority select register 106	INTC_PSR106	8-bit	Base + 0x00AA	
Priority select register 107	INTC_PSR107	8-bit	Base + 0x00AB	
Priority select register 108	INTC_PSR108	8-bit	Base + 0x00AC	
Priority select register 109	INTC_PSR109	8-bit	Base + 0x00AD	
Priority select register 110	INTC_PSR110	8-bit	Base + 0x00AE	
Priority select register 111	INTC_PSR111	8-bit	Base + 0x00AF	
Priority select register 112	INTC_PSR112	8-bit	Base + 0x00B0	
Priority select register 113	INTC_PSR113	8-bit	Base + 0x00B1	
Priority select register 114	INTC_PSR114	8-bit	Base + 0x00B2	
Priority select register 115	INTC_PSR115	8-bit	Base + 0x00B3	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 116	INTC_PSR116	8-bit	Base + 0x00B4	
Priority select register 117	INTC_PSR117	8-bit	Base + 0x00B5	
Priority select register 118	INTC_PSR118	8-bit	Base + 0x00B6	
Priority select register 119	INTC_PSR119	8-bit	Base + 0x00B7	
Priority select register 120	INTC_PSR120	8-bit	Base + 0x00B8	
Priority select register 121	INTC_PSR121	8-bit	Base + 0x00B9	
Priority select register 122	INTC_PSR122	8-bit	Base + 0x00BA	
Priority select register 123	INTC_PSR123	8-bit	Base + 0x00BB	
Priority select register 124	INTC_PSR124	8-bit	Base + 0x00BC	
Priority select register 125	INTC_PSR125	8-bit	Base + 0x00BD	
Priority select register 126	INTC_PSR126	8-bit	Base + 0x00BE	
Priority select register 127	INTC_PSR127	8-bit	Base + 0x00BF	
Priority select register 128	INTC_PSR128	8-bit	Base + 0x00C0	
Priority select register 129	INTC_PSR129	8-bit	Base + 0x00C1	
Priority select register 130	INTC_PSR130	8-bit	Base + 0x00C2	
Priority select register 131	INTC_PSR131	8-bit	Base + 0x00C3	
Priority select register 132	INTC_PSR132	8-bit	Base + 0x00C4	
Priority select register 133	INTC_PSR133	8-bit	Base + 0x00C5	
Priority select register 134	INTC_PSR134	8-bit	Base + 0x00C6	
Priority select register 135	INTC_PSR135	8-bit	Base + 0x00C7	
Priority select register 136	INTC_PSR136	8-bit	Base + 0x00C8	
Priority select register 137	INTC_PSR137	8-bit	Base + 0x00C9	
Priority select register 138	INTC_PSR138	8-bit	Base + 0x00CA	
Priority select register 139	INTC_PSR139	8-bit	Base + 0x00CB	
Priority select register 140	INTC_PSR140	8-bit	Base + 0x00CC	
Priority select register 141	INTC_PSR141	8-bit	Base + 0x00CD	
Priority select register 142	INTC_PSR142	8-bit	Base + 0x00CE	
Priority select register 143	INTC_PSR143	8-bit	Base + 0x00CF	
Priority select register 144	INTC_PSR144	8-bit	Base + 0x00D0	
Priority select register 145	INTC_PSR145	8-bit	Base + 0x00D1	
Priority select register 146	INTC_PSR146	8-bit	Base + 0x00D2	
Priority select register 147	INTC_PSR147	8-bit	Base + 0x00D3	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 148	INTC_PSR148	8-bit	Base + 0x00D4	
Priority select register 149	INTC_PSR149	8-bit	Base + 0x00D5	
Priority select register 150	INTC_PSR150	8-bit	Base + 0x00D6	
Priority select register 151	INTC_PSR151	8-bit	Base + 0x00D7	
Priority select register 152	INTC_PSR152	8-bit	Base + 0x00D8	
Priority select register 153	INTC_PSR153	8-bit	Base + 0x00D9	
Priority select register 154	INTC_PSR154	8-bit	Base + 0x00DA	
Priority select register 155	INTC_PSR155	8-bit	Base + 0x00DB	
Priority select register 156	INTC_PSR156	8-bit	Base + 0x00DC	
Priority select register 157	INTC_PSR157	8-bit	Base + 0x00DD	
Priority select register 158	INTC_PSR158	8-bit	Base + 0x00DE	
Priority select register 159	INTC_PSR159	8-bit	Base + 0x00DF	
Priority select register 160	INTC_PSR160	8-bit	Base + 0x00E0	
Priority select register 161	INTC_PSR161	8-bit	Base + 0x00E1	
Priority select register 162	INTC_PSR162	8-bit	Base + 0x00E2	
Priority select register 163	INTC_PSR163	8-bit	Base + 0x00E3	
Priority select register 164	INTC_PSR164	8-bit	Base + 0x00E4	
Priority select register 165	INTC_PSR165	8-bit	Base + 0x00E5	
Priority select register 166	INTC_PSR166	8-bit	Base + 0x00E6	
Priority select register 167	INTC_PSR167	8-bit	Base + 0x00E7	
Priority select register 168	INTC_PSR168	8-bit	Base + 0x00E8	
Priority select register 169	INTC_PSR169	8-bit	Base + 0x00E9	
Priority select register 170	INTC_PSR170	8-bit	Base + 0x00EA	
Priority select register 171	INTC_PSR171	8-bit	Base + 0x00EB	
Priority select register 172	INTC_PSR172	8-bit	Base + 0x00EC	
Priority select register 173	INTC_PSR173	8-bit	Base + 0x00ED	
Priority select register 174	INTC_PSR174	8-bit	Base + 0x00EE	
Priority select register 175	INTC_PSR175	8-bit	Base + 0x00EF	
Priority select register 176	INTC_PSR176	8-bit	Base + 0x00F0	
Priority select register 177	INTC_PSR177	8-bit	Base + 0x00F1	
Priority select register 178	INTC_PSR178	8-bit	Base + 0x00F2	
Priority select register 179	INTC_PSR179	8-bit	Base + 0x00F3	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 180	INTC_PSR180	8-bit	Base + 0x00F4	
Priority select register 181	INTC_PSR181	8-bit	Base + 0x00F5	
Priority select register 182	INTC_PSR182	8-bit	Base + 0x00F6	
Priority select register 183	INTC_PSR183	8-bit	Base + 0x00F7	
Priority select register 184	INTC_PSR184	8-bit	Base + 0x00F8	
Priority select register 185	INTC_PSR185	8-bit	Base + 0x00F9	
Priority select register 186	INTC_PSR186	8-bit	Base + 0x00FA	
Priority select register 187	INTC_PSR187	8-bit	Base + 0x00FB	
Priority select register 188	INTC_PSR188	8-bit	Base + 0x00FC	
Priority select register 189	INTC_PSR189	8-bit	Base + 0x00FD	
Priority select register 190	INTC_PSR190	8-bit	Base + 0x00FE	
Priority select register 191	INTC_PSR191	8-bit	Base + 0x00FF	
Priority select register 192	INTC_PSR192	8-bit	Base + 0x0100	
Priority select register 193	INTC_PSR193	8-bit	Base + 0x0101	
Priority select register 194	INTC_PSR194	8-bit	Base + 0x0102	
Priority select register 195	INTC_PSR195	8-bit	Base + 0x0103	
Priority select register 196	INTC_PSR196	8-bit	Base + 0x0104	
Priority select register 197	INTC_PSR197	8-bit	Base + 0x0105	
Priority select register 198	INTC_PSR198	8-bit	Base + 0x0106	
Priority select register 199	INTC_PSR199	8-bit	Base + 0x0107	
Priority select register 200	INTC_PSR200	8-bit	Base + 0x0108	
Priority select register 201	INTC_PSR201	8-bit	Base + 0x0109	
Priority select register 202	INTC_PSR202	8-bit	Base + 0x010A	
Priority select register 203	INTC_PSR203	8-bit	Base + 0x010B	
Priority select register 204	INTC_PSR204	8-bit	Base + 0x010C	
Priority select register 205	INTC_PSR205	8-bit	Base + 0x010D	
Priority select register 206	INTC_PSR206	8-bit	Base + 0x010E	
Priority select register 207	INTC_PSR207	8-bit	Base + 0x010F	
Priority select register 208	INTC_PSR208	8-bit	Base + 0x0110	
Priority select register 209	INTC_PSR209	8-bit	Base + 0x0111	
Priority select register 210	INTC_PSR210	8-bit	Base + 0x0112	
Priority select register 211	INTC_PSR211	8-bit	Base + 0x0113	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 212	INTC_PSR212	8-bit	Base + 0x0114	
Priority select register 213	INTC_PSR213	8-bit	Base + 0x0115	
Priority select register 214	INTC_PSR214	8-bit	Base + 0x0116	
Priority select register 215	INTC_PSR215	8-bit	Base + 0x0117	
Priority select register 216	INTC_PSR216	8-bit	Base + 0x0118	
Priority select register 217	INTC_PSR217	8-bit	Base + 0x0119	
Priority select register 218	INTC_PSR218	8-bit	Base + 0x011A	
Priority select register 219	INTC_PSR219	8-bit	Base + 0x011B	
Priority select register 220	INTC_PSR220	8-bit	Base + 0x011C	
Priority select register 221	INTC_PSR221	8-bit	Base + 0x011D	
Priority select register 222	INTC_PSR222	8-bit	Base + 0x011E	
Priority select register 223	INTC_PSR223	8-bit	Base + 0x011F	
Priority select register 224	INTC_PSR224	8-bit	Base + 0x0120	
Priority select register 225	INTC_PSR225	8-bit	Base + 0x0121	
Priority select register 226	INTC_PSR226	8-bit	Base + 0x0122	
Priority select register 227	INTC_PSR227	8-bit	Base + 0x0123	
Priority select register 228	INTC_PSR228	8-bit	Base + 0x0124	
Priority select register 229	INTC_PSR229	8-bit	Base + 0x0125	
Priority select register 230	INTC_PSR230	8-bit	Base + 0x0126	
Priority select register 231	INTC_PSR231	8-bit	Base + 0x0127	
Priority select register 232	INTC_PSR232	8-bit	Base + 0x0128	
Priority select register 233	INTC_PSR233	8-bit	Base + 0x0129	
Priority select register 234	INTC_PSR234	8-bit	Base + 0x012A	
Priority select register 235	INTC_PSR234	8-bit	Base + 0x012B	
Priority select register 236	INTC_PSR236	8-bit	Base + 0x012C	
Priority select register 237	INTC_PSR237	8-bit	Base + 0x012D	
Priority select register 238	INTC_PSR238	8-bit	Base + 0x012E	
Priority select register 239	INTC_PSR239	8-bit	Base + 0x012F	
Priority select register 240	INTC_PSR240	8-bit	Base + 0x0130	
Priority select register 241	INTC_PSR241	8-bit	Base + 0x0131	
Priority select register 242	INTC_PSR242	8-bit	Base + 0x0132	
Priority select register 243	INTC_PSR243	8-bit	Base + 0x0133	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 244	INTC_PSR244	8-bit	Base + 0x0134	
Priority select register 245	INTC_PSR245	8-bit	Base + 0x0135	
Priority select register 246	INTC_PSR246	8-bit	Base + 0x0136	
Priority select register 247	INTC_PSR247	8-bit	Base + 0x0137	
Priority select register 248	INTC_PSR248	8-bit	Base + 0x0138	
Priority select register 249	INTC_PSR249	8-bit	Base + 0x0139	
Priority select register 250	INTC_PSR250	8-bit	Base + 0x013A	
Priority select register 251	INTC_PSR251	8-bit	Base + 0x013B	
Priority select register 252	INTC_PSR252	8-bit	Base + 0x013C	
Priority select register 253	INTC_PSR253	8-bit	Base + 0x013D	
Priority select register 254	INTC_PSR254	8-bit	Base + 0x013E	
Priority select register 255	INTC_PSR255	8-bit	Base + 0x013F	
Priority select register 256	INTC_PSR256	8-bit	Base + 0x0140	
Priority select register 257	INTC_PSR257	8-bit	Base + 0x0141	
Priority select register 258	INTC_PSR258	8-bit	Base + 0x0142	
Priority select register 259	INTC_PSR259	8-bit	Base + 0x0143	
Priority select register 260	INTC_PSR260	8-bit	Base + 0x0144	
Priority select register 261	INTC_PSR261	8-bit	Base + 0x0145	
Priority select register 262	INTC_PSR262	8-bit	Base + 0x0146	
Priority select register 263	INTC_PSR263	8-bit	Base + 0x0147	
Priority select register 264	INTC_PSR264	8-bit	Base + 0x0148	
Priority select register 265	INTC_PSR265	8-bit	Base + 0x0149	
Priority select register 266	INTC_PSR266	8-bit	Base + 0x014A	
Priority select register 267	INTC_PSR267	8-bit	Base + 0x014B	
Priority select register 268	INTC_PSR268	8-bit	Base + 0x014C	
Priority select register 269	INTC_PSR269	8-bit	Base + 0x014D	
Priority select register 270	INTC_PSR270	8-bit	Base + 0x014E	
Priority select register 271	INTC_PSR271	8-bit	Base + 0x014F	
Priority select register 272	INTC_PSR272	8-bit	Base + 0x0150	
Priority select register 273	INTC_PSR273	8-bit	Base + 0x0151	
Priority select register 274	INTC_PSR274	8-bit	Base + 0x0152	
Priority select register 275	INTC_PSR275	8-bit	Base + 0x0153	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Priority select register 276	INTC_PSR276	8-bit	Base + 0x0154	
Priority select register 277	INTC_PSR277	8-bit	Base + 0x0155	
Priority select register 278	INTC_PSR278	8-bit	Base + 0x0156	
Priority select register 279	INTC_PSR279	8-bit	Base + 0x0157	
Priority select register 280	INTC_PSR280	8-bit	Base + 0x0158	
Priority select register 281	INTC_PSR281	8-bit	Base + 0x0159	
Priority select register 282	INTC_PSR282	8-bit	Base + 0x015A	
Priority select register 283	INTC_PSR283	8-bit	Base + 0x015B	
Priority select register 284	INTC_PSR284	8-bit	Base + 0x015C	
Priority select register 285	INTC_PSR285	8-bit	Base + 0x015D	
Priority select register 286	INTC_PSR286	8-bit	Base + 0x015E	
Priority select register 287	INTC_PSR287	8-bit	Base + 0x015F	
Priority select register 288	INTC_PSR288	8-bit	Base + 0x0160	
Priority select register 289	INTC_PSR289	8-bit	Base + 0x0161	
Priority select register 290	INTC_PSR290	8-bit	Base + 0x0162	
Priority select register 291	INTC_PSR291	8-bit	Base + 0x0163	
Priority select register 292	INTC_PSR292	8-bit	Base + 0x0164	
Priority select register 293	INTC_PSR293	8-bit	Base + 0x0165	
Priority select register 294	INTC_PSR294	8-bit	Base + 0x0166	
Priority select register 295	INTC_PSR295	8-bit	Base + 0x0167	
Priority select register 296	INTC_PSR296	8-bit	Base + 0x0168	
Priority select register 297	INTC_PSR297	8-bit	Base + 0x0169	
Priority select register 298	INTC_PSR298	8-bit	Base + 0x016A	
Priority select register 299	INTC_PSR299	8-bit	Base + 0x016B	
Priority select register 300	INTC_PSR300	8-bit	Base + 0x016C	
Reserved	—	—	Base + (0xFFF0_8000)	
Reserved	—	—	Base + (0xFFF1_0000)	
Enhanced Queued Analog-to-Digital Converter (eQADC)			0xFFF8_0000	Chapter 20, "Enhanced Queued Analog-to-Digital Converter (eQADC)"
Module configuration register	EQADC_MCR	32-bit	Base + 0x0000	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Reserved	—	—	Base + (0x0004-0x0007)	
Null message send format register	EQADC_NMSFR	32-bit	Base + 0x0008	
External trigger digital filter register	EQADC_ETDFR	32-bit	Base + 0x000C	
CFIFO push register 0	EQADC_CFPR0	32-bit	Base +0x0010	
CFIFO push register 1	EQADC_CFPR1	32-bit	Base +0x0014	
CFIFO push register 2	EQADC_CFPR2	32-bit	Base +0x0018	
CFIFO push register 3	EQADC_CFPR3	32-bit	Base +0x001C	
CFIFO push register 4	EQADC_CFPR4	32-bit	Base +0x0020	
CFIFO push register 5	EQADC_CFPR5	32-bit	Base +0x0024	
Reserved	—	—	Base + (0x0028-0x002F)	
Result FIFO pop register 0	EQADC_RFPR0	32-bit	Base + 0x0030	
Result FIFO pop register 1	EQADC_RFPR1	32-bit	Base + 0x0034	
Result FIFO pop register 2	EQADC_RFPR2	32-bit	Base + 0x0038	
Result FIFO pop register 3	EQADC_RFPR3	32-bit	Base + 0x003C	
Result FIFO pop register 4	EQADC_RFPR4	32-bit	Base + 0x0040	
Result FIFO pop register 5	EQADC_RFPR5	32-bit	Base + 0x0044	
Reserved	—	—	Base + (0x0048-0x004F)	
CFIFO control register 0	EQADC_CFCR0	16-bit	Base + 0x0050	
CFIFO control register 1	EQADC_CFCR1	16-bit	Base + 0x0052	
CFIFO control register 2	EQADC_CFCR2	16-bit	Base + 0x0054	
CFIFO control register 3	EQADC_CFCR3	16-bit	Base + 0x0056	
CFIFO control register 4	EQADC_CFCR4	16-bit	Base + 0x0058	
CFIFO control register 5	EQADC_CFCR5	16-bit	Base + 0x005A	
Reserved	—	—	Base + (0x005C-0x005F)	
Interrupt and DMA control register 0	EQADC_IDCR0	16-bit	Base + 0x0060	
Interrupt and DMA control register 1	EQADC_IDCR1	16-bit	Base + 0x0062	
Interrupt and DMA control register 2	EQADC_IDCR2	16-bit	Base + 0x0064	
Interrupt and DMA control register 3	EQADC_IDCR3	16-bit	Base + 0x0066	
Interrupt and DMA control register 4	EQADC_IDCR4	16-bit	Base + 0x0068	
Interrupt and DMA control register 5	EQADC_IDCR5	16-bit	Base + 0x006A	
Reserved	—	—	Base + (0x006C-0x006F)	
FIFO and interrupt status register 0	EQADC_FISR0	32-bit	Base + 0x0070	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
FIFO and interrupt status register 1	EQADC_FISR1	32-bit	Base + 0x0074	
FIFO and interrupt status register 2	EQADC_FISR2	32-bit	Base + 0x0078	
FIFO and interrupt status register 3	EQADC_FISR3	32-bit	Base + 0x007C	
FIFO and interrupt status register 4	EQADC_FISR4	32-bit	Base + 0x0080	
FIFO and interrupt status register 5	EQADC_FISR5	32-bit	Base + 0x0084	
Reserved	—	—	Base + (0x0088-0x008F)	
CFIFO transfer counter register 0	EQADC_CFTCR0	16-bit	Base + 0x0090	
CFIFO transfer counter register 1	EQADC_CFTCR1	16-bit	Base + 0x0092	
CFIFO transfer counter register 2	EQADC_CFTCR2	16-bit	Base + 0x0094	
CFIFO transfer counter register 3	EQADC_CFTCR3	16-bit	Base + 0x0096	
CFIFO transfer counter register 4	EQADC_CFTCR4	16-bit	Base + 0x0098	
CFIFO transfer counter register 5	EQADC_CFTCR5	16-bit	Base + 0x009A	
Reserved	—	—	Base + (0x009C-0x009F)	
CFIFO status snapshot register 0	EQADC_CFSSR0	32-bit	Base + 0x00A0	
CFIFO status snapshot register 1	EQADC_CFSSR1	32-bit	Base + 0x00A4	
CFIFO status snapshot register 2	EQADC_CFSSR2	32-bit	Base + 0x00A8	
CFIFO status register	EQADC_CFSR	32-bit	Base + 0x00AC	
Reserved	—	—	Base + (0x00B0-0x00B3)	
SSI control register	EQADC_SSICR	32-bit	Base + 0x00B4	
SSI receive data register	EQADC_SSIRDR	32-bit	Base + 0x00B8	
Reserved	—	—	Base + (0x00BC-0x00FF)	
CFIFO 0 register 0	EQADC_CF0R0	32-bit	Base + 0x0100	
CFIFO 0 register 1	EQADC_CF0R1	32-bit	Base + 0x0104	
CFIFO 0 register 2	EQADC_CF0R2	32-bit	Base + 0x0108	
CFIFO 0 register 3	EQADC_CF0R3	32-bit	Base + 0x010C	
Reserved	—	—	Base + (0x0110-0x013F)	
CFIFO 1 register 0	EQADC_CF1R0	32-bit	Base + 0x0140	
CFIFO 1 register 1	EQADC_CF1R1	32-bit	Base + 0x0144	
CFIFO 1 register 2	EQADC_CF1R2	32-bit	Base + 0x0148	
CFIFO 1 register 3	EQADC_CF1R3	32-bit	Base + 0x014C	
Reserved	—	—	Base + (0x0150-0x017F)	
CFIFO 2 register 0	EQADC_CF2R0	32-bit	Base + 0x0180	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
CFIFO 2 register 1	EQADC_CF2R1	32-bit	Base + 0x0184	
CFIFO 2 register 2	EQADC_CF2R2	32-bit	Base + 0x0188	
CFIFO 2 register 3	EQADC_CF2R3	32-bit	Base + 0x018C	
Reserved	—	—	Base + (0x0190-0x01BF)	
CFIFO 3 register 0	EQADC_CF3R0	32-bit	Base + 0x01C0	
CFIFO 3 register 1	EQADC_CF3R1	32-bit	Base + 0x01C4	
CFIFO 3 register 2	EQADC_CF3R2	32-bit	Base + 0x01C8	
CFIFO 3 register 3	EQADC_CF3R3	32-bit	Base + 0x01CC	
Reserved	—	—	Base + (0x01D0-0x01FF)	
CFIFO 4 register 0	EQADC_CF4R0	32-bit	Base + 0x0200	
CFIFO 4 register 1	EQADC_CF4R1	32-bit	Base + 0x0204	
CFIFO 4 register 2	EQADC_CF4R2	32-bit	Base + 0x0208	
CFIFO 4 register 3	EQADC_CF4R3	32-bit	Base + 0x020C	
Reserved	—	—	Base + (0x0210-0x023F)	
CFIFO 5 register 0	EQADC_CF5R0	32-bit	Base + 0x0240	
CFIFO 5 register 1	EQADC_CF5R1	32-bit	Base + 0x0244	
CFIFO 5 register 2	EQADC_CF5R2	32-bit	Base + 0x0248	
CFIFO 5 register 3	EQADC_CF5R3	32-bit	Base + 0x024C	
Reserved	—	—	Base + (0x0250-0x02FF)	
RFIFO 0 register 0	EQADC_RF0R0	32-bit	Base + 0x0300	
RFIFO 0 register 1	EQADC_RF0R1	32-bit	Base + 0x0304	
RFIFO 0 register 2	EQADC_RF0R2	32-bit	Base + 0x0308	
RFIFO 0 register 3	EQADC_RF0R3	32-bit	Base + 0x030C	
Reserved	—	—	Base + (0x0310-0x033F)	
RFIFO 1 register 0	EQADC_RF1R0	32-bit	Base + 0x0340	
RFIFO 1 register 1	EQADC_RF1R1	32-bit	Base + 0x0344	
RFIFO 1 register 2	EQADC_RF1R2	32-bit	Base + 0x0348	
RFIFO 1 register 3	EQADC_RF1R3	32-bit	Base + 0x034C	
Reserved	—	—	Base + (0x0350-0x037F)	
RFIFO 2 register 0	EQADC_RF2R0	32-bit	Base + 0x0380	
RFIFO 2 register 1	EQADC_RF2R1	32-bit	Base + 0x0384	
RFIFO 2 register 2	EQADC_RF2R2	32-bit	Base + 0x0388	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
RFIFO 2 register 3	EQADC_RF2R3	32-bit	Base + 0x038C	
Reserved	—	—	Base + (0x0390-0x03BF)	
RFIFO 3 register 0	EQADC_RF3R0	32-bit	Base + 0x03C0	
RFIFO 3 register 1	EQADC_RF3R1	32-bit	Base + 0x03C4	
RFIFO 3 register 2	EQADC_RF3R2	32-bit	Base + 0x03C8	
RFIFO 3 register 3	EQADC_RF3R3	32-bit	Base + 0x03CC	
Reserved	—	—	Base + (0x03D0-0x03FF)	
RFIFO 4 register 0	EQADC_RF4R0	32-bit	Base + 0x0400	
RFIFO 4 register 1	EQADC_RF4R1	32-bit	Base + 0x0404	
RFIFO 4 register 2	EQADC_RF4R2	32-bit	Base + 0x0408	
RFIFO 4 register 3	EQADC_RF4R3	32-bit	Base + 0x040C	
Reserved	—	—	Base + (0x0410-0x043F)	
RFIFO 5 register 0	EQADC_RF5R0	32-bit	Base + 0x0440	
RFIFO 5 register 1	EQADC_RF5R1	32-bit	Base + 0x0444	
RFIFO 5 register 2	EQADC_RF5R2	32-bit	Base + 0x0448	
RFIFO 5 register 3	EQADC_RF5R3	32-bit	Base + 0x044C	
Reserved	—	—	Base + (0x0450-0x07FF)	
ADC0 control register	ADC0_CR		No memory mapped access	
ADC1 control register	ADC1_CR			
ADC time stamp control register	ADC_TSCR			
ADC time base counter register	ADC_TBCR			
ADC0 gain calibration constant register	ADC0_GCCR			
ADC1 gain calibration constant register	ADC1_GCCR			
ADC0 offset calibration constant register	ADC0_OCCR			
ADC1 offset calibration constant register	ADC1_OCCR			
Reserved	—	—	(Base + 0x0800)- 0xFFFF_FFFF	
Deserial / Serial Peripheral Interface (DSPIx)			0xFFF9_4000 (DSPI B) 0xFFF9_8000 (DSPI C) 0xFFF9_C000 (DSPI D)	Chapter 21, “Deserial Serial Peripheral Interface (DSPI)”
Module configuration register	DSPIx_MCR	32-bit	Base + 0x0000	
Reserved	—	—	Base + (0x0004-0x0007)	
Transfer count register	DSPIx_TCR	32-bit	Base + 0x0008	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Clock and transfer attribute register 0	DSPIx_CTAR0	32-bit	Base + 0x000C	
Clock and transfer attribute register 1	DSPIx_CTAR1	32-bit	Base + 0x0010	
Clock and transfer attribute register 2	DSPIx_CTAR2	32-bit	Base + 0x0014	
Clock and transfer attribute register 3	DSPIx_CTAR3	32-bit	Base + 0x0018	
Clock and transfer attribute register 4	DSPIx_CTAR4	32-bit	Base + 0x001C	
Clock and transfer attribute register 5	DSPIx_CTAR5	32-bit	Base + 0x0020	
Clock and transfer attribute register 6	DSPIx_CTAR6	32-bit	Base + 0x0024	
Clock and transfer attribute register 7	DSPIx_CTAR7	32-bit	Base + 0x0028	
Status register	DSPIx_SR	32-bit	Base + 0x002C	
DMA/interrupt request select and enable register	DSPIx_RSER	32-bit	Base + 0x0030	
Push TX FIFO register	DSPIx_PUSHR	32-bit	Base + 0x0034	
Pop RX FIFO register	DSPIx_POPR	32-bit	Base + 0x0038	
Transmit FIFO registers 0	DSPIx_TXFR0	32-bit	Base + 0x003C	
Transmit FIFO registers 1	DSPIx_TXFR1	32-bit	Base + 0x0040	
Transmit FIFO registers 2	DSPIx_TXFR2	32-bit	Base + 0x0044	
Transmit FIFO registers 3	DSPIx_TXFR3	32-bit	Base + 0x0048	
Reserved	—	—	Base + (0x004C-0x007B)	
Receive FIFO registers 0	DSPIx_RXFR0	32-bit	Base + 0x007C	
Receive FIFO registers 1	DSPIx_RXFR1	32-bit	Base + 0x0080	
Receive FIFO registers 2	DSPIx_RXFR2	32-bit	Base + 0x0084	
Receive FIFO registers 3	DSPIx_RXFR3	32-bit	Base + 0x0088	
Reserved	—	—	Base + (0x008C-0x00BB)	
DSI configuration register	DSPIx_DSICR	32-bit	Base + 0x00BC	
DSI serialization data register	DSPIx_SDR	32-bit	Base + 0x00C0	
DSI alternate serialization data register	DSPIx_ASDR	32-bit	Base + 0x00C4	
DSI transmit comparison register	DSPIx_COMPR	32-bit	Base + 0x00C8	
DSI deserialization data register	DSPIx_DDR	32-bit	Base + 0x00CC	
Reserved	—	—	(Base +0x00D0)- (0xFFF9_3FFF) (A) (0xFFF9_7FFF) (B) (0xFFF9_BFFF) (C) (0xFFFA_FFFF) (D)	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Enhanced Serial Communication Interface (eSCIx)			0xFFFB_0000 (A) 0xFFFB_4000 (B)	Chapter 22, "Enhanced Serial Communication Interface (eSCI)"
Control register 1	ESCIx_CR1	32-bit	Base + 0x0000	
Control register 2	ESCIx_CR2	16-bit	Base + 0x0004	
Data register	ESCIx_DR	16-bit	Base + 0x0006	
Status register	ESCIx_SR	32-bit	Base + 0x0008	
LIN control register	ESCIx_LCR	32-bit	Base + 0x000C	
LIN transmit register	ESCIx_LTR	32-bit	Base + 0x0010	
LIN receive register	ESCIx_LRR	32-bit	Base + 0x0014	
LIN CRC polynomial register	ESCIx_LPR	32-bit	Base + 0x0018	
Reserved	—	—	(Base + 0x001C)- (0xFFFB_3FFF) (A) (0xFFFB_7FFF) (B)	
FlexCAN2 Controller Area Network (CANx)			0xFFFC_0000 (FlexCAN A) 0xFFFC_4000 (FlexCAN B) 0xFFFC_8000 (FlexCAN C) 0xFFFF_C000 (FlexCAN D) 0xFFFF_E000 (FlexCAN E)	Chapter 23, "FlexCAN2 Controller Area Network"
Module configuration register	CANx_MCR	32-bit	Base + 0x0000	
Control register	CANx_CR	32-bit	Base + 0x0004	
Free running timer register	CANx_TIMER	32-bit	Base + 0x0008	
Reserved	—	—	Base + (0x000C-0x000F)	
Receive global mask register	CANx_RXGMASK	32-bit	Base + 0x0010	
Receive buffer 14 mask register	CANx_RX14MASK	32-bit	Base + 0x0014	
Receive buffer 15 mask register	CANx_RX15MASK	32-bit	Base + 0x0018	
Error counter register	CANx_ECR	32-bit	Base + 0x001C	
Error and status register	CANx_ESR	32-bit	Base + 0x0020	
Interrupt mask register high	CANx_IMRH	32-bit	Base + 0x0024	
Interrupt mask register low	CANx_IMRL	32-bit	Base + 0x0028	
Interrupt flag register high	CANx_IFRH	32-bit	Base + 0x002C	
Interrupt flag register low	CANx_IFRL	32-bit	Base + 0x0030	
Reserved	—	—	Base + (0x0034-0x007F)	
FlexRay Module			0xFFFE_0000	Chapter 17, "FlexRay"

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Module Version Register (MVR)		16-bit	Base + 0x000	
Module Configuration Register (FR_MCR)		16-bit	Base + 0x002	
System Memory Base Address High Register (SYMBADHR)		16-bit	Base + 0x004	
System Memory Base Address Low Register (SYMBADLR)		16-bit	Base + 0x006	
Strobe Signal Control Register (STBSCR)		16-bit	Base + 0x008	
Strobe Port Control Register (STBPCR)		16-bit	Base + 0x00A	
Message Buffer Data Size Register (MBDSR)		16-bit	Base + 0x00C	
Message Buffer Segment Size and Utilization Register (MBSSUTR)		16-bit	Base + 0x00E	
Reserved			Base + 0x010 - 0x013	
Protocol Operation Control Register (POCR)		16-bit	Base + 0x014	
Global Interrupt Flag and Enable Register (GIFER)		16-bit	Base + 0x016	
Protocol Interrupt Flag Register 0 (PIFR0)		16-bit	Base + 0x018	
Protocol Interrupt Flag Register 1 (PIFR1)		16-bit	Base + 0x01A	
Protocol Interrupt Enable Register 0 (PIER0)		16-bit	Base + 0x01C	
Protocol Interrupt Enable Register 1 (PIER1)		16-bit	Base + 0x01E	
CHI Error Flag Register (CHIERFR)		16-bit	Base + 0x020	
Message Buffer Interrupt Vector Register (MBIVEC)		16-bit	Base + 0x022	
Channel A Status Error Counter Register (CASERCR)		16-bit	Base + 0x024	
Channel B Status Error Counter Register (CBSERCR)		16-bit	Base + 0x026	
Protocol Status Register 0 (PSR0)		16-bit	Base + 0x028	
Protocol Status Register 1 (PSR1)		16-bit	Base + 0x02A	
Protocol Status Register 2 (PSR2)		16-bit	Base + 0x02C	
Protocol Status Register 3 (PSR3)		16-bit	Base + 0x02E	
Macrotick Counter Register (MTCTR)		16-bit	Base + 0x030	
Cycle Counter Register (CYCTR)		16-bit	Base + 0x032	
Slot Counter Channel A Register (SLTCTAR)		16-bit	Base + 0x034	
Slot Counter Channel B Register (SLTCTBR)		16-bit	Base + 0x036	
Rate Correction Value Register (RTCORVR)		16-bit	Base + 0x038	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Offset Correction Value Register (OFCORVR)		16-bit	Base + 0x03A	
Combined Interrupt Flag Register (CIFRR)		16-bit	Base + 0x03C	
Reserved			Base + 0x03E	
Sync Frame Counter Register (SFCNTR)		16-bit	Base + 0x040	
Sync Frame Table Offset Register (SFTOR)		16-bit	Base + 0x042	
Sync Frame Table Configuration, Control, Status Register (SFTCCSR)		16-bit	Base + 0x044	
Sync Frame ID Rejection Filter Register (SFIDRFR)		16-bit	Base + 0x046	
Sync Frame ID Acceptance Filter Value Register (SFIDAFVR)		16-bit	Base + 0x048	
Sync Frame ID Acceptance Filter Mask Register (SFIDAFMR)		16-bit	Base + 0x04A	
Network Management Vector Register 0 (NMVR0)		16-bit	Base + 0x04C	
Network Management Vector Register 1 (NMVR1)		16-bit	Base + 0x04E	
Network Management Vector Register 2 (NMVR2)		16-bit	Base + 0x050	
Network Management Vector Register 3 (NMVR3)		16-bit	Base + 0x052	
Network Management Vector Register 4 (NMVR4)		16-bit	Base + 0x054	
Network Management Vector Register 5 (NMVR5)		16-bit	Base + 0x056	
Network Management Vector Length Register (NMVLR)		16-bit	Base + 0x058	
Timer Configuration and Control Register (TICCR)		16-bit	Base + 0x05A	
Timer 1 Cycle Set Register (TI1CYSR)		16-bit	Base + 0x05C	
Timer 1 Macrotick Offset Register (TI1MTOR)		16-bit	Base + 0x05E	
Timer 2 Configuration Register 0 (TI2CR0)		16-bit	Base + 0x060	
Timer 2 Configuration Register 1 (TI2CR1)		16-bit	Base + 0x062	
Slot Status Selection Register (SSSR)		16-bit	Base + 0x064	
Slot Status Counter Condition Register (SSCCR)		16-bit	Base + 0x066	
Slot Status Register 0 (SSR0)		16-bit	Base + 0x068	
Slot Status Register 1 (SSR1)		16-bit	Base + 0x06A	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Slot Status Register 2 (SSR2)		16-bit	Base + 0x06C	
Slot Status Register 3 (SSR3)		16-bit	Base + 0x06E	
Slot Status Register 4 (SSR4)		16-bit	Base + 0x070	
Slot Status Register 5 (SSR5)		16-bit	Base + 0x072	
Slot Status Register 6 (SSR6)		16-bit	Base + 0x074	
Slot Status Register 7 (SSR7)		16-bit	Base + 0x076	
Slot Status Counter Register 0 (SSCR0)		16-bit	Base + 0x078	
Slot Status Counter Register 1 (SSCR1)		16-bit	Base + 0x07A	
Slot Status Counter Register 2 (SSCR2)		16-bit	Base + 0x07C	
Slot Status Counter Register 3 (SSCR3)		16-bit	Base + 0x07E	
MTS A Configuration Register (MTSACFR)		16-bit	Base + 0x080	
MTS B Configuration Register (MTSBCFR)		16-bit	Base + 0x082	
Receive Shadow Buffer Index Register (RSBIR)		16-bit	Base + 0x084	
Receive FIFO Selection Register (RFSR)		16-bit	Base + 0x086	
Receive FIFO Start Index Register (RFSIR)		16-bit	Base + 0x088	
Receive FIFO Depth and Size Register (RFDSR)		16-bit	Base + 0x08A	
Receive FIFO A Read Index Register (RFARIR)		16-bit	Base + 0x08C	
Receive FIFO B Read Index Register (RFBIRIR)		16-bit	Base + 0x08E	
Receive FIFO Message ID Acceptance Filter Value Register (RFMIDAFVR)		16-bit	Base + 0x090	
Receive FIFO Message ID Acceptance Filter Mask Register (RFMIAFMR)		16-bit	Base + 0x092	
Receive FIFO Frame ID Rejection Filter Value Register (RFFIDRFVR)		16-bit	Base + 0x094	
Receive FIFO Frame ID Rejection Filter Mask Register (RFFIDRFMR)		16-bit	Base + 0x096	
Receive FIFO Range Filter Configuration Register (RFRFCFR)		16-bit	Base + 0x098	
Receive FIFO Range Filter Control Register (RFRFCTR)		16-bit	Base + 0x09A	
Last Dynamic Transmit Slot Channel A Register (LDTXSLAR)		16-bit	Base + 0x09C	
Last Dynamic Transmit Slot Channel B Register (LDTXSLBR)		16-bit	Base + 0x09E	
Protocol Configuration Registers[0-30] (PCR _n)		16-bit	Base + 0x0A0 - Base + 0x0DC	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Reserved			Base + 0x0DE - Base + 0x0FE	
Message Buffer Configuration, Control, Status Register 0 (MBCCSR0)		16-bit	Base + 0x0100	
Message Buffer Cycle Counter Filter Register 0 (MBCCFR0)		16-bit	Base + 0x0102	
Message Buffer Frame ID Register 0 (MBFIDR0)		16-bit	Base + 0x0104	
Message Buffer Index Register 0 (MBIDXR0)		16-bit	Base + 0x0106	
Message Buffer Configuration, Control, Status Register 1 (MBCCSR1)		16-bit	Base + 0x0108	
Message Buffer Cycle Counter Filter Register 1 (MBCCFR1)		16-bit	Base + 0x010A	
Message Buffer Frame ID Register 1 (MBFIDR1)		16-bit	Base + 0x010C	
Message Buffer Index Register 1 (MBIDXR1)		16-bit	Base + 0x010E	
▪ ▪ ▪			▪ ▪ ▪	
Message Buffer Configuration, Control, Status Register 127 (MBCCSR127)		16-bit	Base + 0x4F8	
Message Buffer Cycle Counter Filter Register 127 (MBCCFR127)		16-bit	Base + 0x4FA	
Message Buffer Frame ID Register 127 (MBFIDR127)		16-bit	Base + 0x4FC	
Message Buffer Index Register 127 (MBIDXR127)		16-bit	Base + 0x4FE	
Reserved				
Boot Assist Module (BAM)			0xFFFF_C000	Chapter 15, “Boot Assist Module (BAM)”
Message buffer 0	MB0	16-bit	Base + 0x0080	
Message buffer 1	MB1	16-bit	Base + 0x0090	
Message buffer 2	MB2	16-bit	Base + 0x00A0	
Message buffer 3	MB3	16-bit	Base + 0x00B0	
Message buffer 4	MB4	16-bit	Base + 0x00C0	
Message buffer 5	MB5	16-bit	Base + 0x00D0	
Message buffer 6	MB6	16-bit	Base + 0x00E0	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Message buffer 7	MB7	16-bit	Base + 0x00F0	
Message buffer 8	MB8	16-bit	Base + 0x0100	
Message buffer 9	MB9	16-bit	Base + 0x0110	
Message buffer 10	MB10	16-bit	Base + 0x0120	
Message buffer 11	MB11	16-bit	Base + 0x0130	
Message buffer 12	MB12	16-bit	Base + 0x0140	
Message buffer 13	MB13	16-bit	Base + 0x0150	
Message buffer 14	MB14	16-bit	Base + 0x0160	
Message buffer 15	MB15	16-bit	Base + 0x0170	
Message buffer 16	MB16	16-bit	Base + 0x0180	
Message buffer 17	MB17	16-bit	Base + 0x0190	
Message buffer 18	MB18	16-bit	Base + 0x01A0	
Message buffer 19	MB19	16-bit	Base + 0x01B0	
Message buffer 20	MB20	16-bit	Base + 0x01C0	
Message buffer 21	MB21	16-bit	Base + 0x01D0	
Message buffer 22	MB22	16-bit	Base + 0x01E0	
Message buffer 23	MB23	16-bit	Base + 0x01F0	
Message buffer 24	MB24	16-bit	Base + 0x0200	
Message buffer 25	MB25	16-bit	Base + 0x0210	
Message buffer 26	MB26	16-bit	Base + 0x0220	
Message buffer 27	MB27	16-bit	Base + 0x0230	
Message buffer 28	MB28	16-bit	Base + 0x0240	
Message buffer 29	MB29	16-bit	Base + 0x0250	
Message buffer 30	MB30	16-bit	Base + 0x0260	
Message buffer 31	MB31	16-bit	Base + 0x0270	
Message buffer 32	MB32	16-bit	Base + 0x0280	
Message buffer 33	MB33	16-bit	Base + 0x0290	
Message buffer 34	MB34	16-bit	Base + 0x02A0	
Message buffer 35	MB35	16-bit	Base + 0x02B0	
Message buffer 36	MB36	16-bit	Base + 0x02C0	
Message buffer 37	MB37	16-bit	Base + 0x02D0	
Message buffer 38	MB38	16-bit	Base + 0x02E0	

Table A-2. MPC5567 Detailed Register Map (continued)

Register Description	Register Name	Used Size	Address	Reference
Message buffer 39	MB39	16-bit	Base + 0x02F0	
Message buffer 40	MB40	16-bit	Base + 0x0300	
Message buffer 41	MB41	16-bit	Base + 0x0310	
Message buffer 42	MB42	16-bit	Base + 0x0320	
Message buffer 43	MB43	16-bit	Base + 0x0330	
Message buffer 44	MB44	16-bit	Base + 0x0340	
Message buffer 45	MB45	16-bit	Base + 0x0350	
Message buffer 46	MB46	16-bit	Base + 0x0360	
Message buffer 47	MB47	16-bit	Base + 0x0370	
Message buffer 48	MB48	16-bit	Base + 0x0380	
Message buffer 49	MB49	16-bit	Base + 0x0390	
Message buffer 50	MB50	16-bit	Base + 0x03A0	
Message buffer 51	MB51	16-bit	Base + 0x03B0	
Message buffer 52	MB52	16-bit	Base + 0x03C0	
Message buffer 53	MB53	16-bit	Base + 0x03D0	
Message buffer 54	MB54	16-bit	Base + 0x03E0	
Message buffer 55	MB55	16-bit	Base + 0x03F0	
Message buffer 56	MB56	16-bit	Base + 0x0400	
Message buffer 57	MB57	16-bit	Base + 0x0410	
Message buffer 58	MB58	16-bit	Base + 0x0420	
Message buffer 59	MB59	16-bit	Base + 0x0430	
Message buffer 60	MB60	16-bit	Base + 0x0440	
Message buffer 61	MB61	16-bit	Base + 0x0450	
Message buffer 62	MB62	16-bit	Base + 0x0460	
Message buffer 63	MB63	16-bit	Base + 0x0470	
Reserved	—	—	(Base + 0x0500)-	—

¹ The registers mapped in the ECSM module (0xFFF4_0014-0xFFF4_001F) provide control and configuration for a software watchdog timer, and are included as part of a standard Freescale ECSM block incorporated in the MPC5567. The eSys core also provides this functionality and is the preferred method for watchdog implementation. In order to optimize code portability to other members of the eSys MPU family, use of the watchdog registers in the ECSM is not recommended.

Table A-3. e200z6 Core SPR Numbers (Supervisor Mode)

Register	Description	SPR (decimal)
General Registers		
XER	Integer Exception Register	1
LR	Link Register	8
CTR	Count Register	9
GPR0–GPR31	General Purpose Registers	N/A
Special Purpose Registers		
SPRG0	Special Purpose Register 0	272
SPRG1	Special Purpose Register 1	273
SPRG2	Special Purpose Register 2	274
SPRG3	Special Purpose Register 3	275
SPRG4	Special Purpose Register 4	276
SPRG5	Special Purpose Register 5	277
SPRG6	Special Purpose Register 6	278
SPRG7	Special Purpose Register 7	279
USPRG0	User Special Purpose Register	256
BUCSR	Branch Unit Control and Status Register	1013
Exception Handling/Control Registers		
SRR0	Save and Restore Register 0	26
SRR1	Save and Restore Register 1	27
CSRR0	Critical Save and Restore Register 0	58
CSRR1	Critical Save and Restore Register 1	59
DSRR0	Debug Save and Restore Register 0	574
DSRR1	Debug Save and Restore Register 1	575
ESR	Exception Syndrome Register	62
MCSR	Machine Check Syndrome Register	572
DEAR	Data Exception Address Register	61
IVPR	Interrupt Vector Prefix Register	63
IVOR1	Interrupt Vector Offset Register 1	401
IVOR2	Interrupt Vector Offset Register 2	402
IVOR3	Interrupt Vector Offset Register 3	403
IVOR4	Interrupt Vector Offset Register 4	404
IVOR5	Interrupt Vector Offset Register 5	405
IVOR6	Interrupt Vector Offset Register 6	406

Table A-3. e200z6 Core SPR Numbers (Supervisor Mode) (continued)

Register	Description	SPR (decimal)
IVOR7	Interrupt Vector Offset Register 7	407
IVOR8	Interrupt Vector Offset Register 8	408
IVOR9	Not Supported	—
IVOR10	Interrupt Vector Offset Register 10	410
IVOR11	Interrupt Vector Offset Register 11	411
IVOR12	Interrupt Vector Offset Register 12	412
IVOR13	Interrupt Vector Offset Register 13	413
IVOR14	Interrupt Vector Offset Register 14	414
IVOR15	Interrupt Vector Offset Register 15	415
IVOR32	Interrupt Vector Offset Register 32	528
IVOR33	Interrupt Vector Offset Register 33	529
IVOR34	Interrupt Vector Offset Register 34	530
Processor Control Registers		
MSR	Machine State Register	N/A
PVR	Processor Version Register	287
PIR	Processor ID Register	286
SVR	System Version Register	1023
HID0	Hardware Implementation Dependent Register 0	1008
HID1	Hardware Implementation Dependent Register 1	1009
Timer Registers		
TBL	Time Base Lower Register	284
TBU	Time Base Upper Register	285
TCR	Timer Control Register	340
TSR	Timer Status Register	336
DEC	Decrementer Register	22
DECAR	Decrementer Auto-reload Register	54
Debug Registers		
DBCR0	Debug Control Register 0	308
DBCR1	Debug Control Register 1	309
DBCR2	Debug Control Register 2	310
DBCR3	Debug Control Register 3	561
DBSR	Debug Status Register	304
DBCNT	Debug Counter Register	562

Table A-3. e200z6 Core SPR Numbers (Supervisor Mode) (continued)

Register	Description	SPR (decimal)
IAC1	Instruction Address Compare Register 1	312
IAC2	Instruction Address Compare Register 2	313
IAC3	Instruction Address Compare Register 3	314
IAC4	Instruction Address Compare Register 4	315
DAC1	Data Address Compare Register 1	316
DAC2	Data Address Compare Register 2	317
Memory Management Registers		
MAS0	MMU Assist Register 0	624
MAS1	MMU Assist Register 1	625
MAS2	MMU Assist Register 2r	626
MAS3	MMU Assist Register 3	627
MAS4	MMU Assist Register 4	628
MAS6	MMU Assist Register 6	630
PID0	Process ID Register	48
MMUCSR0	MMU Control and Status Register 0	1012
MMUCFG	MMU Configuration Register	1015
TLB0CFG	TLB 0 Configuration Register	688
TLB1CFG	TLB 1 Configuration Register	689
Cache Registers		
L1CFG0	L1 Cache Configuration Register	515
L1CSR0	L1 Cache Control and Status Register 0	1010
L1FINV0	L1 Cache Flush and Invalidate Control Register 0	1016
APU Registers		
SPEFSCR	SPE APU Status and Control Register	512

Table A-4. e200z6 Core SPR Numbers (User Mode)

Register	Description	SPR (decimal)
General Registers		
CTR	Count Register	9
LR	Link Register	8
XER	Integer Exception Register	1
GPR0–GPR31	General Purpose Registers	N/A

Table A-4. e200z6 Core SPR Numbers (User Mode) (continued)

Register	Description	SPR (decimal)
Special Purpose Registers		
SPRG4	Special Purpose Register 4	260
SPRG5	Special Purpose Register 5	261
SPRG6	Special Purpose Register 6	262
SPRG7	Special Purpose Register 7	263
USPRG0	User Special Purpose Register	256
Timer Registers		
TBL	Time Base Lower Register	268
TBU	Time Base Upper Register	269
Cache Registers		
L1CFG0	L1 Cache Configuration Register	515
APU Registers		
SPEFSCR	SPE APU Status and Control Register	512

Appendix B Calibration

B.1 Overview

The MPC5500 family of microcontrollers includes various specialized features to support automotive calibration. Many of these calibration features are not intended to be available for use by the final application software, and some MPC5500 devices support calibration signals that are not available in the standard 208, 324, and 416 BGA packages. Special calibration packaged devices with increased signal bond out are used to provide full access to all calibration resources for all MPC5500 variants.

Calibration hardware that makes use of these calibration packaged devices is detailed in [Figure B-1](#). Freescale-produced “VertiCal bases” use the calibration-packaged MPC5500 device mounted on a small circuit board with a footprint which is compatible with that of the production BGA packaged MPC5500 device. A 156 way “VertiCal connector” on the top side of the VertiCal base allows VertiCal compliant “top board” hardware to be attached. Various types of top board hardware to support calibration and debug is available from Freescale and 3rd parties.

The VertiCal connector standard defines a set of signals that are used for communication between the microcontroller on the VertiCal Base Board and any attached calibration tools or “top boards”. There are some differences in signal availability or sourcing for the VertiCal connector depending on the MPC5500 device variant being used.

The calibration system is illustrated in [Figure B-1](#) and the VertiCal Base is illustrated in [Figure B-2](#).

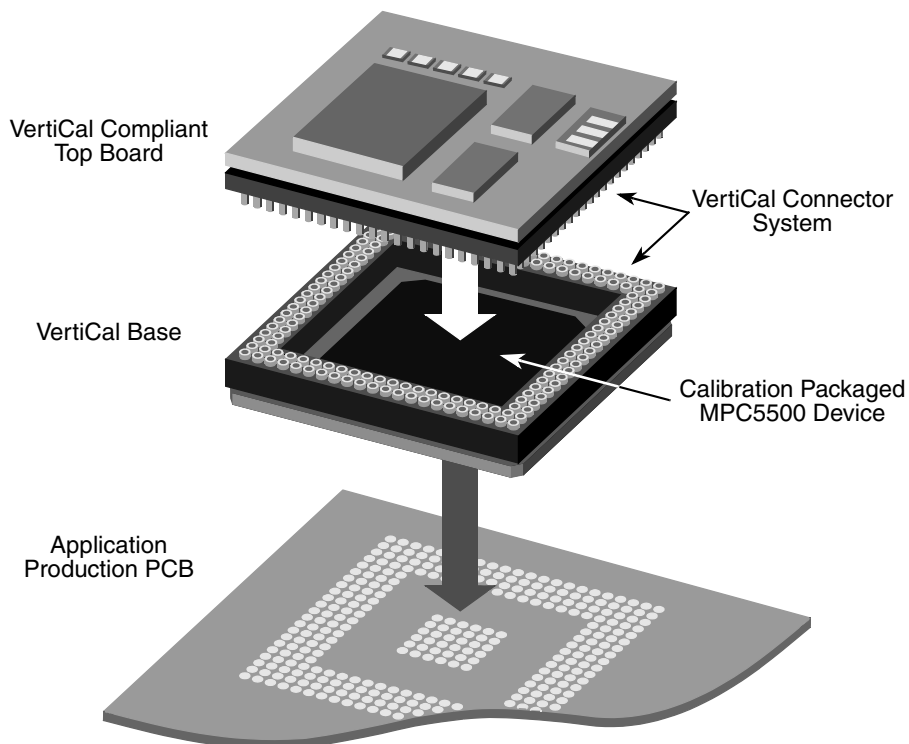


Figure B-1. Calibration System

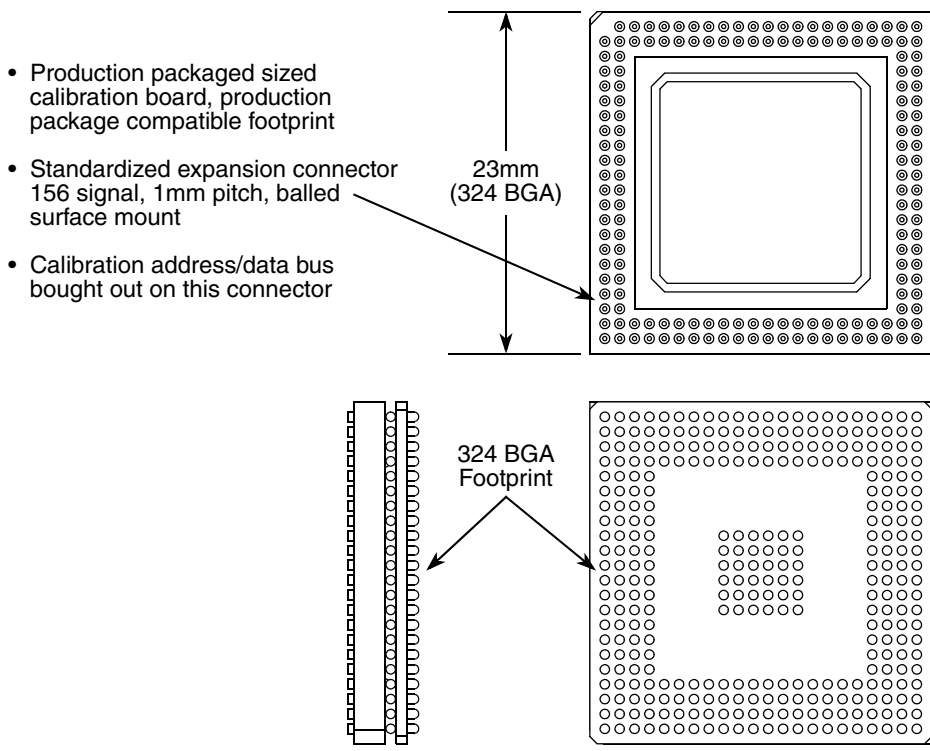


Figure B-2. VertiCal Base

B.2 Calibration Bus

The calibration bus is made up of address bus, data bus, bus control and clock signals. The calibration bus is used by tools that include memory for calibration data or other code in development. See [Table B-1](#) for calibration bus signals. A 16-bit data bus and 19-bit address bus gives a basic addressing range of 1 MByte. Alternatively, the maximum memory addressable using just one chip select is 4 MBytes.

Refer to [Table B-2](#).

The VertiCal connector supports up to 4 chip select signals, although the actual number of chip selects available depends on which device of the MPC5500 family is used. Because the $\overline{\text{CAL_CS}}[0]$ chip select is available for all MPC5500 devices, use $\overline{\text{CAL_CS}}[0]$ chip select as the default calibration chip select to ensure maximum portability of calibration tools across devices. The three calibration chip select signals $\overline{\text{CAL_CS}}[0, 2:3]$ are configured and function like the external chip select signals $\overline{\text{CS}}[0:3]$, except the calibration chip selects have a higher priority in address decoding than the external chip selects, $\overline{\text{CS}}[0:3]$. Refer to [Section B.8, “Application Information,”](#) for application information on the number of calibration chip selects.

The $\overline{\text{CAL_CS}}[0:3]$ chip selects have multiplexed signal functions to provide additional addressing bits that allows the flexibility of increasing the addressing range or the number of chip selects. Devices that support less than four calibration chip selects can extend the contiguous calibration addressing range by omitting chip selects starting from CS[1]. For this reason CS[1] is selected as the single unimplemented chip select on the MPC5567 device.

The calibration functionality provides a calibration bus with pads that are in addition to the pads for the 416 pin package part. Therefore, the calibration functionality does not use any I/O available in the 208, 324, and 416 pin production packages for a calibration bus interface.

The P/A/G column in the following table differentiates each signal function that is multiplexed to the same pin assignment. The P/A/G value is set in the PA field of the SIU_PCR registers and determines which multiplexed signal function controls the pin. For more information on how to set the PA field, read the Signals Chapter.

Table B-1. MPC5567 Calibration Bus Signals

VertiCal Signal Name	Signal Function	MPC5567 Signal Name	P/A/G
Address/Data Bus			
$\overline{\text{CAL_CS}}[0]$	Calibration Chip Select 0	$\overline{\text{CAL_CS}}[0]$	P
$\overline{\text{CAL_CS}}[2]$	Calibration Chip Select 2 Calibration Address	$\overline{\text{CAL_CS}}[2]$ CAL_ADDR[10]	P A
$\overline{\text{CAL_CS}}[3]$	Calibration Chip Select 3 Calibration Address	$\overline{\text{CAL_CS}}[3]$ CAL_ADDR[11]	P A
CAL_ADDR[12]	Calibration Address Bus Ethernet Transmit Clock	CAL_ADDR[12] FEC_TX_CLK	P A
CAL_ADDR[13]	Calibration Address Bus Ethernet Carrier Sense	CAL_ADDR[13] FEC_CRS	P A

Table B-1. MPC5567 Calibration Bus Signals (continued)

VertiCal Signal Name	Signal Function	MPC5567 Signal Name	P/A/G
CAL_ADDR[14]	Calibration Address Bus Ethernet Transmit Error	CAL_ADDR[14] FEC_TX_ER	P A
CAL_ADDR[15]	Calibration Address Bus Ethernet Receive Clock	CAL_ADDR[15] FEC_RX_CLK	P A
CAL_ADDR[16]	Calibration Address Bus Ethernet Transmit Data Bus	CAL_ADDR[16] FEC_TXD[0]	P A
CAL_ADDR[17]	Calibration Address Bus Ethernet Receive Error	CAL_ADDR[17] FEC_RX_ER	P A
CAL_ADDR[18]	Calibration Address Bus Ethernet Receive Data Bus	CAL_ADDR[18] FEC_RXD[0]	P A
CAL_ADDR[19]	Calibration Address Bus Ethernet Transmit Data Bus	CAL_ADDR[19] FEC_TXD[3]	P A
CAL_ADDR[20]	Calibration Address Bus Ethernet Collision Detect	CAL_ADDR[20] FEC_COL	P A
CAL_ADDR[21]	Calibration Address Bus Ethernet Receive Data Valid	CAL_ADDR[21] FEC_RX_DV	P A
CAL_ADDR[22]	Calibration Address Bus Ethernet Transmit Enable	CAL_ADDR[22] FEC_TX_EN	P A
CAL_ADDR[23]	Calibration Address Bus Ethernet Transmit Data Bus	CAL_ADDR[23] FEC_TXD[2]	P A
CAL_ADDR[24]	Calibration Address Bus Ethernet Transmit Data Bus	CAL_ADDR[24] FEC_TXD[1]	P A
CAL_ADDR[25]	Calibration Address Bus Ethernet Receive Data Bus	CAL_ADDR[25] FEC_RXD[1]	P A
CAL_ADDR[26]	Calibration Address Bus Ethernet Receive Data Bus	CAL_ADDR[26] FEC_RXD[2]	P A
CAL_ADDR[27]	Calibration Address Bus Ethernet Receive Data Bus	CAL_ADDR[27] FEC_RXD[3]	P A
CAL_ADDR[28]	Calibration Address Bus Ethernet Management Clock	CAL_ADDR[28] FEC_MDC	P A
CAL_ADDR[29]	Calibration Address Bus Ethernet Management Data I/O	CAL_ADDR[29] FEC_MDIO	P A
CAL_ADDR[30]	Calibration Address Bus	CAL_ADDR[30]	P A
CAL_DATA[0:7]	Calibration Data Bus	CAL_DATA[0:7]	P A
CAL_DATA[8:15]	Calibration Data Bus	CAL_DATA[8:13]	P A

Table B-1. MPC5567 Calibration Bus Signals (continued)

VertiCal Signal Name	Signal Function	MPC5567 Signal Name	P/A/G
CAL_RD_ \overline{WR}	Calibration Read_Write	CAL_RD_ \overline{WR}	P A
CAL_ $\overline{WE}/\overline{BE}$ [0:1]	Calibration Write/Byte Enable	CAL_ $\overline{WE}/\overline{BE}$ [0:1]	P A
$\overline{CAL_OE}$	Calibration Output Enable	$\overline{CAL_OE}$	P A
$\overline{CAL_TS}$	Calibration Transfer Start	$\overline{CAL_TS}$	P A
Clock Synthesizer (1)			
CLKOUT	System Clock Output	CLKOUT	P

B.3 Device Specific Information

The various address bus, data bus and bus control signals are sourced from different device signals depending on the MPC5500 family being used as detailed in the following sections.

B.3.1 MPC5567 Calibration Bus Implementation

The MPC5567 device has a set of external bus signals that are only used by the calibration bus. These device signals are prefixed by “CAL,” and their usage does not affect the usage modes and electrical loading on the equivalent signals for the EBI.

B.4 Signals and Pads

The following sections detail the signal descriptions for the calibration bus.

B.4.1 $\overline{CAL_CS}$ [0, 2:3] — Calibration Chip Selects 0, 2 and 3

$\overline{CAL_CS}[n]$ is asserted by the master to indicate that this transaction is targeted for a particular calibration memory bank.

The calibration chip selects are driven by the EBI. $\overline{CAL_CS}[n]$ is driven in the same clock as the assertion of \overline{TS} and valid address, and is kept valid until the cycle is terminated. Bus timing is identical to standard EBI timing.

B.4.1.1 Number of Chip Selects and Maximum Memory Size

The trade-off between calibration chip selects and address lines is the same as the trade-off between non-calibration chip selects and address lines for the 324 pin package.

Table B-2. Maximum Memory Size According to Calibration Chip Selects

	Maximum Memory Allocated for Calibration		
	Device 0	Device 2	Device 3
CAL_CS[0] Only	4 MBytes	—	—
CAL_CS[0] and CAL_CS[2]	2 MBytes	2 MBytes	—
CAL_CS[0] and CAL_CS[2:3]	1 MByte	1 MByte	1 MByte

B.4.2 Pad Ring

This section provides a list of the calibration pins and associated pad configuration registers (PCRs), including links to the detailed PCR information for each pin or pin group.

Refer to [Table B-1](#) for device signal names.

The drive strength of the calibration pins may be adjusted in the PCRs. In some cases, multiple pads have their drive strengths controlled by the same PCR. The CAL_ADDR[12:30] pins are grouped, the CAL_DATA[0:15] pins are grouped, and the CAL_RD_WR, CAL_WE[0:1], CAL_OE, and CAL_TS pins are grouped.

The SIU_PCR registers control whether the CAL_CS[2:3] pins are used for CAL_CS[2:3] or for CAL_ADDR[10:11]. Refer to [Table B-2](#) for the pin assignments. Selecting between CAL_CS[2:3] and CAL_ADDR[10:11] trades off the number of chip selects versus the maximum calibration memory size. Refer to [Section B.4.1.1](#), “Number of Chip Selects and Maximum Memory Size.”

B.4.3 CLKOUT

CLKOUT is supplied by the clock control block, not the EBI. Nevertheless, the same CLKOUT is used for both the non-calibration and calibration bus.

A drawback of having just one CLKOUT is that while the difference in board timing can be compensated by the adjustment in the drive strength, the CLKOUT timing, and hence the timing of the non-calibration bus, can have minor differences with a calibration tool from the production package.

B.5 Packaging

The addition of the calibration bus means that the device has more pads than can be connected to the balls on a 416 pin package. Therefore, the die is assembled in a 496 pin chip scale package (CSP) and this package is used in the VertiCal base assembly.

B.6 Power Supplies

The signals that make up the calibration bus have their own power supply segment (V_{DDE12}). The V_{DDE12} power supply balls are not connected to any other power supply segment from the standard package ball-out but are routed on the VertiCal base to pins on the VertiCal connector. The VertiCal top board must

provide a suitable voltage to the V_{DDE12} power supply pins to power up the calibration bus. It is envisaged that the VertiCal top board will derive a suitable 3.3V supply by regulating down the vehicle battery voltage, connected via a connector and flying lead to the top board.

B.7 Integration Logic Functionality

The EBI connects to both the non-calibration and calibration buses. The integration logic on MPC5567 selects between the data input from both buses to the EBI.

The MPC5567 integration logic also suppresses the reflections of the outputs of the calibration bus onto the non-calibration bus. For the non-calibration bus pins that do not have a negated state to which the pins return at the end of the access, this reflection suppression is enabled by the SIU_CCR[CRSE] bit. SIU_CCR[CRSE] does not enable reflection suppression for the non-calibration bus pins that have a negated state to which the pins return at the end of an access. Those reflections always are suppressed. Furthermore, the suppression of reflections from the non-calibration bus onto the calibration bus is not enabled by CRSE. Those reflections also always are suppressed. Refer to [Section B.8.1, “Enabling Calibration Reflection Suppression,”](#) for when to set SIU_CCR[CRSE] or leave it in its reset negated state.

B.8 Application Information

B.8.1 Enabling Calibration Reflection Suppression

Set SIU_CCR[CRSE] to suppress reflections when calibrating. The calibration reflection suppression logic for an output that does not return to a negated state at the end of an access can introduce a small glitch on the output at the end of the access. This glitch will not prevent the output valid or hold times from being met. However, leave SIU_CCR[CRSE] in its reset negated state when not calibrating to prevent the glitch on the non-calibration bus outputs.

B.8.2 Communication With Development Tool Using I/O

The development tool can require some I/Os for communication between the MCU and the development tool on the VertiCal connector. ETRIG[0:1] and GPIO[205] are available only in the 416 pin package. Because the application can not use these pins in the 208 and 324 pin packages, they are candidates for development tool use in a VertiCal connector. Using ETRIG[1] and GPIO[205] still leaves ETRIG[0] for the application in the 416 package.

B.8.3 Matching Access Delay to Internal Flash With Calibration Memory

One use of VertiCal in the Automotive environment is engine calibration. For this application, an SRAM Top Board is added onto the VertiCal connector. This allows the engine calibrator to modify settings in SRAM, possibly using the Nexus interface or even by using the SCI port or a CAN interface.

See [Table 13-2, “Internal Flash External Emulation Mode.”](#)

After the data is calibrated, it can be copied into the internal flash. The internal flash can be accessed faster than the calibration memory and this change in calibration data access time could change the overall system performance. To mitigate this change in system performance, the internal flash memory includes a

Calibration

feature that allows accesses to portions of the flash to be slowed down by adding extra wait states. This is done by multiply mapping the internal flash at different locations with different number of wait states. For example, the physical address of the flash array is 0x0000_0000 to 0x00FF_FFFF (depending on array size). That same flash data can be accessed at address 0x0100_0000 to 0x01FF_FFFF but accesses will be 1 clock cycle slower. That same flash data can be accessed at addresses 0x0200_0000 to 0x02FF_FFFF but accesses will be 2 clock cycles slower. This pattern is repeated through the memory map to addresses 0x1F00_0000 to 0x1FFF_FFFF where accesses will be 31 clock cycles slower.

The application would use this feature by mapping the calibration data to a region of the flash memory that has access timing to match the timing of the calibration RAM used when calibrating the data. This remapping of calibration data can be achieved by either using the translation feature of the MMU or rebuilding the code with a modified link file.